



MEA

3.1

WMC6300

**Wireless Modem Card
Windows 2000 and XP
Users Guide**

Documentation Revision 3.1.8

Copyrights

The Motorola products described in this document may include copyrighted Motorola computer programs. Laws in the United States and other countries reserve for Motorola certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppels or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal nonexclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Disclaimer

Please note that certain features, facilities and capabilities described in this document may not be applicable to or licensed for use on a particular system, or may be dependent upon the characteristics of a particular mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola contact for further information.

Trademarks

Motorola, the Motorola logo, and all other trademarks identified as such herein are trademarks of Motorola, Inc. All other product or service names are the property of their respective owners.

Copyrights

© 2007 Motorola, Inc. All rights reserved. No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola, Inc.

Table of Contents

INTRODUCTION	1
General System Requirements	1
Windows XP Minimum Requirements	1
Windows 2000 Minimum Requirements	2
What's in the Box	2
WMC6300 External Connections and Lights	3
INSTALLING MEA SOFTWARE WITH A WINDOWS XP OPERATING SYSTEM	4
INSTALLING MEA SOFTWARE WITH A WINDOWS 2000 OPERATING SYSTEM	12
INSTALLING THE WMC6300 WIRELESS MODEM CARD	19
Connect the Antenna Assembly	19
Disconnecting a Pigtail Antenna Assembly	20
Connect the Magnetic Antenna Assembly (Optional)	20
Insert the WMC6300 Wireless Modem Card	21
Configuring the DNS Address	28
Removing the WMC6300 Wireless Modem Card	30
Uninstalling Application Software	32
OVERVIEW OF MESHTRAY	33
MeshTray	33
Starting MeshTray	35
MeshTray Status Tab	35
MeshTray Configuration Tab	36
Geo Position	36
Reporting Interval	36

Server IP Address.....	36
Control Channel Configuration.....	37
Changing Control Channel	37
User Priority Settings and Quality of Service Overview	38
Classification of Data Packets	38
Differentiated Services Code Point.....	38
User Priority	38
Service Differentiation Mechanisms	39
Intelligent Access Point Support for Quality of Service	39
Priority Levels for Local Nodes	40
Setting the Priority Level for the WMC6300	40
Addressing Schemes	42
Network DHCP Addressing Scheme	42
Statically Provisioned Addressing Scheme	43
User Supplied Addressing Scheme	43
Setting the User Supplied IP Address	43
MeshTray Security Tab.....	47
Allow Open Authentication	47
IAP Authentication.....	48
UserId and Password.....	48
Peer Authentication	48
MeshTray Authentication Activity Tab.....	49
MeshTray Geo-Position Tab (Optional)	50
MeshTray Routing Tab (Optional)	51
Routing Table.....	51
Neighbor Table.....	51
Threshold	51



Routing Icons	52
Terminating MeshTray.....	53
TROUBLESHOOTING USING MESHAPI.....	54
CUSTOMER SERVICE INFORMATION	55
Obtaining Support	Error! Bookmark not defined.
System Information	Error! Bookmark not defined.
Return Material Request.....	Error! Bookmark not defined.
Radio Products and Services Division	Error! Bookmark not defined.
Radio Products and Services Division Telephone Numbers.....	Error! Bookmark not defined.
Returning System Components to Motorola.....	Error! Bookmark not defined.
Returning FREs.....	Error! Bookmark not defined.
PRODUCT WARRANTY INFORMATION	58
REGULATORY INFORMATION	61
FCC Information.....	61
FCC RF Energy Exposure Statement.....	61
Regulatory and RF Safety Exposure	61
SAFETY CERTIFICATION	ERROR! BOOKMARK NOT DEFINED.

List of Figures

Figure 1.	WMC6300 Wireless Modem Card	1
Figure 2.	WMC6300 Antenna Port and LED Indicators	3
Figure 3.	MEA Setup - Welcome Dialog.....	4
Figure 4.	MEA Setup - License Agreement Dialog	5
Figure 5.	MEA Setup – Startup Options Dialog	6
Figure 6.	MEA Setup - Ready to Install Dialog	6
Figure 7	MEA Setup - Drivers Previously Installed Dialog	7
Figure 8.	Confirm Action – Remove Existing Components.....	7
Figure 9.	Removing Programs From Your Computer Window	8
Figure 10.	Installing Files Window	8
Figure 11.	Software Installation Dialog Box.....	9
Figure 12.	Software Installation Dialog Box.....	9
Figure 13.	Software Installation Dialog Box.....	10
Figure 14.	MEA Setup - mea Installed Successfully Dialog Box.....	11
Figure 15.	MEA Setup - Installer Setup Dialog Box	12
Figure 16.	MEA Setup - License Agreement Dialog Box	13
Figure 17.	MEA Setup – Startup Options Dialog Box.....	13
Figure 18.	MEA Setup - Ready to Install Dialog Box	14
Figure 19	MEA Setup - Drivers Previously Installed Dialog Box	14
Figure 20.	Confirm Action – Remove Existing Components.....	15
Figure 21.	Removing Programs From Your Computer Window	15
Figure 22.	Installing Files Window	16
Figure 23.	Digital Signature Not Found Dialog Box	16
Figure 24.	MEA Setup - Select Options Dialog Box	17
Figure 25.	Finished Popup Dialog Box.....	18
Figure 26.	Attach the Antenna to the WMC6300	19

Figure 27.	Attach Magnetic Mount Antenna to the WMC6300	21
Figure 28.	Installing the WMC6300 Wireless Modem Card	21
Figure 29.	Proper Orientation of Antenna	22
Figure 30.	Found New Hardware Popup Dialog box	22
Figure 31.	Found New Hardware Wizard – Serial PC Card	23
Figure 32.	Found New Hardware Wizard - Loading Files.....	23
Figure 33.	Hardware Installation Dialog Box	24
Figure 34.	Found New Hardware Wizard - Complete	24
Figure 35.	Found New Hardware Wizard – WMC6300 PC Card	25
Figure 36.	Found New Hardware Wizard Loading Files.....	25
Figure 37.	Hardware Installation Dialog Box - WMC6300 PC Card	26
Figure 38.	Found New Hardware Wizard Complete.....	26
Figure 39.	Found New Hardware - Wizard Complete	27
Figure 40.	Local Area Connection Properties Dialog Box.....	28
Figure 41.	Unplug or Eject Hardware Icon	30
Figure 42.	Safe to Remove Hardware - WMC6300 Card.....	30
Figure 43.	Removing the WMC6300 from the PCMCIA slot.....	31
Figure 44.	Confirm Action - Uninstall	32
Figure 45.	Removing Programs from Your Computer Dialog Box	32
Figure 46.	Inactive MeshTray Icon	33
Figure 47.	MeshTray Link Quality Indicator	33
Figure 48.	MeshTray No IP Address Acquired Icon	34
Figure 49.	MeshTray Status Tab	35
Figure 50.	MeshTray Configuration Tab.....	36
Figure 51.	Password Protection Panel	37
Figure 52.	MeshTray Configuration Tab Priority Settings	40
Figure 53.	MeshTray Configuration Tab Addressing Scheme	42
Figure 54.	Control Panel – Network and Internet Connections Icon	44
Figure 55.	Network and Dial-up Connections Window	44

Figure 56.	Local Area Connection Properties Dialog Box.....	45
Figure 57.	Internet Protocol (TCP/IP) Properties Dialog Box	46
Figure 58.	MeshTray Security Tab	47
Figure 59.	Peer Authentication – Add.....	48
Figure 60.	MeshTray Authentication Activity Tab	49
Figure 61.	MeshTray Geo Position Tab	50
Figure 62.	MeshTray Geo Position Spherical Coordinates	50
Figure 63.	MeshTray Routing Tab.....	51
Figure 64.	Exit MeshTray	53
Figure 65.	Using EventViewer to Troubleshoot MeshAPI.....	54

Introduction

Thank you for purchasing the Wireless Modem Card. If you wish to skip this introduction and begin the installation, go directly to the *Installing the WMC6300 Wireless Modem Card* section of this document.

Mesh Enabled Architecture (MEA®) is a wireless communication system capable of supporting high data rate mobile communication at vehicular speeds of up to 250 miles per hour. The MEA system is designed to allow standard client hosts with a PCMCIA interface to have a mobile broadband Ethernet connection. The MEA system works transparently to the client host in a manner similar to an Ethernet connection. MEA provides Internet Protocol based data and location services. Its geo-location accuracy and availability is better than ± 10 meters within 1 second. It is capable of supporting subscribers traveling up to 100 miles per hour.



Figure 1. WMC6300 Wireless Modem Card

The MEA system provides a secure and reliable transport for the client host. The client host may still require configuration and authentication before it will be allowed to access services on the core network. The Network Administrator controls access to the core network. This document provides detailed installation and configuration instructions for installing the MEA WMC6300 Wireless Modem Card and supporting software.

General System Requirements

Host computers must comply with the following minimum requirements to ensure optimal performance for the WMC6300.

Windows XP Minimum Requirements

ATTENTION: If you are running Windows XP Service Pack 2 (SP2), Windows Firewall is turned on by default. It is recommended that you *disable* the firewall when using your WMC6300.

- Laptop or Notebook PC running the Microsoft Windows XP (Service Pack 1) operating system
- 500 MHz Processor
- 10 MB of available hard disk storage



- Keyboard, Mouse, CD-ROM drive or DVD drive
- Available Type II PCMCIA card slot in the Host device

Windows 2000 Minimum Requirements

- Laptop or Notebook PC running the Microsoft Windows 2000 (Service Pack 3) operating system
- 500 MHz Processor
- 10 MB of available hard disk storage
- Keyboard, Mouse, CD-ROM drive or DVD drive
- Available Type II PCMCIA card slot in the Host device

What's in the Box

Each MEA WMC6300 Wireless Modem Card is a full-featured wireless networking interface. The following is a list of the items provided with each WMC6300 card:

- MEA WMC6300 Wireless Modem Card
- Antenna with a MMCX connector
- MEA WMC6300 Software and Documentation CD ROM

The MEA CD ROM contains an online version of the MEA WMC6300 User's Guide in Adobe PDF format. The CD also contains an installation executable to load Adobe Acrobat Reader software if it is not already resident on your computer.

WMC6300 External Connections and Lights

The WMC6300 Wireless Modem Card is designed for insertion into an industry-standard Type II PCMCIA card slot located in a Host device. The WMC6300 has an antenna port to connect the external antenna and two LED Indicators. As shown in [Figure 2](#) the red LED is the transmit indicator and the green LED is the receive indicator.

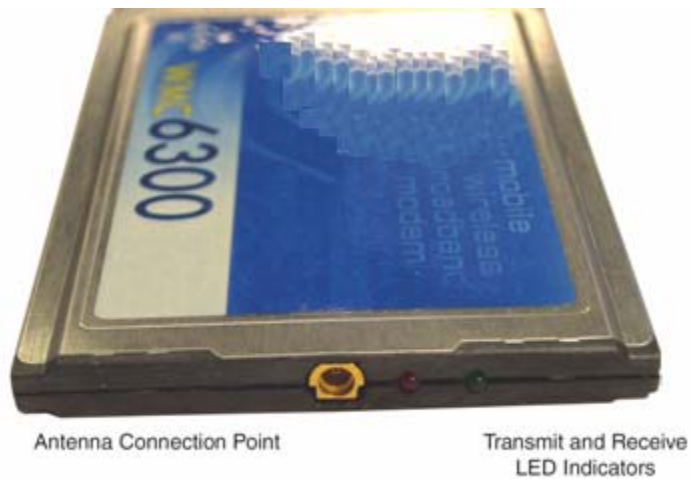


Figure 2. WMC6300 Antenna Port and LED Indicators



Installing MEA Software with a Windows XP Operating System

ATTENTION: If you are running Windows XP Service Pack 2 (SP2), Windows Firewall is turned on by default. It is recommended that you *disable* the firewall when using your WMC6300.

The following procedure outlines the installation of the MEA software on a typical Windows XP platform. Some of the steps may vary slightly based on the configuration of the individual computers.

Complete the following procedure to install the MEA software:

1. Close and exit any existing MEA applications running on the computer prior to installation.
2. Insert the MEA Software and Documentation CD into the CD-ROM drive.
3. If the installation program does not start automatically, open the Windows **Start** menu. Click on **Run** then type the following into the dialog box:

d:\setupmeaclient.exe

where **d:** specifies the CD-ROM drive and click the “**OK**” button.

4. Click the “**Next**” button to continue the installation process.
5. The MEA Setup dialog box will be displayed as shown in [Figure 3](#).
6. Click the **Next** button to continue the installation process.

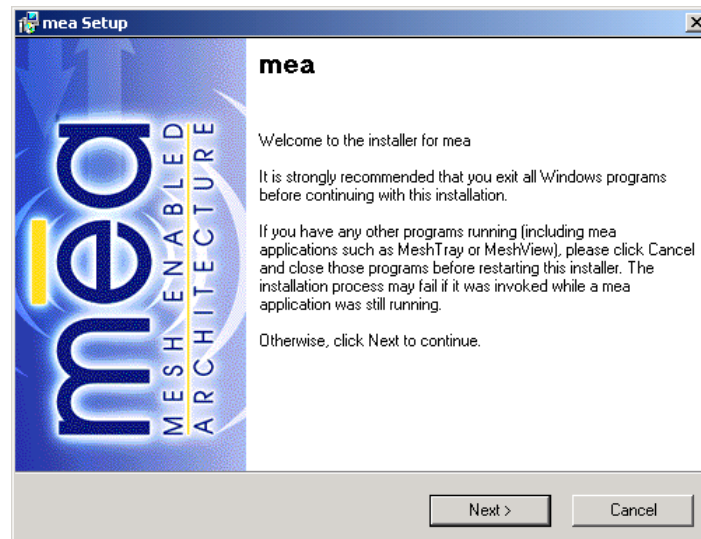


Figure 3. MEA Setup - Welcome Dialog

7. The *License Agreement* dialog box will be displayed as shown in [Figure 4](#). Please review the *End User License Agreement*. Use the scroll bar located at the right side of the dialog box to display the complete text message.

NOTE: If you do not agree with the terms of the license agreement, click on **Cancel** and the installation will be terminated.

8. To continue with the installation process, select the **YES** radio button as shown in [Figure 4](#) and then click on the **Next** button to continue the installation.

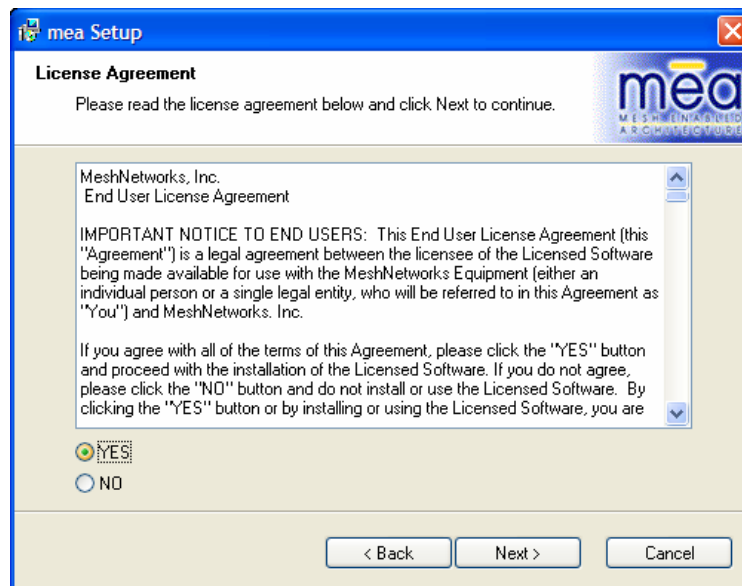


Figure 4. MEA Setup - License Agreement Dialog

9. The *Startup Options* dialog box will be displayed as shown in [Figure 5](#). The user can modify the default installation configuration by checking or un-checking the boxes on this installation dialog box. Click on the **Next** button to continue the installation process.

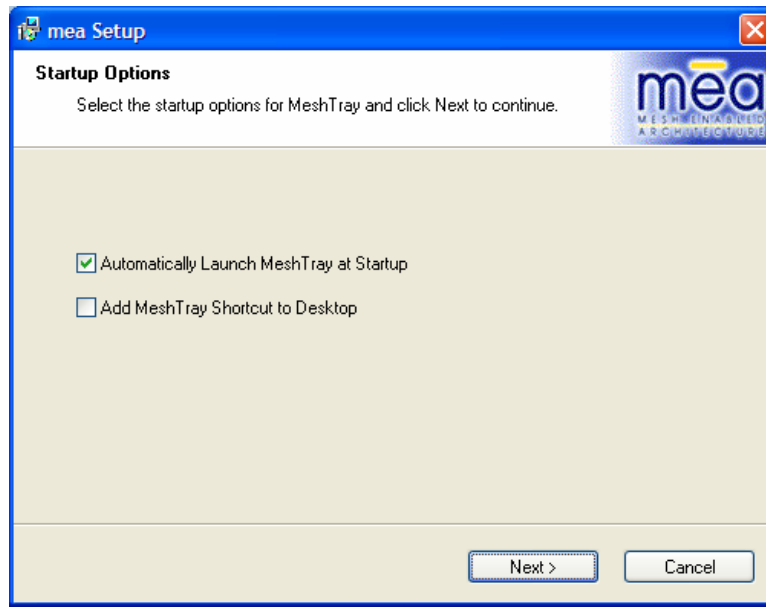


Figure 5. MEA Setup – Startup Options Dialog

10. The *Ready to Install* dialog box will be displayed as shown in [Figure 6](#). This dialog box displays the Install Folder location and the Shortcut Folder name that will be used to install the MEA software. Click on the **Next** button to proceed with the installation process.

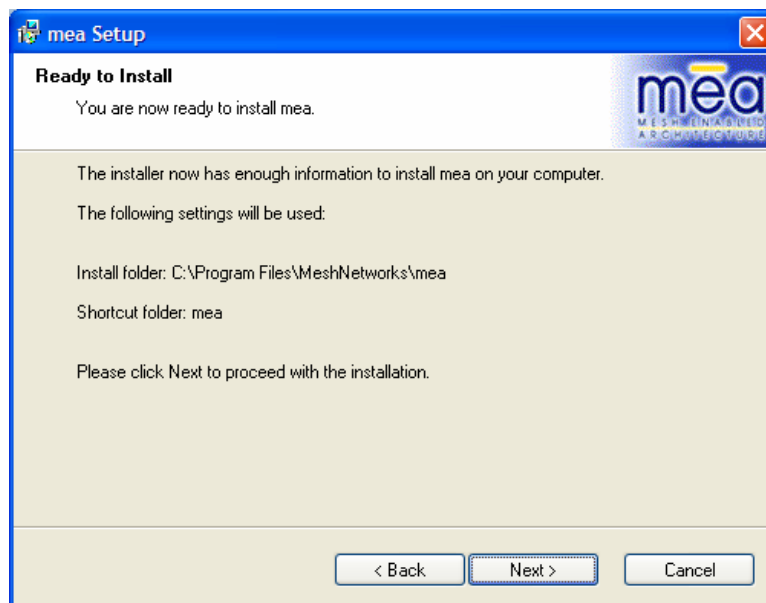


Figure 6. MEA Setup - Ready to Install Dialog

11. If MEA was previously installed on your computer, the *Information* dialog box will be displayed as shown in [Figure 7](#). Click on the **Uninstall** button to uninstall the existing

MEA drivers and continue the installation process. If you do not want to continue, click the **Cancel** button.

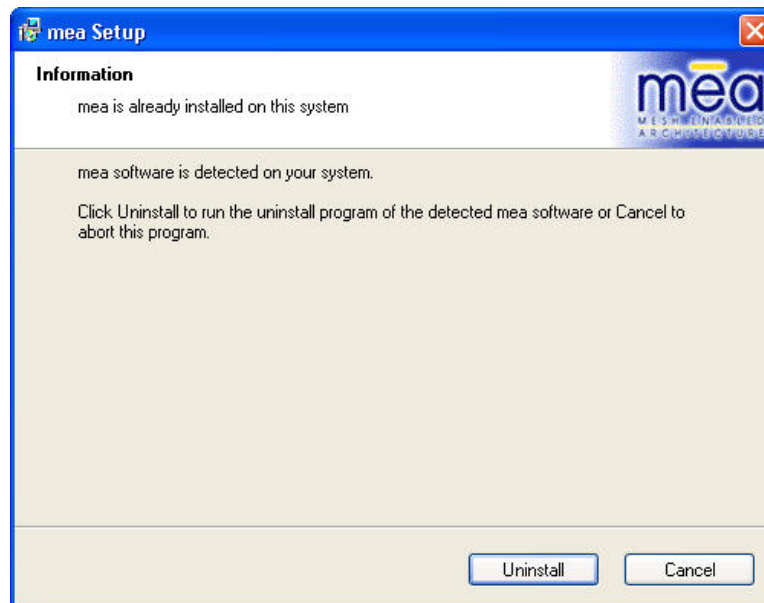


Figure 7 MEA Setup - Drivers Previously Installed Dialog

12. The *Confirm Action* dialog will be displayed. Click on the **Yes** button to remove all of the previously installed components. If you do not want to continue, click on the **No** button.

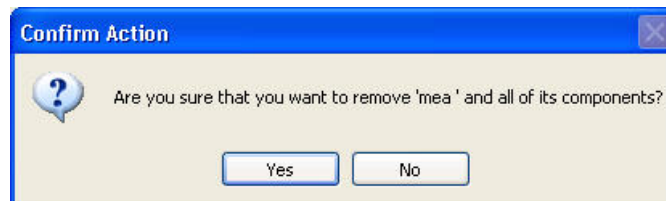


Figure 8. Confirm Action – Remove Existing Components

13. If you choose to continue with the installation, the *Removing Programs From Your Computer* dialog will be displayed to indicate the progress of the uninstall operation. When the operation is complete, click on the **Close** button to dismiss the dialog.

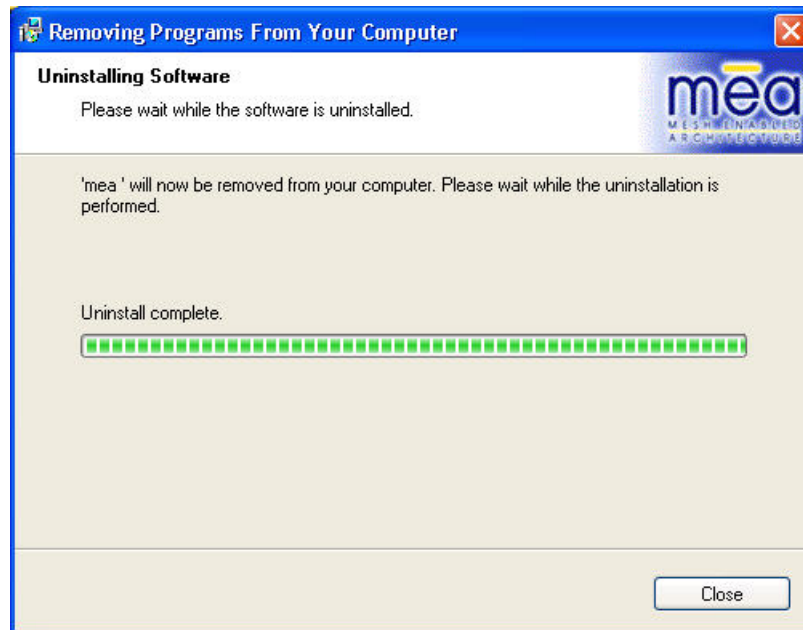


Figure 9. Removing Programs From Your Computer Window

14. The *Installing Files* window will be displayed. It will be dismissed as soon as the installation of the files is complete.

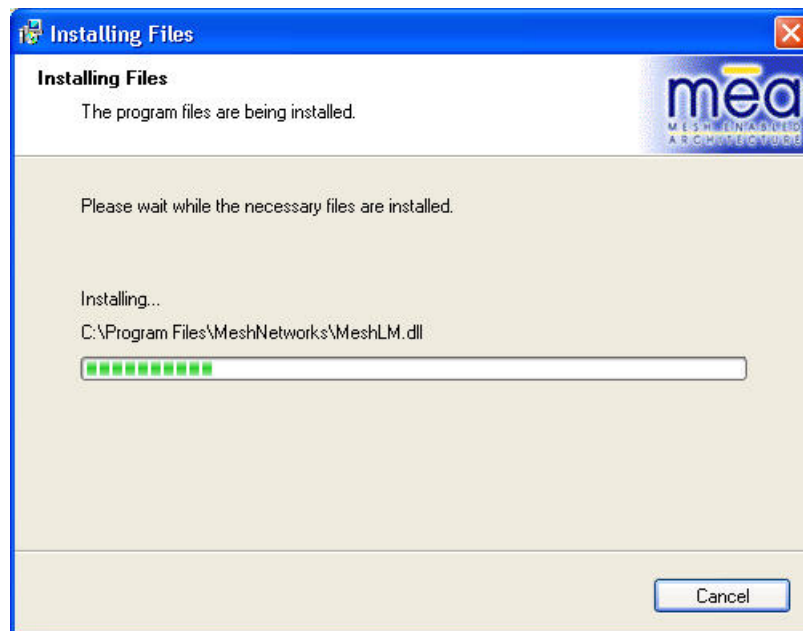


Figure 10. Installing Files Window

15. The *Performing Setup Actions* dialog box displays a status bar to indicate the progress of the installation.
16. If the *Software Installation* dialog box is displayed as shown in [Figure 11](#), it indicates that the software is not Windows Logo tested. Click on the **Continue Anyway** button to complete the installation process.



Figure 11. Software Installation Dialog Box

17. A second *Software Installation* dialog box is displayed as shown in [Figure 12](#). It indicates the software you are installing is not *Windows Logo tested*. Click on the **Continue Anyway** button to complete the installation process.



Figure 12. Software Installation Dialog Box

18. The *Select Options* dialog box will be displayed as shown in [Figure 13](#). This dialog box allows the user to view the *ReadMe* file for the most current release information. It also allows the user to immediately run MeshTray. Click on the **Next** button to proceed with the installation process.

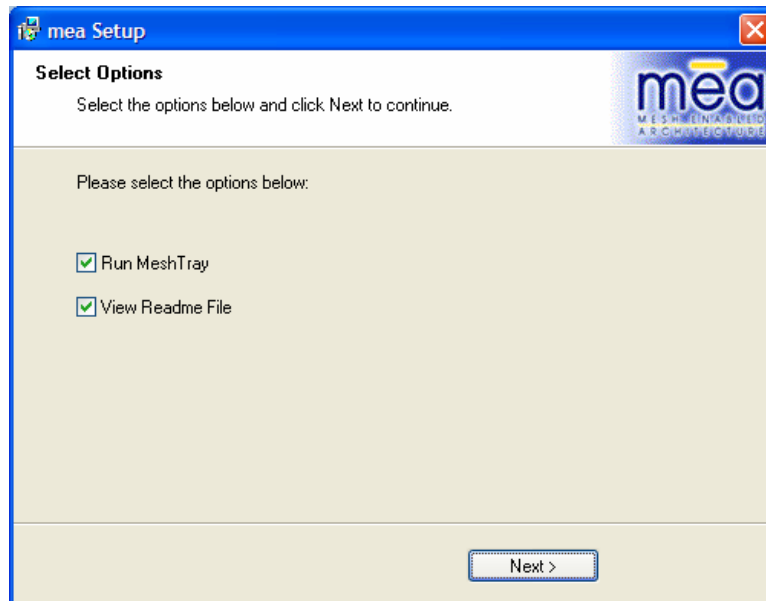


Figure 13. Software Installation Dialog Box

19. If selected, the *ReadMe* file will be displayed. Review the contents of the file and then dismiss the dialog box by clicking on the **X** located in the upper right corner of the dialog box.
20. The *mea Installed Successfully* dialog box will appear as shown in [Figure 14](#). Click on the **Finish** button to exit.

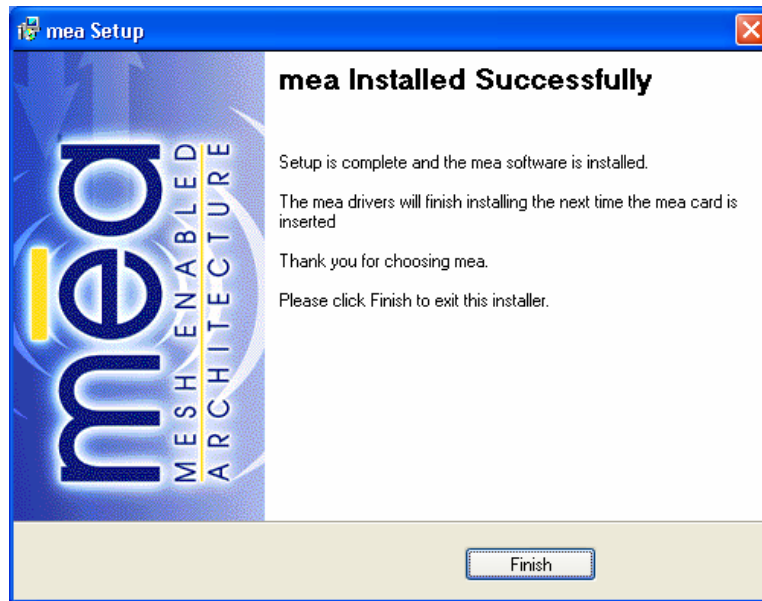


Figure 14. MEA Setup - mea Installed Successfully Dialog Box

ATTENTION

After installing the MEA software, MeshTray must be active when installing the WMC6300 card.



Installing MEA Software with a Windows 2000 Operating System

The following procedure outlines the installation of the MEA software on a typical Windows 2000 platform. Some of the steps may vary slightly based on the configuration of the individual computers.

Complete the following procedure to install the MEA software:

1. Close and exit any existing MEA applications running on the computer prior to installation.
2. Insert the MEA Software and Documentation CD into the CD-ROM drive.
3. If the installation program does not start automatically, open the Windows **Start**. Click on **Run** then type the following into the dialog box:

d:\setupmeaclient.exe

where **d:** specifies the CD-ROM drive and click the “**OK**” button.

4. The MEA Setup program will be displayed as shown in [Figure 15](#).
5. Click the **Next** button to continue the installation process.

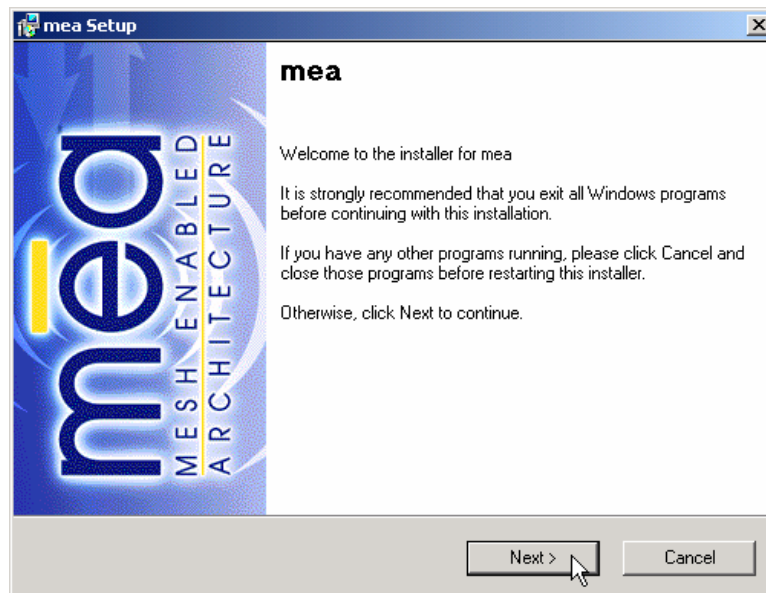


Figure 15. MEA Setup - Installer Setup Dialog Box

6. The *License Agreement* dialog box will be displayed. Please review the End User *License Agreement*. Use the scroll bar located at the right side of the dialog box to display the complete text message.

NOTE: If you do not agree with the terms of the license agreement, click on **Cancel** and the installation will be terminated.

7. To continue with the installation process, click on the **YES** button as shown in [Figure 16](#) and then click on the **Next** button to continue the installation.



Figure 16. MEA Setup - License Agreement Dialog Box

8. The *Startup Options* dialog box will be displayed as shown in [Figure 17](#). The user can modify the default installation configuration by checking or un-checking the boxes on this installation dialog box. Click on **Next** to continue the installation process.

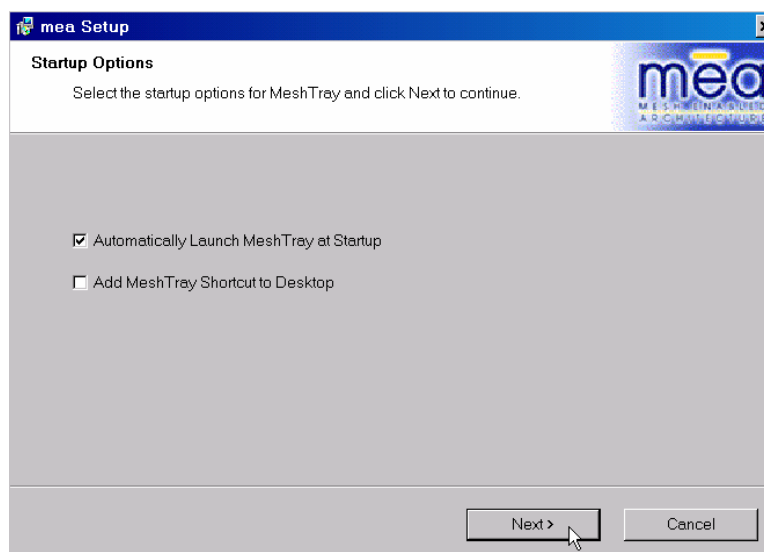


Figure 17. MEA Setup – Startup Options Dialog Box

9. The *Ready to Install* dialog box will be displayed as shown in [Figure 18](#). This dialog box displays the Install Folder location and the Shortcut Folder name that will be used to install the MEA software. Click on **Next** to proceed with the installation process.

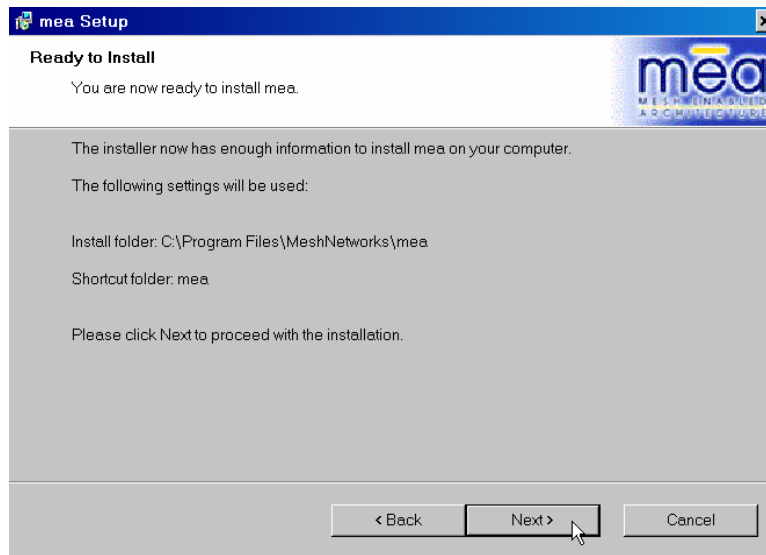


Figure 18. MEA Setup - Ready to Install Dialog Box

10. If MEA was previously installed on your computer, the *Information* dialog box will be displayed as shown in [Figure 19](#). Click on the **Next** button to uninstall the existing MEA drivers and continue the installation process. If you do not want to continue, press the **Cancel** button.

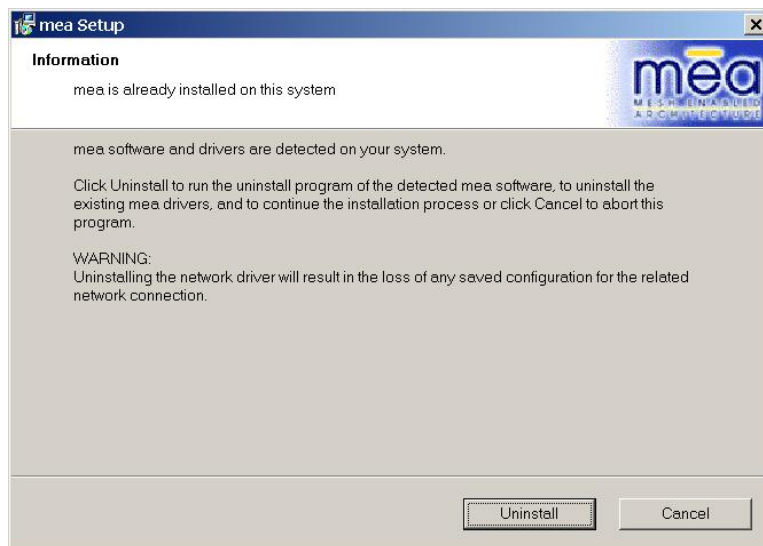


Figure 19 MEA Setup - Drivers Previously Installed Dialog Box

11. The *Confirm Action* dialog will be displayed. Click on the **Yes** button to remove all of the previously installed components. If you do not want to continue, click on the **No** button.

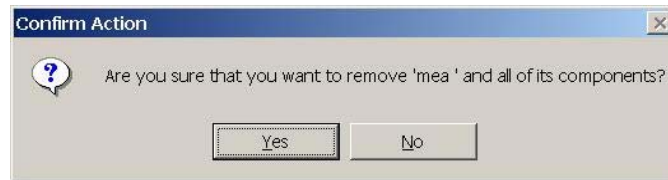


Figure 20. Confirm Action – Remove Existing Components

12. If you choose to continue with the installation, the *Removing Programs From Your Computer* dialog will be displayed to indicate the progress of the uninstall operation. When the operation is complete, click on the **Close** button to dismiss the dialog.

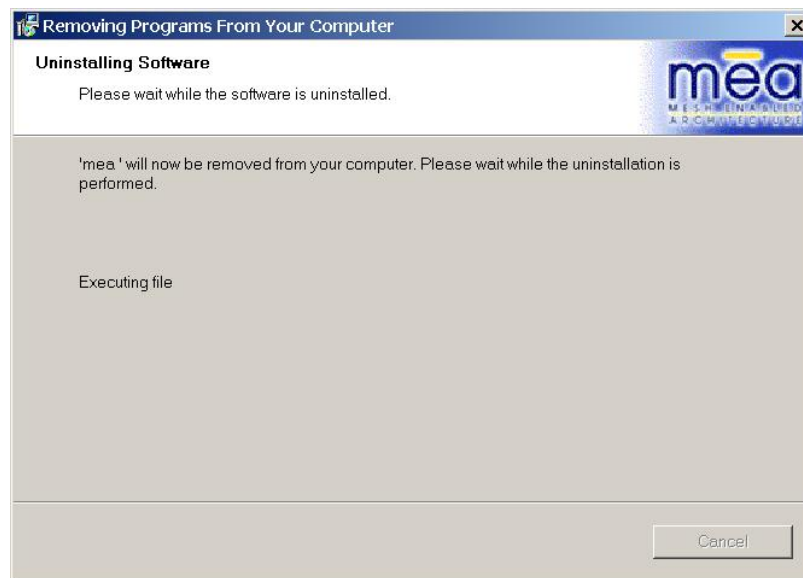


Figure 21. Removing Programs From Your Computer Window

13. The *Installing Files* window will be displayed. It will be dismissed as soon as the installation of the files is complete.

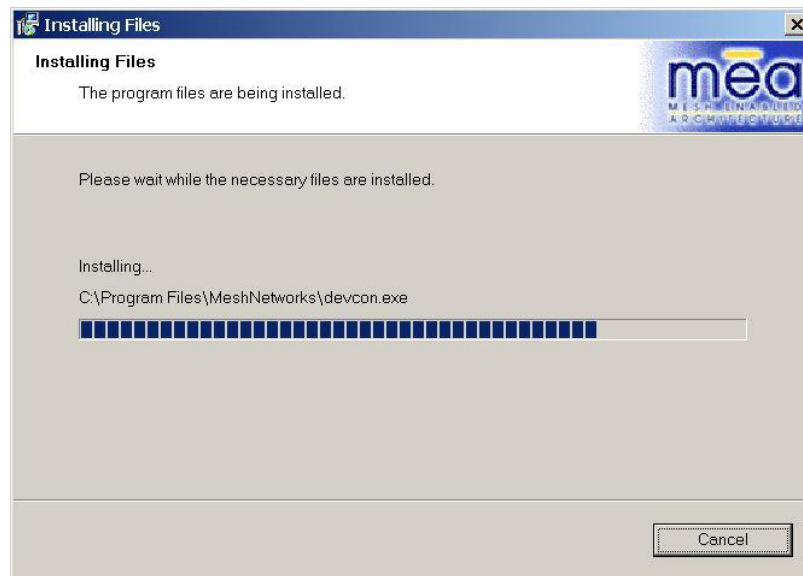


Figure 22. Installing Files Window

14. During the installation process, the *Performing Setup Actions* dialog box displays a status bar that indicates the progress of the installation.
15. If the computer has been configured to check digital signatures, a *Digital Signature Not Found* dialog box will be displayed as in [Figure 23](#). In response to the query "Do you want to continue the installation?" click on the **Yes** button.

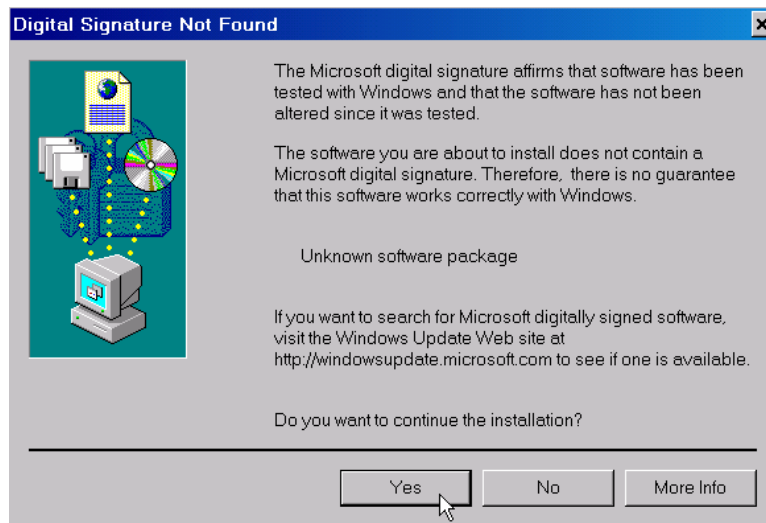


Figure 23. Digital Signature Not Found Dialog Box

16. When the file transfer is complete, a dialog box will be displayed as shown in [Figure 24](#) that allows the user to view the *ReadMe* file for the most current release information. It also allows the user to immediately run MeshTray. Click on **Next** to proceed with the installation process.

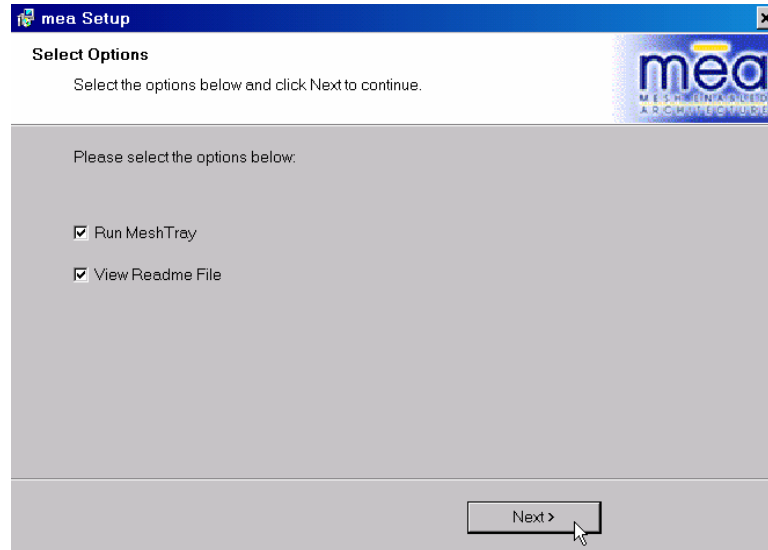


Figure 24. MEA Setup - Select Options Dialog Box

17. If selected, the *ReadMe* file will be displayed. Review the contents of the file and then dismiss the dialog box by clicking on the **X** located in the upper-right corner of the dialog box.
18. The *mea Installed Successfully* dialog box will appear as shown in [Figure 25](#). Click on the **Finish** button to exit.

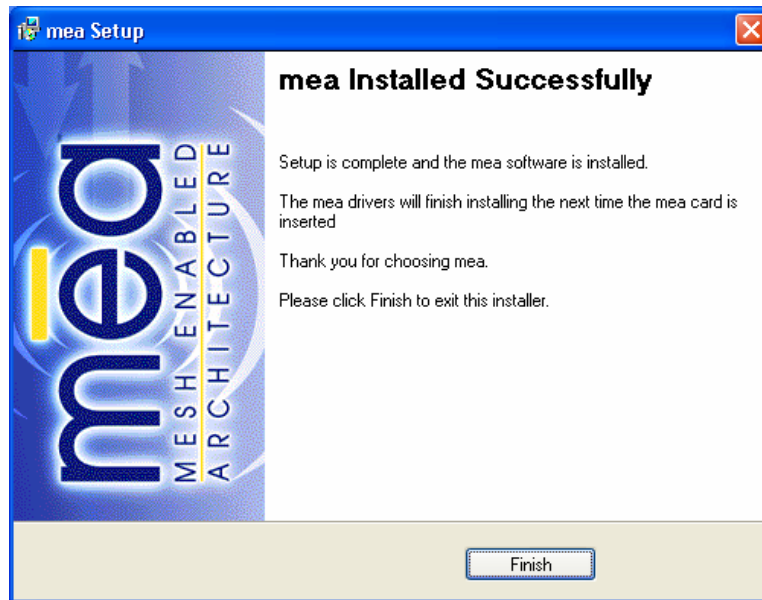


Figure 25. Finished Popup Dialog Box

ATTENTION

After installing the MEA software, MeshTray must be active when installing the WMC6300 card.

Installing the WMC6300 Wireless Modem Card

ATTENTION

After installing the MEA software, MeshTray must be active when installing the WMC6300 card.

Connect the Antenna Assembly

Complete the following procedure to connect the Antenna Assembly (Knuckle or Pigtail type) to the WMC6300 for use in a standard laptop computer.

ATTENTION

Always eject card when not in use.

Locate the Antenna and insert the connector into the WMC6300 antenna port as shown in [Figure 26](#).

NOTE: The connector will snap into place when fully inserted.



Figure 26. Attach the Antenna to the WMC6300

ATTENTION

Use only FCC approved antennas.

Use of another antenna is prohibited and violates FCC regulations.

Never use the WMC6300 with the Antenna disconnected from the Card.



Disconnecting a Pigtail Antenna Assembly

Care should be taken when disconnecting an antenna from the WMC6300 card. Applying force in any direction other than parallel to the card may result in excess pressure being applied to the connection between the WMC6300 connector and the board, which could crack or otherwise damage a solder joint.

When disconnecting a pigtail antenna from the WMC6300, additional attention must be taken not to damage the card, connector, or cable. As shown in the following diagram, pull straight out at the connector to avoid damaging the card, connector or cable.

Connect the Magnetic Antenna Assembly (Optional)

Complete the following procedure to install the Magnetic Mount Antenna on the rooftop of a vehicle. The length of the Antenna cable is approximately 12 feet.

1. Attach the Magnetic Antenna to the metal rooftop of the vehicle so that the antenna is in a vertical orientation.

ATTENTION: The base of the antenna contains a powerful magnet that secures the antenna to the rooftop. Use care when attaching the antenna.

2. Route the remaining 12 foot cable as required, to arrive at the Host Computer.

ATTENTION

When using the WMC6300 in a laptop computer, keep antenna at a minimum separation distance of 20cm from all persons.

When using the WMC6300 in a PDA, keep antenna at a minimum separation distance of 1.5cm from all persons.

3. Insert the Antenna Cable Connector into the WMC6300 antenna port as shown in [Figure 27](#).

NOTE: The connector will snap into place when fully inserted.



Figure 27. Attach Magnetic Mount Antenna to the WMC6300

Insert the WMC6300 Wireless Modem Card

Complete the following procedure to install the WMC6300 Wireless Modem Card in the computer.

1. Locate an available Type II PCMCIA card slot in the computer. If necessary, remove the slot dust cover from the slot.
2. To insure the correct orientation, insert the WMC6300 Wireless Modem Card into the computer's PCMCIA card slot with the label side up as shown in [Figure 28](#).

ATTENTION: Never force the card into the slot.



Figure 28. Installing the WMC6300 Wireless Modem Card

3. The antenna must be attached using the clip and vertically oriented when the laptop is in use as shown in [Figure 29](#).



Figure 29. Proper Orientation of Antenna

4. The first time that the card is inserted, a message will be displayed indicating that the PC card has been found as shown in [Figure 30](#).



Figure 30. Found New Hardware Popup Dialog box

5. The Windows *Found New Hardware Wizard* for the Serial PC Card will start as shown in [Figure 31](#). Verify that the “Install the software automatically (Recommended)” radio button is selected, and then click on the **Next** button.



Figure 31. Found New Hardware Wizard – Serial PC Card

6. The *Found New Hardware* dialog will display the progress information for establishing the restore point and backing up old files as shown in [Figure 32](#). As soon as these steps are complete, the *Hardware Installation* dialog box shown in [Figure 33](#) will be displayed. Click on the **Continue Anyway** button in the *Hardware Installation* dialog box.

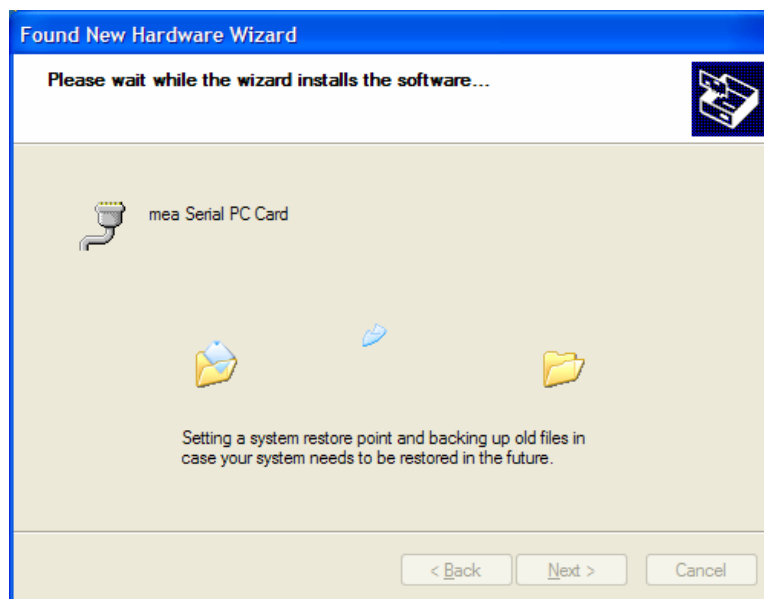


Figure 32. Found New Hardware Wizard - Loading Files

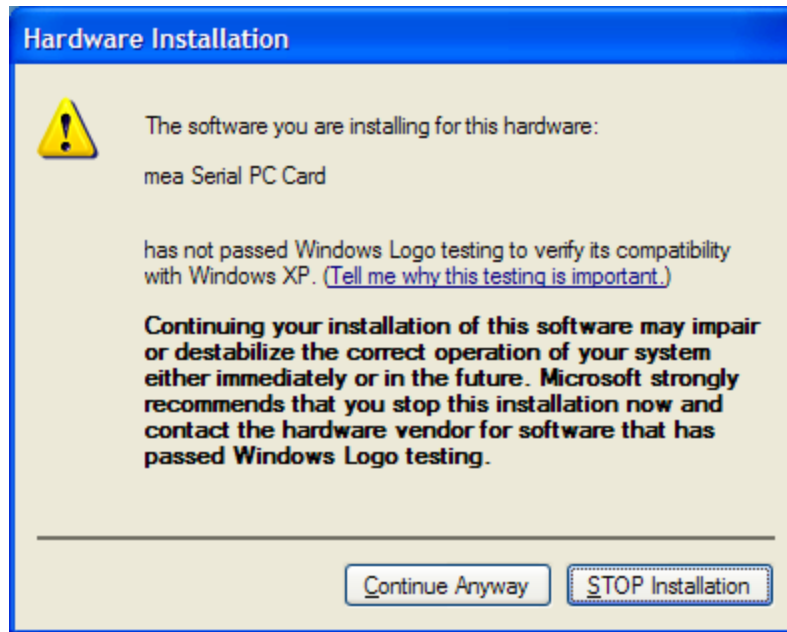


Figure 33. Hardware Installation Dialog Box

7. The Found New Hardware Wizard Complete dialog box will appear as shown in [Figure 34](#). Click on the **Finish** button.

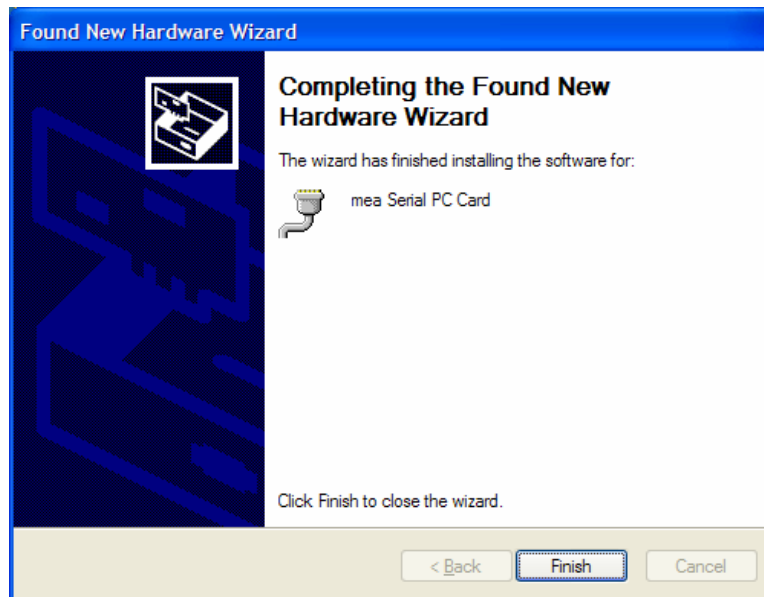


Figure 34. Found New Hardware Wizard - Complete

8. An additional *Found New Hardware Wizard* for the WMC6300 PC Card will be displayed as shown in [Figure 35](#). Verify that the *Install the software automatically (Recommended)* radio button is selected, and then click on the **Next** button.

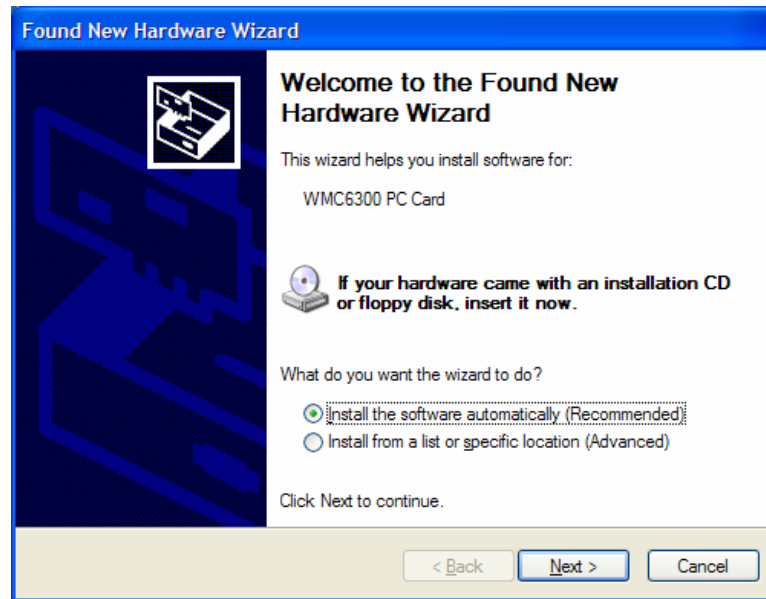


Figure 35. Found New Hardware Wizard – WMC6300 PC Card

9. A *Loading Files* dialog box will appear as shown in Figure 36, followed by a *Hardware Installation* dialog box as shown in Figure 37. Click on the **Continue Anyway** button in the *Hardware Installation* dialog box.

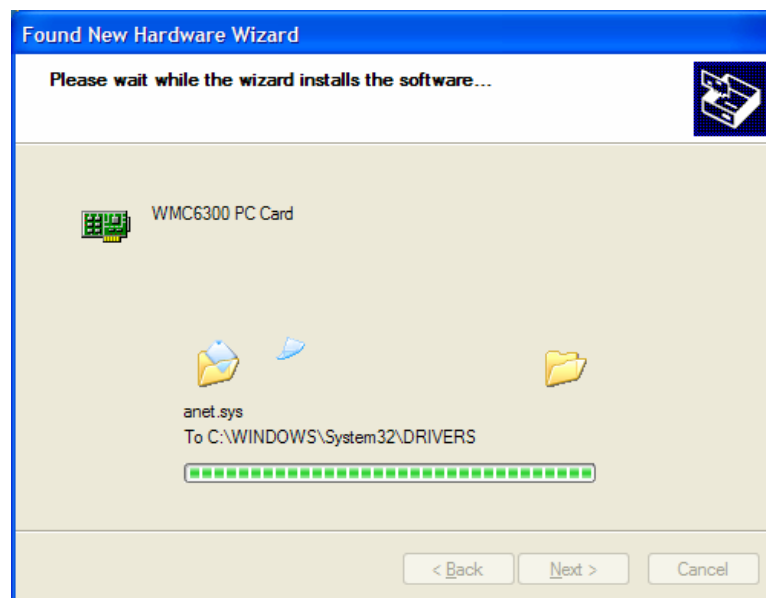


Figure 36. Found New Hardware Wizard Loading Files

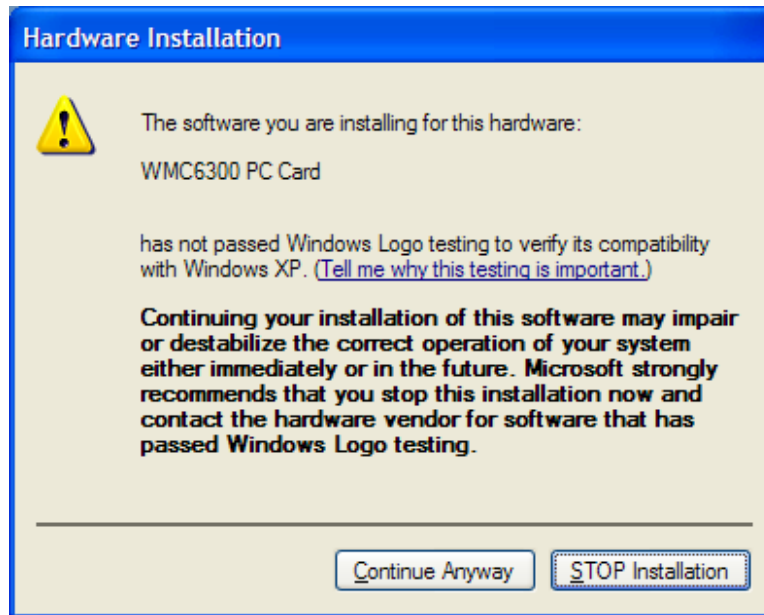


Figure 37. Hardware Installation Dialog Box - WMC6300 PC Card

10. The *Found New Hardware Wizard Complete* dialog box will be displayed as shown in [Figure 38](#). Click on the **Finish** button.

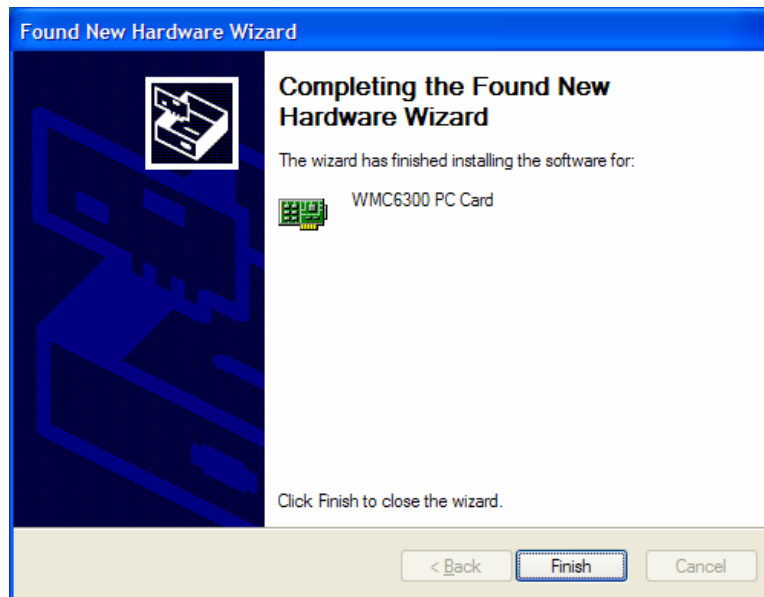


Figure 38. Found New Hardware Wizard Complete

11. The *Found New Hardware* pop-up window will appear confirming that the driver installation is complete and the hardware is ready to use.

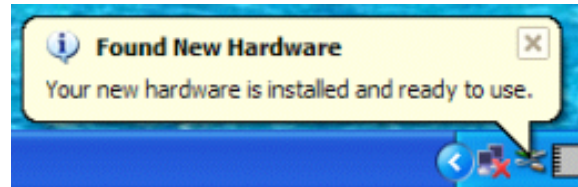


Figure 39. Found New Hardware - Wizard Complete

Configuring the DNS Address

Typically, the DNS address will be supplied as part of the WMC6300's communication with the network. Occasionally however, the Network Administrator must supply the DNS IP address for an Internet connection. This address must be manually configured in order for Internet URLs to be resolved. Complete the following procedure to configure the address:

1. From the windows **Start** menu, **Control Panel**
2. On the Control Panel, double-click on the *Network and Internet Connections* icon then double-click on the *Network Connections* icon.
3. Right click on the Local Area Connection Corresponding to the Wireless Modem Card and select "Properties" from the pop up menu.

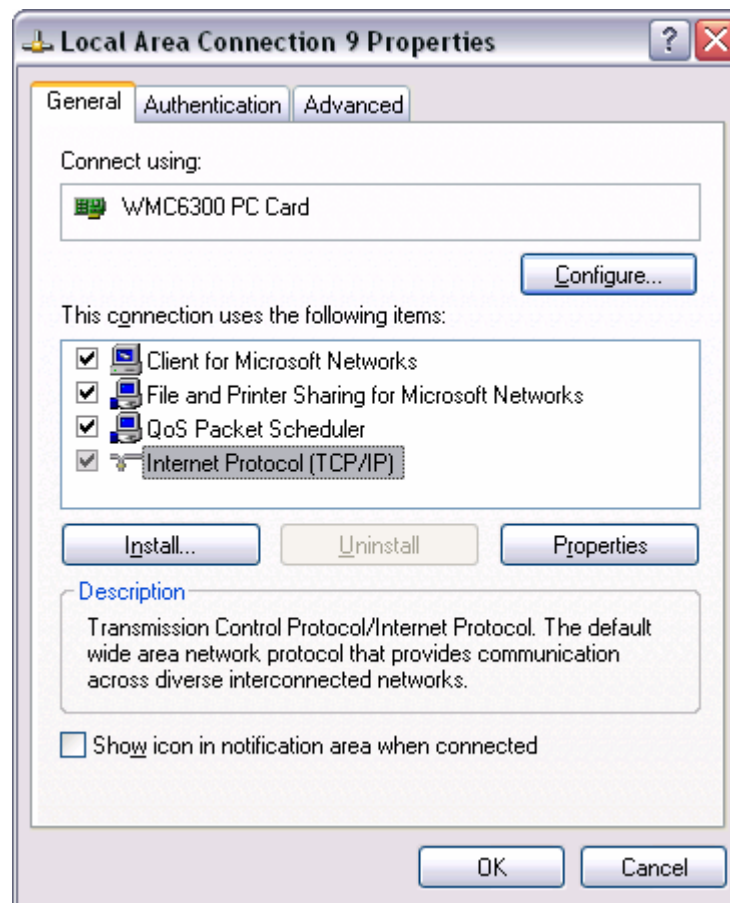


Figure 40. Local Area Connection Properties Dialog Box

4. Highlight "Internet Protocol (TCP/IP)" in the Components dialog box as shown in Figure 35.
5. Click on the **Properties** button.
6. Click on the **Advanced** button.

7. Click on the DNS tab.
8. Click on the DNS **Add** button.
9. Enter the *DNS Server IP Address* provided by the Network Administrator and then click the **Add** button.
10. Click on the **OK** button to close the *Advanced TCP/IP Settings* dialog box.
11. Click on the **OK** button to close the Internet Protocol (TCP/IP) Properties dialog box.
12. Click on the **OK** button to close the Local Area Connection Properties dialog box.

This configuration should remain in the Windows XP host.

Removing the WMC6300 Wireless Modem Card

The WMC6300 should be ejected using the following procedure to ensure that power to the card is disabled prior to removal.

ATTENTION

Always eject card when not in use.

1. Click on the Unplug or Eject Hardware icon in the system task bar. Select **“Safely remove Generic Multifunction PC-Card”** from the popup menu as shown in [Figure 41](#).

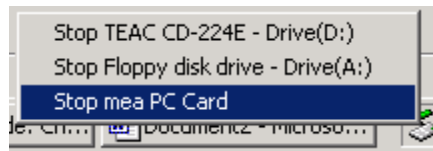


Figure 41. Unplug or Eject Hardware Icon

2. Wait for a message that indicates that the device may be safely removed from the system as shown in [Figure 42](#).

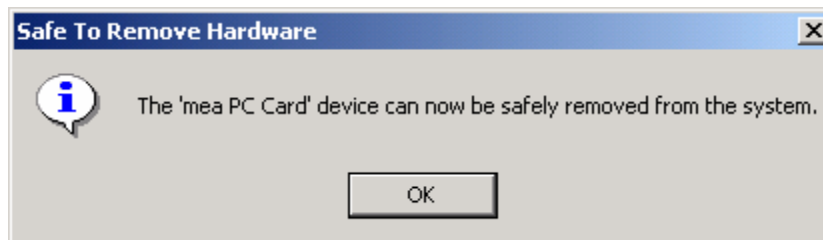


Figure 42. Safe to Remove Hardware - WMC6300 Card

3. Eject the WMC6300 from the PCMCIA slot as shown in [Figure 43](#).



Figure 43. Removing the WMC6300 from the PCMCIA slot

Uninstalling Application Software

Complete the following procedure to “Uninstall” the MEA Software:

1. From the **Start** menu, select **Programs**→**mea**→**Uninstall mea**.

NOTE: The MEA software can also be uninstalled using **Add/Remove Programs** located in the **Control Panel**.

2. The *Confirm Action* dialog box will display the query “Are you sure you want to remove ‘mea’ and all of its components?” as shown in [Figure 44](#). Click on **Yes** to continue.

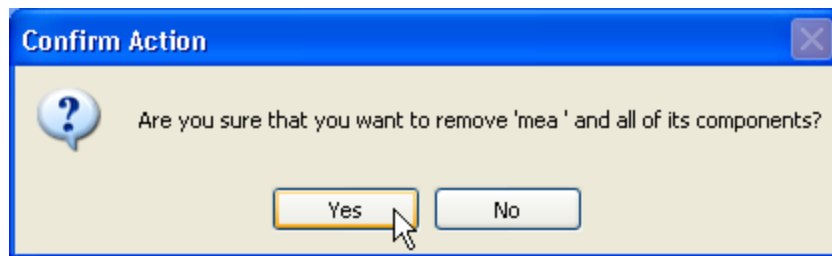


Figure 44. Confirm Action - Uninstall

3. The *Removing Programs From Your Computer* dialog box will be displayed while the MEA software is uninstalled as shown in [Figure 45](#). When the Uninstalling Software process is complete, click on the **Close** button.

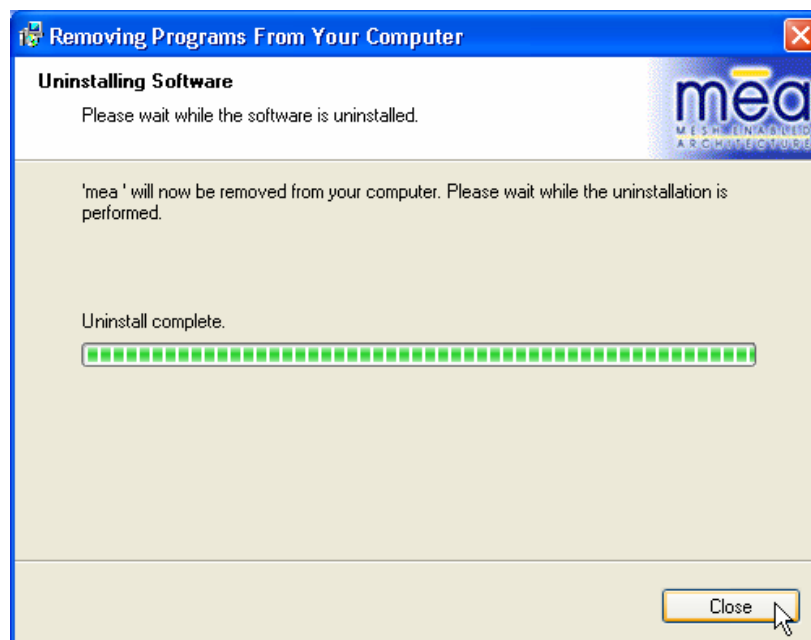


Figure 45. Removing Programs from Your Computer Dialog Box

Overview of MeshTray

MeshTray

MeshTray™ is a status and configuration application that reports vital and statistical information about the MEA card. Because MeshTray is a “tray” application, it stays in the desktop system status tray when it is minimized as shown in the following figures.

The MeshTray icon changes to indicate both the current mode of operation and the state of the wireless interface. As shown in [Figure 46](#) the MeshTray icon is depicting an inactive or disconnected state. The inactive state applies when a WMC6300 card is not inserted. The disconnected state applies if a card is inserted but is not yet associated with an IAP6300.



In active MeshTray Icon

Figure 46. Inactive MeshTray Icon

When the WMC6300 is associated with an IAP6300, the MeshTray icon displays the Link Quality to the associated IAP as color-coded bars as shown in [Figure 47](#). The greater the number of bars, the better the Link Quality.



Active MeshTray Icon

Figure 47. MeshTray Link Quality Indicator



The MeshTray icon shown in [Figure 48](#) indicates that the IP address has not yet been acquired from the DHCP server. When this happens, the IP field in the Status Tab displays a flashing or 0 IP (see [Figure 49](#)).



**MeshTray No IP
Address Acquired**

Figure 48. MeshTray No IP Address Acquired Icon

Starting MeshTray

During the software installation process, you can choose to place a MeshTray shortcut icon on the desktop.

To start the MeshTray application, double-click on the MeshTray icon or from the **Start** menu select **Programs → mea → MeshTray.exe**.

Clicking on the MeshTray icon in the system tray restores the application to a property sheet interface as shown in [Figure 44](#).

MeshTray Status Tab

When the utility is launched, MeshTray displays useful system information such as a Description of the device, the MAC and IP address of the device, and the Type of device (i.e., Subscriber Device). The Firmware Version and Firmware Build Date displayed here can be used to verify the correct firmware revision is currently loaded on the device, particularly after a firmware upgrade. The associated IAP MAC address and the IAP Link Quality are also displayed.

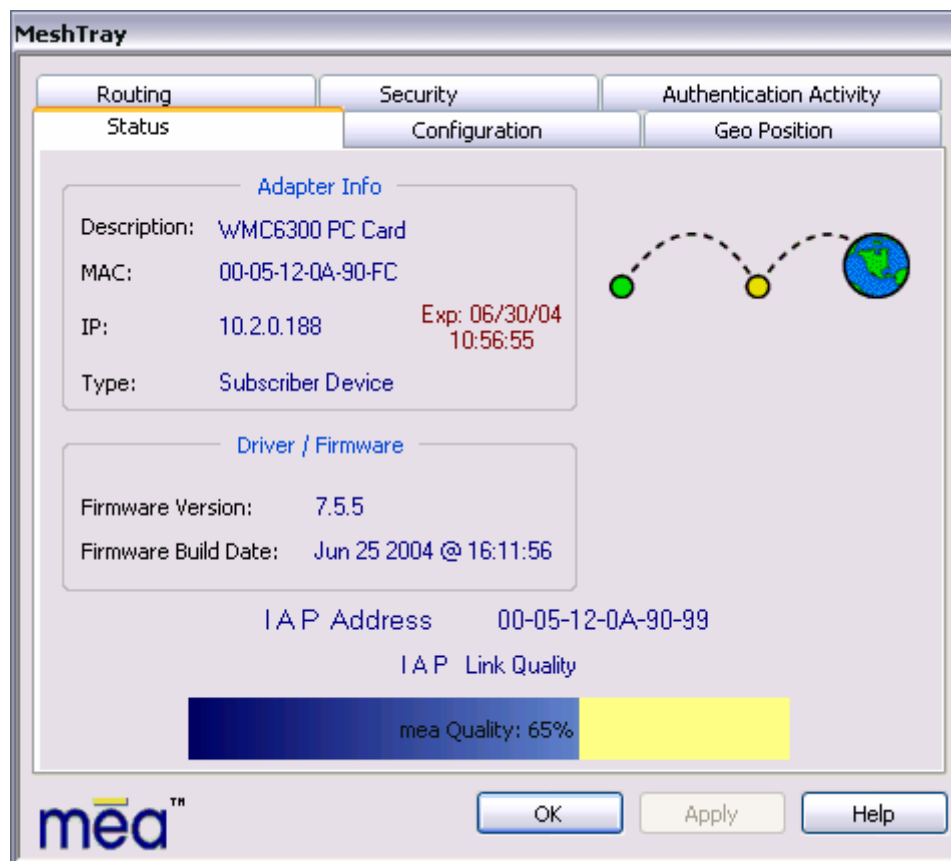


Figure 49. MeshTray Status Tab

MeshTray Configuration Tab

The Configuration Tab is used to set the parameters for Geo Mode, Channel Mapping, Priority Level, and Addressing Scheme settings.

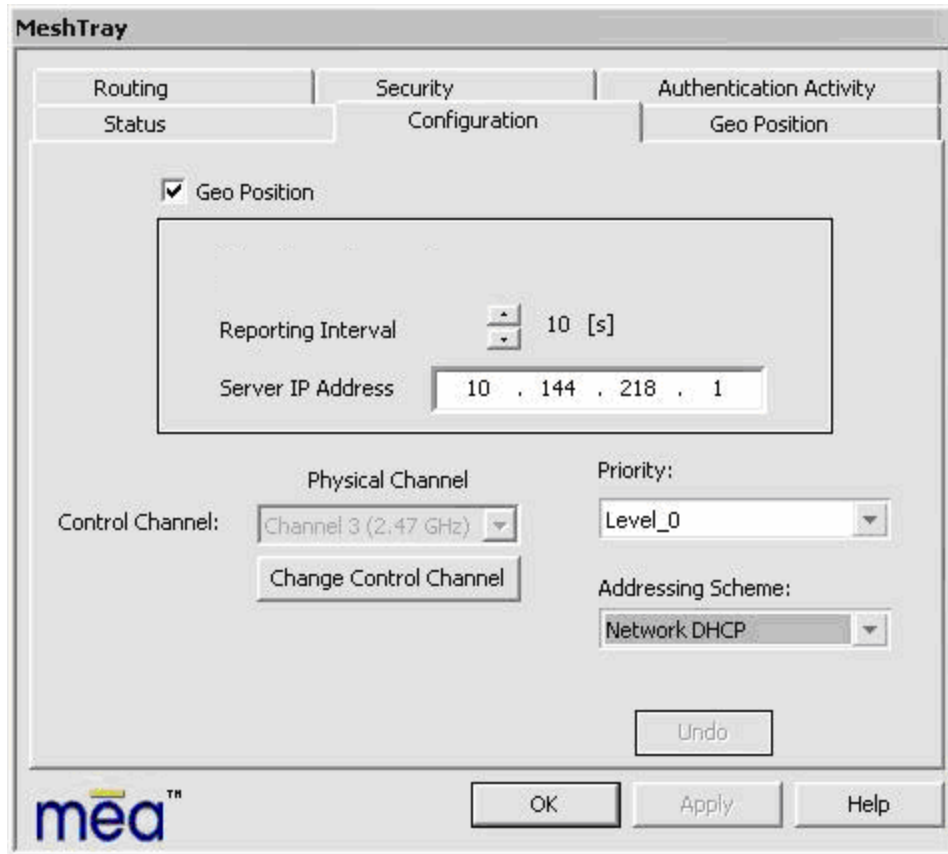


Figure 50. MeshTray Configuration Tab

Geo Position

If Geo-Position has been enabled on the WMC6300 (check the licensing options for your network devices), the Geo-Position option will be selectable and the user may configure the reporting interval as shown in [Figure 50](#). Otherwise, the Geo-Position box will be grayed out.

Reporting Interval

If Enhanced Geo has been enabled on the WMC6300, the user will be able to set the reporting interval in seconds for updating the Geo Position data for longitude and latitude or X, Y, Z positions for the Spherical Coordinate option to be displayed on the Geo Position tab.

Server IP Address

The Server IP Address is the address where the geo position is forwarded or reported to. Typically, this is a centralized server that displays the position of all devices on the network.

Control Channel Configuration

There are four channels available for MEA network communications. The Network Administrator can map the four available Physical channels to three Data channels and one Control channel.

The Data channels will be used for data transmission between subscriber devices, infrastructure devices, and the network.

The Control channel is designated for internal MEA communication. By default, it is set to the physical channel 3 (2.47 GHz).

Changing Control Channel

A user should never change the channel mappings unless specifically instructed to do so by the Network Administrator. Clicking on the Change Control Channel button prompts the user to enter the password required to change the control channel configuration. If the user is authorized to change the control channel, the password will be supplied by the Network Administrator. Enter the password and click on the **OK** button.

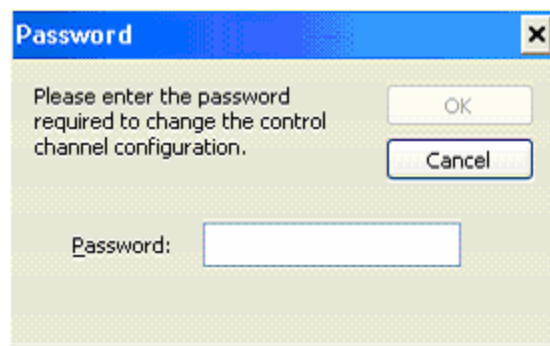


Figure 51. Password Protection Panel

ATTENTION: Any unauthorized change can cause the WMC6300 to stop communication with the network and other subscriber devices.



User Priority Settings and Quality of Service Overview

Classification of Data Packets

The MEA system uses two methods to classify data packets in order to provide them the requested levels of service. The first is the use of the industry-standard Differentiated Services Code Point (DSCP). The second is a proprietary system based on the assigned priority of the node's user.

Differentiated Services Code Point

The DSCP is defined in RFC 2474 as a part of the Differentiated Services (DS, or "DiffServ") field. This field is defined for both the IPv4 and IPv6 headers. The DSCP is a dimensionless number used to index a particular class of traffic and, thereby, a particular transport behavior at each hop. These behaviors are known as Per-Hop Behaviors (PHBs).

Some basic code points are defined in RFC 2474 for backwards compatibility with the overlapping "Precedence" field in the IPv4 header, known collectively as Class Selector Code Points. Extensions to these, called Assured Forwarding and Expedited Forwarding classes, are defined in RFCs 2597 and 2598. Other groups of code points are reserved for experimental or site-local use.

Most often, the indexed per-hop behaviors are described (and sometimes, implemented) simply in terms of queue prioritization of packets at each hop. However, the behaviors may incorporate other features such as traffic pruning to condition the traffic flowing from the node.

For example, voice packets may be assigned a DSCP tag indicating the need for low-latency service. The transport can then intelligently decide to discard stale packets or prioritize new packets to provide the lowest latency possible while, perhaps, sacrificing raw bandwidth or reliability when the demand exceeds capacity. High priority data transfers might be tagged to indicate the need for high reliability. The transport can use this knowledge to increase buffering or provide extra retries, perhaps increasing the stream's latency but serving the data reliably. Likewise, bulk data packets can be assigned "best effort" service so that the transport layer can intersperse them between packets needing lower latency or higher bandwidth.

The MEA system extracts the DS field from IP packets as they enter the wireless mesh, either at the access point or at the subscriber device. The DSCP classification then serves as one of the inputs for selecting an appropriate behavior in the transport mechanisms.

User Priority

The MEA QoS system also augments the standards-based DSCP traffic classification system with a proprietary feature to implement hierarchical service on a per-user basis. While DSCP can be used to classify the traffic by payload, the User Priority feature classifies traffic by the user that originated it, tagging packets with an assigned priority level. Using this tag, data packets from high priority nodes can be granted preferential service over packets from lower priority nodes.

The User Priority at each node is a managed variable with tight control granted to the Network Administrator through the Device Manager utilities available in MeshManager. The user on the WMC6300 node is free to select a priority level through applications using the MeshAPI software interface. However, the Network Administrator through the Device Manager can put bounds on each node, limiting the node's user priority to a specific range or setting it to a specific value.

The User Priority feature also underpins a secondary feature known as Emergency Mode. The Emergency Mode feature is also accessed by applications using the MeshAPI and can be used to temporarily grant the user elevated priority for use in emergency situations. However, this ability can also be tightly managed and granted by the Network Administrator through the Device Manager as needed.

The current User Priority is assigned to every packet transmitted by the user of the node. This priority tag is preserved in each packet as it passes through the mesh until it reaches the final destination or the wired network

Packet classification is based on the current User Priority setting and determines the latency, throughput, and reliability of the transmission of the packet, in both relative and absolute terms. For example, packets of one class may be provided relatively higher throughput in the presence of other lower-class packets, but may also have absolute time-to-live limitations, which will impact the reliability of delivery for packets in the class.

A WMC6300 host user's current priority and maximum allowed priority may be configured within a range of Low (priority level 0) to High (priority level 7).

This User Priority feature is unique to the MEA network and only exists between endpoints within the MEA network or between a MEA network node and the entry/exit node on the MEA network.

Nodes outside of the MEA Core LAN cannot request a particular priority for transmitted or received traffic. Any traffic into the MEA network needing prioritization must be prioritized at the entry access point or router. Any traffic out of the MEA network will lose its priority assignment at the exit.

Service Differentiation Mechanisms

The MEA wireless mesh network leverages intelligent and adaptive transport mechanisms in every node in the mesh, including subscriber devices, to provide QoS behaviors. At each hop, the DSCP and User Priority classifications serve as inputs to dictate transport behaviors using these mechanisms. In this way, the mesh nodes cooperate to provide appropriate transport service to packets, even across multiple hops through the mesh

Intelligent Access Point Support for Quality of Service

The Intelligent Access Point (IAP) queues and shapes traffic as it is relayed into the wireless mesh from the wire, in accordance with the DSCP coding in each packet. As many deployment scenarios have the vast majority of packets entering the mesh at the access points, this mechanism is particularly effective for shaping the traffic in a manner that optimizes the use of bandwidth at what is the main point of contention on most networks.

The IAP provides pre-determined QoS levels to its data traffic it. Applications sending data that need prioritized traffic may be configured to set the TOS values in the IP packets at the source/destination devices. IAP support for QoS also provides equal fairness to all traffic within the same precedence class (TOS). Enabling QoS support on an IAP slightly increases priority of best effort UDP traffic over the TCP traffic.

The entries in the table below show the minimum guaranteed bandwidth to traffic at various precedence levels. In the absence of traffic at any class, the bandwidth will be distributed amongst other classes, insuring that no bandwidth is wasted.

Priority Levels for Local Nodes

The User Priority service can be provisioned on a per node basis for use with tiered service and emergency access systems. This priority feature is unique to the MEA network and only exists between endpoints within the MEA network or between a MEA network node and the entry/exit node on the MEA network.

Nodes outside of the MEA Core LAN cannot request a particular priority for transmitted or received traffic. Any traffic into the MEA network needing prioritization must be prioritized at the entry access point or router. Any traffic out of the MEA network will lose its priority assignment at the exit.

MEA wireless traffic will carry priorities attached to each packet. The MeshAPI can be used to tune the default priority of the local node.

The available priority settings are assigned with the Priority Drop-Down box shown in [Figure 52](#).

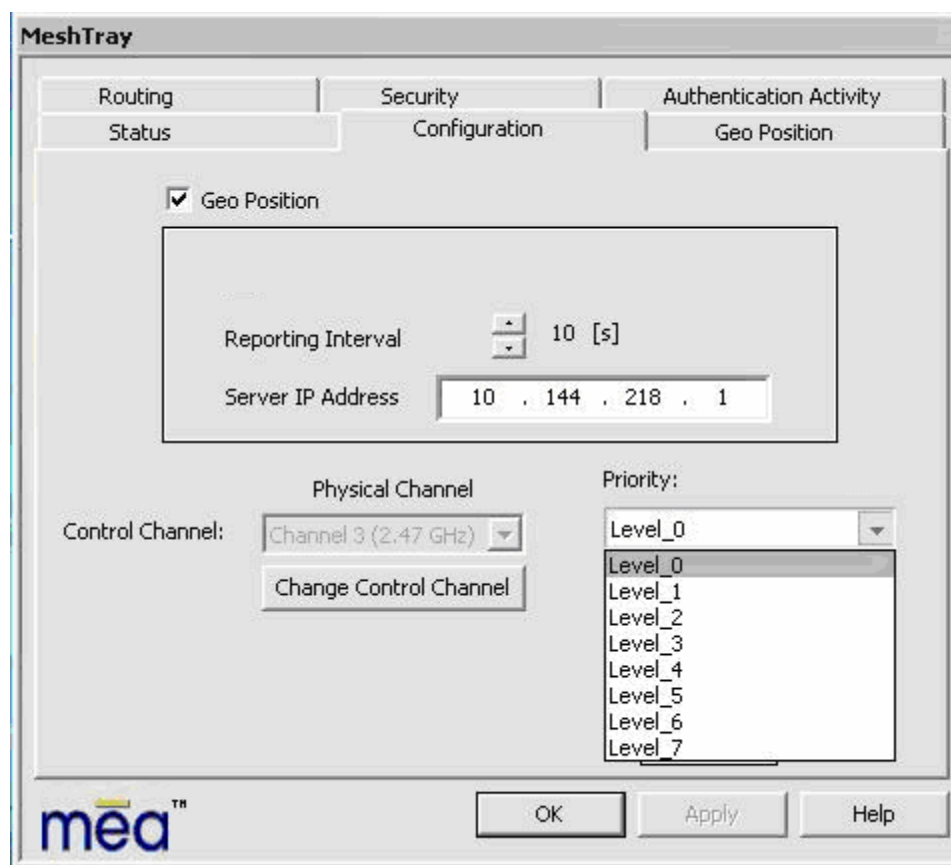


Figure 52. MeshTray Configuration Tab Priority Settings

Setting the Priority Level for the WMC6300

Use the Priority drop-down box to select the desired Priority Level. The range is Level_0 to Level_7. The Network Administrator can limit the number of priority levels available for the

address that will be assigned to the WMC6300. Check with the Network Administrator to determine the overall priority scheme that is currently being observed for your network application and the proper settings to be assigned to your device.

There is also an optional Emergency mode for use by special applications. The priority for use in emergency mode is separately provisioned and must be explicitly enabled per node by the Network Administrator. It allows authorized users to override the current priority level assignments and alter the priority levels for packets that need to be assigned the highest priority level for transmission during an emergency situation.

Addressing Schemes

There are three Host device addressing schemes that allow the Network Administrator increased flexibility in deployment.

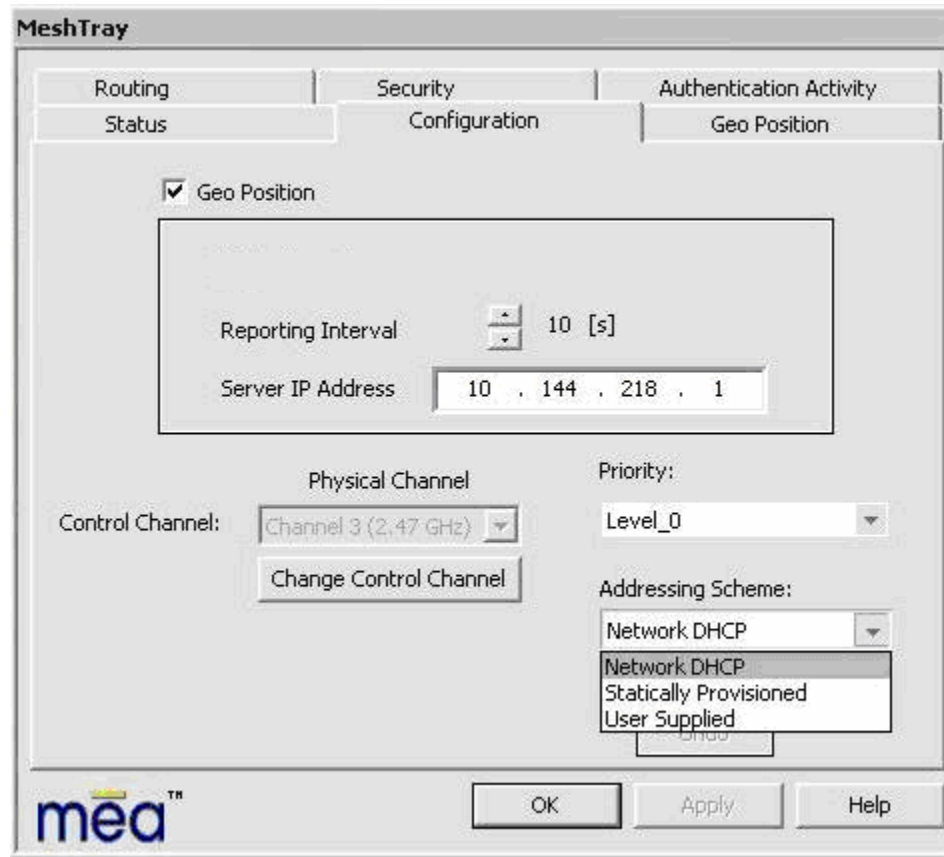


Figure 53. MeshTray Configuration Tab Addressing Scheme

Network DHCP Addressing Scheme

Network DHCP requires that the user's host device be configured to request an address from a DHCP server and the inclusion of a DHCP server in the core network configuration to answer these requests. With Network DHCP selected, the network device will forward any DHCP requests to the core network once it becomes associated and establishes communications with the infrastructure.

The DHCP server may be configured by the Network Administrator to hand out temporary or static leases. The user must associate and acquire an address from the network before establishing communications. Once a lease has been granted, the address may be dragged out of network coverage for the remainder of the lease or, if a static lease was granted, until the next power cycle. If the lease expires or the user cycles power while outside of network coverage, the user will lose the ability to communicate.

This scheme is best for a larger, closely managed network of subscribers who need inside the network coverage and only brief outside of network coverage.

Statically Provisioned Addressing Scheme

Under the Statically Provisioned scheme addresses are configured by the Network Administrator rather than hashed from the MAC address. Host addresses are based on the address programmed into the Transceiver. This scheme does not require a DHCP server on the core network.

It should be noted that a DHCP server can still exist on the network to hand out addresses to other nodes using the Network DHCP Scheme as long as the server's address range does not conflict with addresses assigned to devices using the Statically Provisioned or User Supplied Schemes.

The IP addresses and options used are configurable per-device by the Network Administrator using MeshManager. The provisioned address may be freely used to communicate while associated or unassociated.

The Network Administrator must ensure that the provisioned addresses are routable and do not conflict with any other addresses in use. The Network Administrator is free to provision any option ordinarily provisioned by a DHCP server (subnet mask, DNS, etc.) through programming of the appropriate fields in each device using MeshManager.

This scheme is ideal for a managed network of users who regularly need to communicate inside and outside of network coverage or for a network lacking a DHCP server.

User Supplied Addressing Scheme

Operating under the *User Supplied* scheme, the user's host device is configured to use a *fixed* IP address and subnet mask. The user is responsible for configuring options that would otherwise be configured by a DHCP server.

It is also up to the user to ensure that the assigned address is routable on the core network (if core network access is needed) and that it does not conflict with other addresses in use. This is analogous to and carries the same caveats as plugging an Ethernet card into a LAN and manually assigning an address to the card.

The user is free to communicate while associated or unassociated. This scheme is ideal for small, unmanaged networks lacking a DHCP server.

All of these schemes may be assigned per device, either by the user or by the network manager. The network manager can also limit the user-selectable schemes or force a specific scheme. Devices in each of these schemes can interoperate and communicate with each other, so long as the assigned addresses do not conflict and are mutually routable.

Setting the User Supplied IP Address

To setup the addressing for the User Supplied Scheme, first obtain a valid IP address from your Network Administrator. This is the IP address to be entered in the IP Address box on the Internet Protocol (TCP/IP) Properties dialog General tab.

1. From the **Start** menu, select **Settings → Control Panel**. Double click on the *Network and Dial-up Connections* icon.

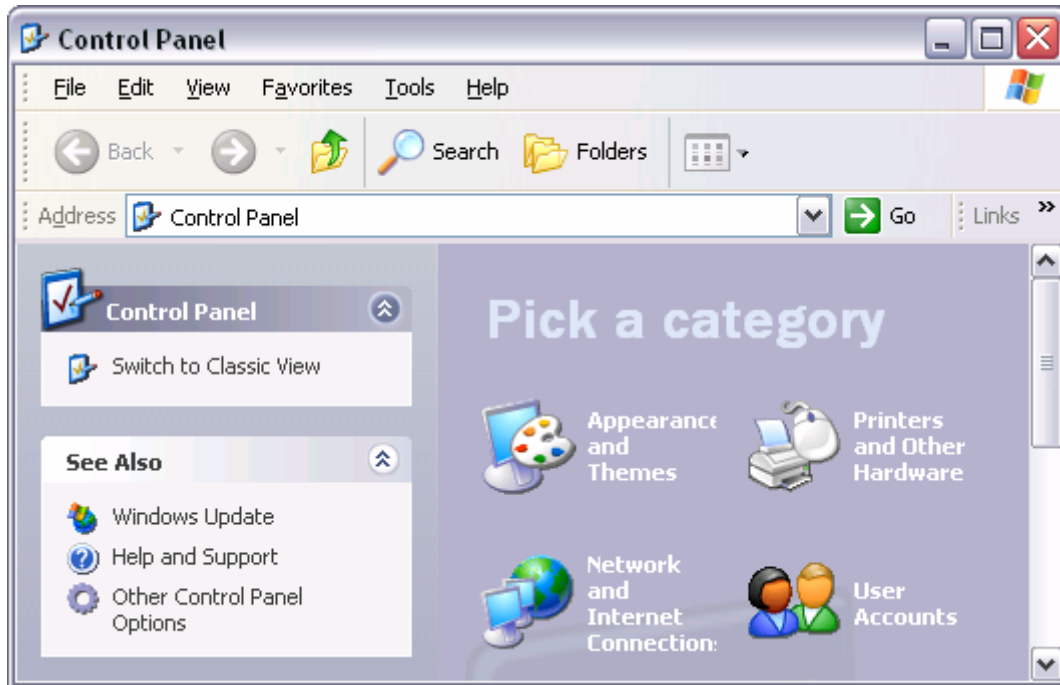


Figure 54. Control Panel – Network and Internet Connections Icon

2. The *Network and Internet Connections* window will be displayed. Double click on *Network and Internet Connections* then right click on the *Local Area Connection* icon and select *Properties*.



Figure 55. Network and Dial-up Connections Window

3. On the *Local Area Connection Properties* dialog, click to select *Internet Protocol (TCP/IP)*, then click on the **Properties** button.

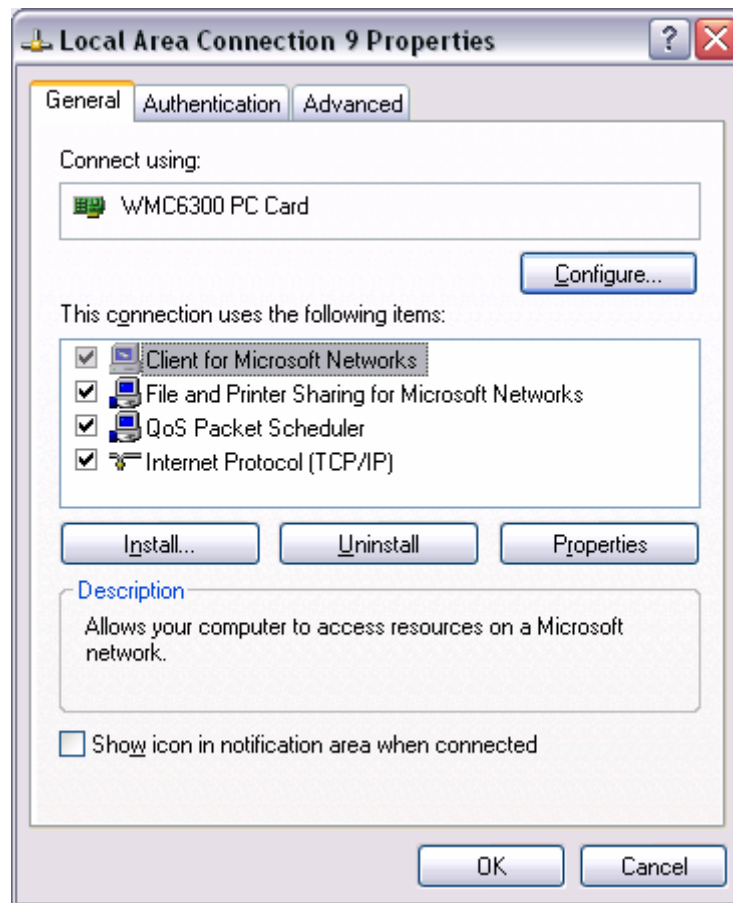


Figure 56. Local Area Connection Properties Dialog Box

The *Internet Protocol (TCP/IP) Properties* dialog box will be displayed.

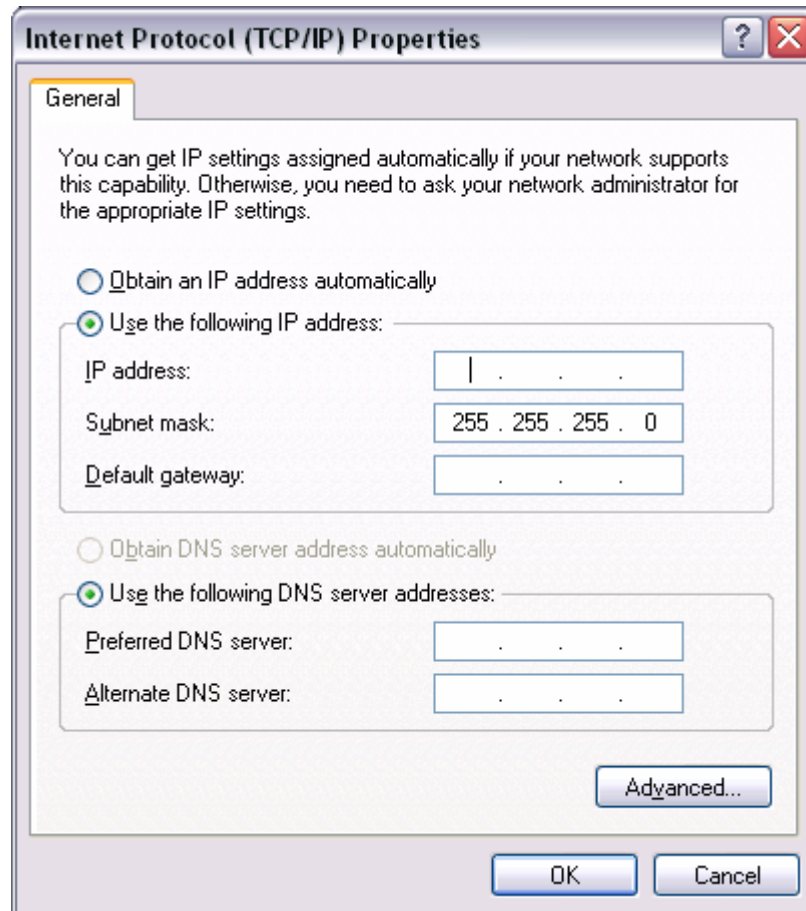


Figure 57. Internet Protocol (TCP/IP) Properties Dialog Box

4. With the *Use the following IP address:* radio button selected, enter the IP address supplied by the Network Administrator in the *IP Address:* box. Double click in the *Subnet Mask:* box to set the default subnet mask. The *Default gateway:* and the DNS server addresses should have already been set by the Network Administrator. Click on the **OK** button to accept the changes and dismiss the dialog box. Click the **OK** button to dismiss the *Local Area Connection Properties* dialog and the **Close** button to dismiss the *Local Area Connections* window.
- 5.

MeshTray Security Tab

The Security tab is used to set the security password to gain access to the network.

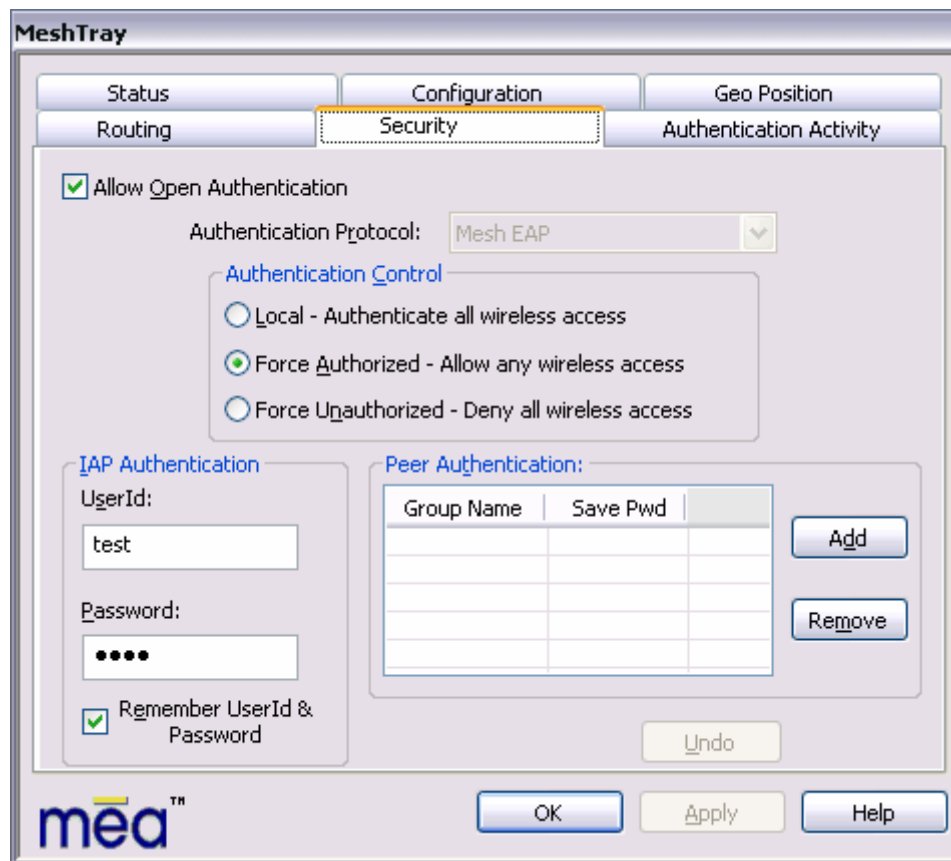


Figure 58. MeshTray Security Tab

Allow Open Authentication

Open Authentication allows authentication of any device currently being monitored and authentication of devices added to the network configuration as they are discovered.

When in peer-to-peer mode, click on one of the radio buttons to select the desired authentication option.

Local	Authentication is based on Peer information. (see <i>Peer Authentication</i>).
Force Authorized	Allow all clients.
Force Unauthorized	Deny all clients.



IAP Authentication

To gain access to the IAP the user must enter a *UserId* and *Password* recognized by that IAP.

Note: This is only true when IAP is not set to Force Authorized.

UserId and Password

Enter the appropriate *UserId*: and *Password*: to be used for authentication and authorization for network access.

Selecting the *Remember UserId & Password* checkbox allows the encrypted form of the *UserId* and *Password* to be written to the registry for future reference. Selecting this option creates a potential weakness in network security since it will allow anyone who has access to the Windows user account to be authenticated.

Peer Authentication

The Peer Authentication pane displays a table containing the *Group Name* and *Save Pwd* stats for all users within a Peer Authorization group.

In a Peer-to-Peer network, the user can specify a group name and password to gain access to all other devices associated as peers. The same group name and password must be specified on each node included in the group.

Clicking the **Add** button launches the *Add New Group* window for the user to add the *Group Name* and *Password*. The *Remember this Name and Password* checkbox provides the option to save the *Group Name* and *Password* settings.

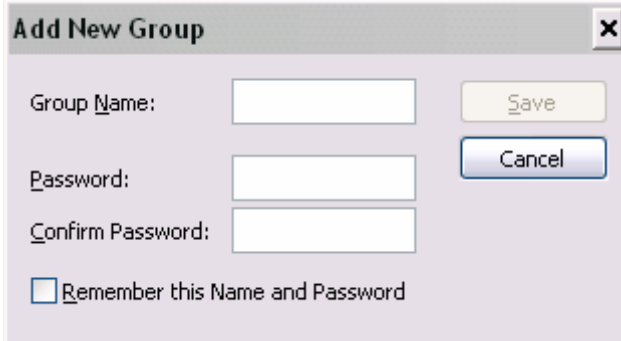
A screenshot of a Windows-style dialog box titled "Add New Group". It contains three text input fields labeled "Group Name:", "Password:", and "Confirm Password:". To the right of these fields are two buttons: "Save" and "Cancel". At the bottom left, there is a checkbox labeled "Remember this Name and Password".

Figure 59. Peer Authentication – Add

Click on the **Remove** button to remove all group names highlighted in the table.

MeshTray Authentication Activity Tab

The Authentication Activity tab displays *Infrastructure (IAP) Activity* and *Peer-to-Peer (Group) Activity* with an associated *Time* stamp and *Count* for the number of attempted authentications. The icons displayed in the *Time* column identify whether attempted authentications were successful (🔑) or failed (🔒).

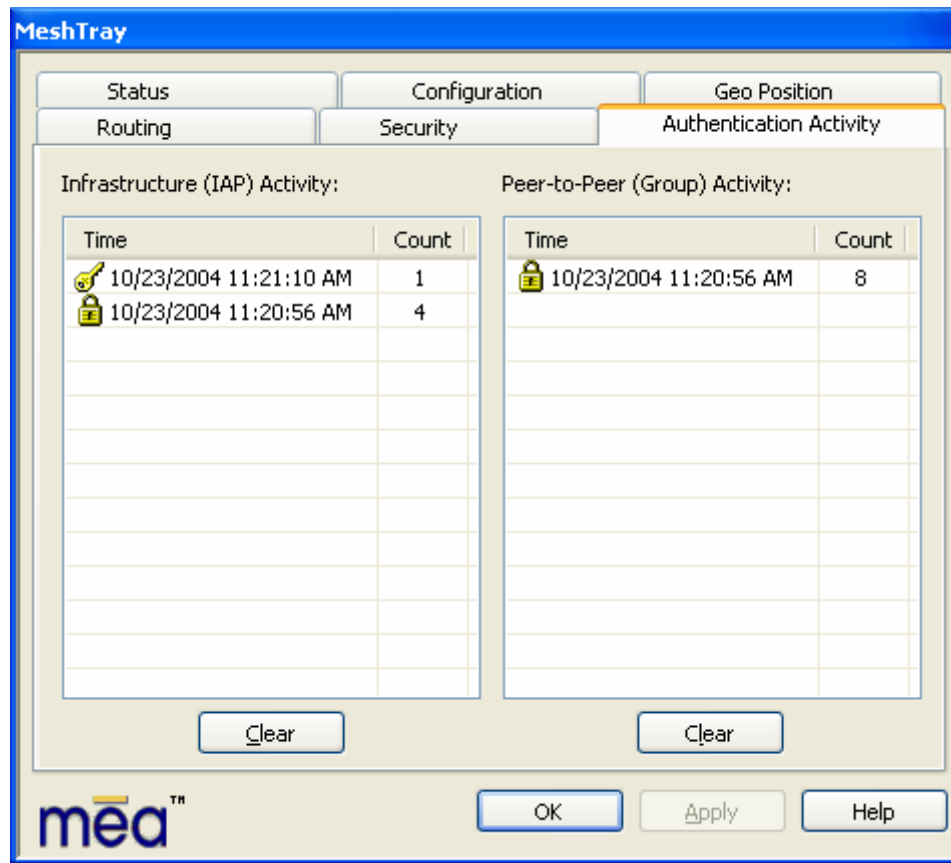


Figure 60. MeshTray Authentication Activity Tab

MeshTray Geo-Position Tab (Optional)

If your WMC6300 has been licensed for Geo-Location, an optional tab will be displayed in MeshTray as shown in [Figure 61](#). This tab will display the user's location in longitude and latitude.

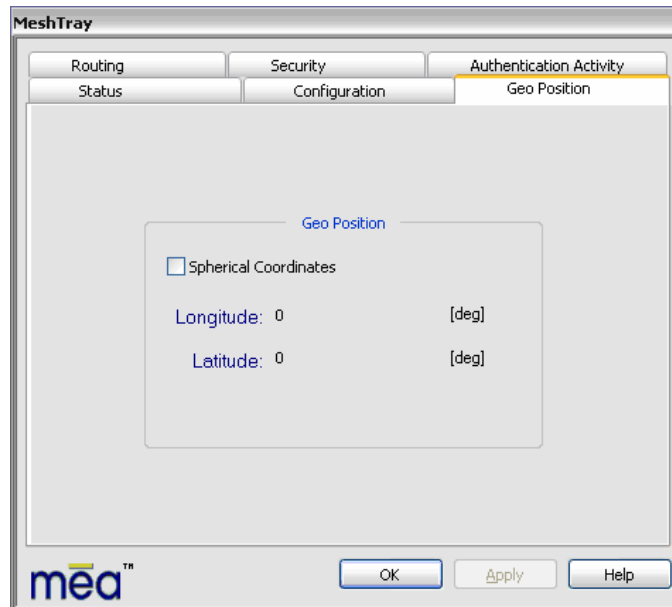


Figure 61. MeshTray Geo Position Tab

You can also select the *Spherical Coordinates* checkbox to have the location reported in X, Y, Z coordinates as shown in [Figure 62](#).

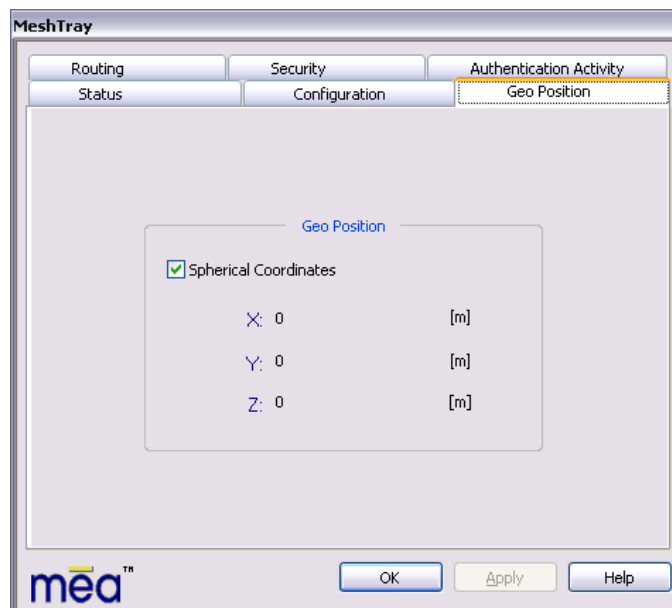


Figure 62. MeshTray Geo Position Spherical Coordinates

MeshTray Routing Tab (Optional)

If your WMC6300 has been licensed to display routing information, an optional tab will be displayed in MeshTray as shown in [Figure 63](#).

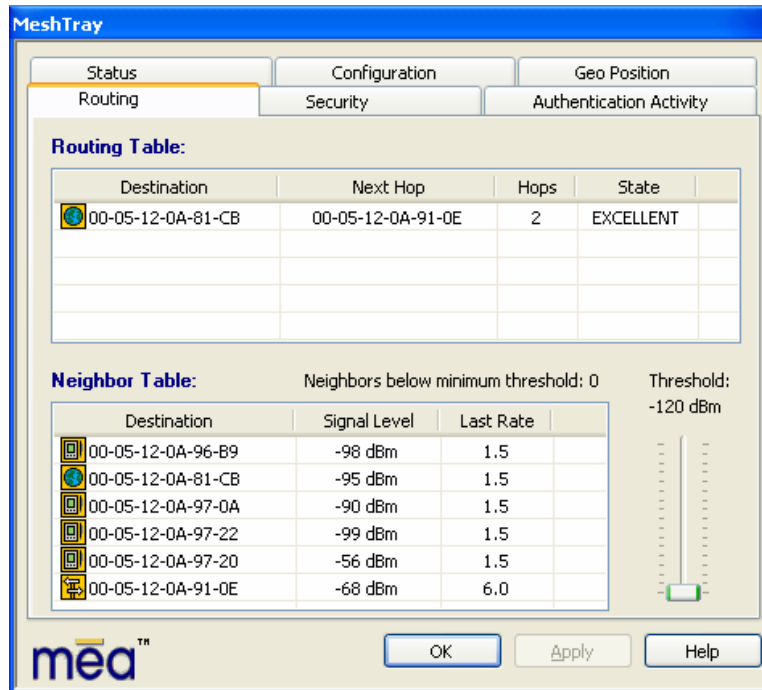


Figure 63. MeshTray Routing Tab

Routing Table

The Routing Table displays the MAC address for the *Destination* node and the node to be utilized for the *Next Hop*, the number of *Hops* to the Destination node and the current *State* of the link quality to the Destination node.

Neighbor Table







The Neighbor Table displays the MAC address and the *Signal Level* for the adjacent nodes that the WMC6300 may route through, depending on the desired end node.

The *Last Rate* column displays the last data rate used to transmit user data to the neighbor destination. If no user data has been sent to the neighbor destination, a data rate of 1.5 is displayed by default.

Threshold

Adjusting the threshold control allows the user to view neighbors that have a signal level greater than or equal to the selected threshold level.

Routing Icons

Icon	Description
 Unknown	<p>The Unknown icon is a MEA device in the network that is being used to provide a route to another wireless device in the network.</p>
 Subscriber Device (SD)	<p>The Computer icon represents a Subscriber Device using a MEA WMC6300 Wireless Modem Card in the network.</p>
 Wireless Router	<p>The Arrow icon represents a MWR6300 Wireless Router in the MEA network. The MWR6300 is an infrastructure device dedicated to routing data.</p>
 IAP	<p>The Globe icons represent an IAP6300 Intelligent Access Point in the MEA network. A MEA IAP6300 Intelligent Access Point is an infrastructure device that allows access to the wired network.</p>
 Enhanced Wireless Router	<p>The Enhanced Wireless Router (EWR) icon represents either an EWR or a PWR. An EWR//PWR is not a locally attached device and therefore cannot be viewed directly by MeshView. However, MeshView can connect to an EWR/PWR remotely to display its network topology. This functionality requires a remote server to be running on the EWR.</p>
 Vehicle Mounted Modem	<p>The Vehicle Mounted Modem (VMM) icon represents a wireless modem that has been designed for permanent in-vehicle mounting. A VMM is not a locally attached device and therefore cannot be viewed directly by MeshView. However, MeshView can connect to a VMM remotely to display its network topology. This functionality requires a remote server to be running on the VMM.</p>

Terminating MeshTray

To terminate the MeshTray application, follow the steps below:

1. Position the cursor over the MeshTray icon that is located in the system status bar.
2. Right-click on the MeshTray icon and select **Exit** as shown in [Figure 64](#).

The task is terminated and the icon is removed until the application is started again from the Start menu.

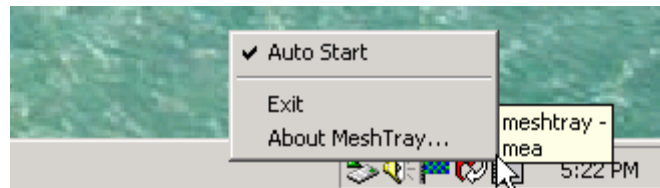


Figure 64. Exit MeshTray

Troubleshooting Using MeshAPI

When MeshTray is running, MeshAPI reports its status to the system application Event Log.

To view your system Event Log:

1. Right-click on the Windows **My Computer** icon and select **Manage**.
2. Choose *EventViewer*→*Application*. Look for the MeshAPI entries under the *Source* column.

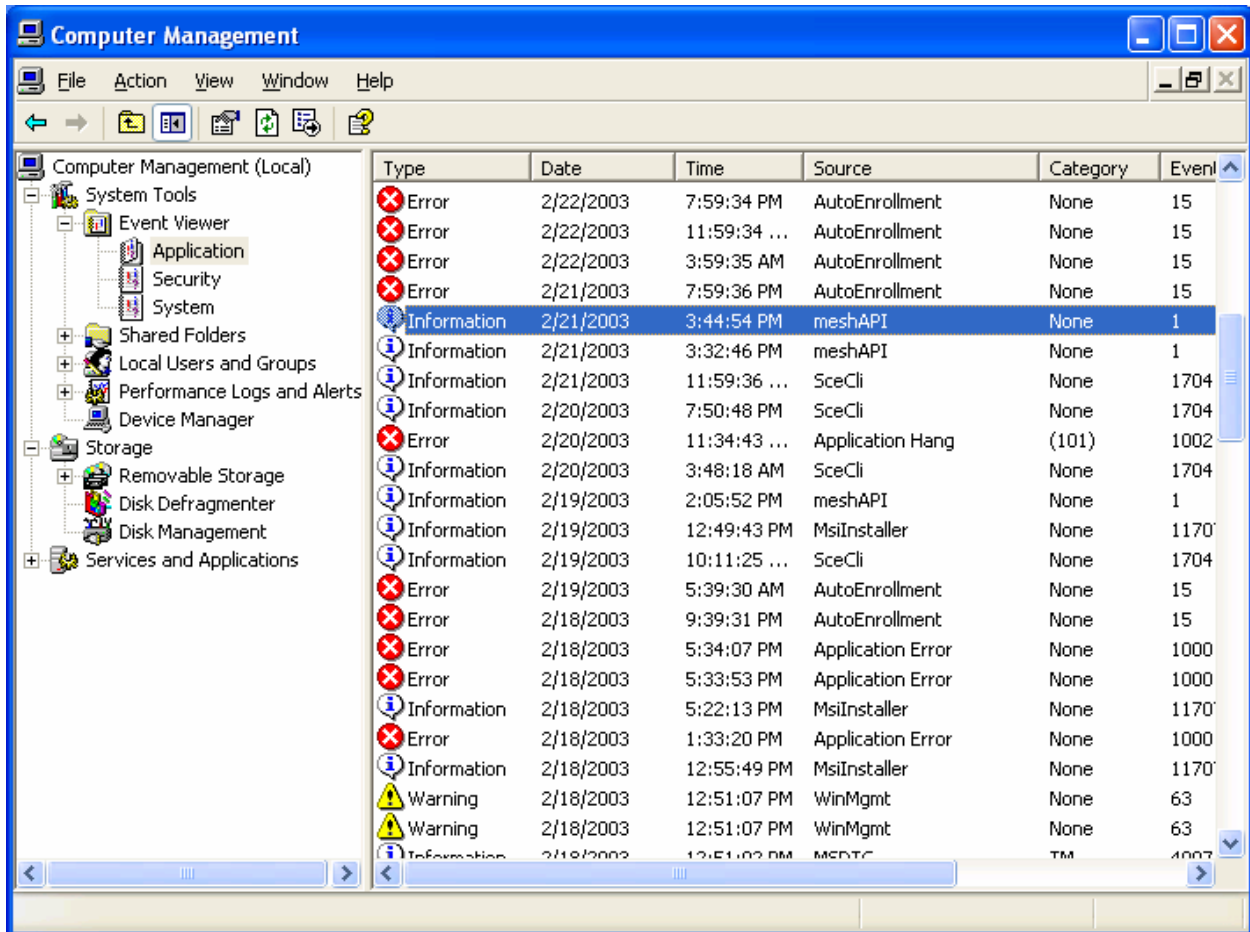


Figure 65. Using EventViewer to Troubleshoot MeshAPI

Customer Service Information

If you have read this document and made every effort to resolve installation or operation issues yourself and still require help, please contact your regional Motorola support representatives

USA

Motorola System Support Center (SSC) using the following contact information:

Phone: 800-221-7144

Hours of Operation: 7 days a week, 24 hours

Europe

Phone: +44 (0)1793 564680

Email: essc@motorola.com

Hours: of Operation: Mon-Fri 09:00 - 17:00 GMT

Calls are logged 24 x 7, cases will be worked Mon-Fri 09:00 - 17:00 GMT

Asia and Pacific Region

Remote Technical Help Desk (Channel Partners)

Phone: +63 28 92 79 93

Email: wi4Tech@motorola.com

Hours of Operation: Mon - Fri 8 am - 6 pm

Sat 8 am - 12 noon



Obtaining Support

Motorola provides technical support services for your system and recommends that you coordinate warranty and repair activities through the Motorola System Support Center (SSC). When you consult the Motorola SSC, you increase the likelihood that problems are rectified in a timely fashion and that warranty requirements are satisfied. Check your contract for specific warranty and service information.

System Information

To be provided with the best possible opportunity for support, collect the following system information and have it available when obtaining support.

- (a) Location of the system
- (b) Date the system was put into service
- (c) Software or firmware version information for components of your system
- (d) Serial number(s) of the device(s) or component(s) requiring support
- (e) A written description of the symptom or observation of the problem:
 - When did it first appear?
 - Can it be reproduced?
 - What is the step-by-step procedure to cause it?
- (f) Do other circumstances contribute to the problem? For example, changes in weather or other conditions?
- (g) Maintenance action preceding problem:
 - Upgrade of software or equipment
 - Change in the hardware or software configuration
 - Software reload - from backup or from CD-ROM (note the version and date)

Return Material Request

After collecting system information, contact the Motorola System Support Center for assistance or to obtain a Return Material Authorization (RMA) number for faulty Field Replaceable Entities (FREs):

North America: 800-221-7144

Radio Products and Services Division

The Radio Products and Services Division is your source for manuals and replacement parts.

Radio Products and Services Division Telephone Numbers

The telephone numbers for ordering are: (800)-422-4210 (US and Canada orders)

The Fax numbers are: (800)-622-6210 (US and Canada orders)

The number for help identifying an item or part number is (800)-422-4210; select choice “3” from the menu

Returning System Components to Motorola

Motorola's service philosophy is based on field replaceable entities (FREs). FREs are system components identified by Motorola to be returned to Motorola for repair.

Returning FREs

Return faulty FREs to Motorola for repair. When you return an assembly for service, follow these best practices:

- (h) Place any assembly containing CMOS devices in a static-proof bag or container for shipment.
 - (i) Obtain a return authorization (RA) number from the Motorola System Support Center.
 - (j) Include the warranty, model, kit numbers, and serial numbers on the job ticket, as necessary.
 - (k) If the warranty is out of date, you must have a purchase order.
 - (l) Print the return address clearly, in block letters.
 - (m) Provide a phone number where your repair technician can be reached.
 - (n) Include the contact person's name for return.
- Pack the assembly tightly and securely, preferably in its original shipping container



Product Warranty Information

This warranty applies within the fifty (50) United States, the District of Columbia and Canada.

LIMITED WARRANTY MOTOROLA COMMUNICATION PRODUCTS

If the affected product is being purchased pursuant to a written Communications System Agreement signed by Motorola, the warranty contained in that written agreement will apply. Otherwise, the following warranty applies.

I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

Motorola Inc. or, if applicable, Motorola Canada Limited ("Motorola") warrants the Motorola manufactured Broadband Data communications product, against material defects in material and workmanship under normal use and service for a period of One (1) Year from the date of shipment.

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it with the same or equivalent Product (using new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided purchaser notifies Motorola according to the terms of this warranty. Repaired or replaced Product is warranted for the balance of the original applicable warranty period. All replaced parts of the Product shall become the property of Motorola.

This express limited warranty is extended by Motorola to the original end user purchaser purchasing the Product for purposes of leasing or for commercial, industrial, or governmental use only, and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by Motorola. Motorola assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of Motorola. Unless made in a separate written agreement between Motorola and the original end user purchaser, Motorola does not warrant the installation, maintenance or service of the Product.

Motorola cannot be responsible in any way for any ancillary equipment not furnished by Motorola which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, Motorola disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

II. GENERAL PROVISIONS:

This warranty sets forth the full extent of Motorola's responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at Motorola's option, is the exclusive remedy. **THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. MOTOROLA DISCLAIMS ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.**

III. HOW TO GET WARRANTY SERVICE:

Purchaser must notify Motorola's representative or call Motorola's Customer Response Center at 1-800-247-2346 within the applicable warranty period for information regarding warranty service.

IV. WHAT THIS WARRANTY DOES NOT COVER:

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.
- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G) Batteries (they carry their own separate limited warranty).
- H) Freight costs to the repair depot.
- I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with Motorola's published specifications or with the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from Motorola.
- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) That the software in the Product will meet the purchaser's requirements or that the operation of the software will be uninterrupted or error-free.
- L) Normal and customary wear and tear.
- M) Non-Motorola manufactured equipment unless bearing a Motorola Part Number in the form of an alpha numeric number (i.e., TDE6030B).
- N) Lift trucks for installation, removal, replacement or repair of the Motorola supplied products from light, power, telephone poles etc.
- O) Dispatch to remote site locations
- P) Loading of software upgrades or fixes into the devices.

V. GOVERNING LAW

In the case of a Product sold in the United States and Canada, this Warranty is governed by the laws of the State of Illinois and the Province of Ontario, respectively.

VI. PATENT AND SOFTWARE PROVISIONS:

Motorola will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or its parts infringe a United States patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that Motorola will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that Motorola will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or its parts become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit Motorola, at its option and expense, either to procure for such purchaser the right to continue using the Product or its parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or its parts as depreciated and accept its



return. The depreciation will be an equal amount per year over the lifetime of the Product or its parts as established by Motorola.

Motorola will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or its parts furnished hereunder with software, apparatus or devices not furnished by Motorola, nor will Motorola have any liability for the use of ancillary equipment or software not furnished by Motorola which is attached to or used in connection with the Product. The foregoing states the entire liability of Motorola with respect to infringement of patents by the Product or any its parts thereof.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. Motorola software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such Motorola software or exercise of rights in such Motorola software is permitted. No license is granted by implication, estoppel or otherwise under Motorola patent rights or copyrights.

Regulatory Information

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement:

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in an installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the WMC6300 and radio or television receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the supplier of the WMC6300 or an experienced radio/TV technician for help.

FCC RF Energy Exposure Statement

1. This equipment complies with FCC RF Energy exposure limits set forth for an uncontrolled environment.
2. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Although this device complies with the FCC RF Exposure limits in multiple configurations of the antenna, we suggest that the antenna be positioned away from the body when transmitting in order to minimize the level of RF Exposure.

Regulatory and RF Safety Exposure

Your Motorola WMC6300 PCMCIA card is designed and tested to comply with a number of national and international standards and guidelines (listed below) regarding human exposure to RF electromagnetic energy.

This product complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-2005



- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to
- Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation – Human Exposure) Standard, 2003
- ANATEL ANNEX to Resolution No. 303 of July 2, 2002 "Regulation of limitation of exposure to electrical, magnetic and electromagnetic fields in the radio frequency range between 9 KHz and 300 GHz" and "Attachment to resolution # 303 from July 2, 2002"

RF Exposure Compliance and Guidelines Operating Instructions

To ensure compliance with the general population uncontrolled environment RF exposure limits in these standards, the antenna should be kept at a minimum separation distance of 20cm from all persons when used in a personal or laptop computer.

ATTENTION

To ensure compliance with FCC requirements, use only Motorola approved, supplied antennas. Use of non-Motorola approved antennas may result in non-compliance with FCC regulations.

NOTE: The manufacturer is not responsible for any unauthorized modifications to this equipment. Unauthorized modifications could void user's authority to operate device.