



ES-100

EIGHT CHANNEL RS-232 ASYNCHRONOUS
ADAPTER CARD

for ISA compatible machines

INTERFACE CARDS FOR IBM PC/AT AND PS/2

User's Manual

QUATECH, INC.
5675 Hudson Industrial Parkway
Hudson, Ohio 44236

TEL: (330) 655-9000
FAX: (330) 655-9010
<http://www.quatech.com>

Warranty Information

Quatech Inc. warrants the ES-100 to be free of defects for one (1) year from the date of purchase. Quatech Inc. will repair or replace any adapter that fails to perform under normal operating conditions and in accordance with the procedures outlined in this document during the warranty period. Any damage that results from improper installation, operation, or general misuse voids all warranty rights.

The authors have taken due care in the preparation of this document and any associated software program(s). In no event will Quatech Inc. be liable for damages of any kind, incidental or consequential, in regard to or arising out of the performance or form of the materials presented herein and in the program(s) accompanying this document. No representation is made regarding the suitability of this product for any particular purpose.

Quatech Inc. reserves the right to edit or append to this document or the product(s) to which it refers at any time and without notice.

Please complete the following information and retain for your records. Have this information available when requesting warranty service.

Date of purchase: _____

Model Number: ES-100

Product Description: Eight Channel RS-232 Asynchronous
Communication ISA Adapter

Serial Number: _____

The information contained in this document cannot be reproduced in any form without the written consent of Quatech, Inc. Likewise, any software programs that might accompany this document can be used only in accordance with any license agreement(s) between the purchaser and Quatech, Inc. Quatech, Inc. reserves the right to change this documentation or the product to which it refers at any time and without notice.

The authors have taken due care in the preparation of this document and every attempt has been made to ensure its accuracy and completeness. In no event will Quatech, Inc. be liable for damages of any kind, incidental or consequential, in regard to or arising out of the performance or form of the materials presented in this document or any software programs that might accompany this document.

Quatech, Inc. encourages feedback about this document. Please send any written comments to the Technical Support department at the address listed on the cover page of this document.

Copyright ©2004 by
Quatech Inc.
5675 Hudson Industrial Parkway
Hudson, Ohio 44236
All rights reserved. Printed in the U.S.A.

Compliances - Electromagnetic Emissions

EC - Council Directive 89/336/EEC

This equipment has been tested and found to comply with the limits of the following standards for a digital device:

- EN50081-1 (EN55022, EN60555-2, EN60555-3)
- EN50082-1 (IEC 801-2, IEC 801-3, IEC 801-4)

Type of Equipment: Information Technology Equipment

Equipment Class: Commercial, Residential, & Light Industrial

FCC - Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an or an experienced radio/TV technician for help.

This equipment has been certified to comply with the limits for a Class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

ES-100
User's Manual

1. GENERAL INFORMATION

The Quatech, Inc. ES-100D provides eight RS-232 asynchronous serial communication interfaces for IBM-compatible personal computer systems using the 16-bit ISA (Industry Standard Architecture) expansion bus.

The ES-100D's serial ports are implemented using 16450 Universal Asynchronous Receiver/Transmitters (UARTs). For higher performance, 16550 UARTs can be installed in place of the 16450 UARTs. The 16550 contains a hardware buffer that reduces processing overhead. Software must be aware of the 16550 UART for the device's extra capabilities to be used, otherwise it will act as a 16450 UART. The 16550 is suggested for multitasking environments and for applications involving high data rates.

The ES-100D is highly flexible with respect to addressing and interrupt level use. The serial ports are addressed in a contiguous block that can be placed anywhere within the range of 0000 hex to FFFF hex, and available interrupt levels include IRQ2 to IRQ7, IRQ10 to IRQ12, IRQ14, or IRQ15.

All ports on the ES-100D share one interrupt level. A special interrupt status register is provided to allow controlling software to manage the shared interrupt level. The shared interrupt feature minimizes the system resources consumed by the adapter.

In order to support the use of the shared interrupt feature of the ES-100D, Quatech has developed device drivers for several popular operating systems and environments. The sales department can be contacted for details on current offerings.

2. INSTALLATION

If the default address and interrupt settings are sufficient, the ES-100D can be quickly installed and put to use. The factory defaults are listed in Figure 1.

PORT	ADDRESS	IRQ
Serial 1	300 hex	3
Serial 2	308 hex	3
Serial 3	310 hex	3
Serial 4	318 hex	3
Serial 5	320 hex	3
Serial 6	328 hex	3
Serial 7	330 hex	3
Serial 8	338 hex	3

Figure 1 --- Default address and IRQ settings for ES-100D

The output of the ES-100D is a 78-pin D-connector. A cable is provided to convert the D-78 into eight standard male D-25 connectors with all control signals provided to each port (RTS, DTR, CTS, DSR, DCD, and RI). See section V of this manual for connector details.

1. If the default settings are correct, skip to step 2, otherwise refer to sections III and IV of this document for detailed information on how to set the address and IRQ level.
2. Turn off the power of the computer system in which the ES-100D is to be installed.
3. Remove the system cover according to the instructions provided by the computer manufacturer.
4. Install the ES-100D in any vacant expansion slot. The board should be secured by installing the Option Retaining Bracket (ORB) screw.
5. Replace the system cover according to the instructions provided by the computer manufacturer.

Attach and secure the cable connectors to the desired equipment.

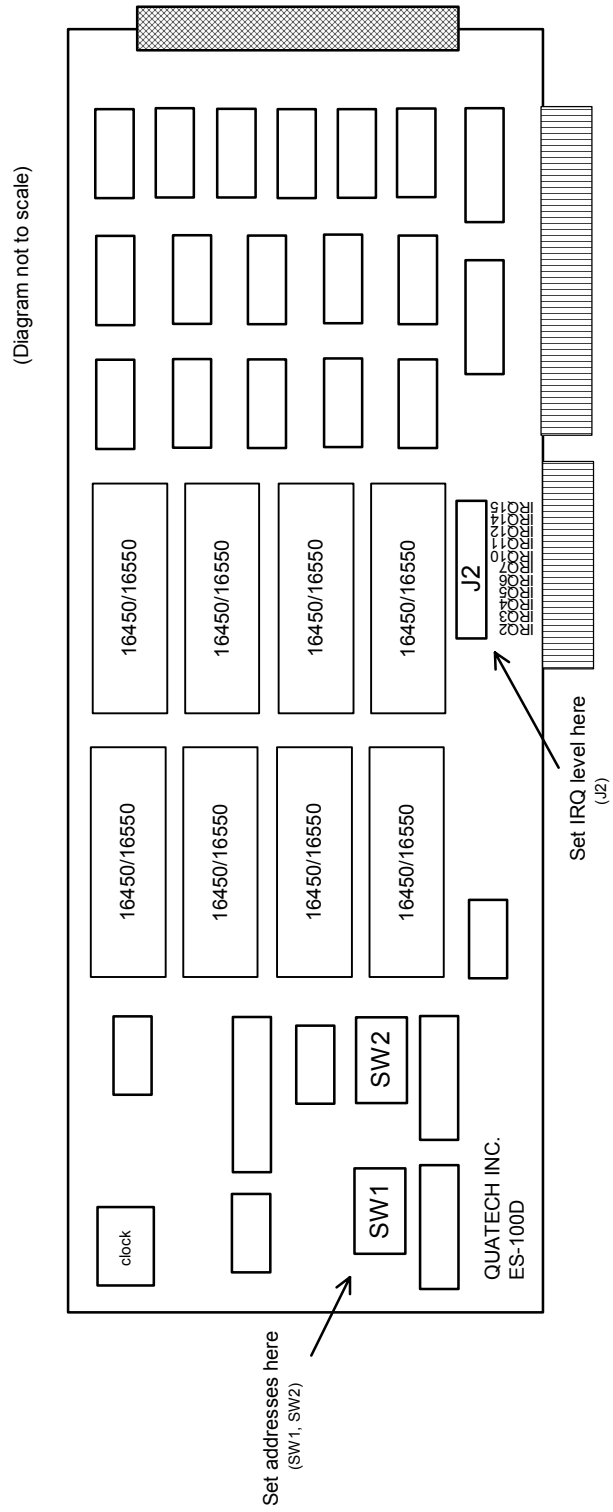


Figure 2 --- Diagram of ES-100D

3. ADDRESSING PORTS

Setting the address

The base address of the ES-100D is set using the two DIP switch packs. When setting the address selection switches, a switch in the "ON" position specifies that the corresponding address line must be a logic 0 for the port to be selected. Similarly, a switch in the "OFF" position forces the corresponding address line to be a logic 1 for the port to be selected.

A full sixteen bit address decode is implemented to reduce the chance of address conflicts with other adapters in the system. The base address of the ES-100D can be set anywhere in the range of 0000 hex to FFFF hex. Each serial port on the ES-100D uses 8 consecutive I/O locations. The ports reside in a contiguous block of I/O space in eight byte increments, for a total of 64 contiguous bytes. This is shown in Figure 3.

PORT	ADDRESS RANGE
Serial 1	Base Address + 0 to Base Address + 7
Serial 2	Base Address + 8 to Base Address + 15
Serial 3	Base Address + 16 to Base Address + 23
Serial 4	Base Address + 24 to Base Address + 31
Serial 5	Base Address + 32 to Base Address + 39
Serial 6	Base Address + 40 to Base Address + 47
Serial 7	Base Address + 48 to Base Address + 55
Serial 8	Base Address + 56 to Base Address + 63

Figure 3 --- Port address map

Switch SW1 and the first four positions of switch SW2 select address lines A15 through A6. The fifth position of SW2 is not used. The remaining address lines, A5 - A0, are used by the UART to select the register being accessed.

The sixth position on SW2 is used to enable or disable the interrupt status register (see page 7).

Figure 4 shows how the switches on the ES-100D represent the address values for serial ports. This figure can be used to explain the examples shown in Figure 5.

A serial port's address is a 16-bit quantity that is most often expressed in four hexadecimal (base 16) digits. A hex digit can hold a value from 0 to 15 (decimal), and is made up of four binary bits given weights of eight, four, two, and one, hence the maximum value of $8+4+2+1 = 15$.

A possible serial port address is 5240 hex. The example below shows how the hex digits are broken down into binary bits.

Binary bits	0 1 0 1	0 0 1 0	0 1 0 0	0 0 0 0
Bit weight	8 4 2 1	8 4 2 1	8 4 2 1	8 4 2 1
Sum of bits	0+4+0+1	0+0+2+0	0+4+0+0	0+0+0+0
Hex digits	5	2	4	0

These address bits are set by the switches.
All other bits are considered to be zero.

 


Figure 4 --- Examination of a serial port base address

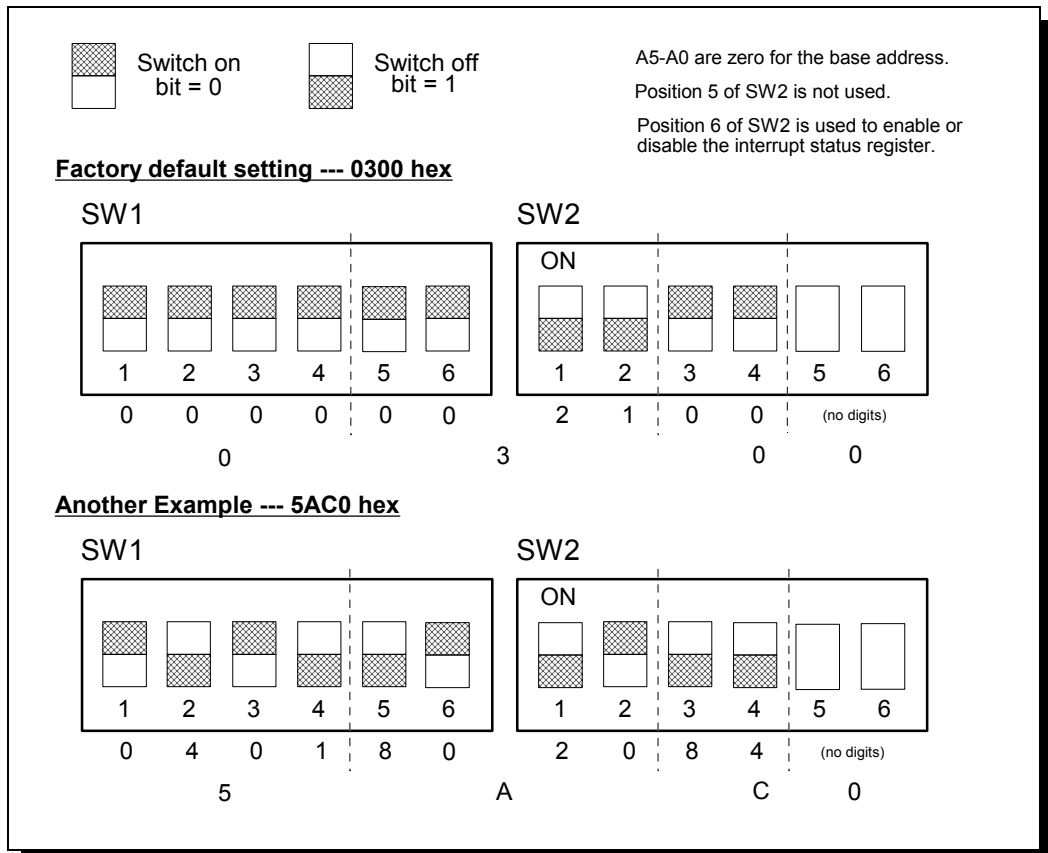


Figure 5 --- Serial port base I/O address selection switches

4. INTERRUPT LEVEL (IRQ)

The ES-100D allows the use of any interrupt level in the range IRQ2 to IRQ7, IRQ10 to IRQ12, IRQ14, or IRQ15, selected using jumper pack J2. In Figure 6, the factory default setting of IRQ3 is shown. To select a different IRQ, move the jumper to the appropriate position on J2.

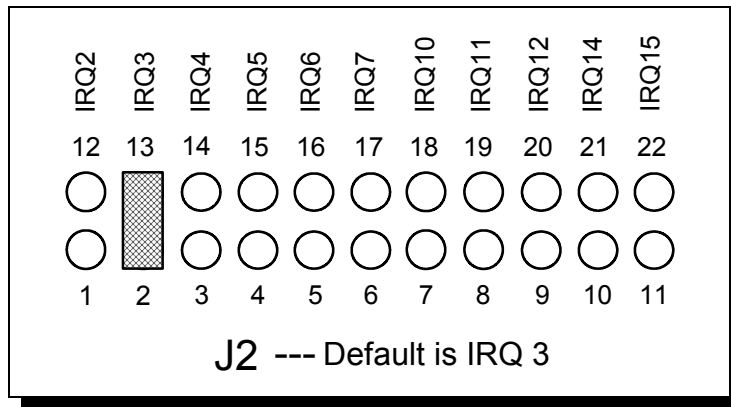


Figure 6 --- Interrupt level (IRQ) selection

Interrupt Sharing

All ports on the ES-100D share the same interrupt level. In addition, an interrupt sharing circuit allows the ES-100D to share its interrupt with another Quatech adapter supporting sharable interrupts. In either case, the software driving the serial ports must determine which port or ports are requesting service when an interrupt is generated.

The ES-100D signals a hardware interrupt when any port requires service. The interrupt signal is maintained until no port requires service. Because the ISA bus is edge-sensitive, this behavior forces the interrupt service routine to ensure that all ports are checked before exiting. A way to do this is to poll each port until an interrupting port is found. After servicing the port, all ports should be checked again. If any interrupting port is left unserviced the ES-100D will be unable to signal any further interrupts.

Interrupt Status register

The ES-100D is equipped with an interrupt status register which can be used to simplify the servicing of shared interrupts. If this feature is enabled, the read-only interrupt status register is accessed in place of the scratchpad of any given UART at base address + 7. Virtually no commercially available software makes use of the scratchpad register. The choice of using the interrupt status register or the UART scratchpads is made using position 6 of switch SW2 as shown in Figure 7.

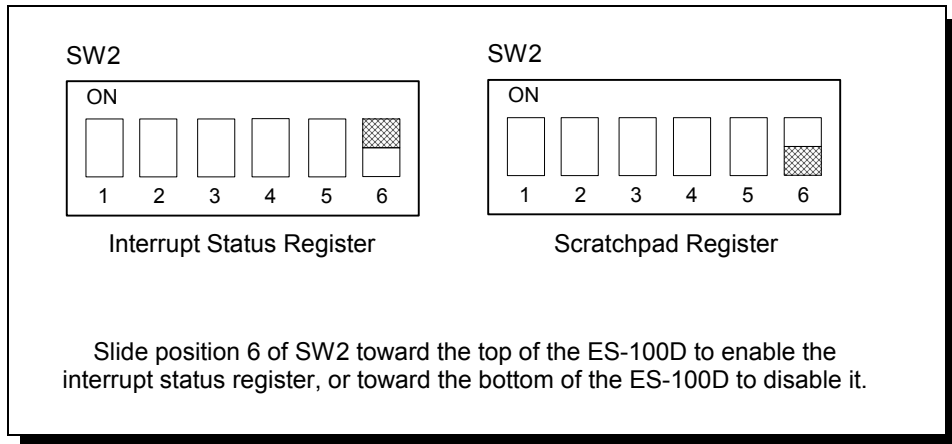


Figure 7 --- Enabling the Interrupt Status Register

When a hardware interrupt occurs, reading the interrupt status register will return the interrupt status of the entire ES-100D, as shown in Figure 8. Individual bits are cleared as the interrupting ports are serviced. The interrupt service routine must ensure that the interrupt status register reads zero before exiting, or the ES-100D will be unable to signal subsequent interrupts.

An I/O write to the interrupt status register will cause another hardware interrupt to be generated if the interrupt status register is non-zero. The value written is ignored and has no effect on the contents of the interrupt status register.

BIT	DESCRIPTION
7 (MSB)	1 if interrupt pending on Serial 8
6	1 if interrupt pending on Serial 7
5	1 if interrupt pending on Serial 6
4	1 if interrupt pending on Serial 5
3	1 if interrupt pending on Serial 4
2	1 if interrupt pending on Serial 3
1	1 if interrupt pending on Serial 2
0	1 if interrupt pending on Serial 1

Figure 8 --- Interrupt Status Register contents

(This page intentionally left blank.)

5. EXTERNAL CONNECTIONS

RS-232-C devices are classified by their function as either Data Terminal Equipment (DTE) or Data Communication Equipment (DCE). Generally, data terminal equipment is defined as the communication source and data communication equipment is defined as the device that provides a communication channel between two DTE-type devices.

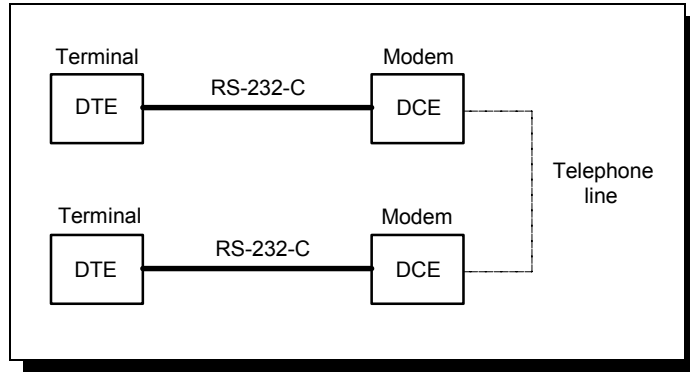


Figure 9 --- Use of DTEs and DCEs in a communications link

DTE- and DCE-type devices have complementary pinouts to allow terminals and modems to be connected directly using a one-to-one cable as shown in Figure 10. In many applications, DCEs are unnecessary, and in these cases a cable called a "null modem cable" or "modem eliminator cable" is used to directly connect two DTE-type devices. A typical null modem cable is also shown in Figure 10.

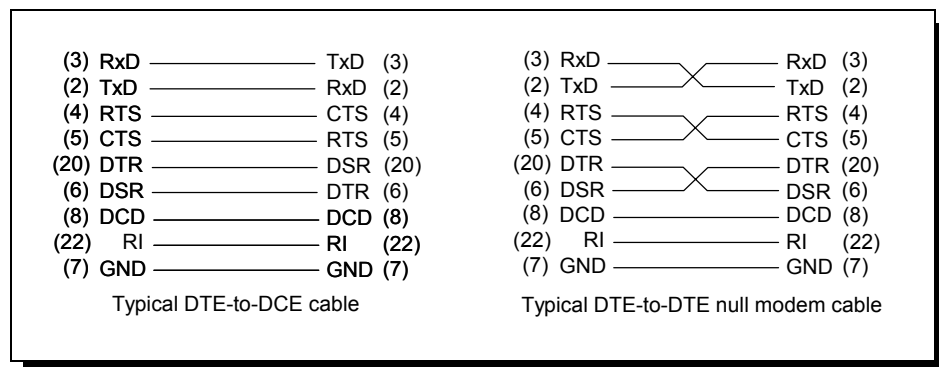


Figure 10 --- Cabling requirements for RS-232-C devices
(cables using 25-pin connectors shown)

Channel Output Configuration

The ES-100D connects to peripheral equipment through a single female D-78 connector, or using the adapter cable, eight male D-25 connectors. The standard serial port connections are listed in Figure 11. Unlisted pins are not used and not connected.

RS-232 Signal Description	Serial 1		Serial 2		Serial 3		Serial 4	
	D-78	D-25	D-78	D-25	D-78	D-25	D-78	D-25
TxD	21	2	60	2	26	2	65	2
RxD	1	3	40	3	6	3	45	3
RTS	2	4	41	4	7	4	46	4
CTS	22	5	61	5	27	5	66	5
DTR	3	20	42	20	8	20	47	20
DSR	23	6	62	6	28	6	67	6
DCD	4	8	43	8	9	8	48	8
RI	24	22	63	22	29	22	68	22
GND	5	7	44	7	10	7	49	7
RS-232 Signal Description	Serial 5		Serial 6		Serial 7		Serial 8	
	D-78	D-25	D-78	D-25	D-78	D-25	D-78	D-25
TxD	31	2	70	2	36	2	75	2
RxD	11	3	50	3	16	3	55	3
RTS	12	4	51	4	17	4	56	4
CTS	32	5	71	5	37	5	76	5
DTR	13	20	52	20	18	20	57	20
DSR	33	6	72	6	38	6	77	6
DCD	14	8	53	8	19	8	58	8
RI	34	22	73	22	39	22	78	22
GND	15	7	54	7	20	7	59	7

Figure 11 --- ES-100D connector definitions

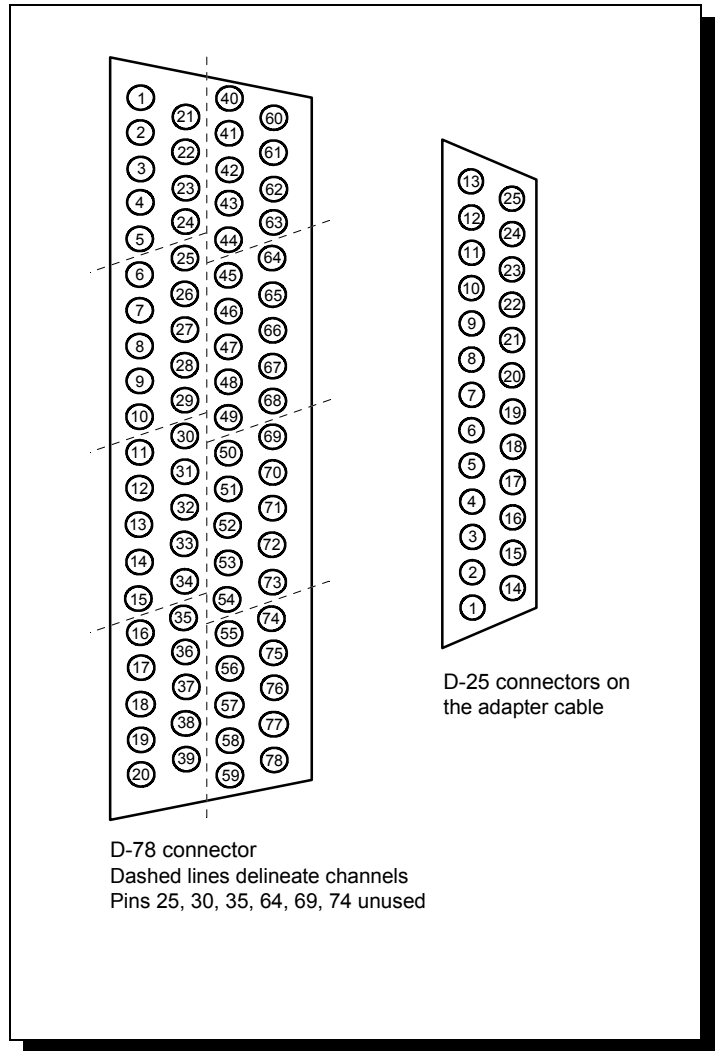


Figure 12 --- ES-100D output connectors

6. SERIAL PORT FUNCTIONAL DESCRIPTION

This section contains information intended for advanced users planning to do custom programming with the ES-100D. The information presented here is a technical description of the interface to the 16450 or 16550 UART.

The 16450 UART is an improved functional equivalent of the 8250 UART, performing serial-to-parallel conversion on received data and parallel-to-serial conversion on output data. Designed to be compatible with the 16450, the 16550 UART enters character (non-FIFO) mode on reset. In this mode, the 16550 appears as a 16450 to application software.

An additional mode, FIFO mode, can be invoked through software to reduce CPU overhead. FIFO mode increases performance by providing two 16-byte hardware buffers, one for transmit and one for receive. This can reduce the frequency of interrupts issued to the CPU by the UART.

Other features of the 16450 and 16550 include:

- ◆ Programmable baud rate, character length, parity, and number of stop bits.
- ◆ Automatic control of start, stop, and parity bits.
- ◆ Independent and prioritized interrupts.
- ◆ Transmit clock output / receive clock input.

The ES-100D's serial ports are controlled by 16450 or 16550 UARTs. The serial ports will generate interrupts in accordance with the bits set in the interrupt enable register of the UARTs. In order to maintain compatibility with earlier personal computer systems, the user-defined output OUT2 is used as an external interrupt enable and must be set active for interrupts to be generated. OUT2 is accessed through the UART's MODEM control register.

The following pages provide a brief summary of the internal registers available within the 16450 and 16550 UARTs. Registers and functions specific to the 16550 will be indicated with ***boldface italic*** notations.

Accessing the Serial Port registers

Figure 13 lists the address map for the 16450 and 16550 UARTs. Each register can be accessed by reading from or writing to the proper I/O address. This I/O address is determined by adding an offset to the base address set for the particular serial port. The base address is set using DIP switches on the ES-100D (see section III).

Notice that two locations access different registers depending on whether an I/O read or I/O write is attempted. Address [base+0] accesses the receive buffer on an I/O read, or the transmit buffer on an I/O write. Address [base+2] accesses the Interrupt Identification register on an I/O read or the FIFO control register (**16550 only**) on an I/O write. Also, notice that if address [base+0] or [base+1] is used with the DLAB bit from the Line Control Register set to '1', the baud rate divisor latches are accessed.

NOTE: All figures displaying bitmapped registers are formatted such that bit 7 is the high-order bit.

UART Addressing		Register Description
DLAB	I/O Address	
0	Base + 0	Receive buffer (read) Transmit holding register (write)
0	Base + 1	Interrupt enable
X	Base + 2	Interrupt identification (read) (16450 and 16550) FIFO control (write) (16550 only)
X	Base + 3	Line control
X	Base + 4	MODEM control
X	Base + 5	Line status
X	Base + 6	MODEM status
X	Base + 7	Scratchpad
1	Base + 0	Baud rate divisor latch (LSB) *
1	Base + 1	Baud rate divisor latch (MSB) *
(X = don't care)		
* DLAB in Line Control Register must be set to access baud rate divisor latch.		

Figure 13 --- Serial port register address map for 16450/16550 UART

INTERRUPT ENABLE REGISTER

This register is located at I/O address [base+1]. It enables the five types of UART interrupts. Interrupts can be totally disabled by setting all of the enable bits in this register to a logic 0. Setting any bit to a logic 1 enables that particular interrupt.

BIT	DESCRIPTION
7	0 --- reserved
6	0 --- reserved
5	0 --- reserved
4	0 --- reserved
3	EDSSI --- MODEM Status Interrupt: When set (logic 1), enables interrupt on clear to send, data set ready, ring indicator, and data carrier detect.
2	ELSI --- Receiver Line Status Interrupt: When set (logic 1), enables interrupt on overrun, parity, framing errors, and break indication.
1	ETBEI --- Transmitter Holding Register Empty Interrupt: When set (logic 1), enables interrupt on transmitter holding register empty.
0	ETBEI --- Received Data Available Interrupt: When set (logic 1), enables interrupt on received data available. For 16550 FIFO mode , interrupts are also enabled for receive FIFO trigger level reached and for receive timeout.

Figure 14 --- Interrupt Enable Register bit definitions

INTERRUPT IDENTIFICATION REGISTER

This read-only register is located at I/O address [base+2]. When this register is read, the UART freezes all interrupts and indicates the highest priority interrupt. During this time, new interrupts are detected by the UART, but are not reported in this register until the access completes.

For the **16550 only**, this register can be used to indicate whether the FIFO mode is engaged by examining bits 6 and 7.

BIT	DESCRIPTION	
7	FFE --- FIFO enable: <i>(16550 only)</i> When logic 1, indicates FIFO mode enabled. Always logic 0 for the 16450.	
6	FFE --- FIFO enable: <i>(16550 only)</i> When logic 1, indicates FIFO mode enabled. Always logic 0 for the 16450.	
5	0 --- reserved	
4	0 --- reserved	
3	IID2 --- Interrupt Identification: Indicates highest priority interrupt pending if any. See Figure 16. NOTE: IID2 is always a logic 0 on the 16450 or in non-FIFO mode on the 16550.	
2		IID1 ---
1		IID0 ---
0	IP --- Interrupt pending: When logic 0, indicates that an interrupt is pending and the contents of the interrupt identification register may be used to determine the interrupt source. See Figure 16.	

Figure 15 --- Interrupt Identification Register bit definitions

Figure 16 gives the detail of the IIDx bits in the Interrupt Identification Register. These bits are examined to determine the source of an interrupt.

IIDx bits			IP	Priority	Interrupt Type
2	1	0			
don't care			1	N/A	None
0	1	1	0	1st	Receiver Line Status: Indicates overrun, parity, framing errors or break interrupts. The interrupt is cleared by reading the line status register.
0	1	0	0	2nd	Received Data Ready (16450 or 16550): Indicates receive data available. The interrupt is cleared by reading the receive buffer. In <i>16550 FIFO mode</i> , indicates the receiver FIFO trigger level has been reached. The interrupt is reset when the FIFO drops below the trigger level.
1	1	0	0	2nd	Character Timeout (16550 FIFO mode only): Indicates no characters have been removed from or input to the receiver FIFO for the last four character times and there is data present in the receiver FIFO. The interrupt is cleared by reading the receiver FIFO.
0	0	1	0	3rd	Transmitter Holding Register Empty: Indicates the transmitter holding register is empty. The interrupt is cleared by reading the interrupt identification register or writing to the transmitter holding register. <i>(Indicates transmit FIFO empty for 16550.)</i>
0	0	0	0	4th	MODEM Status: Indicates clear to send, data set ready, ring indicator, or data carrier detect have changed state. The interrupt is cleared by reading the MODEM status register.

Figure 16 --- Interrupt Identification Register bit decoding

FIFO CONTROL REGISTER (*16550 only*)

This register, which applies only to the 16550 UART, is a write-only register located at I/O address [base+2]. It is used to enable the FIFO mode, clear the FIFOs, set the threshold level for the receive FIFO to generate interrupts, and to set the mode under which the device uses DMA. Note that DMA mode is NOT supported by the ES-100D.

BIT	DESCRIPTION																		
7	RXT1 ---	Receiver FIFO Trigger Level (<i>16550 only</i>): Determines the trigger level for the receiver FIFO interrupt <table border="1"> <thead> <tr> <th><u>RXT1</u></th> <th><u>RXT0</u></th> <th><u>Receiver FIFO trigger level (bytes)</u></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>0</td> <td>1</td> <td>4</td> </tr> <tr> <td>1</td> <td>0</td> <td>8</td> </tr> <tr> <td>1</td> <td>1</td> <td>14</td> </tr> </tbody> </table>			<u>RXT1</u>	<u>RXT0</u>	<u>Receiver FIFO trigger level (bytes)</u>	0	0	1	0	1	4	1	0	8	1	1	14
<u>RXT1</u>	<u>RXT0</u>				<u>Receiver FIFO trigger level (bytes)</u>														
0	0				1														
0	1				4														
1	0				8														
1	1	14																	
6	RXT0 ---																		
5	0 --- reserved																		
4	0 --- reserved																		
3	DMAM --- DMA mode select (<i>16550 only</i>): When set (logic 1), RxRDY and TxRDY change from mode 0 to mode 1 for DMA transfers. (DMA mode is not supported on the ES-100D.)																		
2	XRST --- Transmit FIFO reset (<i>16550 only</i>): When set (logic 1), all bytes in the transmitter FIFO are cleared and the counter is reset. The shift register is not cleared. XRST is self-clearing.																		
1	RRST --- Receive FIFO reset (<i>16550 only</i>): When set (logic 1), all bytes in the receiver FIFO are cleared and the counter is reset. The shift register is not cleared. RRST is self-clearing.																		
0	FE --- FIFO enable (<i>16550 only</i>): When set (logic 1), enables transmitter and receiver FIFOs. When cleared (logic 0), all bytes in both FIFOs are cleared. This bit must be set when other bits in the FIFO control register are written to or the bits will be ignored.																		

Figure 17 --- 16550 FIFO Control Register bit definitions

LINE CONTROL REGISTER

This register is located at I/O address [base+3]. It is used for specifying the format of the asynchronous serial data to be processed by the UART, and to set the Divisor Latch Access Bit (DLAB) allowing access to the baud rate divisor latches.

BIT	DESCRIPTION					
7	DLAB --- Divisor latch access bit: DLAB must be set to logic 1 to access the baud rate divisor latches. DLAB must be set to logic 0 to access the receiver buffer, transmitting holding register and interrupt enable register.					
6	BKCN --- Break control: When set (logic 1), the serial output (SOUT) is forced to the spacing state (logic 0).					
5	STKP --- Stick parity: Forces parity to logic 1 or logic 0 if parity is enabled.					
4						
3						
2						
		<u>STKP</u>	<u>EPS</u>	<u>PEN</u>	<u>PARITY</u>	
		x	x	0	None	
		0	0	1	Odd	
		0	1	1	Even	
		1	0	1	Logic 1	
		1	1	1	Logic 0	
		<u>STB</u>	<u>WLS1</u>	<u>WLS0</u>	<u>WORD LEN</u>	<u>STOP BITS</u>
		0	0	0	5 bits	1
		0	0	1	6 bits	1
		0	1	0	7 bits	1
		0	1	1	8 bits	1
		1	0	0	5 bits	1.5
		1	0	1	6 bits	2
		1	1	0	7 bits	2
		1	1	1	8 bits	2
1	WLS1 ---	Word length select: Determines the number of bits per transmitted word.				
0	WLS0 ---					

Figure 18 --- Line Control Register bit definitions

MODEM CONTROL REGISTER

This register is located at I/O address [base+4], and is used to control the interface with the modem or device used in place of a modem. This register allows the states of the "modem control signals" to be changed. These are DTR (Data Terminal Ready) and RTS (Request To Send). It is also possible to place the UART in a loopback mode for testing. Finally, the user-defined outputs OUT1 and OUT2 are controlled from this register.

The ES-100D handles the OUT1 and OUT2 signals in the manner appropriate for maintaining compatibility with standard PC serial ports:

- ◆ The OUT1 output is not connected.
- ◆ The OUT2 output is used to globally enable interrupts to the computer. It should be active at all times if interrupts are being used.

BIT	DESCRIPTION
7	0 --- reserved
6	0 --- reserved
5	0 --- reserved
4	LOOP --- Loopback enable: When set (logic 1), the transmitter shift register is connected directly to the receiver shift register. The MODEM control inputs are internally connected to the MODEM control outputs and the outputs are forced to the inactive state. All characters transmitted are immediately received to verify transmit and receive data paths. Transmitter and receiver interrupts still operate normally. MODEM control interrupts are available but are now controlled through the MODEM control register.
3	OUT2 --- Output 2: When this bit is set (logic 1), the OUT2 output is forced active to a logic 0. When cleared (logic 0), the OUT2 output is forced inactive to a logic 1. Used for interrupt enable on the ES-100D.
2	OUT1 --- Output 1: When this bit is set (logic 1), the OUT1 output is forced active to a logic 0. When cleared (logic 0), the OUT1 output is forced inactive to a logic 1. Not connected on the ES-100D.
1	RTS --- Request to send: When this bit is set (logic 1), the RTS output is forced active to a logic 0. When cleared (logic 0), the RTS output is forced inactive to a logic 1.
0	DTR --- Data terminal ready: When this bit is set (logic 1), the DTR output is forced active to a logic 0. When cleared (logic 0), the DTR output is forced inactive to a logic 1.

Figure 19 --- Modem Control Register bit definitions

LINE STATUS REGISTER

This register is located at I/O address [base+5]. It is used to provide various types of status information concerning the data transfer. As Figure 20 shows, the Line Status Register indicates several types of errors, an empty transmit buffer, a ready receive buffer, or a break on the receive line.

BIT	DESCRIPTION
7	FFRX --- Error in RCVR FIFO (<i>16550 FIFO mode only</i>): Always logic 0 in 16450 or 16550 non-FIFO mode. Indicates one or more parity errors, framing errors, or break indications in the receiver FIFO. FFRX is reset by reading the line status register.
6	TEMT --- Transmitter empty: Indicates the transmitter holding register or FIFO (<i>16550</i>) <u>AND</u> the transmitter shift register are empty and are ready to receive new data. TEMT is reset by writing a character to the transmitter holding register.
5	THRE --- Transmitter holding register empty: Indicates the transmitter holding register or FIFO (<i>16550</i>) is empty and it is ready to accept new data. THRE is reset by writing data to the transmitter holding register.
4	BI --- Break interrupt: Indicates the receive data input has been in the spacing state (logic 0) for longer than one full word transmission time. In <i>16550 FIFO mode</i> , only one zero character is loaded into the FIFO and transfers are disabled until the serial data input goes to the mark state (logic 1) and a valid start bit is received.
3	FE --- Framing error: Indicates the received character had an invalid stop bit. The stop bit following the last data or parity bit was a 0 bit (spacing level).
2	PE --- Parity error: Indicates that the received data does not have the correct parity.
1	OE --- Overrun error: Indicates the receive buffer was not read before the next character was received and the character is destroyed. In <i>16550 FIFO mode</i> , indicates the receive FIFO is full and another character has been shifted in. The character in the shift register is destroyed but is not transferred to the FIFO.
0	DR --- Data ready: Indicates data is present in the receive buffer or FIFO (<i>16550</i>). DR is reset by reading the receive buffer register or receiver FIFO.

Figure 20 --- Line Status Register bit definitions

Bits BI, FE, PE, and OE are the sources of receiver line status interrupts. The bits are reset by reading the line status register. *In 16550 FIFO mode*, these bits are associated with a specific character in the FIFO and the exception is revealed only when that character reaches the top of the FIFO.

MODEM STATUS REGISTER

This register is located at I/O address [base+6]. It reports on the status of signals coming from the modem or equipment used in place of a modem. It allows the current states of "modem control signals" to be sensed. These signals include the DCD (Data Carrier Detect), RI (Ring Indicator), DSR (Data Set Ready), and CTS (Clear To Send).

The Modem Status Register also provides change information for each of these signals. When a modem control signal changes state, the appropriate change bit is set to logic 1. The change bits (3, 2, 1, and 0) are reset to logic 0 whenever the Modem Status Register is read.

A modem status interrupt is generated whenever any of bits 3, 2, 1 or 0 is set by the UART to a logic 1.

BIT	DESCRIPTION
7	DCD --- Data carrier detect: Complement of the DCD input.
6	RI --- Ring indicator: Complement of the RI input.
5	DSR --- Data set ready: Complement of the DSR input.
4	CTS --- Clear to send: Complement of the CTS input.
3	DDCD --- Delta data carrier detect: Indicates the Data Carrier Detect input has changed state. Cleared when this register is read.
2	TERI --- Trailing edge ring indicator: Indicates the Ring Indicator input has changed from a low to a high state. Cleared when this register is read.
1	DDSR --- Delta data set ready: Indicates the Data Set Ready input has changed state. Cleared when this register is read.
0	DCTS --- Delta clear to send: Indicates the Clear to Send input has changed state. Cleared when this register is read.

Figure 21 --- Modem Status Register bit definitions

SCRATCHPAD REGISTER

This register is located at I/O address [base+7]. It is not used by the 16450 or 16550. It may be used by the programmer for temporary data storage. The Scratchpad Register is eight bits wide and can be read or written.

FIFO INTERRUPT MODE OPERATION (16550 UART only)

When the receiver FIFO and receiver interrupts are enabled:

1. The receive data interrupt is issued when the receive FIFO reaches the trigger level. The interrupt is cleared as soon as the receive FIFO falls below the trigger level.
2. The Interrupt Identification Register's receive data available indicator is set and cleared along with the receive data interrupt when the receive FIFO falls below the trigger level.
3. The data ready indicator is set as soon as a character is transferred into the receiver FIFO and is cleared when the FIFO is empty.
4. A FIFO timeout interrupt will occur if the receive FIFO contains at least one character, at least four character-times have passed since receipt of the last character, and the last read of the FIFO by the CPU was done more than four character-times ago.
5. Timeout interrupts are cleared when a read of the receive FIFO is done.
6. The receive FIFO timeout timer is reset whenever a new character is received into the FIFO or a read of the FIFO is done.

When the transmit FIFO and transmit interrupts are enabled:

1. The transmitter holding register empty interrupt occurs when the transmit FIFO is empty, and is cleared when a character is written to the FIFO or when the Interrupt Identification Register is read.
2. Transmitter FIFO empty indications are delayed by one character-time less the last stop bit time when the transmitter holding register is empty and there have not been at least two bytes together in the transmit FIFO since the last time the transmitter holding register was empty.
3. The first transmitter interrupt after enabling the FIFO mode will be immediate if that interrupt is enabled.

FIFO polled mode operation (*16550 UART only*)

The receiver and transmitter are operated independently, which would allow either or both to be used in a polled mode rather than using interrupts to determine when the UART needs to be serviced.

To use the UART in a polled mode, the software is responsible for continuously checking for the conditions that normally cause interrupts to occur. This would be done using the Line Status Register.

1. The Data Ready bit will be set to logic 1 whenever there is at least one byte in the receive FIFO.
2. Errors can be detected using the various error bits.
3. The Transmitter Holding Register Empty bit can be used to determine when the transmit FIFO is empty.
4. The Transmitter Empty bit indicates that the transmitter shift register is empty as well as the transmit FIFO being empty.
5. Trigger levels and FIFO timeouts do not apply. Both FIFOs are fully capable of holding multiple characters at any time.

BAUD RATE SELECTION

The 16450 or 16550 UART determines the baud rate of the serial output using a combination of the clock input frequency and the value written to the divisor latches. Standard personal computer serial interfaces use an input clock of 1.8432 MHz. A table of baud rates available is given in Figure 22.

DESIRED BAUD RATE	DIVISOR LATCH VALUE	ERROR BETWEEN DESIRED AND ACTUAL VALUES (%)
50	2304	-
75	1536	-
110	1047	0.026
150	768	-
300	384	-
600	192	-
1200	96	-
1800	64	-
2000	58	0.69
2400	48	-
3600	32	-
4800	24	-
7200	16	-
9600	12	-
19200	6	-
38400	3	-
56000	2	2.86

Figure 22 --- Divisor Latch settings for common baud rates using 1.8432 MHz input clock

7. SPECIFICATIONS

Bus interface:	Industry Standard Architecture (ISA) 16-bit bus IBM PC-AT™ compatible
Dimensions:	13.4" x 4.2"
Serial ports	
Number of ports:	eight
Controllers:	16450 (<i>16550 optional</i>)
Interface:	Female high-density D-78 connector or eight male D-25 connectors (using optional adapter cables)
Transmit drivers:	MC1488 or compatible
Receive buffers:	MC1489 or compatible
I/O Address range:	0000H - FFFFH
Interrupt levels:	IRQ2 to IRQ7 IRQ10 to IRQ12, IRQ14, IRQ15
Power requirements	
+5 volts:	450 mA
+12 volts:	90 mA
-12 volts:	90 mA

8. TROUBLESHOOTING

Listed here are some common problems and frequent causes of those problems. Suggestions for corrective action are given. If the information here does not provide a solution, contact Quatech Customer Service for technical support.

Any unauthorized repairs or modifications will void the ES-100D's warranty.

Computer will not boot up.

1. Is the ES-100D properly inserted? Remove the card and try again. Perhaps try a different expansion slot.
2. Is the base address correctly set? Check for address conflicts with other devices in the system. Remember that the ES-100D requires 64 bytes of I/O space. Set a different address if necessary.
3. The ES-100D may be defective. Contact Quatech Customer Service for instructions.

Cannot communicate with other equipment.

1. Are the cable connections correct? Are the cables securely attached?
2. Are the base address and interrupt level (IRQ) correctly set? Check for address and IRQ conflicts with other devices in the system. Change the settings if necessary.
3. If you are trying to communicate with a DTE, a null-modem cable may be required.
4. If possible, use a loopback connector to test the port. This connector needs to connect the following sets of signals on a D-25 connector:

TxD and RxD (pins 2 and 3)

RTS and CTS (pins 4 and 5)

DCD, DTR, DSR, and RI (pins 8, 20, 6 and 22)

Version 1.01
March 2004
Part No. 940-0099-101