



USB – RS232 Cable Adapter

USER GUIDE




USB - Serial RS232 Adaptation Cable

- a) Installation Instructions for the USB-RS232 adaptation cable for systems: Windows 98, Me, 2000, XP PRO.
- b) Problems which may be encountered and the solutions.

a) Installation Instructions

Installation of the Drivers (Windows 98) :

- Switch the PC on and check that the USB port operates correctly.
- Connect the USB-Serial cable to the USB port; Windows opens the 'Add new hardware Wizard' window, click on 'Next'.
- Insert the CD-ROM containing the drivers in the unit, select 'Search for the best driver for your peripheral and click on 'Next'.
- Select 'Enter the location' and type in the path D:\ Drivers (D : represents your CD-ROM unit), click on 'Next'.
- Windows detects a driver for the USB-Serial cable (Prolific USB to serial Cable), click on 'Next'.
- Select 'End'.
- To check the installation, open the 'System Properties', 'Device Manager' window and check that both the USB to Serial Port and Prolific USB-to-Serial Cable are present:

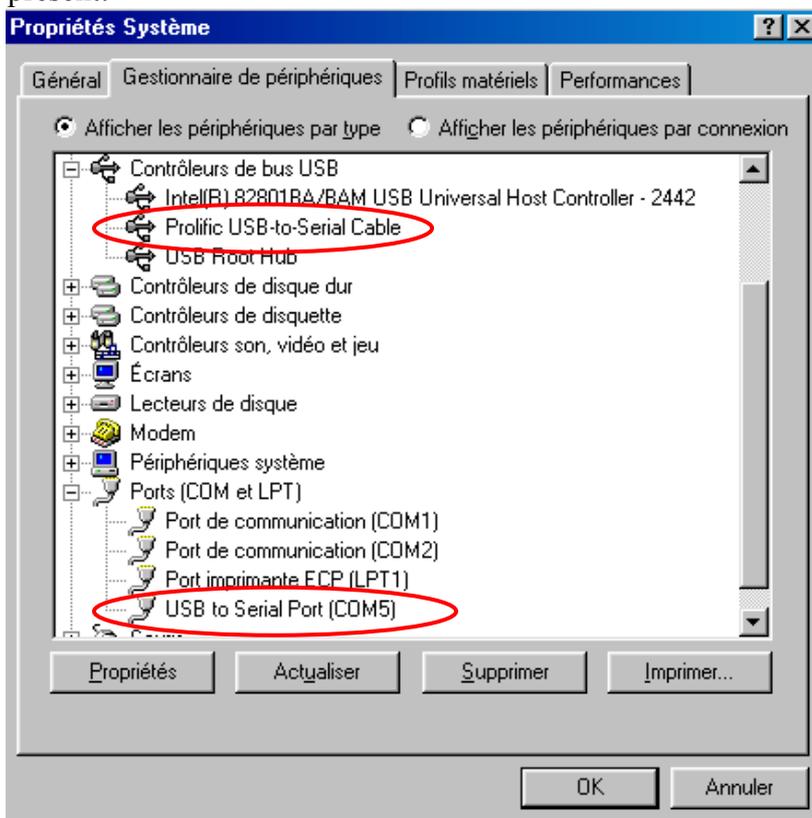

Installation of the Drivers (Windows ME) :

- Switch the PC on and check that the USB port operates correctly.
- Connect the USB-Serial cable to the USB port; Windows opens the 'Add new hardware Wizard' window, click on 'Next'.
- Insert the CD-ROM containing the drivers in the unit, select 'Search for the best driver for your peripheral' and click on 'Next'.
- In 'Select a new driver', select 'Prolific USB-to-Serial cable' (D:\ Drivers D : represents your CD-ROM unit), click on 'OK' then on 'End'.
- To check the installation, open the 'System Properties', 'Device Manager' window and check that both the USB to Serial Port and Prolific USB-to-Serial Cable are present.

Installation of the Drivers (Windows 2000) :

- Switch the PC on and check that the USB port operates correctly.
- Connect the USB-Serial cable to the USB port; Windows opens the 'Insert a CD-ROM' window, click on 'OK'.
- Insert the CD-ROM containing the drivers in the unit, click on 'Scroll' and select 'D:\Drivers\ Ser2pl.sys' (D : represents your CD-ROM unit), click on 'Open' then on 'OK'.
- To check the installation, open the 'System Properties', 'Device Manager' window and check that the USB to Serial Port is present.

Installation of the Drivers (Windows XP PRO) :

- Switch the PC on and check that the USB port operates correctly.
- Connect the USB-Serial cable to the USB port; Windows opens the 'Hardware detection Wizard', insert the CD-ROM containing the drivers in the unit, select 'Install the program automatically', click on 'Next' then on 'Continue'.
- To check the installation, open the 'System Properties', 'Device Manager' window and check that the USB to Serial Port is present.

To Uninstall the Drivers

- Disconnect the Cable from your PC.
- Insert the CD-ROM in the unit.
- Start the program DRemover.exe (D:\ Drivers\DRemover.exe)

b) Problems Related to Transferring Data between the PC and the ZelioLogic SR2/SR3:

Problems	Solutions
<p><u>Monitoring :</u></p> <p>With Windows 98 and Me :</p> <p>When Monitoring, if you open a window or another program than Zelio Soft 2, the controller may switch off and all the inputs outputs on the workshop side switch to ON. This problem may also occur if you scroll down to the bottom of the programming sheet.</p>	<p>From the workshop :</p> <p>Return to Edit mode then back into Monitoring mode and press the controller's On button.</p> <p>On the controller :</p> <p>Go into the fault menu and acknowledge fault 58.</p>
<p><u>Updating the Controller :</u></p> <p>With Windows XP PRO :</p> <p>Updating the controller may cause communication to be lost.</p>	<p>Close all the applications open (in particular the programming window) and run the software update again, since communication was lost the controller display is blank since the start-up program is no longer there, that is why when you perform this operation the software will ask you to identify yourself the controller model (the type and the 8-figure code are marked on the side of the housing). Repeat this operation several times if it does not work first time around.</p> <p>If the problem persists, re-load the controller program using an RS 232 output (disconnect the USB-RS232 cable).</p>
<p><u>Connection Test:</u></p> <p>The connection may not operate after installing the USB RS232 cable.</p>	<p>Go into 'Device Manager', 'Ports (com and Lpt)', 'USB TO Serial Port', 'Properties', 'Drivers' and run a driver update (repeat the installation operations).</p>