



CHAPTER 7

Provisioning: Configuring QoS for IP Telephony

In an Architecture for Voice, Video, and Integrated Data (AVVID) network, you must configure QoS for IP telephony to ensure voice quality.

The following topics provide information about the need for configuring QoS in an IP telephony environment and the tools that enable you to do this.

- [Understanding QoS for IP Telephony, page 7-1](#)
- [Using QPM to Configure QoS for IP Telephony, page 7-3](#)
- [Configuring QoS Using the IP Telephony Wizard, page 7-4](#)
- [Modifying Voice Policies, page 7-17](#)
- [Viewing the Voice Ready Report, page 7-18](#)
- [Advanced IP Telephony Network Configuration, page 7-19](#)

Understanding QoS for IP Telephony

Real-time based applications in a network, such as voice applications, have different characteristics and requirements than those of data applications. Voice applications tolerate minimal variation in the amount of delay affecting delivery of their voice packets.

Voice traffic is also intolerant of packet loss and jitter, both of which degrade the quality of the voice transmission delivered to the recipient end user. To effectively transport voice traffic over IP, mechanisms are required that ensure reliable delivery of packets with low latency.

In an enterprise environment, network congestion can occur at any time in any portion of the network campus, branch office, or WAN. For successful deployment of IP telephony, you must ensure end-to-end network quality for voice traffic.

To ensure voice quality, you must use QoS in all areas of the enterprise network. To make a proper QoS configuration, you must first identify the points where QoS is a concern, then choose the appropriate QoS tools to use, and deploy to the devices in the network.

QPM provides tools that can determine and configure the optimum QoS for a voice network. These include:

- Provisioning tools—Lets you define the correct policies for interfaces on the voice paths. QPM provides voice policies that contain the QoS configurations and traffic rules required at each relevant point in the network that needs QoS for IP telephony.
- Deployment tools—Lets you deploy these policies on the network and monitor the deployment process.
- Reporting tools—Graphs and charts help you identify and troubleshoot QoS related issues.


Related Topics

- [Network Model for Configuring QoS for IP Telephony, page 7-2](#)
- [Using QPM to Configure QoS for IP Telephony, page 7-3](#)
- [Viewing the Voice Ready Report, page 7-18](#)
- [Chapter 9, “Provisioning: Deploying QoS Policies”](#)

Network Model for Configuring QoS for IP Telephony

Figure 7-1 shows a typical network model for configuring QoS for IP telephony in an enterprise environment. QPM supports the QoS methods required to configure IP telephony QoS for high-speed campus domains, branch offices, and WAN implementations.

Figure 7-1 IP Telephony Network Model

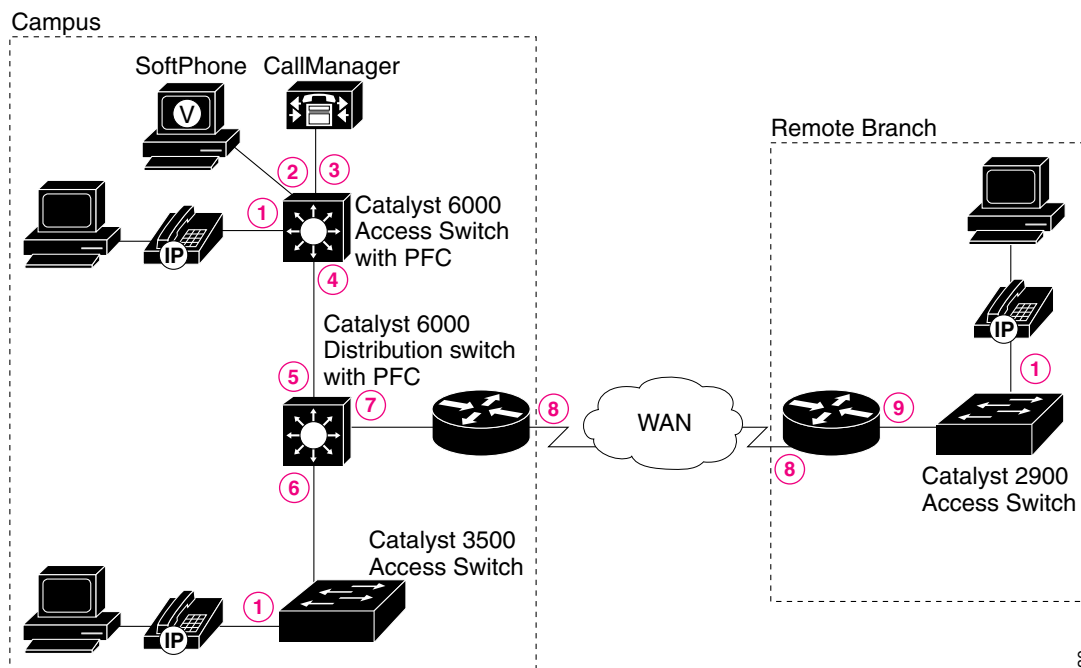

63130

Table 7-1 explains the network points that require QoS configuration for IP telephony.

Table 7-1 Network Points Requiring QoS Configuration

Network Point in Figure 7-1	Description
1	Access switch—IP phone ports
2	Layer 3 QoS-aware access switch (with PFC)—SoftPhone port
3	Layer 3 QoS-aware access switch (with PFC)—CallManager port
4	Layer 3 QoS-aware access switch (with PFC) uplink port to distribution switch (with PFC)
5	Distribution switch (downlink) port to Layer 3 QoS-aware access switch (with PFC)
6	Distribution switch (downlink) port to Layer 2 QoS-aware access switch
7	Layer 3 distribution switch port to WAN router
8	WAN interface
9	Branch office router interface to Layer 2 QoS-aware switch

Related Topics

- [Understanding QoS for IP Telephony, page 7-1](#)
- [Using QPM to Configure QoS for IP Telephony, page 7-3](#)

Using QPM to Configure QoS for IP Telephony

The QPM IP Telephony application provides a solution for configuring QoS for voice traffic in an AVVID network.

The solution is an IP Telephony wizard that creates voice policies at each network point that requires IP telephony QoS configuration.

Voice policies are policies that contain the QoS properties and traffic rules for each relevant point in the IP telephony network. A voice policy contains a voice role attribute, which specifies the role of an interface, according to its type, function and location on the network, such as, IP phone, Switch to WAN Router. QPM allows you to modify properties and traffic rules of certain voice policies created by the wizard, to suit specific network configurations, as required.

The IP Telephony wizard creates voice policies from voice policy templates which are provided by QPM in the Policy Templates library. These templates follow the IP telephony QoS guidelines, described in the IP Telephony QoS Design Guide:

www.cisco.com/warp/customer/771/srnd/qos_srnd.pdf

If the required templates do not exist during IP telephony QoS configuration, they can also be generated by the wizard and stored in the library.

Some templates that are provided by QPM, such as ATM links, might not be used by the IP Telephony wizard.

You can also create voice policies without the wizard, using the voice policy templates supplied by QPM. You assign the voice policies in the same way as you would data policies.

After you have completed the IP Telephony wizard, you can modify properties and policies of the voice policies created by the voice wizard, to suit a specific network configuration.

Related Topics

- [Configuring QoS Using the IP Telephony Wizard, page 7-4](#)
- [Modifying Voice Policies, page 7-17](#)
- [Working with Policy Templates, page 6-4](#)

Configuring QoS Using the IP Telephony Wizard

The IP Telephony wizard allows you to configure QoS for voice traffic on the network. The wizard handles VoIP configuration in common IP telephony network topologies. It guides you through the steps required to define your IP telephony network topology.

At each step, the wizard automatically creates the voice policies, that include the QoS properties and traffic rules required at each network point (interface) where QoS is a concern. The wizard presents only the interfaces on which the relevant QoS can be configured.

You need to select the network elements that require QoS configuration at each network point. The wizard then automatically assigns the interfaces to the appropriate voice policies.

QPM allows you to import files which contain device role information about devices (see [Removing Devices, page 4-15](#)). Device role information is used by the IP Telephony wizard during the selection of interfaces to voice roles.

For example, for the wizard to select an Ethernet 10/100 port on the switch to an IP phone voice role, the switch must be an access type switch (i.e., have an “access” device role). If the switch has a “distribution” device role, QPM will not select it. If the device role information imported from a file is not up-to-date, you can manually override it in the Device Properties page (see [Viewing and Editing Device Properties, page 4-10](#)).

The wizard automatically creates voice policies in the current policy group. The policy group may also contain previously created policies containing data traffic rules.

If required, you can change the current policy group when you start working with the wizard.

- If the required voice policies already exist in the policy group, the wizard uses them and assigns the required interfaces to them.
- If a required voice policy does not exist in the policy group, the wizard creates a new one from the relevant template.

Related Topics

- [Using QPM to Configure QoS for IP Telephony, page 7-3](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Adding Devices to the Device Inventory, page 4-3](#)
- [Working with Policy Templates, page 6-4](#)

Using the IP Telephony Wizard

This topic describes the following main features of the IP Telephony wizard pages, and how to use those features:

- [Description, page 7-5](#)
- [Advanced, page 7-5](#)
- [Selection Table, page 7-5](#)
- [Assignment Summary, page 7-5](#)
- [Saving Your Assignments, page 7-6](#)

Description

Each configuration step page of the wizard includes a description of the QoS policies that will be configured on the interfaces for the selected voice role. You can view or hide this description by clicking the arrow button next to **Description**. By default, the description is hidden.

Advanced

The Advanced section of a configuration step page provides two buttons:

- **Remove**—This button opens a page in which you can remove network elements that were assigned for a voice role.

This option allows you to change your selection of network elements after they have been assigned to voice policies. The wizard removes the assignment of selected elements from the voice policy.

- **Recommend**—If QPM recommended rules are available for a specific voice role, clicking this button activates the wizard to accept the recommended selection of network elements for the current voice role.

The network elements are selected but not assigned to voice policies. A list of the rules for the current voice role is displayed.

You can view or hide the Advanced section by clicking the arrow button next to **Advanced**. By default, this section is hidden.

Selection Table

In each configuration step, you select the network elements that require QoS configuration. The available network elements are presented in a table. You can hide this table by clicking the arrow button next to **Selection Table**. By default, the selection table is open. For information about using a selection table, see [Using QPM Tables, page 3-16](#).

By selecting the Display Configuration Info. check box in the first configuration step, you can choose to view assignment summary information after each configuration step. The check box will remain selected in all the other steps. Similarly, you can uncheck this check box in the first configuration step if you don't want to view the summary information. You can override the default selection at each step, if required.

Assignment Summary

As you work through the wizard, you can choose to view an assignment summary page that displays the voice policies that were created for the current voice role, and summary information about the assignment of network elements in the current configuration step.

The following assignments summary information may be displayed:

- The total number of network elements you selected in this configuration step.
- The number of network elements that were selected, but found to be previously assigned to voice policies with this voice role.
- The number of network elements that were newly assigned to a voice policy with this voice role. (This may include elements that were previously assigned to voice policy groups with different voice roles.)
- The number of network elements that were selected in this configuration step, but were not assigned to the voice role because they have no policies for this voice role. These elements appear in the selection list because they have the same interface type as other elements that can be selected.

For example, although GigabitEthernet interfaces have the same interface type as FastEthernet interfaces, they cannot be connected to an IP phone. During IP phone configuration, these interfaces will not be assigned to voice policy groups for the IP Phones voice role.

- The number of related assignment elements. These are network elements that were not selected (or were not in the selection table), but were assigned to voice policy groups to complete the configuration correctly. For example, when you configure traffic shaping on a DLCI, you must also enable it on a main frame-relay interface.
- The number of reassigned network elements. If network elements were found to be already assigned to voice policy groups with different voice roles, the wizard overrides the previous assignment and assigns them to voice policies with the new voice role.

From this assignment summary page, you can also view detailed information about a voice policy group, and a list of the newly assigned network elements.

Saving Your Assignments

You work through each step of the wizard by clicking the Next button in each page, or you can use the Navigation TOC that is displayed on the left side of each page to move directly to the step you want to do.

Clicking **Next** to move to the next configuration step, or selecting another step forward in the Navigation TOC, saves the voice policies and the assignments that were made for that voice role, to the deployment group.

Clicking **Cancel**, **Back**, or selecting another step backward in the Navigation TOC, undoes any configuration changes you made in that step.

If the Display Configuration Info check box is selected, clicking **Next** opens the assignments summary page for that configuration step.

The voice policies will be saved in the policy group, but the assignment of interfaces to them will not be saved.

After reviewing your assignments summary, clicking **Next** in this page saves both the voice policy groups and the interface assignments, and opens the next step of the wizard.

Step-by-step procedures for configuring QoS using the IP Telephony wizard, are described in the following sections.

- [Introduction](#)
- [Selecting IP Telephony Devices](#)
- [Selecting IP Phone Connections](#)
- [Selecting SoftPhone Connections](#)
- [Selecting CallManager Connections](#)

- [Selecting IntraLAN Connections](#)
- [Selecting Voice VLAN Connections](#)
- [Selecting Switch to WAN Router Connections](#)
- [Selecting Router WAN to Switch Connections](#)
- [Selecting WAN Point to Point Connections](#)
- [Selecting WAN Frame Relay Connections](#)
- [End](#)

Before you Begin

To run the wizard, it is assumed that the following preconditions have been met:

- Voice VLANs have been configured on all the relevant ports of the devices to enable the wizard to attach QoS properties to these VLANs.
- All the relevant devices in your network were added or imported to QPM's device inventory.

Related Topics

- [Configuring QoS Using the IP Telephony Wizard, page 7-4](#)
- [IP Telephony Wizard: Assignment Summary Page, page B-129](#)
- [Viewing Policy Information, page 8-14](#)

Introduction

The first page is an introduction to the wizard. It includes an overview of why QoS configuration is necessary for VoIP networks, and how the wizard will guide you to configure QoS for IP telephony.

Before you run the wizard, ensure that all the required devices in your IP telephony network have been added to the device inventory. If not, you must exit the wizard and add or import them. After adding your devices, you can check that your devices support voice QoS, by running the Voice Ready report. The Voice Ready report shows all the devices in the current device group, and whether or not they support voice QoS.

This page also displays the name of the current deployment group that will be used by the wizard for defining the IP telephony policies. You can change the current deployment group, if required.

To open the Introduction page of the wizard:

-
- Step 1** Choose **Provisioning > Policy View**.
The Policy View page opens.
- Step 2** Click **Voice Policy**.
The IP Telephony Wizard - Introduction page appears.

If you are running the wizard for the first time, click the **Before you run the wizard for the first time** link. A window opens, prompting you to check the following:

- If you opened the wizard before adding or importing your devices into QPM's device inventory, click **Cancel** to exit the wizard, and add or import your devices before running the wizard.
- Check if your devices support voice QoS by viewing the Voice Ready report. You can open this report in one of the following ways:
 - Click the Voice Ready Report link in step 2 of the wizard.
 - Choose **Reports > IP Telephony**.

To change the displayed deployment group, select the required one from the list box.

Step 3 Click **Next** to move to the first configuration step of the wizard.

Related Topics

- [Selecting IP Telephony Devices, page 7-8](#)
- [Adding Devices to the Device Inventory, page 4-3](#)
- [Viewing the Voice Ready Report, page 7-18](#)

Selecting IP Telephony Devices

In this step of the wizard, you select the devices that you want to participate in the current IP Telephony wizard session. All the devices in the device group that support IP telephony features (according to model and OS) are displayed in a table. The wizard will configure only the network elements from the selected devices. By default, the wizard selects all the devices.

Devices that do not support IP telephony are not displayed. If required, you can open the Voice Ready report to see all the devices in the current device group and whether or not they support QoS for voice.

If you opened the IP Telephony wizard before you added or imported your devices, no devices will be displayed in the table. In this case, you must add or import devices into the device inventory.

Click **Cancel** to exit the wizard, and open the Add/Import Devices wizard (see [Adding Devices to the Device Inventory, page 4-3](#)).

Some devices, such as Catalyst 6000 and Catalyst 4000 switches, require global device configuration. If any of the selected devices require global device configuration, the wizard immediately assigns them to the appropriate voice policy groups with a Voice Device voice role. Clicking the link on this page opens an information window describing this feature.

To select IP Telephony devices:

Step 1 In the table, check the check boxes next to the devices you want to configure for voice QoS.

For more information about the columns in this table, see [IP Telephony Wizard: Select IP Telephony Devices Page, page B-128](#).

Step 2 To view the Voice Ready report, click the Voice Ready report link.

- Step 3** Select/deselect to view the Assignment Summary page:
- If you want to view summary information about the assignments made at each configuration step of the wizard, select the Display Configuration Info check box and click **Next**. The Assignment Summary page appears.
For information about the Assignment Summary page, see [IP Telephony Wizard: Assignment Summary Page, page B-129](#).
 - If you don't want to view the assignments summary at each configuration step of the wizard, uncheck the Display Configuration Info check box.
- Step 4** Click **Next**.
- The voice policy groups and your network element assignments will be saved, and the next configuration step of the wizard appears ([Selecting IP Phone Connections](#)).
-

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Adding Devices to the Device Inventory, page 4-3](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Modifying Voice Policies, page 7-17](#)
- [Viewing the Voice Ready Report, page 7-18](#)
- [Viewing Policy Information, page 8-14](#)

Selecting IP Phone Connections

This step of the wizard describes the QoS requirements for all catalyst ports to which IP phones are connected, and asks you to select the switch ports on which the wizard will configure the QoS settings for the IP phone connections (network point 1 in [Figure 7-1](#)).

To select IP phone connections:

-
- Step 1** In the selection table, select the switch ports on which to configure QoS for your IP phones by selecting the check boxes next to the appropriate Ethernet ports.
- For more information about the columns in this table, see [IP Telephony Wizard: Select IP Phone Connections Page, page B-130](#).
- Step 2** To remove any ports that were previously assigned for this voice role:
- a. Click the **Remove** button in the Advanced section of the page.
A page appears, displaying the network elements assigned for the IP Phones voice role.
For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).
 - b. Select the ports you want to unassign and click **Remove**.
The page closes.

Step 3 Click **Next**.

If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.

The voice policy groups and your IP phones ports assignments will be saved, and the next configuration step of the wizard appears ([Selecting SoftPhone Connections](#)).

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)

Selecting SoftPhone Connections

This step of the wizard describes the QoS requirements for a Catalyst 6000 (with PFC) switch that is connected to a PC running a Cisco IP SoftPhone application.

You should select the switch ports on which the wizard will configure QoS settings for the SoftPhone connections in your network (network point 2 in [Figure 7-1](#)).

To select SoftPhone connections:

Step 1 In the selection table, select the switch ports on which to configure QoS for the SoftPhone connections in the network, by selecting the check boxes next to the appropriate Ethernet ports in the list.

For more information about the columns in this table, see [IP Telephony Wizard: Select SoftPhone Connections Page, page B-133](#).

Step 2 To remove any ports that were previously assigned for this voice role:

- Click the **Remove** button in the Advanced section of the page.

A page appears, displaying the network elements assigned for the SoftPhones voice role.

For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).

- Select the ports you want to unassign and click **Remove**.

The page closes.

Step 3 Click **Next**.

If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.

The voice policy groups and your SoftPhones port assignments will be saved, and the next configuration step of the wizard appears ([Selecting CallManager Connections](#)).

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)

Selecting CallManager Connections

This step of the wizard describes the QoS requirements for Catalyst ports to which CallManagers or Voice Gateways are connected, and asks you to select the switch ports on which the wizard will configure the QoS settings for these connections in your network (network point 3 in [Figure 7-1](#)).

To select Call Manager connections:

-
- Step 1** Select the switch port on which to configure QoS for the CallManager connection in the network, by selecting the check box next to the appropriate Ethernet port in the selection table.
- For information about the columns in this table, see [IP Telephony Wizard: Select CallManager Connections Page, page B-134](#).
- Step 2** To remove any ports that were previously assigned for this voice role:
- Click the **Remove** button in the Advanced section of the page.
A page appears, displaying the network elements assigned for the CallManager voice role.
For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).
 - Select the ports you want to unassign and click **Remove**.
The page closes.
- Step 3** Click **Next**.
- If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.
- The voice policy groups and your CallManager ports assignments will be saved, and the next configuration step of the wizard appears ([Selecting IntraLAN Connections](#)).
-

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)

Selecting IntraLAN Connections

In this step, the wizard helps you define the appropriate QoS for the internal LAN ports—the uplinks and downlinks (network points 4, 5 and 6 in [Figure 7-1](#)).



Note

No QoS configuration is required on the uplink port of the Layer 2 Catalyst 3500 switch to the Layer 3 distribution switch port.

The correct QoS configuration for LAN connections is to trust DSCP from Layer 3 devices and trust CoS from Layer 2 devices. The wizard will configure the QoS automatically according to the type of neighboring switch.

If QPM recognizes that the neighboring switch has Layer 3 QoS capabilities, it will trust DSCP from the Layer 3 switch. If there is no neighboring switch (or if the switch is of unknown type), QPM will configure QoS for a Layer 2 device.

To select IntraLAN connections:

-
- Step 1** Select the switch interfaces on which to configure QoS for the LAN connections in the network, by selecting the check boxes next to the appropriate interfaces in the selection table.
- For more information about the columns in this table, see [IP Telephony Wizard: Select IntraLAN Connections Page, page B-136](#).
- Step 2** To remove any interfaces that were previously assigned for this voice role:
- a. Click the **Remove** button in the Advanced section of the page.
A page appears, displaying the network elements assigned for the IntraLAN voice role.
For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).
 - b. Select the interfaces you want to unassign and click **Remove**.
The page closes.
- Step 3** Click **Next**.
- If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.
- The voice policy groups and your LAN interfaces assignments will be saved, and the next configuration step of the wizard appears ([Selecting Voice VLAN Connections](#)).
-

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)

Selecting Voice VLAN Connections

Since the IP phone ports are configured to use an auxiliary voice VLAN on the switches, and the QoS style on the IP phone ports is set to VLAN-based, it is important to attach the appropriate policies to the voice VLAN.

In this step, the wizard configures VLAN-based QoS style for an auxiliary VLAN on the connection of the IP phones to the Catalyst 6000 access switch, and also on the Layer 2 switch to Layer 3 switch connection.

To select Voice VLAN connections:

-
- Step 1** In the selection table, select the auxiliary VLANs on which to configure QoS on both the access and distribution layer switches.
- For more information about the columns in this table, see [IP Telephony Wizard: Select Voice VLAN Connections Page, page B-138](#).
- Step 2** To remove any VLANs that were previously assigned for this voice role:
- Click the **Remove** button in the Advanced section of the page.
- A page appears, displaying the VLANs assigned for the Voice VLAN voice role.
- For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).
- Select the VLANs you want to unassign and click **Remove**.
- The page closes.
- Step 3** Click **Next**.
- If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.
- The voice policy groups and your Voice VLAN assignments will be saved, and the next configuration step of the wizard appears ([Selecting Switch to WAN Router Connections](#)).
-

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)
- [Troubleshooting the IP Telephony Network, page 14-14](#)

Selecting Switch to WAN Router Connections

In this step, the wizard sets QoS for the distribution switch interfaces to the WAN router (network point 7 in [Figure 7-1](#)).

Since the traffic coming from the WAN side is already classified, the QoS configuration for the distribution switch interface to the router will be to trust the layer 3 DSCP bits.

To select Switch to WAN Router connections:

-
- Step 1** Select the switch interface on which to configure QoS for the distribution switch connection to the WAN router, by selecting the check box next to the appropriate port in the selection table.
- For more information about the columns in this table, see [IP Telephony Wizard: Select Switch to WAN Router Connections Page, page B-140](#).
- Step 2** To remove any interfaces that were previously assigned for this voice role:
- Click the **Remove** button in the Advanced section of the page.
- A page appears, displaying the interfaces assigned for the Switch to WAN Router voice role.

For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).

- b. Select the interfaces you want to unassign and click **Remove**.

The page closes.

Step 3 Click **Next**.

If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.

The voice policy groups and your Switch-to-WAN-Router interface assignments will be saved, and the next configuration step of the wizard appears ([Selecting Router WAN to Switch Connections](#)).

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)

Selecting Router WAN to Switch Connections

In this step, the wizard sets QoS for the WAN router connection to the access (layer 2 QoS aware) switch in the branch office (network point 9 in [Figure 7-1](#)).

By default, a router trusts the interface to a distribution (layer 3 QoS aware) switch, so no special QoS is required on the router input direction.

For example, in [Figure 7-1](#), there is no need to set QoS for the router connection to the Catalyst 6000 distribution switch in the campus. In addition, no special QoS is required on the output direction, since the layer 3 switch knows to trust DSCP from the router and sets the CoS bits accordingly. However, if the switch has only layer 2 QoS capabilities, the router must classify traffic on input and set layer 2 CoS bits on output.

To select Router WAN to Switch connections:

- Step 1** Select the switch interfaces on which to configure QoS for the router interfaces to the distribution and access switches, by selecting the check boxes next to the appropriate interfaces in the list.

For more information about the columns in this table, see [IP Telephony Wizard: Select Router WAN to Switch Connections Page, page B-141](#).

- Step 2** To remove any interfaces that were previously assigned for this voice role:

- a. Click the **Remove** button in the Advanced section of the page.

A page appears, displaying the interfaces assigned for the Router WAN to Switch voice role.

For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).

- b. Select the interfaces you want to unassign and click **Remove**.

The page closes.

- Step 3** Click **Next**.

If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.

The voice policy groups and your Router-to-Switch interface assignments will be saved, and the next configuration step of the wizard appears ([Selecting WAN Point to Point Connections](#)).

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)

Selecting WAN Point to Point Connections

This step of the wizard allows you to select the interfaces on which to configure QoS for the Serial Point-to-Point links in the WAN segment of your network. You should select all MLP and HDLC interfaces (from both the central and the remote sites) that carry voice traffic.

For Point-to-Point links with speeds equal to or less than 768 kbs, you should select Multilink interfaces—selecting a serial interface may cause a deployment failure.

The wizard will automatically configure QoS separately for groups of interfaces with link speeds greater than 768kbs, and those with link speeds equal to or less than 768kbs.

In certain types of configurations where the rate of a multilink interface is not defined, and the serial bandwidth is less than or equal to 768 kbits, the IP Telephony wizard assigns the multilink interfaces to high speed policy groups instead of low speed policy groups.

To make the correct assignment in the IP Telephony wizard, you must define the bandwidth on the multilink interface using the device's bandwidth CLI command.

To select WAN Point to Point connections:

-
- Step 1** Select the interfaces on which to configure QoS for the WAN Serial Point-to-Point links, by selecting the check boxes next to the appropriate interfaces in the list.
- For more information about the columns in this table, see [IP Telephony Wizard: Select WAN Point to Point Connections Page, page B-143](#).
- Step 2** To remove any interfaces that were previously assigned for this voice role:
- Click the **Remove** button in the Advanced section of the page.
A page appears, displaying the interfaces assigned for the WAN Point-to-Point voice role.
For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).
 - Select the interfaces you want to unassign and click **Remove**.
The page closes.
- Step 3** Click **Next**.
- If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.

The voice policy groups and your WAN-Serial-Point-to-Point interface assignments will be saved, and the next configuration step of the wizard appears ([Selecting WAN Frame Relay Connections](#)).

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)
- [Troubleshooting the IP Telephony Network, page 14-14](#)

Selecting WAN Frame Relay Connections

If the interface connections in the WAN segment of your network support Frame Relay configuration, this step of the wizard allows you to select the Frame Relay DLCI's WAN links. When you assign a role to a DLCI, the role will also be assigned to the interface to which the DLCI belongs. QPM will configure both the DLCIs and the interfaces.



Note

The IP Telephony wizard currently supports only Frame Relay to Frame Relay network configuration, and not Frame Relay to ATM configuration. QPM does include templates for Frame Relay to ATM connections; see [Configuring QoS on ATM to Frame Relay Connections, page 7-20](#). QPM also includes ATM templates; see [Configuring QoS on ATM Connections, page 7-20](#).

The wizard describes the tools that will be used to configure the QoS settings for these interfaces.

You must select all the Frame Relay interfaces (from both the central and the remote sites) that carry voice traffic. The wizard will automatically configure QoS separately for groups of interfaces, according to their link speed.

To select WAN Frame Relay connections:

-
- Step 1** Select the interfaces on which to configure QoS for the Frame Relay WAN links, by selecting the check boxes next to the appropriate Frame Relay interfaces in the list.
- For more information about the columns in this table, see [IP Telephony Wizard: Select WAN Frame Relay Connections Page, page B-145](#).
- Step 2** To remove any interfaces that were previously assigned for this voice role:
- Click the **Remove** button in the Advanced section of the page.
A page appears, displaying the interfaces assigned for the WAN Frame Relay voice role.
For more information about this page, see [IP Telephony Wizard: Remove Network Elements Page, page B-132](#).
 - Select the interfaces you want to unassign and click **Remove**.
The page closes.
- Step 3** Click **Next**.
- If the Display Configuration Info. check box is selected, the Configuration Info page appears. After reviewing the assignments summary, click **Next**.

The voice policy groups and your WAN-Frame-Relay interface assignments will be saved, and the last step of the wizard appears ([End, page 7-17](#)).

Related Topics

- [Using QPM Tables, page 3-16](#)
- [Using the IP Telephony Wizard, page 7-5](#)
- [Viewing Policy Information, page 8-14](#)
- [Troubleshooting the IP Telephony Network, page 14-14](#)

End

The final step of the IP Telephony wizard informs you that all the QoS settings have been completed and that the wizard has added and saved the policies in the current deployment group.

From this page, you can select to go to the Deployment wizard to deploy the deployment group directly, or to the Policy Groups page to view a detailed summary of all the voice policy groups that were created by the wizard. From the Policy Groups page, you can modify the properties and policies configured in the voice policy groups, if required.

To finish the wizard:

-
- Step 1** Select the Yes or No radio button, depending on whether or not you want to deploy your QoS policies.
- Step 2** Click **Finish** to close the wizard.
- The Policy Groups page or the Deployment wizard appears.
-

Related Topics

- [Modifying Voice Policies, page 7-17](#)
- [Modifying a Policy, page 8-15](#)
- [Chapter 9, “Provisioning: Deploying QoS Policies”](#)

Modifying Voice Policies

After you have completed the IP Telephony wizard, you can modify properties and traffic rules of the voice policies created by the voice wizard, to suit a specific network configuration. You can also add nonvoice rules to the default voice policies.



Note

You cannot modify a voice policy that is linked to a policy template. You must disconnect the voice policy from its template, or modify the template.

After you have completed the IP Telephony wizard and you selected not to deploy your QoS policies directly (see [End, page 7-17](#)), the Policy View page automatically appears.

The Policy View page displays all voice policies together with non voice policies in the current policy group. For each voice policy, its associated voice role is displayed.

You can modify any of the properties and traffic rules of a voice policy, except for its device constraints. Changing the device constraints will cause the voice policy to lose its voice role.

In this case, the IP Telephony wizard will be unable to assign network elements to the voice policy. You edit a voice policy just like any policy. The difference is that when saving, QPM checks the device constraints of the voice policy. If any changes were made, you must save the voice policy as a regular policy without a voice role.

A full description of modifying policies is provided in [Modifying a Policy, page 8-15](#).

Related Topics

- [Using QPM to Configure QoS for IP Telephony, page 7-3](#)

Viewing the Voice Ready Report

The Voice Ready report provides you with an overview of the system's readiness for voice, displaying a list of all the configurable and nonconfigurable devices in the current device group.

The report displays the voice ready status of each device, and the reason for nonvoice readiness, where relevant. For a device to be "voice ready", it must have all the required software and hardware to support QoS for voice and be supported by QPM.

Nonconfigurable devices do not have the required software or hardware to support QoS for voice, and/or are not supported by QPM. From this report, you can also view the properties of the devices in the list.



Note

Some devices that appear as "voice ready" in the report may not be supported by the IP Telephony wizard. They must be configured manually by QPM.

We recommend that you view the Voice Ready report after adding or importing the devices in your IP telephony network to QPM's device inventory, so that you can check whether your devices support voice QoS.

In the second step of the IP Telephony wizard, only the devices that support IP telephony features are displayed in a table. Devices that do not support IP telephony are not displayed. By opening the Voice Ready report, you can see all the devices in the current device group, including those that do not support QoS for voice.

To view the Voice Ready Report:

-
- Step 1** In Step 2 (Select Devices) of the IP Telephony wizard, click the **Voice Ready Report** link
- The Voice Ready report appears, displaying the voice status of each device and the reason for non voice readiness, where relevant.
- Step 2** To view details about a device in the table, click the Sys Name link for the required device in the table.
- The Device Properties page appears for the selected device.
-

Related Topics

- [Introduction, page 7-7](#)
- [Selecting IP Telephony Devices, page 7-8](#)
- [Using QPM Tables, page 3-16](#)
- [Viewing and Editing Device Properties, page 4-10](#)

Advanced IP Telephony Network Configuration

Although QPM's IP Telephony wizard can configure many of the QoS requirements for an AVVID network, there are some potential configurations you might need to consider that are beyond the scope of the wizard. These topics describe some of these configuration issues:

- [Policing SoftPhone Traffic, page 7-19](#)
- [Configuring QoS on ATM Connections, page 7-20](#)
- [Configuring QoS on ATM to Frame Relay Connections, page 7-20](#)

In addition to these topics, see the *Cisco AVVID Network Infrastructure Enterprise Quality of Service Design Guide*, which provides a blueprint for implementing the end-to-end Quality of Service (QoS).

This QoS is required for successful deployment of Cisco AVVID solutions in today's enterprise environment. It is located at:

www.cisco.com/warp/customer/771/srnd/qos_srnd.pdf

Policing SoftPhone Traffic

On a Catalyst port that is connected to a PC running a Cisco IP SoftPhone application, the IP Telephony wizard marks all the VoIP traffic with DSCP value 46, and all the control traffic with DSCP 26. If PC users begin sending non-priority traffic using the VoIP UDP ports or the CTI TCP port, this non-priority traffic will receive the same quality of service from the network as VoIP traffic or VoIP control traffic.

You can configure policing on the inbound traffic of the Catalyst port to prevent the PC from flooding the queues for DSCP 46 traffic.

For example:

- You can police VoIP traffic at a rate of 100kbps with a burst of 2kb.
- You can police control traffic at 8kbps (configure 32kbs) with a burst of 8kb.

You should also set the markdown table on the device from DSCP 46 to 0, and DSCP 26 to 0.

Configuring QoS on ATM Connections

The QPM IP Telephony wizard does not configure ATM connections. However, QPM includes templates that you can use to create policy groups for your ATM interfaces.

To configure QoS on ATM Connections:

Step 1 Create and bind virtual template interfaces on the ATM PVC.

For example, the bolded command in this configuration example shows the commands for binding virtual templates to the ATM PVC. See the configuration documentation for your device for information on creating virtual templates.

```
interface ATM4/0.60 point-to-point
  protocol ppp Virtual-Template60
!
interface Virtual-Template60
  bandwidth 256
  ip address 10.200.60.1 255.255.255.252
  ppp multilink
```

If you have already added the devices to QPM, rediscover the devices in QPM so that the virtual template interfaces are recognized. See [Rediscovering Device Information, page 4-12](#).

Otherwise, add the devices to QPM (see [Adding Devices to the Device Inventory, page 4-3](#)).

Step 2 Create policy groups from these QPM templates, and assign them to the described interfaces.

- WanATMVirtualTemplate—Assign to the ATM virtual template interfaces.
- WanATMHighSpeed—Assign to the ATM PVC for interfaces greater than 768kbps.

Step 3 Deploy the policies. See [Deploying Policies and QoS Configurations, page 9-2](#).

Configuring QoS on ATM to Frame Relay Connections

Some networks use ATM at the main site, but Frame Relay at remote sites, for communicating between the main and remote sites. If your network uses this setup, you can use QPM's ATM to Frame Relay IP telephony templates to deploy QoS on the ATM and Frame Relay interfaces.

To support IP telephony, low speed interfaces (less than 768kbps) must enable link fragmentation and interleaving. For ATM to Frame Relay connections, this can be done using Multilink PPP (MLP) over ATM or Frame Relay. This procedure describes how to configure this setup.

To configure QoS on ATM to Frame Relay Connections:

Step 1 Create and bind virtual template interfaces on the ATM PVC and the Frame Relay DLCI.

For example, the bolded commands in these configuration examples show the commands for binding virtual templates to the ATM PVC ([Example 7-1](#)) and Frame Relay DLCI ([Example 7-2](#)). See the configuration documentation for your device for information on creating virtual templates.

Example 7-1 ATM PVC Virtual Template

```
interface ATM4/0.60 point-to-point
    protocol ppp Virtual-Template60
!
interface Virtual-Template60
    bandwidth 256
    ip address 10.200.60.1 255.255.255.252
    ppp multilink
```

Example 7-2 Frame Relay DLCI Virtual Template

```
!
interface Serial6/0
    no ip address
    encapsulation frame-relay
!
interface Serial6/0.60 point-to-point
    bandwidth 256
    frame-relay interface-dlci 60 ppp Virtual-Template60
!
interface Virtual-Template60
    bandwidth 256
    ip address 10.200.60.2 255.255.255.252
    ppp multilink
```

If you have already added the devices to QPM, rediscover the devices in QPM so that the virtual template interfaces are recognized. See [Rediscovering Device Information, page 4-12](#).

Otherwise, add the devices to QPM (see [Adding Devices to the Device Inventory, page 4-3](#)).

Step 2 Create policy groups from these QPM templates, and assign them to the described interfaces.

- WanATM2FR-FR-Main—Assign to the main Frame Relay interface.
- WanATM2FRVirtualTemplate—Assign to both the ATM and Frame Relay virtual template interfaces.
- WanATM2FR-FR-DLCI—Assign to the Frame Relay DLCI.
- WanATM2FR-ATM-PVC—Assign to the ATM PVC.

Step 3 Deploy the policies. See [Deploying Policies and QoS Configurations, page 9-2](#).
