

# MicroRouter 1000R Installation Guide

Compatible Systems Corporation  
4730 Walnut Street  
Suite 102  
Boulder, Colorado 80301

303-444-9532  
800-356-0283

MicroRouter 1000R Installation Guide, Version 1.01  
Copyright(c) 1995, Compatible Systems Corporation

All rights reserved. RISC Router and RouterView are trademarks of Compatible Systems Corporation. Other trademarks are the property of their respective holders.

Part number: A00-1093

**FCC Notice:** This product has been certified to comply with the limits for a Class A computing device, pursuant to Subpart J of Part 15 of FCC Rules. It is designed to provide reasonable protection against radio or television communication interference in a commercial environment. Operation of this equipment in a residential area could cause interference with radio or television communication.

---

**CHAPTER 1 - INTRODUCTION** **7**

ABOUT THE MICRO ROUTER 1000R	7
Getting Started	8
Hardware Installation	8
RouterView Software Installation	8
Command Line Preparation	8
Quickstart Configuration	8
Appendices and Index	8

---

**CHAPTER 2 - GETTING STARTED** **9**

A FEW NOTES	9
Please Read The Manuals	9
Warranty and Service	9
Getting Help With the Micro Router 1000R	9
WHAT YOU WILL NEED TO GET STARTED	10
Supplied with the Micro Router 1000R	10
Needed For Installation	10
Ethernet Connection Requirements	11
Thick Ethernet	11
Thin Ethernet	11
10Base-T Twisted-Pair Ethernet	11
Telco Line Connection Requirements	11
RS-232 Port	12

---

**CHAPTER 3 - HARDWARE INSTALLATION** **13**

Mounting the Router	13
Connecting the Router to the Ethernet	14
Connecting to Thick Ethernet	14
Connecting to Thin Ethernet	14
Connecting to Twisted-Pair Ethernet	14
Connecting a Line Device to the Micro Router 1000R	15
Connecting Devices to the RS-232C Port	15
Connecting an Out-of-Band Management Console	15
Powering Up the Router	16

---

**CHAPTER 4 - ROUTERVIEW SOFTWARE  
INSTALLATION** **17**

---

RouterView for Windows	17
System Requirements	17
Installing and Running RouterView for Windows	18
RouterView for Macintosh	18
System Requirements	19
Installing and Running RouterView for Macintosh	19

## **CHAPTER 5 - SETTING UP COMMAND LINE MANAGEMENT** **21**

---

Out-of-Band Command-Line Management	21
Setting Up Telnet Operation	21

## **CHAPTER 6 - QUICKSTART INSTRUCTIONS** **23**

---

ETHERNET PORT CONFIGURATION	24
IP Protocol	24
Required for IP	24
Suggested for IP	24
IPX Protocol	25
Required for IPX	25
Suggested for IPX	25
AppleTalk Protocol	25
Required for AppleTalk	25
Suggested for AppleTalk	25
DECnet Protocol	25
Required for DECnet	25
Suggested for DECnet	26
WAN PORT PPP CONFIGURATION	26
Operating Software	26
Required for PPP	26
IP Protocol	27
Required for IP	27
Suggested for IP	27
IPX Protocol	27
Required for IPX	27
Suggested for IPX	27
AppleTalk Protocol	28
Required for AppleTalk	28
Suggested for AppleTalk	28
DECnet Protocol	28
Required for DECnet	28
Link Configuration	29

Required for Dedicated/Leased Line Operation	29
Suggested for Dedicated/Leased Line Operation	29
Required for Dial-On-Demand Operation	29
Suggested for Dial-On-Demand Operation	29
Physical Comm Settings	30
WAN PORT FRAME RELAY CONFIGURATION	30
Operating Software	30
Required for Frame Relay	30
IP Protocol	31
Required for IP	31
Suggested for IP	31
IPX Protocol	31
Required for IPX	31
Suggested for IPX	32
AppleTalk Protocol	32
Required for AppleTalk	32
Suggested for AppleTalk	32
DECnet Protocol	32
Required for DECnet	32
Link Configuration	33
Suggested for Dedicated/Leased Line Operation	33
Frame Relay DLCI Mappings	33
Physical Comm Settings	33

## **APPENDIX A - SHIPPING DEFAULTS** **35**

Ethernet Port	35
IP Defaults	35
IPX Defaults	35
AppleTalk Defaults	35
DECnet Defaults	35
WAN Port	35
IP Defaults	35
IPX Defaults	36
AppleTalk Defaults	36
DECnet Defaults	36
Link & Physical Defaults	36

## **APPENDIX B - CONNECTOR AND CABLE PIN OUTS** **37**

Pin Outs for DIN-8 to RS-232 Data Cable (DCE/Male)	37
Pin Outs for DIN-8 to RS-232 Console Cable (DTE/Female)	38

**APPENDIX C - LIGHT PATTERNS AND TEST SWITCH SETTINGS** **39**

MicroRouter 1000R Light Patterns	39
Traffic Indicators	39
Other Indicators	39
Level 1 Panic Indicators	39
MicroRouter 1000R Switch Settings	40

**APPENDIX D - DOWNLOADING SOFTWARE FROM COMPATIBLE SYSTEMS** **41**

The Compatible Systems FTP Server	41
CompuServe	41
Bulletin Board	42
AppleTalk Remote Access Server	42

**APPENDIX E - TERMS AND CONDITIONS** **43**

# Chapter 1 - Introduction

## About the Micro Router 1000R

Congratulations on your purchase of the Micro Router 1000R Ethernet to wide area router. The Micro Router 1000R supports the IP, IPX, AppleTalk, and DECnet protocols, with dial-on-demand or dedicated line operation over voice, leased/switched, or ISDN lines, using the PPP and/or the Frame Relay wide area protocols.

This manual will help you install the Micro Router 1000R to connect your local Ethernet to a wide area network. The wide area network may be connected to other Compatible Systems routers, or to routers from other vendors. You can also use the Micro Router 1000R to connect your network to an Internet Service Provider.

In short, the installation steps are:

1. **Install** the Micro Router hardware and connect it to a line communication device (including a modem, 56K CSU/DSU, or ISDN Terminal Adapter).
2. **Select** the management method you wish to use with the router. If you want to use the RouterView management software, you must install the software on a Windows PC or Macintosh computer which is connected to your network.
3. **Configure** the Micro Router LAN and WAN parameters using the management method you have chosen.

If you have any difficulties during the installation or use of the Micro Router that are not answered by this guide, please call Compatible Systems Corporation or your Micro Router 1000R reseller. Compatible Systems' phone number is listed on the front of this guide. We will be happy to help you.

The manual is divided into several sections that should provide you with all the information you will need to use the Micro Router 1000R on your network.

## **Getting Started**

This part of the manual describes the contents of the Micro Router 1000R package and emphasizes the preparation and equipment you will need to install the router.

## **Hardware Installation**

Here you will find step-by-step instructions on how to physically install the Micro Router 1000R and connect it to your local Ethernet and your wide area network. Instructions are included for thick, thin, and twisted-pair Ethernet environments as well as modems, 56K CSU/DSUs, and ISDN terminal adapters.

## **RouterView Software Installation**

If you plan to use RouterView, Compatible Systems' GUI (Graphical User Interface) management software which is included with your router, then read this section. Instructions are provided on how to install RouterView for Windows or Macintosh environments.

## **Command Line Preparation**

If you have decided to use command line management, either out-of-band (through the AUX port), or in-band through Telnet, read this section.

## **Quickstart Configuration**

The Quickstart section provides a list of parameters that must be entered into a router for proper operation.

## **Appendices and Index**

Additional information that might be of interest to you such as technical specifications and a quick reference to specific information can be found at the end of this guide.



# Chapter 2 - Getting Started

## A Few Notes

### **Please Read The Manuals**

The manuals included with your Micro Router 1000R contain some very important information about the Micro Router 1000R and local and wide area networking in general. Please read this manual thoroughly, and refer to the management reference guides as required. It's worth the few minutes it will take.

Also, please fill out the warranty registration card and return it to us today. This will help us keep you informed of updates to the Micro Router 1000R and future products available from Compatible Systems.

### **Warranty and Service**

The Micro Router 1000R is covered by the Compatible Systems Integrated Support Package, which includes a three-year comprehensive warranty, a twenty-four hour advanced replacement program, unlimited phone support, and software upgrades for the life of the product.

Compatible Systems maintains copies of current software updates on the Internet, CompuServe, AppleLink, an ARA server, and a bulletin board. You may download product software from any of these sources at any time. For more information on downloading current product software, see the appendices for this manual.

### **Getting Help With the Micro Router 1000R**

If you have a question about the Micro Router 1000R and can't find the answer in this manual, feel free to call our technical support department at (800) 356-0283. You may also send support questions via e-mail to *support@Compatible.COM*.

## What You Will Need To Get Started

Before connecting the Micro Router 1000R, please check the list below to make sure that you have received all of the items that are supplied with the Micro Router 1000R package.

You should also make sure you have any additional items that are necessary to connect the router to your network.

### **Supplied with the Micro Router 1000R**

Please check your shipping package for the following items:

- Micro Router 1000R unit
- Power supply
- One DIN-8 to DB-25 data cable
- One DIN-8 to DB-25 auxiliary port cable
- Windows RouterView diskette
- Macintosh RouterView diskette
- Windows download software diskette
- Macintosh download software diskette
- RouterView reference guide
- Command line reference guide
- Warranty registration card

❖ **Note:** *Some routers may be shipped with two RS-232 “Y” cables. These cables can be used for both data and auxiliary port operation.*

### **Needed For Installation**

Before connecting the Micro Router 1000R to your network, you need to make sure that you have the necessary equipment for connecting to the local Ethernet and the wide area transmission device(s) (modem, 56K CSU/DSU, ISDN terminal adapter).

---

## Ethernet Connection Requirements

The Micro Router 1000R's Ethernet port directly supports thick, thin and 10BaseT twisted-pair Ethernet. Switching among the three ports is automatic – simply plug the proper Ethernet connector into its port. Other Ethernet cabling types (such as fiber optic cabling or pre-10BaseT twisted-pair) can be supported using adapters which connect to a thick Ethernet port.

### Thick Ethernet

To connect the router's Ethernet port to a standard (thick) Ethernet cable you will need a transceiver cable connection at the correct location on your Ethernet cable. The transceiver cable will attach directly to the DB-15 connector on the router.

### Thin Ethernet

To connect the router's Ethernet port to a thin Ethernet cable you will need a T-connector installed at the correct location on your Ethernet cable. A T-connector is required for proper termination of the cable.

### 10Base-T Twisted-Pair Ethernet

To connect the router's Ethernet port to twisted-pair Ethernet cabling you will need an unshielded twisted-pair wire that is connected to a 10BaseT-compatible twisted-pair hub.

❖ **Note:** *Ethernet cables and cable connectors are not supplied with the Micro Router product. Please contact your reseller or your Compatible Systems representative for information on obtaining the correct Ethernet cabling supplies.*

❖ **Note:** *These hardware installation instructions assume that your Ethernet cabling is already in place. Thin coaxial Ethernet network cabling should be terminated at each end with 50 Ohm terminator plugs. A T-connector or transceiver must be available in the location where you will be installing the router.*

## Telco Line Connection Requirements

The Micro Router 1000R is not a line communications device. In order to connect to a wide area transmission line, you must use a

modem, 56K CSU/DSU, or ISDN Terminal Adapter. Which of these devices you use depends on the type of wide area line to which you are connecting.

❖ **Note:** *Before attempting to connect the Micro Router 1000R to a leased telco line, use the loopback features of your CSU/DSU's to check the line. This can save you a considerable amount of time, since the more equipment you have on the line, the more difficult it becomes to determine where a problem is occurring.*

### **RS-232 Port**


No matter which type of wide area line you plan to connect to, the line communications device you use must provide an RS-232 connection in order to be used with the Micro Router.

The Micro Router 1000R includes one DIN-8 to DB-25 RS-232 sync/async data cable. This cable supports RS-232 asynchronous modems, synchronous leased and switched-56K CSU/DSU's, and North American ISDN Terminal Adapters.

Some Japanese and European terminal adapters may require an adapter plug. For more information, contact Compatible Systems.

❖ **Note:** *Please use **only** this cable when connecting your line communication device to the Micro Router 1000R. The cables provided with other equipment do not provide all of the connections required between connector pins for correct hardware handshaking and synchronous clocking.*

## Chapter 3 - Hardware Installation

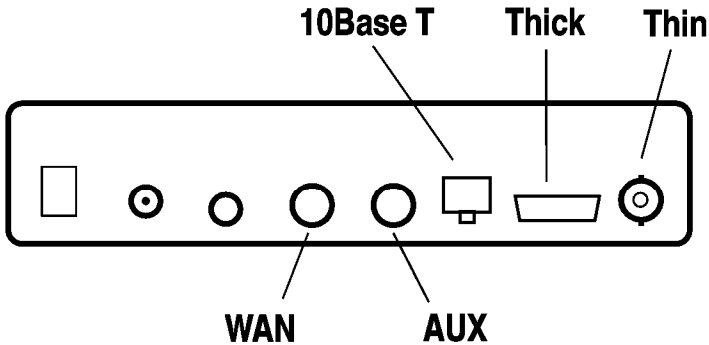

1000R Back Panel

This section of the manual describes how to connect the Micro Router 1000R to your Ethernet network and your wide area communications device. In summary, the steps for installation are:

1. **Make sure the router is powered down and the power supply is not plugged in to the wall.**
2. **Wall mount the router, if required.**
3. **Connect the router to the Ethernet network.**
4. **Connect the router to the wide area line communications device.**
5. **Power up the line communications device.**
6. **Plug in the power supply and power up the router.**

### Mounting the Router

The Micro Router 1000R can be left standalone on a desktop or equipment table, or can be wall mounted.

❖ **Note:** *Wall mounting requires a wall-mount bracket kit (part number A00-0987) from Compatible Systems.*

For wall mounting, follow the instructions included with the wall-mount bracket kit.

## Connecting the Router to the Ethernet

For thick and thin Ethernet networks you should have installed your Ethernet cabling before you install the Micro Router 1000R.

If you have a coax installation, the Ethernet network cable should be terminated at both ends with 50 Ohm network terminating resistors, and a T-connector or transceiver should be available at the location where you will connect the router.

If you are installing a twisted-pair connection, and the twisted-pair hub is already in place, or a T-connector or thicknet transceiver is already installed on your Ethernet cable, you can connect the router to an active network without interrupting network activity.

The Micro Router 1000R's Ethernet interface features all three media connector types. The active media connection will automatically be selected when you attach a cable.

**Do not terminate inactive connectors on the router, as this may cause an incorrect media type to be selected.**

### Connecting to Thick Ethernet

To connect the router to a thick Ethernet network, simply plug one end of a transceiver cable into the DB-15 transceiver connector located on the back panel of the unit. Then, plug the other end of the transceiver cable into the transceiver which should already be attached to the thick Ethernet cable.

### Connecting to Thin Ethernet

In order to connect the router to a thin Ethernet cable, connect a T-connector to the BNC connector located on the rear panel of the unit.

### Connecting to Twisted-Pair Ethernet

Before connecting the router to twisted-pair cabling you need an unshielded twisted-pair cable that is already connected to your 10BaseT-compatible twisted-pair hub.

To connect the router to the twisted-pair network, simply plug the twisted-pair cable into the RJ-45 connector on the back of the unit.

---

## Connecting a Line Device to the Micro Router 1000R

The Micro Router 1000R supports high-speed synchronous or asynchronous operation over one RS-232 connector.

The Micro Router 1000R supports both PPP and Frame Relay link protocols on this WAN port.

### Connecting Devices to the RS-232C Port

This port -- marked WAN -- can be used to connect to synchronous or asynchronous line communications devices at rates up to 128Kbps (115.2 Kbps async).

Examples include modems, leased or switched 56K CSU/DSU's, and ISDN terminal adapters.

You may select either dial-on demand, redial if down ("always up" mode), or leased line operation. These ports may also be set to receive ISDN or switched-56 incoming calls.

To connect a device, first make sure that both units are powered off. Then, simply connect one of the supplied RS-232 data cables (not an auxiliary port cable) between the router and the device.

❖ **Note:** *The Micro Router 1000R RS-232 port requires that your line communications device be set to supply the RS-232 DCD signal when a connection has been established with the remote end.*

❖ **Note:** *The Micro Router 1000R includes a special data cable to facilitate connections to RS-232 line communications devices. This cable includes support for several asynchronous and synchronous control signals. Off-the-shelf Sun or Macintosh-type cables **do not** support these signals.*

## Connecting an Out-of-Band Management Console

If you wish to connect an out-of-band management console, use the supplied auxiliary cable and connect to the AUX port on the back of the Micro Router 1000R. You can use a dumb terminal or a computer equipped with VT100 terminal emulation.

The default baud rate for the AUX port is 9600.

---

## Powering Up the Router

Power up all modems, CSU/DSU's, and TA's before powering up the router. This allows the router to immediately sense the connected device. At power-up, the router will take approximately one minute to become visible to RouterView.

❖ **Note:** *If you want to use Telnet as a management method, you must configure an IP address into the router using an out-of-band console or RouterView before you will be able to contact the router.*



---

# Chapter 4 - RouterView Software Installation

All of the routers in Compatible Systems' multiprotocol family, including all MicroRouter and RISC Router models, can be managed from a single management platform called RouterView. Both a Windows and a Macintosh version of RouterView were included with your MicroRouter 1000R.

❖ **Note:** *Although the installation procedures for the Windows and Macintosh versions of RouterView are slightly different, the programs themselves are virtually identical. Once you have installed RouterView on the platform of your choice, you can find more information on how to use it in the RouterView Reference Guide which was included with your router.*

## RouterView for Windows

RouterView for Windows allows you to manage the MicroRouter 1000R from an IBM-compatible PC running Windows. The PC can either be configured as an IPX ODI client on a Novell NetWare internet, or as an IP WinSock client on an IP internet.

### System Requirements

In order to successfully run RouterView for Windows, you need:

- IBM PC or compatible w/ 386 or later processor
- Windows 3.1 or Windows for Workgroups installed
- VGA or better monitor

And either (or both) of:

- Novell IPX client configuration on a NetWare network, using IPXODI.COM
- WinSock client configuration on an IP network

❖ **Note:** *The "IPX 101" appendix to the RouterView Reference Guide contains some tips on getting Novell's IPX ODI running on your client machine.*

❖ **Note:** *To force a Windows machine which has both IPX and IP installed to use IP, you must set the desired transport protocol in RouterView's Administration menu Options screen.*

### **Installing and Running RouterView for Windows**

This version of the RouterView program can be found on a 3.5-inch diskette labeled "RouterView - Windows Disk" that was included with your MicroRouter 1000R.

Start Windows. Insert the diskette into your computer's disk drive. At the Windows Program Manager, select "Run" from the File menu and type A:SETUP (where A: is the drive containing the RouterView diskette). This will invoke an auto-installation program supplied with RouterView.

The installation program will ask you to select (or create) a directory in which it should locate RouterView and its associated files and database subdirectory.

Once the installation is complete, double click on the RouterView icon to open the program. For further information on using RouterView, see the RouterView Reference Guide included with your router.

❖ **Note:** *RouterView will be able to use the transport protocol (IP or IPX) you have selected to access Compatible Systems routers anywhere on your internetwork. This means you can use the IP transport option to manage routers across the global Internet network if you are connected to it.*

❖ **Note:** *For an up-to-date description of the changes (if any) made to Windows system files by the installation program, see the README.TXT file located in the RouterView installation directory.*

## **RouterView for Macintosh**

RouterView for Macintosh allows you to manage the MicroRouter 1000R from an Apple Macintosh or compatible computer. RouterView for Macintosh uses the AppleTalk protocol to communicate with the router.

## **System Requirements**

A Macintosh version of RouterView was included with your router. You can run RouterView from any Macintosh on your network that meets the following technical specifications:

- Macintosh with 68030 or later processor (including PowerPC)
- System 7.0 or later.

❖ **Note:** *Although older Macintoshes such as SE/30's and IIsi's will run RouterView adequately for infrequent use, a newer/faster machine is preferable for larger networks where RouterView will be used more often.*

## **Installing and Running RouterView for Macintosh**

To install RouterView for Macintosh, simply insert the RouterView diskette into the floppy drive of your Macintosh. Then double click on the self extracting archive (.sea) icon. You will be asked where you would like to locate your copy of the RouterView program and data files.

Double-click on the RouterView icon and the program will start up and ask you to select/create a location for its database. Once the database has been created, this message will not reappear when you run RouterView.

For further information on using RouterView, see the RouterView Reference Guide included with your router.



# Chapter 5 - Setting Up Command Line Management

The command-line interface allows you to configure and monitor the router in-band via Telnet or out-of-band with a terminal connected to the MicroRouter 1000R's AUX port.

Telnet is a remote terminal communications protocol based on TCP/IP. With Telnet you can log into and manage the router from anywhere on your IP internetwork, even across the global Internet if you choose. To do this, you must run Telnet client software on your local computer, which will communicate with the Telnet server built into the router.

In order to be able to access the command-line interface via Telnet, you must first set some IP parameters in the router. You can do this through the AUX port using a terminal or a PC with terminal emulation software, or with RouterView if you prefer.

After the IP parameters are set, you can complete the configuration in-band with Telnet.

## Out-of-Band Command-Line Management

Set a terminal or a PC to a baud rate of 9600, and connect it to the router's AUX port using the auxiliary cable which was supplied with the router. Press the <Return> key three or four times.

Enter the default password *letmein* at the password prompt. The command line interface prompt will appear on the screen.

For further information on using the command line interface, see the Command Line Reference Guide that was supplied with your router.

## Setting Up Telnet Operation

Before being able to access the command line interface via Telnet, you will need to complete basic IP configuration for the port which you will connect through.

This can be done using the **set ip** commands from a console. For more information on these commands, see the Command Line Reference Guide which was supplied with your router.

The required parameters for Telnet operation are the IP address, IP subnet mask, and IP broadcast address. To change the configuration parameters in the MicroRouter 1000R, you will have to enter a requested password. The default password is *letmein*.

After you have set these basic IP parameters, you can use Telnet to access the router from any node on your IP internetwork, so long as communications occur through a configured port. Invoke the Telnet client on your local computer with the IP address of the router you wish to manage.

❖ **Note:** *Proper syntax is vital to effective operation of the command line. Case is not significant – you may enter commands in upper case, lower case, or a combination of the two.*

---

## Chapter 6 - Quickstart Instructions

This Quickstart section briefly discusses the major parameters that must be set in order to use the router.

There are a number of parameter settings which are optional, in the sense that they are not required for all installations. These settings are not covered in this section.

Whenever you make changes to a router's configuration with RouterView, you must save them to the router's Flash ROM with the Download to Router selection in the Configuration menu. In the following section, **RV** = RouterView.

Whenever you make changes to a router's configuration with the command line (via AUX port or Telnet), you must save them to the router's Flash ROM with the **save(misc)** command. In the following section, **CL** = Command Line.

❖ **Note:** *The MicroRouter 1000R requires different operating software depending on whether you wish it to operate in PPP or Frame Relay mode. Both types of software were supplied with the router. See the PPP and Frame Relay sections later in this section for more information.*

❖ **Note:** *Considerably more information on the meaning of the router's parameters is provided in the RouterView Reference Guide and the Command Line Reference Guide. You should use this list as a starting point to look up more specific information in the other documents. If you need more general information on the protocols, see the Appendices in the RouterView Reference Guide.*

❖ **Note:** *If you are using the MicroRouter 1000R to connect to an Internet Service Provider (ISP), you will receive your configuration parameters from the technical staff of the ISP. These parameters must include all IP addresses, WAN settings, and any applicable authorization routines. If you obtained your MicroRouter 1000R directly from an ISP, it may be pre-configured for your site.*

*Please check with your ISP **before** configuring or changing the configuration of your MicroRouter 1000R.*

## Ethernet Port Configuration

Ethernet ports are considerably easier to set up than wide area ports since there are no choices that need to be made regarding line communications devices and their parameters. We recommend that you begin by configuring any Ethernet port parameters before proceeding to configure WAN port parameters.

### IP Protocol

#### Required for IP

These parameters set the basic address characteristics of the port. They provide enough information for another IP node to find the port (such as a Telnet client), but not enough information for routing to take place.

- IP Address
- IP Subnet Mask
- IP Broadcast Address

**RV:** Use the Ethernet/IP screen to set these parameters.

**CL:** Use the **interface(misc)** and **ip(set)** commands.

#### Suggested for IP

These parameters help supply information about the segment that the port is connected to. With this information, routing can take place.

- IP RIP (Routing Information Protocol)

and/or

- IP Static Routes

**RV:** Use the Ethernet/IP screen to set RIP, and the IP Static Routing Window (All/IP) to set static routes.

**CL:** Use **interface(misc)** and **ip flags(set)** to set RIP, and **ip route(add)** to add static routes.



---

## IPX Protocol

### Required for IPX

There are generally no required changes from the shipping Ethernet configuration for IPX. The Ethernet port will autoconfigure to use the two most common IPX frame types, and will autoadapt to conditions on the Ethernet.

### Suggested for IPX

You may want to set your own network numbers, rather than using the autoconfigured values. You may also want to turn off unused frame types.

**RV:** Use the Ethernet/IPX screen.

**CL:** Use **interface(misc)** and **ipx(set)**.

## AppleTalk Protocol

### Required for AppleTalk

There are generally no required changes from the shipping Ethernet configuration for AppleTalk. The Ethernet port will autoconfigure to use AppleTalk Phase II, and will autoadapt to conditions on the Ethernet.

### Suggested for AppleTalk

You may want to set your own network numbers, rather than using the autoconfigured values. You may also want to use more meaningful zone names.

**RV:** Use the Ethernet/AppleTalk screen.

**CL:** Use **interface(misc)** and **appletalk(set)**.

## DECnet Protocol

### Required for DECnet

The router's shipping configuration does not have DECnet turned on. You must turn it on and set several DECnet parameters.

- Turn DECnet on

- Set DECnet area
- Set DECnet node

**RV:** Use the Main DECnet screen (All/DECnet).

**CL:** Use `decnet(set)`.

### **Suggested for DECnet**

Setting the parameters above should be adequate for most installations.

## **WAN Port PPP Configuration**

This section covers the settings and software download required for PPP (point-to-point) protocol operation of the MicroRouter 1000R WAN port.

The RS-232 WAN port on a MicroRouter can be run synchronously or asynchronously, at rates up to 128Kbps (sync), or 115.2Kbps (async).

## **Operating Software**

### **Required for PPP**

PPP operation requires the correct operating software download in the MicroRouter 1000R's Flash ROM. You can identify the correct software version by the "P" in the fourth character of the filename (i.e. M10P210.DLD).

**RV:** Use the Download Software selection under the Administration menu.

**CL:** Software download support is not available directly from the command line. However, the MicroRouter 1000R does support the TFTP protocol for software downloads. See `tftp(misc)`.

❖ **Note:** *The MicroRouter 1000R is shipped with PPP as the factory default operating software download. Unless you previously downloaded a Frame Relay software load, you shouldn't need to download different operating software.*

---

## IP Protocol

### Required for IP

WAN ports which are set for PPP operation do not generally use an IP address. They are set to act as an “unnumbered interface.” In this mode of operation, there are no required settings.

### Suggested for IP

These parameters help supply information about the segment that the port is connected to. With this information, routing can take place.

- IP RIP (Routing Information Protocol)

and/or

- IP Static Routes
- IP Default Router

❖ **Note:** *If you set RIP to on for a dial-on-demand link, you must also set the update method to **triggered** to avoid the link being brought up by transmission of RIP information.*

**RV:** Use the WAN/IP screen to set RIP and the update method, and the IP Static Routing Window (All/IP) to set static routes and a default router.

**CL:** Use **interface(misc)** and then **ip flags(set)** to set RIP, and **ip wan(set)** to set the update method, and **ip route(add)** to add static routes. User **interface(misc)** and **ip(set)** to set the default router.

## IPX Protocol

### Required for IPX

WAN ports which are set for PPP operation do not generally use an IPX address. They are set to act as an “unnumbered interface.” In this mode of operation, there are no required settings.

### Suggested for IPX

If you plan to use dial-on-demand for this link, you should set the update method (to **triggered**) to avoid the link being brought up by transmission of IPX RIP information.

- Update Method

**RV:** Use the WAN/IPX screen.

**CL:** Use **interface(misc)** and then **ipx wan(set)**.

## AppleTalk Protocol

### Required for AppleTalk

WAN ports which are set for PPP operation do not generally use an AppleTalk address. They are set to act as an “unnumbered interface.” In this mode of operation, there are no required settings.

### Suggested for AppleTalk

If you plan to use dial-on-demand for this link, you should set the update method (to triggered) to avoid the link being brought up by transmission of AppleTalk RTMP information.

- Update Method

**RV:** Use the WAN/AppleTalk screen.

**CL:** Use **interface(misc)** and then **appletalk wan(set)**.

## DECnet Protocol

### Required for DECnet

WAN ports which are set for PPP dial-on-demand operation should have their DECnet hello timers and DECnet routing timers set for a fairly long period, since the link will be brought up when this information is transmitted.

- Hello timer
- Routing timer

**RV:** Use the WAN/DECnet screen.

**CL:** Use **interface(misc)** and then **decnet wan(set)**.

---

## Link Configuration

### Required for Dedicated/Leased Line Operation

Dedicated line operation is the simplest to set up.

- Set Dedicated connection
- Set PPP connection

**RV:** Use the WAN/Link screen.

**CL:** Use **interface**(misc) and then **wan connect**(set).

### Suggested for Dedicated/Leased Line Operation

Dedicated line operation generally does not require additional parameters for operation.

### Required for Dial-On-Demand Operation

Incoming dial-on-demand operation requires only slightly more information than dedicated line setup. Outgoing dial-on-demand requires additional information (see the suggested settings below).

- Set dial-up connection
- Set PPP connection
- Set to allow dial-in and/or dial-out

**RV:** Use the WAN/Link screen.

**CL:** Use **interface**(misc) and then **wan connect**(set).

### Suggested for Dial-On-Demand Operation

Outgoing dial-on-demand requires some additional information.

- Set dialing method
- Create dial-out script
- Set dial-out script to be used

**RV:** Use the WAN/Link window to set the dialing method and to select a chat script (once you have created one). Use the Chat Script Editor window (All/Link) to create your chat script.

**CL:** Use **interface**(misc) and then **wan connect**(set) to set the dialing method and to select a chat script (once you have created one). Use the **chat**(edit) command to create a chat script.

## Physical Comm Settings

You may need to set the baud rate, sync/async operation, and other physical communications parameters for the WAN port. These parameters will depend on the line communications device you are using.

**RV:** Use the WAN/General window.

**CL:** Use **interface**(misc) and then **wan serial**(set).

## WAN Port Frame Relay Configuration

This section covers the settings required for Frame Relay operation of the MicroRouter 1000R WAN port.

The RS-232 WAN port on a MicroRouter can be run synchronously or asynchronously, at rates up to 128Kbps (sync), or 115.2Kbps (async).

## Operating Software

### Required for Frame Relay

Frame Relay operation requires the correct operating software download in the MicroRouter 1000R's Flash ROM. You can identify the correct software version by the "F" in the fourth character of the filename (i.e. M10F210.DLD).

**RV:** Use the Download Software selection under the Administration menu.

**CL:** Software download support is not available directly from the command line. However, the MicroRouter 1000R does support the TFTP protocol for software downloads. See **tftp**(misc).

❖ **Note:** *The MicroRouter 1000R is shipped with PPP as the factory default operating software download. You must download Frame Relay operating software into the router in order to run in Frame Relay mode.*

---

## IP Protocol

### Required for IP

Frame Relay operation requires that the WAN port is set to be a “numbered interface.” This means that the port (and thus the Frame Relay network) must have an IP address, etc.

- IP numbered interface
- IP Address
- IP Subnet mask
- IP Broadcast Address

**RV:** Use the WAN/IP screen to set these parameters.

**CL:** Use the **interface(misc)** and **ip(set)** commands.

### Suggested for IP

These parameters help supply information about the segment that the port is connected to. With this information, routing can take place.

- IP RIP (Routing Information Protocol)

and/or

- IP Static Routes
- IP Default Router

**RV:** Use the WAN/IP screen to set RIP, and the IP Static Routing Window (All/IP) to set static routes and a default router.

**CL:** Use **interface(misc)** and then **ip flags(set)** to set RIP, and **ip route(add)** to add static routes. User **interface(misc)** and **ip(set)** to set the default router.

## IPX Protocol

### Required for IPX

Frame Relay operation requires that the WAN port is set to be a “numbered interface.” This means that the port (and thus the Frame Relay network) must have an IPX network number.

- IPX numbered interface

- IPX Network Number

**RV:** Use the WAN/IPX screen.

**CL:** Use **interface(misc)** and then **ipx(set)**.

### **Suggested for IPX**

The settings above are all that is generally required for IPX operation over Frame Relay.

## **AppleTalk Protocol**

### **Required for AppleTalk**

Frame Relay operation requires that the WAN port is set to be a “numbered interface.” This means that the port (and thus the Frame Relay network) must have an AppleTalk network number and the port must have an AppleTalk node number.

- AppleTalk numbered interface
- AppleTalk Network Number
- AppleTalk Node Number

**RV:** Use the WAN/AppleTalk screen.

**CL:** Use **interface(misc)** and then **appletalk(set)**.

### **Suggested for AppleTalk**

The settings above are all that is generally required for AppleTalk operation over Frame Relay.

## **DECnet Protocol**

### **Required for DECnet**

Once DECnet has been turned on (a global setting discussed in the Ethernet section above), no additional settings are generally required for DECnet operation over Frame Relay.



---

## Link Configuration

Frame Relay is presently supported in the MicroRouter 1000R only via dedicated line operation.

- Set Dedicated connection
- Set Frame Relay connection

**RV:** Use the WAN/Link screen.

**CL:** Use **interface**(misc) and then **wan mode**(set).

### Suggested for Dedicated/Leased Line Operation

Dedicated line operation generally does not require additional parameters for operation.

## Frame Relay DLCI Mappings

If you are connecting to another Compatible Systems router, this information is not required. Compatible Systems uses IARP (Inverse Address Resolution Protocol) to dynamically generate this information. To connect to other vendors' routers which do not support IARP, or do not have it turned on, you must provide DLCI to protocol mapping information.

**RV:** Use the DLCI Mapping Database window.

**CL:** Use **interface**(misc) and then **frelay**(set).

## Physical Comm Settings

You may need to set the baud rate, sync/async operation, and other physical communications parameters for the WAN port. These parameters will depend on the line communications device you are using.

**RV:** Use the WAN/General window.

**CL:** Use **interface**(misc) and then **wan serial**(set).



# Appendix A - Shipping Defaults

## Ethernet Port

### IP Defaults

- On
- Address: 198.41.12.1
- Subnet Mask: 255.255.255.0
- Broadcast Address: 198.41.12.255
- IP RIP off

### IPX Defaults

- 802.3 on, autoseeding
- 802.2 on, autoseeding
- Type II off
- 802.2 SNAP off

### AppleTalk Defaults

- Phase I off
- Phase II on, autoseeding

### DECnet Defaults

- Off

## WAN Port

### IP Defaults

- On
- Unnumbered interface
- RIP off
- Van Jacobson compression off

**IPX Defaults**

- On
- Unnumbered interface

**AppleTalk Defaults**

- On
- Unnumbered interface

**DECnet Defaults**

- Off

**Link & Physical Defaults**

- PPP (and PPP software download)
- Dial-in
- Async @ 115.2Kbps
- Hardware flow control

# Appendix B - Connector and Cable Pin Outs

## Pin Outs for DIN-8 to RS-232 Data Cable (DCE/Male)

DIN-8 (DTE)	RS-232		DB-25 Data (DCE/Male)	RS-232
1	RTS	->	4 & 20	RTS & DTR
2	CTS	<-	5	CTS
3	Tx Data	->	2	Tx Data
4	Ground	<->	7	Ground
5	Rx Data	<-	3	Rx Data
6	Tx Clock	<->	15	Tx Clock
7	DCD	<-	8	DCD
8	Rx Clock	<-	17	Rx Clock
Shield		<->	Shield	

### Notes:

1. DCD must be supported in order for the router to sense a completed connection.
2. Tx Clock direction is determined by an internal jumper. The line device sourcing clock (i.e. <- ) is the default.

---

## Pin Outs for DIN-8 to RS-232 Console Cable (DTE/Female)

DIN-8 (DTE)	RS-232		DB-25 Data (DTE/Female)	RS-232
1	RTS	->	5	CTS
2	CTS	<-	4	RTS
3	Tx Data	->	3	Rx Data
4	Ground	<->	7	Ground
5	Rx Data	<-	2	Tx Data
6	Tx Clock	<->	17	Tx Clock
7	DCD	<-	8	DCD
8	Rx Clock	<-	15	Rx Clock
Shield		<->	Shield	

### Notes:

1. This cable is a null-modem DTE-to-DTE cable.
2. Because it is a null-modem cable, it can be connected “back-to-back” with a DCE/Male data cable in order to create a router-to-router test connection cable.

---

# Appendix C - Light Patterns and Test Switch Settings

## MicroRouter 1000R Light Patterns

The MicroRouter 1000R uses a number of light patterns on its front LED bar to indicate operating conditions.

2 & 9 on steady: Router is powered on.

❖ **Note:** *Lights 1 and 10 are directly connected to the router's 10BaseT interface and indicate 10BaseT link (1) and 10BaseT polarity (10).*

### Traffic Indicators

Scan from 2 to 5: Ethernet receive packet

Scan from 5 to 2: Ethernet transmit packet

Scan from 6 to 9: WAN receive packet

Scan from 9 to 6: WAN transmit packet

### Other Indicators

5 & 6 on steady: Flash ROM checksum in progress

5 & 6 flashing: Router stacks starting up

2,3,4 & 7,8,9 flashing: Running from ROM

2,3,4 & 7,8,9 on solid: Erasing Flash ROM

2,3 & 8,9 on solid: Writing Flash ROM

4 & 7 on solid: Compressing Flash ROM image

### Level 1 Panic Indicators

Any continuous flashing pattern not noted above may be caused by a software "panic." This is a sign that a condition has been detected that the software does not know how to deal with: either an unusual network condition, or a hardware failure.

---

❖ **Note:** *Level 1 panics are very unusual. These are not the same as Level 2 panics, which cause the router to save the reason for the panic and restart. The existence of a Level 2 panic signature will be reported by RouterView or the command line.*

## MicroRouter 1000R Switch Settings

- 0     **Normal Operation**
- 1     RAM Test\*
- 2     Ethernet Test\*
- 3     Unused\*
- 4     Unused\*
- 5     **Erase Flash ROM (OS and configuration)**
- 6     Flash ROM Test\*
- 7     Manufacturing Burn In\*
- 8     Serial Test\*
- 9     **Allow *letmein* password for 5 minutes after powerup**

### Notes:

1. Settings marked with an asterisk may erase your Flash ROM. Please don't use these settings without first contacting Compatible Systems Tech Support. Very few units experience hardware failures, almost all problems can be traced to telco line problems and/or incorrect configuration.



---

# Appendix D - Downloading Software From Compatible Systems

We make the latest versions of operating software for all Compatible Systems products available from a number of on-line sources. The latest versions of RouterView management software are also available at these locations.

To download software, select the proper source and follow the instructions below.

## The Compatible Systems FTP Server

The FTP Server is accessible via the Internet. If your company does not have an Internet account, check the other sources.

1. FTP to ftp.Compatible.COM and login as “anonymous.” Change the working directory to Compatible (cd Compatible). List the available directories (ls). Change the working directory to the appropriate directory (e.g. MicroRouter).
2. To transfer the files from the FTP, type “get” followed by the filename.
3. Disconnect from the FTP server.

❖ **Note:** *Uncompressed downloads (suitable for TFTP and RouterView Windows downloading) are stored as .dld files. Self-extracting Windows compatible style files (and RouterView for Windows itself) are stored as .exe files. Self extracting Macintosh style files are stored as .sea.bin and/or .sea.hqx files.*

❖ **Note:** *These files are also accessible via the World Wide Web at <http://www.compatible.com>*

## CompuServe

Compatible Systems maintains a software library in the LAN Vendors Forum of the CompuServe on-line service. To access the software library, follow these steps:

1. Type the **GO COMPATIBLE** command. This will place you in the LAN Vendors Forum.
2. Compatible Systems may be found in section 12 of this forum. Follow the instructions provided by CompuServe regarding downloading files.

### **Bulletin Board**

Compatible Systems administers a bulletin board that you can access using standard telecommunications software. The bulletin board supports modem settings of 8-N-1 and speeds up to 9600 Kbps. The BBS phone number is (303) 443-0845.

1. Type 'bbs' at the first login prompt.
2. Type "guest" at both the user and password query of the BBS login prompt. At any time after you login, you may type 'h' and receive a list of valid commands.
3. Once logged in, change to the files section of the BBS by using the 'F' command. Set the transfer protocol you wish to use (Zmodem is default) using the 'P' command.
4. Select the appropriate sub-board according to product and download the file(s) that you need via the 'd' command.

### **AppleTalk Remote Access Server**

You can reach our AppleTalk Remote Access (ARA) server at (303) 444-8769. You must have Apple's ARA software to access this server.

1. Log in to the server as a guest.
2. Choose the server named 'Compatible ARA Server' which is located in the "DemoNet Zone" zone.
3. Open the appropriate folder and simply drag the file onto your hard disk.

---

# Appendix E - Terms and Conditions

Compatible Systems Corporation (Compatible Systems) offers to sell only on the condition that Customer's acceptance is expressly limited to Compatible Systems' terms and conditions of sale. Compatible Systems' acceptance of any order from Customer is expressly made conditional on assent to these terms and conditions of sale unless otherwise specifically agreed to in writing by Compatible Systems. In the absence of such agreement, commencement of performance or delivery shall be for Customer's convenience only and shall not be construed as an acceptance of Compatible Systems' terms and conditions. If a contract is not earlier formed by mutual agreement in writing, Customer's acceptance of any goods or services shall be deemed acceptance of the terms and conditions stated herein.

**1. Warranty.** Compatible Systems warrants to the Customer and to all persons who purchase Products from the Customer during the Warranty terms ("subsequent purchasers"), that, for a period of three (3) years from the date (the "shipping date") on which Compatible Systems ships the Products to the Customer: (a) the Product meets, in all material respects, all specifications published by Compatible Systems for such Products as of the shipping date; (b) the Products are free from all material defects in materials and workmanship under normal use and service; and (c) that as a result of the purchase of the Products from Compatible Systems, the Customer will have good title to the Products, free and clear of all liens and encumbrances.

Compatible Systems' obligations pursuant to this Warranty, and the sole remedies of the Customer and of any subsequent purchaser, shall be limited to the repair or replacement, in Compatible Systems' sole discretion, of any of the Products that do not conform to this Warranty.

This Warranty shall be invalidated if the Products (a) have not been installed, handled, or used in accordance with Compatible Systems recommended procedures; (b) have been damaged through the negligence or abuse of the Customer or of any subsequent purchasers; (c) are damaged by causes external to the Products, including (without limitation) shipping damage, power or air conditioning failure, or accident or catastrophe of any

nature; and (d) have been subjected to repairs or attempted repairs by any person other than Compatible Systems (or an authorized Compatible Systems service technician).

To obtain service under this Warranty, the Customer (or subsequent purchaser, if applicable) must follow the procedures outlined below, under "Product Return Policy."

THE WARRANTIES SET FORTH IN THESE TERMS AND CONDITIONS ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. WITHOUT LIMITATION ON THE GENERALITY OF THE FOREGOING SENTENCE, COMPATIBLE SYSTEMS EXPRESSLY DISCLAIMS AND EXCLUDES ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS (GENERALLY OR FOR A PARTICULAR PURPOSE).

**2. Shipments.** All delivery indications are estimated and are dependent in part upon prompt receipt of all necessary information to service an order. Compatible Systems shall not be liable for any premium transportation or other costs or losses incurred by Customer as a result of Compatible Systems inability to deliver Product in accordance with Customer's requested delivery dates. All shipments by Compatible Systems are made F.O.B. factory (Boulder, Colorado); risk of loss shall pass to Customer at point of shipment. Unless specified by the Customer, Compatible Systems will select the mode of transportation for each order. Compatible Systems reserves the right to make deliveries in installments. Partial shipments are subject to the terms of payment noted below. Compatible Systems reserves the right to allocate inventory and production if such allocation becomes necessary.

**3. Payment Terms.** Payment shall be made prior to shipment or upon delivery, unless otherwise agreed to in writing. Payment shall not constitute acceptance of the goods.

**4. Force Majeure.** All orders accepted by Compatible Systems are subject to postponement or cancellation for any cause beyond the reasonable control of Compatible Systems, including without limitation: inability to obtain necessary materials and components; strikes, labor disturbances, and other unavailability of workers; fire, flood, and other acts of God; war, riot, civil insurrection, and other disturbances; production or engineering difficulties; and governmental regulations, orders, directives, and restrictions.

**5. Product Return Policy.** Prior to shipping any Product to Compatible Systems, the Customer must contact Compatible Systems Technical Support (by letter or telephone) with the following information: (a) reason for return; (b) quantity, description, and model number, and (if applicable) serial number of each item being returned; (c) original Compatible Systems Sales Agreement number; and (d) any special instructions. Upon receipt of this information, Compatible Systems will issue an RMA (“Return Material Authorization”) number and any required U.S. Customs identification to assure correct identification of the Customer and to insure prompt and accurate processing.

**6. Limitation of Remedies.** Compatible Systems’ liability for all claims brought pursuant to or in connection with this agreement, including the purported breach hereof, shall be limited: (a) in the case of claims for breach of warranty, to compliance with the repair or replacement provisions of the warranty, and (b) in all other cases (including any claim that the warranty failed of its essential purpose), to actual damages of the Customer (or, if appropriate, of the subsequent purchaser). **IN NO EVENT SHALL COMPATIBLE SYSTEMS BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING OUT OF THE SALE, USE, INSTALLATION OR OPERATION OF THE PRODUCTS, WHETHER A CLAIM IS BASED ON STRICT LIABILITY, BREACH OF WARRANTY, NEGLIGENCE, OR ANY OTHER CAUSE WHATSOEVER, WHETHER OR NOT SIMILAR.** This limitation on remedies shall apply even if Compatible Systems is advised of the possibility and nature of any special, consequential, or incidental damages.

**7. Governing Law; Merger.** This agreement and all Terms and Conditions hereof shall be governed by, and construed in accordance with the internal laws of the State of Colorado. Except as superseded by a separate written contract signed by both Compatible Systems and the Customer, superseding all prior negotiations or offers, written or oral, this agreement may be amended only in writing, signed by an authorized officer of Compatible Systems.

