



# Teledat Router 400

## Quick Start Guide

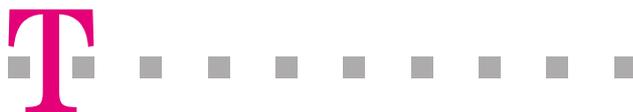

 Deutsche  
Telekom





## Preface

---

Congratulations on buying your new Teledat Router 400

You have purchased a state-of-the-art product from Deutsche Telekom that has undergone thorough quality checks.

However, should you encounter any technical problems or should you have any questions concerning the router installation, you may call the T-Service Hotline at 0180 5 34 68 68.

You can find updated drivers, User Manuals and additional product information on our web site **[www.telekom.de/faq](http://www.telekom.de/faq)**

This guide will help you set up your Teledat Router 400 with its default configuration for the first time. If you need information concerning user-specific configurations as well as enhanced features or troubleshooting, please read the supplied User's Manual.

The integrated firewall gives you maximum protection against online attacks without having to adjust numerous settings. The User's Manual will let advanced users personalize the firewall settings.

Prior to installing and operating your Teledat Router 400, please read the following safety instructions in order to avoid personal injuries or equipment damage.

### **Safety Instructions**

Please follow these instructions to avoid personal injuries:

- Never open or dismantle the unit
- Never touch the plugs and connectors with sharp or metal objects
- Never install the Teledat Router 400 during a thunderstorm
- To avoid electric shocks, do not connect or disconnect any cables
- Always install cables so that nobody can stumble over them.

Please follow these guidelines when installing, connecting or operating this equipment:

- Your router has a RESET button that lets you access the equipment if you have forgotten your password. **When pressing the RESET button any individual configuration settings including Internet access information will be lost, and the factory defaults will be loaded.** For more information about the RESET button please see page 11.
- Never operate the router in humid environments.
- Do not expose the device to heating sources and avoid direct sunlight.
- Protect the device from humidity, dust and corrosive liquids or damp
- Only connect the cables to their corresponding plugs/connectors (as described below).
- Never cover the ventilation holes of the router.
- Do not place any objects on the router.
- Only connect approved accessories to this device.
- Use a soft cloth that has been slightly dampened to clean the device. Always **turn off the router and unplug it from the electrical** outlet prior to cleaning it. Never use any corrosive or abrasive detergents or organic solvents.
- The Teledat Router 400 must only be repaired by authorized service personnel (T-Service) from Deutsche Telekom AG. In case of technical failure, please call the Telekom Service Hotline at 0180 534 6868 (12ct/min).
- Deutsche Telekom AG does not assume any responsibility for damage resulting from unauthorized or inappropriate use of the router.

## Introduction

---

### **About Your Teledat Router 400 Internet Security Gateway**

Your Teledat Router 400 is a broadband gateway, specifically designed for multiple computers to quickly and easily access the Internet via DSL modem. It is possible to connect up to 4 computers with a standard network cable to your Teledat Router 400 or to connect the router to a switch/hub for connecting more workstations. For more information, please see page 10.

Each computer must have a 10 or 100 Mbps Ethernet network adapter installed (see page 10 and 12)

### **The main features of the Teledat Router 400 are:**

- Robust Firewall
  - NAT (SUA)
  - Stateful Inspection, protection against Denial-of-Service attacks (DoS)
- 4-port switch (10/100 Mbps auto-detect)
- Budget Management (connection time and transfer volume)
- Easy installation
- Web-based configuration program in German language
- OS-independent

## Packaging List

---

---

**INFO! Please keep the packing materials for your Teledat Router 400 in case you have to send it back in the future.**

---

The following items come with your Teledat Router 400:

- This Quick Guide (German/English)
- One 5 Volt DC power adapter
- One straight-through Ethernet cable
- One printed User's Guide

---

**WARNING!**

**Only use the supplied 5 Volt power adapter. Operating the unit with another power adapter might damage your device.**

---

## Hardware Installation



### The Front Panel

The LEDs on the front panel show the operational status of the Teledat Router 400.



### Description of LEDs

---

LED	COLOR	STATUS	DESCRIPTION
-----	-------	--------	-------------

---

Power	Green	On	The Teledat Router 400 is receiving power.
		Flashing	The Teledat Router 400 is performing a self-test.
		Off	The Teledat Router 400 is not receiving power.

---

WAN	Green	On	The WAN link is connected and is up and running.
		Flashing	The 10M WAN link is sending/receiving data.
		Off	The WAN link is not ready or has failed.

---

Online	Green	On	PPPoE connection is up and running.
		Off	No PPPoE connection present.

---

LAN 1,2,3,4	Green	On	The Teledat Router 400 is connected to a 10M LAN.
		Flashing	The 10M LAN is sending/receiving packets.
		Off	The 10M LAN is not connected.


---

	Orange	On	The Teledat Router 400 is connected to a 100M LAN.
		Flashing	The 100M LAN is sending/receiving packets.
		Off	The 100M LAN is not connected.

---

### Rear Panel and Connections

Please connect cables in the following order and make sure that all devices are turned off prior to installing them.

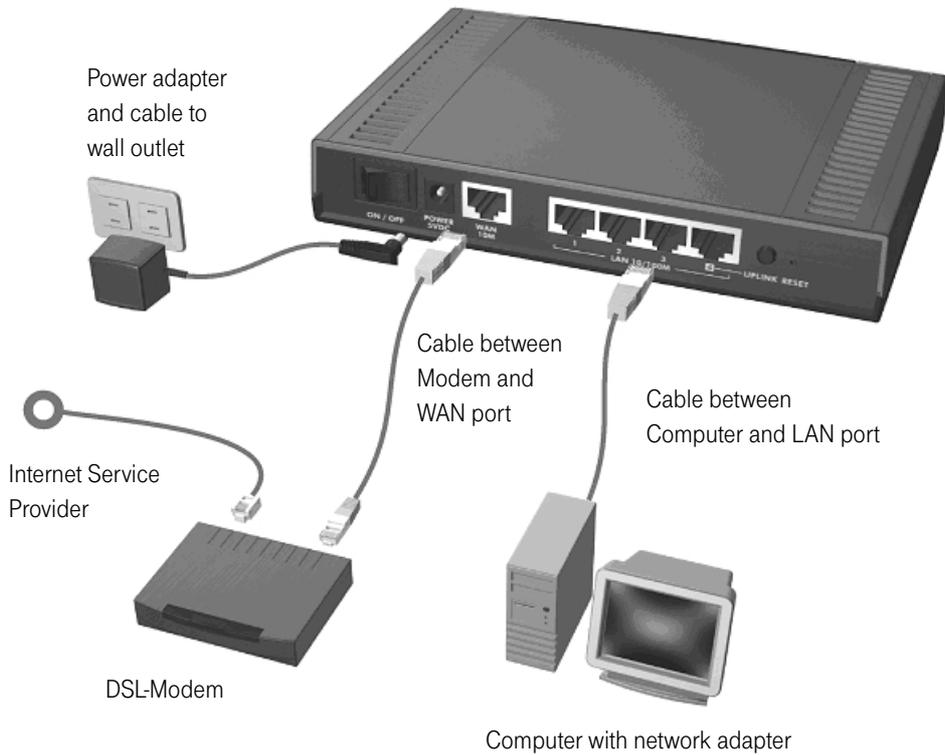

### WAN 10M Port

First connect the WAN port (**Wide Area Network**) of your Teledat Router 400 to your DSL modem's Ethernet port (normally labeled "10BT", "PC" or "Workstation"), using the cable supplied with your modem.

### LAN 10/100M Ports

Next, connect the router to your PC's network adapter. Please remember to turn off your PC first.

This table lists the types of Ethernet cable to use for connecting directly to a computer or to an external hub or switch (if connecting more than four computers).

LAN 10/100M PORT	ETHERNET CABLE TYPE	
	COMPUTER	HUB/SWITCH
1, 2, 3	straight-through	crossover
4 UPLINK button "on" (pushed in)	straight-through	crossover
4 UPLINK button "off" (out)	crossover	straight-through

**The corresponding LAN LED on the front panel lights up when the Teledat Router 400 is on and properly connected to a computer or a hub.**

**Power inlet 5 Volts DC/2.4A**

**WARNING! Only use the supplied power adapter.**

Connect the round end of the power adapter to the port labeled **5VDC/2.4A** on the rear panel of your Teledat Router 400.

**Additional Installation Requirements**

1. A computer with an installed Ethernet NIC (Network Interface Card).
2. A DSL modem and an Internet account

### **Turning on Your Teledat Router 400, PC and DSL Modem**

Connect the power adapter cable to a suitable wall outlet and turn the power switch of your Teledat Router 400 on. The **Power** LED turns on. The **WAN** and the **LAN LED(s)** turn on after the system tests are complete, if the WAN and LAN ports are properly connected.

### **RESET Button**

If you have forgotten your password or cannot establish a connection to your Teledat Router 400 you must press the **RESET** button on the rear panel. The router's factory default settings (ROM file) will be restored. This means that the current configuration will be overwritten by the default settings. Any individual settings including your Internet access information will be lost. The Password resets to "1234" and the IP address resets to 192.168.1.1.

### **Using the RESET Button**

1. Use a pointed object to press the **RESET** button for at least 10 seconds (the SYS LED flashes from green to orange), then release it.
2. If the LAN LED flashes for 30 seconds, the factory defaults have been loaded successfully and the router re-initializes. Otherwise, go to step 3.
3. Turn the Teledat Router 400 off.
4. While pressing the **RESET** button, turn the Teledat Router 400 on.
5. Continue to hold the **RESET** button for about 30 seconds. The Teledat Router 400 restarts.
6. Release the **RESET** button and wait about ten seconds for the Teledat Router 400 to finish restarting.

## Preparing Your Network

---

All computers must have a 10M or 100M Ethernet adapter card and TCP/IP installed. TCP/IP should already be installed on computers using Windows NT/2000/XP, Macintosh OS 7 and later operating systems.

Windows 95/98/Me/NT/2000/XP, Macintosh OS 7 and later operating systems and all versions of UNIX/LINUX include the software components you need to install and use TCP/IP on your computer. Windows 3.1 requires the purchase of a third-party TCP/IP application package.

After the appropriate TCP/IP components are installed, configure the TCP/IP settings in order to "communicate" with your network.

The Teledat Router 400 assigns these factory default values if you configure TCP/IP using DHCP:

- IP address: between 192.168.1.33 and 192.168.1.64
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1 (the Teledat Router 400)

---

**These procedures are for dynamic IP addresses. Do not assign an arbitrary IP address or subnet mask to your computer. If you do, you will not be able to access the Internet.**

---

### Setting up Your Windows 95/98/Me Computer

#### Installing TCP/IP Components

1. Click **Start, Settings, Control Panel** and double-click the **Network** icon.
2. The **Network** window **Configuration** tab displays a list of installed components.

#### **To install TCP/IP:**

- a. In the **Network** window, click **Add**.
- b. Select **Protocol** and then click **Add**.
- c. Select **Microsoft** from the list of manufacturers.
- d. Select **TCP/IP** from the list of network protocols and then click **OK**.

#### **Configuring TCP/IP**

1. In the **Network** window **Configuration** tab, select your network adapter's **TCP/IP** entry and click **Properties**.
2. Click the **IP Address** tab. Click **Obtain an IP address automatically**.
3. Click the **DNS Configuration** tab. Select **Disable DNS**.
4. Click the **Gateway** tab. Highlight any installed gateways and click **Remove** until there are none listed.
5. Click **OK** to save and close the **TCP/IP Properties** window.
6. Click **OK** to close the **Network** window.
7. Turn on your Teledat Router 400 and restart your computer (if prompted).  
Insert the Windows CD if prompted.

#### **Verifying TCP/IP Properties**

1. Click **Start** and then **Run**. In the **Run** window, type "winipcfg" and then click **OK** to open the **IP Configuration** window.
2. Select your network adapter. You should see your computer's IP address, subnet mask and default gateway.

### **Setting up Your Windows NT/2000/XP Computer**

#### **Configuring TCP/IP**

1. Click **Start, Settings, Network and Dial-up Connections** and right-click **Local Area Connection** or the connection you want to configure and click **Properties**. For Windows XP, click **Start, Control Panel, Network and Internet Connections** and then **Network Connections**. Right-click the network connection you want to configure and then click **Properties**.

2. Select **Internet Protocol (TCP/IP)** (under the **General** tab in Win XP) and click **Properties**.
3. The **Internet Protocol TCP/IP Properties** window opens. Click **Obtain an IP address automatically**.
4. Click **Obtain DNS server automatically**.
5. Click **Advanced, IP Settings** tab and remove any installed gateways, then click **OK**.
6. Click **OK** to save and close the **Internet Protocol (TCP/IP) Properties** window.
7. Click **OK** to close the **Local Area Connection Properties** window.
8. Turn on your Teledat Router 400 and restart your computer (if prompted).

#### **Verifying TCP/IP Properties**

1. Click **Start, Programs, Accessories** and then **Command Prompt**.
2. In the **Command Prompt** window, type "ipconfig" and then press **ENTER**. The window displays information about your IP address, subnet mask and default gateway.

## **Setting up Your Macintosh Computer**

#### **Configuring TCP/IP Properties**

1. Click the **Apple menu, Control Panel** and double-click **TCP/IP** to open the **TCP/IP Control Panel**.
2. Select **Ethernet** from the **Connect via** list.
3. Select **Using DHCP Server** from the **Configure** list.
4. Close the **TCP/IP Control Panel**.
5. Click **Save** if prompted, to save changes to your configuration.
6. Turn on your Teledat Router 400 and restart your computer (if prompted).

#### **Verifying TCP/IP Properties**

Check your TCP/IP properties in the **TCP/IP Control Panel**.

## Checklist

---

Your ISP (Internet Service Provider) should have given you most of the following information. You do not need to fill in every blank. Use this checklist to complete the Wizard Setup discussed later.

<b>FIELD</b>	<b>DESCRIPTION</b>	<b>NOTE</b>
Encapsulation	Ethernet, PPPoE, or PPTP.	Default set to PPPoE
Benutzername (User Name)	The user name assigned by your ISP. (See example on page 19)	Mandatory for PPPoE access
Kennwort (Password)	Type the password associated with the user name above. (See example on page 19)	Mandatory for PPPoE access
Zeitüberlauf (Idle Timeout)	The time in seconds that elapses before the router automatically disconnects from the PPPoE server.	Default set to 45 sec.

---

**INFO! You should already have the above information if you have successfully set up your Internet connection.**

---


## Using the Web Configurator



### Web Configurator Login

The web configurator provides user-friendly setup for your Teledat Router 400.

1. Launch your web browser and enter 192.168.1.1 as the URL. The welcome screen appears. The upper part of this screen displays budget information. The lower part of the screen lets you enter your password.
2. Enter "1234" (default) as the password and click **Anmelden** (Login).

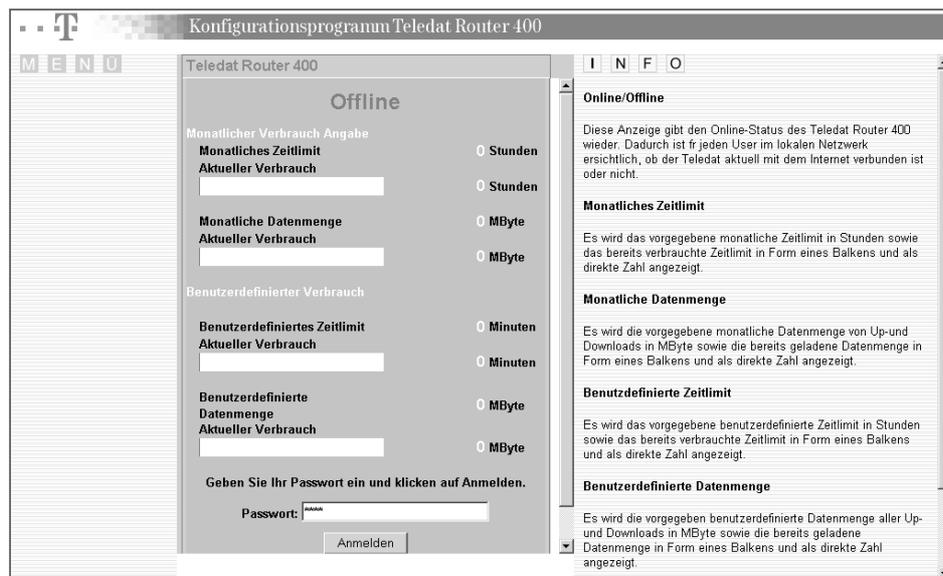

3. After entering the password for the first time, a message appears prompting you to change the password (**highly recommended**). Either enter a new password (and retype it to confirm) and click **Übernehmen** (Login) or click **Abbrechen** (Ignore). If you forget your password, refer to the previous RESET Button section to see how to reset the default configuration file.



The screenshot shows the 'Konfigurationsprogramm Teledat Router 400' interface. It features a 'M E N U' sidebar on the left and an 'I N F O' sidebar on the right. The main content area is titled 'Teledat Router 400' and contains the following text: 'Bitte ändern Sie das Systempasswort und klicken auf Übernehmen.' Below this, there are two input fields: 'Neues Passwort:' and 'Bestätigung:'. At the bottom of the main area are two buttons: 'Übernehmen' and 'Abbrechen'. The 'INFO' sidebar contains the heading 'Passwort ändern' and the text: 'Es wird dringend empfohlen, das Standardpasswort durch ein neues, persönliche Passwort zu ändern. Geben Sie Ihr neues Passwort zur Bestätigung ein und übernehmen dies.'

You are now in the web configurator. Follow the directions in the main menu to browse through the different screens, or open the HTML online help found on the right.

Click **Einrichtungsassistent** (Wizard Setup) for initial configuration.

Click **Erweitert** (Advanced) for further configuration and setting up advanced features.

Click **Wartung** (Maintenance) to view information about your Teledat Router 400 or upgrade configuration or firmware files.

Click **Abmelden** (Logout) at any time to exit the web configurator and finally go back to welcome screen.

---

**INFO! The "Password" field does not refer to your online (Internet access) password but a custom password that will allow you access the Web Configurator.**

---



## Basic Configuration with Wizard Setup

---

You can use the Wizard Setup screens to configure your system for Internet access.

### ISP Parameters for Internet Access

Depending on the encapsulation method you choose, the screen may look different. Complete the fields to setup your ISP account.

---

Encapsulation: Choose an encapsulation method from the drop-down list box. PPPoE forms a dial-up connection (PPPoE is the usual encapsulation in the German net).

---

Benutzername: Type the user name given to you by your ISP.  
(User Name) **Example for T-Online: 111111111111222222222222#0001@t-online.de**  
where "111111111111" designates the connection ID.  
"222222222222" designates the T-Online number.  
The "#" character is a separator that follows the first 24 characters.  
The figures "0001" designate the first co-user.


---

Kennwort: Type the password associated with the user name above.  
(Password)

---

Trennen nach: Type the time in seconds that elapses before the router automatically  
(Idle Timeout) disconnects from the PPPoE server.


---

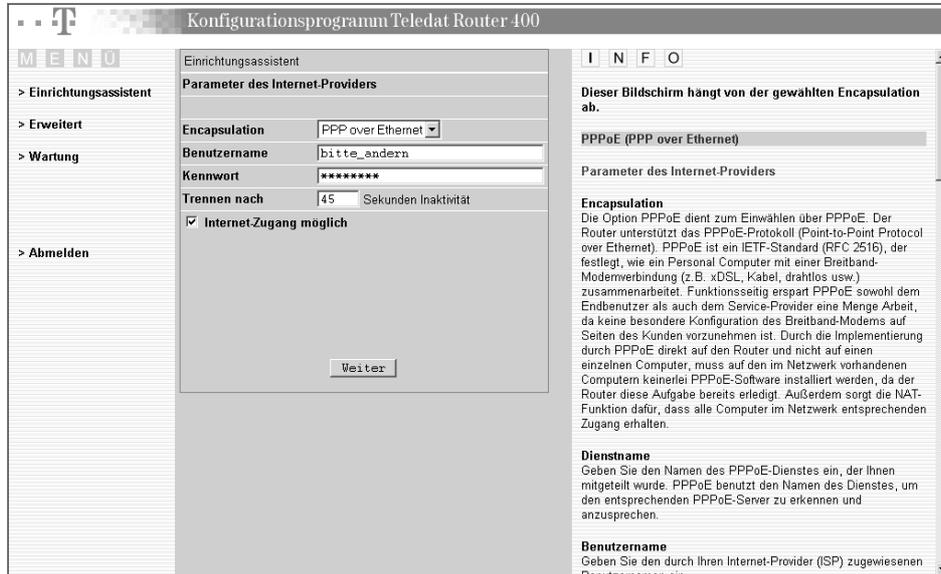

Click **Beenden** (Finish) to exit the Einrichtungsassistent (Wizard Setup) screen.

### **Wizard Setup Complete**

You have successfully set up the Teledat Router 400 to operate on your network and access the Internet.

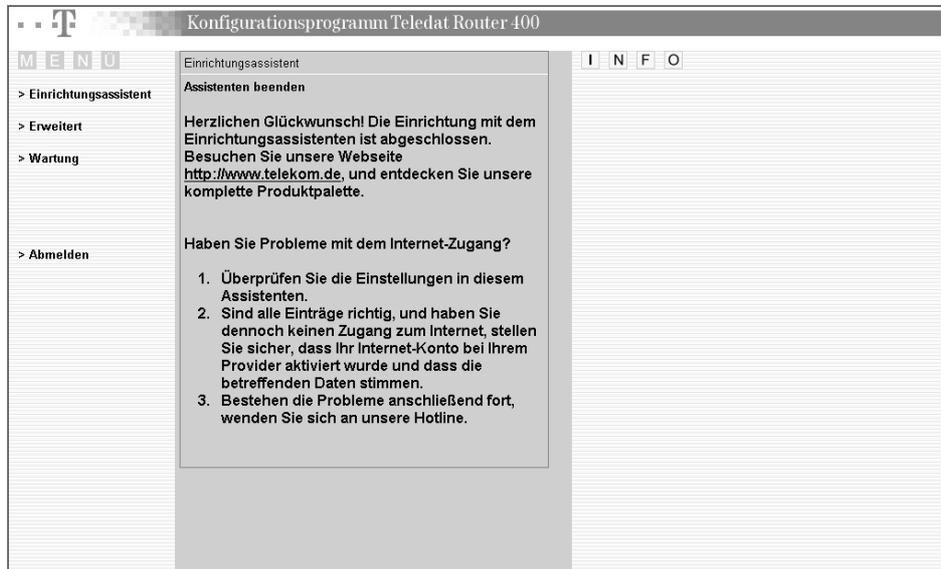


Final Notes:


---

**WARNING** As long as your computer remains powered on, different applications may request data packets (e.g. an E-Mail program retrieving new e-mails every 15 minutes). This may lead to online connection charges.

---

  For more information about specific configurations please read the Teledat Router 400 User's Guide.





Published by:  
Deutsche Telekom AG

Subject to change

Version: October 2002