


- DSL-520T/DSL-2540T broadband router is easy to used and install. This Setup Guide will provide you the detail instructions on how to setup DSL-520T/DSL-2540T for Streamyx connection.
- The following steps of this documents will guide your through the setup using Setup Utility (Zero Configurations)
- Please understand all prerequisites of the setup before you proceed with the setup.
- Please prepare all necessary information (i.e. Streamyx account information), equipment on hand before beginning the installation



#### **Prerequisites**

#### **Check Your Package Contents**

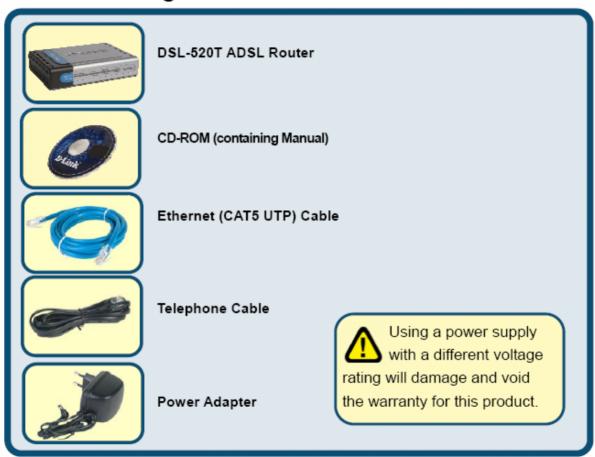


**Pic 1.** 

If any of the items above are missing, please contact your reseller.



#### **Rear Panel Display**

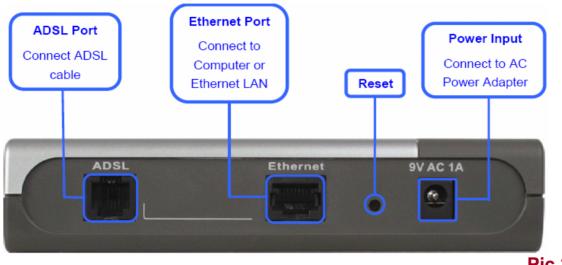


Pic 2.

- Power Input: to Power up DSL-520T/DSL-2540T
- Ethernet Port : to Connects UTP cable (RJ-45) from DSL-520T/DSL-2540T's Ethernet port to your PC.
- ADSL Port: to Connects Telephone cable (RJ-11) from your direct line to DSL-520T/DSL-2540T ADSL port.
- \* You may reset DSL-520T/DSL-2540T to original setting by pressing the reset button for 10 seconds then release while power on.



#### **Front Panel Display**

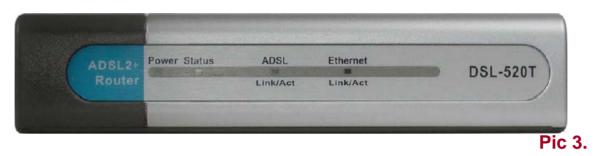

The LED indicators on the front panel includes Power, Status, ADSL and Ethernet.

Power	Steady green light indicates the unit is powered on. When the device is powered off this remains dark.
Status	Lights steady green during power on self-test (POST). Once the connection status has been settled, the light will blink green. If the indicator lights steady green after the POST, the system has failed and the device should be rebooted.
ADSL: Link/Act	Steady green light indicates a valid ADSL connection. This will light after the ADSL negotiation process has been settled. A blinking green light indicates activity on the WAN (ADSL) interface.
Ethernet: Link/Act	A solid green light indicates a valid link on startup. This light will blink when there is activity currently passing through the Ethernet port.

Table 1.














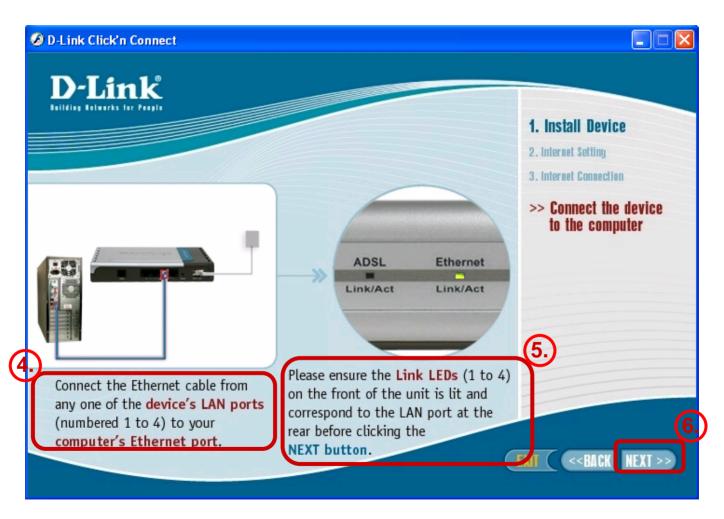




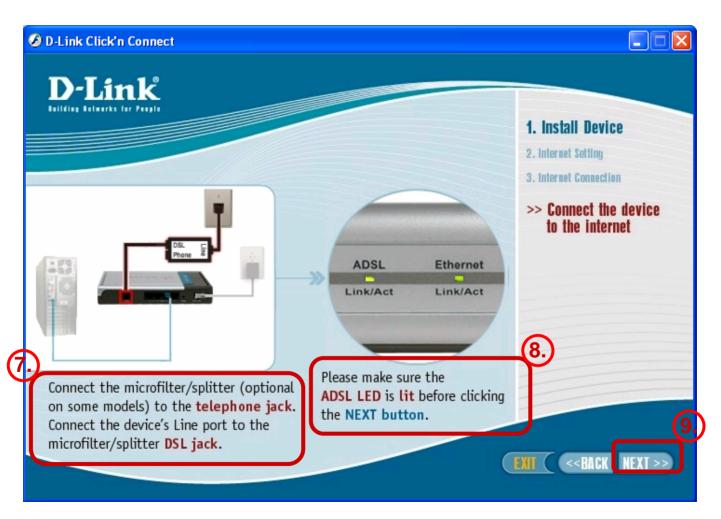




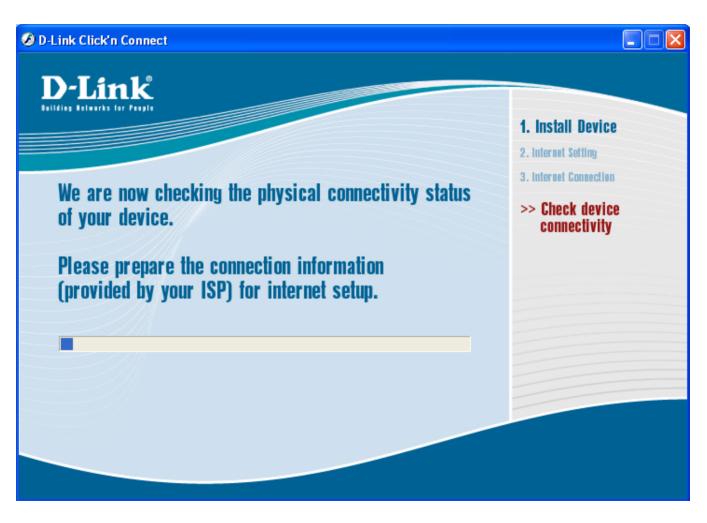




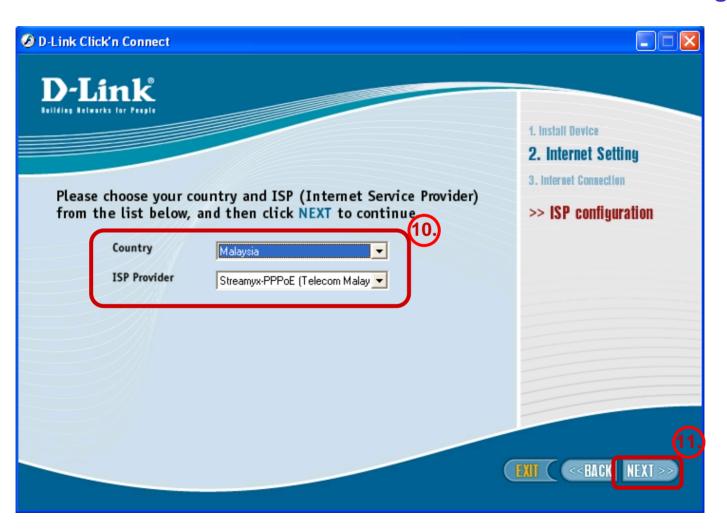




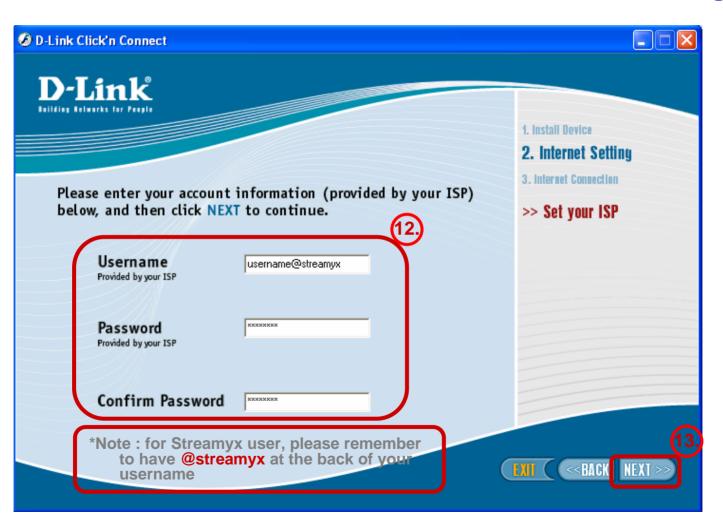



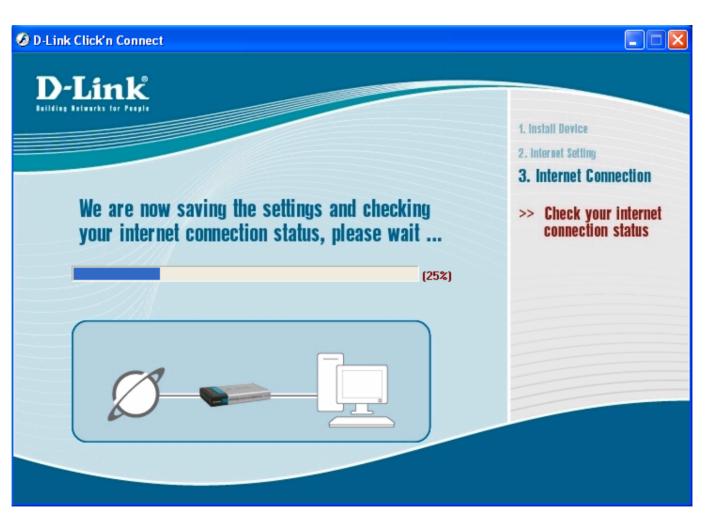



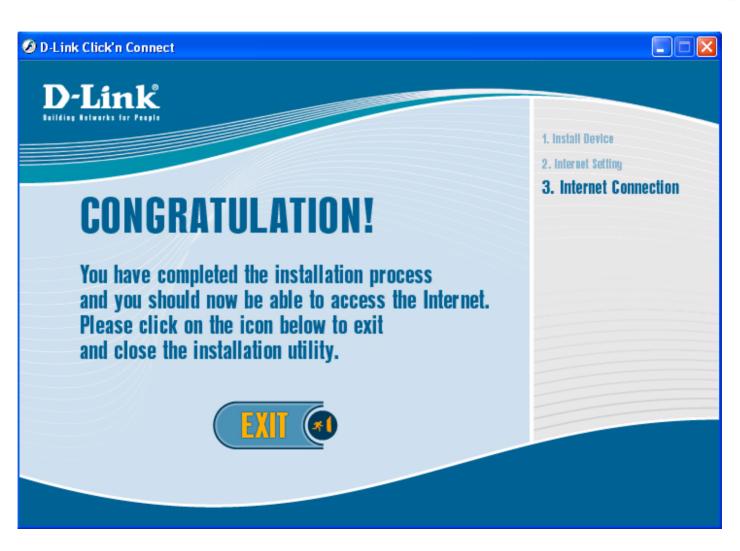



### **Technical Support**

You can find this user documentation on D-Link Web-Site www.dlink-intl.com

Or contact Toll-Free Technical Hotline 1800-88-2880

Phone: (+603) 6201 2881 Fax: (+603) 6201 4882 Address: D-03A-09, Block D, Plaza Mont' Kiara,

No 2 Jalan Kiara, Mon't Kiara 50480 Kuala Lumpur Malaysia http://www.dlink.com.my



# D-Link<sup>®</sup>