Gateway.



User Guide

Gateway M675 Notebook

Contents

1	Getting Help	1
	Gateway Web site	
	Help and Support	
	Searching for a topic	
	Using Your Computer guide	
	Online help	. 7
2	Checking Out Your Gateway Notebook	9
	Front	
	Left Side	
	Right Side	. 15
	Back	
	Bottom	
	Keyboard area	
	Identifying your model	
	Gateway model and serial number	
	Gateway serial number	
	Microsoft Certificate of Authenticity	
	Finding your specifications	
	Accessories	
3	Getting Started	. 27
	Connecting the AC adapter	28
	Protecting from power source problems	
	Starting your notebook	
	Waking up your notebook	
	Turning off your notebook	
	Restarting (rebooting) your notebook	
	Status indicators	
	Using the keyboard Key types	
	System key combinations	
	Multi-function buttons	
	Using the audio controls	
	Using the EZ Pad touchpad	
	Using the touchpad	

	Configuring the audio jacks	46
4	Using Drives and Ports	51
	Changing modules	
	Using the CD or DVD drive	
	Identifying drive types	
	Playing a CD	
	Playing a DVD	
	Creating CDs and DVDs	
	Using the optional diskette drive	
	Using the optional memory card reader	
	Memory card types	
	Using a memory card	
	Adding and removing a PC Card	
	Viewing the display on a projector or monitor	
	Viewing the display on a television	
5	Managing Power	71
	Monitoring the battery charge	72
	Recharging the battery	73
	Recalibrating the battery	
	Changing batteries	75
	Replacing the battery	
	Extending battery life	
	Using alternate power sources	
	Changing power modes	
6	Upgrading Your Notebook	81
	Preventing static electricity discharge	
	Adding or replacing memory	
	Replacing the hard drive kit	
7	Using the Optional Port Replicator	04
	Osing the Optional Fort Replicator	91
	Front	
	·	92 93

	Attaching to the port replicator	
	Disconnecting from the port replicator	
	Securing your port replicator	99
8	Maintaining Your Notebook	. 101
	Caring for your notebook	102
	Cleaning your notebook	
	Cleaning the exterior	
	Cleaning the keyboard	
	Cleaning the notebook screen	
	Cleaning CDs or DVDs	
	Protecting your notebook from viruses	
	Updating Windows	
	Restoring your system	
	The second secon	
9	Troubleshooting	. 109
	Safety guidelines	. 110
	First steps	. 111
	Troubleshooting	. 112
	Audio	. 112
	Battery	
	CD drives	
	Device installation	
	Diskette drive	
	Display	
	DVD drives	
	File management	
	Hard drive	
	Internet	
	Keyboard	
	Memory	
	Memory card reader	
	Modem (dial-up)	
	Mouse	
	Networks	
	Passwords	
	PC Cards	
	Power	
	Printer	
	Sound	
	Touchpad	
	Video	. 131

lne	dex	147
Α	Safety, Regulatory, and Legal Information	135
	Telephone numbers	
	Before calling Gateway Customer Care	
	Telephone support	132

Chapter 1

Getting Help



- Using the Gateway Web site
- Using Help and Support
- Using Your Computer guide
- Using online help

Thank you for purchasing our notebook!

You have made an excellent decision choosing Gateway. We are sure that you will be pleased with the outstanding quality, reliability, and performance of your new notebook. Each and every Gateway notebook uses the latest technology and passes through the most stringent quality control tests to ensure that you are provided with the best product possible.

Your new Gateway notebook is designed to provide an exceptional balance of performance and portability. Your notebook uses the latest chipset and mobile processor technologies to manage the processor speed and power consumption for a greater battery life experience. This design provides you with maximum performance when plugged into AC power balanced with optimized battery life when on battery power.

Please read this manual carefully to familiarize yourself with our range of services and support. We have highlighted some basic care and safety information to help you keep your notebook in good operating condition.

Gateway stands behind our value proposition to our customers — to provide best-of-class service and support in addition to high-quality, brand-name components at affordable prices. If you ever have a problem, our knowledgeable, dedicated customer service department will provide you with fast, considerate service.

We sincerely hope that you will receive the utmost satisfaction and enjoyment from your new Gateway notebook for years to come.

Thank you again, from all of us at Gateway.

Gateway Web site

Gateway's online support is available 24 hours per day, 7 days per week and provides the most current drivers, product specifications, tutorials, and personalized information about your notebook. Visit the Gateway eSupport Web site at support.gateway.com.



Using eSupport

The eSupport site is divided into five major areas:

- Support Home
- Product Support
- Downloads
- Contact Us
- PC Tools

Support Home

Click **Support Home**, then click **All Support Documents** to access product documentation, specifications, and guides. You can also browse through the reference area to locate an article specific to the question you have.

Click **Support Home**, then click **General Tutorials** to access an extensive library of how-to articles and videos on topics, such as making audio CDs and installing a hard drive.

Product Support

Click **Product Support** to view a list of all the products that Gateway supports.

Downloads

Click **Downloads**, then click **My Downloads** to get the latest software updates for BIOS and driver upgrades. By entering your serial number you get drivers specific to your notebook. Click **All Downloads** to walk through a step-by-step wizard to locate your drivers.

Contact Us

Click **Contact Us** to access links to customer care with a live technician, including chat and e-mail. Click **Call Us** to get a list of Gateway telephone numbers for both sales and support. For more information, see "Telephone support" on page 132.

PC Tools


Click **PC Tools** to access utilities to help you manage your notebook.

Help and Support

Your notebook includes *Help and Support*, an easily accessible collection of help information, troubleshooters, and automated support. Use Help and Support to answer questions about Windows and to help you quickly discover and use the many features of your Gateway notebook.

To start Help and Support:

■ Click **Start**, then click **Help and Support**. Help and Support opens.

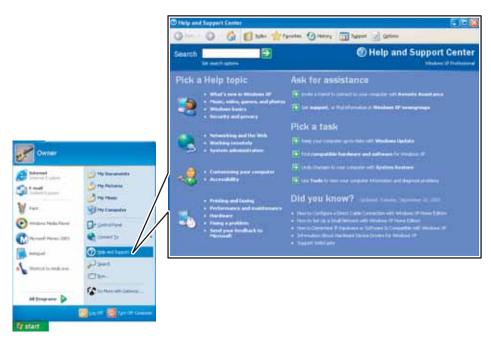



You can find help information by clicking a link, performing a search, or browsing the index.

Searching for a topic

To search for a topic in Help and Support, type a word or phrase (keyword) in the **Search** box located at the top of any Help and Support screen, then click the arrow button.

For each search, you receive the following search result types:

- Suggested Topics These topics are located in Help and Support and are relevant to your search topic.
- Full-text Search Matches These topics are located in Help and Support and contain the words you entered in the **Search** box.
- Microsoft Knowledge Base These topics are located on the Microsoft Web site and contain the words you entered in the **Search** box. You must be connected to the Internet to search for and access these topics.

To view a list of your search results, click the results header for the type of results you want to view.

To view a topic, click the topic name in the Search Results list.

Using Your Computer guide

In addition to this guide, the *Using Your Computer* guide has been included on your hard drive. This guide includes information on using Windows, using the Internet, sending a fax, and changing power-saving settings as well as other topics.



■ Click Start, All Programs, then click Gateway Documentation.



Online help

Many programs provide information online so you can research a topic or learn how to perform a task while you are using the program. You can access most online help information by selecting a topic from a **Help** menu or by clicking a **Help** button.



You can search for information by viewing the help contents, checking the index, searching for a topic or keyword, or browsing through the online help.




Chapter 2

Checking Out Your Gateway Notebook




- Identifying features
- Locating your notebook's model and serial number
- Locating the Microsoft Certificate of Authenticity
- Locating the specifications for your notebook
- Purchasing accessories

Front

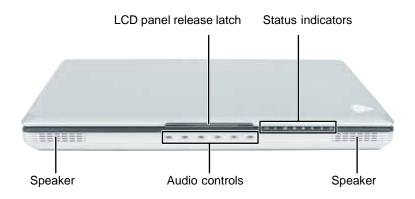

Component	Description
LCD panel release latch	Open the LCD panel by pressing the release latch.
Status indicators	Inform you of the power status, when a drive is being used, or when a button has been pressed that affects how the keyboard is used. For more information, see "Status indicators" on page 34.
Speakers	Provide audio output when headphones or amplified speakers are not plugged into the notebook or port replicator.
Audio controls	The volume buttons control the volume level of the built-in speakers or headphones plugged into the notebook or port replicator headphone jack. The play/pause, back, next, and stop buttons may control multimedia programs such as Windows Media Player, Windows CD Player, MusicMatch, and the DVD Player. For more information, see "Using the audio controls" on page 41.

Left Side

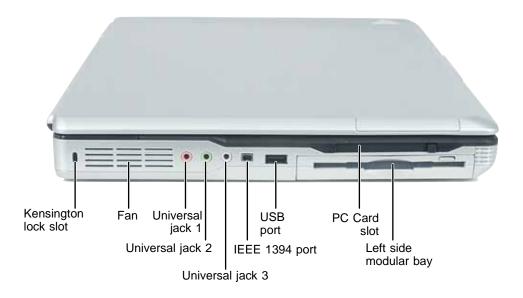

Component	Icon	Description
Kensington™ lock slot	K	Secure your notebook to an object by connecting a Kensington cable lock to this slot.
Ventilation fan		Helps cool internal components. Do not block or insert objects into these slots.


Component	Icon	Description
Universal jack 1 (pink plug)	Jan	This jack is user configurable for one of the following:
		 Microphone: a microphone can be plugged into this jack (Default) Important: A microphone can only be plugged into this jack or universal jack 2 on the port replicator. Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right, Center/Subwoofer, and Surround Left/Right For information on configuring this jack, see "Configuring the audio jacks" on page 46.

Component	Icon	Description
Universal jack 2 (green plug)		This jack is user configurable for one of the following:
	• •	* Headphone: headphones or amplified speakers can be plugged into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack. (Default) Important: A headphone can only be plugged into this jack or universal jack 3 on the port replicator.
		 Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device.
		Important: Stereo out can be configured as Stereo Left/Right, Center/Subwoofer, and Surround Left/Right
		For information on configuring this jack, see "Configuring the audio jacks" on page 46.

Component	Icon	Description
Universal jack 3 (gray plug)	(∫000	This jack is user configurable for one of the following: Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right (Default), Center/Subwoofer, and Surround Left/Right S/PDIF in: a digital audio cable can be plugged into this jack for S/PDIF in
		 S/PDIF out: a digital audio cable can be plugged into this jack for S/PDIF out For information on configuring this jack, see "Configuring the audio jacks" on page 46.
IEEE 1394 port	Pl'	Plug an IEEE 1394 (also known as Firewire [®] or i.Link [®]) device (such as a digital camcorder, lomega [™] Zip [™] drive, or MP3 player) into this 4-pin IEEE 1394 port.
USB port		Plug USB (Universal Serial Bus) devices (such as a diskette drive, flash drive, lomega [™] Zip [™] drive, printer, scanner, camera, keyboard, or mouse) into this port.
PC Card slot		Insert one Type II PC Card into this slot. For more information, see "Adding and removing a PC Card" on page 63.

Component	lcon	Description
Left-side modular bay		Use this bay for a diskette drive, a memory card reader, or a second hard drive. For more information, see "Changing modules" on page 52, "Using the optional diskette drive" on page 58, and "Using the optional memory card reader" on page 59.
		Important: Your notebook may have come with a diskette drive module, a memory card reader module, a second hard drive module, or any combination of these modules. To order a different module, contact Gateway.


Right Side

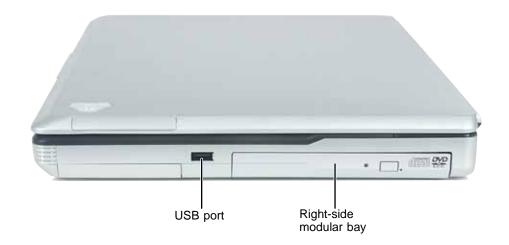

Component	Icon	Description
USB port	● ~	Plug USB (Universal Serial Bus) devices (such as a diskette drive, flash drive, lomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into this port.

Component	Icon	Description
Right-side modular bay		Use this bay for a CD, DVD, combination DVD/CD-RW drive, recordable DVD drive, or a second hard drive. For more information, see "Changing modules" on page 52.
		To determine the type of drive in the modular bay, examine the drive tray's plastic cover and compare the logo to those listed in "Identifying drive types" on page 54.
		Important: Your notebook may have come with an optical drive module (such as a CD or DVD drive), a second hard drive module, or any combination of these modules. To order a different module, contact Gateway.


Back

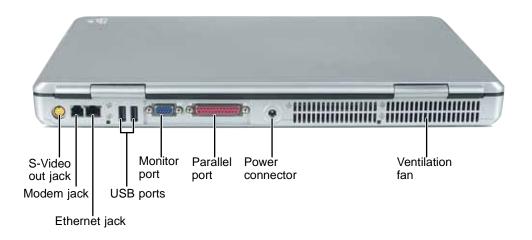

Component	Icon	Description
S-Video out jack	□	Plug a standard S-Video cable into this jack and the jack on an S-Video device (such as a television or VCR). For more information, see "Viewing the display on a television" on page 67.
Modem jack		Plug a modem cable into this jack.

Component	Icon	Description
Ethernet jack	器	Plug a 10/100/1000 Ethernet network cable into this jack.
USB ports		Plug USB (Universal Serial Bus) devices (such as a diskette drive, flash drive, Iomega [™] Zip [™] drive, printer, scanner, camera, keyboard, or mouse) into these ports.
Monitor port		Plug an analog VGA monitor or projector into this port. For more information, see "Viewing the display on a projector or monitor" on page 65.
Parallel port		Plug a parallel device (such as a printer) into this port.
Power connector	===	Plug the AC adapter cable into this connector.
Ventilation fan		Helps cool internal components. Do not block or insert objects into these slots.

Bottom

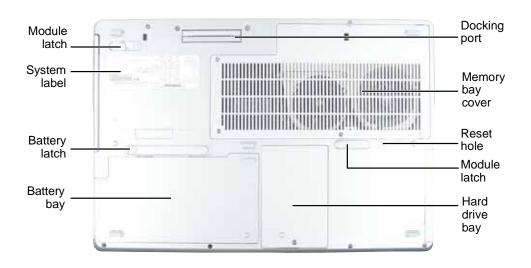

Component	Icon	Description
Module latch		Slide to release the module For more information, see "Changing modules" on page 52.
System label		Includes the product model number. For more information, see "Identifying your model" on page 21.
Battery latch	1 +	Slide to release the battery.
Battery bay	1 +	Insert the battery into this bay. For more information, see "Changing batteries" on page 75.
Docking port		Connect the port replicator to this port. Warning! Power is passed through this port. This docking connection is certified to UL 1950 for use only with port replicators designed for your Gateway notebook.
Memory bay cover		Open this cover to install a memory module. For more information, see "Adding or replacing memory" on page 83.
Reset hole	\circlearrowleft	Insert a straightened paper clip into this hole to manually restart the notebook.

Component	Icon	Description
Module latch		Slide to release the module For more information, see "Changing modules" on page 52.
Hard drive bay		The hard drive is located in this bay. For more information, see "Replacing the hard drive kit" on page 86.

Keyboard area

For information on using your keyboard, see "Using the keyboard" on page 36.



Component	Icon	Description
Power button	Ф	Press to turn the power on or off. You can also configure the power button for Standby/Resume mode. For more information see "Starting your notebook" on page 31.
Keyboard		Provides all the features of a full-sized computer keyboard. For more information, see "Using the keyboard" on page 36.

Chapter 2: Checking Out Your Gateway Notebook

Component	Icon	Description
Touchpad		Provides all the functionality of a mouse. For more information, see "Using the EZ Pad touchpad" on page 42.
Numeric keypad		Provides all the features of a full-sized 21-key numeric keypad.
Multi-function buttons		Press these buttons to open programs assigned to them. These buttons are set to open your default e-mail program, your default Web browser, online help, and the <i>My Computer</i> window. For more information, see "Multi-function buttons" on page 40.
		Press the wireless network button to turn the wireless network on or off.

Identifying your model


Important



The labels shown in this section are for informational purposes only. Label information varies by model, features ordered, and location.

Gateway model and serial number

The label on the bottom of your notebook contains information that identifies your notebook model and its features. Gateway Technical Support will need this information if you call for assistance.

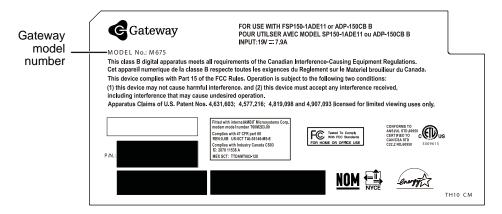

Gateway serial number

You can locate the Gateway serial number:

- Printed on a white sticker on the bottom or back of your notebook.
- Printed on the customer invoice that came with your notebook. The invoice also contains your customer ID number.

Internal wireless label

A label similar to the following indicates your notebook contains a wireless communications device. The label is located on the bottom of your notebook.



Microsoft Certificate of Authenticity

The Microsoft Certificate of Authenticity label found on the bottom of your notebook includes the product key code for your operating system.



Finding your specifications

For more information about your notebook, such as memory size, memory type, and hard drive size, visit Gateway's *eSupport* page at <u>support.gateway.com</u>. The *eSupport* page also has links to additional Gateway documentation and detailed specifications. For more information, see "Using eSupport" on page 4.



Accessories

To order accessories, visit the Accessory Store at <u>accessories.gateway.com</u>.

Batteries

If you run your notebook on battery power for extended periods, you may want to buy an additional battery so you can swap batteries when necessary. See "Changing batteries" on page 75 for more information about using an additional battery.

Carrying cases

Gateway has large-capacity carrying cases if you need additional space for accessories or supplies.

Memory

Large programs, such as multimedia games or graphics programs, use a lot of memory. If your programs are running more slowly than you think they should, try adding more memory. See "Adding or replacing memory" on page 83 for more information.

Peripheral devices

You can attach devices (such as a keyboard, mouse, printer, or monitor) to your notebook or port replicator.

Port replicators

Although you can attach devices directly to your notebook, a port replicator lets you make all of those connections at one time. When you travel with your notebook, you merely disconnect from the port replicator instead of unplugging all the devices.

A port replicator also provides additional ports and other expansion features not included with your notebook. See "Using the Optional Port Replicator" on page 91 for more information about using a port replicator with your notebook.

Printers

You can attach almost any type of printer to your notebook. The most common types are inkjet and laser printers, which print in color or black and white.

Inkjet printers and cartridges are relatively inexpensive, but they are slower than laser printers. Using an inkjet color printer, you can print pictures, banners, and greeting cards, as well as documents.

Laser printers and cartridges are more expensive, but they print much faster than inkjet printers. Laser printers are better than inkjet printers when you are printing large documents.

USB flash drive

Use a USB flash drive for storing files or transferring files to another computer.

Chapter 3

Getting Started



- Connecting the AC adapter
- Turning your notebook on and off
- Using the status indicators, keyboard, and the EZ Pad touchpad
- Adjusting the volume
- Configuring the audio jacks

Connecting the AC adapter

You can run your notebook using an AC adapter or your notebook's battery. The battery was shipped to you partially charged. You should use the AC adapter right away to fully charge the battery. Allow 24 hours for the battery to fully charge.

Important



If the battery is not fully charged before you use your notebook on battery power for the first time, the battery life may be much shorter than you expect. If the battery life seems short even after being charged for 24 hours, the battery may need to be recalibrated. For information on recalibrating the battery, see "Recalibrating the battery" on page 74.

To connect the AC adapter:

1 Connect the power cord to the AC adapter.



Caution



Make sure that you use the AC adapter that came with your notebook or one of the same type purchased from Gateway.

Replace the power cord if it becomes damaged. The replacement cord must be of the same type and voltage rating as the original cord or your notebook may be damaged.

2 Connect the AC adapter to your notebook's power connector.



3 Plug the power cord into a wall outlet.

The battery charge indicator turns on (see "Status indicators" on page 34 for the location of the battery charge indicator).

4 When you finish using your notebook for the first time, turn off your notebook and leave your notebook connected to AC power until the battery charge indicator turns blue.

Warning



Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or user-serviceable parts inside. The AC adapter has dangerous voltages that can cause serious injury or death. Contact Gateway about returning defective AC adapters.

Important



If the battery charge indicator does not turn blue after 24 hours, contact Gateway Customer Care at support.gateway.com.



Protecting from power source problems

During a power surge, the voltage level of electricity coming into your notebook can increase to far above normal levels and cause data loss or system damage. Protect your notebook and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your notebook.

Warning



High voltages can enter your notebook through both the power cord and the modem connection. To protect your notebook and avoid electrical shock, use a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

Warning



Your AC adapter may have a built-in ventilation fan. Do not block or insert objects into these holes or the slots at the opposite end of the AC adapter.



Starting your notebook

- To start your notebook:
 - **1** Press the latch on the front of your notebook, then lift the LCD panel.
 - **2** Press the power button located above the keyboard.



The power button is preset to On/Off mode. However, you can also set it to function in Standby/Resume mode.

Tips & Tricks



For more information about changing the power button mode, see "Changing Power-saving Settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

3 If you are starting your notebook for the first time, follow the on-screen instructions to set up your notebook.



Waking up your notebook

When you have not used your notebook for several minutes or if you close the LCD panel without turning off your notebook, it may enter a power-saving mode called Standby. While in Standby, the power indicator flashes.

If your notebook is in Standby mode, press the power button to "wake" it up.

Tips & Tricks



For more information about changing the power button mode, see "Changing Power-saving Settings" in Using Your Computer which has been included on your hard drive. To access this guide, click Start, All Programs, then click Gateway Documentation.

Turning off your notebook



To turn off your notebook:

- 1 Click **Start**, then click **Turn Off Computer**. The *Turn Off Computer* dialog box opens.
- **2** Click **Turn Off**. Windows shuts down and turns off your notebook.

Important



If for some reason you cannot use the Turn Off Computer option in Windows to turn off your notebook, press and hold the power button for about five seconds, then release it.



Restarting (rebooting) your notebook

If your notebook does not respond to keyboard or touchpad input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your notebook to normal operation, you may have to restart (reboot) your notebook.



To close unresponsive programs and restart your notebook:

- 1 Press CTRL+ALT+DEL. The Windows Security dialog box opens.
- **2** Click **Task Manager**. The *Windows Task Manager* dialog box opens.
- **3** Click the program that is not responding.
- 4 Click End Task.
- 5 Click **x** in the top-right corner of the *Windows Task Manager* dialog
- 6 If your notebook does not respond, turn it off, wait ten seconds, then turn it on again.

Important



If your notebook does not turn off immediately, complete the following steps until your notebook turns off:


- 1 Press and hold the power button for about five seconds, then release it.
- 2 Insert a straightened paper clip into the reset hole on the bottom of your notebook.
- 3 Unplug the power cord and remove the battery for more than 10 seconds.

As a part of the regular startup process, a program to check the disk status runs automatically. When the checks are finished, Windows starts.



Status indicators

Status indicators inform you when a drive is being used or when a button has been pressed that affects how the keyboard is used.

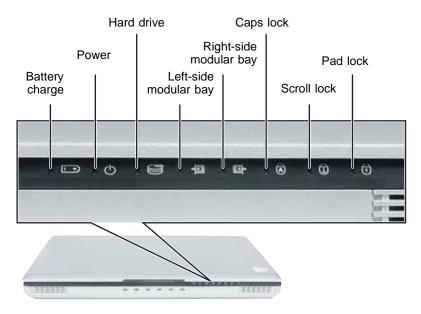

Indicator	Icon	Description
Battery charge	[+	The LED shows the battery activity and status. LED blue - battery is fully charged. LED purple - battery is charging. LED blinking red - battery charge is very low. LED solid red - battery is malfunctioning. This LED only lights up when your notebook is connected to AC power or the battery charge is very low.
Power	Ф	The LED shows your notebook's power status. LED on - notebook is on. LED blinking - notebook is in Standby mode. LED off - notebook is off.
Hard drive		The hard drive is in use.

Indicator	Icon	Description
Left-side modular drive	-	The modular drive is in use.
Right-side modular drive		The modular drive is in use.
Caps Lock		Caps Lock is turned on.
Scroll Lock	\bigcirc	Scroll Lock is turned on. For more information, see "System key combinations" on page 38.
Pad Lock	1	Numeric keypad is turned on.

Using the keyboard

Your notebook features a full-size keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows, function keys for specific system operations, and the Num Lock keys for the numeric keypad.

You can attach an external keyboard to the notebook using a USB port. You do not need to shut down the notebook to connect a USB keyboard. You can also attach an external keyboard to your optional port replicator using a USB or PS/2 port.



Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled $F1$ to $F12$ to perform actions in programs. For example, pressing $F1$ may open help. Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these colored keys in combination with the F_N key to perform specific actions. For more information, see "System key combinations" on page 38.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
Volume keys		Press these colored keys in combination with the $F{\rm N}$ key to increase or decrease the volume or to turn off all sound.
Fn key		Press the FN key in combination with a colored system key (such as $STATUS$, $STANDBY$, or $PAUSE$) to perform a specific action.
Windows key		Press this key to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Explorer utility).
Application key	$\overline{\Sigma}$	Press this key for quick access to shortcut menus and help assistants in Windows.
Arrow keys		Press these keys to move the cursor up, down, right, or left.
LCD brightness keys		Press these colored keys in combination with the $F{\rm N}$ key to control the screen brightness.

System key combinations


When you press the FN key and a system key at the same time, your notebook performs the action identified by the colored text or icon on the key.

Press and hold FN, then press this system key	То
F2 Status	Display the power status box in the upper-left corner of your display. The box shows the battery charge level, the BIOS version, and whether the AC adapter is being used. Press the key combination again to close this box.
F3 LCD/CRT	Toggle your notebook's display between the LCD, an external monitor, or both displays at the same time. A monitor must be plugged into the monitor port on your notebook.
F4 Standby	Enter Standby mode. Press the power button to leave Standby mode. For more information, see "Changing power modes" on page 79.
F10 Scroll Lock	Pause the text scrolling in a DOS screen. Press this key combination again to continue scrolling. The Scroll Lock status indicator appears when this function is turned on. (This function is only available in some programs.)
F11 Pause	Pause execution of a DOS program. (This function is only available in some programs.)
F12 Break	Stop the currently running DOS program. (This function is only available in some programs.)
↑ ♣	Increase the brightness of the display.
	Decrease the brightness of the display.

Press and hold FN, then press this system key	To
Home	Mute the sound. Press the key combination again to restore the sound. For more information, see "Adjusting the volume" on page 45.
PgUp (□())) ▲	Increase the volume. For more information, see "Adjusting the volume" on page 45.
PgDn	Decrease the volume. For more information, see "Adjusting the volume" on page 45.

Multi-function buttons


Press the multi-function buttons to open the programs associated with them.

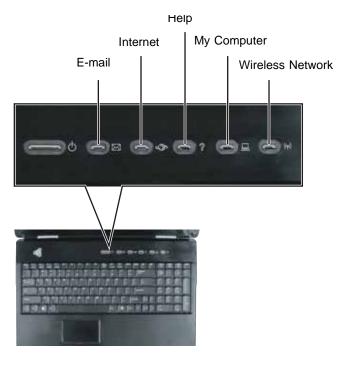

Button	Icon	Press to
E-mail	\bowtie	Open your default e-mail program.
Internet	4 3 3	Open your default Web browser.
Help	?	Open online help.
My Computer		Open the My Computer window.
Wireless Network	$((\psi))$	Turn the wireless network on or off.

Using the audio controls

The audio controls are located on the front of your notebook.

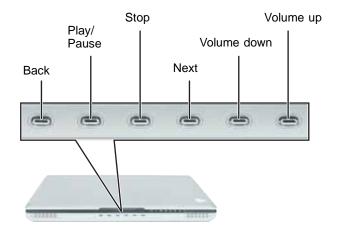

Component	Icon	Description	
Back	K	Skip back one song or track.	
Play/Pause) /	Start or pause playing.	
Stop		Stop playing.	
Next	>>	Skip ahead one song or track.	
Volume down	()	Press to decrease the volume.	
Volume up	(()))	Press to increase the volume.	
Mute		Press the volume down and volume up buttons to mute the sound. Press the button combination again to restore the sound.	


Important



The volume buttons control the volume level of the built-in speakers or headphones plugged into the notebook or port replicator headphone jack. The play/pause, back, next, and stop buttons may control multimedia programs such as Windows Media Player, Windows CD Player, MusicMatch, and the DVD Player.

Using the EZ Pad touchpad

The EZ Pad™ consists of a touchpad, two buttons, and a scroll wheel.

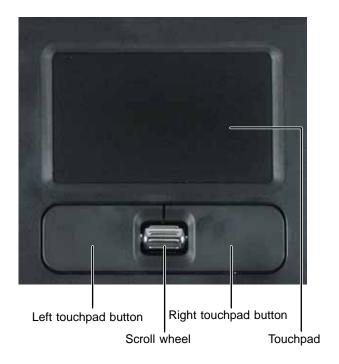

When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction.





You can use the EZ-Pad *left* and *right buttons* below the touchpad to select objects. You can use the scroll wheel, located between the left and right buttons, to scroll your screen up and down.

Tips & Tricks

 


For instructions on how to adjust the double-click speed, pointer speed, right-hand or left-hand configuration, and other touchpad settings, see "Changing the mouse or touchpad settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Using the touchpad

To... Do this...

Move the pointer on the screen.




Move your finger around on the touchpad. If you run out of space and need to move the pointer farther, lift your finger, move it to the middle of the touchpad, then continue moving your finger.

To...


Do this...

Select an object on the screen.

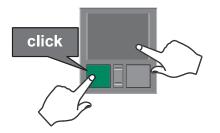


Position the pointer over the object. Quickly press and release the left button once. This action is called *clicking*.

Start a program or open a file or folder.

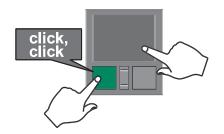


Position the pointer over the object. Press the left button twice in rapid succession. This action is called *double-clicking*.

Access a shortcut menu or find more information about an object on the screen.

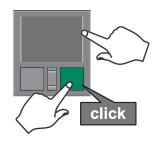

Position the pointer over the object. Quickly press and release the right button once. This action is called *right-clicking*.

Move an object on the screen.

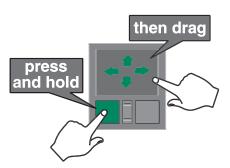

Position the pointer over the object. Press the left button and hold it down, then use the touchpad to move (drag) the object to the appropriate part of the screen. Release the button to drop the object where you want it.

Adjusting the volume

You can use the volume control to adjust the overall volume of your notebook.



■ If you are using external speakers, turn the knob on the front of the speakers.

-OR-

Use the mute and volume control buttons on the keyboard. For more information, see "System key combinations" on page 38.

-OR-

Use the mute and volume control buttons on the audio control panel. For more information, see "Using the audio controls" on page 41.



Tips & Tricks



For instructions on how to adjust the volume in Windows, see "Adjusting the Volume" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Configuring the audio jacks


The audio jacks on your notebook and optional port replicator are universal jacks. This means that they can be used for more than one purpose. For example, universal jack 1 on the notebook can be a microphone jack, a stereo in jack, or a stereo out jack. For more information on how each jack can be used, see "Left Side" on page 11 and "Back" on page 93.

To use the audio jacks for something other than the default audio device, you need to configure the audio jacks.



To configure the audio jacks:

- 1 Connect your audio device(s) to the notebook or port replicator universal jack(s).
- **2** Click **Start**, **All Programs**, **SigmaTel**, then click **SigmaTel Universal Jacks**. The *Sigmatel Universal Jacks* dialog box opens.

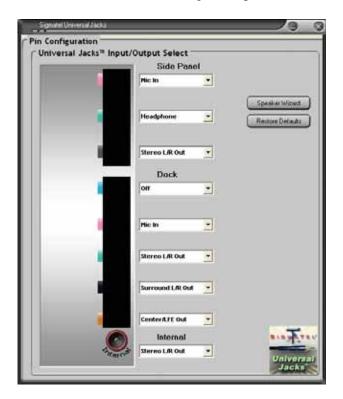

3 Click the arrow button to open a universal jack list, then click the function you want. You are finished.

-OR-

Click **Speaker Wizard**. The SigmaTel Speaker Wizard Opens to the welcome screen.

4 Click **Next**. The following screen opens.



5 The wizard cycles through each of the universal jacks. When you hear a sound, click on the speaker that the sound is coming from.

-OR-

Click **No Sound** if you do not hear a sound from any of your speakers.

- **6** Repeat Step 5 until all your speakers have been identified.
- 7 Click Finish.



Important



If you are configuring a jack for stereo in, and you want to hear the input signal through your speakers, you must also set up your notebook for audio pass through. Click Start, All Programs, SigmaTel, then click Audio PassThru Control Panel. The Pass Through dialog box opens. Make sure that the Pass Through check box is selected. Click X in the top-right corner of the dialog box to close it.

Turning your wireless network on or off

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a, IEEE 802.11b, and IEEE 802.11g communication devices are examples of devices that provide wireless communication.

Warning



In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.

To turn wireless networking on or off:

- Press the wireless network button (∇) .
 - OR -

Complete the following steps:

- **a** Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Network and Internet Connections**. The *Network and Internet Connections* window opens.
- **b** Click/Double-click **Network Connections**. The *Network Connections* window opens.
- **C** Right-click **Wireless Network Connection**, then click **Enable** to turn on wireless networking or click **Disable** to turn off wireless networking.



Chapter 4


Using Drives and Ports



- Changing modules
- Using CD or DVD drives
- Using a diskette drive
- Using a media card reader
- Using a PC Card
- Viewing the display on a monitor, projector, or television

Changing modules

Your notebook's modular bays support different *bay modules*, such as a CD drive, DVD drive, combination DVD/CD-RW drive, recordable DVD drive, a second hard drive, a diskette drive, or a memory card reader.

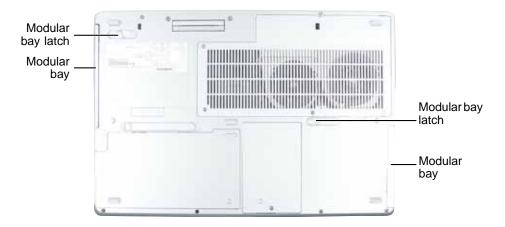


To change bay modules:

- 1 If you are removing an optical drive (such as a CD or DVD drive), diskette drive, or a memory card reader, make sure that the module is empty.
- 2 Click the remove hardware so icon in the taskbar, the drive you are removing, then click **Stop**.


-OR-

Turn off your notebook (do not place it in Standby or Hibernate mode).

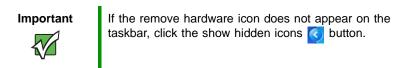


- **3** Close the LCD panel.
- **4** Disconnect your notebook from the optional port replicator (see "Disconnecting from the port replicator" on page 98).

- **5** Turn your notebook over so the bottom is facing up.
- **6** Slide and hold the bay module latch. The module may move out slightly.

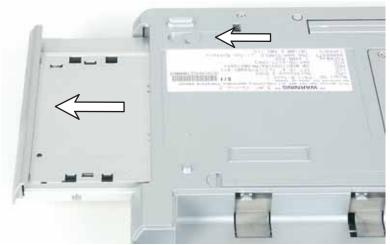

Right-side modular bay

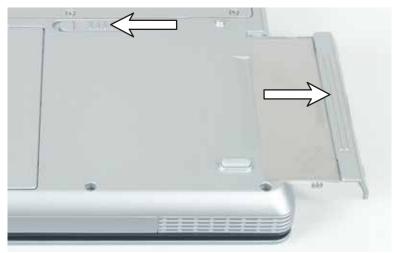

Left-side modular bay

- **7** Slide the bay module out.
- **8** Firmly push the new bay module straight into the bay until the latch clicks into place.

- **9** Turn your notebook over.
- **10** Reconnect the optional port replicator.
- **11** Open the LCD panel.
- **12** If your notebook is on, click **OK** to continue working on your notebook.
 - OR -

If your notebook is off, turn it on.



Using the CD or DVD drive

You can use your notebook to enjoy a wide variety of multimedia features.

Identifying drive types

Your Gateway notebook may contain one of the following drive types. Look on the front of the drive for one or more of the following logos:

If your drive has this logo	This is your drive type	Use your drive for
O SC	CD drive	Installing programs, playing audio CDs, and accessing data. You cannot use this drive to create CDs or DVDs or play DVDs.
R O M	DVD drive	Installing programs, playing audio CDs, playing DVDs, and accessing data. You cannot use this drive to create CDs or DVDs.


If your drive has this logo	This is your drive type	Use your drive for
ReWritable #	Combination DVD/CD-RW drive	Installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to recordable CDs. You cannot use this drive to create DVDs.
ReWitable F ROM/R/RW	Recordable DVD Drive	Installing programs, playing audio CDs, playing DVDs, accessing data, recording music and data to recordable CDs, and recording video and data to recordable DVDs.

Tips & Tricks



For more information, see "Creating CDs and DVDs" on page 57.

Inserting a CD or DVD

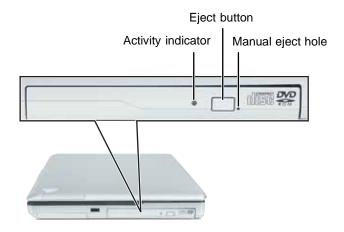

Important



Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.



1 Press the eject button on the CD or DVD drive. After the tray opens slightly, pull the disc tray completely open.

Important



If the CD or DVD drive is not in the modular bay, you need to swap modules. For more information about swapping modules, see "Changing modules" on page 52.

2 Place the disc in the tray with the label facing up, then press down carefully on the disc until it snaps into place.

Important



When you place a single-sided disc in the tray, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

3 Push the tray in until it is closed.



Playing a CD

Use the music program or Windows Media Player on your notebook to:

- Play music CDs
- Create MP3 music files from your music CDs
- Edit music track information
- Use your music files to build a music library
- Listen to Internet Radio

Tips & Tricks



For more information about playing CDs, see "Playing CDs" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Playing a DVD

A Digital Versatile Disc (DVD) is similar to a CD but has greater data capacity. Because of this increased capacity, full-length movies, several albums of music, or several gigabytes of data can fit on a single disc. You can play DVDs with the DVD program or Windows Media Player.

Tips & Tricks



For more information about playing DVDs, see "Playing DVDs" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Creating CDs and DVDs

You can use the CD and DVD burning program on your notebook to copy tracks from a music CD to your hard drive, copy or create data CDs and DVDs, create music CDs, create video DVDs, and more.

Tips & Tricks



For more information about creating CDs and DVDs, see "Creating CDs and DVDs" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Using the optional diskette drive

The diskette drive uses 3.5-inch diskettes (sometimes called *floppy disks*). Diskettes are useful for storing files or transferring files to another computer.

Warning




Do not expose diskettes to water or magnetic fields. Exposure could damage the data on the diskette.

Tips & Tricks



If your notebook did not come with a diskette drive, you can order one from Gateway.

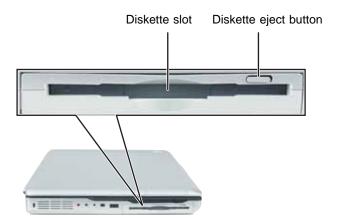

To use a diskette:

1 Insert the diskette into the diskette drive with the label facing up.

Important



If the diskette drive is not in the modular bay, you need to swap modules. For more information about swapping modules, see "Changing modules" on page 52.

2 To access a file on the diskette, click **Start**, then click **My Computer**. Double-click the drive letter (for example, the A: drive), then double-click the file name.

3 To remove the diskette, make sure that the left-side modular drive status indicator (see "Status indicators" on page 34) is off, then press the diskette eject button.




Using the optional memory card reader

Tips & Tricks



If your notebook did not come with a memory card reader, you can order one from Gateway.

You can use memory cards to transfer pictures from a digital camera to your notebook. You can also use the memory card reader to transfer data between your notebook and a device that uses memory cards, such as a PDA, MP3 player, or cellular telephone.

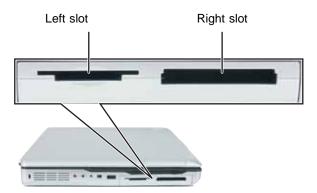

Memory card types

The memory card reader supports the following card types.

Card Type	Slot	Card Type	Slot
CompactFlash [®]	right	MultiMediaCard TM	left
IBM Microdrive TM	right	Secure Digital TM	left
Memory Stick®	left	SmartMedia [™] (3.3V only)	left

Each slot is assigned a different drive letter (for example, the E: and F: drives) so data can be transferred from one card type to another.

Using a memory card



To insert a memory card:

Insert the memory card into the memory card slot with the label facing up and the arrow on the label pointing towards your notebook.

Important



If the memory card reader is not in the modular bay, you need to swap modules or use the reader externally. For more information about swapping modules, see "Changing modules" on page 52. For more information about using the reader externally, see "Using the memory card reader externally" on page 62.

Important



Insert the SmartMedia card with the label facing down. Your notebook only accepts 3.3V SmartMedia cards.



2 To access a file on the memory card, click **Start**, then click **My Computer**. Double-click the drive letter (for example, the E: drive), then double-click the file name.



- To remove a memory card:
 - Make sure that the left-side modular drive status indicator (see "Status indicators" on page 34) is off, then pull the memory card out of the notebook.



Important



Do not use the remove hardware 🐉 icon in the taskbar to remove the memory card.

Using the memory card reader externally

You can use the memory card reader without inserting it in the modular bay.



1 Plug the cable that has been provided into the port on the memory card reader.



2 Plug the other end of the cable into a USB port on your notebook or port replicator.




Adding and removing a PC Card

Your notebook has a PC Card slot (also known as a PCMCIA card slot). This slot accepts one Type II card.

You do not need to restart your notebook when changing most cards because your notebook supports *hot-swapping*. Hot-swapping means that you can insert a PC Card while your notebook is running. If your PC Card does not work after hot-swapping, see the PC Card manufacturer's documentation for further information.

To insert a PC Card:

Push the card firmly into the PC Card slot label-side up until the outer edge of the card is flush with the side of your notebook.

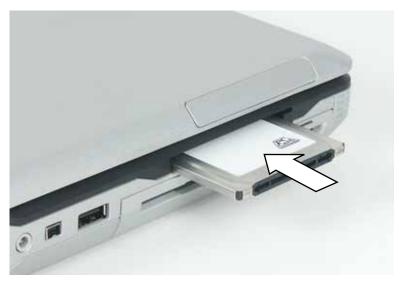





To remove a PC Card:

1 Click the remove hardware so icon in the taskbar, the PC Card name, then click **Stop**.

-OR-

Turn off your notebook.

Important



If the remove hardware icon does not appear on the taskbar, click the show hidden icons button.

- **2** Release the eject button by pressing the PC Card eject button once.
- **3** Eject the PC Card by pressing the eject button again.





Viewing the display on a projector or monitor

You can use your notebook for giving presentations by connecting an external monitor or projector to your monitor (VGA) port. Your notebook supports simultaneous LCD and CRT display. Simultaneous display lets you control the presentation from your notebook and at the same time face your audience.



To use a projector or external monitor:

- 1 Turn off your notebook.
- **2** Plug the projector or monitor cable into the VGA port on your notebook or optional port replicator. For the location of the VGA port, see "Back" on page 16 or "Back" on page 93.
- **3** Turn on your notebook.
- 4 Plug the projector's or monitor's power cord into an AC power source and turn it on. Windows recognizes the new hardware and searches for its driver. You may need to install the driver from the disc supplied by the manufacturer or download the driver from the manufacturer's Web site.
- **5** After the driver is installed, right-click any empty space on the desktop, then click **Properties**. The *Display Properties* dialog box opens.

6 Click the **Settings** tab.



- **7** Right-click the second monitor icon (labeled 2), then click **Attached**.
- 8 Click Apply.
- **9** Adjust properties such as **Screen Resolution** or **Color Quality** if necessary.
- 10 Click OK.



Important



Press FN+F3 to switch between viewing the display on the LCD panel and viewing the display on the projector or monitor.

Important



If an external monitor or projector is connected and you close the LCD panel, your notebook may turn off the LCD panel, but will not enter Standby mode.

Viewing the display on a television

The S-Video out jack on your notebook and port replicator lets you view your notebook display on a television screen using a standard S-Video cable.

Important



To turn on external video by default, connect the television (or other external video device) before starting your notebook.

Important



Audio is not transmitted through the S-Video out jack. Use the built-in speakers, a set of headphones or external powered speakers, or connect your notebook to a stereo system using the S/PDIF jack to hear sound while playing a DVD. DVD playback to a VCR will be scrambled by copyright protection software.

To view your notebook display on a television:


- 1 With your notebook off, connect one end of a standard S-Video cable to the S-Video out jack. For the location of the S-Video out jack on your notebook, see "Back" on page 16. For the location of the S-Video out jack on your port replicator, see "Back" on page 93.
- **2** Connect the other end of the cable to the Video in jack on your television or VCR.
- **3** Turn on the television or VCR.
- **4** Start your notebook.
- 5 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click Appearance and Themes.
- 6 Click/Double-click the **Display** icon. The *Display Properties* dialog box opens.

7 Click the **Settings** tab.



8 Click **Advanced**. The (Multiple Monitors) and MOBILITY RADEON 9600 Properties dialog box opens.

9 Click the **Displays** tab.

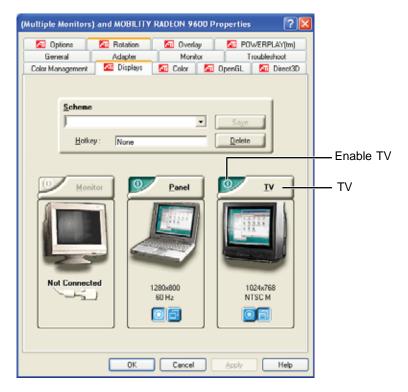


10 Click the Enable TV button if it is not already enabled.

Important



If the Enable TV and TV buttons are grayed out, your notebook has not detected the television. Make sure that the television is turned on and connected correctly.

11 Click **TV** to make any adjustments to the TV settings.

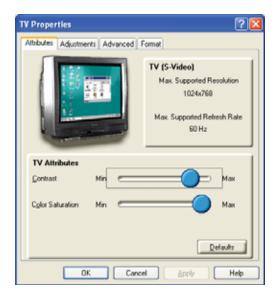

Important



If you are traveling internationally, you may need to change the video standard. For example, many televisions in Asia use PAL instead of NTSC.

- 12 Click Apply.
- **13** Click **OK** to close the (Multiple Monitors) and MOBILITY RADEON 9600 Properties dialog box.



Chapter 5

Managing Power



- Checking and recharging the battery
- Recalibrating the battery
- Changing batteries
- Extending the life of the battery

Monitoring the battery charge

Your new Gateway notebook is designed to provide an exceptional balance of performance and portability. Your notebook uses the latest chipset and mobile processor technologies to manage the processor speed and power consumption for a greater battery life experience. This design provides you with maximum performance when plugged into AC power balanced with optimized battery life when on battery power.

Closely monitor the battery charge. When the battery charge gets low, change the battery or connect to AC power immediately to prevent losing any unsaved work.

To monitor the battery charge:

■ Double-click the power cord icon **** or battery icon **** in the taskbar. The *Power Meter* dialog box opens.

Important



If the power cord or battery icon does not appear on the taskbar, click the show hidden icons button. If the icon still does not appear, make sure that Always show icon on the taskbar is checked on the Power Options Properties Advance tab.

For more information, see "Changing advanced settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

- Pressing FN+STATUS to view the power status box, which opens in the upper-left corner of the screen. The power status box shows the current power source, the battery charge level, and the power management mode.
- Looking at the battery charge indicator:
 - LED blue battery is fully charged.
 - LED purple battery is charging.
 - LED blinking red battery charge is very low.
 - LED solid red battery is malfunctioning.

Important



This LED only lights up when the notebook is connected to AC power. For the location of the battery charge indicator, see "Status indicators" on page 34.

■ Wait for a Low Battery warning message to appear.

If your battery charge indicator displays what looks like an inaccurate charge, you may need to recalibrate the battery. For more information, see "Recalibrating the battery" on page 74.

Recharging the battery

The battery recharges while it is installed and your notebook is connected to AC power. While the battery is recharging, the battery charge indicator turns on and the battery icon in the taskbar has a lightning bolt \(\subseteq \).

Important



If the power cord or battery icon does not appear on the taskbar, click the show hidden icons button. If the icon still does not appear, make sure that Always show icon on the taskbar is checked on the Power Options Properties Advance tab.

For more information, see "Changing advanced settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**,

All Programs, then click Gateway Documentation.

Recalibrating the battery

If your notebook unexpectedly goes into Standby mode while you are using it but the battery charge is not low, you may need to recalibrate your battery. You should also recalibrate the battery periodically to maintain the accuracy of the battery gauge.



To recalibrate the battery:

- 1 Connect the AC adapter, then turn on your notebook.
- **2** As soon as it starts and you see a startup screen, press **F2**. The BIOS Setup utility opens.
- **3** Open the **Advanced** menu.
- 4 Highlight Battery Auto Learning, then select Enabled by pressing the spacebar.
- 5 Open the Exit menu, then highlight Exit Saving Changes and press ENTER.
- **6** Select **Yes**, then press ENTER.

The battery recalibration process begins and a screen opens showing you the progress. The entire process will take several hours.

Important



Do not interrupt the battery recalibration process. If recalibration is interrupted, you must start the process over again.

When the recalibration has finished, the message "Press [Esc] key to exit" appears.

7 Press Esc. The battery charge indicator now displays an accurate battery charge. If the battery charge indicator does not show an accurate charge, contact Gateway Technical Support.



Changing batteries

If your notebook is connected to AC power, you can change the battery while the notebook is turned on.


Warning



Danger of explosion if battery is incorrectly replaced.

Replace only with a battery specifically manufactured for your Gateway notebook. Discard used batteries according to the manufacturer's instructions.

The battery used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used battery promptly. Keep away from children.

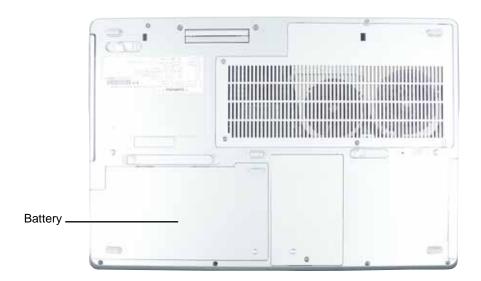

Replacing the battery

- To replace the battery:
 - 1 If your notebook is on and is connected to AC power, go to Step 2. -OR-
 - If your notebook is on and is not connected to AC power, save your work and turn off your notebook.
 - **2** Close the LCD panel.
 - **3** Disconnect your notebook from the optional port replicator (see "Disconnecting from the port replicator" on page 98).
 - **4** Turn your notebook over so the bottom is facing up.
 - **5** Slide the battery release latch.



Lift the battery out of the bay.



- Place a recharged battery into the bay and press down until it snaps into place.
- Turn your notebook over and reattach the optional port replicator.
- Open the LCD panel and press the power button.



Extending battery life

Conserving battery power

To conserve power while using the battery to power your notebook:

- Dim the display as low as is comfortable.
- Remove PC Cards and IBM Microdrive cards when you do not need them. Many PC Cards and Microdrive cards use a small amount of power while inserted, even if they are not being used.
- Modify the power management settings for maximum power savings.

Tips & Tricks



For more information about using power management settings, see "Changing Power-saving Settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

- Close the LCD panel to turn off the display while you are not using your notebook. The display stays off until you open the panel again.
- Use Hibernate mode for maximum power savings while your notebook is not in use.

Tips & Tricks



For more information about using Hibernate mode, see "Activating and using Hibernate mode" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

- Using the CD, DVD, or recordable drive only when necessary. These drives use a large amount of power.
- Recharge the battery often, take an extra battery, and fully recharge the batteries before traveling. For more information, see "Recharging the battery" on page 73 and "Changing batteries" on page 75.

Using alternate power sources

To extend battery life, use alternate power sources whenever possible.

- If traveling internationally, take electrical adapters. Save the battery for times when you cannot use a power adapter. If you plan on taking your AC power adapter, also take a single-plug surge protector.
- If you will have access to an EmPowerTM in-flight power receptacle or an automobile cigarette lighter, use a power inverter. Save the battery for times when you cannot use a power adapter.
- To find AC power outlets in airports, look for them next to support pillars, in large areas such as boarding gates, and under banks of telephones.

Changing power modes

You can use the following power modes to lengthen the life of your notebook's battery:

- Standby while your notebook is in Standby, it switches to a low power state where devices, such as the display and drives, turn off.
- Hibernate (also called save to disk) writes all current memory (RAM) information to the hard drive, then turns your notebook completely off. The next time you turn on your notebook, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode.

Using power saving modes

Always save your work before using Standby mode. In Standby mode, your notebook reduces or turns off the power to most devices except memory. However, the information in memory is not saved to the hard drive. If power is interrupted, the information is lost.

Chapter 5: Managing Power

When in Hibernate mode, your notebook saves all memory information to the hard drive, then turns the power completely off.

If your notebook is	and you want to	then
On	Enter Standby mode	Press Fn+Standby.
On	Enter Hibernate mode (must be activated)	Click Start , then click Turn Off Computer . Press and hold SHIFT, then click Hibernate .
In Standby or Hibernate mode	Exit Standby or Hibernate mode	Press the power button.

Chapter 6

Upgrading Your Notebook



- Adding and replacing memory
- Replacing the hard drive

Preventing static electricity discharge

Important



Before installing memory or replacing the hard drive, you should read and understand the information in this section.

The components inside your notebook are extremely sensitive to static electricity, also known as *electrostatic discharge* (ESD).

Warning



To avoid exposure to dangerous electrical voltages and moving parts, turn off your notebook and unplug the power cord, modem cable, and network cable before opening the case

Warning




To prevent risk of electric shock, do not insert any object into the vent holes of the notebook.

Before installing memory or replacing the hard drive, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold components by their edges. Avoid touching the edge connectors. Never slide components over any surface.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your workbench or other grounded connection.
- Touch a bare metal surface on your workbench or other grounded object.

Adding or replacing memory


Your notebook uses memory modules called SO-DIMMs (Small Outline Dual Inline Memory Modules). The modules are available in various capacities and any module can be placed in any available slot. Use only memory modules designed for your Gateway notebook for upgrading your memory.

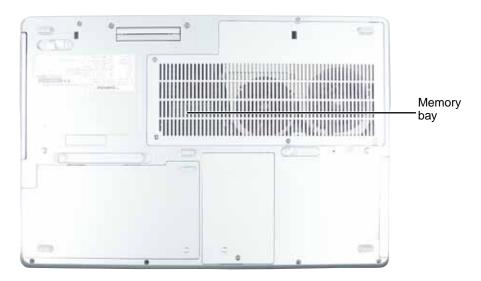

To add or replace memory modules:

- 1 Follow the guidelines under "Preventing static electricity discharge" on page 82.
- **2** Turn off your notebook.
- **3** Disconnect the AC adapter, modem cable, and network cable.
- **4** Disconnect all peripheral devices and remove any PC cards.
- **5** Disconnect your notebook from the optional port replicator (see "Disconnecting from the port replicator" on page 98).
- **6** Turn your notebook over so the bottom is facing up.
- **7** Remove the battery. For more information, see "Changing batteries" on page 75.

8 Loosen the four memory bay cover screws, then remove the memory bay cover.

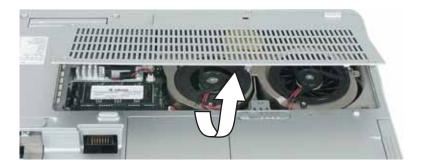

9 If you are removing a module, gently press outward on the clip at each end of the memory module until the module tilts upward.



10 Pull the memory module out of the slot.



11 Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.

Important




Use only memory modules designed for the Gateway M675.

- **12** Gently push the module down until it clicks in place.
- **13** Replace the memory bay cover and tighten the cover screws.
- **14** Insert the battery.
- **15** Turn your notebook over and reattach the optional port replicator.
- **16** Connect the power adapter, modem cable, and network cable, then turn on your notebook.



Replacing the hard drive kit


If you would like more hard drive capacity, you can replace your original drive with a higher-capacity drive.

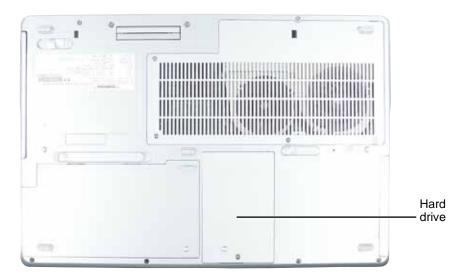


To replace the hard drive kit:

- 1 Back up any data you want to transfer to the new hard drive. For more information, see "Backing up files" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.
- **2** Follow the guidelines under "Preventing static electricity discharge" on page 82.
- **3** Turn off your notebook.
- **4** Disconnect the AC adapter, modem cable, and network cable.
- **5** Disconnect all peripheral devices and remove any PC cards.
- **6** Disconnect your notebook from the optional port replicator (see "Disconnecting from the port replicator" on page 98).
- **7** Turn your notebook over so the bottom is facing up.


- **8** Remove the battery. For more information, see "Changing batteries" on page 75.
- **9** Loosen the hard drive bay cover screw, then remove the hard drive bay cover.

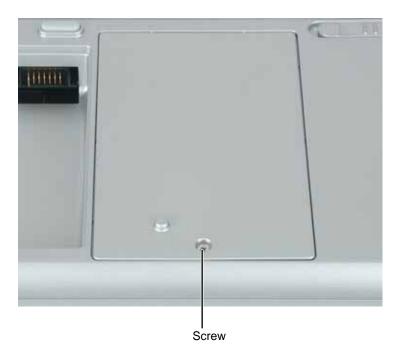

10 Slide the hard drive away from the connector.

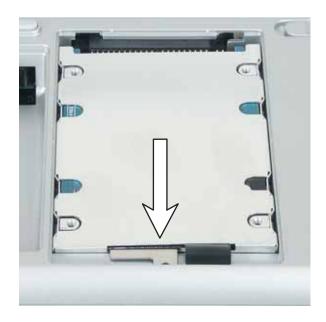

11 Lift the end of the hard drive furthest from the connector, then remove the drive from the bay

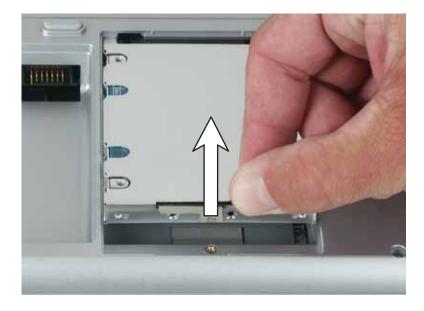

- **12** Place the new hard drive in the bay and slide it into the connector.
- **13** Replace the hard drive bay cover and tighten the screw.
- **14** Insert the battery.
- **15** Turn your notebook over and reattach the optional port replicator.
- **16** Connect the power adapter, modem cable, and network cable, then turn on your notebook.
- **17** For instructions on installing Windows, your drivers, and your applications, see the instructions that were included with the restore discs.




Chapter 7

Using the Optional Port Replicator




- Identifying features
- Connecting and disconnecting the port replicator
- Securing the port replicator with a locking cable

Front

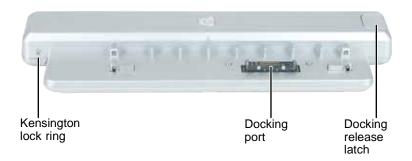

Component	Icon	Description
Kensington™ lock ring	K	Secure your notebook and port replicator to an object by connecting a Kensington cable lock through this ring and into the Kensington lock slot on your notebook. For more information, see "Securing your port replicator" on page 99.
Docking port		Connect the notebook to this port. Warning! Power is passed through this port. This docking connection is certified to UL 1950 for use only with notebooks designed for your Gateway port replicator.
Docking release latch		Press the release latch to release the notebook.

Back

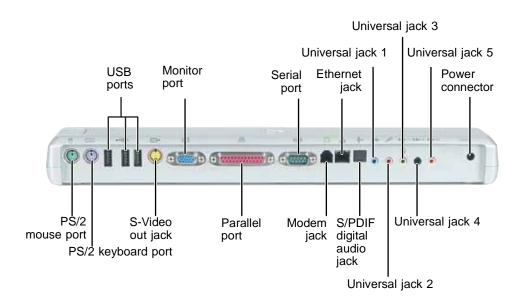

Component	Icon	Description
USB ports		Plug USB (Universal Serial Bus) devices (such as a USB lomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into these ports.
Monitor port		Plug an analog VGA monitor or projector into this port. For more information, see "Viewing the display on a projector or monitor" on page 65.
Serial port		Plug a serial device (such as a digital camera) into this port.
Ethernet jack	盎	Plug a 10/100/1000 Ethernet network cable into this jack.

Component	Icon	Description
Universal jack 1 (blue plug)	((∢))	This jack is user configurable for one of the following: Off (Default) Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right, Center/Subwoofer, and Surround Left/Right For information on configuring this jack, see "Configuring the audio jacks" on page 46.
Universal jack 3 (green plug)	((**)) -1	 This jack is user configurable for one of the following: Headphone: headphones or amplified speakers can be plugged into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack. Important: A headphone can only be plugged into this jack or universal jack 2 on the notebook. Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right (Default), Center/Subwoofer, and Surround Left/Right For information on configuring this jack, see "Configuring the audio jacks" on page 46.

Component	Icon	Description
Universal jack 5 (orange plug)	(('))→ -3	 This jack is user configurable for one of the following: Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right, Center/Subwoofer (Default), and Surround Left/Right For information on configuring this jack, see "Configuring the audio jacks" on page 46.
Power connector	===	Plug the AC adapter cable into this connector.
PS/2 mouse port	Ò	Plug a Personal System/2 (PS/2) mouse into this port. Attaching a PS/2 mouse to your port replicator may deactivate the touchpad.
PS/2 keyboard port	<u> </u>	Plug a Personal System/2 (PS/2) keyboard into this port. Attaching a PS/2 keyboard to your port replicator may deactivate the built-in keyboard.
S-Video out jack	S→	Plug a standard S-Video cable into this jack and the jack on an S-Video device (such as a television or VCR). For more information, see "Viewing the display on a television" on page 67.
Parallel port		Plug a parallel device (such as a printer) into this port.
Modem jack		Plug a modem cable into this jack.
S/PDIF digital audio jack	()	Plug an optical (Toslink) AC-3 digital audio cable into this jack.

Component	Icon	Description
Universal jack 2 (pink plug)		 This jack is user configurable for one of the following: Microphone: a microphone can be plugged into this jack (Default) Important: A microphone can only be plugged into this jack or universal jack 1 on the notebook. Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right, Center/Subwoofer, and Surround Left/Right For information on configuring this jack, see "Configuring the audio jacks" on page 46.
Universal jack 4 (black plug)	(((→)) ▶ -2	 This jack is user configurable for one of the following: Off Stereo in: an external audio input source (such as a stereo) can be plugged into this jack so that you can record sound on your notebook or play sound through the notebook speakers. Stereo out: an amplified external audio device (such as a stereo) can be plugged into this jack so you can play your notebook audio through that device. Important: Stereo out can be configured as Stereo Left/Right, Center/Subwoofer, and Surround Left/Right (Default) For information on configuring this jack, see "Configuring the audio jacks" on page 46.

Connecting to the port replicator

You can attach your notebook to the port replicator while your notebook is off, on, or in Standby mode.

Attaching to the port replicator

- To attach your notebook to the port replicator:
 - 1 Connect external devices to the ports on the port replicator.
 - **2** Align the connector holes on the bottom of your notebook with the docking posts on the port replicator.
 - **3** Press down on the notebook until it snaps into place.



Caution



Press down on the outside edges of the notebook. Do not press in the middle or you may damage the LCD screen.



Important



The notebook may detect additional devices and add drivers after being attached to the port replicator. This process must be completed for components to work correctly. Follow any on-screen instructions, if necessary.

Disconnecting from the port replicator

You can separate your notebook from the port replicator while your notebook is off or on (not in Standby or Hibernate mode).

To separate your notebook from the port replicator:

1 If your notebook is off, go to Step 2.

-OR-

If your notebook is on, click **Start**, then click **Undock Computer**. The Undock Computer menu item appears in the Start menu only while the notebook is docked.

2 Press down on the docking release latch. The notebook will spring up slightly.



3 Lift the notebook off of the port replicator.



Securing your port replicator

You can secure your notebook and port replicator to an object by using the security ring located on the left side of the port replicator and the Kensington lock slot located on the left side of your notebook.

To secure your notebook and port replicator:

- 1 Open the security ring on the port replicator.
- **2** Attach your notebook to the port replicator.
- **3** Secure one end of the Kensington cable to a solid object, then run the other end of the cable through the security ring and lock it into the slot provided on the left side of your notebook.



Chapter 8

Maintaining Your Notebook



- Caring for your notebook
- Cleaning your notebook
- Protecting your notebook from viruses
- Updating Windows
- Restoring your system

Caring for your notebook

To extend the life of your notebook:

- Be careful not to bump or drop your notebook, and do not put any objects on top of it. The case, although strong, is not made to support extra weight.
- When transporting your notebook, we recommend that you put it in a carrying case.

Tips & Tricks



For more information about traveling with your notebook, see "Traveling With Your Notebook" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

- Keep your notebook away from magnetic fields. Magnetic fields can erase data on hard drives.
- Never turn off your notebook when the hard drive light is on because data on the hard drive could be lost or corrupted.
- Avoid subjecting your notebook to extreme temperature changes. The case (and LCD panel) can become brittle and easy to break in cold temperatures and can melt or warp in high temperatures. Damage due to either extreme is not covered by your warranty. As a general rule, your notebook is safest at temperatures that are comfortable for you.
- Keep all liquids away from your notebook. When spilled onto notebook components, almost any liquid can result in extremely expensive repairs that are not covered under your warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms and can lead to permanent damage to the notebook.
- Do not block the ventilation fan slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook.
- When storing your notebook for an extended period of time, unplug AC power and remove the battery after discharging it partway.

Cleaning your notebook

Keeping your notebook clean and the vents free from dust helps keep your notebook performing at its best. You may want to gather these items and put together a notebook cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Cotton swabs
- A DVD drive cleaning kit

Cleaning the exterior

Warning



When you shut down your notebook, the power turns off, but some electrical current still flows through your notebook. To avoid possible injury from electrical shock, unplug the power cord, modem cable, and network cable from the wall outlets.

Always turn off your notebook and other peripherals before cleaning any components. Also, remove the battery before cleaning any components.

Use a damp, lint-free cloth to clean your notebook and other parts of your system. Do not use household abrasive or solvent cleaners because they can damage the finish on components.

Your notebook is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your notebook turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside of your notebook.

Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, turn off your notebook and turn the notebook upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it.

Cleaning the notebook screen

To clean a notebook LCD screen, use a soft cloth and water to clean the LCD screen. Squirt a little water on the cloth (never directly on the screen), and wipe the screen with the cloth.

Caution



A notebook LCD screen is made of specially coated glass and can be scratched or damaged by abrasive or ammonia-based glass cleaners.

Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.





Protecting your notebook from viruses

A *virus* is a program that attaches itself to a file on a computer, then spreads from one computer to another. Viruses can damage data or cause your notebook to malfunction. Some viruses go undetected for a period of time because they are activated on a certain date.

Protect your notebook from a virus by:

- Registering your copy of Norton AntiVirus and subscribing to the virus definition update service. You received a free limited time subscription to the Norton AntiVirus service when you purchased your notebook.
- Using the Norton[®] AntiVirus program to check files and programs that are attached to e-mail messages or downloaded from the Internet.
- Checking all programs for viruses before installing them.
- Disabling macros on suspicious Microsoft Word and Excel files. These programs will warn you if a document that you are opening contains a macro that might have a virus.
- Periodically updating the Norton AntiVirus program to protect against the latest viruses.
- Making sure the Windows Security Center is configured to provide you with the highest level of protection.

Tips & Tricks



For more information about modifying security settings, see "Modifying Security Settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Help and Support




For more information about protecting your notebook against viruses, click **Start**, then click **Help and Support**. Type the keyword **viruses** in the **Search** box

	 _	41	-11-11	41	
Search	l⇒,	tnen	CIICK	tne	arrow




To scan for viruses:

1 Click Start, All Programs, Norton AntiVirus, then click Norton AntiVirus 2004. Norton AntiVirus opens.

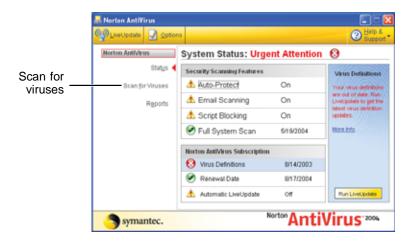

2 Click Scan for Viruses.

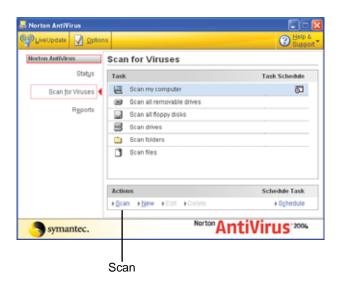

3 Click the type of scan you want to make in the Scan for Viruses area, then under Actions, click **Scan**.





- 1 If Norton AntiVirus finds a virus, follow all on-screen instructions to remove the virus.
- **2** Turn off your notebook and leave it off for at least 30 seconds.
- **3** Turn on your notebook and rescan for the virus.



To update Norton AntiVirus:

Important



You received a free limited time subscription to the Norton AntiVirus service when you purchased your notebook. To update Norton AntiVirus after the free subscription period, you must extend your subscription.

- **1** Make sure that you are connected to the Internet.
- 2 Click Start, All Programs, Norton AntiVirus, then click LiveUpdate Norton AntiVirus. The LiveUpdate wizard opens.
- **3** Follow the on-screen instructions to update your Norton AntiVirus program with the latest virus protection files.
- 4 When the program has finished, click Finish.



Updating Windows

Windows Update is the online extension of Windows that helps you to keep your notebook up-to-date. Use Windows Update to choose updates for your notebook's operating system, software, and hardware. New content is added to the site regularly, so you can always get the most recent updates and fixes to protect your notebook and keep it running smoothly. Windows Update scans your notebook and provides you with a tailored selection of updates that apply only to the software and hardware on your notebook.



To run Windows Update:

- Connect to the Internet.
- 2 Click Start, All Programs, then click Windows Update.
- **3** Follow the on-screen instructions.



Help and Support



For more information about Windows Update in Windows XP, click Start, then click Help and Support. Type the keyword Windows Update in the HelpSpot Search box Search , then click the arrow.

Restoring your system

All programs that were preinstalled on your notebook are available on the backup restore discs that you created with the recovery media program, on the hard drive, or on restore discs that were included with your notebook. If you need to restore your notebook to the original configuration, you can use the backup restore discs or you can use the backup files located on the hard drive.

The instructions for using the restore discs or hard drive backup files are included in the instruction booklet that came with your restore discs.

Chapter 9

Troubleshooting



- Troubleshooting typical hardware and software problems
- Getting telephone support
- Using automated troubleshooting systems

Safety guidelines

While troubleshooting your notebook, follow these safety guidelines:

- Never remove the memory bay or hard drive bay cover while your notebook is turned on, while the battery is installed, and while the modem cable, network cable, and AC power adapter are connected to your notebook.
- Make sure that you are correctly grounded before accessing internal components. For more information about preventing damage from static electricity, see "Preventing static electricity discharge" on page 82.
- After you complete any maintenance tasks where you remove the memory bay or hard drive bay cover, make sure that you replace the cover, reinstall any screws, then replace the battery before you start your notebook.

Warning



Do not try to troubleshoot your problem if power cords or plugs are damaged, if your notebook was dropped, or if the case was damaged. Instead, unplug your notebook and contact a qualified computer technician.

First steps

If you have problems with your notebook, try these things first:

- Make sure that the AC power adapter is connected to your notebook and an AC outlet and that the AC outlet is supplying power.
- If you use a power strip or surge protector, make sure that it is turned on.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Customer Care in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

Help and Support



For more information about troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **troubleshooting** in the **Search** box

Search , then click the arrow.

Troubleshooting

Troubleshooting topics are listed in alphabetical order.

Audio

Audio troubleshooting is covered under "Sound" on page 130.

Battery

Battery troubleshooting is covered under "Power" on page 128.

CD drives

CD drive troubleshooting is covered under "DVD drives" on page 115.

Device installation

You have computer problems after adding a new device

Sometimes a new device, such as a PC Card, can cause a system resource (IRQ) conflict. Check IRQ usage to determine if there is an IRQ conflict.




To check IRQ usage:

- 1 Click Start, then click Control Panel. The Control Panel window opens. If your Control Panel is in Category View, click Performance and Maintenance.
- **2** Click/Double-click **System**, click the **Hardware** tab, then click **Device Manager.** The *Device Manager* window opens.
- 3 Click View, then click Resources by type. Double-click Interrupt request (IRQ). All IRQs and their hardware assignments are displayed.



Help and Support



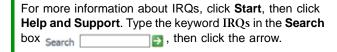

To free IRQ resources for the new device:

- 1 In the *Device Manager* window, check the device list for a resource conflict. A resource conflict appears as a black exclamation point in a yellow circle.
- **2** Remove the device you are trying to install, then determine which one of the existing devices or ports you can disable.
- **3** Right-click the device or port you want to disable, then click **Disable**. The device or port is disabled.



Diskette drive

The diskette drive is not recognized

- Shut down and restart your notebook.
- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the disc again.

You see an "Access Denied" or "Write protect" error message

- Move the write-protection tab in the upper-right corner of the diskette down (unprotected).
- The diskette may be full. Delete unnecessary files on the diskette and try again.
- Not all diskettes are IBM-compatible. Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.

You see a "Disk is full" error message

■ Delete unnecessary files on the diskette.

- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error checking on the diskette. If errors are detected and corrected, try using the diskette again.

Tips & Tricks



For instructions on running Error checking, see "Checking the hard drive for errors" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

You see a "Non-system disk", "NTLDR is missing", or "Disk error" error message

- Eject the diskette from the diskette drive, then press ENTER.
- Make sure that the diskette you are using is IBM-compatible.

The modular drive status indicator is lit continuously

■ Remove the diskette from the drive. If the indicator stays on, try restarting your notebook.

Display

The screen is too dark

Adjust the brightness using the system keys. For more information, see "System key combinations" on page 38.

The screen resolution is not correct

Change the screen resolution from the *Display Properties* dialog box.

Tips & Tricks



For instructions on changing the screen resolution, see "Adjusting the screen resolution" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

The text on the display is dim or difficult to read

- Adjust the brightness and contrast using the system keys. For more information, see "System key combinations" on page 38.
- Change the display settings.

Tips & Tricks



For instructions on changing the display settings, see "Adjusting the screen and desktop settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

■ Move your notebook away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.

The display has pixels that are always dark or too bright

This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway's inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Customer Care to identify whether a repair or replacement is justified based on the number of pixels affected.

DVD drives

Your notebook does not recognize a disc

- The disc may not be seated correctly in the tray. When you place a disc on the tray, make sure that you press the disc firmly onto the spindle so the retainers hold the disc in place.
- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the disc again.
- Make sure that the disc label is facing up, then try again.
- If you are trying to play a DVD, make sure that you have a DVD drive. See "Identifying drive types" on page 54 for more information.
- Try a different disc. Occasionally discs are flawed and cannot be read by the drive.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.

- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Clean the disc. For more information, see "Cleaning CDs or DVDs" on page 104.

An audio CD does not produce sound

- Make sure that the CD label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Make sure that the internal speakers and universal jacks are configured correctly. For more information, see "Configuring the audio jacks" on page 46. Click **Restore Defaults** if you want to reset the internal speakers and universal jacks back to their factory settings.
- Make sure that the volume control on your notebook is turned up. For more information, see "Using the audio controls" on page 41.
- Make sure that the Windows volume control is turned up.

Tips & Tricks



For instructions on how to adjust the volume control in Windows, see "Adjusting the volume" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

- Make sure that Mute controls are turned off. For more information about the mute setting, see "Using the audio controls" on page 41.
- Make sure that headphones are not plugged into the headphone jack.
- If you are using powered speakers, make sure that they are plugged in and turned on.
- Clean the disc. For more information, see "Cleaning CDs or DVDs" on page 104.
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Reinstall the audio device drivers. For more information, see "Downloads" on page 4.

A DVD movie will not play

- Make sure that the label or side you want to play is facing up, then try again.
- Make sure that a DVD drive is inserted into the modular bay. See "Identifying drive types" on page 54 for more information.
- Shut down and restart your notebook.
- Clean the DVD. For more information, see "Cleaning CDs or DVDs" on page 104.
- DVD discs and drives contain *regional codes* that help control DVD title exports and help reduce illegal disc distribution. To be able to play a DVD, the disc's regional code and your DVD drive's regional code must match.

The regional code on your DVD drive is determined by your notebook's delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 4. Your DVD drive's regional code must match the regional code of the disc. The regional code for the disc is on the disc, disc documentation, or packaging.

If the DVD movie does not play, the disc's regional code and your DVD drive's regional code may not match.

Make sure that a DVD player program has been installed on your notebook.

Tips & Tricks



For instructions on playing a DVD, see "Playing a DVD" on page 57.

A DVD does not produce sound on a TV

Audio is not transmitted through the S-Video out jack. Use the built-in speakers, a set of headphones or external powered speakers, or connect your notebook to a stereo system to hear sound while playing a DVD.

File management

A file was accidentally deleted

If a file was deleted at a DOS prompt or in Windows while holding down the **S**HIFT key, the file cannot be restored.



To restore deleted files:

- 1 Double-click the **Recycle Bin** icon.
- **2** Right-click the file you want to restore, then click **Restore**. The file is restored to the place where it was originally deleted from.

If the Recycle Bin was emptied before you tried to restore a file, the file cannot be restored.



Help and Support



For more information about restoring deleted files, click **Start**, then click **Help and Support**. Type the keyword **System Restore** in the **Search** box

Search , then click the arrow.

Hard drive

You see an "Insufficient disk space" error message

■ Delete unnecessary files from the hard drive using Disk Cleanup.

Tips & Tricks



For instructions on deleting unnecessary files, see "Using Disk Cleanup" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

■ Empty the Recycle Bin by right-clicking the **Recycle Bin** icon, then clicking **Empty Recycle Bin**.

Caution



All deleted files will be lost when you empty the Recycle Bin.

Save your files to a diskette, USB flash drive, another hard drive or to a CD or DVD. If the hard drive is full, copy any files not regularly used to backup media, then delete them from the hard drive.

Help and Support



For more information about file management, click **Start**, then click **Help and Support**. Type the keyword file management in the **Search** box Search then click the arrow.

You see a "Data error" message

This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program.

Tips & Tricks



For instructions on fixing hard drive problems, see "Checking the hard drive for errors" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

The hard drive cannot be accessed, or you see a "General failure reading drive C" error message

- If a diskette is in the diskette drive, eject it and restart your notebook.
- Make sure that the hard drive is installed correctly. Remove it, firmly reinsert it, then restart your notebook. For more information, see "Replacing the hard drive kit" on page 86.
- If your notebook has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

You see a "Non-system disk", "NTLDR is missing", or "disk" error message

■ Eject the diskette from the diskette drive, then press ENTER.

The secondary hard drive is not recognized

■ The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the disc again.

Internet

You cannot connect to the Internet

■ If you are using a dial-up modem, make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See "Back" on page 16 or "Back" on page 93 to make sure that the connections have been made correctly.

-OR-

If you are using a cable or DSL modem, make sure that the modem cable is plugged into the Ethernet network jack and not the modem jack. See "Back" on page 16 or "Back" on page 93 to make sure that the connections have been made correctly.

- Make sure that you do not have a problem with your modem. For more information, see "Modem (dial-up)" on page 122.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.

Help and Support



For more information about troubleshooting Internet connections, click **Start**, then click **Help and Support**. Type the keyword **troubleshooting connections** in the **Search** box Search , then click the arrow.

You see an "Unable to locate host" message and are unable to browse the Internet

This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties.

Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

Connecting to a Web site takes too long

Many factors can affect Internet performance:

■ The condition of the telephone lines in your residence or at your local telephone service

- The condition of the Internet computers to which you connect and the number of users accessing those computers
- The complexity of graphics and multimedia on Web pages
- Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your notebook

People are sending you e-mail messages, but you have not received any mail

- Click the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

Keyboard

The built-in keyboard does not work

■ Attaching a PS/2 keyboard to your port replicator while your notebook is running may deactivate the built-in keyboard.

The external keyboard does not work

- Make sure that the keyboard cable is plugged in correctly.
- Remove all extension cables and switchboxes.
- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- If you spilled liquid in the keyboard, turn off your notebook and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

A keyboard character keeps repeating or you see a "Keyboard stuck" or "Key failure" error message

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your notebook.

Memory

You see a "Memory error" message

- Make sure that the memory modules are inserted correctly in the memory bay slots. For more information, see "Adding or replacing memory" on page 83.
- Use a third-party diagnostic program to help determine if a memory module is failing. For more information, see "Adding or replacing memory" on page 83.

You see a "Not enough memory" error message

Close all programs, then restart your notebook.

Help and Support



For more information about troubleshooting memory					
errors, click Start, then click Help and Support. Type the					
keyword memory error in the Search box					
Search , then click the arrow.					

Memory card reader

Drive letter for the memory card slot does not appear in the My Computer window

- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the disc again.
- Reboot your notebook.

Modem (dial-up)

Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See "Back" on page 16 to make sure that the connections have been made correctly.
- Make sure that your notebook is connected to the telephone line and the telephone line has a dial tone.
- Make sure that the modem cable is less than 6 feet (1.8 meters) long.

- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.
- If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set appropriately.

To check the dialing properties:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers** and **Other Hardware**.
- **2** Click/Double-click the **Phone and Modem Options** icon, then click the **Dialing Rules** tab.
- 3 Click the location from which you are dialing, then click Edit.
- **4** Make sure that all settings are correct.



Help and Support



For more information about dialing properties, click **Start**, then click **Help and Support**. Type the keyword **dialing** in the **Search** box Search , then click the arrow.

- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

You cannot connect to the Internet

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.
- Review the troubleshooting information under "Internet" on page 120.

Your 56K modern does not connect at 56K

Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your notebook has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your notebook has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.

Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem

Current fax technology only supports a maximum send and receive rate of 14,400 bps.

The modem is not recognized by your notebook

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your notebook. See "Back" on page 16 to make sure that the connections have been made correctly.
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use the modem cable that came with your notebook. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your notebook.
- Run Windows modem diagnostics.

To run modem diagnostics:

- 1 Close all open programs.
- **2** Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click Printers and Other Hardware.
- **3** Click/Double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
- **4** Click your modem, then click **Properties**. The *Modem Properties* dialog box opens.
- 5 Click the **Diagnostic** tab, then click **Query Modem**. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as port already open or the modem has failed to respond, the modem did not pass diagnostics.



Help and Support



For more information about modem troubleshooting, click Start, then click Help and Support. Type the keyword modem troubleshooting in the Search box , then click the arrow.

The modem is noisy when it dials and connects

When your modem tries to connect to another modem, it begins handshaking. Handshaking is a digital "getting acquainted" conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.



To turn down the modem volume:

- 1 Click Start, then click Control Panel. The Control Panel window opens. If your Control Panel is in Category View, click Printers and Other Hardware.
- **2** Click/Double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
- **3** Click the modem you want to adjust, then click **Properties**.
- 4 Click the **Modem** tab, then adjust the **Speaker volume** control.
- **5** Click **OK** twice to close the *Phone and Modem Options* dialog box.



Mouse

The external mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your notebook.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

The external mouse works erratically

- Clean the mouse.
- Some mouse pad patterns "confuse" optical mice. Try the mouse on a different surface.

Networks

You cannot connect to your company network

Every network is unique. Contact your company computer department or network administrator for help

Tips & Tricks



For information about setting up a network in your home, see the network guide which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Help and Support



For more information about network troubleshooting, click **Start**, then click **Help and Support**. Type the keyword network troubleshooting in the **Search** box search then click the arrow.

Passwords

Your notebook does not accept your password

Make sure that CAPS LOCK is turned off, then retype the password.

You forgot your startup password

The password feature (which is set in the BIOS Setup utility) is very secure, with no easy way to recover a forgotten password. You must return your notebook for repair. Call Gateway Customer Care for instructions.

PC Cards

You installed a PC Card and now your notebook is having problems

- Make sure that you have correctly installed required software for the PC Card. For more information, see your PC Card's documentation.
- Make sure that the PC Card you installed is not causing a system resource conflict. For more information on resource conflicts, see "Device installation" on page 112.

Power

Your notebook is not working on AC power

- Make sure that your AC power adapter is connected correctly to your notebook. For more information, see "Connecting the AC adapter" on page 28.
- If your notebook is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the AC power adapter cables are free from cuts or damage. Replace any damaged cables.

Your notebook is not working on battery power

- Make sure that the battery is installed correctly. For more information, see "Changing batteries" on page 75.
- Make sure that the battery is fully recharged. For more information, see "Recharging the battery" on page 73.
- Make sure that the battery is calibrated correctly. For more information, see "Recalibrating the battery" on page 74.

Printer

 
The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.

The printer is on but will not print

- Check the cable between the printer and your notebook. Make sure that it is connected to the correct port.
- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- Check the port and cable for bent or broken pins.

■ If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.



- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers** and **Other Hardware**.
- **2** Click/Double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
- **3** Right-click the name of the printer you want to be the default printer, then click **Set as Default Printer**.



■ Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

You see a "Printer queue is full" error message

- Make sure that the printer is not set to work offline.
- To make sure that the printer is not set to work offline:
 - 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers** and Other Hardware.
 - **2** Click/Double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
 - 3 Right-click the name of the printer you want to use. If the menu shows a check mark next to **Use Printer Offline**, click **Use Printer Offline** to clear the check mark.



Help and Support



For more information about printer troubleshooting, click **Start**, then click **Help and Support**. Type the keyword printer troubleshooter in the **Search** box

Search , then click the arrow.

- Wait until files have been printed before sending additional files to the printer.
- If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

You see a "Printer is out of paper" error message

After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.

Sound

You are not getting sound from the built-in speakers

- Make sure that headphones are not plugged into the headphone jack.
- Make sure that the volume control on your notebook is turned up. For more information, see "Using the audio controls" on page 41.
- Make sure that the Windows volume control is turned up.

Tips & Tricks



For instructions on how to adjust the volume control in Windows, see "Adjusting the volume" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

■ Make sure that Mute controls are turned off. For more information about the mute setting, see "Using the audio controls" on page 41.

Help and Support



For more information about troubleshooting sound issues, click **Start**, then click **Help and Support**. Type the keyword sound troubleshooter in the **Search** box Search , then click the arrow.

■ Make sure that the internal speakers and universal jacks are configured correctly. For more information, see "Configuring the audio jacks" on page 46. Click Restore Defaults if you want to reset the internal speakers and universal jacks back to their factory settings.

Touchpad

The touchpad does not work.

Attaching a PS/2 mouse to your port replicator may deactivate the touchpad.

Video

The projector or external monitor is not working

- Make sure that you have pressed Fn+F3 to activate the external monitor option.
- Make sure that the monitor is turned on and that the video cable is connected correctly.

TV out is not working

- Make sure that you have activated TV out. For more information, see "Viewing the display on a television" on page 67.
- Make sure that the television is turned on and that the S-Video cable is connected correctly.
- Televisions in different countries use different standards. If you are traveling, you may need to change the TV Out mode. For more information, see "Viewing the display on a television" on page 67.

Telephone support

Before calling Gateway Customer Care

If you have a technical problem with your notebook, follow these recommendations before contacting Gateway Customer Care:

- Make sure that your notebook is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.
- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
 - Online Help
 - Printed documentation
 - The Microsoft Windows documentation
 - The software publisher's Web site
- See the troubleshooting section of this chapter.

Warning



To avoid bodily injury, do not attempt to troubleshoot your notebook problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your notebook
- Your notebook was dropped
- The case was damaged

Instead, unplug your notebook and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your notebook is nearby at the time of your call. The technician may have you follow troubleshooting steps.

Telephone numbers

Gateway offers a wide range of customer service, customer care, and information services.

Automated troubleshooting system

Service description	How to reach
Use an automated menu system and your telephone keypad to find answers to common problems.	800-846-2118

Telephone numbers

You can access the following services through your telephone to get answers to your questions:

Resource	Service description	How to reach	
Gateway's fee-based software tutorial service	Get tutorial assistance for software issues billed by the minute.	800-229-1103 (charged to your credit card) 900-555-4695 (charged to your telephone bill)	
Gateway Customer Care	Talk to a Gateway Customer Care representative about a non-tutorial technical support question. (See "Before calling Gateway Customer Care" on page 132 before calling.)	Gateway Customer Care telephone numbers vary by country or region. For the correct telephone number, see your setup poster or the Gateway eSupport Web site at support.gateway.com. For more information, see "Using eSupport" on page 4.	
America Online Get support for your America Online ISP account		800-827-6364 (US) 888-265-4357 (Canada)	
Sales, Get information about available systems, pricing, orders, billing statements, warranty service, or non-technical issues.		800-846-2000 (US) 888-387-7752 (Canada)	

Appendix A

Safety, Regulatory, and Legal Information



- Safety information
- Regulatory statements
- Notices

Important safety information

Your Gateway system is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that the safety instructions marked on the product and in the documentation are followed.

Warning



Always follow these instructions to help guard against personal injury and damage to your Gateway system.

Setting up your system

- Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.
- Do not use this product near water or a heat source such as a radiator.
- Set up the system on a stable work surface.
- The product should be operated only from the type of power source indicated on the rating label.
- If your notebook has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- Openings in the notebook case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the system for ventilation when you set up your work area. Never insert objects of any kind into the notebook ventilation openings.
- Some products are equipped with a three-wire power cord to make sure that the product is properly grounded when in use. The plug on this cord will fit only into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician to install the appropriate outlet.
- If you use an extension cord with this system, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- If your system is fitted with a TV Tuner, cable, or satellite receiver card, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and buildup of static charges.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the system. The best way to avoid spills is to avoid eating and drinking near your system.
- Some products have a replaceable CMOS battery on the system board. There is a danger of explosion if the CMOS battery is replaced incorrectly. Replace the battery with the same or equivalent type recommended by the manufacturer. Dispose of batteries according to the manufacturer's instructions.

- When the notebook is turned off, a small amount of electrical current still flows through the notebook. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the system.
- Unplug the system from the wall outlet and refer servicing to qualified personnel if:
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not operate properly when the operating instructions are followed.
 - The system was dropped or the cabinet is damaged.
 - The system performance changes.

Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

Warning



Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.

Warning



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

Regulatory compliance statements

Wireless Guidance

Low power, Radio transmitting type devices (radio frequency (RF) wireless communication devices), may be present (embedded) in your notebook system. These devices may operate in the 2.4 GHz (i.e. 802.11B/G LAN & Bluetooth), 5.2 GHz (i.e. 802.11A LAN), and traditional cellular or PCS cellular bands (i.e. Cellular data modem). The following section is a general overview of considerations while operating a wireless device.

Additional limitations, cautions, and concerns for specific countries are listed in the specific country sections (or country group sections). The wireless devices in your system are only qualified for use in the countries identified by the Radio Approval Marks on the system rating label. If the country you will be using the wireless device in, is not listed, please contact your local Radio Approval agency for requirements. Wireless devices are closely regulated and use may not be allowed.

The power output of the wireless device or devices that may be embedded in your notebook is well below the RF exposure limits as known at this time. Because the wireless devices (which may be embedded into your notebook) emit less energy than is allowed in

radio frequency safety standards and recommendations, Gateway believes these devices are safe for use. Regardless of the power levels, care should be taken to minimize human contact during normal operation.

Measurements have been performed to show that the RF exposure is below what is considered safe limits; however care should be taken to make sure the user or bystanders keep the transmitter away from their body when the wireless device is transmitting. The transmitting antenna installed in the top third of the lid should be used in a manner to maintain 20 cm (8 inches) from user's or bystander's bodies.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Some circumstances require restrictions on wireless devices. Examples of common restrictions are listed below:

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. 802.11B (also known as wireless Ethernet or Wifi) and Bluetooth communication devices are examples of devices that provide wireless communication.

Warning



In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.

Warning



If your system came equipped with an internal embedded wireless device, do not operate the wireless device unless all covers and shields are in place and the system is fully assembled.

Caution



Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Please contact Gateway for service.

Caution



Only use drivers approved for the country in which the device will be used. See the Gateway System Restoration Kit, or contact Gateway Customer Care for additional information.

Important



Every country has different restrictions on the use of wireless devices. Since your system is equipped with a wireless device, when traveling between countries with your system, check with the local Radio Approval authorities prior to any move or trip for any restrictions on the use of a wireless device in the destination country.

United States of America

Federal Communications Commission (FCC) Intentional emitter per FCC Part 15

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in the United States of America if an FCC ID number is on the system label.

The FCC has set a general guideline of 20 cm (8 inches) separation between the device and the body, for use of a wireless device near the body (this does not include extremities). This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by the FCC.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Caution



Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Caution



The transmitting device embedded in this system may not be used with any antenna other than the one provided with the system.

Caution



In order to comply with FCC requirements this transmitter must not be operated (or co-located) in conjunction with any other transmitter or antenna installed in the notebook.

Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

FCC declaration of conformity

Responsible party:

Gateway Companies, Inc. 610 Gateway Drive, North Sioux City, SD 57049 (605) 232-2000 Fax: (605) 232-2023

Product:

■ Gateway M675

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution



Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.

California Proposition 65 Warning

Warning



This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or reproductive harm.

Mercury Warning

Warning





The lamp in this display contains mercury. Do not put in the trash. Recycle or dispose as hazardous waste.

Telecommunications per Part 68 of the Code of Federal Regulations (CFR 47) (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Code of Federal Regulations (CFR 47) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

A telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service. Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

Canada

Industry Canada (IC) Intentional emitter per RSS 210

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Canada if an Industry Canada ID number is on the system label.

As a general guideline, a separation of 20 cm (8 inches) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by Industry Canada.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Caution



To prevent radio interference to licensed service or co-channel Mobile Satellite systems, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Caution



Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Caution



The transmitting device embedded in this system may not be used with any antenna other than provide with the system.

Caution



The 802.11A radio LAN your system may have been equipped with operates in the same frequency range as high power radar, which has priority use, and may damage the radio LAN if both are present and being used in the same area.

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

Telecommunications per Industry Canada CS-03 (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Warning



To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

The **Ringer Equivalence Number** (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5

Laser safety statement

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.

Warning



Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

EPA ENERGY STAR



As an ENERGY STAR® Partner, Gateway has determined that this product meets the ENERGY STAR guidelines for energy efficiency when used with a computer equipped with a Display Power Management System.

Notices

Copyright © 2004 Gateway, Inc. All Rights Reserved 14303 Gateway Place Poway, CA 92064 USA

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at www.gateway.com. In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

Trademark Acknowledgments

Gateway and the Black-and-White Spot Design are trademarks or registered trademarks of Gateway, Inc. in the U.S. and other countries. SpotShop, Spotshop.com, and Your:)Ware are trademarks of Gateway, Inc. Intel, Intel Inside logo, and Pentium are registered trademarks and MMX is a trademark of Intel Corporation. Microsoft, MS, MS-DOS, and Windows are trademarks or registered trademarks of Microsoft Corporation. All other product names mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective companies.

Macrovision statement

If your notebook has a DVD drive and an analog TV Out port, the following paragraph applies:

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

A	charge status 72
AC adapter	charging 28, 73
connecting 28	conserving power 78
connector 17, 95	icons 72
international adapters 79	installing 76
AC-3 digital audio jack 95	latch 18
accessories	managing power 78
purchasing 24	monitoring charge 72
safety precautions 137	purchasing 24
application key 36, 37	recalibrating 74
	recharging 28, 73
arrow keys 36, 37 audio	release latch 18
	replacing 76
adjusting volume 39	bays
back button 41	battery 18, 76
configuring 46	CD drive 16, 52
controls 10, 41	diskette drive 15, 52, 113
digital jack 14, 95	DVD drive 16, 52
headphone jack 13, 94	DVD drive 16, 32 DVD/CD-RW drive 16, 52
microphone jack 12, 96	DVD/CD-RW drive 10, 32 DVD-RW/CD-RW drive 52
muting 39, 41, 45	hard drive 19
next button 41	
pause button 41	memory 18, 83
play button 41	memory card reader 15, 52, 122
S/PDIF 14, 95	module 15, 16, 52
stop button 41	recordable DVD drive 16
troubleshooting 130	second hard drive 15, 16, 52,
using controls 41	119
volume down button 39, 41	BIOS Setup utility 74
volume up button 39, 41	break system key 38
audio CD	brightness system keys 36, 38
cleaning 104	C
playing 57	_
_	cable lock
В	notebook 11, 92
battery	port replicator 99
alternate power sources 79	Caps Lock indicator 35
bay 18, 76	cards
changing 76	adding memory card 60
charge indicator 34, 72	inserting memory card 60

inserting PC Card 63	port replicator 97
installing memory card 60	projector 65
memory card slots 15	PS/2 keyboard 95
PC Card slot 14	PS/2 mouse 95
removing memory card 60	connections
removing PC Card 63	AC-3 digital audio 95
replacing memory card 60	audio 12, 13, 14, 94, 95, 96
slots 59, 63	digital audio jack 14
troubleshooting memory card	digital audio out 95
122	digital camera 14, 15, 17, 93
troubleshooting PC Card 127	digital video camera 14
carrying case 24	docking 18, 92
CD	Ethernet 17, 93
cleaning 104	external audio 12, 13, 14, 94,
drive 54	95, 96
inserting 56	external speakers 13, 94
playing audio 57	Firewire $1\overline{4}$
CD drive	flash drive 14, 15, 17
See DVD drive	headphone 13, 94
cellular telephone memory cards 59	i.Link 14
Certificate of Authenticity 22	IEEE 1394 14
changing bay modules 52	keyboard 14, 15, 17, 93, 95
cleaning	line in 12, 13, 14, 94, 95, 96
audio CD 104	microphone 12, 96
case 103	modem 16, 95
CD 104	monitor (VGA) 17, 65, 93
DVD 104	mouse 14, 15, 17, 93, 95
keyboard 104	network 17, 93
LCD panel 104	parallel 17, 95
notebook exterior 103	port replicator 18, 92
notebook screen 104	power 17, 28, 95
screen 104	printer 14, 15, 17, 93, 95
clicking 44	projector 17, 65, 93
closing unresponsive program 33	PS/2 95
configuring	PS/2 keyboard 95
audio jacks 46	PS/2 mouse 95
speakers 46	S/PDIF digital audio 14, 95
connecting	scanner 14, 15, 17, 93
AC adapter 28	serial 93
external keyboard 36	speaker 13, 94
external monitor 65	S-Video (TV) out 16, 67, 95
keyboard 36	Toslink digital audio 95

universal 11, 12, 13, 14, 46,	Gateway Web site 3
93, 94, 95, 96, 116,	help 5
130	Help and Support 5
USB 14, 15, 17, 93	online help 7
VGA 17, 65, 93	Using Your Computer 6
video camera 14	double-clicking 44
Zip drive 14, 15, 17, 93	dragging 44
copyright notice 145	drivers
Customer Service	updating 4
Accounting 133	drives
Sales 133	CD 16, 54
Warranty 133	changing modular drives 52
,	diskette 15, 58
D	DVD 16, 54
default printer 128	DVD/CD-RW 16, 55
digital audio	hard drive 15, 16, 19, 86
S/PDIF jack 14, 95	identifying drive types 54
universal jack 14	installing and replacing 52
digital camera	recordable DVD 16
serial port 93	replacing hard drive 86
USB port 14, 15, 17, 93	second hard drive 15, 16
digital video camera	status indicators 35
IEEE 1394 port 14	troubleshooting 113, 115, 118
directional keys 37	types 54
diskette	DVD
inserting 58	cleaning 104
troubleshooting 113	drive 54
diskette drive	inserting 56
eject button 58	playing 57, 67
locating 15	troubleshooting 115
replacing drive module 52	DVD drive
status indicator 35	identifying 54
troubleshooting 113	locating 16
using 58	modular drive status indicator
display	35
maintaining 104	replacing drive module 52
properties 65	troubleshooting 115
switching 38	using 54
troubleshooting 114	DVD/CD-RW drive
docking port 18, 92	See DVD drive
docking release latch 92	DVD±R/±RW drive
documentation	See DVD drive

DVD-RW drive	Н
See DVD drive	hard drive
	bay 19
E	installing 52, 86
electrostatic discharge (ESD) 82	replacing 86
e-mail button 40	second hard drive 15, 16, 52
EmPower power adapter 79	status indicator 34
eSupport	troubleshooting 118
getting specifications 23	headphone jack 13, 94
using 4	help
Ethernet jack 17, 93	button 40
external audio jack 12, 13, 14, 94,	online 7
95, 96	using 5
external monitor 17, 38, 93	Help and Support
EZ Pad touchpad	searching 6
See touchpad	starting 5
	using 5
F	Hibernate mode 79
fan 11, 17	hot-swapping 63
faxes	
troubleshooting 124	1
files	i.Link port 14
opening 44	IEEE 1394 port 14
troubleshooting 118	indicators
finding	See status indicators
Help and Support topics 6	inkjet printer 24
specifications 23	installing
Firewire port 14	battery 76
floppy disk	bay modules 52
See diskette	CD drive 52
Fn key 36, 37, 38	devices 112
folders	diskette drive 52
opening 44	drives 52
function keys 36, 37	DVD drive 52
_	DVD/CD-RW drive 52
G	hard drive 86
Gateway	memory 83
eSupport 23	PC Card 63
model number 18, 21	recordable CD drive 52
serial number 21, 23	recordable DVD drive 52
Web address 3	Internal wireless label 22
Web site 3	Internet

toggle display 38
volume control 37
Windows 36, 37
L
label
internal wireless 22
model number 18
serial number 21
wireless networking 22
laser printer 24
latch
battery 18
docking release 92
LCD panel release 10
module 18, 19
LCD brightness system keys 37
LCD panel
cleaning 104
release latch 10
switching display 38
troubleshooting 114
LCD/CRT system key 38
line in jack 12, 13, 14, 94, 95, 96
lock
Kensington cable 11, 92
,
M
maintenance
cleaning 103, 104
cleaning notebook screen 104
general guidelines 102
screen 104
virus protection 105
Windows Update 108
memory
adding 83
bay 18
installing 83
purchasing 24
removing 83
replacing 83

troubleshooting 122 upgrading 83	using CD drive 54 using diskette drive 58
memory card reader	using DVD drive 54
locating 15	using Windows Media Player 57
memory card types supported 60	muting sound 39, 41, 45
status indicator 35	My Computer button 40
using 59, 62	
microphone jack 12, 96	N
Microsoft Certificate of Authenticity	navigation keys 36, 37
22	network
model number 21	jack 17, 93
modem	troubleshooting 127
jack 16, 95	networking
troubleshooting 122	internal wireless label 22
modular bay	turning off wireless network 49
latch 18, 19	turning on wireless network 49
locating 15, 16	non-technical support
release latch 18, 19	Accounting 133
See also bays	Sales 133
modular drive indicator 35	Warranty 133
monitor	Norton Antivirus 105
adding external 65	NTSC/PAL jack 67
cleaning 104	numeric keypad
color quality 66	locating 20
display properties 65	status indicator 35
port 17, 93	
screen resolution 66	0
mouse	online help
PS/2 port 95	button 40
troubleshooting 126	using 5, 7
USB port 14, 15, 17, 93	opening
moving	files 44
pointer 43	folders 44
screen objects 44	LCD panel 10
MP3 player memory cards 59	notebook 10
multi-function buttons 20, 40	programs 44
multimedia	shortcut menu 44
adjusting volume 45	option bays
creating CD 57	changing modules 52
creating DVD 57	
playing CD 57	P
playing DVD 57	Pad Lock status indicator 35

parallel port 17, 95	Standby mode 32, 79
password 127	Standby/Resume 38
pause text scrolling 38	status box 38
PC Card	status indicator 34
adding 63	troubleshooting 128
eject button 63	turning off notebook 32
inserting 63	turning on notebook 31
installing 63	printer
removing 63	default 128
slot 63	inkjet 24
troubleshooting 127	laser 24
PCMCIA card	parallel port 17, 95
See PC Card	troubleshooting 128
PDA memory cards 59	USB port 14, 15, 17, 93
peripheral devices	programs
purchasing 24	closing unresponsive 33
playing	opening 44
audio CD 57	projector
DVD 57	adding 65
pointer	color quality 66
moving 43	display properties 65
port replicator	screen resolution 66
attaching notebook 97	PS/2 port 95
docking port 18, 92	. 1
release latch 92	R
separating notebook 98	RAM
using 24, 91	See memory
ports	rebooting notebook 33
See connections	recalibrating battery 74
power	recharging battery 73
AC adapter 28, 79	recordable DVD drive
battery 33, 72, 73, 74, 76, 78	See DVD drive
button 19, 38	replacing
changing modes 79	See installing
connector 17, 28, 95	reset hole
conserving battery power 78	location 18
EmPower adapter 79	using 33
extending battery life 78	resetting notebook 33
Hibernate mode 79	restarting notebook 33
indicator 32, 34	restoring system 108
management 71, 78	right-clicking 44
source problems 30	rocker switch 42

S	adjusting 39, 41, 45
S/PDIF digital audio jack	controls 37, 41, 45
locating 14, 95	muting 39, 41, 45
safety	troubleshooting 130
caring for notebook 102	speaker wizard 47
general precautions 136	speakers
guidelines for troubleshooting	built-in 10
110	configuring 46
static electricity 82	jack 13, 94
scanner	specifications 23
USB port 14, 15, 17	Standby
screen	mode 32, 38, 79
cleaning 104	system key 38
resolution 66	starting
troubleshooting 114, 131	notebook 31
screen objects	programs 44
getting information 44	static electricity 82
moving 44	status indicators
selecting 44	battery charge 34, 72
Scroll Lock	Caps Lock 35
status indicator 35, 38	CD drive 35
system key 38	diskette drive 35
scroll wheel	drive activity 34, 35
using 43	DVD drive 35
searching in Help and Support 6	DVD/CD-RW drive 35
security features	hard drive 34
Kensington cable lock 11, 92	location 10
Kensington lock ring 99	memory card reader 35
serial number 21, 23	modular drive 35
serial port 93	numeric keypad 35
setting up	Pad Lock 35
safety precautions 136	power 34
shortcut menus	recordable DVD drive 35
accessing 44	Scroll Lock 35, 38
shortcuts	surge protector 30
buttons 40	Suspend 38
opening menu 44	S-Video (TV) out jack
shutting down notebook 32, 33	locating 16, 95
SigmaTel Speaker Wizard 47	using 67
SO-DIMM	system identification label 18, 21
See memory	system keys
sound	combinations 38

locating 36	hard drive 118
types 37	Internet connection 120, 124
system restore 108	IRQ conflict 112
_	keyboard 121
Т	LCD panel 114
technical support	memory 122
automated troubleshooting 133	memory card reader 122
eSupport 23	modem 122
Technical Support 133	mouse 126
tips before contacting 132	network 127
tutorial service 133	passwords 127
telephone support 132	PC Cards 127
television	power 128
playing DVD on 67	printer 128
TV out jack 67	safety guidelines 110
viewing display on 67	screen 114, 131
Toslink digital audio jack	screen area 114
locating 95	screen resolution 114
touchpad	sound 130
buttons 42, 43	technical support 132
clicking 44	telephone support 132
double-clicking 44	touchpad 131
dragging screen objects 44	video 131
locating 20	Web site connection speed 120
moving pointer 43	turning off
moving screen objects 44	notebook 32, 33
opening files, folders, and	wireless network 49
programs 44	turning on
opening shortcut menu 44	notebook 31
right-clicking 44	wireless network 49
scroll wheel 43	TV out (S-Video out) jack
selecting screen objects 44	locating 16, 95
troubleshooting	using 67
audio 130	
automated system 133	U
device installation 112	undocking 98
diskette drive 113	updating
display 114	device drivers 4
DVD drive 115	Norton AntiVirus 105
faxes 124	Windows 108
files 118	upgrading 81
general guidelines 111	USB flash drive 14, 15, 17

```
USB port 14, 15, 17, 93
V
VGA port 17, 65
video
   playing 57
   S-Video out jack 16, 95
   troubleshooting 131
virus
   protecting against 105
   removing 105
volume
   adjusting 39, 41, 45
   adjusting modem 126
   controls 37, 41, 45
   muting 39, 41, 45
   system keys 36, 39
   troubleshooting 130
W
waking up notebook 32
Web browser button 40
Web site
   Gateway 3
Windows
   key 36, 37
   Product Key Code 22
   restoring 108
   updating 108
Windows Media Player 57
Windows Security Center
   using 105
wireless network
   button 20, 40
   label 22
   turning off 49
   turning on 49
```

Z

Zip drive USB port 14, 15, 17

NSK DWL M675 USR GDE R1 09/04

