Customer Satisfaction(顧客服務)

If you have any question, welcome to contact us. (如有疑問歡迎多加指教)

Sales/Manufacturer:TAIWAN 7F,No.108,Min-Chyuan Rd., Hsin-Tien,Taipei Hsien. Taiwan,R.O.C Tel:+886-2-2219-1816 Fax:+886-2-2219-0655 http://www.planex.net E-mail:service@planex.com.tw

地址:231台北縣新店市民權路108號7樓 電話:02-2219-1816 傳頁:02-2219-0655 客服專線:0800-090-939 http://www.planex.com.tw E-mail:service@planex.com.tw

Head office:JAPAN 12-7, Nihonbashi Ohdenmacho, Chuo-Ku. Tokyo,103-0011 Tel:+81-3-5614-1011 Fax:81+3-5614-1018 http://www.planex.co.jp E-mail:info-planex.@planex.co.jp

> Branch:SINGAPORE No.1 Rochor Canal Road, Sim Lim Square,#04-33 Singapore 188504 http://www.planex.net E-mail:info-sales@pleanx.com.sg





Wireless 4 Port Broadband Router

BLW-04EX

PLANEX COMMUNICATIONS INC.

USER'S MANUAL

Wireless 4 Port Broadband Router

BLW-04EX

Trademarks

Copyright @2002 PLANEX COMMUNICATIONS INC. Contents subject to change without prior notice. Pci is a registered trademark of PLANEX COMMUNICATIONS INC. All other trademarks belong to their respective proprietors.

Copyright Statement

No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from PLANEX COMUNICATIONS INC.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna

Increase the separation between the equipment and the receiver Connect the equipment into an outlet on a circuit different from the one which the receiver is connected to Consult the dealer or an experienced radio/TV technician for help You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Warnings: Wear an antistatic wrist strap to take other suitable measures to prevent electrostatic discharge whenever handling the equipment.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Chapt	er 1 Introduction	2
1 – 1	About the BLW-04EX	2
2	Features and Benefits	2
3	Applications	3
Chapt	er 2 Installation	
Packag	e Contents	6
<mark>2</mark> – 1	Installing the Access Point	6
2	Hardware Description	8
3	System Requirements	9
4	Connect the System	9
5	Basic Installation Procedure	10
Chapt	er 3 CONFIGURING CLIENT PCS	
<mark>3</mark> _ 1	TCP/IP Configuration	16
Chapt	er 4 CONFIGURING THE BLW-04EX	18
4 – 1	Navigating the Web Browser Interface	19
	Making ConfigurationChanges	19
4 – 2	Setup Wizard	20

4 – 3 ADVANCED SETTING	37
4 – 4 MISC Setting	48
Chapter 5 CONFIGURING CLIENT TCP/IP	54
5 – 1 Installing TCP/IP	54
5 – 2 Setting Up TCP/IP to Work with	
the BLW-04EX	57
Appendix A	
TROUBLESHOOTING	102
Appendix B	
CABLES	106
Appendix C	
SPECIFICATIONS	110

Version:1.0 E Rev.A

Congratulations on your purchase of a BarricadeTM Wireless Cable/DSL Broadband Router. PCI is proud to provide you with a powerful yet simple communication device for connecting your local area network (LAN) to the Internet. For those who want to surf the Internet at the lowest possible cost, the BLW-04EXTM is the convenient, easy solution.



About the BLW-04EX

1

The BLW-04EX provides Internet access to multiple users by sharing a single-user account. The BLW-04EX features a WAN interface that allows you to connect either a DSL or cable modem. The BLW-04EX provides extensive firewall protection services.

The BLW-04EX provides many cost-effective functions and management benefits. It is simple to configure and can be up and running in minutes.

– 2 Features and Benefits

Internet connection to DSL or cable modem via a 10/100 Mbps WAN port Local network connection via 10/100 Mbps Ethernet ports or 11 Mbps wireless interface (supporting up to 128 mobile users)

802.11b Compliant – interoperable with multiple vendors Provides seamless roaming within 802.11b WLAN environment DHCP for dynamic IP configuration, and DNS for domain name mapping Firewall with Stateful Packet Inspection, client privileges, hacker prevention, DoS, and NAT

NAT also enables multi-user access with a single-user account, and virtual server functionality (providing protected access to Internet services such as web, mail, FTP, and Telnet)

User-definable application sensing tunnel supports applications requiring multiple connections

BLW-04EX

Parental controls allows the user to limit certain web sites Email alerts when the users network is being compromise Easy setup through a web browser on any operating system that supports TCP/IP

Compatible with all popular Internet applications

– 3 Applications

Many advanced applications are provided by the BLW-04EX, such as:

LAN Access

The BLW-04EX provides connectivity to 10/100 Mbps devices, making it easy to create a network in small offices or homes.

Internet Access

This device supports Internet access through a DSL or cable connection. Since many DSL providers use PPPoE to establish communications with end users, the BLW-04EX includes a built-in client for this protocol, eliminating the need to install this service on your computer.

Shared IP Address

The BLW-04EX shares a single IP address with up to 253 users. Using only one ISP account, multiple users on your network can simultaneously browse the Internet.

Virtual Server

If you have a static IP address, you can set up the BLW-04EX to act as a virtual host for network address translation. Remote users access various services at your site using the static IP address. Then, depending on the requested service (or port number), the BLW-04EX routes the request to the appropriate server (at an internal network IP address). This secures your

network from direct attack by hackers, and provides more flexible management by allowing you to change internal network IP addresses without affecting outside access to your network.

User-Definable Application Sensing Tunnel

You may define special applications that require multiple connections such as Internet gaming, video conferencing, and Internet telephony. The BLW-04EX will then sense the application type and open a multi-port tunnel for it.

DMZ Hosts Support

Allows a networked computer to be fully exposed to the Internet. This function is used when the special application sensing tunnel feature is insufficient to allow an application to function correctly.

Security

The BLW-04EX supports security features that deny Internet access to specified users, or drop requests for specific services. The BLW-04EX's firewall also blocks common hacker attacks, including IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding.

Before installing the BLW-04EXTM, verify that you have the items listed under "Package Contents." Also be sure that you have the necessary cabling.

2 – 1 Package Contents

Package Contents

If any of the items are missing or damaged, contact your local PCI distributor.

BLW-04EX Broadband Router

Power adapter

One CAT-5 Ethernet cable

Four rubber feet

Quick Installation Guide

PCI Warranty Registration Card If possible, retain the carton and original packing materials in case there is a need to return the product.

2 – 2 Hardware Description

Please fill out and return the Warranty Registration Card to PCI, or register on PCI's web site at www.planex.com.tw. The BLW-04EX Broad band Router is covered by a limited lifetime warranty.

Hardware Description

The BLW-04EX Broadband Router may be connected to the Internet or to a remote site using its RJ-45 WAN port. It may be connected directly to your PC or to a local area network using any of the four 10/100 autosensing switch ports.

These RJ-45 ports auto-negotiate the operating speed (10/100 Mbps) and the duplex mode (half/full duplex).

Access speed to the Internet depends on your service type. Full-rate symmetric Digital Subscriber Line (ADSL) provides up to 8 Mbps downstream and 640 Kbps upstream; G.lite (or splitterless) ADSL provides up to 1.5 Mbps downstream and 512 Kbps upstream; Cable modems provide up to 36 Mbps downstream and 2 Mbps upstream. However, you should note that the actual rate provided by specific service providers may vary dramatically from these upper limits.

Though Internet access speed is determined by the modern type connected to your BLW-04EX, data passing between devices connected to your local area network can run up to 100 Mbps over the Fast Ethernet ports.

The BLW-04EX includes LED indicators on the front panel that simplify installation and network troubleshooting.

Front Panel



2-1. Front Panel

LED Indicators

The BLW-04EX includes LED indicators on the front panel that

y		
LED	Condition	Status
Power (Green)	Ca	BRL-04EX is receiving power.
WAN (Green)	0e	The BRL-04EX has established a valid wireless connection.
WAN (Green)	On	The WAN port has established a valid network connection.
		LAN
Link (Green)	On	The indicated LAN port has established a valid network connection.
Activity (Ambur)	Flashing	The indicated LAN post is transmitting or receiving traffic.

simplify installation and network troubleshooting.

Rear Panel



2-2. Rear Panel

Item	Description
9V 1A	Connect the included power adapter to this port. Warning: Using the wrong type of power adapter may causedamage.
Reset	Use this button to reset the power or restore the default factory settings. Reboot by pushing 1 second. Return all settings to the factory defaults by pushing 5 seconds.
WAN	WAN port (RJ-45). Connect a cable modern, DSL modern,or an Ethernet router to this port.
LAN	Four 10/100 Autosensing switch ports (RJ-45). Connect devices on your local area network to these ports (such as a PC, hub, or switch).

Clayter 2

1. Connect the LAN: You can connect the BLW-04EX to your PC, or to a hub or switch. Run Ethernet cable from one of the LAN ports on the rear of the BLW-04EX to your computer's network adapter or to another network device. You can also connect the BLW-04EX to your PC (using a wireless client adapter) via radio signals. Position both antennas on the back of the BLW-04EX into the desired positions. For more effective coverage, you may want to position one antenna along the vertical axis and th

Attach to Your Network Using Ethernet Cabling

The four LAN ports on the BLW-04EX can auto-negotiate the connection speed to 10 Mbps Ethernet or 100 Mbps Fast Ethernet, as well as the transmission mode to half-duplex or full-duplex.(See Appendix B for details on wiring.) Use twisted-pair cable to connect any of the four LAN ports on the BLW-04EX to an Ethernet adapter on your PC. Otherwise, you can cascade any of LAN ports on the BLW-04EX to an Ethernet hub or switch, and then connect your PC or other network equipment to the hub or switch. When inserting an RJ-45 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.

Warning: Do not plug a phone jack connector into any RJ-45 port. This may damage the BLW-04EX. Instead, use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

Notes:

- 1. Use 100-ohm shielded or unshielded twisted-pair cable with RJ-45 connectors for all connections. Use Category 3, 4 or 5 for connections that operate at 10 Mbps, and Category 5 for connections that operate at 100 Mbps.
- 2. Make sure each twisted-pair cable does not exceed 100 meters (328 feet).



2-4. Making LAN Connections

Attach to Your Network Using Radio Signals

Install a wireless network adapter in each computer that will be connected to the Internet or your local network via radio signals. PCI currently offers several wireless network cards, including the GW-DS110 Wireless PCI card and the GW-NS11S Wireless PC card.

Rotate both antennas on the back of the BLW-04EX to the desired position. For more effective coverage, position one antenna along the vertical axis and the other along the horizontal axis. Try to place the BLW-04EX in a position that is located in the center of your wireless network. Normally, the higher you place the antenna, the better the performance. Ensure that the BLW-04EX's location provides optimal reception throughout your home or office.

Computers equipped with a wireless adapter can communicate with each other as an independent wireless LAN by configuring each computer to the same radio channel. However, the BLW-04EX can provide access to your wired/wireless LAN or to the Internet for all wireless workstations. Each wireless PC in this network infrastructure can talk to any computer in the wireless group via a radio link, or access other computers or network resources in the wired LAN infrastructure or over the Internet viathe BLW-04EX.

The wireless infrastructure configuration not only extends the accessibility of wireless PCs to the wired LAN, but also doubles the effective wireless transmission range for wireless PCs by retransmitting incoming radio signals through the BLW-04EX.

A wireless infrastructure can be used for access to a central database, or for connection between mobile workers, as shown in the following figure:



2-5. Making WLAN Connections

Attach the BLW-04EX to the Internet

If Internet services are provided through an xDSL or cable modem, use unshielded or shielded twisted-pair Ethemet cable (Category 3 or greater) with RJ-45 plugs to connect the broadband modem directly to the WAN port on the BLW-04EX.



Note:

When connecting to the WAN port, use 100-ohm Category 3, 4 or 5 shielded or unshielded twisted-pair cable with RJ-45 connectors at both ends for all connections.

Connecting the Power Adapter

Plug the power adapter into the power socket on the BLW-04EX, and the other end into a power outlet. Check the indicator marked Power on the front panel to be sure it is on. If the Power indicator does not light up, refer to Troubleshooting in Appendix A.

3 – 1 CONFIGURING CLIENT PCS

TCP/IP Configuration

To access the Internet through the BLW-04EX, you must configure the network settings of the computers on your LAN to use the same IP subnet as the BLW-04EX. The default network settings for the BLW-04EX are:

IP Address: 192.168.1.1 Subnet Mask: 255.255.255.0

Note:

These settings may be changed to suit your network requirements, but you must first configure at least one computer as described in Chapter 5 to access the BLW-04EX's web configuration interface. (See Chapter 4 for information on configuring the BLW-04EX.)

If you have not previously configured TCP/IP for your computer, refer to "Configuring Client TCP/IP" on page 5-1.

All PCs connected to the BLW-04EX must be in the same IP subnet as the BLW-04EX. The default IP address of the BLW-04EX is 192.168.1.1 (where x means 2–254) and the subnet mask is 255.255.255.0. You can set the IP address for client PCs either by automatically obtaining an IP address from the BLW-04EX's DHCP service or by manual configuration. See "Setting Up TCP/IP to Work with the BLW-04EX" on page 5-5.

Chapter 4 CONIFIGURING THE BLW-04EX

After you have configured TCP/IP on a client computer, use a web browser to configure the BLW-04EX. The BLW-04EX can be configured by any Java-supported browser including Internet Explorer 4.0 or above, or Netscape Navigator 4.0 or above. Using the web management interface, you may configure the BLW-04EX and view statistics to monitor network activity.

To access the BLW-04EX's management interface, enter the IP your web browser address of the BLW-04EX in http://192.168.1.1

Note:

For some browsers, it may be necessary to include :8080 after the management IP address. For example:http://192.168.1.1:8080



Then click "LOGIN" (by default, there is no password).



4 – 1 Navigating the Web Browser Interfact

The BLW-04EX's management interface features a Setup Wizard and an Advanced Setup section. Use the Setup Wizard if you want to quickly setup the BLW-04EX for use with a cable modem or DSL modem.

Advanced setup supports more advanced functions like hacker attack detection, IP and MAC address filtering, intrusion detection, virtual server setup, virtual DMZ hosts, as well as other advanced functions.

Making Configuration Changes

Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, be sure to click the "Apply" or "Next" button at the bottom of the page to enable the new setting.

Note:

To ensure proper screen refresh after a command entry, be sure that Internet Explorer 5.0 is configured as follows: Under the menu "Tools/Internet Options/General/Temporary Internet Files/Settings," the setting for "Check for newer versions of stored pages" should be "Every visit to the page."

4 – 2 Setup Wizard

LAN



LAN IP

Use the LAN menu to configure the LAN IP address for the BLW-04EX and to enable the DHCP server for dynamic client address allocation. Set a period for the lease time if required. For home networks this may be set to "Forever", which means there is no time limit on the IP address lease.

IP Address Pool

A dynamic IP start address may be specified by the user, e.g. 192.168.1.100 (default value). Once this start IP address has been assigned, IP addresses running from 192.168.1.100 to 192.168.1.199 will be part of the dynamic IP address pool. IP addresses from 192.168.1.2 to 192.168.1.99, and 192.168.1.200 to 192.168.1.254 will be available as static IP addresses. Remember not to include the address of the BLW-04EX in the client address pool. Also remember to configure your client PCs for dynamic IP address allocation.

Wireless Configuration

To configure the BLW-04EX as a wireless access point for wireless clients (either stationary or roaming), all you need to do is define the radio channel, the Service Set identifier (SSID), and encryption options.

bRo WIRELESS SETTING	ad Lanner smart Manager
SSID	Any
SPEED	Fully Automatic 👻
MODE	All (1, 2, 5.5, 11Mbps) 💌
CHANNEL	Auto 👻
WEP	DISABLE 🔽
	Click ENTER to save settings and continue.

You must specify a common radio channel and SSID (Service Set ID) to be used by the BLW-04EX and all of your wireless clients. Be sure you configure all of your clients to the same values.

SSID: The Service Set ID. This should be set to the same value as other wireless devices in your network.

Note: The SSID is case sensitive and can consist of up to 32 alphanumeric characters.

SETUP WIZARD

For accurate timing of client filtering and log events, you need to set the time zone. Select your time zone from the dropdown list. Click "Next."

Broadband Type

Select the type of broadband connection you have.

br	Read & Vave)))) bRoad Lanner smart Manager	
WAN SETTING		
Choose Internet Connection	туре	
PPP over Ethernet	Some ISPs require the use of PPPoE to connect to their services.	
 Dynamic IP Address 	Obtain an IP address automatically.	
• PPTP	Point-to-Point Tunneling Protocol is a common connection method used for xDSL connections in Europe.	
 Static IP Address 	ISP assigns you a static IP address.	
 Bridge Mode 	Use BLW-04EX as a bridge.	
	NEXT	

Cable Modem



Your ISP may have given you a host name. If so, enter it into this field.

Click "Finish" to complete the setup. The Status page will open to allow you to view the connection status, as well as other information. See "Status" on page 64 for details.

Static IP xDSL

BRoad Land	Dad (* Lanner BVE)))) ner smart Manager
IP address assigned by your ISP	
Subnet Mask	
ISP Gateway Address	
Domain Name Server (DNS) Address	
Secondary DNS Address (optional)	
	Click ENTER to save settings and continue.

Some xDSL Internet Service Providers may assign a fixed (static) IP address for your gateway. If you have been provided with this information, choose this option and enter the assigned IP address, subnet mask, gateway IP, and DNS IP addresses for the BLW-04EX.

Click "Finish" to complete the setup. The Status page will open to allow you to view the connection status, as well as other information. See "Status" on page 64 for details.

PPP over Ethernet

	Read & bRoad Lanner smart Manager
PPPoE SETTING	
User Name	
Password	
Please retype your password	
Service Name	
Auto-reconnect	V ENABLE
Maximum Idle Time	10 (min)
Fixed IP Address	Enable Olisable
IP Address	0.0.0.0
Subnet mask	255 . 256 . 255 . 0
	CONNECT DISCONNECT
	Click ENTER to save settings and continue. ENTER

Enter the PPPoE user name and password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers.

Leave the Maximum Transmission Unit (MTU) on the default value (1492) unless you have a particular reason to change it.

Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, it will be dropped. Enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again.

Bridge Mode

bRog	Read & Nave)))) d Lanner smart Manager
BRIDGE MODE SE	TTING
IP Address	192 168 1 1
SUBNET MASK	255.255.255.0
	Click ENTER to save settings and continue.

Use your BLW-04EX as a Bridge.

Basic Setting

Use the web management interface to define system parameters, manage and control the BLW-04EX and its ports, or monitor network conditions. The following table outlines the selections available from this program.

	Cable Types and S	Specifications	
Cable	Туре	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 UTP 100m	100-ohm (328 ft)	RJ-45
100BASE-TX	Cat. 5 UTP 100m	100-ohm (328 ft)	RJ-45

Menu	Description
Status	Provides WAN connection type and status,
	firmware and hardware version numbers,
	system IP settings, as well as DHCP, NAT, Firewall info
	Displays the number of attached clients, the
	firmware versions, the physical MAC address for
	each media interface, and the hardware version and
	serial number.
	Shows the security and DHCP client log.
Tools	Contains options to backup & restore the current
	configuration, restore all configuration settings to
	the factory defaults, update system firmware, or
	reset the system.

Basic Setting

LAN



LAN IP

Use the LAN menu to configure the LAN IP address for the BLW-04EX and to enable the DHCP server for dynamic client address allocation. Set a period for the lease time if required. For home networks this may be set to "Forever", which means there is no time limit on the IP address lease.

IP Address Pool

A dynamic IP start address may be specified by the user, e.g. 192.168.1.100 (default value). Once this start IP address has been assigned, IP addresses running from 192.168.1.100 to 192.168.1.199 will be part of the dynamic IP address pool. IP addresses from 192.168.1.2 to 192.168.1.99, and 192.168.1.200 to 192.168.1.254 will be available as static IP addresses. Remember not to include the address of the BLW-04EX in the client address pool. Also remember to configure your client PCs for dynamic IP address allocation.

WAN

Specify the WAN connection type provided by your Internet Service Provider, then click "More Configuration" to enter detailed configuration parameters for the selected connection type.



PPP over Ethernet



Enter the PPPoE user name and password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers.

C hayter

The MTU (Maximum Transmission Unit) governs the maximum size of the data packets. Leave this on the default value (1492) unless you have a particular reason to change it.

Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, it will be dropped. Enable the Auto-reconnect option to automatically re-establish the connection when an application attempts to access the Internet again.

Dynamic IP



The Host Name is optional, but may be required by some ISPs. The default MAC address is set to the WAN's physical interface on the BLW-04EX. Use this address when registering for Internet service, and do not change it unless required by your ISP. If your ISP used the MAC address of an Ethernet card as an identifier when first setting up your broadband account, connect only the PC with the registered MAC address to the BLW-04EX and click the "Clone MAC Address" button. This will replace the current BLW-04EX MAC address with the already registered Ethernet card MAC address.

If you are unsure of which PC was originally set up by the broadband technician, call your ISP and request they register a new MAC address for your account. Register using the default BLW-04EX MAC address.

Static IP Address Setting



If your Internet Service Provider has assigned a fixed IP address, enter the assigned address and subnet mask for the BLW-04EX, then enter the gateway address of your ISP. You may need a fixed address if you want to provide Internet services, such as a web server, or FTP server.

Bridge Mode



Use your BLW-04EX as a Bridge.

. The second

Wireless Configuration

To configure the BLW-04EX as a wireless access point for wireless clients (either stationary or roaming), all you need to do is define the radio channel, the Service Set identifier (SSID), and encryption options.

bRo WIRELESS SETTING	RLanner Vave)))) ad Lanner smart Manager
SSID	Any
SPEED	Fully Automatic 💌
MODE	All (1, 2, 5.5, 11Mbps) 💌
CHANNEL	Auto 🗸
WEP	DISABLE
	Click ENTER to save settings and continue.

You must specify a common radio channel and SSID (Service Set ID) to be used by the BLW-04EX and all of your wireless clients. Be sure you configure all of your clients to the same values.

SSID: The Service Set ID. This should be set to the same value as other wireless devices in your network.

Note: The SSID is case sensitive and can consist of up to 32 alphanumeric characters.

Transmission Rate: Set the data rate transmitted from the BLW-04EX. The lower the data rate, the longer the transmission distance. (Default: Fully Automatic)

Fully Automatic	~
Fully Automatic	
11Mbps	
5.5Mbps	
Auto 1 or 2Mbps	
2Mbps	
1Mbps	

Basic Rate: Select "All (1, 2, 5.5, 11Mbps)" from the drop-down list to optimize the data transfer speed for your network. (Default: 1, 2Mbps)

All (1, 2, 5.5, 11Mbps)	۷
All (1, 2, 5.5, 11Mbps)	
1,2Mbps	

Channel: The radio channel through which the BLW-04EX communicates to PCs in its BSS. (Default: "Auto")

Note:

The available channel settings are limited to local regulations, which determine the number of channels that are available.

Encryption

bRoad Lann	Dan Lan 3VE	aner Z)))) art Ma	anage	r	
DNS SETTING Domain Name Server (DNS) Address	168	. 95	. 1	. 1	
Secondary DNS Address (optional)	168	. 95	. 192	. 1	
с	lick ENTER	to save set	tings and co	ontinue.	Enter

If you are transmitting sensitive data across wireless channels, you should enable Wired Equivalent Privacy (WEP) encryption.

Encryption requires you to use the same set of encryption/decryption keys for the BLW-04EX and all of your wireless clients. You can choose between standard 64-bit or the more robust 128-bit encryption keys.

WEP	DISABLE 🛛 💌
	DISABLE 40-bit WEP 128-bit WEP

You can automatically generate encryption keys or you can manually enter the keys. For automatic 64-bit security, you enter a passphrase that is used to create four keys (as shown below). The automatic 128-bit security generates a single key by entering a passphrase.





If you use encryption, configure the same keys used for the BLW-04EX on each of your wireless clients. Note that the Wired Equivalent Privacy (WEP) protects data transmitted between wireless nodes, but does not protect any transmissions over your wired network or over the Internet.

DNS



Domain Name Servers map numerical IP addresses to the equivalent domain name (e.g., www.planex.com.tw). Your ISP should provide the IP address of one or more domain name servers. Enter those addresses on this screen.

Password Settings

bRoad La	Lanner Jave))))
PASSWORD SETTING	
Current Password	
New Password	(3-12 Churucters)
Re-Enter Password for Verification	
	Click ENTER to save settings and continue.

Use this menu to restrict access based on a password. By default, there is no password. For security you should assign one before exposing the BLW-04EX to the Internet.

Passwords can contain from 3–12 alphanumeric characters and are not case sensitive.

If your password is lost, or you cannot gain access to the user interface, press the Reset button on the rear panel (holding it down for at least five seconds) to restore the factory defaults (default is "0000").

Time Zone



Sets the time zone for the BLW-04EX. This information is used for log entries and client access control.

4 – 3 ADVANCED SETTING

Address Mapping



Allows one or more public IP addresses to be shared by multiple internal users. Enter the Public IP address you wish to share into the "Global IP" field. Enter a range of internal IPs that will share the global IP into the "from" field.

Virtual Server

	bRoad	Lanner smart	Manager	
VIRT	UAL SERVER SETTING			
	Private IP	Private Port	Туре	Publi
	192. 168. 1.		● TCP ● UDP	
	192. 168. 1.		TCP UDP	
	192. 168. 1.			-
4.	192. 168. 1.			
	192. 168. 1.			
	192. 168. 1.			
· · ·	192, 168, 1,			
о. а	192, 168, 1,			
9. 10	192, 166, 1,			
	192, 100, 1,			
12	192.100.1.			
13.	192, 168, 1			
14.	192, 168, 1			
	192, 168, 1,		• TCP • UDP	
	192. 168. 1.		• TCP • UDP	
	192. 168. 1.		● TCP ● UDP	
	192. 168. 1.		● TCP ● UDP	
	192. 168. 1.		• TCP • UDP	
	192. 168. 1.		💿 TCP 🔵 UDP	

If you configure the BLW-04EX as a virtual server, remote users accessing services such as web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port number), the BLW-04EX redirects the external service request to the appropriate internal server and port.

The WAN interface should have a fixed IP address to properly utilize this function. For example, if you set Type/Public Port to TCP/80 (HTTP or web) and the Private IP/Port to 192.168.1.2/8080, then all HTTP requests from outside users will be transferred to port 8080 on 192.168.1.2. Therefore, by just entering the IP Address provided by the ISP, Internet users can access the service you provide at the internal address and port to which the BLW-04EX redirects them.

Some of the more common TCP service ports include: HTTP: 80, FTP: 21, Telnet: 23 and POP3: 110.

Security Settings Firewall

The firewall does not significantly affect system performance, so we advise enabling it to protect your network users. Select "Enable" and click the "APPLY" button to open the Firewall submenus.

The BLW-04EX's firewall can provide the access control of connected client PCs, block common hacker attacks, including IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding. The firewall does not significantly affect system performance, so we advise leaving it enabled to protect your network users.

Note:

When you select the "Enable" radio button of the "Enable or disable Firewall module function" field, be sure to press the "APPLY" button.

Access Control





Using this option allows you to specify different privileges for the client PCs.

The following items are included in the "Access Control" screen:

Field	Description
Normal Filtering Table	Displays the IP address and filtering
	status of the connected client PC
MAC Filtering Table	Displays the MAC address of the client PC
	Allows you to set the IP address of an
Remote Management	administrator for a remote management

Note:

When you select the "Enable" radio button of the "Enable or disable Firewall module function" field, be sure to press the "APPLY" button.

URL Blocking



Using the above screen to block access to the Web sites specified in the table.

Schedule Rule



You can filter Internet access for local clients based on the "Rule Name," and time of day.

- 1. Click on "Add Schedule Rule"
- 2. Define the appropriate settings for a schedule rule (as shown in the following screen).
- 3. Click "OK" and then the "APPLY" button to save your settings. (as shown on previous page)



Intrusion Detection



The Intrusion Detection feature of the BLW-04EX limits the access of the incoming traffic from the WAN port. When the SPI feature is turned on, all the incoming packets will be blocked unless certain types of traffic types are checked by the users. When the user checks certain types of traffic, only the particular type of traffic initiated from the Internal LAN will be allowed For example, if the user only checks "FTP service" from the Stateful Packet Inspection heading, all the incoming traffic will be blocked except the FTP connection initiated from the local LAN.

Stateful Packet Inspection

This option allows you to select different application types that are using dynamic port numbers. If you need to use the Stateful Packet Inspection (SPI) for blocking packets, check the radio button in the "Enable SPI and Anti-DoS firewall protection" field and then check the inspection type that you need, such as Packet Fragmentation, TCP Connection, UDP Session, FTP Service, H.323 Service and TFTP Service.

Hacker Prevention Feature

The BLW-04EX firewall inspects packets at the application layer, and maintains TCP and UDP session information, including timeouts and number of active sessions, provides the ability to detect and prevent certain types of network attacks such as DoS attacks.

Network attacks that deny access to a network device are called denial-ofservice (DoS) attacks. Denials of Service (DoS) attacks are aimed at devices and networks with a connection to the Internet. Their goal is not to steal information, but to disable a device or network so users no longer have access to network resource.

By using the above inspected information and timeout/threshold critieria, the BLW-04EX provides the following DoS attack preventions: Ping of Death (Ping flood) attack, SYN flood attack, IP fragment attack (Teardrop Attack), Brute-force attack, Land Attack, IP Spoofing attack, IP with zero length, TCP null scan (Port Scan Attack), UDP port loopback, Snork Attack etc.

Note:

The firewall does not significantly affect system performance, so we advise enabling the prevention features to protect your network users.

When hackers attempt to enter your network, we can alert you by e-mail Enter your E-mail address for alerting hacker access. Specify your E-mail servers, user name and password.

Connection Policy Enter the appropriate values for TCP/UDP sessions

DoS Criteria and Port Scan Criteria Setup DoS and port scan criteria in the spaces provided.

DMZ (Demilitarized Zone)



If you have a client PC that cannot run an Internet application properly from behind the firewall, then you can open the client up to unrestricted two-way Internet access. Enter the IP address of a DMZ host to this screen. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

MISC Setting 4 _



Allows a remote PC to configure, manage, and monitor the BLW-04EX using a standard web browser. Check "Enable" and enter the IP address of the remote host. Click "APPLY."

If you specify an IP address of 0.0.0.0, any host can manage the BLW-04EX.

Main Menu

Tools

Use the "Tools" menu to back up the current configuration, restore a previously saved configuration, restore factory settings, update firmware, and reset the BLW-04EX.

Configuration Tools



Choose a function and click

Reset



Click "Apply" to reset the BLW-04EX. The reset will be complete when the power LED stops blinking.

Note:

If you use the Reset button on the rear panel, the BLW-04EX performs a power reset. If the button is held depressed for over 5 seconds, all the LEDs will illuminate and the factory settings will be restored.

RESTORY DEFAULT



You can click the Reset to Default button to reset the settings of this device to the default values.

BACKUP/RESTORE



Backup allows you to save the BLW-04EX's configuration to a file. You can then check "Restore" to restore the saved backup configuration file. "Restore to factory defaults" resets the Baricade to the original settings.

Firmware Upgrade



This tool permits easy downloading of the latest Firmware. Download the upgrade file from the PCI website (www.planex.com.tw) and save it to your hard drive. Browse for the file and then click "Apply". Check the Status page Information section to confirm that the upgrade process was successful.

Status

The Status screen displays WAN/LAN connection status, firmware, and hardware version numbers, illegal attempts to access your network, as well as information on DHCP clients connected to your network.



Status

The following items are included on this screen:

Section	Description
INTERNET	Displays WAN connection type and status.
GATEWAY	Displays system IP settings, as well as DHCP and Firewall status.
INFORMATION	Displays the number of attached clients, the firmware versions, the physical MAC address for each media interface, as well as the hardware version and serial number.
Security Log	Displays illegal attempts to access your network.
Save	Click on this button to save a security log file.
Clear	Click on this button to delete the access log.
Refresh	Click on this button to refresh the screen.
DHCP Client Log	Displays information on all DHCP clients on yournetwork.
Release	Click on this button to confirm Dynamic settings.
Renew	Click on this button to refresh Dynamic settings.

If you have not previously installed the TCP/IP protocols on your client PCs, refer to the following section. If you need information on how to configure a TCP/IP address on a PC, refer to "Setting Up TCP/IP to Work with the BLW-04EX" on page 5-5.

5 – 1 Installing TCP/IP

Windows 95/98/ME

- 1. Click "Start/Settings/Control Panel."
- 2. Double-click the Network icon and select the "Configuration" tab in the Network window.
- 3. Click the "Add" button.
- 4. Double-click "Protocol."



 Select "Microsoft" in the manufacturers list. Select "TCP/IP" in the Network Protocols list. Click the "OK" button to return to the Network window.

Select Network Protocol	×
Click the Network Pr an installation disk fo	otocol that you want to install, then click OK. If you have r this device, click Have Disk.
Manufacturers:	Network Protocols:
🖗 Banyan	Microsoft 32-bit DLC
3 IBM	Microsoft DLC
Y Microsoft	VetBEUI
Vovell	TCP/IP
	WAN support for ATM
	Winsock2 ATM Service Provider 🔹
	Have Disk
	OK Cancel

6. The TCP/IP protocol will be listed in the Network window. Click "OK" to complete the installation procedure and restart your PC to enable the TCP/IP protocols. The operating system may prompt you to restart your system. Click "Yes" and the computer will shut down and restart

Windows 2000

- 1. Click the "Start" button and choose "Settings," then click "Control Panel."
- Double click the "Network and Dial-up Connections" icon, then "Local Area Connection" icon, and press the "Properties" button in the "General" tab.
- 3. Click the "install..." button to add the network component to your PC.
- 4. Double click on "Protocol" to add the TCP/IP protocol.

Select Network Component Type
Click the type of network component you want to install:
Elient Service Protocol
Description A protocol is a language your computer uses to communicate with other computers.
Add Cancel

5. Choose "Internet Protocol (TCP/IP)" in the Network Protocols. Click the "OK" button to return to the Network window.



The TCP/IP protocol will be listed in the Network window. Click "OK" to complete the install procedure.

5 - 2 Setting Up TCP/IP to Workwith the BLW-04EX

Windows 95/98/ME

- 1. Click "Start/Settings/Control Panel."
- Double-click the Network icon. Highlight the TCP/IP line that has been assigned to your network card on the "Configuration" tab of the Network window.

nfiguration Identifica	ation Access I	Control	
The following <u>n</u> etwork	components a	re installed:	
📇 Client for Microsof	it Networks		
PLANEX FW-100	TA Fast Ethern	st NIC	
File and printer sh	ating for Micros	oft Network	•
G in and proton of	angiorinee		
<u>A</u> dd	Remove		Properties
Primary Network Logo	in:		
Client for Microsoft N	etworks		
	1		
Eile and Print Sha	ring		
Description			
Description TCP/IP is the protoc	ol you use to c	onnect to th	ne Internet an
Description TCP/IP is the protoc wide-area networks.	col you use to c	onnect to th	ne Internet an
Description TCP/IP is the protor wide-area networks.	col you use to c	onnect to th	ne Internet an
Description TCP/IP is the protor wide-area networks.	col you use to c	onnect to th	ne Internet an

- 3. Click the "Properties" button.
- 4. You may dynamically assign TCP/IP address settings to a client, or you can manually configure a client with address settings to meet your specific network requirements. (Note that the default IP address of the BLW-04EX is 192.168.1.1.)

Windows 2000

- 1. Click the "Start" button and choose "Settings," then click "Control Panel."
- 2. Double click the "Network and Dial-up Connections" icon, then "Local Area Connection" icon, and press the "Properties" button in the "General" tab.
- 3. Select the TCP/IP line that has been assigned to your network card in the "Local Area Connection Properties" window.
- 4. Click the "Properties" button to set the TCP/IP protocol for the BLW-04EX.

ocal Area Connection 2 Properties
General
Connect using:
PLANEX FW-100TA Fast Ethernet NIC
Configure
Components checked are used by this connection:
Comparing the and Printer Sharing tor Microsoft Networks Comparing Protocol Software Protocol Install Install Install Properties
Description
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.
Show icon in taskbar when connected
Close

5. You can dynamically assign TCP/IP address settings to a client, or you can manually configure a client with address settings to meet your specific network requirements. (Note that the default IP address of the BLW-04EX is 192.168.1.1.)

Windows XP

1. Click the "start" button and choose "Control Panel."

- Select the "Network and Internet Connections" icon, then click the "Network Connections" icon, and double click on the "LAN or High-Speed Internet."
- 3. Press the "Properties" button in the "General" tab.
- 4. Select the TCP/IP line that has been assigned to your network card in the "Local Area Connection Properties" window.
- 5. Click the "Properties" button to set the TCP/IP protocol for the BLW-04EX.



6. You can dynamically assign TCP/IP address settings to a client, or you can manually configure a client with address settings to meet your specific network requirements. (Note that the default IP address of the BLW-04EX is 192.168.1.1.)

Configuring Your Computer with Windows 95/98/ME

You may find that the instructions here do not exactly match your version of Windows. This is because these steps and screenshots were created in Windows 98. Windows 95 and Windows Millennium Edition are very similar, but not identical, to Windows 98.

Step 1. Configure TCP/IP Settings

After you have completed the hardware setup by connecting your devices, you need to configure the computer to connect to the BLW-04EX. You need to determine how your ISP issues your IP address. Many ISPs issue these numbers automatically using a networking technology known as Dynamic Host Control Protocol, or DHCP. Other ISPs will specify your IP address and associated numbers, which you must enter manually. This is also known as a static IP address. How your ISP assigns your IP address determines how you will configure your computer.

1. From the Windows desktop, click "Start/Settings/Control Panel."



2. Double-click the "Network" icon.



3. On the "Network" window "Configuration" tab, double-click the "TCP/IP" entry for your network card.

etwork			?
Configuration Identification	n Access Control	1	
The following network co	mponents are insta	lled:	
Client for Microsoft N	etworks Fast Ethernet NIC		
TCP/IP	r dat Ethernist fille		
📮 File and printer sharin	g for Microsoft Net	works	
Add	Remove	P <u>r</u> o	perties
Primaru Network Logon:			
Client for Microsoft Netw	orks		
			_
Eile and Print Sharing			
Description			
TCP/IP is the protocol j wide-area networks.	you use to connect	to the Inte	ernet and
		74	Coursel
	L	JK	Lancel

4. Click the "IP Address" tab.If "Obtain an IP address automatically" is already checked, your computer is already configured for DHCP.Click "Cancel" to close each window, and skip to "Step 2. Disable HTTP Proxy" on page 5-12.

TCP/IP Properties		<u>? ×</u>
Bindings	Advanced	NetBIDS
DNS Configuration	Gateway WINS Confi	guration IP Address
An IP address can If your network doe your network admir the space below.	be automatically assigne is not automatically assign iistrator for an address, ar	d to this computer. n IP addresses, ask nd then type it in
Obtain an IP	address automatically	
C Specify an IP	address:	
	د .	
	OK	Cancel

5. Make a note of the current IP Address and Subnet Mask (a space is

TCP/IP Properties		? ×
Bindings DNS Configuration	Advanced Gateway WINS Con	NetBIOS figuration IP Address
The first gateway i The address order machines are user	in the Installed Gateway in the list will be the orde d.	list will be the default. er in which these
New gateway:	<u>A</u> d	d
_ Installed gatewa	US:	ove
		K Cancel

provided on the next page).

- Click the "Gateway" tab and record the numbers listed under "Installed gateways."
- Click the "DNS Configuration" tab. Record the DNS servers listed under "DNS Server Search Order."
- 8. Click the "IP Address" tab and then check "Obtain an IP address

TCP/IP Properties			?
Bindings DNS Configuration	Advanced Gateway WINS	NetBIC Configuration IP .)S Address
Disable DNS			
C Enable DNS			
Host:		ain:	
DNS Server Sea	ich Order		-
	· · ·	Add	
		<u>R</u> emove	
Danalis Culffin Co			
Domain burns be	aron urder	6.dH	
		Bemove	
		пещаче	
		ок С	ancel

automatically." Click "OK."

 Windows may need your Windows 95/98/ME CD to copy some files. After it finishes copying, it will then prompt you to restart your system.



Click "Yes" and the computer will shut down and restart.

TCP/IP Configuration Setting

IP Address	···
Subnet Mask	·
Primary DNS Server	
Secondary DNS Server	

Default Gateway

Step 2. Disable HTTP Proxy

You will need to verify that the "HTTP Proxy" feature of your web browser is disabled. This is so that your web browser will be able to view the configuration pages inside your BLW-04EX. The following steps are for Internet Explorer and for Netscape. Determine which browser you use and follow the appropriate steps.

Internet Explorer



- 1. Open Internet Explorer. Click "Tools/Internet Options."
- 2. In the "Internet Options" window, click the "Connections" tab. Click the



- "LAN Settings" button.
- 3. Clear all the check boxes and click "OK". Click "OK" again to close the

use of manual s	guration may ove ettings, disable a	rride manual set utomatic configu	ings. To ensure th ration.
C Automatical	y detect settings		
🗌 Use automa	tic configuration	script	
Address			
Proxy server			
🗖 Use a pro <u>x</u> y	server		
Addr <u>e</u> ss:		Pot	Advanged

"Internet Options" window.

Netscape



1. Open Netscape. Click "Edit," then click "Preferences."

- 2. In the "Preferences" window, under "Category," double-clic \boldsymbol{k}
 - "Advanced," then click "Proxies." Check "Direct connection to the

Internet." Click "OK".

3. Repeat these steps for each Windows 95/98/ME computer connected to

Preferences		×
Helferences	Proxies A network prove is u computer and the in increase performance via a caching. © Direct commed (Manual prov) Contiguration I	Configure provies to access the Internet and to provide additional recurity between your terret (urualy along with a finewal] and/or to between retevolves by reducing redundant traffic tion to the Internet configuration accelor (URL)
		OK Cancel Help

your BLW-04EX.

Step 3. Obtain IP Settings from Your BLW-04EX

Now that you have configured your computer to connect to your Wireless Barricade, it needs to obtain new network settings. By releasing old IP settings and renewing them with settings from your BLW-04EX, you will also verify that you have configured your computer correctly.

	*	Windows Update	
	-	Programs	•
	*	Favorites	•
		Documents	•
	-	<u>S</u> ettings	•
	Q)	Eind	•
	2	Help	
s 98	X	<u>B</u> un	
Mobi	2	Log Off Administrator	
Š	٩	Shut Down	

- 1. Click "Start/Run."
- 2. Type "WINIPCFG" and click "OK." It may take a minute or two for the

Run	? ×
<u>_</u>	Type the name of a program, folder, document, or Internet resource, and Windows will open it for you.
<u>O</u> pen:	WINIPCFG
	OK Cancel Browse

"IP Configuration" window to appear.

3. From the dropdown menu, select your network card. Click "Release" and then "Renew." Verify that your IP address is now 192.168.1.xxx, your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168. 2.1. These values confirm that your BLW-04EX is functioning. Click "OK" to

Y IP Configuration - Ethernet Adapter Information	
	PLANEX FW-TUUTA Fast Ethem
Adapter Address	00-90-CC-40-63-E4
IP Address	192.168.1.101
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
OK Re Release All Re	Renew new All

ļ

close the "IP Configuration" window.

Configuring Your Computer in Windows 2000 Step 1. Configure TCP/IP Settings

After you have completed the hardware setup, you need to configure your computer to connect to the BLW-04EX. You also need to determine how your ISP issues your IP address. Many ISPs issue these addresses automatically, using a networking technology known as Dynamic Host Configuration Protocol, or DHCP. Other ISPs will specify your IP address and associated numbers, which you must enter manually. This is also known as a static IP address. How your ISP assigns your IP address determines how you will configure your computer.

Here is what to do:



1. From the Windows desktop, click "Start/ Settings/Control Panel."



2. Double-click the "Network and Dial-up Connections" icon.



3. Double-click the icon that corresponds to the connection to your BLW-04EX.



4. Click "Properties."

- CANCATA	V-100TA Fast Ethernet N	С
		Configu
Components chec	ked are used by this conr	ection:
File and Pr File and	rinter Sharing for Microsoft atocol (TCP/IP) Protocol	Networks
Install	Uninstall	Properties
Description		
Description Transmission Cr wide area netw across diverse i	ontrol Protocol/Internet Pr ork protocol that provides nterconnected networks.	otocol. The defaul communication

- 5. Double-click "Internet Protocol (TCP/IP)."
- 6. All the information that you need to record is on the "Internet Protocol (TCP/IP) Properties" screen. Use the table on the next page to record the information. If "Obtain an IP address automatically" and "Obtain DNS server address automatically" are already checked, your computer is already configured for DHCP. Click "Cancel" to close each window, and skip to "Step 2. Disable HTTP Proxy" on page 5-18.
- Check "Obtain an IP address automatically" and check "Obtain DNS server address automatically." Click "OK." Click "OK" or "Close" to close each window.

TCP/IP Configuration Setting

IP Address	
Subnet Mask	
Primary DNS Server	
Secondary DNS Server	
Default Gateway	

Step 2. Disable HTTP Proxy

You will need to verify that the "HTTP Proxy" feature of your web browser is disabled. This is so that your web browser will be able to view the configuration pages inside the BLW-04EX. The following steps are for Internet Explorer and for Netscape. Determine which browser you

69

use and follow the appropriate steps.

Internet Explorer

Hail and News Sector Back Forward Swetchronize Address @ Windows Update Sec Links @ Best of the Web @ MSN Messenger Service Sec	<u>E</u> ile <u>E</u> dit ⊻iew F <u>a</u> vorites	<u>I</u> ools <u>H</u> elp
Links @ Best of the Web @ (Show <u>R</u> elated Links *	Back Forward	Mail and News Synchronize Windows Update
	Links @ Best of the Web @ [MSN Messenger Service Show <u>R</u> elated Links

- 1. Open Internet Explorer. Click "Tools/Internet Options."
- 2. In the "Internet Options" window, click the "Connections" tab. Next,

Dial-un settings	ur computer to the Interne	st
		Add
		Bemove
		Settings
 Dial Whenever O Always dial my Current default: 		not present Sigt Defaul
E Perform system		aing
Local Area Networ	k (LAN) settings	

click the "LAN Settings" button.

- 3. Clear all the checkboxes.
- Click "OK," and then click "OK" again to close the "Internet Options" window.

Local Area Network (LAN) Settings	? ×
Automatic configuration	
Automatic configuration may override manual settings. use of manual settings, disable automatic configuration.	To ensure the
Automatically detect settings	
Use automatic configuration script	
Address	
Proxy server	
Use a proxy server	
Address: Port	Advanged
Bypass proxy server for local addresses	
OK	Cancel

Netscape



- 1. Open Netscape. Click "Edit," then click "Preferences."
- 2. In the "Preferences" window, under "Category" double-click "Advanced," then click "Proxies," Select "Direct connection to the

ч,



Internet." Click "OK."

Step 3. Obtain IP Settings From Your BLW-04EX

Now that you have configured your computer to connect to your BLW-04EX, it needs to obtain new network settings. By releasing old IP settings and renewing them with settings from your BLW-04EX, you will also verify that you have configured your computer correctly.

- l georg
- 1. From the Windows desktop, click "Start/ Programs/ Accessories/ Command Prompt."



2. In the "Comm and Promp t" window, type "IPCONFIG /RELEASE" and press the <ENTER> key.



 Type "IPCONFIG /RENEW" and press the <ENTER> key. Verify that your IP address is now 192.168.1.xxx (2-254), your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168.1.1. These values confirm that your BLW-04EX is functioning.



4. Type "EXIT" and press <ENTER>.

Configuring Your Computer with Windows XP Step 1. Configure TCP/IP Settings

After you have completed the hardware setup, you need to configure your computer to connect to your BLW-04EX. You also need to determine how your ISP issues your IP address. Many ISPs issue these numbers automatically, using a networking technology known as Dynamic Host Configuration Protocol, or DHCP. Other ISPs will specify your IP address and associated numbers, which you must enter manually. This is also known as a static IP address. How your ISP assigns your IP address determines how you will configure your computer.

Here is what to do:

1. From the Windows desktop, click the "start" button. Choose "Control Panel."



2. Select the "Network and Internet Connections" icon, then click the "Network Connections" icon.



3. Double click on the "LAN or High-Speed Internet."



4. Click "Properties."

🕹 Local Area Co	nnection Status	? 🛿
General Support		
Connection		
Status:		Connected
Duration:		00:17:11
Speed:	1	00.0 Mbps
Activity	Sent — 剩 —	Received
Bytes:	2,406	508
Properties	Disable	
		Close

5. Double-click "Internet Protocol (TCP/IP)."

👍 Local Area Conn	ection Properties	? 🛛
General Authenticati	on Advanced	
Connect using:		
B PLANEX FW-	100TA Fast Ethernet NIC	
This connection use:	s the following items:	Configure
Client for Mi Generation of the second secon	crosoft Networks hter Sharing for Microsoft Netw t Scheduler tocol (TCP/IP)	rorks
Istall Unin ption mission Control Protocol/1	stal Properties	
ted	Show icon in notificati	ion area when conne
Cancel		0

6. All the information that you need to record is on the "Internet Protocol (TCP/IP) Properties" dialog box. Use the spaces below to record the information.

Internet Protocol (TCP/IP) Prop	erties 🛛 🛛 🔀
General Alternate Configuration	
You can get IP settings assigned aut this capability. Otherwise, you need to the appropriate IP settings.	omatically if your network supports o ask your network administrator for
Obtain an IP address automatic-	ally
O Use the following IP address: -	
IP address:	
Subnet mask:	
Default gateway:	
 Obtain DNS server address auto 	matically
O Use the following DNS server a	ddresses:
Preferred DNS server:	
Alternate DNS server:	
	Advanced
	OK Cancel

If "Obtain an IP address automatically" and "Obtain DNS server address automatically" are already selected, your computer is already configured for DHCP. Click "Cancel" to close each window, and skip to "Step 2. Disable HTTP Proxy" on page 5-25.

7. Select "Obtain an IP address automatically" and then select "Obtain DNS server address automatically." Then click "OK." Click "OK" or "Close" to close each window.

TCP/IP Configuration Setting



Step 2. Disable HTTP Proxy

You will need to verify that the "HTTP Proxy" feature of your Web browser is disabled. This is so that your Web browser will be able to view the configuration pages inside your BLW-04EX. The following steps are for Internet Explorer and for Netscape. Determine which browser you use and follow the appropriate steps.

Internet Explorer

1. Open Internet Explorer and click the stop button. Click "Tools," then "Internet Options."



2. In the "Internet Options" window click the "Connections" tab. Next, click the "LAN Settings..." button.



3. Clear all the checkboxes.

Auto use c	natic config f manual s	juration r ettings, d	may ove disable a	rride ma utomatic	nual setti configur	ngs. To e ation.	nsure th
A	utomatically	y detect s	settings				
_υ	e automat	ic configu	uration s	cript			
A	ddress						
Proxy	server						
□ U di	xe a proxy al-up or VP	server fo N connec	or your L tions).	AN (The	se setting	şs wil not	apply to
	ddress:					Adv	anced

 Click "OK," and then click "OK" again to close the "Internet Options" Windows.

Step 3. Obtain IP Settings From Your BLW-04EX

Now that you have configured your computer to connect to your BLW-04EX, it needs to obtain new network settings. By releasing any old IP settings and renewing them with settings from your BLW-04EX, you will also verify that you have configured your computer correctly.

- C layter 5
- From the Windows desktop, click the "Start" button, then "Programs," then "Accessories," and then click "Command Prompt."



2. In the "Command Prompt" window, type "IPCONFIG /RELEASE" and press the <ENTER> key.



 Type "IPCONFIG /RENEW" and press the <ENTER> key. Verify that your IP address is now 192.168.1.xxx (2-255), your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168.1.1. These values confirm that your BLW-04EX is functioning.



Type "EXIT" and press <ENTER> to close the "Command Prompt" window.

Configuring Your Computer with Windows NT 4.0 Step 1. Configure TCP/IP Settings

After you have completed the hardware setup, you need to configure your computer to connect to your BLW-04EX. You need to determine how your ISP issues your IP address. Many ISPs issue these numbers automatically using a networking technology known as Dynamic Host Configuration Protocol, or DHCP. Other ISPs will specify your IP address and associated numbers, which you must enter manually. This is known as a static or fixed IP address. How your ISP assigns your IP address determines how you will configure your computer.

Here is what to do:

1. From the Windows desktop click "Start/ Settings/Control Panel."



2. Double-click the "Network" icon.



3. Click on the "Protocols" tab.

Network	? >
Identification Services Protocols Adapters Bindings	
Network Protocols:	
GTCP/IP Protocol	
Add <u>R</u> emove <u>Properties</u> Update	
Description: Transport Control Protocol/Internet Protocol. The default wid area network protocol that provides communication across diverse interconnected networks.	9
Ca	incel

4. Double-click "TCP/ IP Protocol."

- 5. Click on the "IP Address" tab.
- 6. In the "Adapter" dropdown list, be sure your Ethernet adapter is selected.

IP Address DNS	WINS Address Routing	1
An IP address can by a DHCP server, ask your network a the space below.	be automatically assigned i . If your network does not h administrator for an address,	to this network card lave a DHCP server, and then type it in
Adagter:	100TA Fast Ethernet NIC	
Obtain an IF	^o address from a DHCP serv	er
C Specify an I	P address	
	· · · ·	
		Advanced

7. If "Obtain an IP address automatically" is already checked, your computer is already configured for DHCP. Click "Cancel" to close each window, and skip to "Step 2. Disable HTTP Proxy" on page 5-32. In the "TCP/IP Properties" dialog box, click the IP address tab to locate your IP Address, Subnet Mask, and Default Gateway. Record these values in the space provided below.

Microsoft TCP/IP Properties	?	×
IP Address DNS WINS Addres	:: Routing	_
Domain Name System (DNS)		
Host Name:	Domain:	
DNS Service Search Urder		
	Up†	
	Down4	
Add <u>E</u> dt	Biemoye	
Domain Suffix Search Order		
	Down	
Add Edg	Biemove	
		-1
UK	Cancel Apply	

- Click the "DNS" tab to see the primary and secondary DNS servers. Record these values in the appropriate spaces below.
- After writing down your IP settings, click the "IP address" tab. Check "Obtain IP address automatically" and click "OK." Click "OK" again to close the "Network" window.
- 10.Windows may copy files and will then prompt you to restart your system. Click "Yes" and your computer will shut down and restart.

TCP/IP Configuration Setting

IP Address	···
Subnet Mask	
Primary DNS Server	·
Secondary DNS Server	
Default Gateway	·

Step 2. Disable HTTP Proxy

You will need to verify that the "HTTP Proxy" feature of your web browser is disabled. This is so that your web browser will be able to view the BLW-04EX configuration pages. The following steps are for Internet Explorer and for Netscape. Determine which browser you use and follow the appropriate steps.

Internet Explorer

1. Open Internet Explorer. Click "Tools/Internet Options."

Microsoft Internet Explorer			
<u>Fie Edit View Favorites</u>	Lools Help		
Back Forward	Maiand News Sunchronize Windows∐pdate		
Links 🙋 Best of the Web 🙋 (MSN Messenger Service Show <u>R</u> elated Links		
	internet Options		

2. In the "Internet Options" window, click the "Connections" tab. Next, click "LAN Settings."

ernet Options	
Seneral Security Content Connections Program	ns Advanced
Use the Internet Connection Wizard to connect your computer to the Internet.	[Setup.]
- Dialup settings	
	Add
	Remove
	Settings
Ordergenereverse anetwork connection is not pre Always did my default agrinisation Current default. None	sent S <u>e</u> rDelault
Perform system security check before claima	
- Local Area Network (LAN) settings	
	LAN Settings
	amont L Annolu
	ariuar (Spp)/

- 3. Clear all the checkboxes.
- Click "OK," and then click "OK" again to close the "Internet Options" window.

cal Area Netw Automatic confi	ork (LAN) Settings ?
Automatic confi use of manual s	guration may override manual settings. To ensure the ettings, disable automatic configuration
Automatical	ly detect setting:
□ U:e automa	tic configuration script
Address	
Proxy corver	
□ Use a pro <u>x</u> y	server
Addigee:	Pert Advanged
E Bipais	proxy server for local addresses

Netscape

1. Open Netscape. Click "Edit," then click "Preferences..."

<u> </u>	etec	аре			
<u>F</u> ile	<u>E</u> dit	⊻iew	<u>G</u> o	$\underline{W}{indow}$	<u>H</u> elp
	0 [] []	lut Jopy Jaste ielect A	1	Cril+X Cril+C Cril+V Cril+A	Home Search
	E F S	ind in P ind Aga Isarch <u>I</u> Pi <u>e</u> feren	age in nteine ces	Ctrl+F Ctrl+G	People 🖳 Yellow

 In the "Preferences" window, under "Category" double-click "Advanced," then click "Proxies." Check "Direct connection to the Internet." Click "OK."



Step 3. Obtain IP Settings From Your BLW-04EX

Now that you have configured your computer to connect to your BLW-04EX, it needs to obtain new network settings. By releasing old IP settings and renewing them with settings from the BLW-04EX, you will also verify that you have configured your computer correctly.

1. On the Windows desktop, click "Start/ Programs/Command Prompt."



2. In the "Command Prompt" window, type "IPCONFIG / RELEASE" and press the <ENTER> key.



 Type "IPCONFIG /RENEW" and press the <ENTER> key. Verify that your IP Address is now 192.168.1.xxx, your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168.1.1. These values confirm that the BLW-04EX is functioning.



Type "EXIT" and press <ENTER> to close the "Command Prompt" window.

Configuring Your Macintosh Computer

You may find that the instructions here do not exactly match your screen. This is because these steps and screenshots were created using Mac OS 8.5. Mac OS 7.x and above are all very similar, but may not be identical to Mac OS 8.5.

Step 1. Configure TCP/IP Settings

After you have completed the hardware setup, you need to configure your computer to connect to the BLW-04EX. You need to determine how your ISP issues your IP address. Many ISPs issue these numbers automatically using a networking technology known as Dynamic Host Configuration Protocol, or DHCP. Other ISPs will specify your IP address and associated numbers, which you must enter manually. This is also known as a static IP address. How your ISP assigns your IP address determines how you will configure your computer.

Here is what to do:

1. Pull down the Apple Menu. Click "Control Panels" and select TCP/IP.



- C layter 5
- 2. In the TCP/IP dialog box, make sure that "Ethemet" is selected in the "Connect Via:" field.



If "Using DHCP Server" is already selected in the "Configure" field, your computer is already configured for DHCP. Close the TCP/IP dialog box, and skip to Step 2 Disable HTTP Proxy (bottom of this page).

- 3. All the information that you need to record is on the "TCP/IP" dialog box. Use the space below to record the information.
- 4. After writing down your IP settings, select "Using DHCP Server" in the "Configure" field and close the window.
- Another box will appear asking whether you want to save your TCP/IP settings. Click "Save".

		Save changes to the current configuration? Saving the changes may interrupt any TCP/IP services currently established.		
		Don't Save	Cancel Save	
TCP/IP Confi	guration	Setting		
IP Address				
Subnet Mask				
Router			_·	
Name Server				

Step 2. Disable HTTP Proxy

You will need to verify that the "HTTP Proxy" feature of your web browser is disabled. This is so that your web browser will be able to view the BLW-04EX configuration pages. The following steps are for Internet Explorer and for Netscape. Determine which browser you use and follow the appropriate steps.

Internet Explorer

1. Open Internet Explorer. Click "Edit/ Preferences."



2. In the Internet Explorer "Preferences" window, under "Network," select "Proxies."

- JOHEN	(Fing analysis with the phase of the second seco	n Alegowski petwork John Song Song Song Saligari, etc. 7 i Shiye ¹ John Golf Song Reference Distantia (* 1957)
· Plante fifefill	This Prenty	Sperites,
Q FRANS SufeComplete	Diffee West Precy Dir 4.1	
O CONTRACTOR	- El render Transforment	
w. Entertrait training	G1. (300 993)	(Prote TRom)
Carrier Male - X	E Transford	(antips.)
Q.Ceel	🔟 (as) 🖦 Rosan	(anthur)
🗢 Hed Port	Part and the weather that the second for	inter due l'adains de the scenetion
G. Protoxa Hepera	netitatie en anne en canton tet	arrayan" its.
O Proset		
water approved		
Q' Minut, al.		///////////////////////////////////////
	-	
<u>65</u>		Concel Dis

3. Uncheck all checkboxes and click "OK."

Netscape

1. Open Netscape. Click "Edit/Preferences."



2. In the column labeled "Category," select "Advanced." Under the "Advanced" category, select "Proxies."



3. Select "Direct Connection to the Internet" and click "OK."

Step 3. Obtain IP Settings From Your BLW-04EX

Now that you have configured your computer to connect to your BLW-04EX, it needs to obtain new network settings. By releasing old IP settings and renewing them with settings from the BLW-04EX, you will also verify that you have configured your computer correctly.

1. Pull down the Apple Menu. Click "Control Panels" and "TCP/IP."





- 2. In the TCP/IP window, your new settings will be shown. Verify that your IP address is now 192.168.1.xxx, your Subnet Mask is 255.255.255.0 and your Default Gateway is 192.168.1.1. These values confirm that your BLW-04EX is functioning.
- 3. Close the TCP/IP window.

Dynamic IP Allocation via a DHCP Server

Check "Obtain an IP address automatically" on the IP Address tab. Do not input any values under the Gateway tab, and check "Disable DNS" on the "DNS Configuration" tab. These settings will be automatically configured by the DHCP server. Click "OK" and reboot your system to implement the changes.

your network administrator for the space below.	Bindings Adv.	anced NetBIOS WINS Configuration IP Address
Qbtain an IP address au C Specify an IP address	The first gateway in the Instal The address order in the list v	TCP/IP Properties ?
PAdress	machines are used.	Bindings Advanced NetBIDS DNS Configuration Gateway WINS Configuration IP Address
Sydmet Mask:	New gateway:	Disable DNS Enable DNS
	Installed gateways:	Host Domain
		<u>A</u> dd
		Elempre
		Domain Suffix Search Orden

Manual IP Configuration

- Check "Specify an IP address" on the IP Address tab. Enter an IP address based on the default network 192.168.1.x (where x is between 2 and 254), and use 255.255.255.0 for the subnet mask.
- On the "Gateway" tab, add the IP address of the BLW-04EX (default: 192.168.1.1) in the "New gateway" field and click "Add."
- 3. On the "DNS Configuration" tab, add the IP address for the BLW-04EX and click "Add." This automatically relays DNS requests to the DNS server(s) provided by your ISP. Otherwise, add specific DNS servers into the "DNS Server Search Order" field and click "Add."



 After finishing TCP/IP setup, click "OK," and then reboot the computer. After that, set up other PCs on the LAN according to the procedures described above.

Verifying Your TCP/IP Connection

After installing the TCP/IP communication protocols and configuring an IP address in the same network as the BLW-04EX, use the "Ping" command to check if your computer has successfully connected to the BLW-04EX. The following example shows how the Ping procedure can be executed in an MS-DOS window. First, execute the "Ping" command:

ping 192.168.1.1

If a message similar to the following appears:

Pinging 192.168.1.1 with 32 bytes of data:

Reply from 192.168.1.1: bytes=32 time=2ms TTL=64

a communication link between your computer and the BLW-04EX has been successfully established.

If you get the following message, Pinging 192.168.1.1 with 32 bytes of data: Request timed out.

C hayter 5

- there may be something wrong in your installation procedure. Check the following items in sequence:
- 1. Is the Ethernet cable correctly connected between the BLW-04EX and the computer?

The LAN LED on the BLW-04EX and the Link LED of the network card on your computer must be on.

2. Is TCP/IP properly configured on your computer?

If the IP address of the BLW-04EX is 192.168.1.1, the IP address of your PC must be from 192.168.1.2 - 192.168.1.254 and the default gateway must be 192.168.1.1.

If you can successfully Ping the BLW-04EX you are now ready to connect to the Internet!

This appendix describes common problems you may encounter and possible solutions to them. The BLW-04EX can be easily monitored through panel indicators to identify problems. If you cannot resolve any connection problems after checking the indicators, then refer to the other sections in the following table.

Troubleshooting Chart		
Symptom	Action	
LED Indicators		
Power LED is OFF	 External power supply has failed or is disconnected. Check connections between the BLW-O4EX, the external power supply, and the wall outlet. If the power indicator does not light when the power cord is plugged in, you may have a problem with the power outlet, power cord, or external power supply. If the unit powers off after running for a while, check for loose power connections, power losses, or surges at the power outlet. If you cannot isolate the problem, then the external power supply may be defective. In this case, contact PCI Technical Support for assistance. 	

TROUBLESHOOTING

Troubleshooting Chart		
Symptom	Action	
LED Indicators		
Unk LED is OFF	Verify that the BLW-04EX and attached device are	
	powered on.	
	 Be sure the cable is plugged into both the BLW-04EX 	
	and the corresponding device.	
	Verify that the proper cable type is used and that its	
	length does not exceed the specified limits.	
	 Se sure that the network interface on the attached 	
	device is configured for the proper communication	
	speed and duplax mode.	
	Check the adapter on the attached device and cable	
	connections for possible defects. Replace any defective	
	adapter or cable if necessary.	
Network Connect	ion Problems	
Cennot Ping the	· Verify that the IP addresses are properly configured.	
BLW-04EX from	For most applications, you should use the BLW-04EX's	
the attached LAN,	DHCP function to dynamically assign IP addresses to	
or the BLW-O4EX	clients on the LAN. However, if you manually configure	
cannot Pling any	IP addresses on the LAN, verify that the same network	
device on the	address (notwork component of the IP address) and	
attached LAN	subnet mask are used for both the BLW-04EX and the	
	LAN devices.	
	- Be sure the device you went to Ping (and the device	
	from which you are Pinging) have been configured for	
	TCP/R	

TROUBLESHOOTING

Troubleshooting Chart		
Symptom	Action	
Management Problems		
Cannot connect using the he web browser	Be sure to have configured the BLW-04EX with a valid IP address, subnet mask, and default gateway. Check that you have a valid network connection to the BLW-04EX and that the port you are using has not been disabled. Check the network cabling between the management station and the BLW-04EX.	
Forgot or lost the password	Press the Reset button on the front panel (holding it down for at least five seconds) to restore the factory defaults.	
Printer Server		
The printer cannot print, or prints gargbage	Make sure the parallel cable between the BLW-04EX and printer is connected and is in good condition.	

A ppeofits A

CABLES

Ethernet Cable

Specifications

Cable Types a	nd Specifications		
Cable	Type Max.	Length	Connector
10BASE-T	Cat. 3, 4, 5 UTP 100 m	100-ohm (328 ft)	RJ-45
100BASE-TX	Cat. 5 UTP 100 m	100-ohm (328 ft)	RJ-45

Twisted-pair Cable

Caution: Do NOT plug a phone jack connector into any RJ-45 port. Use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

For 10BASE-T/100BASE-TX connections, a twisted-pair cable must have two pairs of wires. Each wire pair is identified by different colors. For example, one wire might be red and the other, red with white stripes. Also, an RJ-45 connector must be attached to both ends of the cable.

CABLES

Figure B-1 illustrates how the pins on the RJ-45 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.



B-1. RJ-45 Connector Pin Numbers

Straight-through Cable

Straight-Through RJ-45 Pin Assignments		
End 1	End 2	
1 (TD+)	1 (TD+)	
2 (TD-)	2 (TD-)	
3 (RD+)	3 (RD+)	
6 (RD-)	6 (RD-)	

Pins 4, 5, 7, and 8 are not connected.

Crossover Cable

Crossover RJ-45 Pin Assignments	
End 1	End 2
1 (TD+)	3 (RD+)
2 (TD-)	6 (RD-)
3 (RD+)	1 (TD+)
6 (RD-)	2 (TD-)



RJ-45 Port Pin Assignments

Pin	MDI Signal Name*	MDI-X Signal Name*
1	Transmit Data (TD+)	Receive Data (RD+)
2	Transmit Data (TD-)	Receive Data (RD-)
3	Receive Data (RD+)	Transmit Data (TD+)
6	Receive Data (RD-)	Transmit Data (RD-)

Pins 4, 5, 7, and 8 are not connected.

* The "+" and "-" signs represent the polarity of the wires that make up each wire pair.

Standards

IEEE 802.3 10BaseT Ethernet IEEE 802.3u 100BaseTX FastEthernet WAN Interface 10BASE-T/100BASE-TX LAN Interfaces 10BASE-T/100BASE-TX 4 RJ-45 ports LAN data transfer rate is up to 10/20Mbps (10BaseT half/full duplex) or 100/200Mbps (100BaseTX with half/full duplex) Management Browser-based management Both DHCP Server and Client provided **Advanced Features** Dynamic IP Address Configuration - DHCP, DNS Firewall - Client privileges, hacker prevention, logging Virtual Server via NAT & NAPT Virtual Private Network - PPTP, L2TP, IPSec pass-through Instrusion Detection, Email Alerting, Parental Control Indicator Panel LAN (Link, Activity), WAN (Link, Activity), Power Dimensions 130 mm x 85 mm x 32 mm (5.12 x 3.35 x 1.26 in) Weight 370 g (4.73 oz)

SPECIFICATIONS

Input Power

9 V 1A

Maximum Current

0.04A RMS max.@110V/240V

Power Consumption

5 Watts max. @ 100-240 VAC

Temperature

Operating 0 to 40°C (32 to 104°F)

Storage -40 to 70°C -40 to 158°F (-40 to 158°F)

Humidity

5% to 95% (noncondensing)

Compliances

CE Mark BSMI

Emissions

FCC Class B

VCCI Class B