TP-LINK Physical Description Package Contents Before hardware connection, please write down the TL-WR710N LED Guide: Wireless Password and SSID found on the label of your LED Status TL-WR710N. Both are case-sensitive. The device is working properly. Solid Blue System is booting. P-LINK Blinking The Ethernet Cable or USB Device is **Quick Installation Guide** connecting to the product 150Mbps Wireless N Mini Pocket Router - Advanced Edition CEA TL-WR710N Ethernet Cable XXXXXXXXXX USB: Connect a USB Flash drive or External Hard Drive for file sharing. It can also be used as a charging station for mobile devices. Reset: Resets the TL-WR710N to factory default settings. LAN/WAN: Must use this port to connect to your Modem while in Router mode. For all other modes, use it as an additional LAN port. LAN: Connect your ethernet enabled devices for wired network access. In client mode, use it to give wireless access to a wired-only device. In access point mode, use it to receive network access from your local network. REV1.0.0 Resource CD for User Guide Only QIG 7106504219 For more detailed information about Reset, please refer to . Note Wireless Password/PIN: Default Password Appendix: Troubleshooting. • SSID: Default Network Name MODEL NO. TL-WR710N

Operating Modes

_ '



(Note: if the hotel's Internet has an authentication process, you will need to authenticate only once and only on one device)



((

SSID: ab

3 Repeater Mode

connection.

your primary router to maintain a stable wireless

The repeated signal will display the same network name and password as your existing wireless network.

((

Access Point Mode Repeat signal from an existing wireless network. This mode is suitable to extend wireless coverage, reaching devices that were previously too far from

Create a wireless network from an Ethernet connection. This mode is suitable for dorm rooms or homes if there's already a wired router but you need a wireless hotspot.

(Note: if the hotel's Internet has an authentication process, you will need to authenticate it on EACH device.)



5 WISP Client Router Mode

Use as a client router to receive internet access from a Wireless Internet Service Provider (WISP), and share that access with local devices.

SSID: d wijd SSID: abc

Instant Wireless Connection The examples illustrated below are from Windows 7. If you are using a different Windows, or a Mac Operating System, your screenshots may look different, but the procedure is the same



Customizing your Wireless Network Name & Password (Optional)



Operating Mode Configuration

_ '



Appendix 1: USB Features

Storage Sharing and Media Server

The USB port on the TL-WR710N can be used to share files, media, and local storage space across your network.





回路

• You can also use the USB port to charge your phone or tablet! • For more detailed information about USB features, you may refer to the User Guide on the Percent. refer to the User Guide on the Resource CD.



5 The TL-WR710N is on and I am connected, but I cannot access the Web Management Page through my browser.

You need change your computer's configuration settings to "obtain an IP address automatically" and "obtain DNS server address automatically." Please refer to the instructions below:

- For Windows 7:
- a Solution and a set of the intervent status and tasks -> Change adapter settings.
 Right click "Wireless Network Connection" or "Local Area Connection", and select "Properties".
 Double click "Internet Protocol Version 4 (TCP/IPv4)" in the transmission of the set of the
- list. • Set the TCP/IP Protocol to "Obtain an IP address automatically", then click OK.

For Windows 8:

- Go to Metro Interface -> Control Panel -> View network status and tasks -> Change adapter settings.
 Right click "Wireless Network Connection" or "Local Area
- Connection", and select "Properties" • Double click "Internet Protocol Version 4 (TCP/IPv4)" in the list.
- Set the TCP/IP Protocol to "Obtain an IP address automatically", then click OK.

For Mac OS: Click the Apple icon on the upper left corner of your screen. • Go to System Preferences -> Network.

Appendix 2: Repeater Mode

When choosing an ideal location to optimize the performance of

Generally, the ideal location for your TL-WR710N is half-way between your wireless router and your Wi-Fi enabled devices. If that is not possible, placing the TL-WR710N closer to your wireless router will ensure stable performance.

Try to choose a location that will minimize the number of

obstacles between the TL-WR710N and your wireless router. Open corridors or other spacious locations will typically provide better conditions for performance than a crowded

Try to choose a location that minimizes interference from

devices operating on the same wireless frequency, such as cordless phones bluetooth devices, and microwave ovens.

• Less Obstacles = Better Performance

• Less Interference = More Stability.

room

repeater mode, please keep the points below in mind.

Optimization Guide

• The Best Way is Half-Way

- Select "Airport" from the left menu bar and then click "Advanced" for wireless configuration, or "Ethernet" for wired configuration.
- Set "Configure IPv4" to "Using DHCP", then click "Apply"

6 What can I do if my signal strength is low?

Low signal strength can be caused by obstruction from walls or TL-WR710N in a higher location, keeping it away from obstructed locations like under or behind a desk.

Generally speaking, putting your TL-WR710N in a location central to your home will maximize your signal coverage.

Appendix 3: Troubleshooting

- What can I do if I forget my password?
 - Restore the TL-WR710N to its factory default settings (see below).
 - To log in the Web Management page, use the default user name and password: admin, admin. To connect to the Wireless Network, use the default password on the label.
 - Try to configure your Router once again by following the instructions in the previous steps of the QIG
- How do I restore my TL-WR710N to factory defaultsettings?

With the Router powered on, use a pin to press and hold the Reset button for about 5 seconds.



Upon reset, the device will clear all previous configurations Note and default to router mode.

What can I do if I want to switch the Operating Mode or change

mode. You may also change any settings via the Web manag

In any time if you want to change the Operating Mode, please refer

to the "Operating Mode Configuration" Section to change the

For more troubleshooting support, please visit:

http://www.tp-link.com/en/support/faq

or contact our Unlimited 24/7 Technical Support

Technical Support Email: support.usa@tp-link.com

Toll Free: +1 866 225 8139

Unlimited 24/7

me settings?

page

- I cannot access Internet via my Cable Modem. What do I do? Reset the cable modem by powering it off, and then powering
 - it back on. Wait until its ONLINE LED is solid. Next, unplug the TL-WR710N and plug it back in. This will allow you to access Internet in most cases.

If the above does not work and you are unsure which mode the TL-WR710N is in, please reset the TL-WR710N so that it defaults back to Router Mode.

What can I do if my wireless keeps dropping?

By default, your wireless channel setting is set to "auto". This setting causes the TL-WR710N to select the least congested channel between 1 and 11, allowing you to achieve the best performance

You may be experiencing frequent wireless drops due to an often changing channel setting. In this case, setting your wireless channel setting to a static channel between 1 and 11 will prevent the wireless frequency from changing, and likely stabilize your network connection.

Personal Configuration
Please use the space below to write down your custom Wireless Network Name (SSID) and password, and Web Management Page User Name and Password.
Wireless Network Name (SSID)
Web Management Page User Name
Web Management Page Password

www.tp-link.com

TP-LINK TECHNOLOGIES CO., LTD.