



**MOTOROLA**

# **TALKABOUT™**

WORD MESSAGE PAGER



Model T350  
FLEX™ Technology

# Contents



## Getting Started

|                              |   |
|------------------------------|---|
| Installing the Battery ..... | 2 |
| Controls .....               | 3 |
| Turning On Your Pager .....  | 4 |
| Standby Screen .....         | 4 |
| Menu Screens .....           | 5 |
| Turning Off Your Pager ..... | 7 |
| Sending a Test Page .....    | 8 |
| Backlight .....              | 9 |



## Time and Date

|                                 |    |
|---------------------------------|----|
| Setting the Time and Date ..... | 10 |
|---------------------------------|----|



## Alerts

|  |    |
|--|----|
| About Alerts .....                           | 11 |
| Setting the Incoming Message<br>Alert .....  | 12 |
| Choosing an Audible (Musical)<br>Alert ..... | 13 |
| Private Time .....                           | 14 |



## Alarms

|                             |    |
|-----------------------------|----|
| Setting the Alarm .....     | 16 |
| Using a Daily Alarm .....   | 17 |
| Turning Off the Alarm ..... | 17 |



## Scrolling

|                                |    |
|--------------------------------|----|
| Setting the Scroll Speed ..... | 18 |
| Reverse Scrolling .....        | 19 |



## Personal Messages

|                                   |    |
|-----------------------------------|----|
| Reading Personal Messages .....   | 20 |
| Storing Personal Messages .....   | 21 |
| Locking Personal Messages .....   | 22 |
| Unlocking Personal Messages ..... | 23 |
| Duplicate Messages .....          | 24 |
| Reading Duplicate Messages .....  | 25 |



## Information Services

|   |    |
|---|----|
| About Information Services .....                          | 26 |
| Reading Information Services .....                        | 27 |
| Turning the Information Service<br>Alert On and Off ..... | 28 |
| Turning the Chirp Alert Off .....                         | 29 |



## Advanced Messaging

|                                     |    |
|-------------------------------------|----|
| Scanning Messages .....             | 30 |
| Deleting a Single Message .....     | 31 |
| Deleting All Messages .....         | 32 |
| Automatic Message Deletion .....    | 33 |
| Setting Message Alarms .....        | 34 |
| Turning Off the Message Alarm ..... | 35 |
| QuickNotes .....                    | 36 |
| Message Error Symbols .....         | 38 |



## Use and Care..... 39

 
## Getting Started

*Hi, I'm QuickStart and I'm going to help you get started.*

*The Motorola® TalkAbout™ T350 Word Message Pager has lots of cool features -- advanced messaging, time-keeping, news updates, alarms and much more. It's compact and easy to carry.*



*It can save you money, too. If you have a cell phone, give out your pager number instead of your phone number. That way, you can decide which calls to take and not pay for unwelcome phone calls.*

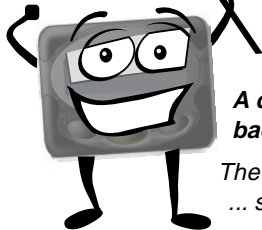


*Learning to use the pager is easy, if you read this user's guide.*

***A detachable Quick Reference Card is on the back cover.***

*The TalkAbout T350 is a great pager. I oughta know ... some of my best friends are pagers!*

 


## Installing the Battery

The TalkAbout T350 Word Message Pager uses one AAA-size alkaline battery. When the battery is low,  appears between the time and date on the standby screen.


To install the battery do the following:

First




- Turn off the pager (see page 7).
- Slide door as marked and lift open.

 Then

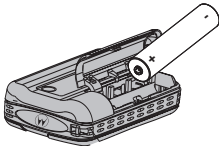


- Remove old battery, if necessary.
- Insert new battery so the + and - markings match the ones in the battery compartment.

 Finally

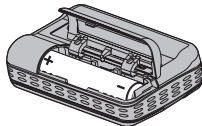

- Close battery door.
- Slide it shut.

## Controls

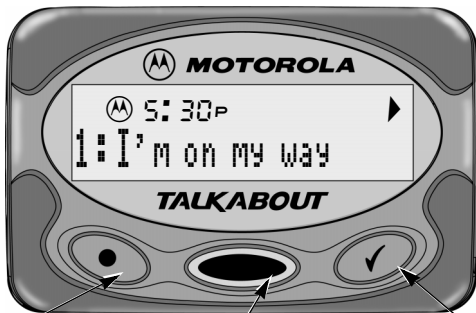 

Use  to --

- Move through menu choices
- Change a number

Use  to --

- Turn on the pager
- Read a message
- Save a setting
- Turn on the backlight
- Exit a menu

Use  to --

- Enter a menu
- Select a choice




## Turning On Your Pager

 Press



To Display



Then Press

Any button to stop the alert

**Note:** Your pager emits the selected alert.

## Standby Screen

 


Your pager displays the standby screen whenever it is turned on and nothing else is happening.

Most of the actions described in this guide start on the standby screen.

**Remember this, it's very important!**

## Standby Screen

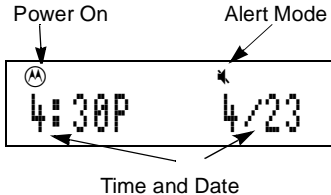 












## Menu Screens



You can use your pager's menus to select options and set its features. Let's look at them now. **From --.**




| Press  | To Display  | Then Press   |
|--|---|--|
|  to go to the first menu                 |    |                    |
|  and release until you see all the menus | <br><br> |  to enter any menu |

*Continued on next page ...*





... continued from previous page


Press

 and release until you see all the menus


To Display

 OFF?

 TIME/DATE?

 C  
PRIVATE TIME?

Then Press

 to enter any menu

**Note:** DELETE ALL appears only if the pager has messages.



 
Press  if you want to go back to the standby screen.



## Turning Off Your Pager




From --





Press

To Display

Then Press

 
 until OFF?  
appears



*The pager is now turned off. No icons appear on the off screen, except  if the alarm is turned on.*



 *The off screen looks like this.*



Off Screen





## Sending a Test Page to Yourself



*It's a good idea to test your pager and service by sending a page to yourself.*

*Start by using the phone number, web site or email address (and a PIN, if required) your service provider gave you, then enter a short message.*

*If you are sending a word message from a phone, an operator will assist you; otherwise, press the phone buttons to enter a numeric message or type a message and send it.*

*While you are waiting for the message to reach your pager, refer to page 20 for more information about how to read a message. If your pager does not receive the message within a few minutes, contact your service provider.*



*After you receive the test page, you don't have to call yourself back -- unless you really want to.*

 




## Backlight

*Being in the dark is never a problem with the TalkAbout T350 Word Message Pager.*

*Just turn on the backlight by pressing  for 2 seconds. The backlight turns off automatically or you can turn it off by pressing  again for 2 seconds.*

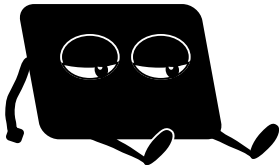

**You light up my pager ...**

 




## Time and Date




From --




Press

To Display


Then Press

 
 until TIME/DATE?  
appears






 to set the hour

 


*Pressing and holding  scrolls through numbers quickly.*



 to move to the next field

 and  to set the minutes, AM/PM, the 12/24 hour clock setting, the month, and the day



 to save the setting



## Alerts

### About Alerts

You can choose how your pager alerts you when it receives a message.



 
**VIBRATE** -- your pager vibrates but doesn't make any loud noises.



**AUDIBLE** -- your pager plays a short musical tune.



**CHIRP** -- your pager emits a short beep.

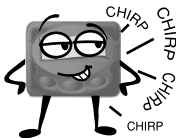

**ESCALERT<sup>TM</sup>** -- an alert that gets louder and louder.



**NO ALERT** -- your pager doesn't alert you when it receives a message.




**Note:** If you choose **NO ALERT** or **VIBRATE**, your pager still makes a sound when it receives a priority message.



# Setting the Incoming Message Alert



 From --



| Press   | To Display | Then Press  |
|---|------------|---|
| until ALERTS appears  |            |   |
| until your choice of alert appears  |            | to set the alert  |
| <b>Note:</b> The pager makes a sample of each alert.                        |            |   |
|   |            |   |
|   |            |   |
| To set one of the musical alerts, see "Choosing an Audible (Musical) Alert" |            | <b>Note:</b> After you select an alert, the corresponding icon appears on the standby screen. |










## Choosing an Audible (Musical) Alert

 


*You've got 8 musical alerts to choose from and they're all very cooooool!*

**From --**

 

| Press   | To Display  | Then Press  |
|---|---|---|
|  until <b>ALERTS?</b> appears       |  |                           |
|  until <b>AUDIBLE?</b> appears      |  |                           |
|  until your choice of alert appears |  |  to set the audible alert |

**Note:**  now appears on the standby screen.




## Private Time

 *When you don't want to be disturbed, use private time to turn off all your alerts.*



*After private time expires, the alerts turn back on automatically.*

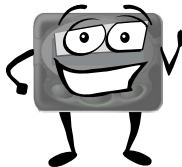

*Private time works on a daily basis. That means your pager will turn off the alerts during the same time each day.*



*Here's how to turn on private time.*

**From --**





 


| Press  | To Display | Then Press                             |
|--|------------|--|
| until<br>PRIVATE TIME? appears   |            |  |
| to turn private time on<br>or off<br><b>Note:</b> C appears around  if<br>private time is turned on. |            |  |
| to set the start time<br>hour  |            | to move to<br>next field               |
| and  to set the<br>start time minutes and AM/<br>PM, and the stop time hour,<br>minutes and AM/PM    |            | to save<br>setting                     |
| <b>Important:</b> Make sure private<br>time is turned on by checking<br>for C on the standby screen. |            | Indicates<br>Private Time<br>Turned On |



# Alarms

Your pager has 3 alarms to remind you of special times. My favorite is meal time! Here's how it works. **From** --



# ALARMS

| Press  | To Display | Then Press   |
|--|------------|--|
| until ALARMS? appears                          |            |  |
| to select alarm 01, 02, or 03                  |            |  |
| to turn the alarm on  or off                   |            |  |
| to adjust the hour                             |            | to move to the next field                                  |
| and  to set the minutes, AM/PM, month, and day |            | to save<br><b>Note:</b> now appears on the standby screen. |



## Using a Daily Alarm

To set an alarm to sound at the same time everyday, set the month and day like this.



## Turning Off the Alarm

When an alarm sounds, **TURN IT OFF** by pressing any button.

Press the button again to clear the alarm screen.



## Alarm Setting Screen



Month and Day

## Alarm Screen

🔔 flashes



ALARM and number appear on screen



## Scrolling

### *Setting the Scroll Speed*

*Your pager can display messages Line-by-Line.*



*And scroll really fast -- that's Scroll 3.*



*It can scroll messages slowly -- that's Scroll 1.*



*It can even go backward and scroll in reverse.*



*It can scroll a little faster -- that's Scroll 2.*



*Here's how to set the forward scroll speed.*

**From --**





| Press  | To Display    | Then Press             |
|--|---------------|------------------------|
| until SCROLL SPEED? appears  | SCROLL SPEED? |                        |
| and release until your scrolling choice appears                      | LINE-BY-LINE  | to select scroll speed |
| <b>Note:</b> Your pager displays the scroll speed of each selection. | SCROLL 1      |                        |
|  | SCROLL 2      |                        |
|  | SCROLL 3      |                        |

### Reverse Scrolling



While reading a message, press and release to change the direction of the scrolling.

 


# Personal Messages

## Reading Personal Messages



From --



| Press | To Display | Then Press |
|-------|------------|------------|
|-------|------------|------------|


|  |  |  |
|--|--|--|
|  |  | until the message () is highlighted () |
|--|--|--|

|                     |   |  |
|---------------------|---|--|
| to read the message | <br><b>Note:</b> Rest of message appears automatically. | then  to exit<br><b>Note:</b> You can also let the pager exit automatically. |
|---------------------|---|--|



indicates the message continues on another screen. To stop the scrolling, press . Press it again to resume scrolling.

## Storing Personal Messages

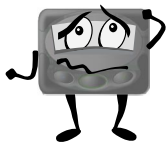 

Wow, first you're wondering if you'll **EVER** receive any messages. Then, they start coming in fast and furious. Before you know it, you have so many messages you can't read each one as soon as it arrives.

 
Don't worry. Your new pager will help you keep everything straight.

Your pager can store up to 16 personal messages. Each stored message is assigned a number, which appears when the message is read. The first message received is 1, the second is 2 and so on.





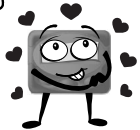

## Locking Personal Messages



Some personal messages are **VERY SPECIAL**. Save special messages by locking them. That way your pager won't erase them to make room for new ones. Here's how.

**While reading a personal message --**

 
| Press   | To Display | Then Press   |
|---|------------|--|
|  |            |  to lock the message |

**Note:** You can lock a message only while reading it.

Your message status screen now looks like this.



### Message Status Screen



Indicates locked message status



## Unlocking Personal Messages



*When that special message is no longer special, unlock it. Here's how to do it.*

***While reading a locked message --***

| Press | To Display | Then Press            |
|-------|------------|-----------------------|
|       |            | to unlock the message |

**Note:** You can unlock a message only while reading it.



*You can lock up to half of your personal messages. However, after your pager's limit is reached, you must unlock one message before you can lock another one.*





## Duplicate Messages

*Oh, no! Where did that other pager come from?! Looks just like me.*



 
*Seriously, you may receive duplicate messages from time to time.*

*Your new pager identifies duplicate messages for you in two ways.*

*Your message status screen displays  $\mathbb{A}$  whenever a duplicate message is received. It looks like this.*




### Message Status Screen




Indicates duplicate message

## Reading Duplicate Messages

 *When you view a duplicate message, your pager lets you know.*

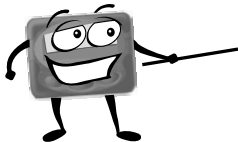

### Duplicate Message Screen

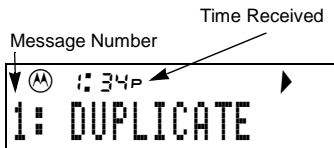 

DUPLICATE appears before  
message





## Information Services

### About Information Services

*When you're always on the go, it's hard to keep up with the latest news. But not if your*



*pager receives information service messages.*

*They feature daily headlines, sports scores, financial news,*



*and entertainment stories.*

*Information service messages are news updates sent to your pager*



 
*by your service provider.*

*Your pager doesn't control what it receives or the schedule. Contact*




*your service provider for details.*

## Reading Information Services

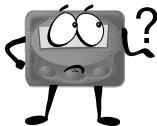

 
The news can be confusing. Reading information services is not. Here's how. **From --**




| Press               | To Display | Then Press                             |
|---------------------|------------|--|
|                     |            | until  is highlighted                  |
|                     |            | until the message () is highlighted () |
| to read the message |            | then  to exit                          |





▶ indicates the message continues on another screen. To pause the scrolling, press . Press it again to resume scrolling.

## Turning the Information Service Alert On and Off

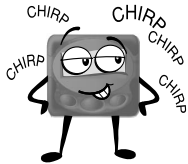 


You can set a chirp alert for each information service. This way, whenever you receive an information service message, your pager lets you know by chirping. Here's how it works.

**While reading an information service message --**

 
| Press  | To Display | Then Press  |
|--|------------|---|
|  until CHIRP ON appears |            |  to turn chirp on |



Your information services message screen now displays  for that message slot.



## Information Service Message Screen



Indicates Chirp On


### Turning the Chirp Alert Off



Turning off the chirp alert is easy.

**While reading an information service message --**

| Press  | To Display   | Then Press   |
|--|--|--|
|  until CHIRP OFF appears |  CHIRP OFF? |  to turn chirp off |

**Note:** The information service message screen no longer displays .



## Advanced Messaging




### Scanning Messages

*By now, you probably have so many messages you don't have time to read them all.*



*It's a good thing your pager lets you scan your messages so you can concentrate on the important ones. Here's how it works.*

***While reading the first screen of a message --***

 
| Press   | To Display   | Then  |
|---|--|---|
| Press  and hold to read the first screen of each message | <br><b>Note:</b> The first screen of each stored message appears. | Release  if you wish to read a specific message entirely |







## Deleting a Single Message

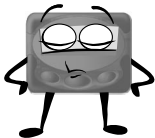

*Sometimes the best thing to do with a message is delete it. You can delete messages one at a time or all at once.*

*Here's how to delete a single message.*

***While reading the message --***



**Note:** You can delete a message only while reading it. For information on how to read messages, see “Reading Personal Messages” on page 20.

 







## Deleting All Messages

Sometimes you just need to clean house. **DELETE ALL** erases all read and unlocked messages. Locked or unread messages are not deleted. Here's how it works.



From --



| Press  | To Display  | Then Press   |
|--|---|--|
|  until <b>DELETE ALL?</b> appears |  |  |
|                                   |  |  to delete |




## Automatic Message Deletion

 Your pager has room for 16 messages.

When its message slots fill

up, the pager

displays this on  
the standby screen.

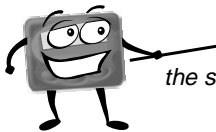

If the memory is full when a new message arrives, your pager deletes the oldest, **unlocked and read** message. If all the messages are unread, your pager deletes the **oldest unread message** and displays this on the message status screen.



This happens automatically. Your pager does all the work.

## Memory Full Screen



## Unread Message Deleted Screen





## Setting Message Alarms



You can set an alarm to remind you to read a message at a certain time. Here's how.

**While reading a message --**

| Press  | To Display | Then Press                   |
|--|------------|------------------------------|
| until ALARMS?<br>appears                             |            |                              |
| to turn the alarm<br>on  or off                      |            |                              |
| to adjust the hour                                   |            | to move to the<br>next field |
| and  to set<br>the minutes, AM/PM,<br>month, and day |            | to save setting              |



Your message screen now looks like this.





## Message Screen




Indicates message alarm turned on

## Turning Off the Message Alarm



When the alarm sounds, press  to stop it. Press  again to read the message.

If you do not turn off the alarm and read the message,  flashes until you do.

 


## QuickNotes

*QuickNotes are coded messages that are fun to use.*

*Each QuickNote is assigned a certain code. When the person paging you enters one of the codes, the corresponding QuickNote appears on your message screen.*

*For example: Entering code **\*\*01\*\*** displays **Running Late** on your message screen.*

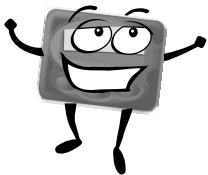

*QuickNotes can also be used as part of a message.*

*For example: Entering **\*\*08\*\*9** displays **Meet you at 9** on the message screen.*

*There are 10 QuickNotes stored in your pager. They are listed on the next page. Give a copy to those who page you frequently.*

**Note:** QuickNotes are subject to change. Contact your service provider for additional details and to verify the QuickNote list.



**When the person paging  
you enters this code ...**

**... this appears on the message  
screen.**

**\*\*01\*\***

Running late

**\*\*02\*\***

I'm on my way

**\*\*03\*\***

Pick me up

**\*\*04\*\***

I'm home

**\*\*05\*\***

Come home

**\*\*06\*\***

Call home

**\*\*07\*\***

Where are you

**\*\*08\*\***

Meet you at

**\*\*09\*\***

I love you

**\*\*10\*\***

I miss you



## Message Error Symbols



Whenever your pager receives a message with errors, your pager will display the message with ■ over the characters that are incorrect.

 
When a message is too long, the pager shortens it and displays †.

When part of a message is missing, the pager displays <...> instead of the missing fragment.


### Incorrect Characters



### Shortened Message



### Fragmented Message

 



## Use and Care



Clean with a soft cloth dampened with soap and water.



Do not immerse in water.



Do not use alcohol or other cleaning solutions.



Do not expose to excessive heat ...



... or extreme shock ...



... or moisture.



### Repairs

1-800-548-9954 (U.S.)  
1-800-793-7834 (TTY-U.S.)  
1-800-323-9685 (Canada)



### Extended Warranty

1-800-548-9954  
(also your paging provider or  
retailer)

 


### Questions

1-800-548-9954 (U.S.)  
1-800-793-7834 (TTY-U.S.)  
[www.motorola.com](http://www.motorola.com)

*Well, there you have it. The TalkAbout T350 Word Message Pager is a messenger, a watch, a news service, and whole lot more.*

*All that great stuff packed into an attractive, compact design ... just like me.*

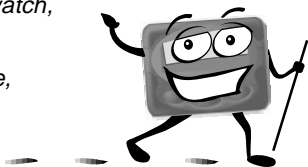

## Patent Information

This pager is manufactured under one or more Motorola U.S. Patents. A partial listing of these patents is provided on the inside surface of the battery door. Other patents covering this product are pending.

**Note:** Only the first 15 patents listed below apply to pager models which utilize the POCSAG protocol.

- |             |             |             |
|-------------|-------------|-------------|
| 1. 4336524  | 13. 5247519 | 25. 5450071 |
| 2. 4385295  | 14. 5073767 |             |
| 3. 4412217  | 15. 5157391 |             |
| 4. 4518961  | 16. 5128665 |             |
| 5. 4701759  | 17. 5117500 |             |
| 6. 4755816  | 18. 5168493 |             |
| 7. 4829466  | 19. 5051993 |             |
| 8. 4839628  | 20. 5311516 |             |
| 9. 4851829  | 21. 5325088 |             |
| 10. 5381138 | 22. 5371737 |             |
| 11. 4893271 | 23. 4860003 |             |
| 12. 4910510 | 24. 5414419 |             |

## FCC Compliance

This device complies with part 15 of the FCC Rules Operation and is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Warranty

## **ONE (1) YEAR STANDARD LIMITED WARRANTY AND PROVISIONS (U.S.A. ONLY)**

Motorola warrants the pager against defects in material and workmanship under normal use and service for the period of time specified below. This express warranty is extended by Motorola, 1500 Gateway Blvd., Boynton Beach, Florida 33426 to the original end user purchaser only and is not assignable or transferable to any other party.

This warranty sets forth the full extent of MOTOROLA's responsibilities regarding the pager. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE DURATION CHOSEN. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE MOTOROLA PAGER, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

Motorola pagers are shipped from the factory with a standard limited warranty of one (1) year on parts and labor from date of purchase by the original end user purchaser, based on proof of purchase. In the event of a defect, malfunction, or failure to conform to specifications during the warranty period, Motorola, at its option, will either repair, replace or refund the purchase price of the pager. Repair, at Motorola's option, may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. (continued)

**LIMITED WARRANTY AND PROVISIONS (U.S.A.) continued**

Replaced parts and boards are warranted for the balance of the original warranty period. All parts and boards removed in the replacement process shall become the property of Motorola.

This warranty does not cover defects, malfunctions, performance failures or damages to the unit resulting from use in other than its normal and customary manner, misuse, accident or neglect, the use of non-conforming parts, or improper alterations or repairs. This warranty does not cover wear and tear on covers or housings, nor the coverage or range over which the pager will receive signals.

**For information on how to receive service on Motorola pagers or covered accessories, call 1-800-548-9954 or 1-800-793-7834 (TTY).**

**Pager warranty will be VOID if any of the following conditions occur:**

- Pagers that are incomplete such as those in which boards or components are missing and/or incompatible.
- Pagers whose serial numbers do not match on the boards, or pagers in which the board serial numbers don't match the housing.
- Pagers that have been opened by, or had work performed by, anyone other than a Motorola authorized pager service center.
- Pagers received with non-conforming or non-Motorola housings or parts.
- Flat rate repair fees apply to pagers and accessories not covered under warranty.

**STATE LAWS**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, THEREFORE THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

# Personal Numbers



*Just one more thing. You can use this page to keep track of important numbers.*

**Service Provider**

---

---

**Family and Friends**

---

---

---

---

---

---

---

---

---

---

**Pager Number and PIN**

---

---

**Pager Number and PIN**

---

---

---

---

---

---

---


















---

---
















---

# TalkAbout T350 Word Message Pager

## Quick Reference Card

|  |                     |   |                                       |
|--|---------------------|---|---------------------------------------|
|  | On                  |  | Locked message                        |
|  | Private Time on     |  | Out of range                          |
|  | Message, selected   |  | Message continuation                  |
|  | Message, unselected |  | Low-battery                           |
|  | Delete All          |  | Information service menu              |
|  | Audible alert       |  | Information service menu, selected    |
|  | Chirp alert         |  | Information service message, selected |
|  | Vibrate alert       |   |                                       |
|  | Alarm turned on     |   |                                       |
|  | Alarm turned off    |   |                                       |



|   |   |   |                               |
|---|---|---|-------------------------------|
|    | Information service message, unselected |    | Duplicate message, unselected |
|  | Chirp on, selected                      |  | Duplicate message, selected   |
|  | Chirp on, unselected                    |   |                               |
|  | Locked message, selected                |  | Twenty-four hour clock        |
|  | Locked message, unselected              |  | Twelve hour clock             |
|   |   |  | Truncated message             |
|  | Message alarm on, selected              |  | Errored characters            |
|  | Message alarm on, unselected            |  | Missing message fragment      |
|   |   |  | Daily alarm setting           |

## Setting the Time and Date

From --

Ⓜ  
4:30 P 4/23

Press

To Display

Then Press

● until TIME/DATE?  
appears

Ⓜ  
TIME/DATE?

/

● to set the hour

Ⓜ  
9:00A [ ] 1/01

/ to move to the  
next field





 


 



 

● and / to set the  
minutes, AM/PM, the 12/24  
hour clock setting, the  
month, and the day

Ⓜ  
9:35A [ ] 3/24

Ⓜ to save the  
setting

## Setting the Alarm

 
From the standby screen --

| Press  | To Display   | Then Press  |
|--|--|---|
|  until ALARMS?<br>appears  |  |    |
|  to select alarm 01,<br>02, or 03  |  |    |
|  to turn the alarm<br>on Q or off Q  |  |    |
|  and  to set the<br>hour, the minutes, AM/PM,<br>the month, and the day |  |  to save<br><b>Note:</b> Q now appears<br>on the standby screen. |



Ⓜ Motorola, TalkAbout, FLEX, and Escalart are trademarks or registered trademarks of Motorola, Inc.  
Reg. U.S. Pat. & Tm. Off.  
© 1999 by Motorola, Inc. All Rights Reserved.

Personal Communications Sector  
1500 Gateway Blvd., Boynton Beach, FL 33426-8292  
Printed in U.S.A. 12/99



6881034B80-O

TalkAbout T350 All Models



Tested To Comply  
With FCC Standards

FOR HOME OR OFFICE USE