



MOTOROLA



WORDline™

WORDline FLX™

USER'S GUIDE

Contents

INTRODUCTION	1	ALARMS	12
Effective Use of Your Pager	1	Setting the Alarm	12
Sending a Test Page to Yourself.....	1	MESSAGE FEATURES	14
Controls	2	Locking Personal Messages.....	14
GETTING STARTED	3	Unlocking Personal Messages	14
Turning Your Pager On	3	Private Time	15
Backlight.....	3	Deleting Messages	17
Menu Icons.....	4	Storing Messages.....	18
Turning Your Pager Off	4	Automatic Message Deletion.....	18
MESSAGES	5	INFORMATION SERVICES	19
Types of Messages	5	Information Services.....	19
Setting the Scroll Speed.....	5	Reading Information Services	20
Receiving/Reading Messages.....	6	Turning the Alert On and Off	21
Scanning Your Messages.....	8	Turning the Bookmark On	22
Duplicate Messages	8	OTHER FEATURES	23
TIME/DATE	9	Out of Range	23
Setting the Time and Date.....	9	Message Error Icons	23
ALERTS	10	USE AND CARE	24
Setting the Incoming Alert	10	Cleaning Your Pager	24
Choosing an Audio Alert.....	11	Functionality and Use.....	24
		Care and Maintenance	24
		BATTERY	25

Congratulations on purchasing the Motorola® WORDline™ or WORDline FLX™ pager. The WORDline FLX pager incorporates the latest in paging technology. FLEX technology extends battery life up to four times longer than ordinary pagers and improves the ability to receive pages.

This compact pager combines messaging and time keeping functions in a package that is convenient to carry. Full understanding of what this product offers begins with reading this user's guide. This user's guide includes a detachable Quick Reference Card on the back cover.

Effective Use of Your Pager

Your pager can help you keep in contact with everyone important to you. By giving your pager number to your business associates, family, and friends, you can be contacted when necessary.




If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide who to call back on your cellular phone without paying for incoming calls.

Sending a Test Page to Yourself

After your pager has been activated by your service provider, send yourself a test page.

Controls



- | | | |
|---|-------------------|--|
|  | Mode | Used to scroll through available choices, or to increment a digit. |
|  | Select | Used to select and confirm a choice. |
|  | Read/
Power On | Used to read a message, to save a setting, to turn on the pager, to turn on the backlighting, and to exit from a menu. |

 
Turning Your Pager On



Press  to turn your pager on.


A start-up message is displayed momentarily and your pager activates the currently selected alert.

Note: The start-up alert can be stopped by pressing any button.






When the pager is on and no activity is taking place, the standby screen is displayed. The standby screen displays the power indicator, the time and date, the alert mode, and may display other pager indicators such as alarm status.




Backlight

Press and hold  for one second or more to activate the LCD message screen backlight.

 
Menu Icons





The four menu icons on the top row (   ) correspond to the four menus: **CONTROLS**, **DELETE ALL**, **ALERTS**, and **ALARMS**.

The first time you press  these menu icons are displayed. The controls menu icon  flashes, indicating that pressing  will enter the controls menu.

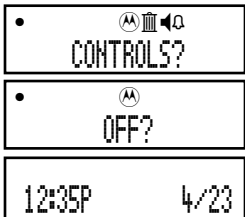Press and release  to display the **CONTROLS?**, **DELETE ALL?**, **ALERTS?**, and **ALARMS?** menu prompts. Press  to enter the corresponding menus, or press  to return to the standby screen.

Turning Your Pager Off











- 1 From the standby screen, press  to display **CONTROLS?**. The controls menu icon  flashes.
- 2 Press  to display **OFF?**.
- 3 Press  to turn the pager off. The off screen is displayed without any icons.

Types of Messages

The message indicators define the type of message received and flash until the message is read.

Personal messages: * unselected  selected





 
Information services

when received:  unselected  selected
  unselected  selected (FLEX)
 when chirp is on:  unselected  selected
 when bookmark is on:  unselected  selected



Setting the Scroll Speed

You can choose the speed at which your messages scroll, or read them line by line.




- ❶ From the standby screen, press  to display **CONTROLS?**. The controls menu icon  flashes.
- ❷ Press  to enter the **CONTROLS** menu.
- ❸ Press and release  until **SCROLL?** is displayed.
- ❹ Press  to enter the **SCROLL** menu.





- 5 Press and release  to choose the scroll speed.
- 6 Press  to select the scroll speed.

 
There are four scroll speeds to choose from: LINE-BY-LINE, SCROLL 1, SCROLL 2, and SCROLL 3 (fastest).

Receiving/Reading Messages

When a message is received, your pager either alerts audibly (audio, chirp, and Escalert™ modes) or vibrates. A message indicator (for example 1, 2, etc.) lets you know how many messages you have received. On some models, this message indicator displays on the standby screen. On all models, pressing  displays the message indicator on the message status screen.



- 1 Press any button to stop the alert.
- 2 Press  to display the message status screen. The message indicators for unread messages  flash until any part of the message is read.

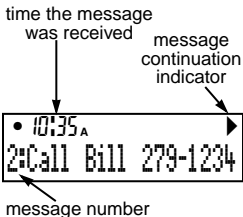

- ③ Press to read the selected message or press to select another message, then press .

Hint: On this screen, pressing displays the previous screen.

- ④ If your pager is set to scroll the message automatically (SCROLL 1, SCROLL 2, or SCROLL 3), the remainder of the message is automatically displayed at that speed.

Hint: To pause or restart a scrolling message, press .

If the scrolling speed is set to LINE-BY-LINE, press to view the next screen.

- ⑤ Allow the pager to automatically return to the standby screen, or press then .

Note: If a message is unread, your pager gives a periodic alert until all unread messages are read. This will continue for up to 30 minutes. A message is considered read if any part of the message is displayed.

Scanning Your Messages

 
 
When the first line of a message is displayed, press **▶** to scan all messages of the same type. The message number and the first line of the message are displayed for each message.

Duplicate Messages



When a duplicate message is received, **DUPLICATE** is displayed after the message number and before the message. The time the duplicate message was received is displayed.

Setting the Time and Date









- 1 From the standby screen, press to display CONTROLS?. The controls menu icon flashes.
- 2 Press to enter the CONTROLS menu.
- 3 Press and release until TIME/DATE? is displayed.
- 4 Press to enter the TIME/DATE menu. The hour field flashes.
- 5 Press and release to adjust the hour.
- 6 Press to move to the next field.
- 7 Repeat steps 5 and 6 for the minutes, AM/PM, month, and day fields.
- 8 Press from any field to save.

 Hint: Pressing and holding scrolls through selections quickly.

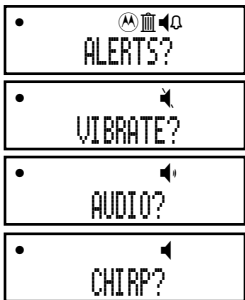Setting the Incoming Message Alert

You can set your pager to alert with a vibrating alert (vibration with no alert tone), one of the audio alerts, a chirp alert (short beep alert), an alert of increasing volume (Escalert), or no alert (completely silent).

 







- 1 From the standby screen, press and release  until ALERTS? is displayed. The alert icon  flashes.
- 2 Press  to enter the ALERTS menu. VIBRATE? is displayed.
- 3 Press and release  until your choice of VIBRATE?, AUDIO?, CHIRP?, ESCALERT?, or NO ALERT is displayed.
- 4 Press  to select the desired alert. The standby screen is displayed with the corresponding alert icon.

Note: If the audio alert mode is selected, your pager automatically displays the audio alert options screen.

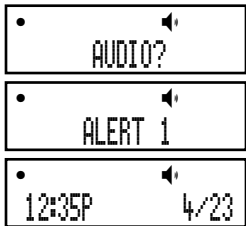Choosing an Audio Alert

 
If you select the audio alert mode, you can set your pager to alert with one of the audio alerts.



 

 





 




- ① From the **ALERTS** menu, press and release  until **AUDIO?** is displayed.
- ② Press  to enter the **AUDIO** menu.
- ③ Press  until your choice of audio alert is displayed. The pager emits a sample of each alert.
- ④ Press  to select your choice of audio alert. The standby screen is displayed with the audio alert icon .

Setting the Alarm

Your pager has three alarms. Each alarm can be set for either a specific time and date, or for a specific time on a daily basis. If your pager is off when an alarm sounds, it remains off.



  - ❶ From the standby screen, press and release  until ALARMS? is displayed. The alarm icon  flashes.
- ❷ Press  to enter the ALARMS menu. The alarm number 01 flashes.
- ❸ Press  to choose alarm 01, 02, or 03.
- ❹ Press  to move to the next field. The enable  or disable  icon flashes.
- ❺ Press  to enable  or disable  the alarm.
- ❻ Press  to move to the hour field. The hour flashes.



- ⑦ Press and release to adjust the hour.
Hint: Press and hold to adjust the setting quickly.
- ⑧ Press to move to the next field.
- ⑨ Repeat steps 7 and 8 to set the minutes, AM/PM, month, and day fields.
- ⑩ Press in any field to save and exit.

When an alarm is enabled, the alarm icon is displayed on the standby screen.

 
To alert on a daily basis, set the month and day to --/--.


When an alarm expires, the alarm icon flashes, ALARM is displayed with the alarm number, and your pager alerts.



Press any button once to stop the alarm, and again to clear the message.


Locking Personal Messages

By locking messages, you can save personal messages to prevent them from being replaced when the memory is full. Messages can be locked only while reading them.



- 1 Press  while reading a personal message to display **LOCK?**.


- 2 Press  to lock the message. The message indicator  is displayed.

When a locked message is selected or read, the lock icon  is displayed.

Note: Up to eight personal messages may be locked. To lock another message once this limit is reached, you must first unlock at least one message.

Unlocking Personal Messages



- 1 Press  while reading a locked personal message to display **UNLOCK?**.



- ② Press to unlock the message. The message indicator is displayed.

Private Time

This feature allows you to turn off all pager alerts during a preselected time period. Messages received during this time period are stored. When enabled, private time works on a daily basis. When disabled, no pager alerts are turned off during the private time setting.



 
 
 
- ① From the standby screen, press to display **CONTROLS?**. The controls menu icon flashes.



- ② Press to enter the **CONTROLS** menu.



- ③ Press and release until **PRIVATE TIME?** is displayed.





- ④ Press to enter the PRIVATE TIME menu. The private time enable or disable icon flashes.
- ⑤ Press to enable or disable private time.
- ⑥ Press to move to the next field. The hour field of the start time flashes.
- ⑦ Press to adjust the start time hour.
- ⑧ Repeat steps 6 and 7 to adjust the start time minutes, AM/PM, stop time hour, minutes, and AM/PM.
- ⑨ Press from any field to save and exit. While private time is active, is not displayed, and the pager does not alert.

Deleting Messages

Messages may be deleted one at a time or all at once.

Deleting a Single Message







- ❶ While reading a message press and release  until DELETE? is displayed.
- ❷ Press  to delete the message.

Deleting All Messages

The DELETE ALL command deletes all read and unlocked personal messages and information services. Locked or unread messages are not deleted.



- ❶ From the standby screen, press and release  until DELETE ALL? is displayed. The delete icon  flashes.
- ❷ Press  to enter the DELETE menu. The delete confirmation DELETE? is displayed.
- ❸ Press  to delete all personal messages.

Storing Messages

Your pager can store up to 16 personal messages. Each stored message is assigned a number, which is displayed when the message is stored. The first message received is 1, the second is 2, and so on.

Automatic Message Deletion

If all message slots are full and a new message is received, the oldest unlocked read message is automatically deleted.

When the message memory is full, **MEMORY FULL** is displayed. Press any button to return to the standby screen.

If all messages are unread, the oldest, unlocked message is deleted and **OVERFLOW** is displayed.


Information Services

 
 
Information services are typically news or general updates which provide relevant information.








Your WORDline pager may be equipped with information services. If your pager has this capability, you will receive regular updates throughout the day in up to 3 different information categories. Updates include sports scores and sports news, top stories, and entertainment news.


Note: Content providers and content are subject to change without notice. Update schedules may vary depending upon your service provider. Contact your service provider if you are interested in receiving information services.

Reading Information Services

When an information service message is received,  flashes for 12 seconds and the number of unread information services is displayed. After 12 seconds, the standby screen is displayed.



 - ① Press  to display the message status screen.
- ② Press  to enter the information service menu.
The information service message icons display  or  when selected and  or  when unselected.
- ③ Press  to move to the message you want to read. The corresponding message slot number is displayed.




- ④ Press to read the message. The time the information service was received is displayed with the first screen of the message.

► indicates the message is continued on an additional screen.

Note: To return to the standby or message status screen while reading a message, press and then .

Turning the Information Service Alert On and Off

 
You can set an information service alert for each message slot.




- ① While reading an information service message, press until CHIRP ON? or CHIRP OFF? is displayed.
- ② Press to turn chirp on or off for that information service message slot.

Turning the Information Service Bookmark On

 
You can set a bookmark to hold your place in a lengthy information service while reading it.





❶ While reading an information service message, press  to display **BOOKMARK?**.

❷ Press  to activate the bookmark. The message menu screen is displayed.


✓ is displayed in the information service menu. The next time you read that information service message, the message begins at the point where the bookmark was placed.


 indicates a selected bookmarked message.

Out of Range

If your pager is equipped with this feature, and if you are outside your paging coverage area,  is displayed. As long as  is displayed, your pager cannot receive messages.

Message Error Icons

If there is an error in the message received, the error icon  is displayed over each errored character in the message.

If this option is enabled, and if the truncated message icon  is displayed at the end of the message, either the message was too long, or there was not enough memory to store the message.

Cleaning Your Pager

To clean smudges and grime from the exterior of your pager, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.

Functionality and Use of Your Pager


For questions pertaining to the functions and use of your Motorola pager please visit our web site at www.motorola.com/pagers or in the U.S. call 1-800-548-9954 or 1-800-793-7834 (TDD). For questions pertaining to your paging service, contact your paging service provider.

Care and Maintenance

The WORDline and WORDline FLX pagers are durable, reliable, and can provide years of dependable service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the pager. Do not expose your pager to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

You can protect your pager purchase with an optional extended warranty covering parts and labor. For more information about warranties, please contact either your paging service provider, retailer, or Motorola, Inc. at 1-800-548-9954. For repairs, call Motorola, Inc. at 1-800-548-9954 in the U.S. or 1-800-323-9685 in Canada. In the U.S., to contact Motorola, Inc. on your TDD, call 1-800-793-7834.

 
Battery Information

Your WORDline or WORDline FLX pager operates with one AAA-size alkaline battery. When the battery is low, the low-battery icon  is displayed between the time and date on the standby screen. Change your battery within five days of receiving a low-battery indication.

Messages are retained when replacing the battery. To retain pager alert settings, turn the pager off before removing the old battery.

Replacing the Battery


- ❶** Turn your pager off.
- ❷** To remove the old battery, slide the battery door lock towards the top of the pager to unlock the battery door.
- ❸** While pressing on the battery door, slide the door until the ribs on the battery door align with the ribs on the back cover.
- ❹** Lift the battery door to free it from the housing.
- ❺** Remove the battery.
- ❻** Align the new battery so the positive (+) and negative (-) markings match the polarity diagram in the battery compartment. Insert the battery.
- ❼** To replace the battery door, align the grooves on the battery door with the grooves on the back cover and slide the battery door closed.
- ❽** Slide the battery door lock toward the bottom of the pager to lock the battery door.

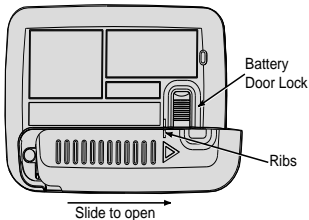

NOTES

Patent Information

This Motorola product is manufactured under one or more Motorola U.S. patents. These patent numbers are listed inside the housing of this product. Other U.S. patents for this product are pending.

Ⓜ, Motorola, WORDline, WORDline FLX, Escalart, and  are trademarks or registered trademarks of Motorola, Inc.

© 1997 by Motorola, Inc. All Rights Reserved.

Paging Products Group

1500 Gateway Blvd., Boynton Beach, FL 33426-8292

Printed in U.S.A. 7/97



6881028B95-A

WORDline™ and WORDline™ FLX Quick Reference Card

Indicators and Icons

- | | |
|----------------------------|--|
| • On | ► Message continuation |
| ☉ On, Private Time enabled | 🔋 Low-battery |
| ✉ Message, selected | 📧 Information service menu, selected |
| ⬆ Message, unselected | 📧 Information service menu, unselected |
| ⚙ Controls menu | 📧 Information service message, selected |
| 🗑 Delete All menu | 📧 Information service message, unselected |
| 🔊 Audio alert | 📧 Information service message, selected (FLEX) |
| 🔊 Alerts menu/Chirp alert | 📧 Information service message, unselected (FLEX) |
| 🔊 Vibrate (silent) icon | 📧 Information service, Chirp on, selected |
| 🔔 Alarm menu/Alarm enabled | 🔊 Information service, Chirp on, unselected |
| 🔔 Alarm disabled | 🔖 Information service, Bookmark, selected |
| 🔒 Locked message | ✓ Information service, Bookmark, unselected |
| 📶 Out of range | 🔒 Locked message, selected |
| | 🔒 Locked message, unselected |

Control Buttons:



Mode













Select




Read/Power On

Setting the Alarm

- 1 Press  until ALARMS? is displayed.
- 2 Press .
- 3 Press  to choose alarm 01, 02, or 03.
- 4 Press  to move to the next field.
- 5 Press  to enable  or disable  the alarm.
- 6 Press  to move to the hour field.
- 7 Press and release  to adjust the hour.
- 8 Press  to move to the next field.

9 Repeat steps 7 and 8 to set the minutes, AM/PM, month, and day fields.



10 Press  from any field to save and exit.

To alert on a daily basis, set the month and day to --/--.

Locking and Unlocking Messages

While reading a personal message, press  to display LOCK? or UNLOCK?. Press .

Deleting a Single Message

Press  while reading a message until DELETE? is displayed. Press .

WORDline and WORDline FLX Menu Map

Controls	Delete All	Alerts	Alarms
-OFF	-DELETE	-VIBRATE	-ALARM 01
-TIME-DATE		-AUDIO	-ALARM 02
-SCROLL		-CHIRP	-ALARM 03
-PRIVATE TIME		-ESCALERT	
		-NO ALERT	