


# COMPETENCE 5212 BU

Build Under Double Oven

Operating Instructions

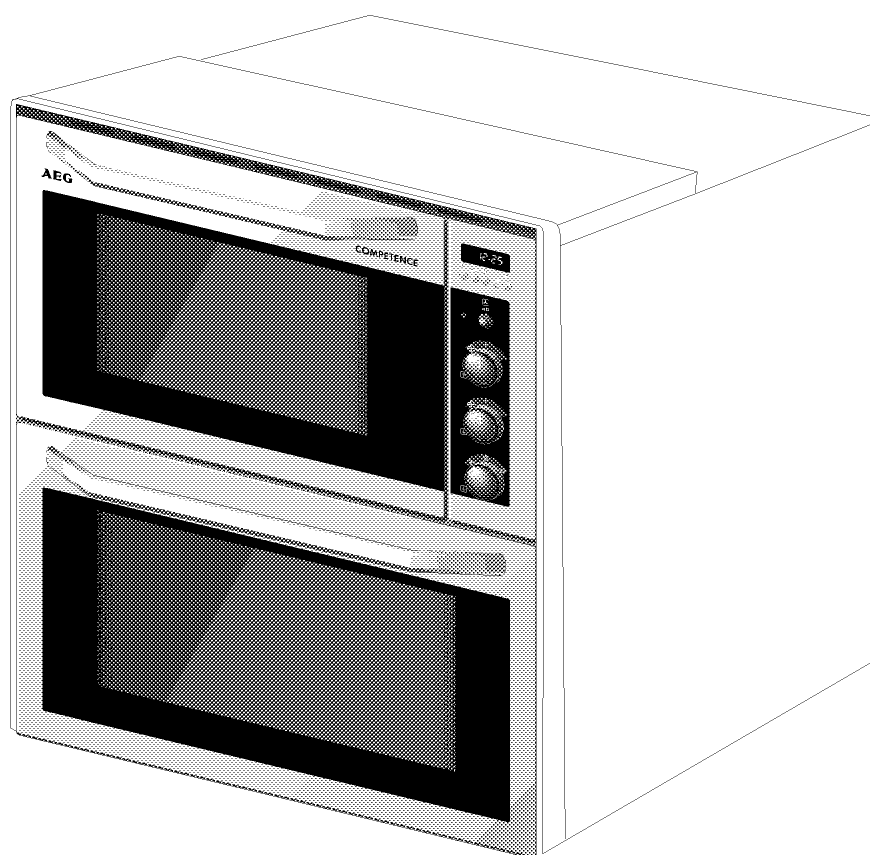

# IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the information in this book contact the Customer Care Department. Telephone 0870 5 350350

## INSTALLATION

The appliance **must** be installed according to the instructions supplied.

The appliance **must** be installed in an adequately ventilated room.

NOTE: It is imperative that the appliance is left in the base to protect both the appliance and the floor.

This appliance is heavy and care **must** be taken when moving it. **Do not** try to move the appliance by pulling the door handles.

Warning: **Do not** attempt to lift this appliance by the handles.

All packaging, both inside and outside the appliance **must** be removed before the appliance is used.

It is dangerous to alter the specifications or modify the appliance in any way.

After installation please dispose of the packaging with due regard for safety and the environment.

Your local authority can arrange this.

## CHILD SAFETY

**Do not** allow young children to play with any part of the packaging.

This appliance is designed to be operated by adults. Young children **must not** be allowed to tamper with the controls or play near or with the appliance.

**CAUTION: Accessible parts may be hot when the grill is in use. Young children should be kept away.**

## DURING USE

This appliance has been designed for domestic use to cook edible foodstuffs only, and **must not** be used for any other purpose.

Take great care when heating fats and oils as they will ignite if they become too **hot**.

Never place plastic or any other material which may melt in or on the oven.

**Do not** stand too close to the oven or grill while in use as warm air will exhaust from the grill cavity and the vents on the front frame of the appliance.

**Do not** leave the grill pan handle in position when grilling and ensure oven gloves are used to remove and replace the handle, as it will become **hot**.

Always use oven gloves to remove and place food in the oven.

Ensure that all vents are left unobstructed to ensure ventilation of the oven cavity.

Never line any part of the appliance with foil.

Stand clear when opening the drop down oven doors. Support the doors using the handles until fully open.

**Never leave the appliance unattended when the oven door is open.**

**Do not** place sealed cans or aerosols inside the oven. They may explode if they are heated.

Ensure that all control knobs are in the OFF position when not in use.

**Do not** stand on the appliance or on the open oven doors.

**Do not** hang towels, dishcloths or clothes from the appliance or its handles. They are a safety hazard.

## CLEANING AND MAINTENANCE

The appliance is heavy and care **must** be taken when moving it.

**For Hygiene and safety reasons this appliance should be kept clean at all times.**

**A build-up of fats or other foodstuffs could result in a fire especially in the grill pan.**

This appliance should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan.

**Do not** leave cookware containing foodstuffs, e.g. fat or oil in the appliance in case it is inadvertently switched on.

Always allow the cooling fan to cool the appliance down before switching off at the wall prior to carrying out any cleaning / maintenance work.

Only clean this appliance in accordance with the instructions given in this book.

## SERVICE

Repairs should **not** be carried out by inexperienced persons as this may cause injury or serious malfunction. This appliance should be serviced by an authorised Service Engineer and only genuine approved spare parts should be used. Details of servicing and repair arrangements are supplied on page 51 of this book.

## AT THE END OF THE COOKERS LIFE

When the time comes to dispose of your appliance please contact your local Council Authority. They can arrange to dispose of the appliance in a safe and controlled manner.

The number will be in the telephone book.

**Please read this instruction book carefully before use and retain for future reference.**

# CONTENTS

## FOR THE USER

<b>Important Safety Information</b>	2	<b>The Conventional Oven</b>	31
<b>Description of the Appliance</b>	5	Uses of the Conventional Oven	31
Getting to Know Your Oven	6	How to Use the Conventional Oven	31
The Cooling Fan for the Controls	7	Things to Note	31
Fan Selector Indicator Neon	7	Hints and Tips	32
Pop In Pop Out Controls	7	<b>Main Oven Cooking Chart</b>	33
Fan Selector Button	7	<b>Pizza Function</b>	34
<b>Before Using The Appliance</b>	8	Uses of Pizza Function	34
When First Switching On	8	How to Use Pizza Function	34
Rating Plate	8	Things To Note	34
Preparing To Use Your Appliance	8	Hints and Tips	34
Condensation and Steam	8	<b>Defrosting in the Main Oven</b>	35
Cookware	9	Uses of Defrost Feature	35
Grill and Oven Furniture	10	How to Defrost	35
<b>The Electronic Timer</b>	11	Things to Note	35
<b>The Dual Grill</b>	15	Hints and Tips	35
Uses of the Grill	15	<b>Speedcook Function</b>	37
How To Use the Dual Grill	15	Uses of Speedcook	37
Things To Note	15	How to Use Speedcook	37
The Grill Pan and Handle	16	Things to Note	37
Hints and Tips	16	Hints and Tips	38
Grilling Chart	18	<b>Thermal Grilling in the Main Oven</b>	39
<b>The Fan Assisted Top Oven</b>	19	Uses of Thermal Grilling	39
Uses of the Fan Assisted Oven	19	How to Thermal Grill	39
How To Use the Fan Assisted Oven	19	Things To Note	40
Things To Note	19	Hints and Tips	40
To Fit the Top Oven Shelves	19	Thermal Grilling Chart	41
Hints and Tips	20	<b>Care and Cleaning</b>	42
<b>The Conventional Top Oven</b>	21	Cleaning Materials	42
Uses of the Conventional Oven	21	Cleaning the Outside of the Appliance	42
How To Use the Conventional Oven	21	Cleaning the Outer and Inner Door	42
Things to Note	21	Glass Panels	42
To Fit the Top Oven Shelf	21	To Remove The Outer Glass	43
Hints and Tips	22	To Replace The Outer Door Glass	44
<b>Top Oven Cooking Chart</b>	23	To Clean The Inner Glass Door	44
<b>Thermal Grilling in the Top Oven</b>	24	Cleaning the Grill / Oven Compartments	44
Uses of Thermal Grilling	24	Care Of Stayclean Surfaces	45
How To Thermal Grill	24	The Oven Cleaning Cycle - Top Oven	45
Things to Note	25	- Main Oven	45
Hints and Tips	25	Things To Note	45
Thermal Grilling Chart	26	Hints and Tips	46
<b>To Defrost in the Top Oven</b>	27	Cooking to Reduce Soilage	46
Uses of Defrost	27	Cleaning the Top Oven Roof	46
How to Defrost	27	To Remove the Wirework Runners	47
Things to Note	27	Cleaning the Shelves, Wirework Runners	47
Hints and Tips	27	and Oven Furniture	47
<b>The Main Fan Oven</b>	29		
Uses of The Fan Oven	29		
How To Use the Fan Oven	29		
Things to Note	29		
To Fit the Main Oven Shelves	30		

<b>The Oven Lights</b>	48
Replacing an Oven Light Bulb	48

<b>Something Not Working</b>	49
<b>Service and Spare Parts</b>	51
<b>Guarantee Conditions</b>	52

## **FOR THE INSTALLER**

Technical Details	53
Things You Need to Know	54
Warnings	54
Choice of Electrical Connection	54

Things to Note	55
Preparing Cabinet for Fitting Oven	56
How to Finish Unpacking	57

To Remove Cover of Mains Terminal	58
Connecting to the Mains Terminal	59
Checking Electrical Connections	60
Connecting to a Hob or Cooker Point	60
Fitting Into The Space Between Cabinets	61

Please read the whole instruction book before using the appliance. To help you the following symbols will be found in the text.

---

**To help you the following symbols will be found in the text.**



**Safety Instructions**



**Hints and Tips**


---

# DESCRIPTION OF THE APPLIANCE

## Built in electric double oven



**WARNING: THIS APPLIANCE MUST BE EARTHED**

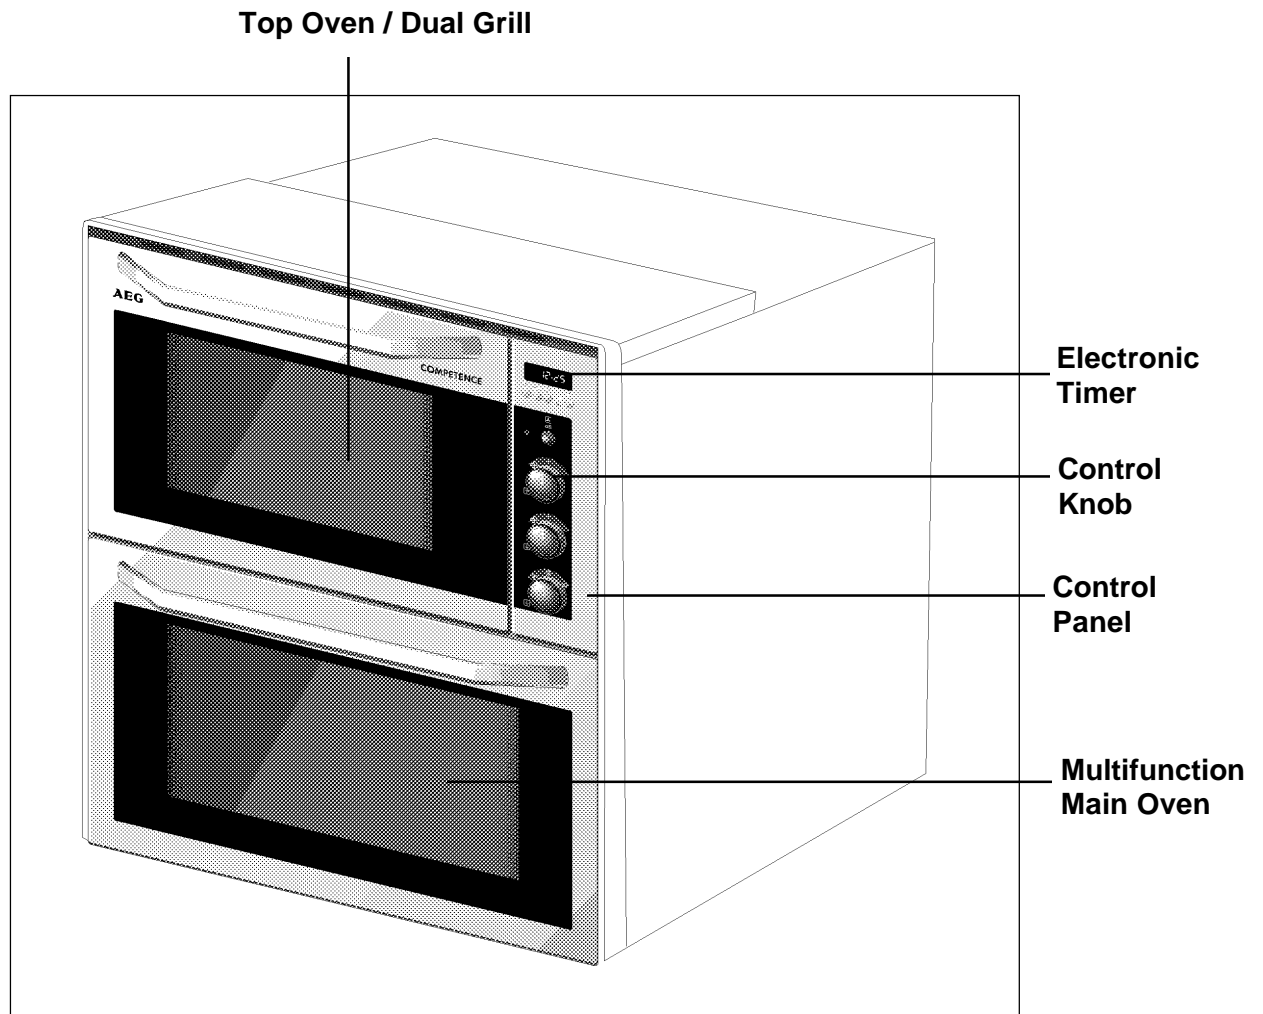

Your built in appliance comprises of an oven with conventional and fan assisted option and dual grill in the top compartment. The top oven is convenient and economical for mid-week use because of its size. The Multifunction main oven is the larger of the two ovens. It comprises of a number of different cooking functions.


The Multifunction oven can be automatically controlled by the electronic timer.

# GETTING TO KNOW YOUR OVEN

## The Control Panel

Fan Selector Indicator Neon  
 Top Oven Indicator Neon

Main Oven Indicator Neon

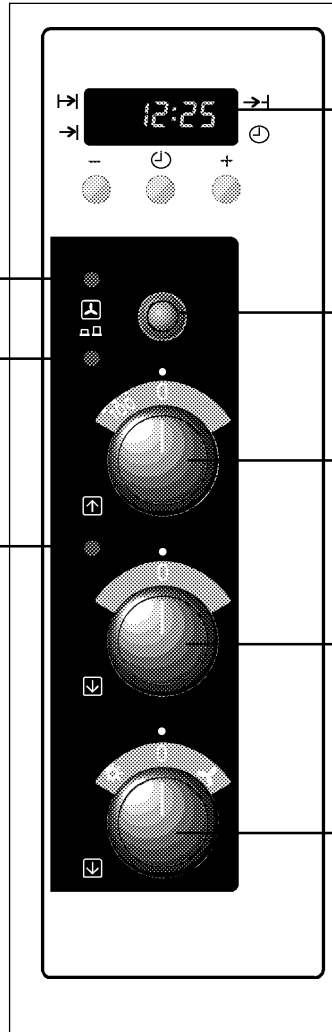

Electronic Timer

Fan Selector button for Top Oven

Top Oven / Dual Grill Control

Main Oven Temperature Control

Multifunction Selector

-  Oven Light
-  Thermal Grilling
-  Speedcook
-  Defrost
-  Pizza Function
-  Conventional Oven
-  Fan Oven

## THE COOLING FAN FOR THE CONTROLS

Your appliance has a cooling fan fitted behind the controls to prevent them from overheating. The cooling fan will come on immediately when grilling or using thermal grill in the top compartment. The cooling fan may come on after a short time when the top or main oven are in use.

The cooling fan may cycle on and off when the appliance is in use. This is quite normal.

### NOTE

The action of the cooling fan will depend on how long the ovens have been in use and what temperature. The cooling fan may not operate at low temperatures or where the oven(s) have been used for a short period of time.

The cooling fan may run on after the ovens or grill are switched off for a period of time to cool the appliance down. It may continue to switch on and off until the appliance is cool.



**Always allow the cooling fan to cool the appliance down before switching off at the wall prior to carrying out any cleaning or maintenance work.**

### NOTE

The action of the cooling fan will depend on how long the ovens or grill have been used and at what temperature. It may not switch in at all at lower temperature settings nor run on where the grill or oven has only been used for a short time.

## FAN SELECTOR INDICATOR NEON

The Fan Selector neon operates when the Fan Selector button is pushed out.

The Selector neon will illuminate with all Top oven functions, except the conventional oven.



The oven control surrounds will illuminate and cycle on and off during use to show that the temperature is being maintained.

## POP IN POP OUT CONTROLS

These control knobs can remain flush with the control panel when not in use, or pushed and released to stand out from the panel for easy operation.

## FAN SELECTOR BUTTON

The Top oven enables you to cook with the oven fan in operation or by conventional means. Push out the Fan Selector button for fan assisted cooking. Push the button in for conventional oven cooking. Refer to the appropriate oven section for full instructions.

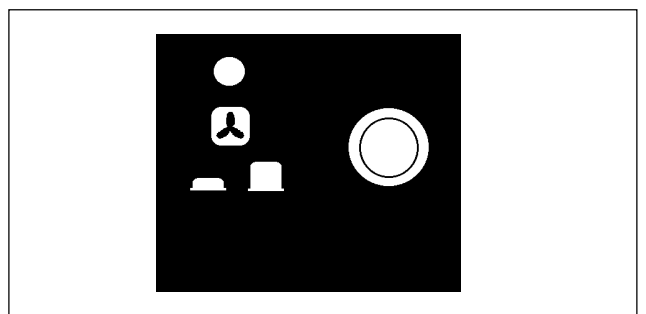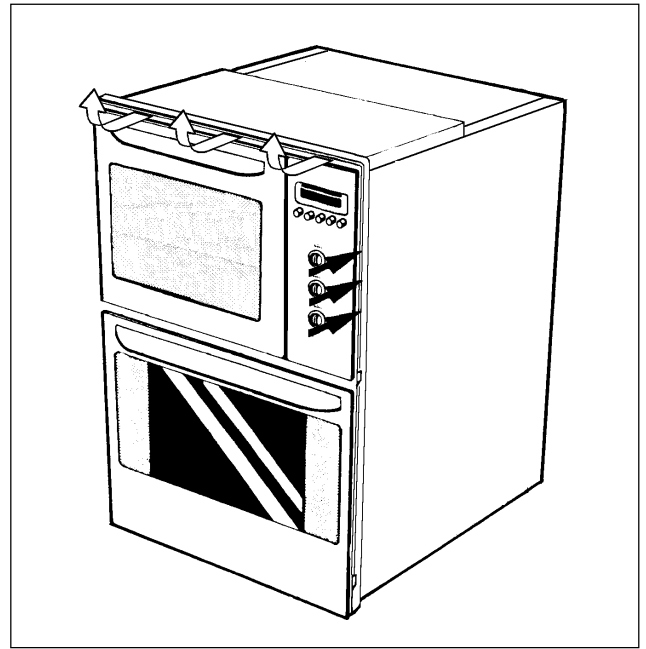


# BEFORE USING THE APPLIANCE

## WHEN FIRST SWITCHING ON

When First Switching on

The oven has a 24 hour clock. When the oven is first switched on at the wall the electronic display will automatically show 12.00, the 'Time' (⌚) neon will also flash.

To set the time of day and use the timer refer to instructions on page 11.

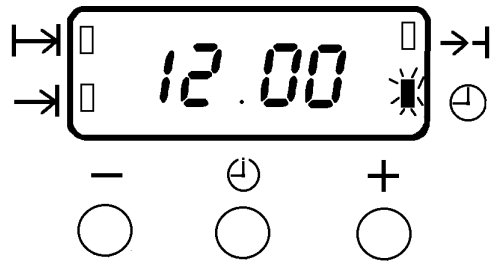

## RATING PLATE

This is situated on the lower front frame of the oven and can be seen upon opening the top cavity door. Alternatively the rating plate may also be found on the back or top of some models (where applicable).

The appliance must be protected by a suitably rated fuse or circuit breaker. The rating of the appliance is given on the rating plate.

**Do not remove the rating plate from the appliance as this may invalidate the guarantee.**


## PREPARING TO USE YOUR APPLIANCE

Wipe over the base of the ovens with a soft cloth and hot soapy water and wash the grill and oven furniture before use.

We suggest that you run the oven elements for 10 - 15 minutes at 220°C to burn off any residue from their surfaces.

The procedure should be repeated with the grill for approximately 5 - 10 minutes.

During this period an odour may be emitted, it is therefore advisable to open a window for ventilation.

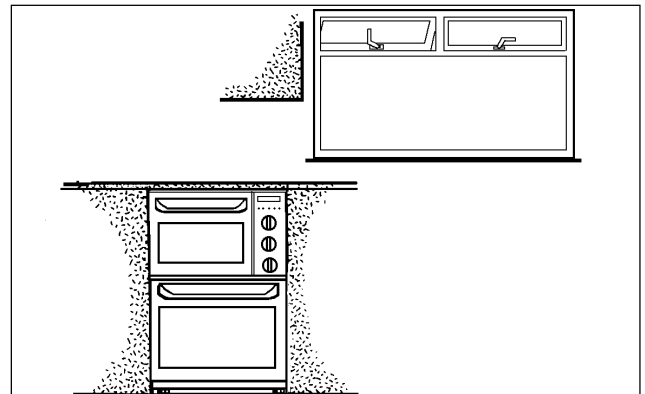

## CONDENSATION AND STEAM

When food is heated it produces steam in the same way as a boiling kettle does. The ovens are vented to allow some of this steam to escape. However, always stand back from the appliance when opening the oven doors to allow any build up of steam or heat to release. If the steam comes into contact with a cool surface on the outside of the appliance, e.g. a trim, it will condense and produce water droplets. This is quite normal and is not caused by a fault on the appliance.


To prevent discolouration occurring, regularly wipe away condensation and any soilage from the appliance surfaces.



## COOKWARE

Baking trays, dishes etc., should not be placed directly against the grid covering the fan at the back of the oven.


**Do not** use baking trays larger than 30cm x 35cm (12" x 14") as they will restrict the circulation of heat and may affect performance. Advice on the effect of different materials and finishes of bakeware is given in 'Hints and Tips' in the appropriate oven section.

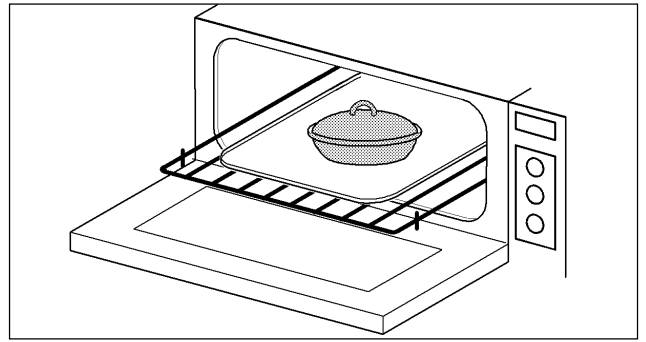


## GRILL AND OVEN FURNITURE

The following items of oven furniture have been supplied with the appliance.


1 grill pan

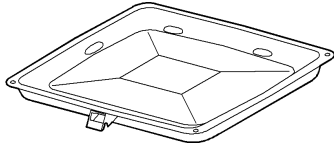


1 grill pan handle

 


1 grill pan grid

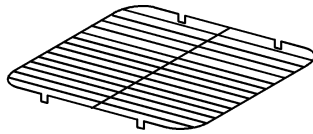


1 meat tin

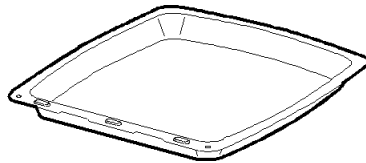

2 shelves for grilling and  
Top oven cooking

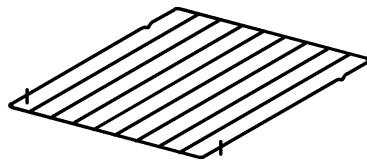

2 shelves for main  
oven cooking

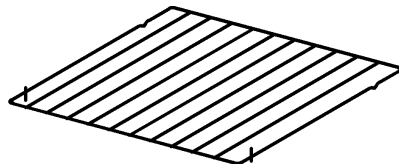

**Scuffing of the Stayclean panel/s by the oven furniture pack may occur during transit.**

**These marks will disappear after the oven has been used for the first time.**

---

# THE ELECTRONIC TIMER

## KEY

- A COOK TIME
- B END TIME
- C COUNTDOWN
- D TIME
- E DECREASE CONTROL
- F SELECTOR CONTROL
- G INCREASE CONTROL

## NOTE:

The time of day must be set before the main oven will operate manually.

### 1. HOW TO SET THE TIME OF DAY

The oven has a 24 hour clock.

When the electricity supply is first switched ON, the display will show 12.00 and the 'Time' (⌚) indicator neon will flash as Fig. 1.

To set the correct time press the increase control button (+) and if necessary, the decrease control button (-) until the correct time on the 24 hour clock is reached, e.g. 10.00am as Fig. 2. The 'Time' indicator (⌚) neon will flash for 5 seconds and then go out.

**Note: The increase and decrease control buttons operate slowly at first, and then more rapidly. They should be pressed separately.**

### 2. HOW TO SET THE COUNTDOWN

The 'Countdown' gives an audible reminder at the end of any period of cooking. This cooking period may be up to 2 hrs 30 mins. It is not part of the automatic control.

To set, press the Selector Control button (⌚) until the 'Countdown' indicator is illuminated (→|) the display reads 0 . 00 as Fig.3.

To set the correct time duration depress the increase control (+) until the display indicates the interval to be timed, e.g. 1hr 45 mins as Fig. 4. If necessary depress the decrease control (-) to achieve the correct time interval.

**NOTE: This must be completed within 5 seconds of first pressing the Selector Control button.**

During the operation of the 'Countdown', the remaining time period will be shown in the display.

The 'Countdown' will sound intermittently for up to 2 minutes at the end of the timed period. The sound can be stopped by pressing any button.

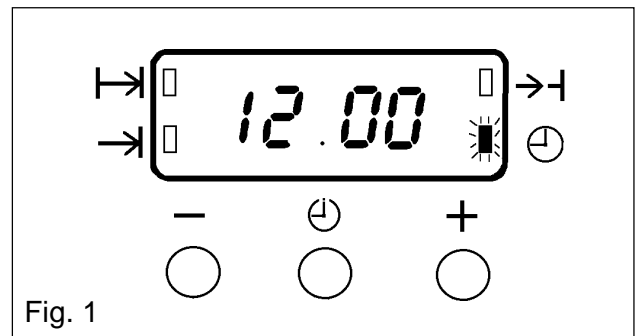
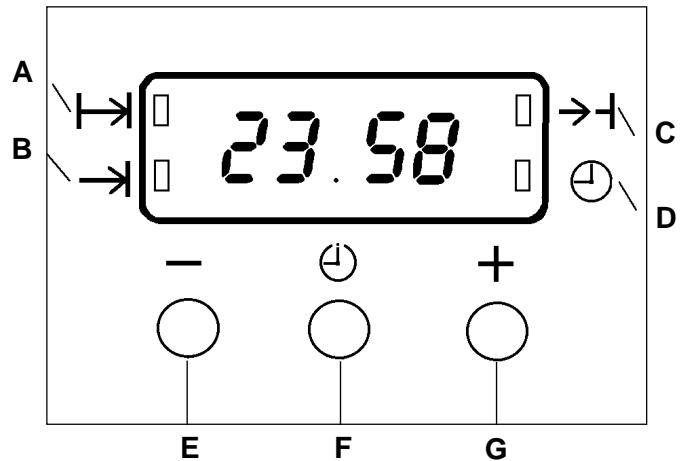


Fig. 1

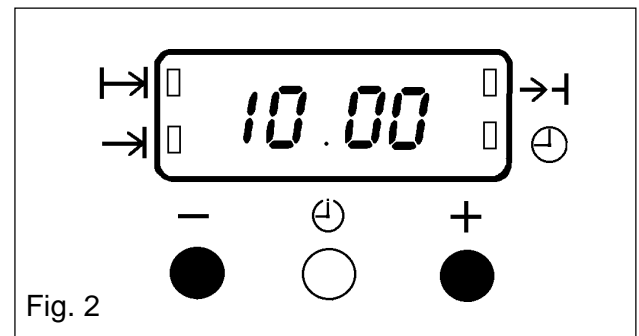


Fig. 2

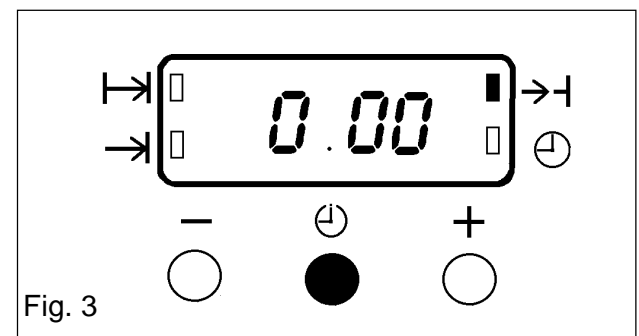


Fig. 3

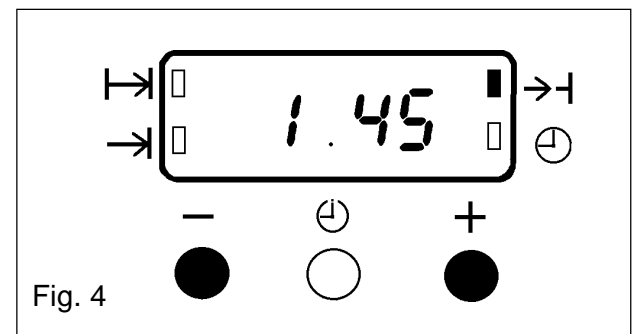


Fig. 4

## TO CANCEL THE COUNTDOWN

If you change your mind and want to cancel the 'Countdown', press the Selector Control button until the 'Countdown' indicator (→|) flashes and then the decrease control ( - ) until 0.00 shows in the display as Fig. 5. The Countdown indicator (→|) will continue to flash for a few seconds and then return to the time of day.

## 3. SETTING THE OVEN TIMER CONTROL

The main oven only can be automatically timed. When using the timer control for the very first time, it is advisable to let it operate while you are at home. The displays can be checked to show that it is operating correctly and you will feel confident to leave a meal to cook automatically in the future.

### A) TO SET THE TIMER TO SWITCH ON AND OFF AUTOMATICALLY

- i) Ensure the electricity supply is switched ON and that the correct time of day is displayed, e.g. 9.a.m. as Fig. 6.
- ii) Place food in oven.
- iii) To set the length of cooking time, press the Selector Control button (⌚) until the 'Cook Time' indicator is illuminated (|→). Press the increase control ( + ) until the required length of cooking time is displayed, e.g. 2 hrs 15 mins as Fig. 7. If necessary depress the decrease control ( - ) until the correct time interval is achieved.

The maximum cooking time is 10 hours.

- iv) Release the buttons. The 'Cook Time' indicator (|→) will be illuminated.

**Remember, this must be completed within 5 seconds of first pressing the Selector Control button.**

- v) To set the 'End Time'. Press the Selector Control button until the 'End Time' (→|) flashes. Press the increase control ( + ) until the required stop time is displayed, e.g. 12.15 p.m. as Fig. 8. If necessary depress the decrease control ( - ) until the correct time interval is achieved.
- vi) Release the buttons. The time of day will be displayed after 5 seconds. The Cook Time (|→) and End Time (→|) indicators will be illuminated.

The 'End Time' must not be more than 23 hours 59 minutes from the time of day. For example, if the time of day is 09.00 a.m., the latest 'End Time' would be 08.59 a.m. the next day.

- vii) Set the main oven control to the required temperature. The oven indicator neon should be OFF.

**Note: When the automatic timed period starts, the oven indicator neon will turn ON and OFF periodically during cooking, showing that the temperature is being maintained.**

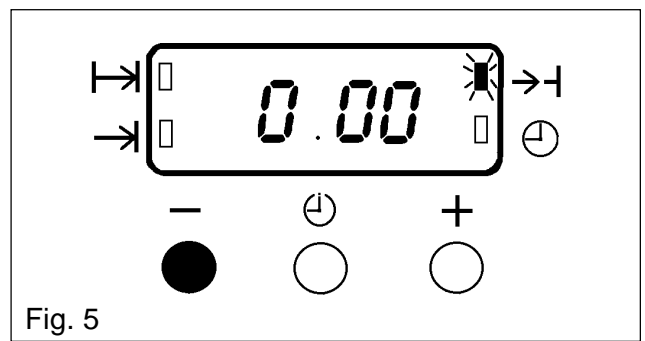


Fig. 5

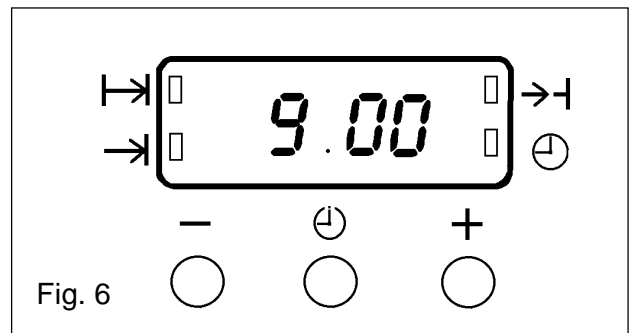


Fig. 6

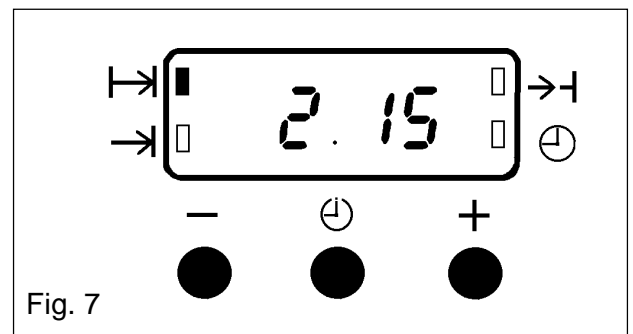


Fig. 7




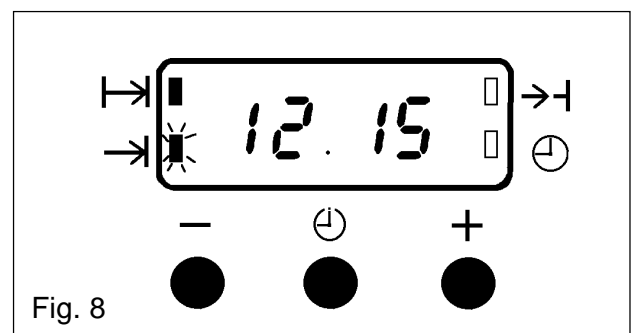


Fig. 8


## B) TO SET THE TIMER TO SWITCH OFF ONLY

- i) Ensure the electricity supply is switched ON and that the correct time of day is displayed, e.g. 10.00am as Fig. 9.
- ii) Place food in oven.
- iii) To set the length of cooking time, press the Selector Control button until the 'Cook Time' (H→) indicator is illuminated. Press the increase control (+) until the required length of cooking time is displayed, e.g. 2 hrs 15 mins as Fig. 10. Depress the decrease control (-) if necessary.
- iv) Release the buttons. The 'Cook Time' indicator (H→) will illuminate and the time of day will be displayed after 5 seconds.
- v) Set the oven temperature. The oven indicator neon should be ON.
- vi) To check the 'End Time' during the cooking period, simply press the Selector Control button once and the remaining time will be displayed, as Fig. 11.

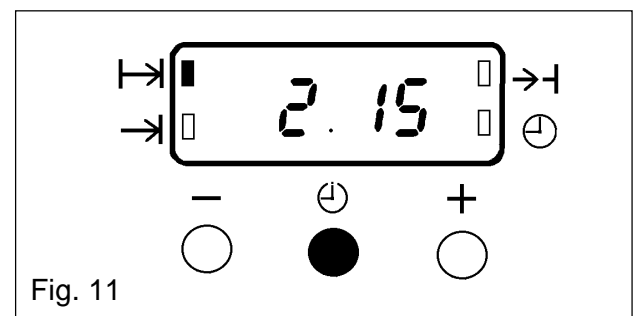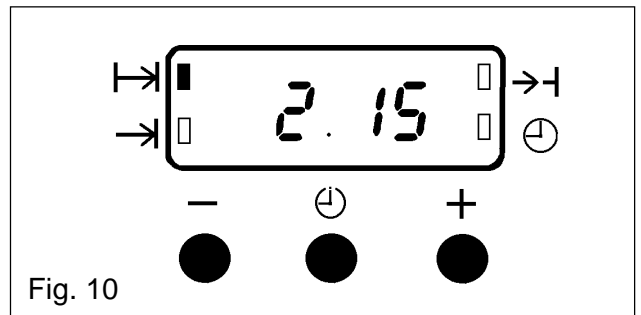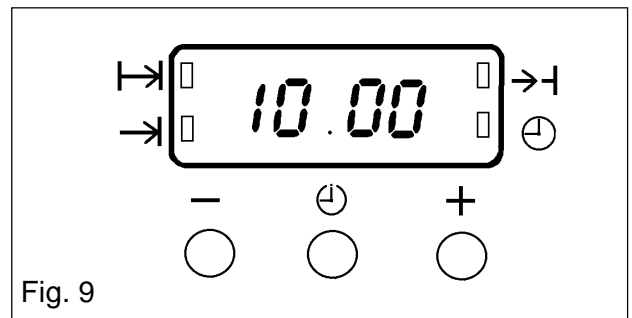

## 4. TO CANCEL AN AUTOMATIC PROGRAMME


- i) To cancel an automatic programme press the Selector Control button until the 'Cook Time' indicator (H→) neon flashes. Press the decrease control (-) until the display reads 0.00 as Fig.12.
- ii) Release the buttons. The 'Cook Time' indicator (H→) will flash and after 5 seconds return to the time of day
- iii) Turn off oven control.

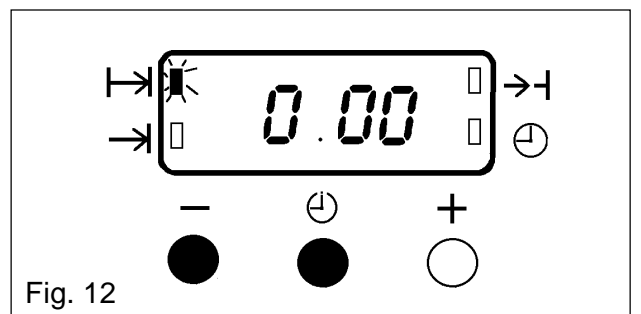

## 5. TO RETURN THE APPLIANCE TO MANUAL

At the end of a timed cooking period, the indicator neon will flash and an alarm will sound for up to 2 minutes.

- i) To stop the sound press any of the three buttons, as Fig. 13.
- ii) The display will return to the time of day.
- iii) Turn off the oven controls.

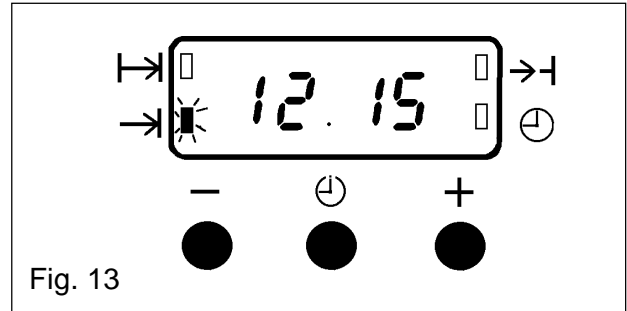

## 6. THINGS TO NOTE

In the event of an interruption of the electricity supply, the timer will reset itself to zero, and all programming will be cancelled.

## 7. AUTOMATIC COOKING

It is advisable to leave food in the oven for as short a time as possible before automatic cooking. Always ensure commercially prepared food is well within its use by date and that home prepared food is fresh and of good quality.

When cooking is complete, **do not** leave food to stand in the oven, but remove and cool it quickly if the food is not to be consumed immediately.

Always ensure food in the oven has been covered before cooking if it is not possible to remove food immediately after cooking.

# THE DUAL GRILL



**WARNING** - Accessible parts become hot when the grill is in use. Keep children away.

## USES OF THE GRILL

The grill is situated in the Top oven compartment.

The grill is a dual circuit grill which means that the full area of the grill or the centre section only can be used. Use the full grill for cooking larger quantities of food. Use the centre section for economy purposes when cooking smaller quantities.

## HOW TO USE THE DUAL GRILL

1. Open the Grill / Top Oven door.
2. Push out and turn the grill / top oven control clockwise past the maximum oven temperature to the settings that control the grill.
3. The first three settings control the full area at  $\frac{1}{4}$  (▼),  $\frac{1}{2}$  (▼▼) and full power (▼▼▼▼). Set to full power at first then turn down as necessary. The fourth setting is for the centre section of the grill only (▼▼▼). This section operates at full power.



The grill door must be left open when grilling.





The grill pan must not be located in the shelf runners.

## THINGS TO NOTE

- The cooling fan for the controls will operate as soon as the grill control is turned. For more information on the operation of the cooling fan turn to page 7.
- The outer section of the grill element may appear to glow brighter than the inner section. This is quite normal.
- The control knob surround will illuminate.
- We recommend using the grill pan on the shelf in positions 3 or 5.



If you use the grill pan in position 3 the shelf must be withdrawn before the pan can be located or removed. Ensure the grill pan is properly located.

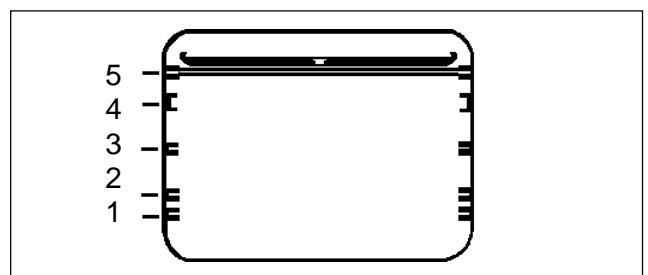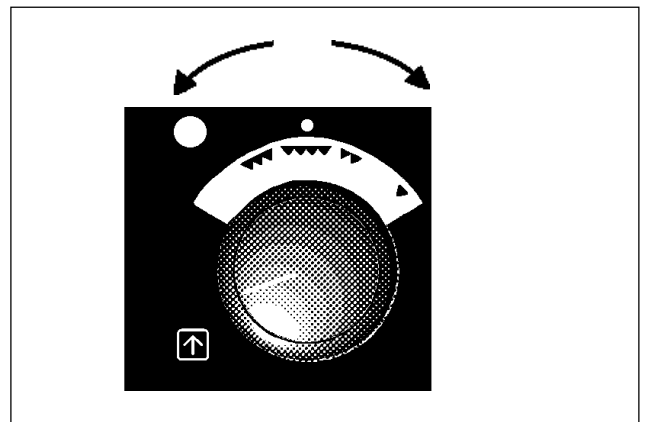

## THE GRILL PAN AND HANDLE

The grill pan has a removable handle.

To insert the handle, press the button on the handle with the thumb and pivot the handle slightly upwards inserting the lip into widest part of the bracket. Move the handle towards the left, lower into position and release the button.

---

 **Ensure the handle is positively located.**

---

To remove the handle, press the button on the handle with the thumb and pivot the handle slightly upwards and towards the right to remove from the bracket.

---

 **Protect your hands when removing the grill pan handle.**

---

**Always remove the grill pan handle during grilling.**

---

To correctly locate the grill pan on the shelf, ensure that the cut out on the underside of the handle bracket locates over the front bar of the shelf.

---

 **The Grill Pan must not be located in the shelf runners.**

---

To check the progress of the food being grilled, the grill pan should be withdrawn on the shelf to attend to food during cooking.





### HINTS AND TIPS

- Most foods should be placed on the grilling grid in the grill pan. This allows maximum circulation of air by raising the food out of fats and juices.
- 

 **Ensure that you support the grill pan when it is withdrawn.**


---

- Adjust the grid and grill pan runner position to allow for different thicknesses of food. Position the food close to the element for faster cooking and further away for more gentle cooking.

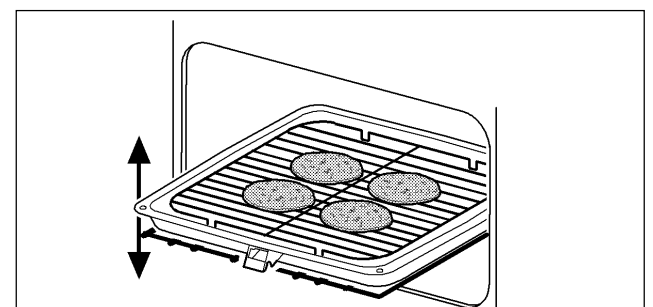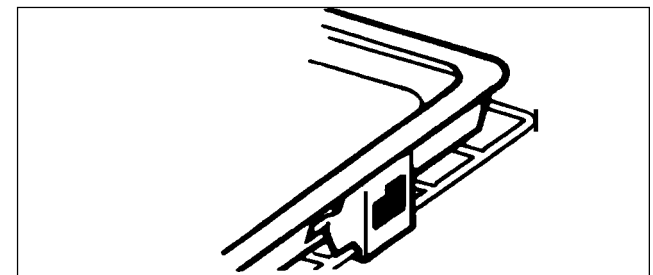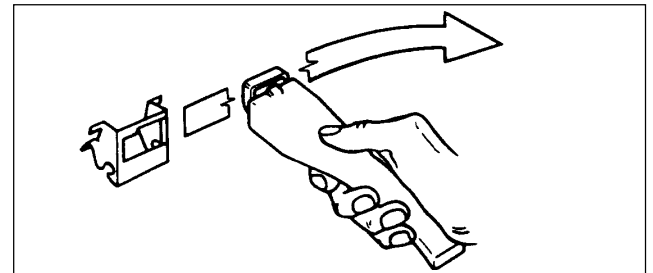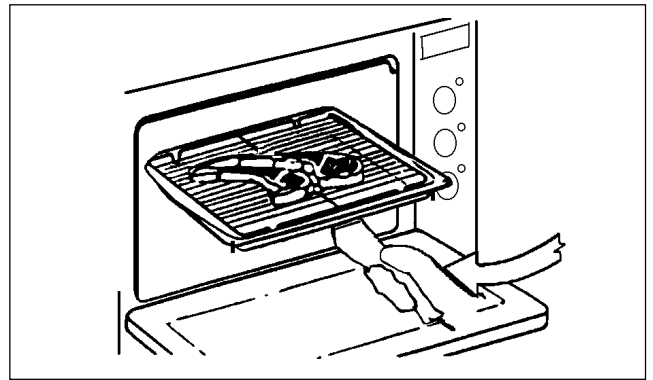





- The grill pan grid is reversible. This is useful if you want to cook foods of varying thickness. As a general rule, bread for toasting should be placed on the grid in the ' high ' position in the grill pan. Foods such as chicken pieces or chops may be grilled using the grilling grid in the low position.

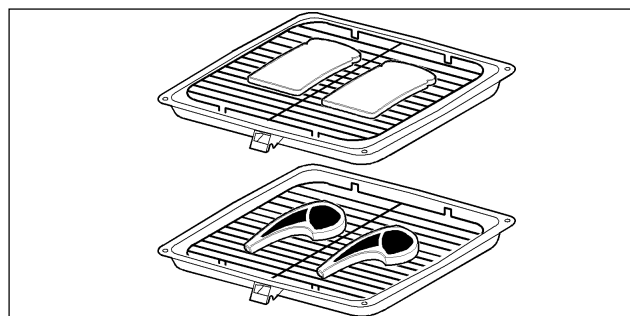


- Food should be thoroughly dried before grilling to minimise splashing. Brush lean meats and fish lightly with a little oil or melted butter to keep them moist during cooking.

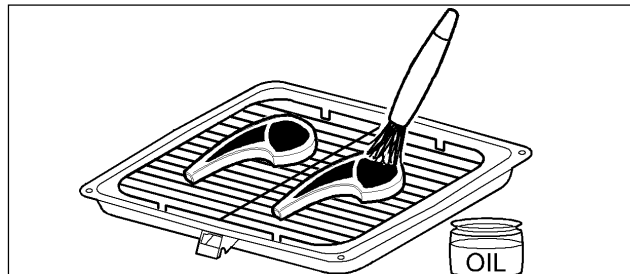


- Accompaniments such as tomatoes and mushrooms may be placed underneath the grid when grilling meats.

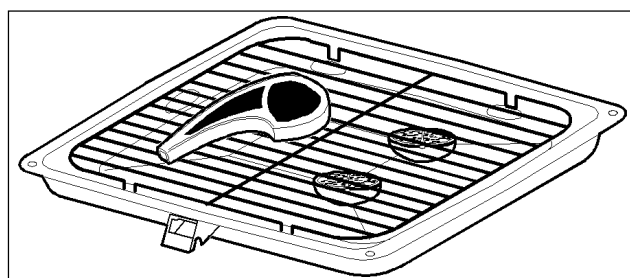

- The food should be turned over during cooking as required.

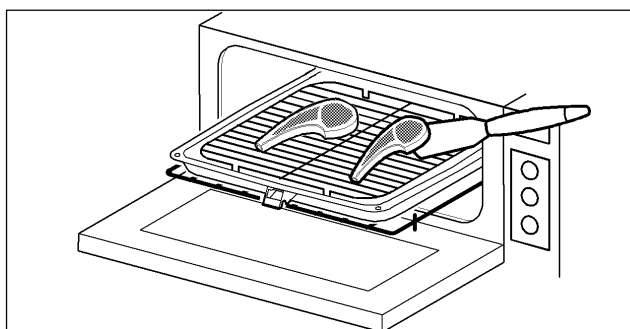

- The grill door must be left open when grilling. For convenience the grill door can be left ajar.

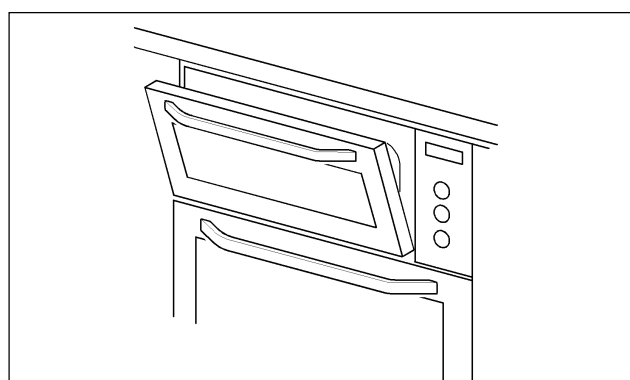

- Preheat the grill on full setting for a few minutes before searing steaks or toasting. Adjust the heat setting and the shelf position as necessary during cooking.

# GRILLING CHART

The chart below gives recommended cooking times and shelf positions. Remember that these are a guide and should be adjusted to suit personal taste.

## Note

Shelf positions are counted from the bottom upwards.

Food	Grill Time (Min)	Shelf	Grid position
Bacon Rashers	3 - 5 each side	5	High
Beefburgers	6 - 10 each side	5	Low
Chicken Joints	15 - 20 each side	3	High
Chops - Lamb	7 - 10 each side	5	Low
- Pork	10 - 15 each side	5	Low
Fish - Whole Trout / Herring	8 - 12 each side	5	Low
Filletts - Plaice / Cod	4 - 6 each side	5	Low
Kebabs	10 - 15 each side	5	Low
Kidneys - Lamb	4 - 6 each side	5	Low
Pig	8 - 10 each side	5	Low
Liver - Lamb / Pig	5 - 10 each side	5	Low
Sausages	10 - 15 turn as required	5	Low
Steaks - Rare	3 - 6 each side	5	Low
Medium	6 - 8 each side	5	Low
Well Done	7 - 10 each side	5	Low
Browning e.g. au gratin, lasagne, shepherd's pie	3 - 5 mins	3	-

# THE FAN ASSISTED TOP OVEN

## USES OF THE FAN ASSISTED OVEN


The Top oven is the smaller of the two ovens. It is convenient for mid-week meals where smaller quantities or convenience foods are being cooked. It is important to refer to the Top oven cooking chart as a guide to shelf positions and temperatures as these may differ from previous appliance's you may have used.

## HOW TO USE THE FAN ASSISTED OVEN

1. Push out and turn the Grill / Top oven temperature control clockwise to the required setting.
2. Push out the Fan Selector button.

### THINGS TO NOTE


- The Fan Selector neon will glow throughout cooking.
- The control knob surround will illuminate.
- The top oven indicator neon will illuminate. It will turn on and off during cooking to show that the temperature is being maintained.
- The cooling fan for the controls will operate after a time. See page 7 for more information on the operation of the cooling fan.
- The oven light will illuminate.

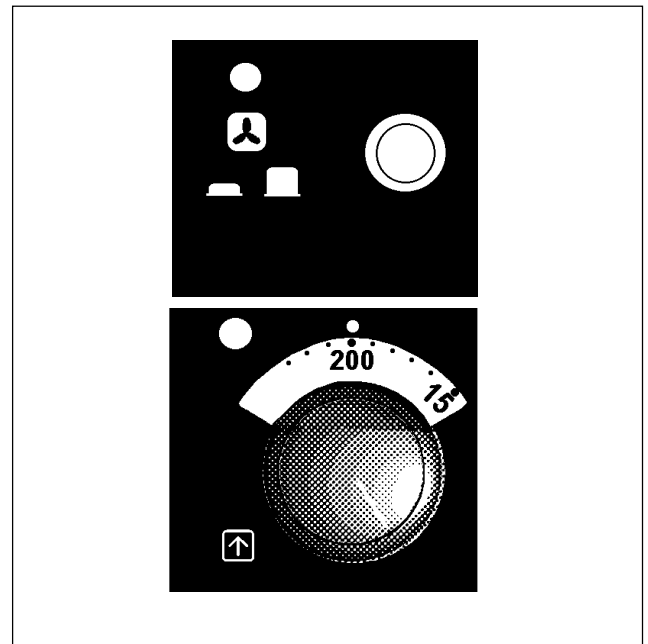

**Do not place dishes, tins and trays directly on the oven base as it becomes very hot and damage will occur.**


## TO FIT THE TOP OVEN SHELVES

There are 5 shelf positions in the Top oven. Shelf positions are counted from the bottom upwards.

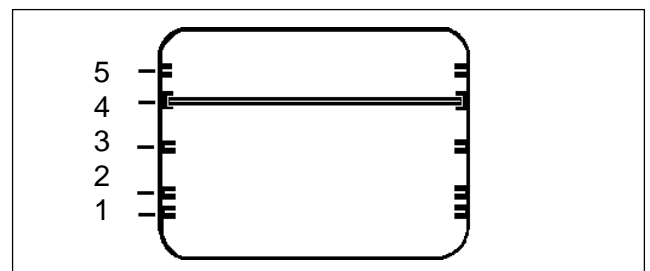





The shelves should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven.

If not fitted correctly the anti-tilt and safety stop mechanism will be affected.

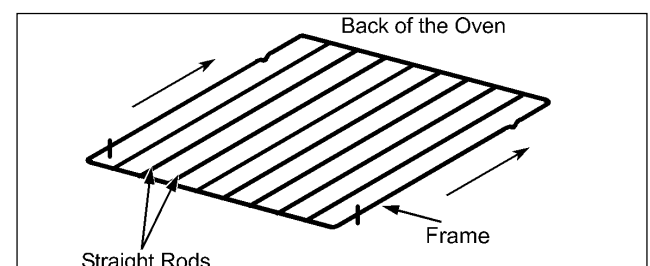

## **i** HINTS AND TIPS

- Use the Top oven when you want to warm plates. Use a setting of 80°C - 100°C on the oven temperature control.
- You can use both shelves when using the fan assisted oven.
- There should always be at least 2.5cm (1") between the top of the food and the grill element. This gives best cooking results and allows room for rise in yeast mixtures, Yorkshire puddings etc. When cooking cakes, pastry, scones bread etc., place the tins or baking trays centrally on the shelf.
- Ensure that food is placed centrally on the shelf and there is sufficient room around the baking tray or dish to allow for maximum circulation.
- Where a degree of evenness in baking is required, it may be necessary to interchange food during cooking.
- Where a larger quantity of food is to be cooked we recommend you use the main oven.
- Place dishes on a suitably sized baking tray on the shelf to prevent spillage onto the oven base and to help reduce cleaning.
- The material and finish of the baking tray and dishes will affect the degree of base browning of the food. Enamelware, dark, heavy or non-stick utensils increase base browning. Shiny aluminium or polished steel trays reflect the heat away and give less base browning.
- For economy leave the door open for the shortest possible time, particularly when placing food into a pre-heated oven.
- **Do not** use the grill pan or meat tin as a baking tray as this will increase base browning of the food.
- Because of the smaller cooking space and lower temperatures, shorter cooking times are sometimes required. Be guided by the recommendations in the cooking chart.

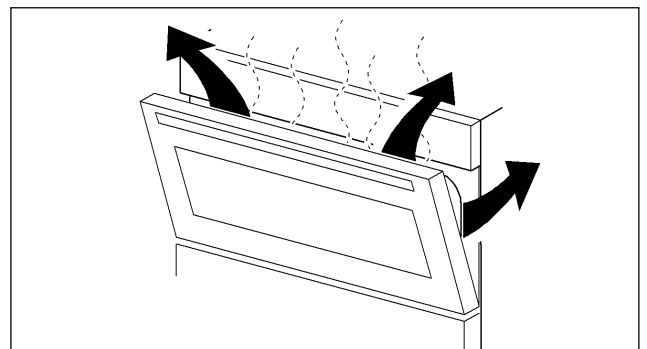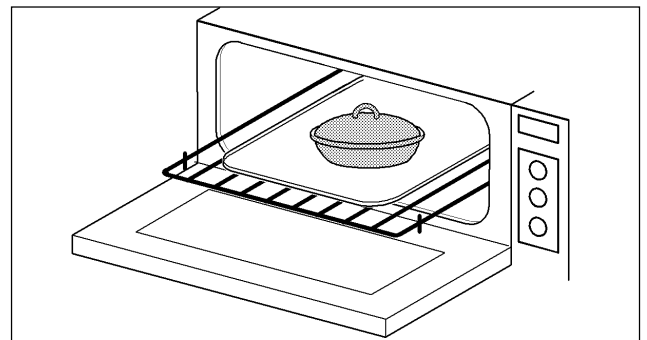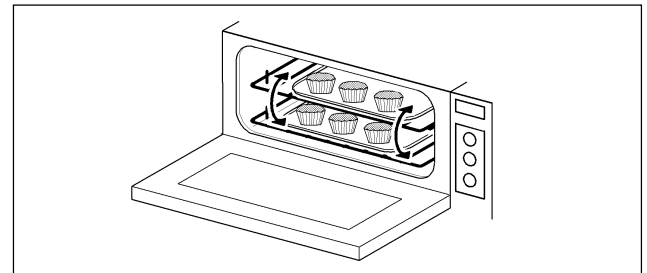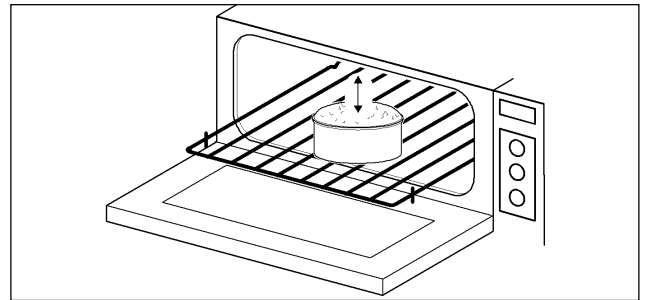

# THE CONVENTIONAL TOP OVEN

## USES OF THE CONVENTIONAL OVEN

This form of cooking gives you the opportunity to cook without the fan in operation. It is particularly suitable for some cook chilled convenience foods and dishes which require extra base browning such as pizzas, quiches and flans. Gratin's, lasagne and hotpots which require extra top browning also cook well in the conventional oven. For best results cook on one level.

## HOW TO USE THE CONVENTIONAL OVEN

1. Push in the Fan Selector button.
2. Push out and turn the Grill / Top oven temperature control clockwise to the required setting.

### THINGS TO NOTE

- The control knob surround will illuminate.
- The top oven indicator neon will illuminate. It will turn on and off during cooking to show that the temperature is being maintained.
- The cooling fan for the controls will operate after a short time. It may run on after the controls are switched off until the appliance has cooled. See page 7 for more details on the operation of the cooling fan.
- The oven light will illuminate.






**Do not place dishes, tins or baking trays directly on the oven base as it becomes very hot and damage will occur.**

## TO FIT THE TOP OVEN SHELF

There are 5 shelf positions in the Top oven. Shelf positions are counted from the bottom upwards.





The shelf should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven.

If not fitted correctly the anti-tilt and safety stop mechanism will be affected.

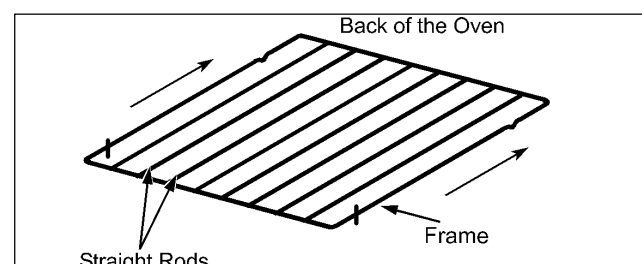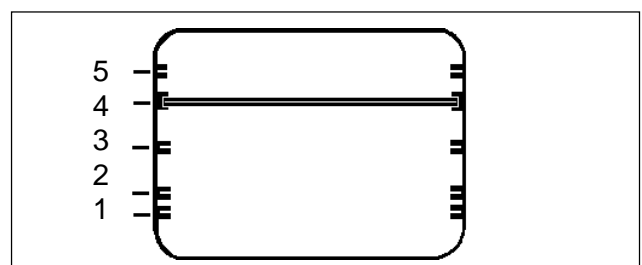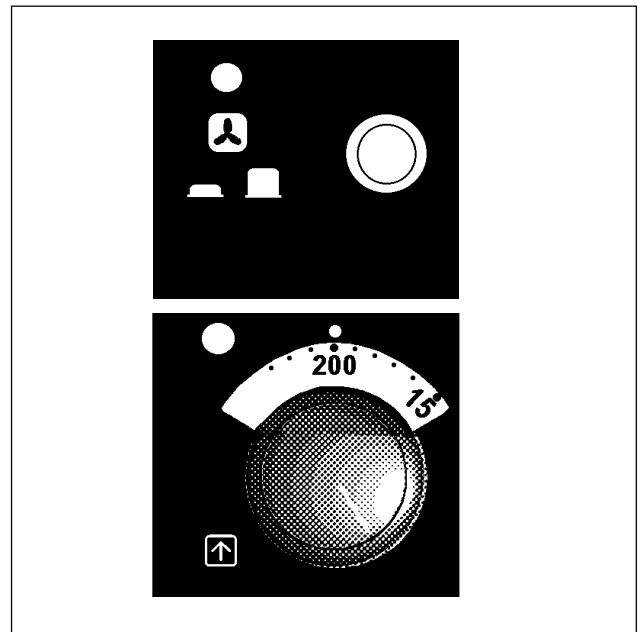

## **i** HINTS AND TIPS

- The middle shelf allows for the best heat distribution. To increase base browning simply lower the shelf position. To increase top browning, raise the shelf position.
- The material and finish of the baking trays and dishes used will affect base browning. Enamelware, dark heavy or non-stick utensils increase base browning, while oven glassware, shiny aluminium or polished steel trays reflect the heat away and give less base browning.
- Always place dishes centrally on the shelf to ensure even browning.
- Stand dishes on suitably sized baking trays to prevent spillage onto the base of the oven and make cleaning easier.
- Single level cooking gives best results. If you require more than one level of cooking use the fan assisted function or main fan oven.
- Because of the smaller cooking space and lower temperature, shorter cooking times are sometimes required. Be guided by the recommendations in the cooking chart.
- For economy leave the oven door open for the shortest possible time particularly when placing food in a preheated oven.
- Where a larger quantity of food is to be cooked we recommend you use the fan assisted or main fan oven.

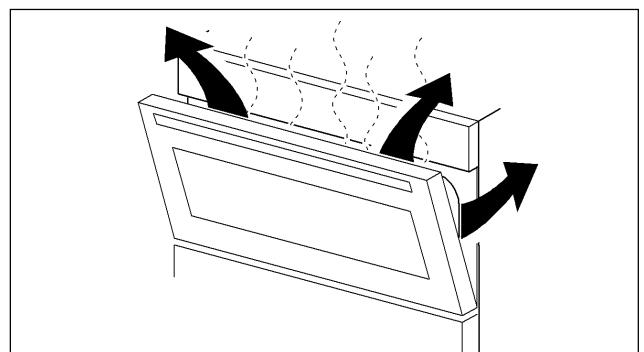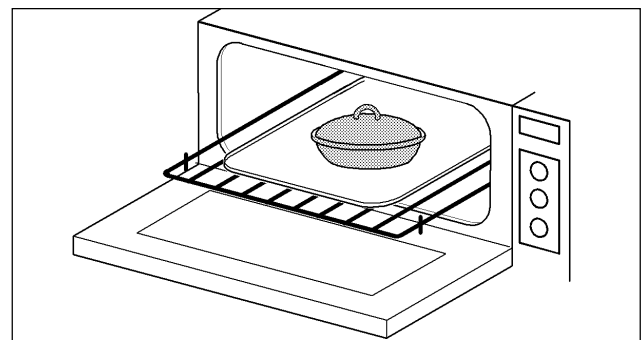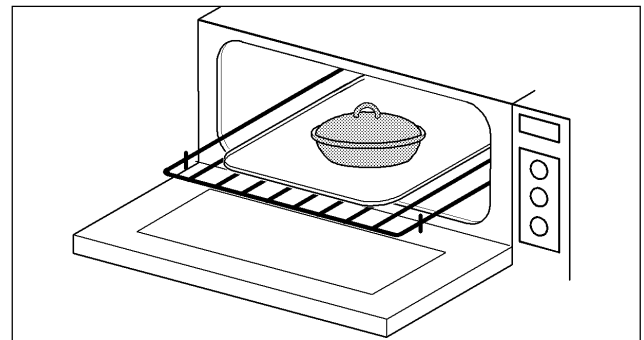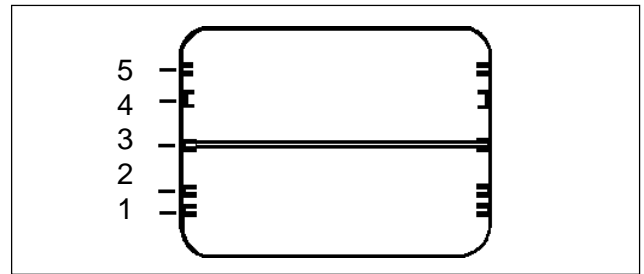

# TOP OVEN COOKING CHART

The oven temperatures are intended as a guide only. It may be necessary to increase or decrease the temperatures by a further 10°C to suit individual preferences and requirements.

Note: Shelf positions are counted from the bottom of the oven.

FOOD	CONVENTIONAL OVEN		FAN ASSISTED OVEN	
	SHELF POSITION	TEMP (°C)	SHELF POSITION	TEMP (°C)
Biscuits	3	170 -190	2 & 4	160 - 170
Bread	3	210 - 220	2	200 - 210
Bread Rolls / Buns	3	210 -220	2 & 4	160 - 170
Cakes: Small & Queen	3	180 - 190	2 & 5	160 - 170
Sponges	2	180 - 190	2 & 5	160 - 170
Victoria Sandwich	2	180 - 190	2 & 4	160 - 170
Madeira	3	160 - 170	2	140 - 150
Rich Fruit	3	140 - 150	2	130 - 140
Gingerbread	3	150 - 160	2 & 4	140 -150
Meringues	2	80 - 100	2 & 4	90 - 100
Flapjack	3	180 - 190	3	170 - 180
Shortbread	3	140 - 150	3	130 - 140
Baked Custard	3	160 - 170	3	150 - 160
Casseroles : Beef / Lamb	2	150 - 160	4	140 - 150
Chicken	2	140 - 160	4	140 -160
Convenience Foods	3	Refer to Packaging	2 & 4	Refer to Packaging
Fish	3	170 - 190	3	150 - 170
Fish Pie - potato topped	3	200 - 210	7	180 -190
Fruit Pies, Crumbles	3	190 - 200	3	190 - 200
Milk Puddings	3	140 - 150	3	130 - 140
Pasta / Lasagne etc.	3	190 - 200	3	170 - 180
Pastry : Choux -	3	190 - 200	3	190 - 200
Eclairs/profiteroles	3	190 - 200	3	190 - 200
Flaky / Puff pies	3	200 - 210	3	190 - 200
Shortcrust -	3	190 - 200	2 & 4	170 - 180
Mince pies	3	190 - 200	2 & 4	170 - 180
Meat pies	3	210 - 220	2 & 4	170 - 180
Quiche, Tarts, Flans	3	180 - 190	3	180 - 190
Roast Meat / Poultry	1	160 - 180	2	160 - 180
Scones	3	220 -230	2 & 4	210 - 220
Shepherds Pie	3	200 - 210	3	200 - 210
Soufflés	3	190 - 200	3	160 - 170
Vegetables : Baked Jacket Potatoes	3	190 - 200	3	200 - 210
Roast Potatoes	3	200 - 210	4	170 - 180
Yorkshire Puddings - large	3	210 - 220	4	210 - 220
- individual	3	210 - 220	4	210 - 220

# THERMAL GRILLING IN THE TOP OVEN

## USES OF THERMAL GRILLING

Thermal grilling in the Top oven offers an alternative method of cooking food items normally associated with conventional grilling.

The grill element and the oven fan operate together, circulating hot air around the food. The need to check and turn food is reduced. Thermal grilling helps to minimise cooking smells in the kitchen and allows you to grill with the oven door closed. With the exception of toast and rare steaks you can thermal grill all the foods you would normally cook under a conventional grill.

Dishes prepared in advance such as shepherd's pie, lasagne and au gratin's can be heated through and browned on the top using the thermal grilling function.

## COOKING TIMES

Cooking is more gentle, therefore food generally takes a little longer to cook when thermal grilling compared with conventional grilling. One of the advantages is that larger quantities can be cooked at the same time.

A general guide to cooking times is given on page 26 but these times may vary slightly depending on the thickness and quantity of food being cooked.

## HOW TO THERMAL GRILL






**Always thermal grill with the oven door closed and with the grill pan handle removed.**

1. Press out the Fan Selector button.
2. Push out and turn the Top oven / Dual Grill control past the maximum oven setting to the required grill setting. The first three settings control the full area at  $\frac{1}{4}$  (▼),  $\frac{1}{2}$  (▼▼) and full power (▼▼▼▼). Set to full power at first then turn down as necessary. The fourth setting is for the centre section of the grill only (▼▼▼). This section operates at full power.
3. Locate the grill pan on shelf 3 or 5.
4. Remove the handle from the grill pan and close the oven door.



**If you use the grill pan in position 3, the shelf must be withdrawn before the pan can be located or removed. Ensure the grill pan is properly located.**

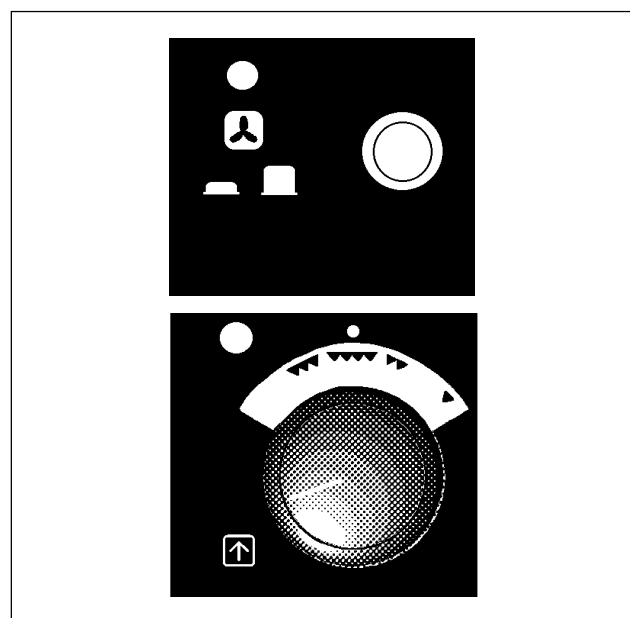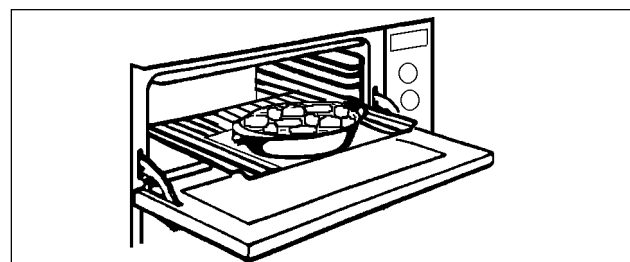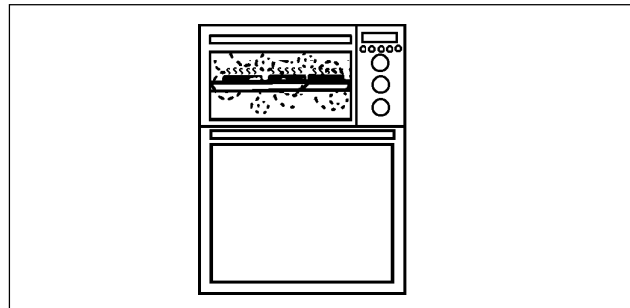




## THINGS TO NOTE


- Shelf position 3 is suitable for most foods.
- Half setting (▼▼) is suitable for most thicker foods such as chicken quarters and pork chops. Full setting (▼▼▼▼) is suitable for foods such as bacon.
- The control knob surround will illuminate.
- The top oven indicator neon will illuminate. It will turn on and off during cooking to show that the temperature is being maintained.
- The Selector indicator neon will glow throughout cooking.
- The oven fan will operate continually during thermal grilling.
- The cooling fan for the controls will come on when the grill control is turned. It may run on after the controls are switched off until the appliance has cooled. See page 7 for more details on the operation of the cooling fan.

## **i** HINTS AND TIPS

- Prepare foods in the same way as for conventional grilling. Brush lean meats and fish lightly with a little oil or butter to keep them moist during cooking.
- Most food should be placed on the grill pan grid in the 'high' position in the grill pan to allow maximum circulation of air around the food.
- Accompaniments such as tomatoes and mushrooms may be placed below the grid when grilling meats, or in a separate dish on a lower shelf.

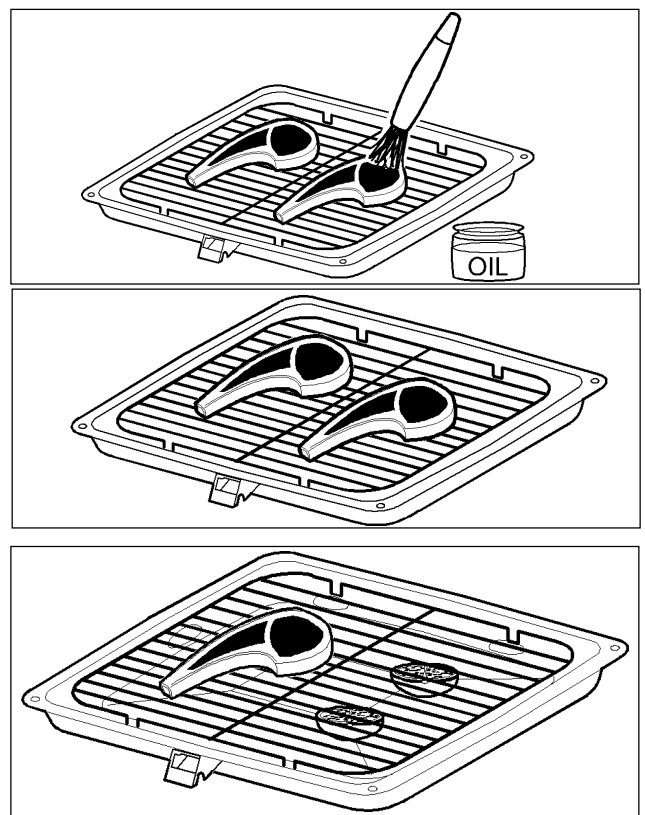


- Turn food over during cooking as necessary.

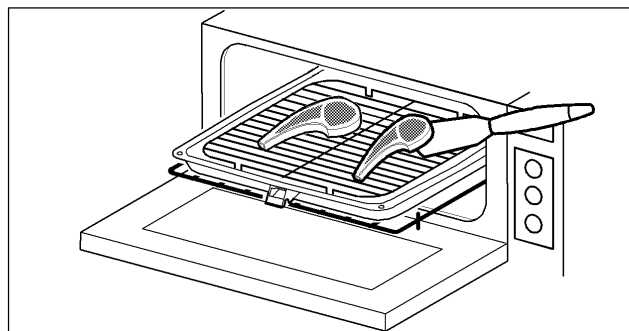

- Ensure that ready prepared or cooked chilled dishes e.g. shepherds pie, moussaka, lasagne, etc., are piping hot throughout before serving.

- Be prepared to make suitable adjustments to the grill setting during cooking to suit individual requirements. It may be necessary to turn down as required. If thermal grilling on more than one level, it may be necessary to interchange the food on the shelves during cooking.

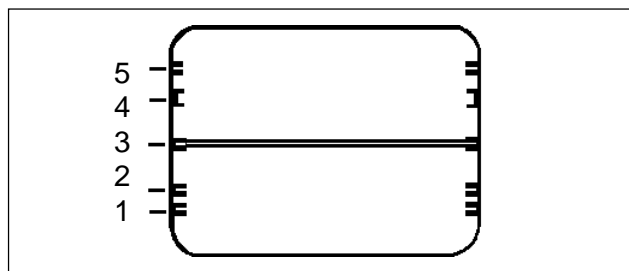

- With the exception of toast and rare steak you can thermal grill all foods normally grilled by conventional methods.


## THERMAL GRILLING CHART

FOOD	SHELF	GRILL SETTING	TIME (mins in total)
Bacon Rashers	5	▼▼▼▼	8 - 12
Beefburgers	3	▼▼▼▼	10 - 15
Chicken Joints	3	▼▼	30 - 40
Chops - Lamb	3	▼▼	20 - 25
- Pork	3	▼▼	20 - 25
Fish - Whole Trout / Mackerel	3	▼▼	10 - 20
Filletts - Plaice / Cod	3	▼▼	10 - 15
Kebabs	3	▼▼	20 - 30
Kidneys - Lamb / Pig	3	▼▼	10 - 15
Liver - Lamb / Pig	3	▼▼	20 - 30
Sausages	3	▼▼	10 - 20
Steaks - Medium	3	▼▼	15 - 20
- Well Done	3	▼▼	20 - 30
Heating through and browning eg. au gratin, lasagne, Shepherds pie	3	▼▼	depends on dish

# TO DEFROST IN THE TOP OVEN

## USES OF DEFROST

This function enables you to defrost most foods without heat faster than some conventional methods as the oven fan circulates air around the food. It is particularly suitable for defrosting delicate frozen foods which are to be served cold e.g. cream filled gateaux, cakes covered with icings or frostings, cheesecakes, biscuits, scones etc.

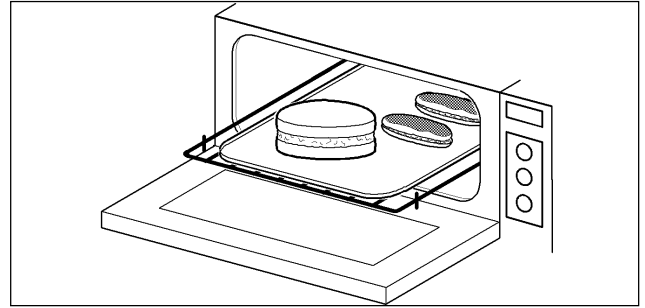


## HOW TO DEFROST

1. Press out the Fan Selector button.
2. The Dual grill / Top oven control should be in the Off '0' position.



## THINGS TO NOTE

- The oven fan will operate.
- The fan selector indicator neon will illuminate.
- The top oven indicator neon may illuminate. It may turn on and off during defrosting.

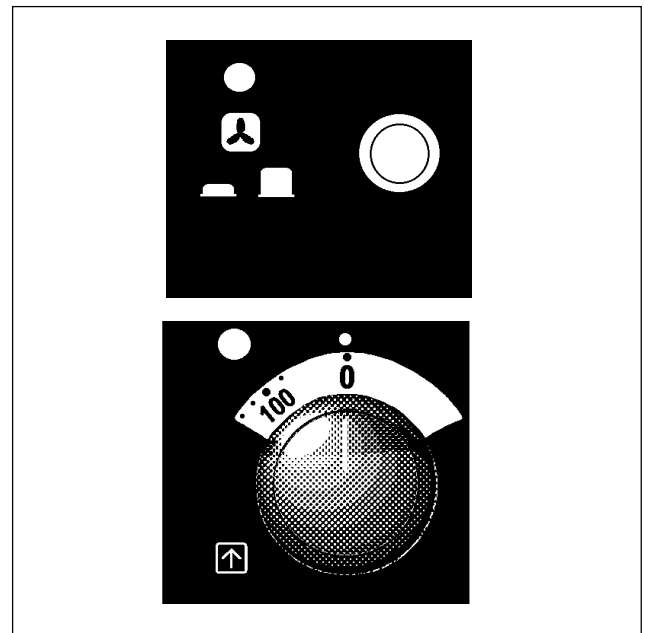


## HINTS AND TIPS

- Place the frozen food in a single layer where possible and turn it over half way through the defrosting process.
- The actual speed of defrosting is influenced by room temperature. On warm days defrosting will be faster than on cooler days.
- It is preferable to thaw fish, meat and poultry slowly in the fridge. However, this process can be accelerated by using the defrost function. Small or thin fish fillets, frozen peeled prawns, cubed or minced meat, liver, thin chops, steaks etc., can be thawed in 1 - 2 hours.
- A 1kg/2¼lb oven ready chicken will be thawed in approximately 5 hours. Remove the giblets as soon as possible during the thawing process.

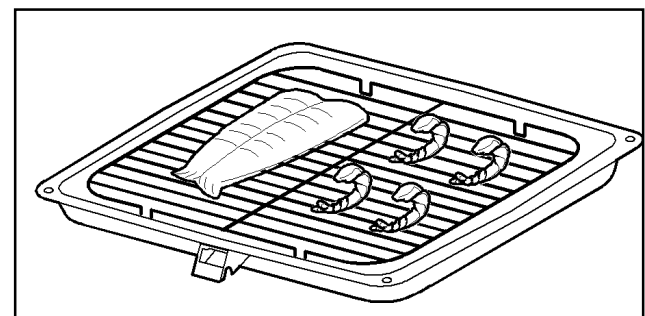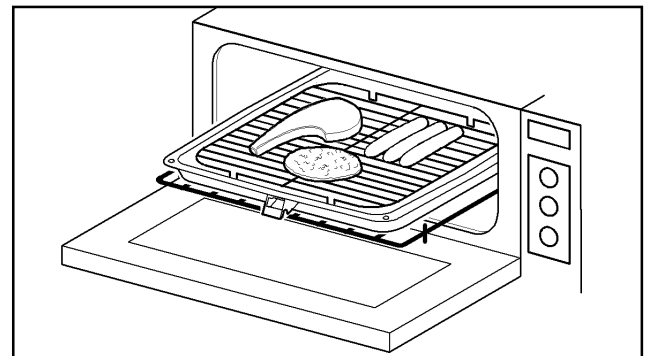

- Joints of meat up to 2kg/4½lb in weight can be thawed using the defrost function.
- All joints of meat and poultry must be thawed thoroughly before cooking.
- **DO NOT** leave food at room temperature once it is defrosted. Cook raw food immediately or store cooked food in the fridge, once it has cooled.
- Care must always be taken when handling foods in the home. Always follow the basic rules of food hygiene to prevent bacterial growth and cross contamination when defrosting, preparing, cooking cooling and freezing foods. This is particularly important if the main oven is in use or is warm, as the temperature in the Top oven will be higher than room temperature.

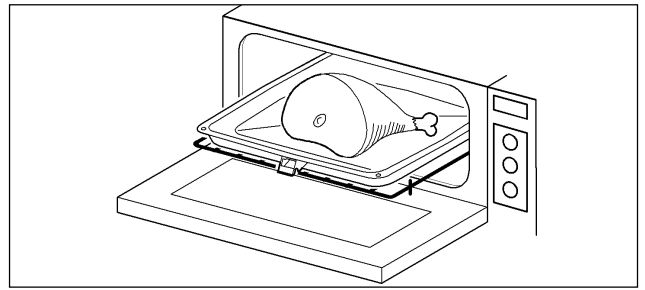

# THE MAIN FAN OVEN

## USES OF THE FAN OVEN

The fan oven is particularly suitable for cooking larger quantities of food.

The advantages of fan oven cooking are:

### PREHEATING

The fan oven quickly reaches its temperature so it not usually necessary to preheat the oven. Without preheating however you may need to add an extra 5 - 10 minutes on the recommended cooking times. For recipes needing high temperatures e.g. bread, pastries, scones, soufflés etc., best results are achieved if the oven is preheated first. For best results when cooking frozen or cooked chilled ready meals always preheat the oven first.


### COOKING TEMPERATURES

Fan oven cooking generally requires lower temperatures than conventional cooking. Follow the temperatures recommended in the chart on page 33 until you are familiar with the lower temperatures associated with Fan oven cooking. As a guide reduce temperatures by 20°C - 25°C for your own recipes.

### BATCH BAKING



The fan oven cooks evenly on all shelf levels, especially useful when batch baking.

## HOW TO USE THE FAN OVEN

1. Push out and turn the Selector to Fan oven. 
2. Push out and turn the main oven temperature control to the required setting.

### THINGS TO NOTE

- The oven light will come on when the Selector is set.
- The oven fan will operate continually during cooking.
- The cooling fan for the controls may operate after a time. See page 7 for further details on the operation of the cooling fan.
- The control surrounds will illuminate. The oven indicator neon will turn on and off during cooking to show that the temperature is being maintained.
- If an automatic programme has been set, the oven fan and oven light do not come on until the cook time begins.

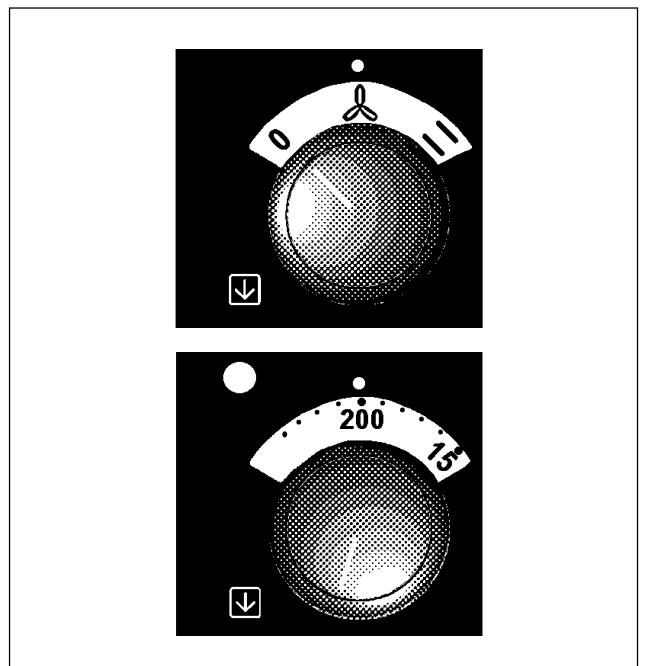
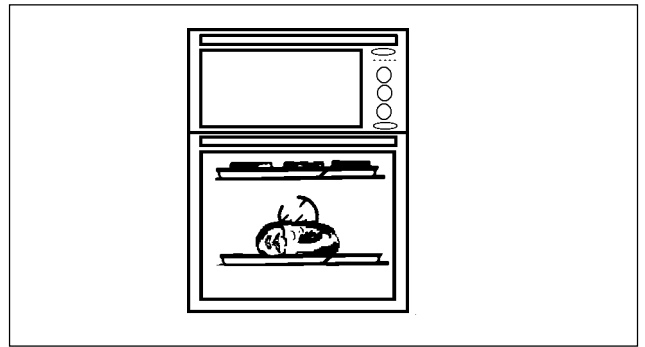


## TO FIT THE MAIN OVEN SHELVES


The shelves should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven. If not fitted correctly the anti-tilt and safety stop mechanism will be affected.

### HINTS AND TIPS


- Arrange the shelves in the required positions before switching the oven on. Shelves are numbered from the bottom upwards.

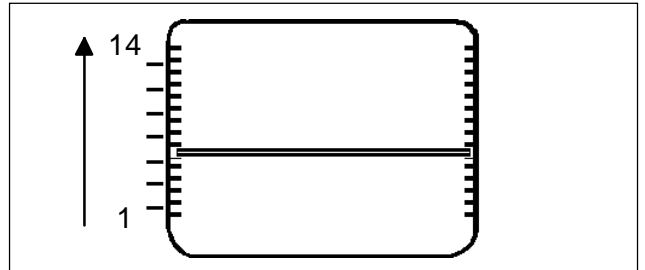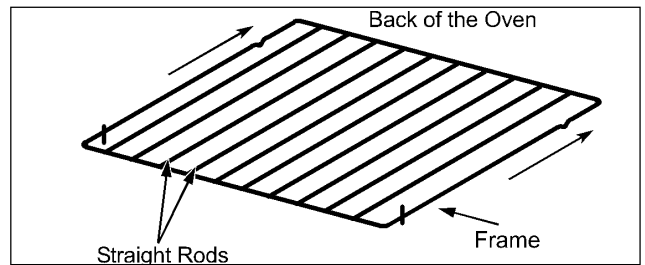

- When cooking more than one dish in the fan oven, place dishes centrally on different shelves rather than cluster several dishes on one shelf, this will allow the heat to circulate freely for the best cooking results.

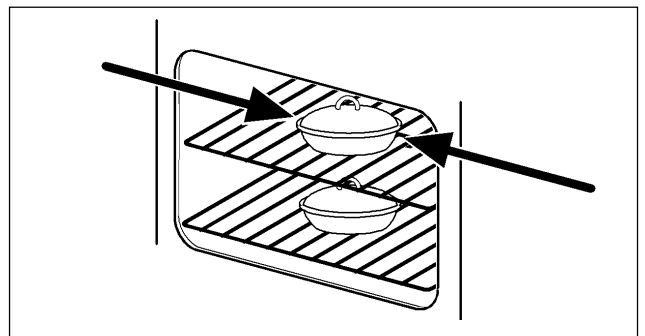

- It is recommended that when baking larger quantities, the shelf positions should be evenly spaced to suit the load being cooked. A slight increase in cooking time may be necessary.

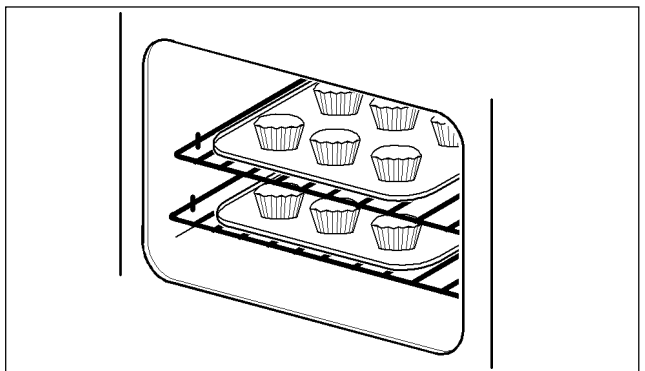


- The use of excessively high temperatures can cause uneven browning. It may be necessary to reduce temperatures slightly. Refer to the recommendations given in the oven cooking chart, on page 33.
- The material and finish of the baking trays and dishes used will affect base browning. Enamelware, dark heavy or non-stick utensils increase base browning, while oven glassware, shiny aluminium or polished steel trays reflect the heat away and give less base browning.

# THE CONVENTIONAL OVEN =

## USES OF THE CONVENTIONAL OVEN

This form of cooking gives you the opportunity to cook without the fan in operation. It is particularly suitable for dishes which require extra base browning such as pies, quiches and flans. Gratin's, lasagne and hotpots which require extra top browning also cook well in the conventional oven. For best results cook on one level.

## HOW TO USE THE CONVENTIONAL OVEN



1. Push out and turn the Selector to Conventional Oven. 
2. Push out and turn the main oven temperature control to the required setting.

### THINGS TO NOTE

- The control surrounds will illuminate.
- The oven indicator neon will turn on and off during cooking to show that the temperature is being maintained.
- The internal oven light operates when the Selector is set. If an automatic cooking programme is set, the oven light will come on when the cook time begins.
- The cooling fan for the controls may operate after a time. It may run on after the controls are switched off until the appliance has cooled. See page 7 for more details on the operation of the cooling fan.






**Do not place dishes, tins or baking trays directly on the oven base as damage will occur.**

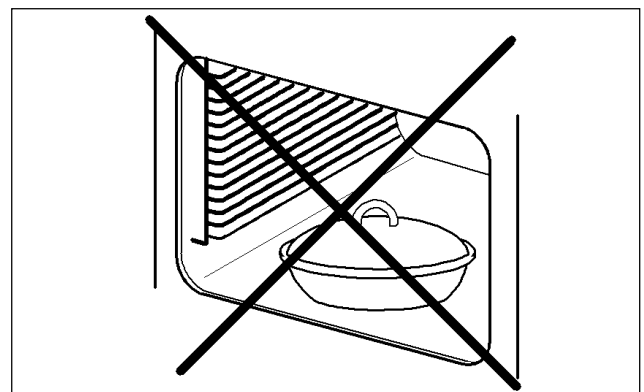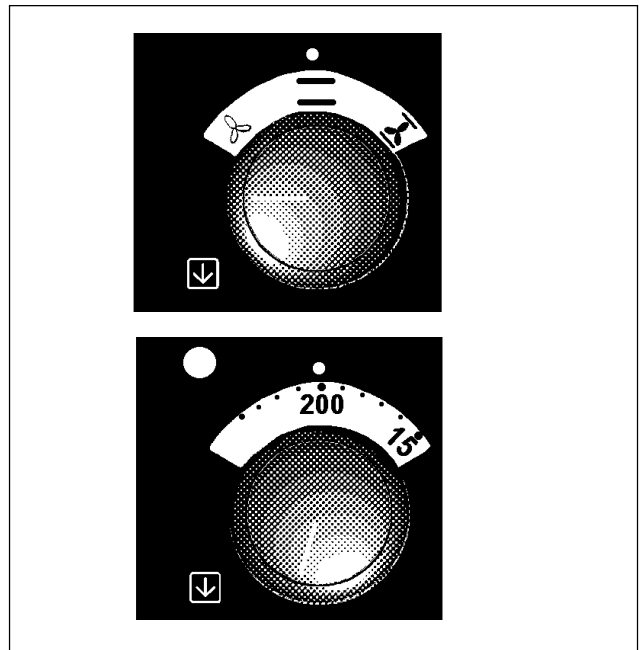



## HINTS AND TIPS

- The middle shelf allows for the best heat distribution. To increase base browning simply lower the shelf position. To increase top browning, raise the shelf position.
- The material and finish of the baking trays and dishes used will affect base browning. Enamelware, dark heavy or non-stick utensils increase base browning, while oven glassware, shiny aluminium or polished steel trays reflect the heat away and give less base browning.
- Always place dishes centrally on the shelf to ensure even browning.
- Stand dishes on suitably sized baking trays to prevent spillage onto the base of the oven and make cleaning easier.
- Single level cooking gives best results. If you want to cook on more than one level use the fan or zoned oven functions.

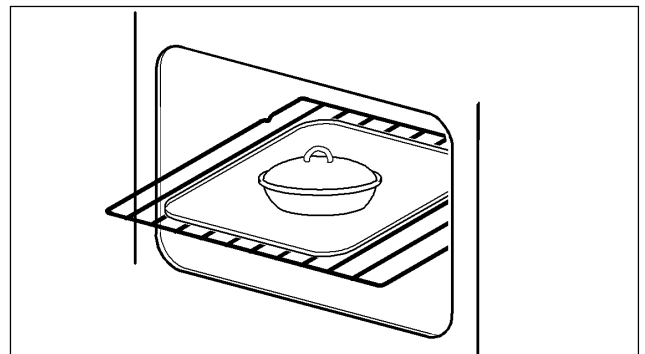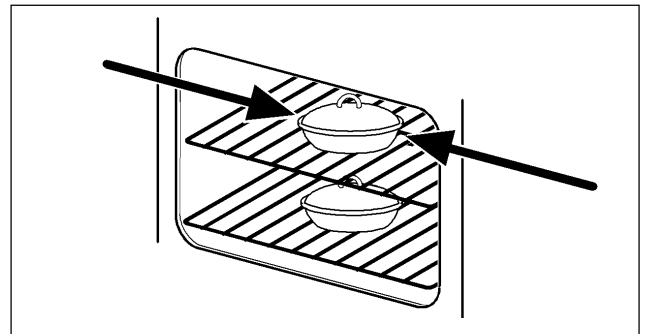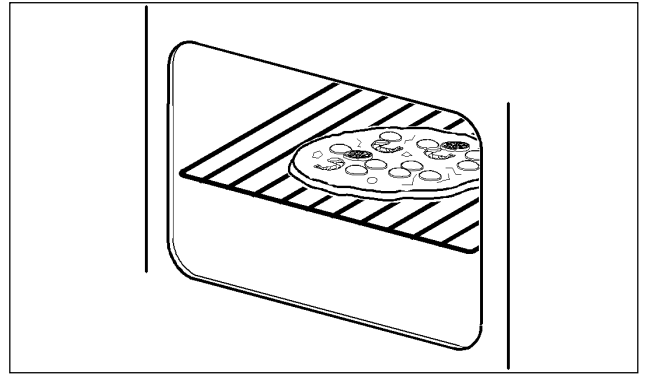



# MAIN OVEN COOKING CHART

The oven temperatures are intended as a guide only. It may be necessary to increase or decrease the temperatures by a further 10°C to suit individual preferences and requirements.

Note: Shelf positions are counted from the bottom of the oven.

FOOD	FAN OVEN		CONVENTIONAL OVEN	
	SHELF POSITION	TEMP (°C)	SHELF POSITION	TEMP (°C)
Biscuits		160 -190	7	150 - 160
Bread		210 -220	4	210 - 220
Bread Rolls / Buns	Shelf	210 -220	4	210 - 220
Cakes: Small & Queen		160 -170	4	170 - 180
Sponges		160 -170	4	160 - 170
Victoria Sandwich	positions	160 -170	4	160 - 170
Madeira		140 - 150	7	160 - 170
Rich Fruit		140 -150	7	130 - 140
Christmas	are not	130 - 140	1	130 - 140
Gingerbread		140 -150	7	140 - 160
Meringues		90 - 100	7	80 - 100
Flapjack	critical	170 - 180	7	170 - 180
Shortbread		140 - 150	7	140 - 150
Baked Custard		140 - 150	7	160 - 170
Casseroles : Beef / Lamb	but ensure	140 - 150	7	140 - 150
Chicken		160 -180	7	150 - 160
Convenience Foods		Refer to	7	Refer to
	that oven	Packaging		Packaging
Fish		150 - 170	7	150 - 160
Fish Pie - potato topped		190 - 200	7	180 - 190
Fruit Pies, Crumbles	shelves are	180 -190	7	190 - 200
Milk Puddings		130 - 140	7	130 - 140
Pasta / Lasagne etc.		180 - 190	7	190 - 200
Pastry : Choux -	evenly			
Eclairs/profiteroles		160 - 170	7	170 - 180
Flaky / Puff pies		210 - 220	7	210 - 220
Shortcrust -	spaced			
Mince pies		170 - 180	7	190 - 200
Meat pies		210 - 220	7	190 - 200
Quiche, Tarts, Flans	when more	180 - 190	7	190 - 200
Roast Meat / Poultry		160 - 180	1	160 - 180
Scones		200 -210	4	210 - 220
Shepherds Pie	than one is	190 - 200	7	190 - 200
Soufflés		170 - 180	7	180 - 190
Vegetables : Baked Jacket Potatoes		190 - 200	7	190 - 200
Roast Potatoes	used	200 - 210	7	200 - 210
Yorkshire Puddings - Large		210 -220	7	220 - 230
- Individual		210 -220	7	220 - 230


# PIZZA FUNCTION

## USES OF PIZZA FUNCTION

This setting can be used for foods such as pizza where base browning and crispness are required.

The top and lower elements operate in conjunction with the oven fan.

## HOW TO USE PIZZA FUNCTION

1. Push out and turn the Selector to Pizza setting. 

2. Push out and turn the main oven temperature control to the required setting.

## THINGS TO NOTE

- The control surrounds will illuminate. The oven indicator neon will turn on and off during cooking to show that the temperature is being maintained.
- The cooling fan for the controls may operate after a time. It may run on after the controls are switched off until the appliance has cooled. See page 7 for further details on the cooling fan.
- If an automatic cooking programme is set, the oven light will come on when the cook time begins.



## HINTS AND TIPS

- Single level cooking using the middle shelf position gives best results.
- Ensure that food is placed centrally on the shelf for maximum air circulation.
- Be guided by the cook times and temperatures given on the packaging.
- Some pizzas should be cooked directly on the oven shelf. To prevent soiling the oven base, place a baking tray in one of the lower shelf positions.



**Do not place dishes, tins or baking trays directly on the oven base as damage will occur.**


- The material and finish of the baking trays and dishes used will affect base browning. Enamelware, dark heavy or non-stick utensils increase base browning, while oven glassware, shiny aluminium or polished steel trays reflect the heat away and give less base browning.

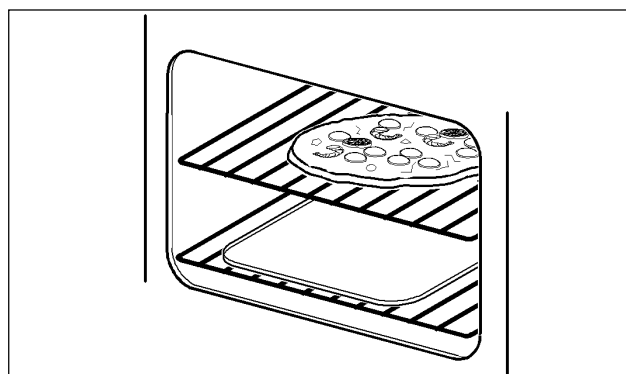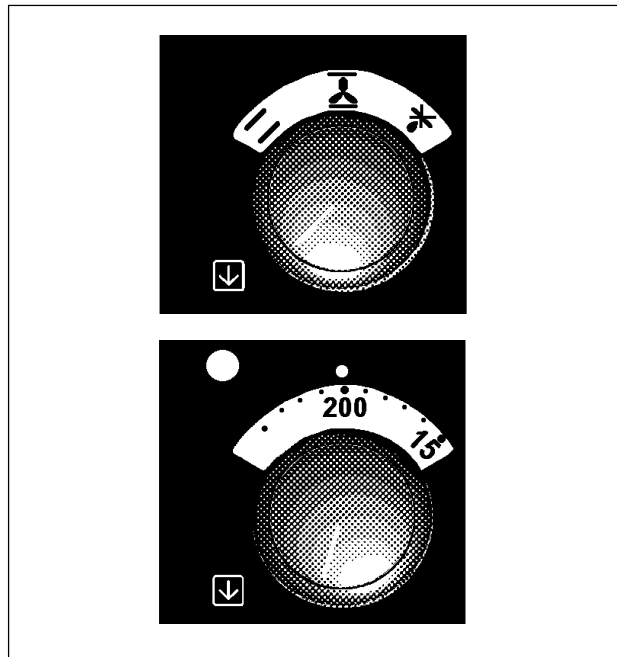

# DEFROSTING IN THE MAIN OVEN ❄️

## USES OF DEFROST FEATURE

This main oven function enables you to defrost most foods without heat faster than some conventional methods as the oven fan circulates air around the food. It is particularly suitable for delicate frozen foods which are to be served cold e.g. cream filled gateaux, cakes covered with icings or frostings, cheesecakes, biscuits, scones etc.

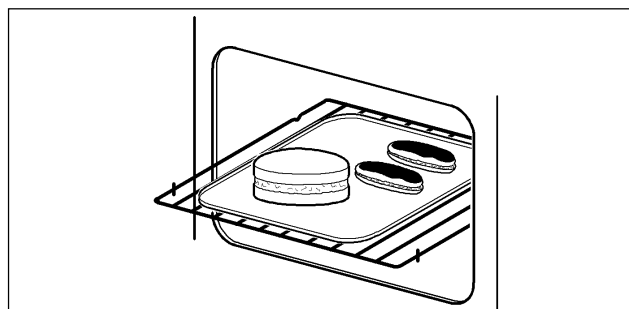


## HOW TO DEFROST

1. Push out and turn the Selector to Defrost setting. ❄️
2. The Main Oven temperature control should be at the Off '0' position.



## THINGS TO NOTE

- The oven fan and internal oven light will operate.
- The Selector control surround will illuminate.
- The oven indicator neon may illuminate and turn on and off during defrosting.

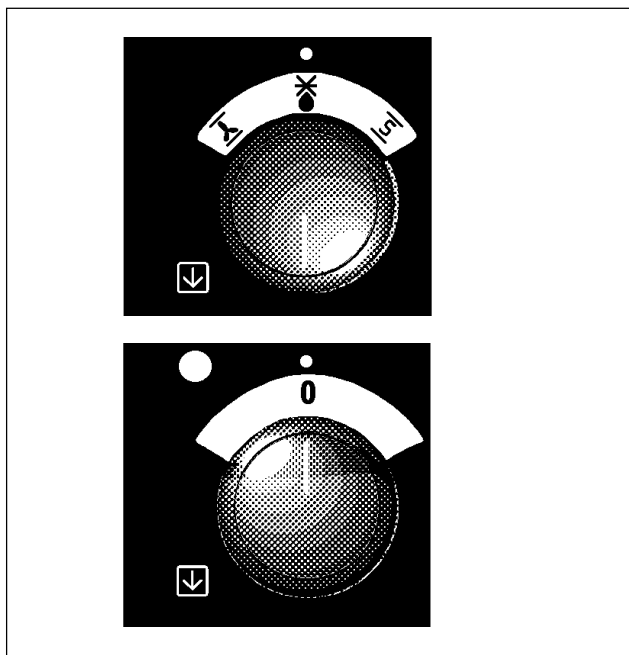


## **i** HINTS AND TIPS

- Place the frozen food in a single layer where possible and turn it over half way through the defrosting process.
- The actual speed of defrosting is influenced by room temperature. On warm days defrosting will be faster than on cooler days.
- It is preferable to thaw fish, meat and poultry slowly in the fridge. However, this process can be accelerated by using the defrost function. Small or thin fish fillets, frozen peeled prawns, cubed or minced meat, liver, thin chops, steaks etc., can be thawed in 1 - 2 hours.

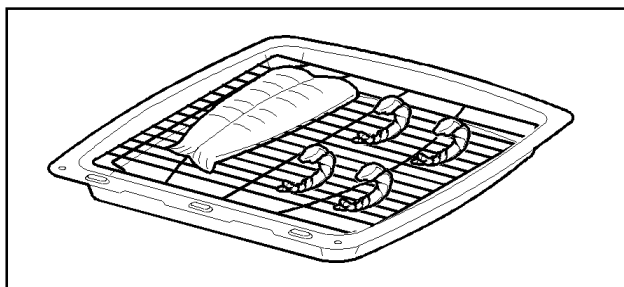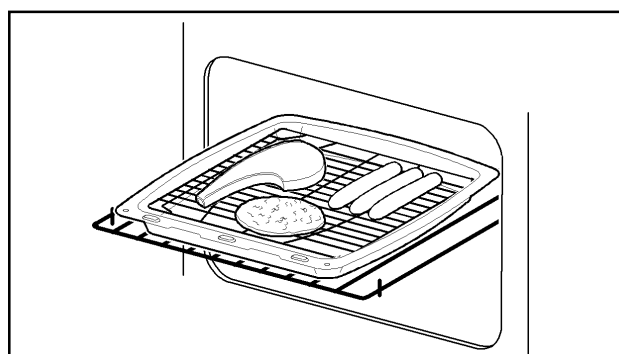

- A 1kg/2¼lb oven ready chicken will be thawed in approximately 5 hours. Remove the giblets as soon as possible during the thawing process.
- Joints of meat up to 2kg/4½lb in weight can be thawed using the defrost function.
- All joints of meat and poultry must be thawed thoroughly before cooking.
- Always cook thoroughly immediately after thawing.
- **DO NOT** leave food at room temperature once it is defrosted. Cook raw food immediately or store cooked food in the fridge, once it has cooled.
- Care must always be taken when handling foods in the home. Always follow the basic rules of food hygiene to prevent bacterial growth and cross contamination when defrosting, preparing, cooking cooling and freezing foods.

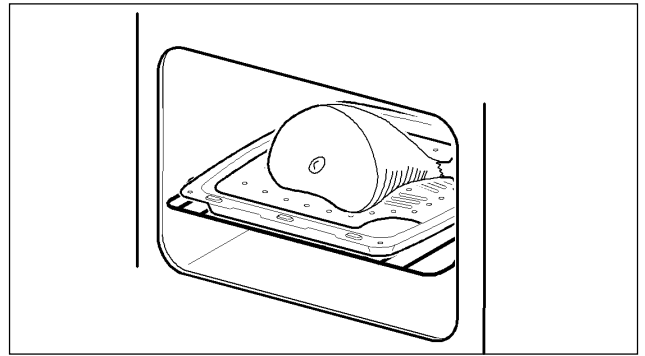

# SPEEDCOOK FUNCTION


## USES OF SPEEDCOOK

Speedcook is ideal for quick preheating of the oven before selecting an alternative cooking function. It can also be used for cooking chilled and frozen convenience foods without the need for preheating.

## COOKING TIMES

Cooking times for convenience foods should be the same or slightly quicker than those stated on the packaging. This may vary depending on the dish and the quantity being cooked.

## HOW TO USE SPEEDCOOK


1. Push out and turn the Selector to Speedcook. 
2. Push out and turn the main oven temperature control to the required setting.
3. If using Speedcook to preheat the oven only, when the indicator neon turns off, turn the selector to the required function.

## THINGS TO NOTE



**Do not place dishes, tins or baking trays directly on the oven base as damage will occur.**

- The control surrounds will illuminate.
- The oven indicator neon will turn on and off during cooking to show that the temperature is being maintained.
- The internal oven light operates when the Selector is set. If an automatic cooking programme is set, the oven light will come on when the cook time begins.
- The cooling fan for the controls may operate after a time. It may run on after the controls are switched off until the appliance has cooled. See page 7 for more details on the operation of the cooling fan.

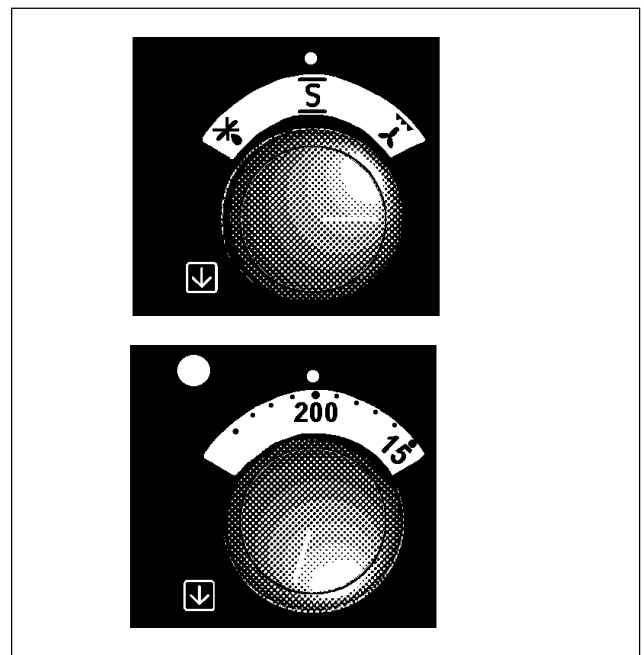



## HINTS AND TIPS

- Single level cooking using the middle shelf gives best results.
  
- Frozen and cook chilled foods can be cooked using Speedcook without the need for preheating.
  
- Use Speedcook for all types of frozen / cook chilled convenience foods to given even browning and crispness where crispness is required.
  
- The material and finish of the baking trays and dishes used will affect base browning. Enamelware, dark heavy or non-stick utensils increase base browning, while oven glassware, shiny aluminium or polished steel trays reflect the heat away and give less base browning.
  
- Always place dishes centrally on the shelf to ensure even browning.
  
- Stand dishes on suitably sized baking trays to prevent spillage onto the base of the oven and make cleaning easier.

# THERMAL GRILLING IN THE MAIN OVEN

## USES OF THERMAL GRILLING

Thermal grilling in the main oven offers an alternative method of cooking food items normally associated with conventional grilling.

Thermal grilling helps to minimise cooking smells in the kitchen and allows you to grill with the oven door closed. The need to check and turn food is reduced. With the exception of toast and rare steaks you can thermal grill all the foods you would normally cook under a conventional grill.

## COOKING TIMES


Cooking is more gentle, therefore food generally takes a little longer to cook when thermal grilling compared with conventional grilling. One of the advantages is that larger quantities can be cooked at the same time.




A general guide to cooking times is given on page 41 but these times may vary slightly depending on the thickness and quantity of food being cooked.

## HOW TO THERMAL GRILL



**Always thermal grill with the oven door closed and with the grill pan handle removed.**

1. Push out and turn the Selector to Thermal Grill. 
2. Push out and turn the main oven temperature control to the required setting. (A temperature of between 140°C and 220°C is suitable for thermal grilling).
3. Remove the handle from the grill pan and close the oven door.

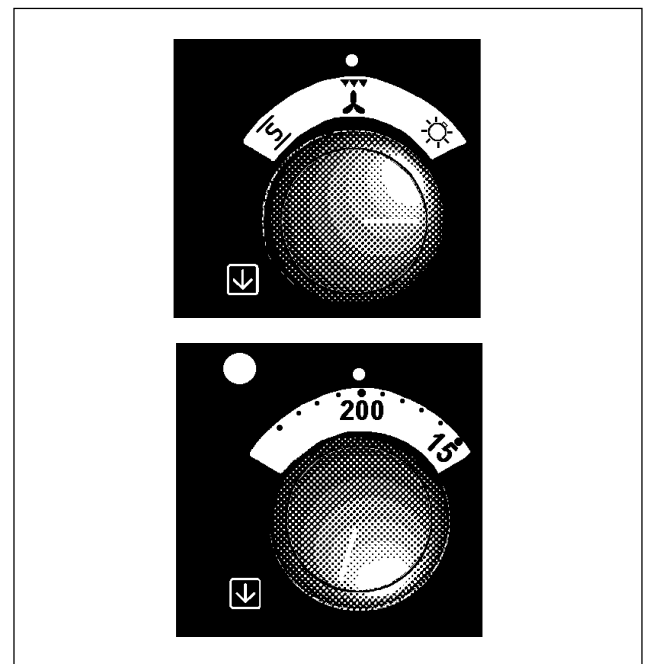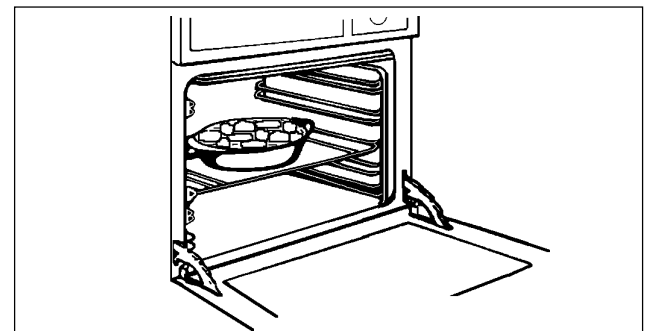
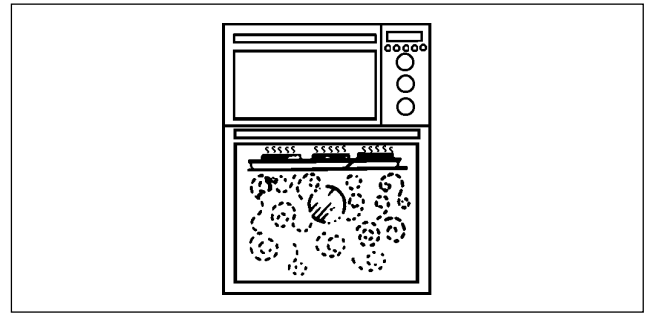


## THINGS TO NOTE

- The control surrounds will illuminate.  
The oven indicator neon will illuminate. It may turn on and off during cooking to ensure the temperature is maintained.
- The oven fan will operate continually during thermal grilling.
- The oven light will come on when the selector is set.
- The cooling fan for the controls may operate after a time. It may run on after the controls are switched off until the appliance has cooled. See page 7 for more details on the operation of the cooling fan.

## **i** HINTS AND TIPS

- Prepare foods in the same way as for conventional grilling. Brush lean meats and fish lightly with a little oil or butter to keep them moist during cooking.
- Most food should be placed on the grill pan grid in the 'high' position in the grill pan to allow maximum circulation of air around the food.
- Accompaniments such as tomatoes and mushrooms may be placed below the grid when grilling meats, or in a separate dish on a lower shelf.

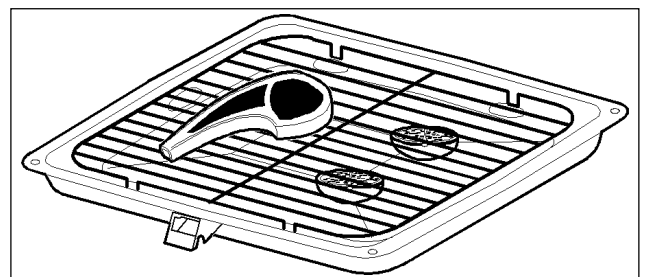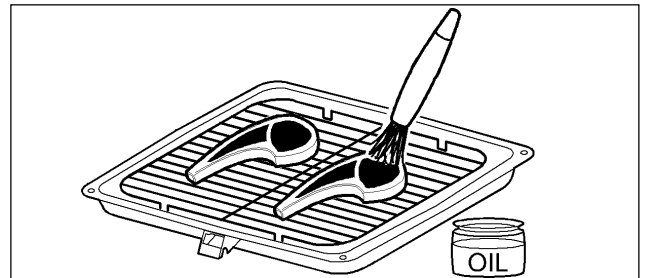



- Foods will cook more quickly the closer they are to the grill element and the higher the temperatures selected. Be prepared to adjust temperatures and shelf positions during cooking if necessary.
- Turn food over during cooking as necessary.
- Ensure that ready prepared or cooked chilled dishes e.g. shepherds pie, moussaka, lasagne, etc., are piping hot throughout before serving.
- A temperature range of 140°-220°C and shelf positions 9 and 10 are suitable for most foods. Be prepared to make suitable adjustments during cooking to suit individual requirements. If thermal grilling on more than one level, it may be necessary to interchange the food on the shelves during cooking.

## THERMAL GRILLING CHART

FOOD	SHELF	TEMP (°C)	TIME (MINS IN TOTAL)
Bacon Rashers	9	200	10 - 12
Beefburgers	9	190	10 -15
Chicken Joints	8	160	30 - 40
Chops - Lamb	9	170	20 - 30
- Pork	9	170	20 - 30
Fish - Whole Trout / Mackerel	9	170	10 - 20
Fillets - Plaice / Cod	10	170	10 - 20
Kebabs	10	170	20 - 30
Kidneys - Lamb / Pig	9	180	20 - 30
Liver - Lamb / Pig	9	190	10 - 15
Sausages	9	190	10 - 15
Steaks - Medium	10	220	8 -10 each side
- Well Done	10	220	10 -15 each side
Heating through and browning eg. au gratin, lasagne, Shepherds pie	9	170	20 (depends on size)

# CARE AND CLEANING

---



Before cleaning the appliance always allow the cooling fan for the controls to cool the appliance down before switching off the electricity supply.

---

## CLEANING MATERIALS

Before using any cleaning materials on your appliance, check that they are suitable and that their use is recommended by the manufacturer.

Cleaners that contain bleach should NOT be used as they may dull the surface finishes. Harsh abrasives should also be avoided.

## CLEANING THE OUTSIDE OF THE APPLIANCE

**DO NOT** use abrasive cleaning materials or scourers on the outside of the appliance as some of the finishes are painted and damage may occur. Regularly wipe over the control panel, oven doors and handles using a soft cloth well wrung out in warm water to which a little washing up liquid has been added.

Any spillage on the stainless steel finish must be wiped off immediately.

**Stainless Steel cream cleaners are abrasive and should be avoided as they may dull the surface finish.**

To prevent streaking on stainless steel models finish with a soft cloth.

---



**Do not attempt to remove any of the control knobs from the panel as this may cause damage and is a safety hazard.**

---

## CLEANING THE OUTER AND INNER DOOR GLASS PANELS




---



To prevent damaging or weakening the door glass panels avoid the use of the following:

- Household detergents and bleaches
  - Impregnated pads unsuitable for non-stick saucepans
  - Brillo/Ajax pads or steel wool pads
  - Chemical oven pads or aerosols
  - Rust removers
  - Bath/Sink stain removers
- 

The outer oven door glass panels are removable for cleaning.

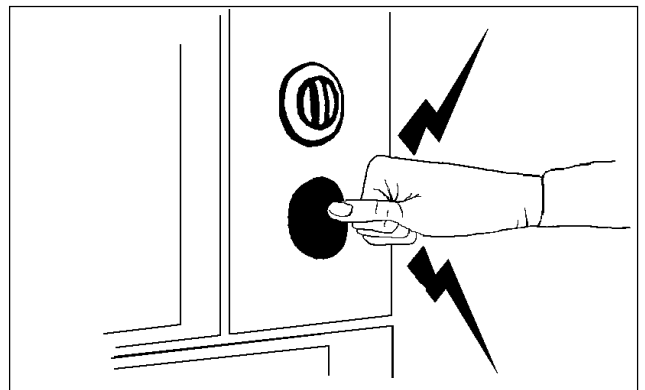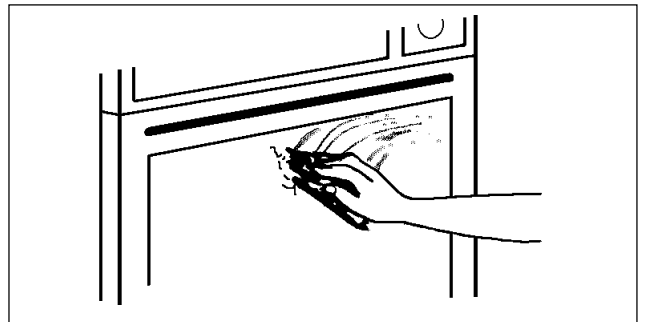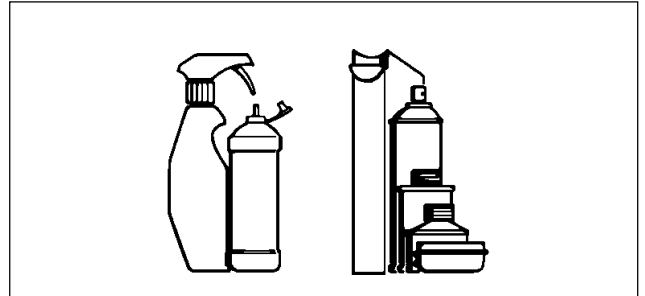

## TO REMOVE THE OUTER GLASS

1. Open the oven door slightly to gain access to the two cross head screws on the top of the oven door.
2. Loosen the two screws using a Pozidrive screwdriver.
3. Holding the door glass securely in place with one hand remove the screws and washers with the other hand.

The screws and washers retain the trim on the top of the grill door. Note the position of the trim on the door.

4. Holding the door and glass with one hand, pull towards you and slightly lift the door glass with the other hand to disengage the panel from the location point at the bottom of the door. Gently release the door to close it.


5. Clean the outer and inner glass using hot soapy water or Hob Brite. Should the inner face of the outer door glass be heavily soiled it is recommended that soapy water with a high concentration of soap is used. To prevent streaking a glass cleaning spray may be applied and the glass polished with a soft cloth. Ensure that all parts are well rinsed and thoroughly dry before attempting to replace the outer door glass.

6. **DO NOT** use abrasive cleaning materials or scourers on the outside of the appliance as damage will occur.

Any spillage on the stainless steel finish must be wiped off immediately.

**Stainless Steel cream cleaners are abrasive and should be avoided as they may dull the surface finish.**


To prevent streaking on stainless steel models finish with a soft cloth.

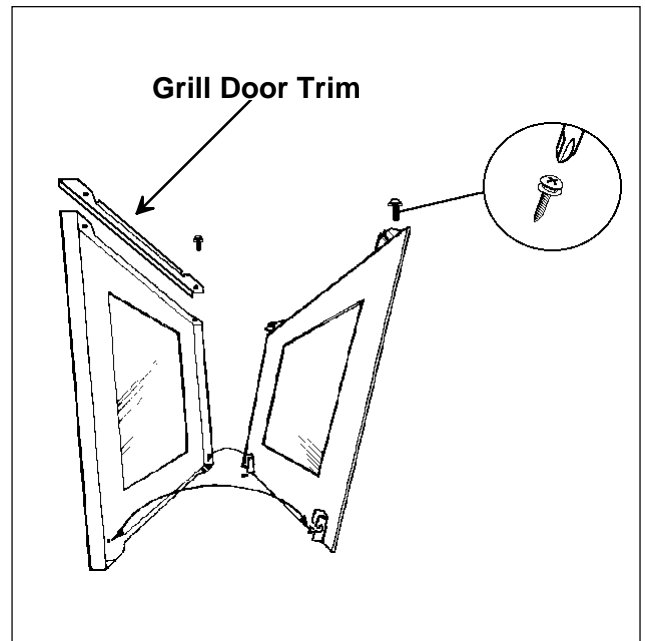

**If the door glass panel becomes chipped or has deep scratches the glass will be weakened and must be replaced to prevent the possibility of the panel shattering. Please contact your local Service Force Centre who will be pleased to advise further.**

## TO REPLACE THE OUTER DOOR GLASS

1. Holding the door glass panel with both hands, gently place the locators into the holes of the brackets at the bottom of the oven door.
2. Holding the door glass with your left hand, use your right hand to open the oven door. Bring the door gently towards the glass panel ensuring the screw location holes line up.
3. Place the trim in the correct position on the top of the grill door.
4. Hold the glass in place with one hand and insert the cross head screws with washers into the location holes with the other hand. Give the screws one turn to ensure the glass is secure.
5. Tighten the screws positively with a Pozidrive screwdriver before closing the oven door.

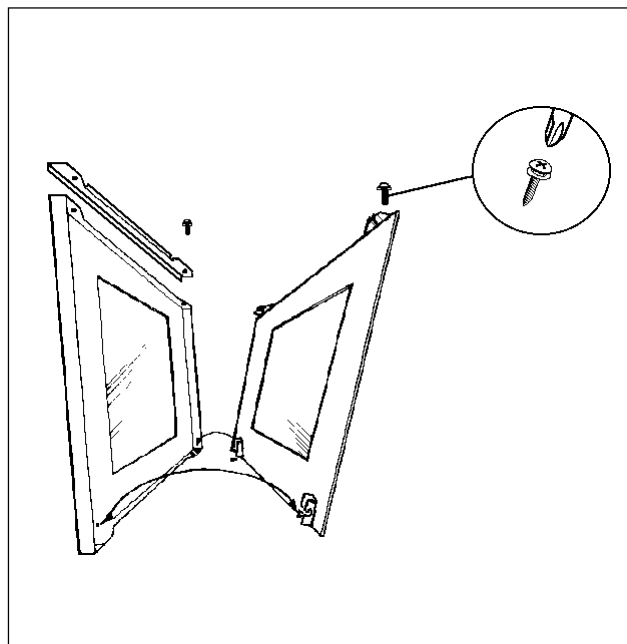

 **DO NOT attempt to use the oven without the glass being in place.**

## TO CLEAN THE INNER GLASS DOOR

The inner glass door is not removable. Clean using hot soapy water or Hob Brite and a soft cloth. **DO NOT** use abrasives as they may damage the glass or seal.

## CLEANING THE GRILL/ OVEN COMPARTMENTS

The oven tops, sides and back panels are coated with a Stayclean finish.

The Stayclean areas in the ovens should not be cleaned manually. See Care of Stayclean Surfaces on page 45.

The oven bases can be cleaned using normal oven cleaners or aerosol oven cleaners with care. Ensure that the manufacturers instructions are followed and that all parts are well rinsed afterwards.

**Do not** use any cleaning agents or scrapers on the oven tops, sides, back panels and door seals.


**Damage will occur if soap impregnated steel wool pads, aerosol cleaners or any abrasive cleaners are used.**

## CARE OF STAYCLEAN SURFACES

The roofs and sides of both ovens and the main oven back panel are coated with a Stayclean finish. They should not be cleaned manually.


**Aerosol cleaners must not be used on Stayclean surfaces and must not come into contact with elements or the door seal, as this may cause damage.**

During normal use the Stayclean coating will become splashed with fats and food residues. By running the oven without food, the Stayclean surfaces burn off any soilage. Regular use of the oven cleaning cycle will help to keep the panels in good condition. See below.

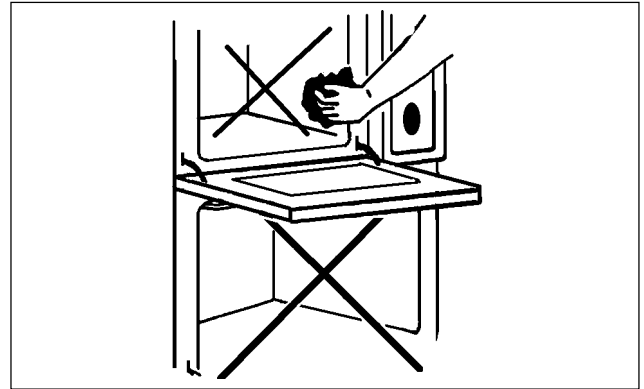



## THE OVEN CLEANING CYCLE - TOP OVEN

1. Remove oven shelves and bakeware from oven.
2. Push out the Fan Selector button.
3. Push out and turn the top oven temperature control to 220°C and allow the oven to run for an hour or so.

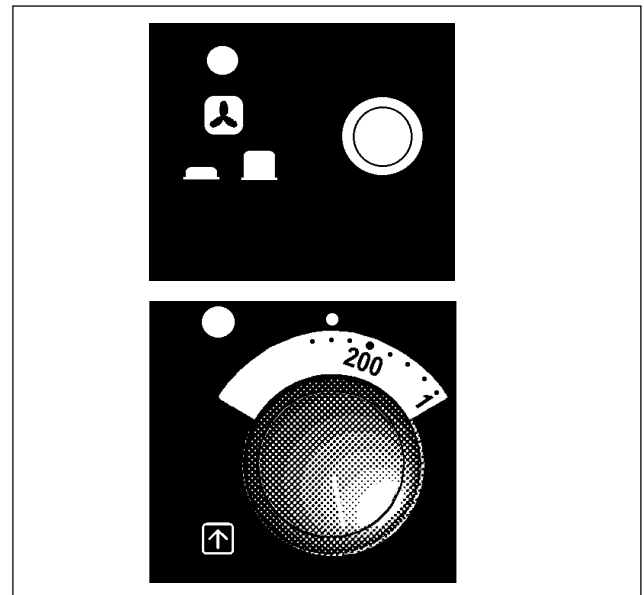

## THE OVEN CLEANING CYCLE - MAIN OVEN

 1. Remove oven shelves and bakeware from oven.
2. Push out and turn the Selector to Fan function (  )
3. Push out and turn the main oven temperature control to 220°C and allow the oven to run for an hour or so.

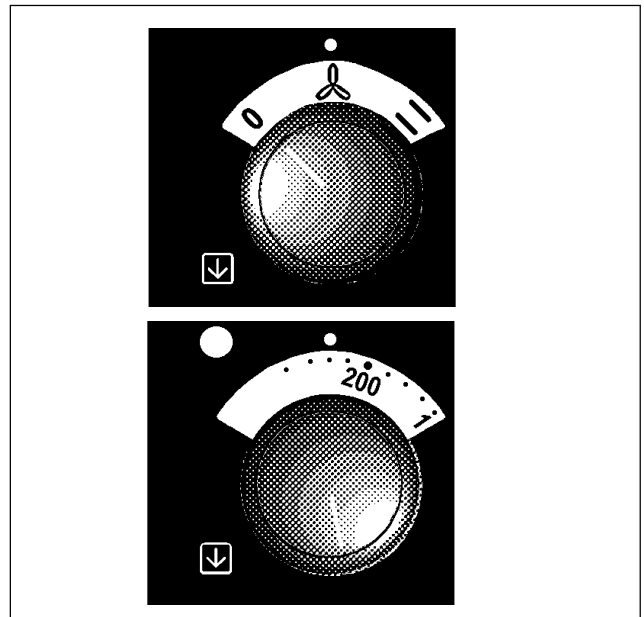

## THINGS TO NOTE



- The Fan Selector neon for the top oven will illuminate.
- The control knob surround will illuminate. The oven indicator neon will turn on and off during use.
- The Cooling Fan for the controls will operate after a short time. It may run on after the controls are switched off until the appliance has cooled. See page 7 for more details on the operation of the cooling fan.

## **i** HINTS AND TIPS

- Slight discolouration and polishing of the Stayclean surfaces may occur in time, but this will not affect their self cleaning properties.
- A good time to use the oven cleaning cycle is after the weekly roast.  
If you do a lot of roasting and very little baking you should follow the cleaning cycle every week. If you roast very little you will only need to follow the cleaning cycle every 2 - 3 weeks.
- Follow the recommendations below to keep soilage to a minimum.

## **COOKING TO REDUCE SOILAGE**

- Cook at the recommended temperatures. Higher temperatures during roasting will increase soilage. Try cooking at lower temperatures for an increased length of time, you will save energy and often the joint is more tender.
- Use minimal, if any, extra oil or fat when roasting meat, potatoes only require brushing with fat before cooking. Extra fat in the oven during roasting will increase splashing and soilage.
- It is not necessary to add water to a meat tin when roasting. The water and the fat juices from the joint create excessive splattering during cooking, even at normal temperatures, as well as causing condensation.
- Covering joints during cooking will also prevent splashing onto the interior surfaces. Removing the covering for the last 20-30 minutes will allow extra browning if required. Some large joints and turkeys especially benefit by this method of cooking, allowing the joint to cook through before the outside is overbrowned.

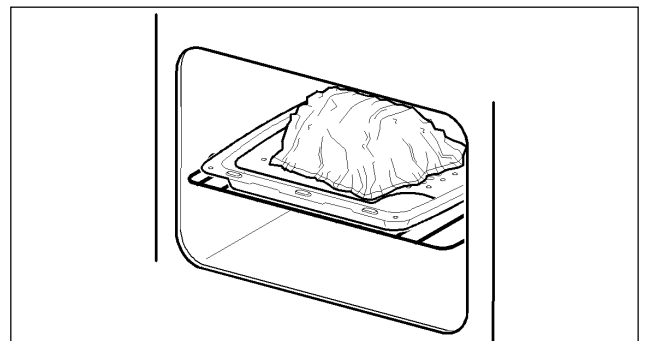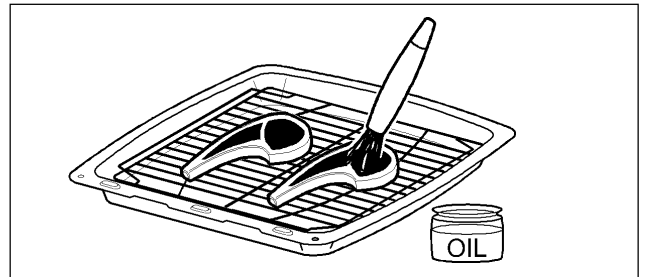

## CLEANING THE TOP OVEN ROOF

The grill element is hinged to make cleaning the oven roof easier.




**Switch off the appliance from the electricity supply before cleaning and ensure the oven is cold.**

1. Remove the wirework side runners. See below.
2. Undo the two screws which hold the grill element in place.
3. Gently pull the element downwards to allow access to the oven roof. **Do not** force the element downwards.
4. Clean the top of the oven with Cif cream cleaner and a sponge scourer. If heavily soiled, aerosol oven cleaners may be used following the instructions given above for cleaning the grill / top oven compartment.
5. Gently push the grill element back into place.
6. Fit the screws to hold the element in place and tighten firmly.
7. Replace the wirework side runners.




**Ensure the screws are firmly in place after cleaning.**

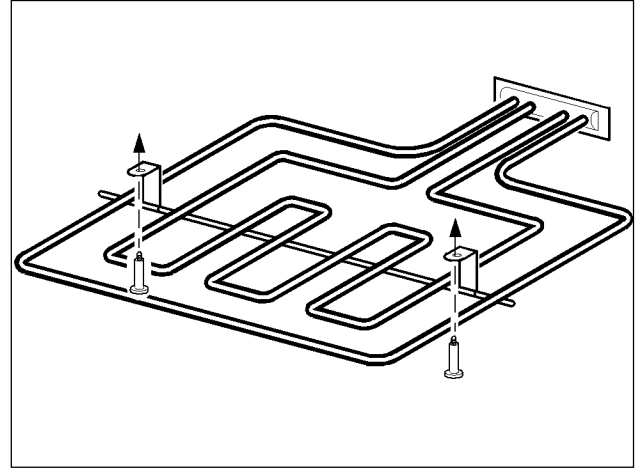

## TO REMOVE THE WIREWORK RUNNERS

The wirework runners in both ovens can be removed for cleaning.

1. Remove all shelves and furniture from the oven.
2. Hold the wirework at the bottom, unclip from the cavity side and gently pull towards the centre of the oven.
3. Support the side panel at the bottom.
4. Unhook the runner and side panel at the top and remove them from the cavity.
5. To replace, ensure the side panel is assembled onto the wirework runner before hooking it back into the oven.

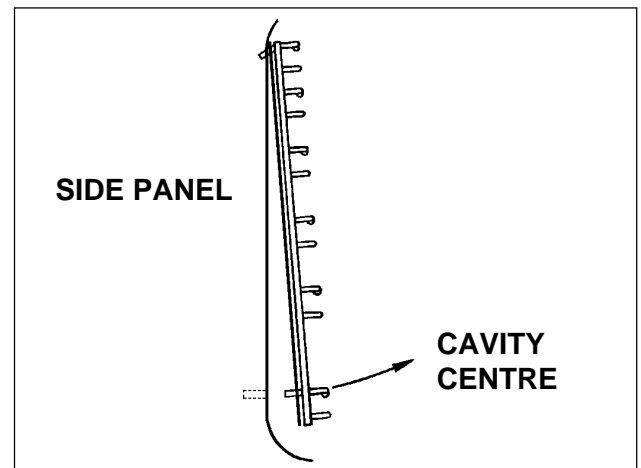


## CLEANING THE SHELVES, WIREWORK RUNNERS AND OVEN FURNITURE

Soak the oven shelves, wirework runners and grilling grid in hot soapy water if heavily soiled, they will then clean more easily. If the shelves are heavily soiled a soap impregnated steel wool pad can be used.

The grill pan and meat tin can be cleaned using a soap impregnated steel wool pad.

All items of grill and oven furniture are dishwasher safe with the exception of the grill pan handle.

# THE OVEN LIGHTS

The oven light illuminates the main oven when the Selector is turned to  .

The top oven light illuminates when the oven temperature control is turned.


## REPLACING AN OVEN LIGHT BULB



**Isolate the appliance from the electricity supply before replacing the bulb.**

The type of bulb required is a 300°C, 25 watt small Edison Screw.

1. Make sure the appliance is cool before you replace a bulb.
2. Open the oven door and remove the shelves wirework runners and side panels. Instructions on how to remove the wirework runners are given on page 47.
3. Pull the glass bulb cover towards you and then pull it off. If necessary use a screwdriver to carefully lever off the cover, taking care not to damage the oven cavity.
4. Unscrew the bulb by turning it to the left.
5. Fit a new bulb and then replace the glass bulb cover.
6. Refit the wirework runners, side panels and replace the oven shelves.
7. Restore the appliance to the electricity supply and reset the time of day.

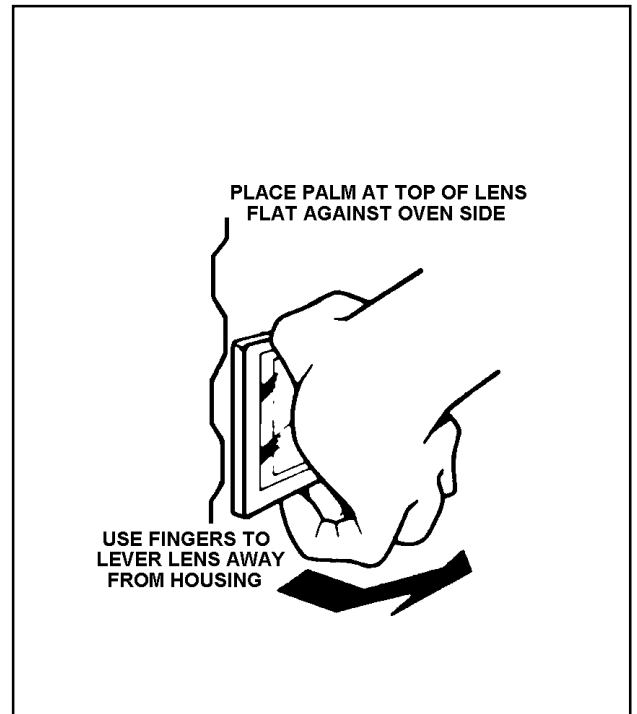



# SOMETHING NOT WORKING

Please carry out the following checks on your appliance before calling a Service Engineer. It may be that the problem is a simple one which you can solve yourself without the expense of a service call.

If our Service Engineer finds that the problem is listed below you will be charged for the call whether or not the appliance is under guarantee.

<b>PROBLEM</b>	<b>POSSIBLE SOLUTION</b>
<b>The grill, ovens and timer do not work</b>	<p>Check that the appliance has been wired in to the appliance supply and is switched on at the wall.</p> <p>Check that the main cooker fuse is working.</p>
<b>The Grill and Top Oven work but the Main Oven does not.</b>	<p>Check that the timer is set for manual operation. See page 11.</p>
<b>The Grill does not work or cuts out after being used for a long period of time.</b>	<p>Check that only the Grill control has been turned. If the Top Oven control has been turned it will override the grill.</p> <p>Ensure that the grill door is open when grilling. Leave the grill door open and allow the grill to cool. After a couple of hours check that the grill works as normal.</p> <p>Ensure the cooling fan is running when the grill is on. If the cooling fan fails, the grill will cycle on and off. Contact your local Service Force Centre.</p>
<b>The timer does not work</b>	<p>Check that the instructions for the operation of the timer are being closely followed.</p>
<b>The indicator neons are not working correctly</b>	<p>Check that you have selected only the function you require. Ensure all other controls are in the Off 'O' position.</p>
<b>The oven is not cooking evenly</b>	<p>Check that the appliance is correctly installed and is level.</p> <p>Check that the recommended temperatures and shelf positions are being used.</p>

**The oven light fails to illuminate**

The oven light bulb may need replacing see page 48.

If the Main Oven is set for automatic cooking the light will illuminate when the cook time begins.

**The oven fan is noisy**

Check that the oven is level.

Check that shelves and bakeware are not vibrating in contact with the oven back panel.

**The oven temperature is too high or low**

Check that the recommended temperatures and shelf positions are being used. See pages 23 and 33. Be prepared to adjust the temperature up or down by 10°C to achieve the results you want.

# SERVICE AND SPARE PARTS

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:-

**0870 5 929929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk)

Before calling out an engineer, please ensure you have read the details under the heading 'Something Not Working'.

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the fault
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date

**Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.**

## CUSTOMER CARE DEPARTMENT

For general enquiries concerning your AEG appliance or for further information on AEG products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.aeg.co.uk](http://www.aeg.co.uk)

Customer Care Department  
AEG Domestic Appliances  
55 - 77 High Street  
Slough  
Berkshire  
SL1 1DZ

Tel: 0870 5 350350 (\*)

\*calls to this number may be recorded for training purposes.

# GUARANTEE CONDITIONS

## Standard guarantee conditions

AEG offer the following guarantee to the first purchaser of this appliance:

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.  
The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty material. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.  
This guarantee does not cover such parts as light bulbs, removable glassware, or plastic.
3. Should guarantee repairs be necessary the purchaser must inform your local Service Force Centre (AEG's service or authorised agent). AEG reserves the right to stipulate the place of repair (i.e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The Purchaser's statutory rights are not affected by this guarantee.

## European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products
- This guarantee relates to you and cannot be transferred to another user
- Your new home is within the European Community (EC) or European Free Trade Area
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household
- The product is installed taking into account regulations in your new country

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Force Centre is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800117511
Sweden	Stockholm	+46 (0) 8 672 53 60
UK	Slough	+44 (0) 1753 219899

# INSTALLATION INSTRUCTIONS

## TECHNICAL DETAILS

Voltage: 230 - 240 Volts AC 50Hz

### Loading Info:

Top Oven*	1.7kW
Dual Grill:	2.8kW
Single Grill	1.4kW
Main Oven Fan Element:	2.5kW
Fan Motor:	0.03kW
Oven Light:	0.05kW
Wattage:	5.0 - 5.5kW
Height:	720 mm
Width:	593 mm
Depth: (excluding handles and knobs)	585 mm

\* Cannot be used at the same time as the grill element.



This appliance complies with: European Council Directive 73/23/EEC.  
EMC Directive 89/336/EEC.  
CE Marking Directive 93/68/EEC.

Equipment according to IEC61000-3-4 provided  $R_{\text{sec min}}=33$  as verified by the supply authority.

# INSTALLATION INSTRUCTIONS

## THINGS YOU NEED TO KNOW





### WARNINGS:

### WARNINGS:

- This appliance must be installed by a qualified electrician/competent person. Safety may be impaired if installation is not carried out in accordance with these instructions.
- This appliance must be earthed.
- **Do not** remove the screws from the earth tab extending from the oven mains terminal block (Fig. 1).
- Before connecting the appliance make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This is situated on the lower front frame of the oven and can be seen upon opening the top cavity door. Alternatively the rating plate may also be found on the back or top of some models (where applicable).
- **Do not** alter the electrical circuitry of this appliance.

## CHOICE OF ELECTRICAL CONNECTION

- The appliance should be operated using at least 6mm<sup>2</sup> twin core and earth PVC insulated multicore cable. Please choose from the most appropriate after reading the descriptions:
- By connecting the appliance to a cooker point having a double pole isolating switch providing at least 3mm contact separation in all poles and protected with a fuse or miniature circuit breaker at your mains fuse box.
- If you wish to connect an oven and a hob to a cooker point you can, by connecting the oven and hob separately to the cooker point. See Fig. 2.

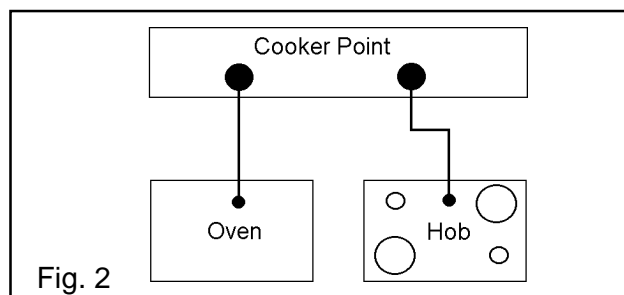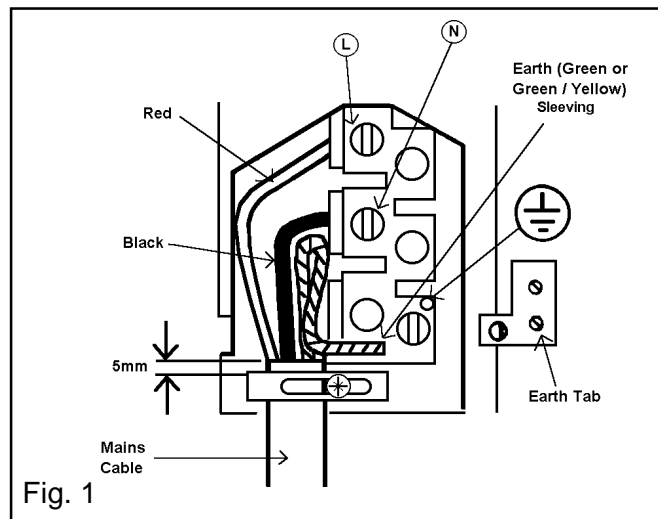

# INSTALLATION INSTRUCTIONS

**NOTE:** It is good practice to:

- Fit an Earth Leakage Circuit Breaker to your house wiring.
- Wire your appliance to the latest IEE regulations.

## THINGS TO NOTE

- This appliance is designed to be fitted between cabinets with the recommended dimensions as shown in Fig. 3 & 4.
- If there is an existing housing unit it must be removed.
- The dimensions given provide adequate air circulation around the unit within the cabinet, ensuring compliance with BS EN60-335.
- This appliance must not be installed on a wooden base board.
- Enquiries regarding the installation of the cooker point if required should be made to your Regional Electricity Company to ensure compliance with their regulations.
- The cooker point should be within 2m of the appliance to make it accessible to switch off the appliance in case of an emergency.
- To protect the hands wear gloves when lifting the oven into its housing.

## NOTE: HOUSE CIRCUIT

Earth leakage / continuity tests must be carried out before the appliance is connected to the mains supply and re-checked after fitting.

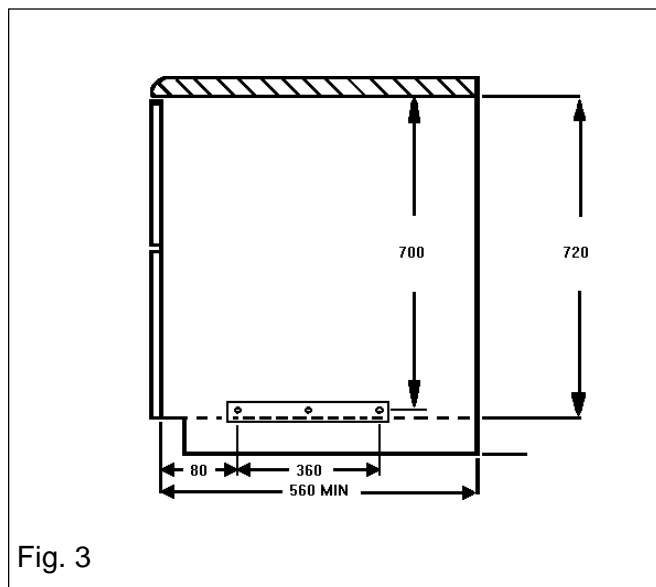


Fig. 3

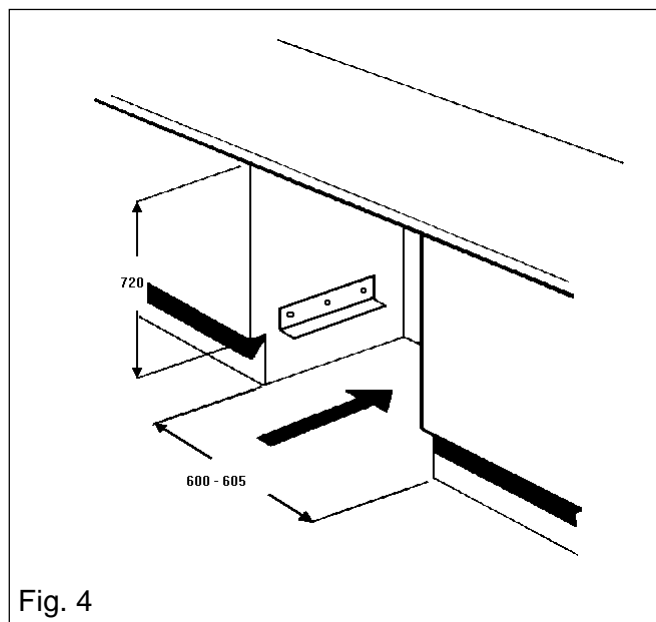


Fig. 4

# INSTALLATION INSTRUCTIONS

## PREPARING CABINET FOR FITTING OVEN

- Make sure the space between the cabinets is the correct size for the appliance to be fitted (Ref. Fig. 5 & 6).

- The plinth board spanning the space into which the appliance is to be installed should be removed.

- If the size between adjacent cabinets is 605-610\*mm, then the cabinets should be modified so that the recommended dimension of at least 600-605mm is maintained.

- The adjacent cabinets must be stable and firmly secured to the wall or floor. If necessary, make arrangements to ensure the work surface below which the oven will rest is level.

- Drill two pilot screw holes into the sides of the adjacent cabinets, in the positions indicated by Fig. 5.

- Fit the appliance mounting brackets using the two holes indicated in Fig. 7 to the adjacent cabinets ( Ref. Fig.5 & 6 )

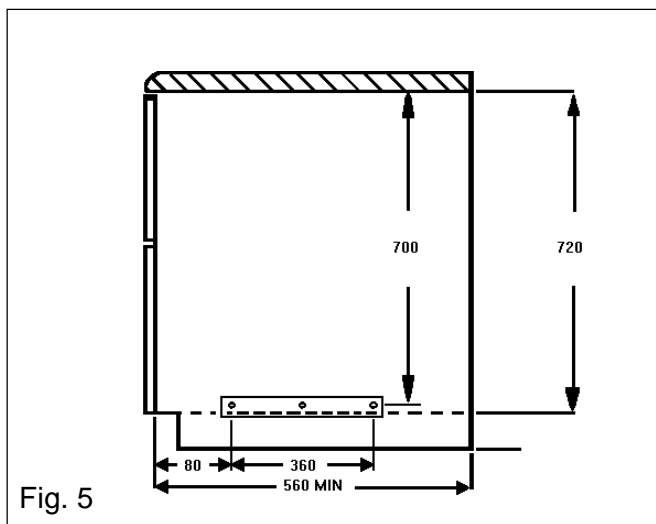


Fig. 5

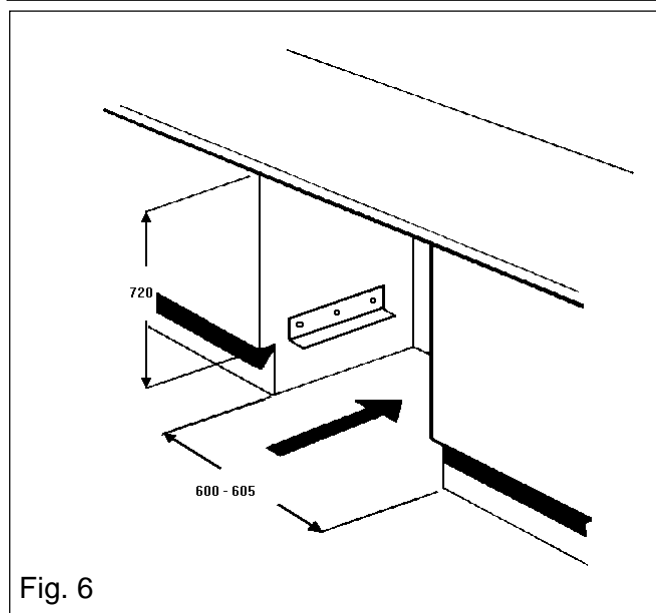


Fig. 6

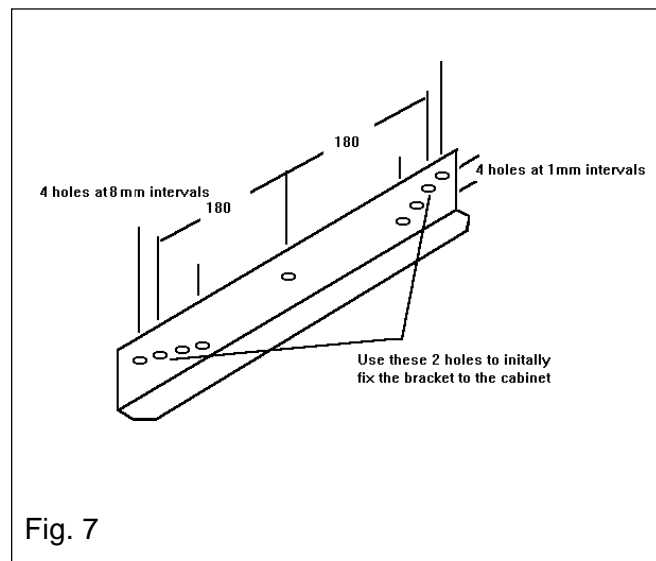


Fig. 7




# INSTALLATION INSTRUCTIONS

- Check that the mounting brackets are level. They can be adjusted if necessary by using the extra holes at the ends of the brackets. Once the brackets are level, drill a pilot hole through the central hole in the bracket and fit the remaining screw.

## HOW TO FINISH UNPACKING

- Place packed appliance next to the space in which it will be installed. See Fig. 8.
- Remove the appliance packing except for bottom tray which should be left in position until the appliance is ready to be fitted into its cabinet.
- Ensure the owner is given these operating instructions.

**NOTE:** It is imperative that the appliance is left in the base to protect both the appliance and the floor.

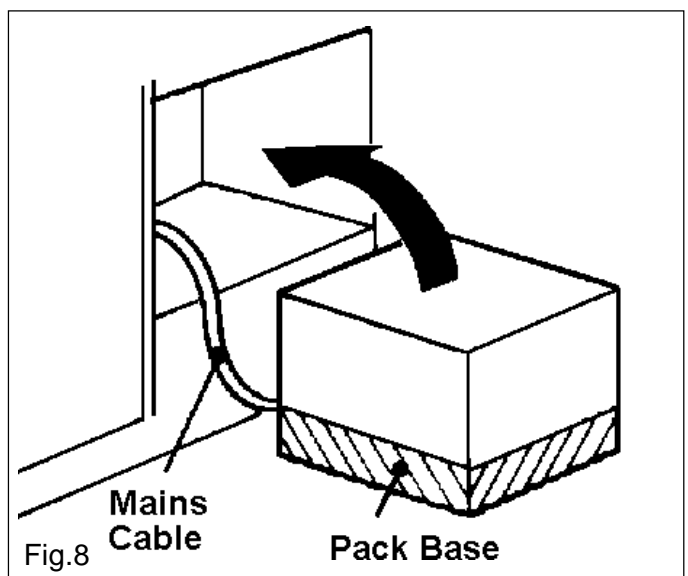

**Important:** Switch off at mains, miniature circuit breaker and, if appropriate, remove fuse before commencing any electrical work.


---

# INSTALLATION INSTRUCTIONS


## TO REMOVE COVER OF MAINS TERMINAL

From the rear of the appliance, remove mains input terminal cover to gain access to terminal block.


- First remove retaining screw with pozidrive screwdriver. See Fig. 9.

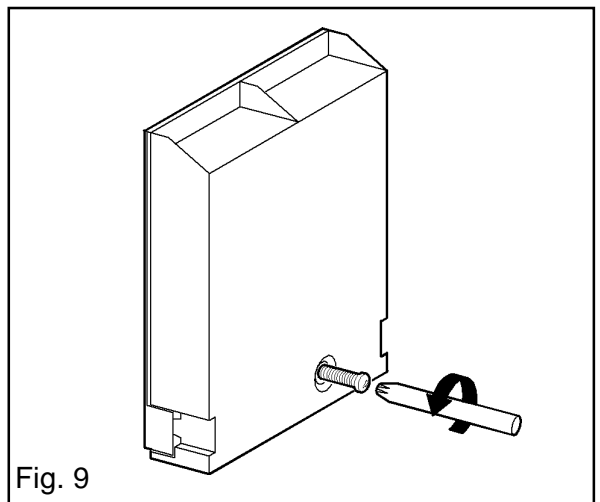

- Prise cover loose using screwdriver in position (1) then lever off with screwdriver in position (2) at either side. See Fig. 10.

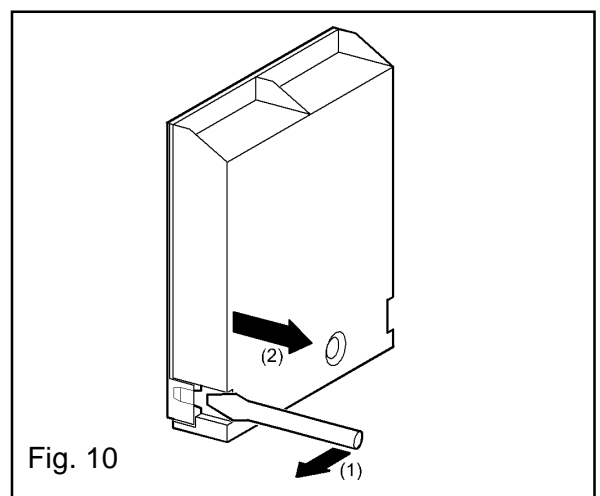

- Lift cover and remove screw from cable clamp. See Fig. 11.

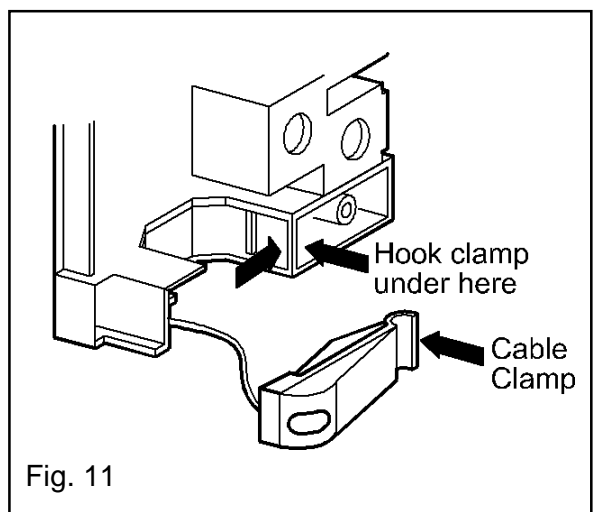

# INSTALLATION INSTRUCTIONS

## CONNECTING TO THE MAINS TERMINAL



**Warning:** This appliance must be earthed.

- We recommend you use a new length of 6mm<sup>2</sup> twin core and earthed cable to ensure your safety.
- Make connection as shown in Fig. 12 by proceeding as follows:-
- Preform wires to the appropriate shape to suit fitting into the mains terminal block.
- Strip inner insulation on wires using wirestrippers.
- Twist the bared wires using pliers.
- Cut bared wires 10mm away from the end of the inner insulation. Where uninsulated Earth wires are used ensure they are suitably sheathed to leave 10mm bare wire to fit into the terminal.
- Clamp bare wires into the relevant terminal and check they are held by tugging each one in turn.
- Clamp the mains cable securely ensuring 5mm of the outer insulation is inside the terminal block and that the wires are not taught but not so slack as to cause any fouling. See Fig. 12.
- Connect the remaining end of the mains cable to the cooker point / junction box.
- Place fuse / miniature circuit breaker in circuit and switch on at mains.

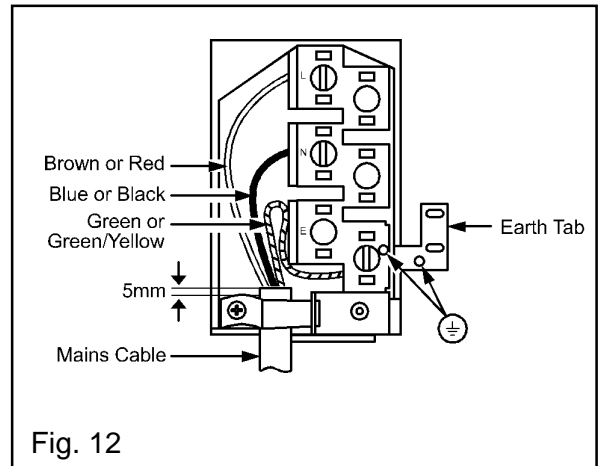


Fig. 12

# INSTALLATION INSTRUCTIONS

## CHECKING ELECTRICAL CONNECTIONS

- Confirm the appliance is correctly connected by switching on and observing the various oven functions indicators.
- The electronic timer will flash on and off.

## CONNECTING TO A HOB OR COOKER POINT

- Either follow in general terms the instructions for connecting to the terminal block or refer to the hob suppliers installation instructions.

---

**Feed the cable through the cabinet and arrange to route the cable away from the appliance.**

---

### NOTE: HOUSE CIRCUIT

Earth leakage / continuity tests must be carried out before the appliance is connected to the mains supply and re-checked after fitting.

# INSTALLATION INSTRUCTIONS

## FITTING INTO THE SPACE BETWEEN CABINETS



**IMPORTANT:** Ensure that the oven is switched off at the wall before any further work is carried out.

- Ensure the appliance is in front of the cabinet. See Fig. 13.
- Take out all oven furniture before installation to reduce the weight you need to lift.
- To place the appliance into the space between cabinetry follow the procedure below:
- **N.B. Two people will be required to carry out the lifting procedure.**

Warning: **Do not** attempt to lift this appliance by the handle(s).

Each person should squat either side of the appliance.

Tilt the appliance so that your hands can support the underside of the appliance.

Raise the appliance to the correct height.

Rest the rear underside of the appliance on the mounting brackets while your hands support the front.

The appliance can be pushed fully into the space. Take care to avoid fouling the mains lead.

Ensure the appliance is central and level.

- When the appliance is fully housed, screw the stability screws (supplied with the appliance) into the underside of the worksurface in the positions indicated (see Fig. 14), taking care not to distort the trim. It is advisable to turn each screw alternately to avoid damaging the trim.

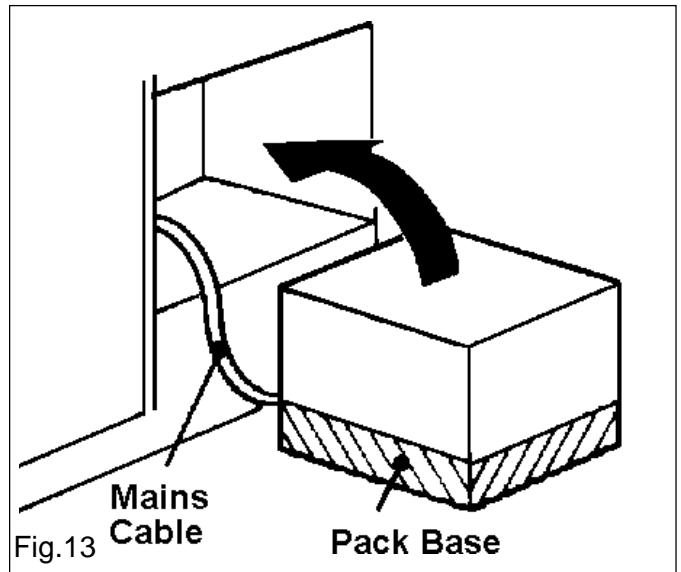


Fig.13



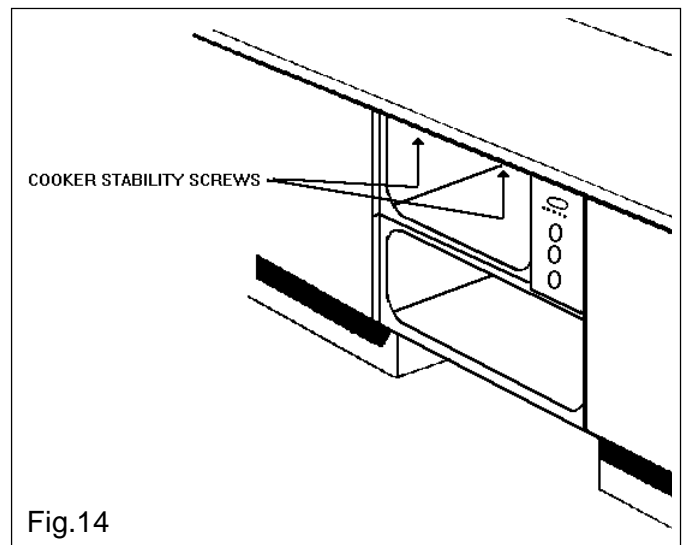


Fig.14

- Place the heat deflector flush with the edge of the worksurface, (see Fig. 15) with the cork spacers upover (see Fig.16) and screw into position using the screws supplied with the appliance.

Failure to do this may cause damage to the underside of the work surface.

- Replace the plinth board.
- Switch on the appliance and refer the user to the operating instructions.

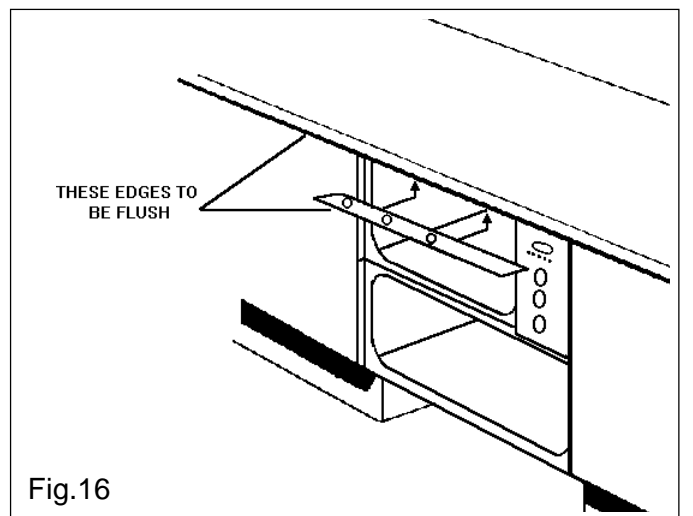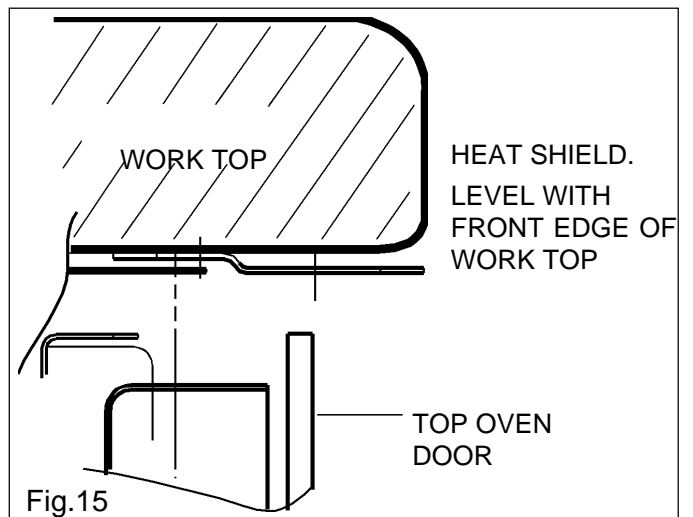

# NOTES

## IMPORTANT NOTICE

In line with our continuing policy of research and development, we reserve the right to alter models and specifications without prior notice.

This instruction booklet is accurate at the date of printing, but will be superseded if specifications or appearance are changed.

AEG DOMESTIC APPLIANCES  
55 - 77 HIGH STREET,  
SLOUGH,  
BERKSHIRE,  
SL1 1DZ  
TELEPHONE 0870 5 350350  
<http://www.aeg.co.uk>

Part Number:311435410

©Electrolux plc 2002

 **From the Electrolux Group.** *The world's No.1 choice.*

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.*