

COMPETENCE B8340-1

The Versatile Built-In Oven

Operating Instructions



Dear customer

Please read these operating instructions carefully.

Pay particular attention to the section "Safety Instructions" on the first few pages. Please retain these operating instructions for later reference. Pass them on to possible new owners of the appliance.

The following symbols are used in the text:



Safety Instructions

Warning: Information concerning your personal safety.

Important: Information on how to avoid damaging the appliance.



Information and practical tips



Environmental information

1. These numbers indicate step by step how to use the appliance.
2. ...
3. ...

Before calling out an engineer to a fault please read the chapter "What to do if ..." as you may be able to resolve the problem yourself.

For further assistance contact your local AEG Service Force Centre, see the Chapter "Service and Spare Parts".

Your local AEG SERVICE FORCE centre is available at all times to deal with technical problems (addresses and telephone numbers are listed under "Customer Service Centres").

For additional information, also see the section "Service".

Printed on environmentally friendly paper.
Thinking ecologically means acting ecologically ...

CONTENTS

Operating Instructions	5
Safety	5
Disposal	7
Description of the Appliance	8
General Overview	8
Control Panel	8
Oven Features	10
Oven Accessories	11
Before Using for the First Time	12
Setting the Time	12
Initial Cleaning	13
Operating the Oven	14
The Electronic Oven Control	14
Oven Functions	15
Inserting the Shelf and Tray	19
Attaching/Removing the Grill Pan Handle	20
Additional Functions	21
Clock Functions	26
Other Functions	32
Oven Child Safety Feature	33
Button Locking Feature	34
Oven safety cut-out	35
Usage, Tables and Tips	36
Baking	36
Baking Tables	38
Table: Desserts	42
Roasting	43
Table: Meat, roasting, casseroles	45
Table: Roasting, casseroles, au gratin	46
Grilling	49
Grilling Table	50
Bio-Functions	51
Low Temperature Roasting	51
Low Temperature Roasting Table	53

Making Yoghurt	54
Proving Dough	54
Drying Fruit, Vegetables	55
Defrosting	56
Defrosting Table	56
Preserving	57
Cleaning and Care	59
Exterior of the Appliance	59
Oven Interior	59
Accessories	59
Cleaning with Pyroluxe	60
Shelf Support Rails	62
Oven Lighting	63
Oven Door	64
Oven door glass	65
What to do if	67
Technical Data	69
Oven Interior Dimensions	69
Regulations, Standards, Directives	69
Installation Instructions	70
Safety Instructions for the Installer	70
Warranty conditions	76
Customer Service Centres	77
Index	78
Service and Spare parts	79

Operating Instructions



Safety

Electrical Safety

- The appliance may only be connected by a **registered specialist**.
- In the event of any faults or damage to the appliance: remove fuses or switch off.
- It is **not permissible** to clean the appliance with a steam or high pressure cleaner for safety reasons!
- **Repairs** to the appliance may **only be carried out by specialists**. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. If your appliance needs repairing, please contact your local AEG Service Force Centre or your specialist dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst Using

- This appliance is intended to be used for cooking, frying and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with hot rings or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.

To Avoid Damaging Your Appliance

- Do not line your oven with aluminium foil and do not place a baking tray or dish on the oven floor, otherwise the oven enamel will be damaged by the resulting build up of heat.
- Juice from fruit that drips from baking trays will leave marks that cannot be removed. For very moist cakes, use the universal baking tray.
- Do not put any weight on the oven door when it is open.
- Never pour water directly into the hot oven. The enamel may be damaged.
- Using force, especially on the edges of the front glass panel, may break the glass.
- Do not store inflammable objects in the oven. They may ignite when the oven is switched on.
- Do not store moist food in the oven. The enamel may be damaged.



Disposal

Disposing of the packaging material

All materials used can be fully recycled.

Plastics are marked as follows:

- >PE< for polyethylene, as used for the outer wrapping and the bags inside.
- >PS< for polystyrene foam, e.g., as used for the padding materials. They are completely free of CFCs.

Disposal of old appliances



Warning: Before disposing of old appliances please make them inoperable so that they cannot be the source of danger.


To do this, disconnect the appliance from the mains supply and remove the mains lead.

To protect the environment, it is important that worn out appliances are disposed of in the correct manner.


- The appliance must not be disposed of with household rubbish.
- You can obtain information about collection dates or public refuse disposal sites from your local refuse department or council.

Description of the Appliance

General Overview

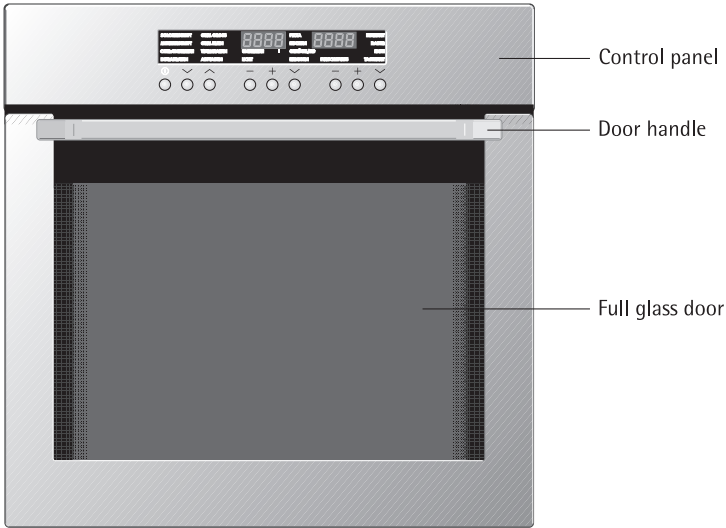



Control Panel

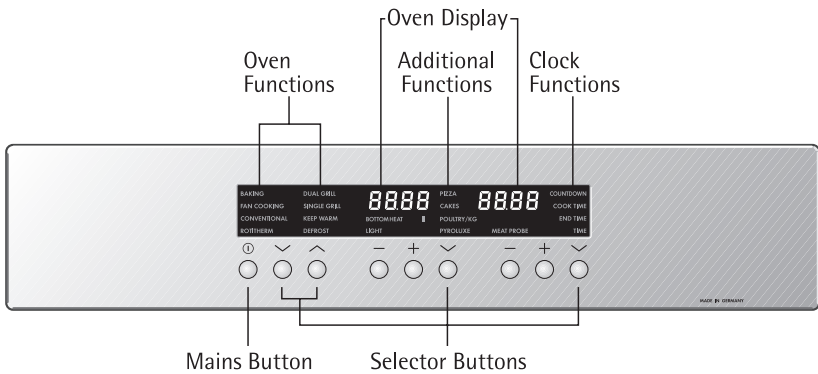


Mains button


For switching the entire appliance on and off.

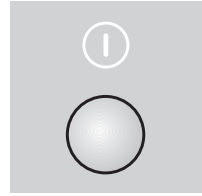**Mains button on appliances with a metal front**

In the following text and in the illustrations the symbol  is always used to indicate the mains button.

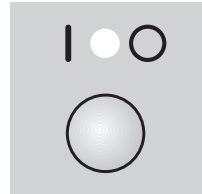

Oven Features

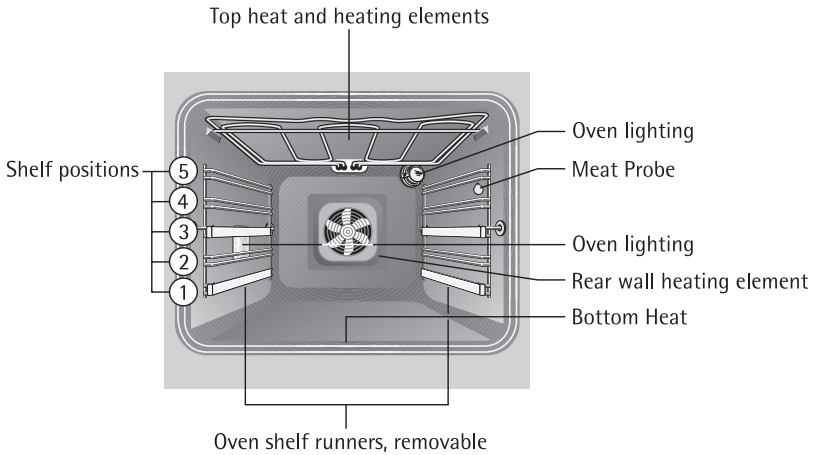

Oven steam vent

Steam from the oven is fed out below the door handle.


Relates only to appliances with a metal front:

Steam from the oven is fed out between the upper door edge and the control panel.

Oven Accessories


Combination shelf

For dishes, cake tins, items for roasting and grilling.

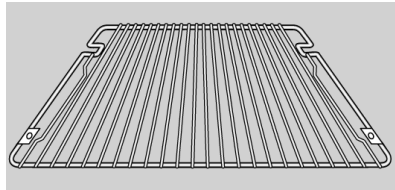


Universal baking tray

For moist cakes, juicy roasts or as a baking sheet or collecting vessel for fat.

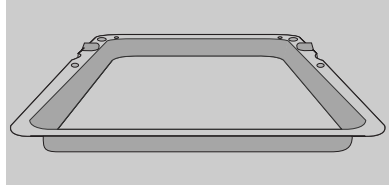


Grill pan with handle

Support for the grill tray as a collecting vessel for fat.

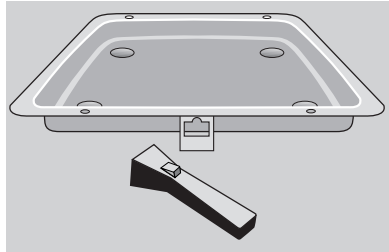


Grill tray

Insert for the grill pan for grilling smaller amounts of grilled food.

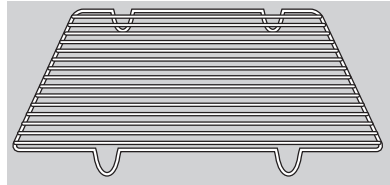

Meat probe

For determining the exact core temperature of joints of meat being cooked.

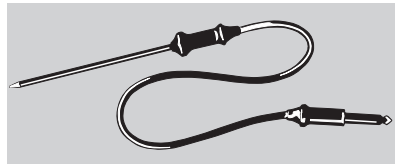

Before Using for the First Time

Setting the Time

i The oven will only operate when the time has been set.

After connection to the mains or following a power failure "12.00" is illuminated and "TIME" flashes.



1. Using buttons \oplus or \ominus set the current time.



2. Wait for approx. 5 seconds.

The flashing will stop and the set time is displayed.

The appliance is ready for use.



Initial Cleaning

Before using the oven for the first time you should clean it thoroughly.




Important: Do not use any caustic, abrasive cleaners! The surface could be damaged.





Tip: Use commercially available cleaners for metal fronts.

Switch on the appliance using the mains button. The symbol above the button will be illuminated.




3. Press selection button  once for oven functions. "LIGHT" is illuminated and the oven lighting is switched on.

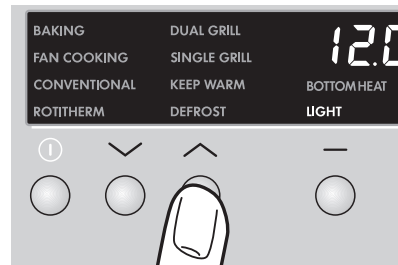

4. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
5. Then wash out the oven with warm water and washing-up liquid, and dry.
6. Wipe the front of the appliance with a damp cloth.
7. After cleaning, switch off the oven lighting using selection button  for oven functions.

Operating the Oven

The Electronic Oven Control

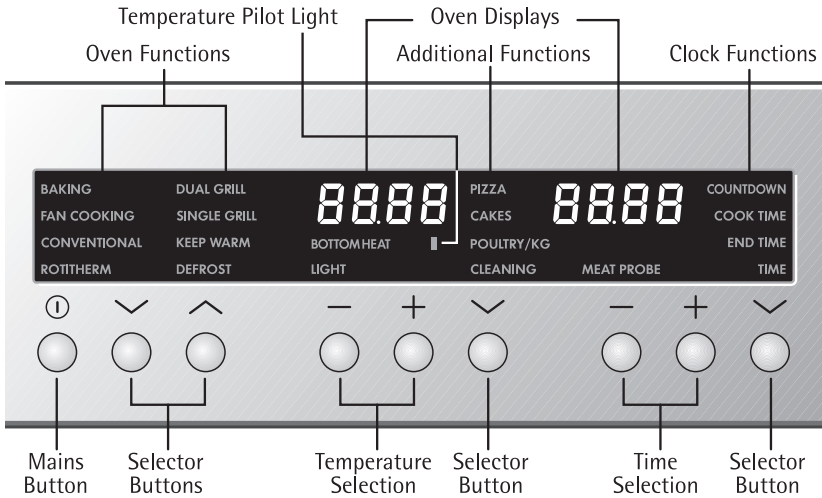

i General information

- Always switch the appliance on first using the mains button **(i)**.
- When the selected function is illuminated the oven starts to heat up and the set time begins to count down.
- The oven lighting comes on as soon as an oven function is selected.
- Switch the appliance off using the mains button **(i)**.

Oven Functions

The oven has the following functions:



The BAKING, CONVENTIONAL and ROTITHERM functions include an **automatic fast warm up**. This ensures that the selected temperature is reached as quickly as possible.

BAKING

Suggested temperature: 150 °C

For baking cakes on **one level** and for pastries that need more browning and a crispy base. These include such foods as pizza, quiche lorraine, and cheese cake.

Set oven temperatures 20-40 °C lower than when using conventional. Conventional is used and in addition the fan is switched on.

FAN COOKING

Suggested temperature: 150 °C

For **baking on up to three levels** at the same time.

Set oven temperatures 20-40 °C lower than when using conventional.

The rear wall heating element is used and in addition the fan is switched on.

CONVENTIONAL

Suggested temperature: 200 °C

For **baking** and **roasting** on **one level**.

The top and bottom heating elements are in use.

ROTITHERM

Suggested temperature: 180 °C

For **roasting** larger pieces of meat or poultry on one level. This function is also suited to **cooking foods au gratin** and **browning**.

The grill heating element and top heat operate alternately with the fan.

DUAL GRILL

Suggested temperature: 300 °C

For **grilling larger quantities** of flat foods such as steaks, escalopes or fish, or for **toasting**.

Top heat and the grill heating element are in use.

SINGLE GRILL

Suggested temperature: 300 °C

For **grilling** flat foods placed on the **middle of the shelf** such as steaks, escalopes or fish, or for **toasting**.

The grill heating element is in use.

KEEP WARM

Temperature setting: 80 °C

To keep food warm.

The top and bottom heating elements are in use.

DEFROST

Temperature setting: 30 °C

To **begin to thaw and to defrost** such items as flan, butter, bread, fruit or other **frozen foods**.

For this function the fan operates **without** heating.

BOTTOM HEAT

Suggested temperature: 150 °C

For **crisping and browning** cakes with **crispy bases**.




The bottom heating element is in use.

LIGHT

To switch the oven lighting on and off.

The oven lighting is switched on automatically as long as the oven is in operation.

Switching On Oven Functions

1. Switch the appliance on with the mains button .
2. Press selection button  or  until the required function is illuminated.

 
 


A suggested temperature will appear in the temperature display.

The temperature pilot light comes on while the oven is heating up.





Changing the Oven Temperature

Press the  or  button to increase or decrease the temperature.

 The temperature may be set at intervals of 5 °C.





Changing the Oven Function

Press the  or  button repeatedly until the required function is illuminated.



Switching the Oven Off

To switch the oven off press selection button  or  repeatedly until none of the oven functions is illuminated.






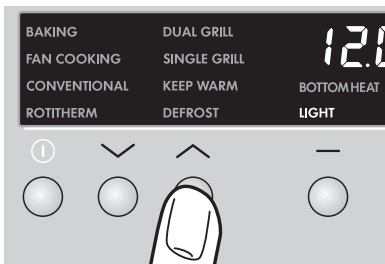
Cooling fan

The fan comes on automatically when the oven is in use in order to keep the surfaces of the appliance cool. Once the oven has been switched off, the fan continues running to cool down the appliance and then switches itself off automatically.

Switching the Oven Lighting On and Off

You can also switch on the oven lighting without an oven function.

1. Switch the appliance on using the mains button .
2. Press selection button  once for oven functions. "LIGHT" is illuminated and the oven lighting is switched on.
3. Press selection button  once for oven functions. The oven lighting is switched off.




Inserting the Shelf and Tray

The shelf has two guide rails on the right and left sides. These must always be facing downwards.


Inserting the shelf

Insert the shelf so that the two guide rails face downwards. Insert the shelf on the oven shelf runner rails so that the two holes engage in the retaining bolts of the oven shelf runner rails.

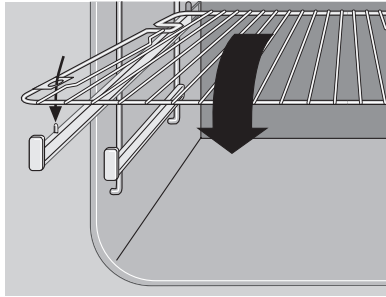


Inserting the baking tray / universal tray

Insert the trays so that the anti-tip device faces to the rear. Insert the trays on the oven shelf runner rails so that the two holes engage in the front retaining bolts of the oven shelf runner rails.

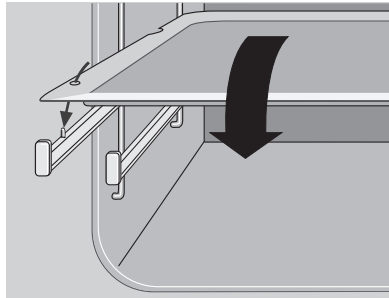

Inserting the shelf and tray

When using the shelf and universal tray together, place the shelf exactly in the recesses of the tray.

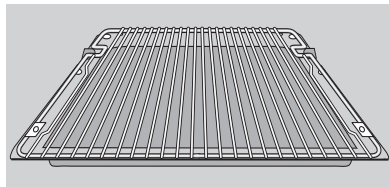

To make it easier to position slide-in units if the rails have been pulled out differently, place the slide-in unit on the rails at the back, push it in as far as it will go and then lower it into the retaining bolts at the front.

Attaching/Removing the Grill Pan Handle

The handle is particularly useful for removing the grill pan and tray more easily from the hot oven.


Attaching the handle

Insert **the handle** at an angle from above into the recess in the side of the grill pan (1) lift it gently and then lower it (2) until you hear it click into place.



Warning: Risk of burning!

Important: Check that the handle is securely attached!

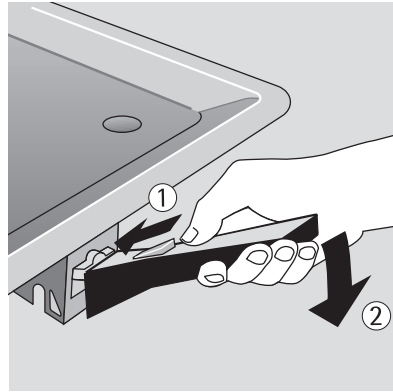


Removing the handle

Press the release button on the top of the handle (1) and lift up the handle (2) to remove it.



Important: Never leave the handle in the heated oven! Overheating can cause the handle to deform or break.

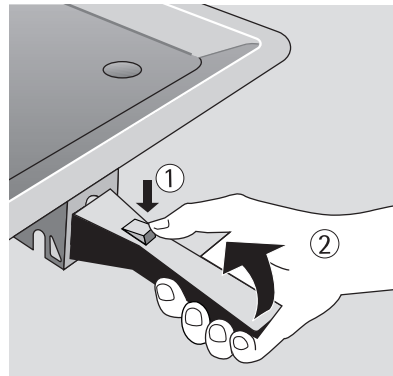

Additional Functions


PIZZA

To bake ready meals such as pizza, lasagne, foods au gratin and chips from the freezer.

There is no need to pre-heat the oven as recommended on the packaging when this special additional function is used.





Refer to the maker's instructions for preparation.
Use the oven temperature for hot air.

1. Press additional functions selection button  repeatedly until the "PIZZA" function is illuminated.

The suggested temperature of "200 °C" will appear in the temperature display.



2. By pressing the relevant  or  button the suggested temperature can be increased or decreased by 10 °C.



Turn chips etc. 2 - 3 times during cooking.


CAKES

For baking prepared cakes and cake mixtures. There is no need to pre-heat the oven as recommended on the packaging when this special additional function is used.





Refer to the maker's instructions for preparation.

Use the oven temperature for hot air.

1. Press additional functions selection button  repeatedly until the "CAKES" function is illuminated.

The suggested temperature of "160 °C" will appear in the temperature display.




2. By pressing the relevant  or  button the suggested temperature can be increased or decreased by 10 °C.



POULTRY



To roast whole poultry on an automatic program where all you need to do is set the weight.

1. Prepare the poultry for roasting then place it breast down in the roasting dish and insert it on the shelf in the first oven position from the bottom.


2. Press additional functions selection button  repeatedly until "POULTRY" is illuminated.

"1.3" will appear in the temperature display and the "COOK TIME" clock function will be illuminated.



3. Press the relevant  or  buttons within the next minute to change the weight setting (0.5 - 2.9).



You can check the COOK TIME by pressing clock functions selection button .



4. After approx. 2/3 of the roasting time an acoustic signal will sound to remind you to turn the poultry.
5. At the end of the cooking time an acoustic signal will sound. The oven will switch off.

PYROLUXE

For pyrolytic self-cleaning.

During this process splashes and deposits are burned in the oven and can be washed off once the oven has cooled.

The oven is heated to approx. 500 °C.


Meat Probe

To switch the oven off when the precise meat core temperature has been reached.



Important: Only the meat probe delivered with the oven should be used! If a replacement is required use only an original spare part!

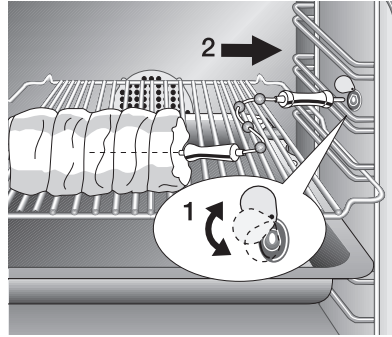

1. Push the tip of the meat probe as far as possible into the food that is to be cooked so that the tip is right in the centre of the food.
2. Push the meat probe plug fully into the socket on the side wall of the oven.
"MEAT PROBE" is illuminated.
3. Set the required oven function and oven temperature.



The **suggested temperature** for the selected oven function will appear in the temperature display on the **left**.

In the time display on the **right** a suggested temperature of '60 C' will appear for the **meat core temperature**.



4. Set the required meat core temperature using time selection buttons  or .



After approx. 5 seconds the current **meat core temperature** will be shown in the time display on the **right**.



The meat core temperature is displayed from 30 °C upwards.



Checking or changing the meat core temperature

- The set meat core temperature can be displayed by pressing buttons \oplus or \ominus once.
- It is possible to change a previously selected temperature by pressing \oplus or \ominus several times.


As soon as the measured meat core temperature matches the temperature that has been set an acoustic signal will sound and the oven will switch off automatically.

5. Press the \oplus or \ominus time selection button to deactivate the signal.



Warning: The meat probe is hot! There is a risk of burning when the plug and probe are removed!

6. Pull the meat probe plug out of the socket and remove the cooked food from the oven with the meat thermometer still inside it.
7. Switch off the oven.

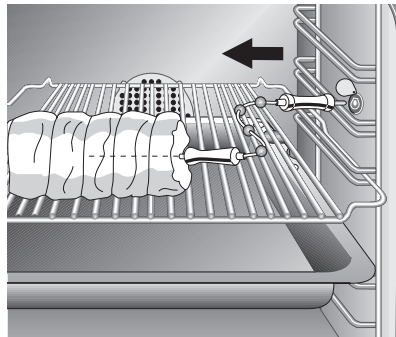

Clock Functions

COUNTDOWN

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

COOK TIME

To set how long the oven is to be in use.

END TIME




To set when the oven is to switch off again.

TIME


To set, change or check the time.
(See also section "Before Using for the First Time".)





General information

- Before setting the time always switch the appliance on using the mains button .
- After a clock function has been selected the function will flash for approx. 5 seconds. During this time the required times can be set or changed using the  or  time selection buttons.
- After the required time has been set the function will flash again for approx. 5 seconds. Then the function stays illuminated. The set time will begin to count down.
- The acoustic signal may be turned off by pressing any clock button.

COUNTDOWN

1. Press clock function selection button  repeatedly until COUNT-DOWN is flashing.




2. Using buttons  or  set the required countdown. (Max. 2 hours and 30 minutes.)



After approx. 5 seconds the display will show the remaining time. COUNTDOWN is illuminated.




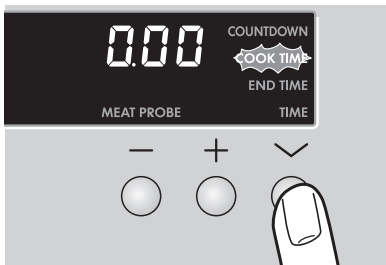
When the time has expired COUNT-DOWN flashes and an acoustic signal will sound for 2 minutes.

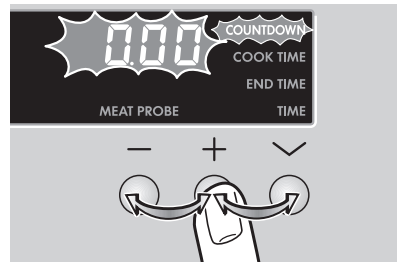


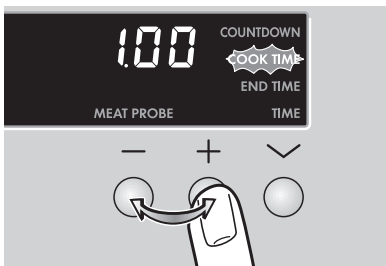
To switch the acoustic signal off: press any clock function button.

COOK TIME

1. Select oven function and temperature.
2. Press clock function selection button  repeatedly until COOK TIME flashes.



3. Using buttons  or  set the required cooking time.




After approx. 5 seconds the display will switch to the time. COOK TIME is illuminated.




When the cooking time has expired COOK TIME will flash, an acoustic signal will sound for 2 minutes and the oven will switch off.


To switch the acoustic signal off: press any clock function button

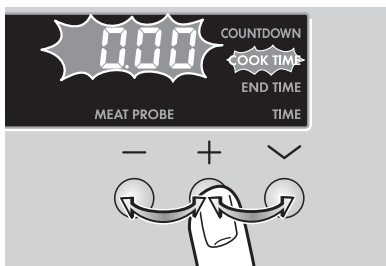

END TIME

1. Select oven function and temperature
2. Press clock function selection button  repeatedly until END TIME is flashing.



3. Using the  button set the time at which you want the oven to switch off.




After approx. 5 seconds the display will revert to the time. END TIME is illuminated.



4. When the time has expired END TIME will flash, an acoustic signal will sound for 2 minutes and the oven will switch off.

To switch the acoustic signal off: press any clock function button

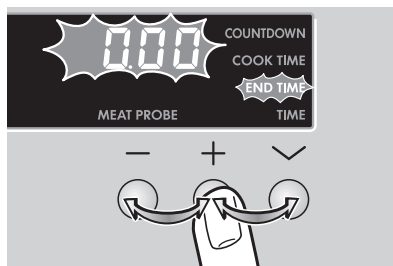


COOK TIME and END TIME combined



COOK TIME and END TIME can be used together if the oven is to switch on and off automatically at a **later time**.

1. Select oven function and temperature
2. Using the COOK TIME function, set the time required for the dish to cook.
E.g., 1 hour.

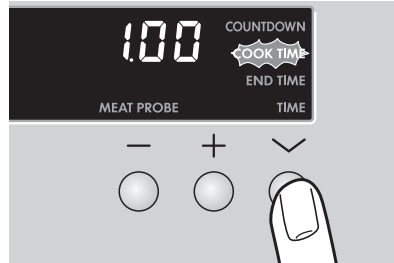


3. Using the END TIME function set the time at which the dish is to be ready.
E.g., 14:05




4. COOK TIME and END TIME are illuminated and the time will appear in the display. In this case 12:05. The oven will switch on automatically at the calculated time.
E.g., 13:05



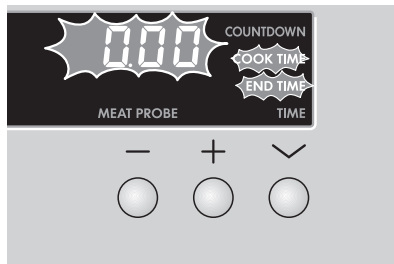

5. After the set period of time has expired an acoustic tone will sound for 2 minutes and the oven will switch off.
E.g., 14:05
COOK TIME and END TIME will flash.



Changing TIME

1. Press clock function selection button  repeatedly until TIME flashes.



2. Using buttons  or  set the current time.



3. After approx. 5 seconds the flashing will stop and the clock will display the set time. The appliance is ready for use again.



The TIME can only be changed if the oven and child safety feature are switched off.



Other Functions



Switching Off the Time Display

By switching off the time display you can save energy.

Switching off the time display

1. If necessary **switch off** the appliance with the mains button.
2. Press clock functions  and  simultaneously until the display goes dark (approx. 5 seconds).


 


As soon as the appliance is used again the display will automatically switch on.

The next time the appliance is switched off the time display will again go out.

To display the time constantly again the time display must be switched on again.

Switching on the time display

1. If necessary **switch off** the appliance with the mains button.
2. Press clock functions selection buttons  and  simultaneously until the display reappears (approx. 5 seconds).



The display can only be switched off if the oven is also switched off.



Oven Child Safety Feature

The oven is equipped with a child safety feature. As soon as the child safety feature is activated, the oven cannot be used.



To activate the child safety feature, there must be no oven function selected.



Activating the child safety feature

1. If necessary, switch on the appliance using the mains button.
2. Hold down oven function selector buttons  and  simultaneously until "SAFE" appears in the oven display.



The child safety feature has now been activated.

Deactivating the child safety feature

Hold down oven function selection buttons  and  simultaneously for approx. 2 seconds.

The child safety feature has now been deactivated and the oven is again ready for use.






Switching off the appliance with the mains button does not cancel the child safety feature.

Button Locking Feature



To prevent a set oven function being adjusted unintentionally.

Activating the button locking feature

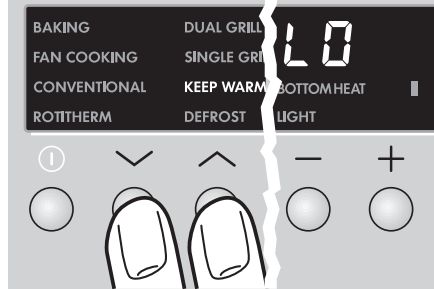1. If necessary, switch on the appliance using the mains button.
2. Select oven function.
3. Hold down oven function selector buttons  and  simultaneously for approx. 2 seconds until "LO" appears in the display. The button locking feature has now been activated.



Deactivating the button locking feature

Hold down oven function selection buttons  and  simultaneously for approx. 2 seconds.

The button locking feature is automatically deactivated when the appliance is switched off.

Oven safety cut-out



If not switched off after a certain time, or if the temperature does not change, the oven switches off automatically.

The indication "0.00" flashes, the temperature indicator light flashes, and a signal sounds.

The oven switches off at temperatures of:

30 - 120° C	after	12.5 hours
120 - 200° C	after	8.5 hours
200 - 250° C	after	5.5 hours
250 - 300° C	after	1.5 hours

Switching on again after a safety cut-out

Switch the oven off completely.

You will then be able to switch on again.

Usage, Tables and Tips

Baking

Use the BAKING, FAN COOKING or CONVENTIONAL oven function for baking.


Cake tins

- Cake tins made of dark metal and coated tins are suitable for CONVENTIONAL.
- Light tins are also suitable for BAKING and FAN COOKING.


Shelf positions

- Baking using BAKING or CONVENTIONAL should be carried out on one level.
- You can bake on up to 3 levels simultaneously using FAN COOKING :


1 Baking sheet:
Shelf position 3

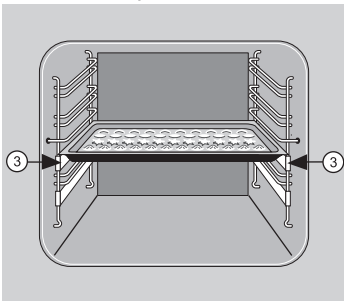


1 Cake tin:
Shelf position 1

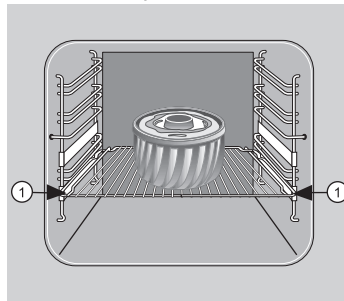

2 Baking sheets:
Shelf positions 1 and 4

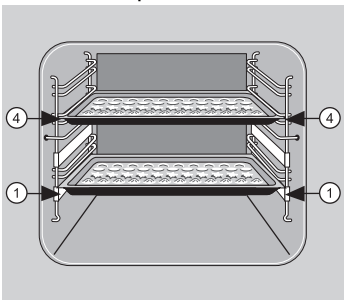

3 Baking sheets:
Shelf positions 1, 3 and 5

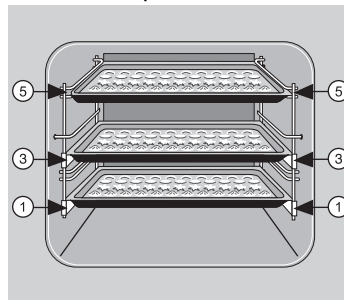

General information

- Please note that the shelf positions are counted from bottom to top. Always place cakes in cake tins in the middle of the shelf. You can also bake two cakes simultaneously using BAKING or CONVENTIONAL. In this case place the tins side by side on the shelf. The cooking time is then increased only slightly.
- Always preheat the oven when using the CONVENTIONAL oven function.

Notes on the baking tables

In the tables you will find information on temperatures, cooking times and shelf positions for a selection of recipes.

- Ranges are given for the temperature and cooking time since these are dependent on the mixture, quantity and cake tin used.
- When baking several cakes on baking sheets or in cake tins, the cooking time can be 10-15 minutes longer.
- Moist items (e.g. pizzas, fruit cakes, etc.) should be cooked on a maximum of two levels.
- When using for the first time, we recommend setting the lower temperature. If increased browning is required or the cooking time is too long, select a higher temperature.
- If you cannot find any specific information for one of your own recipes, use information on a similar recipe for guidance.
- Variations in the height of the item to be baked can lead to different degrees of browning at the start of baking. In this case, **please do not change the temperature setting**. Variations in the amount of browning will even themselves out during baking.



Switch off the oven 10-15 minutes before the end of the cooking time to make use of the residual heat.

Unless otherwise stated the information in the tables applies for a cold oven.

Baking Tables

Baking on one level

Cakes, Biscuits, Bread, Pies	BAKING		CONVENTIONAL		Time
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. ¹ °C	Hours: Min.
Using cake tins					
Cakes in pound cake tins	1	150-160	1	160-170	1:00-1:10
Sandcakes/ Cakes in loaf tins	1	150-160	1	160-170	1:15-1:30
Madeira cake	1	150-160	1	160-170	1:00-1:10
Dundee cake	1	130-140	1	140-150	2:30-3:00
Large Christmas cake (10")	1	130	1	130-140	4:30-5:00
Victoria Sandwich	2	160	2	180-190	0:25-0:35
Pastry cases	3	180-190	2	210-220	0:10-0:25
Bakewell tart	-	160-170	1	180-190	0:45-0:55
Swiss roll	-	-	3	180-200	0:10-0:15
Flans Et quiches	2 or 1	170-180	2	180-200	0:30-0:50
Using baking sheets					
Short bread	3	140-150	3	150-170	0:40-0:50
Biscuits	3	150-170	3	180-200	0:15-0:25
Macaroons	3	140-150	3	150-170	0:25-0:35
Apple strudel	3	170-180 ¹	3	210-220	0:30-0:50
Choux pastry buns	3	160-170 ¹	3	200-210	0:20-0:35
Buns / cup cakes	3	150-160 ¹	3	190-210	0:25-0:35
Scones	3	200	3	220-240	0:10-0:15
Meringues	-	-	3	100-120	3:30-4:30
Sausage rolls	3	170-180 ¹	3	210-220	0:20-0:35

Cakes, Biscuits, Bread, Pies	BAKING		CONVENTIONAL		Time Hours: Min.
	Shelf- position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	
Pizza	4	180-200	4	200-220	0:30-0:50
Bread					
Wholemeal bread	-	-	1	220-240	0:40-0:45
White bread	-	-	1	210-230	0:40-0:45

1) **Pre-heat oven.**

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

Baking on several levels

Type of Cake or Pastry	FAN COOKING			Time Hr.: Min.
	Shelf position from bottom		Temp. °C	
	2 Levels	3 Levels		
Using cake tins				
Victoria Sandwich	1 + 4	-	160-170	0:25-0:35
Pastry cases	1 + 4	-	170-190	0:10-0:25
Using baking sheets				
Short bread	1 + 4	1. 3. u. 5.	140-150	0:40-0:50
Biscuits	1 + 4	1. 3. u. 5.	150-170	0:15-0:25
Macaroons	1 + 4	1. 3. u. 5.	140-150	0:25-0:35
Choux pastry buns	1 + 4	-	160-170¹	0:20-0:35
Buns / cup cakes	1 + 4	1. 3. u. 5.	150-160¹	0:25-0:35
Scones	1 + 4	-	190-200¹	0:10-0:15
Sausage rolls	1 + 4	-	170-180¹	0:20-0:35

1) Pre-heat oven.

Select the lower temperature to start with, then select the higher one only if required.

Tips on Baking

	Tip
This is how to tell if your cake is cooked through	Push a wooden skewer into the highest point of the cake. When no more cake mixture sticks to the wood, you can switch off the oven and utilise the residual heat.
The cake collapses (is sticky, not properly cooked through, water marks)	Check your recipe. Next time use less liquid. Observe mixing times, particularly when using kitchen appliances.
The cake is too light	Next time select a dark cake tin or place the cake one level lower.
Cake with moist topping/ cake is not cooked through, is unevenly browned	Next time bake at a lower temperature and increase the cooking time.

Table: Desserts

Desserts	BAKING		CONVENTIONAL		FAN COOKING		Time Hr.: Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. ¹ °C	Shelf position from bottom	Temp. °C	
Apple pie	3	180-190	1	210-220	2	180-190	0:45-0:50
Rice pudding	-	-	1	150	2	130-140	2:00-2:30
Fruit crumble	1	160	2	170-190	2	160	0:50-1:10
Pineapple upside down cake	2	160	2	180-190 ¹	2	160	0:35-0:45
Pavlova	2	130	2	140-150	2	130	1:00-1:10
Baked custard	-	-	2	160-170	2	150-160	0:45-1:00
Baked apples	2	160-170	2	190-210	2	160-170	0:40-1:00
Bread and butter pudding	2	170-180	2	200-210	2	170-180	0:40-0:55
Apple charlotte	2	180-190	2	210-220	2	180-190	0:40-0:55
Soufflé - sweet/savoury	1	190-200	2	200-210	2	170-190 ¹	0:30-0:45

1) Pre-heat oven.

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

Roasting

For roasting, use the FAN COOKING, ROTITHERM or CONVENTIONAL oven function.

Roasting dishes

- Any heat-resistant dish is suitable for roasting.
- If the dish has plastic handles, ensure that the handles are heat-resistant.
- Large roasts can be roasted **directly on the universal sheet or on the shelf with the universal sheet underneath** (e.g. turkey, goose, 3-4 chickens, 3-4 knuckles).
- When roasting meat choose a dish which is just a little larger than the joint itself to retain the juices in a small area thus preventing fat from spitting and soiling the oven.
- We recommend roasting all lean types of meat **in a casserole with a lid** (e.g. veal, pork or beef pot roasts, frozen meat). This way the meat will remain moist.
- You can roast all types of meat that should have a crispy exterior **in a casserole without a lid** (e.g. pork, meat loaf, lamb, duck, 1-2 knuckles, 1-2 chickens, small poultry, sirloin, fillet, game).
- **Tip:** If you use dishes for roasting (particularly for small amounts), the oven will not get so dirty!

Shelf positions

- Please see the following table for the shelf positions to use.

Notes on the roasting tables

Information is given in the table on suitable oven functions, temperature settings, cooking times and shelf positions for various types of meat. The cooking times are for guidance only.

- We recommend roasting meat and fish **in the oven from a weight of 1 kg**.
- In general the CONVENTIONAL function is suitable for very lean meat, fish and game.
- For all other types of meat (particularly poultry) we recommend the ROTITHERM function, if you are just roasting meat without cooking any other type of food in the oven at the same time.
- If you wish to roast meat and cook other dishes at the same time, use the FAN COOKING function.

- The cooking time required is dependent on the type and quality of the meat.
- To stop juices that exude from the meat burning onto dishes, we recommend adding a little liquid in the roasting dish.
- Turn the roast after approx. 2/3 of the cooking time.



Switch off the oven 10-15 minutes before the end of the cooking time to make use of the residual heat.

Table: Meat, roasting, casseroles

Meat	FAN COOKING		CONVENTIONAL		ROTITHERM		Time Hrs. : Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. ² °C	
Pork							
Shoulder; leg; rolled; boned spare rib; loin of pork	2	170-180	2 or 1	190-210	2	150-160	0:30-0:35 per 450 g/1 lb plus 30-35 mins
Beef							
Inexpensive cuts	2	160-170	2	180-200	-	-	0:35-0:40 per 450 g/1 lb plus 15-20 mins
Prime cuts							
-rare	2	170-180¹	2	200-210 ¹	3 or 2	150-160 ¹	0:15-0:20 per 450 g/1 lb plus 15-20 mins
-medium	2	170-180	2	190-210	3 or 2	150-160	0:20-0:25 per 450 g/1 lb plus 25-25 mins
-well done	2	170-180	2	190-210	2	150-160	0:30-0:35 per 450 g/1 lb plus 25-30 mins
Yorkshire pudding							
- small	3	200¹	2	200-250	3	250	0:10-0:15
- large	2	180-190¹	2	210-250 ¹	2	220-230	0:30-0:40

Meat	FAN COOKING		CONVENTIONAL		ROTITHERM		Time Hrs. : Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. ² °C	
Lamb	2	170-180	2	190-210	2	150-160	0:30-0:35 per 450 g/1 lb plus 30-35 mins
Veal	2	170-180	2	190-210	3 or 2	150-160	0:30-0:35 per 450 g/1 lb plus 30-35 mins

1)Pre-heat oven.

2)For Rotitherm roasting and joints of 5 lb & over eliminate the additional time.

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

Table: Roasting, casseroles, au gratin

Poultry, Game, Fish, Vegetables	Quantity approx.	FAN COOKING		CONVENTIONAL ¹		ROTITHERM ²		Time Hr.: Min.
		Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	
Casseroles, miscellan.								
Casseroles	1 kg/ 2 lbs	2	150	2	160-170	-	-	2:30-3:00
Lancashire Hot Pot	1 kg/ 2 lbs	2	150-160	2	180-190	-	-	2:15-2:30

Poultry, Game, Fish, Vegetables	Quantity approx.	FAN COOKING		CONVEN- TIONAL ¹		ROTITHERM ²		Time Hr.: Min.
		Shelf position from bot- tom	Temp. °C	Shelf position from bot- tom	Temp. °C	Shelf position from bot- tom	Temp. °C	
Moussaka	1 kg/ 2 lbs	2	170-180	2	210-215	-	-	0:40-0:50
Meat Loaf	675 g/ 1.5 lbs	2	170-180	2	200-210	2	160-170	1:00-1:10
Poultry/ Game								
Chicken	1 kg/ 2 lbs	2	170-180	2	200-220	2	160	0:50-1:10
Chicken	1.5 kg/ 3 lbs	2	170-180	2	200-220	2	160	1:15-1:30
Duck	1.5-2 kg/ 3.5-4 lbs	2	180-190	2 or 1	210-220	2	160	1:15-1:45
Goose	3.5-5 kg/ 8-10 lbs	2 or 1	170-180	2 or 1	200 - 210/250	2 or 1	130-140	2:30-3:00
Turkey	2.5-3.5 kg 5-7 lbs	2	160	2 or 1	180-200	2 or 1	140-150	1:30-2:00
Turkey	4-6 kg/ 8-13 lbs	2 or 1	150-160	2 or 1	180-200	2 or 1	130-140	2:30-4:00
Pheasant, Wild Duck, Rabbit	1 kg/ 2 lbs	3 or 2	210	3 or 2	210-220	3 or 2	170-180	0:30-1:00
Partridge/ Pigeon	per 300- 500 g	3 or 2	190-200	3 or 2	210-220	3 or 2	170-180	0:30-0:50

Poultry, Game, Fish, Vegetables	Quantity approx.	FAN COOKING		CONVENTIONAL ¹		ROTITHERM ²		Time Hr.: Min.
		Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	
Fish (baked, steamed)								
Whole fish	1-1.5 kg/ 2-3 lbs	2	160-170	2	190-210	3 or 2	150-160	0:45-1:15
Fish pies, bakes	750 g- 1 kg/ 1.5-2 lbs	3 or 2	170-190	3 or 2	210-220	3 or 2	160-180	0:30-1:00
Vegetables								
Stuffed pepper/au-bergines		2	180-190	2	210-225	3 or 2	160-180	0:30-1:00
Au gratin dishes		3	180-200	3	220-250	3	180-190	0:15-0:45

1) Pre-heat oven.

2) Place food in suitable containers and position wire shelf as per chart.

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

Grilling

Use the SINGLE GRILL or DUAL GRILL oven function with a temperature of 275 °C for grilling.

Important: Always pre-heat the empty oven for 5 minutes using the grill function.

Ovenware for grilling

- For small amounts use the grill pan and the grill pan grid together for grilling.
- For larger amounts use the wire shelf and the meat tin together for grilling.



Warning: The **grill pan handle must be removed** whilst grilling! Always use oven gloves when removing or attaching the grill pan handle.

Shelf positions

- For grilling flatter foods, always use the **4th shelf position from the bottom.**

Notes on the grilling table

The grilling times are for guidance only and are dependent on the type and quality of the meat or fish.

- Grilling is particularly suitable for flat pieces of meat and fish.
- Turn over pieces of meat or fish halfway through the grilling time.



Warning: Always grill with the oven door shut. !

Grilling Table

Food		Shelf Level from down	Grilling Time minutes each side
Bacon rashers		4.	2-3
Beef burgers		4.	6-10
Chicken joints		4.	10-15
Chops:	Lamb Pork	4.	7-10 10-15
Fish:	Whole trout Hering Fillet plaice/cod	4.	8-12 4-6
Kebabs		4.	10-15
Kidneys:	Lamb/pig	4.	4-6
Liver:	Lamb/pig	4.	5-10
Sausages		4.	10-15 (turn as required)
Steaks:	rare medium well	4.	3-6 6-8 7-10

Bio-Functions

The low temperatures that can be set on this oven enable meat to be cooked so that it is particularly tender and juicy, yoghurt can also be made, dough proven and fruit dried in the oven.



Important: The suggested temperature must be changed for all bio-functions!



When roasting at low temperatures you will save up to 20 percent energy than when roasting conventionally.

Low Temperature Roasting

Use the ROTITHERM oven function for low temperature roasting.

Ovenware for roasting

- Any heat-resistant dish is suitable for roasting.
- If the dishes have plastic handles, ensure that the handles are heat-resistant.
- When roasting at low temperatures, always **roast uncovered without a lid.**

Shelf positions

- Use the **4th shelf position from the top** for low temperature roasting.

General information

Roasting is performed **in 2 stages:**

- Select a high temperature for browning.
- Then change to a lower temperature.

Notes on the roasting table

The roasting times are only for guidance and are dependent on the type and quality of the meat or fish.

- The thicker and heavier a piece of meat, the longer the browning time and subsequent final roasting time.
 - It is necessary to turn whole poultry only.
 - Only add vegetables after approx. 2/3 of the browning time.
 - **Once the browning time is at an end, do not open the oven door again!**
(Turn poultry before the end of the browning time.) The heat loss will significantly increase the cooking time.
1. Prepare meat as usual (wash, dry, season, tie into specific shape if required, etc.).
 2. Select the ROTITHERM oven function.
 3. **Change** the suggested temperature to the **browning temperature** given in the table.
 4. At the end of the browning time, **change** the temperature to the **final roasting temperature** given in the table.

Low Temperature Roasting Table

		ROTITHERM			
Food to be Roasted	Weight kg	1st Stage Browning		2nd Stage Final Roasting	
		Temp. °C	Time Min.	Temp. °C	Time Min.
Meat		220			
Roast Beef	1-1.5		25-45	85	30-60
Beef, Veal Fillet	1-1.5		20-40	85	20-40
Saddle of Veal	1-2		30-50	90	20-60
Game		220			
Saddle of Venison	1.5-2		25-45	90	20-60
Leg of Venison	1.5-2		25-45	120	40-120
Poultry		200			
Turkey Breast	1-2		25-50	100	60-150
Chicken	1-1.5		25-40	100	40-60
Duck	1.5-2.5		30-40	100	40-60
Fish		180			
Sea Trout	0.5-1		15-20	80	10-20
Salmon (Middle Piece)	1-2		25-40	80	10-20
Zander / Pike	0.7-1.5		15-35	80	10-20



We recommend low temperature roasting for:
tender, lean pieces of meat and fish.

Low temperature roasting is not suitable for:
e.g. pot roasts, roast pork.

Making Yoghurt

Use the CONVENTIONAL oven function for making yoghurt.

Ovenware for making yoghurt

- Use cups or glasses of approx. 150 ml capacity as containers for yoghurt, cover with foil or a lid.

Shelf position

- Place the shelf in the **3rd shelf position from the top**.

1. Bring the milk to the boil (e.g. 1 litre for 6-8 portions).
2. Leave the milk to cool to 40 °C.
3. Stir pure yoghurt into the milk, pour into the containers and cover.
4. Place the containers on the shelf.
5. Select the CONVENTIONAL oven function and **change the suggested temperature to 40 °C**.
6. Remove the yoghurt after approx. 5-8 hours (as soon as it set).

Proving Dough

Use the CONVENTIONAL function for proving dough.

Ovenware for making yoghurt

- Place the dough in a bowl that is heat resistant up to 40 °C.

Shelf position

- Place the shelf in the **3rd shelf position from the top**.

1. Cover the bowl containing the prepared dough with transparent film and place on the shelf.
2. Select the CONVENTIONAL oven function and **change** the suggested temperature **to 40 °C**.
3. Leave the dough to rise until it has doubled in size.

Drying Fruit, Vegetables

Use the FAN COOKING oven function for drying.

Ovenware for making yoghurt

- Cover the shelf or baking sheet with grease-proof paper.

Shelf Position

- You can dry fruit on up to 2 levels simultaneously.
- Place the shelf or baking sheet in the **2nd and 5th shelf positions from the top.**

General information

Suitable for drying are:

- Fruits like apples, pears, plums.
Only use fully ripe fruit of good quality!
 - Mushrooms
1. Wash the fruit or vegetables, peel if required, chop and dry.
 2. Spread the fruit or vegetables on the shelf or baking sheet.
 3. Select the FAN COOKING oven function and change the suggested temperature to 50-70 °C.
 4. Turn fruit during drying.
 5. Remove the fruit when it can still be bent but no more juice is produced when pressed.

Food	Quantity	FAN COOKING	
		Temperature °C	Time Hr.
Apple rings 1/2 cm thick	700g	50-70	5-8
Plums	1-1.2kg	50-70	8-10
Mushrooms ¹	500g-1kg	50-80	5-7

1) The time is dependent on the moisture content of the food.

Defrosting

To defrost food, use the oven's function DEFROST at 30 °C.

Defrosting dishes

- Put the food on a plate and put the plate on the tray.
- Use only parchment paper or film to cover the food. Do not use plates or dishes as they significantly increase the defrosting time.

Shelf levels

- For defrosting, insert the tray in the **2nd level from the bottom**.

Notes on the defrosting table

The table below gives you a few reference points on the defrosting times.

Defrosting Table

Meal	Defrosting time Min.	Standing time Min.	Note
Chicken, 1000 g	100-140	20-30	Place the chicken on an upside-down saucer on a large plate. Defrost open and turn after half the time, or defrost covered with film.
Meat, 1000 g	100-140	20-30	Defrost open and turn after half the time or cover with film.
Meat, 500 g	90-120	20-30	Defrost open and turn after half the time or cover with film.
Trout, 150 g	25-35	10-15	Defrost open
Strawberries, 300 g	30-40	10-20	Defrost open
Butter, 250 g	30-40	10-15	Defrost open
Cream, 2 x 200 g	80-100	10-15	Defrost open (Cream can also be whipped well if parts of it are still slightly frozen)
Flan, 1400 g	60	60	Defrost open.

Preserving

Use the **BOTTOM HEAT** oven function for preserving.

Preserving jars

- For preserving use only commercially available preserving jars that are all the same size.



Screw-top jars, jars with a bayonet fastening and metal containers are unsuitable.

Shelf positions

- Use the **1st shelf position from the bottom** for preserving.

Notes on preserving

- Use the universal tray for preserving. There is room for up to 6 preserving jars each with a capacity of 1 litre on this tray.
- The preserving jars should all be filled to the same level and closed.
- Position the preserving jars on the universal baking tray so that they do not come into contact with one another.
- Pour about 1/2 litre of water into the universal baking tray so that there is sufficient moisture in the oven.
- As soon as bubbles begin to appear in the liquid in the first jars (for 1-litre jars this takes about 35-60 minutes), switch off the oven or reduce the temperature to 100 °C (see table).

Preserving Table

Preserves	Temperature in °C	Preserving time until bubbles form Mins.	Continued cooking at 100 °C Mins.	Standing time with oven switched off
Soft fruit				
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	-	-
Unripe gooseberries	160-170	35-45	10-15	-
Stone fruit				
Pears, quinces, plums	160-170	35-45	10-15	-
Vegetables				
Carrots	160-170	50-60	5-10	60
Mushrooms	160-170	40-60	10-15	60
Gherkins	160-170	50-60	-	
Mixed pickles	160-170	50-60	15	-
Kohlrabi, peas, asparagus	160-170	50-60	15-20	-
Beans	160-170	50-60	-	-
Plum purée	160-170 50	45 -	6-8 Hrs.	- -

Cleaning and Care



Warning: For safety reasons cleaning the appliance with a steam jet cleaner or high-pressure water cleaner is **not permissible!**

Exterior of the Appliance

Wipe the front of the appliance with a soft cloth dipped in warm soapy water.

- Do not use scourers, caustic cleaners or abrasive items.
- Use commercially available cleaners for metal fronts.

Oven Interior



Warning: The oven must be switched off and cold before cleaning.



Clean the appliance after each use. This is the easiest way to remove spills and prevents them being burnt on.

1. Switch on the oven lighting for cleaning.
2. Every time you use the oven, wipe it out afterwards with water and washing-up liquid, then dry. Do not use any abrasive items.
3. Clean stubborn dirt with pyroluxe.



Information: There is no need to use an oven spray if you use the pyroluxe cleaning cycle.





Important! If you prefer to use an oven spray, always follow the manufacturer's instructions.


Accessories

Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Cleaning with Pyroluxe

 **Warning:** The oven becomes very hot during this procedure. Children must be kept well away.

 **Important:** All parts and accessories must be removed from the oven before cleaning with pyroluxe.

 If you use the **oven shelf runners** obtainable as special accessories, they must be **removed before cleaning with pyroluxe**.

If oven shelf runners are left in the oven 'tEL' will appear in the time display.

It is not possible to start the pyroluxe cleaning process because of the safety cut-out that protects the oven shelf runners.



Cleaning with pyroluxe


Remove thick deposits in advance by hand.

1. Switch on the appliance using the mains button.
2. Select the additional function PYROLUXE.

The temperature display shows: P1, the time display: 3.15 .




COOK TIME flashes for approx. 5 seconds. Then the time appears in the time display.

 The oven lighting is not in use. Once a pre-determined temperature has been reached the door is locked.

The temperature pilot light will stay on until the door lock is released again.

Carrying out quick pyroluxe cleaning

Proceed as described for "Cleaning with pyroluxe".

1. Hold down the  time selection button while COOK TIME is flashing. The temperature display shows: P2, the time display: 2.15 .

Then the time appears in the time display.





Using the clock function END TIME it is possible to vary the time at which the pyroluxe cleaning will end.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall and then un-hitch at the back.

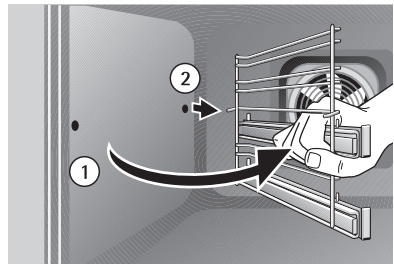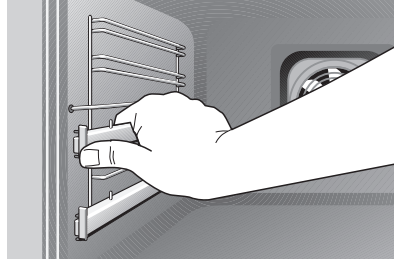


Fitting the shelf support rails



When fitting the rails, ensure that the retaining bolts of the shelf runner rails face forwards.

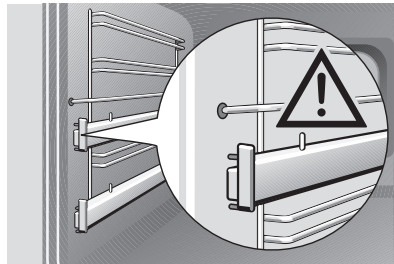

To install, first reattach the rails at the back, then put them into position at the front and press them into place.

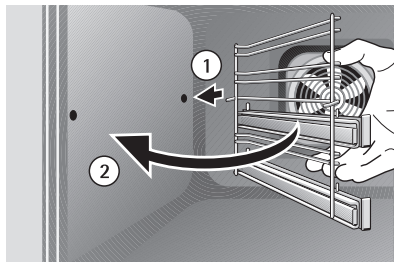

Oven Lighting



Warning: There is a danger of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Disconnect from the electricity supply.



Place a cloth on the oven floor to protect the oven light and glass cover.


Changing the rear oven light/Cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary:
replace halogen oven light bulb with a 40 watt, 230 V, 300 °C heat-resistant, halogen oven light bulb.
3. Refit the glass cover.

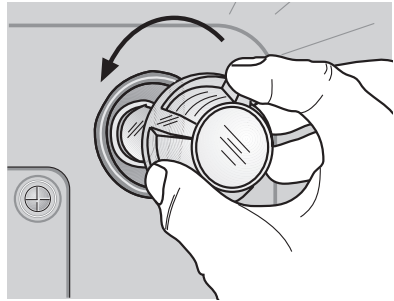


Changing side oven light/Cleaning glass cover

1. Remove the left shelf support rail.
2. Remove the glass cover with the aid of a narrow, blunt implement (e.g., teaspoon) and clean it.
3. If necessary:
replace halogen oven light bulb with a 20 watt, 12 V, 300 °C heat-resistant, halogen oven light bulb.

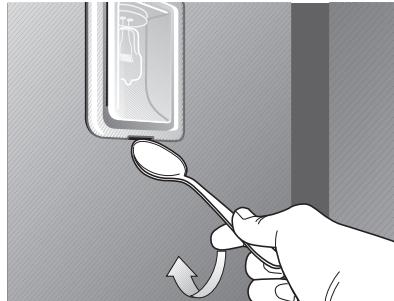

Always use a cloth to take hold of a halogen light to avoid burning on fatty deposits.

4. Refit the glass cover.
5. Insert the shelf support rail.

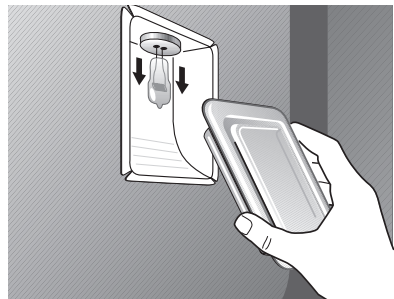


Oven Door

The oven door of your appliance may be removed for cleaning.


Removing the oven door

1. Open the oven door completely.
2. **Completely** fold back the **brass-coloured clamping lever** on **both** door hinges.
3. Grip the oven door with both hands on the sides and close it to about $\frac{3}{4}$ **going past the point of resistance**.
4. Pull the door away from the oven (**Caution: heavy!**).
5. Place the door, with the outer surface downwards, on a soft, flat surface, for example a blanket, to avoid scratches.

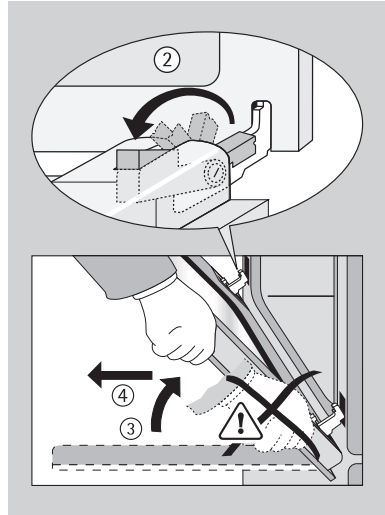

Hanging the oven door

1. With both hands take hold of the sides of the door from the side on which the handle is positioned.
2. Hold the door at an angle of approx. 60° .
3. Slide the door hinges **simultaneously** as far as possible into the two slots on the right and left at the bottom of the oven.
4. Lift the door up until resistance is met and then open fully.
5. Lift the brass-coloured clamping levers on both door hinges back to their original position.
6. Close the oven door.

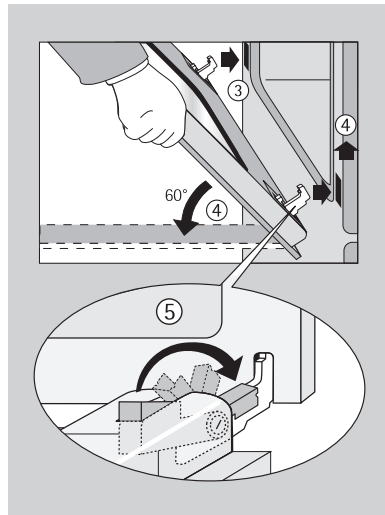

Oven door glass

The oven door is fitted with four sheets of glass set next to one another. The inner sheets can be removed for cleaning.




Caution: The following steps are to be performed only when the oven door has been removed. If the glass is removed while the door is attached, the lighter weight may cause it to spring up and cause injury.



Important! Rough handling of the glass, especially at the edges of the front plate, may cause it to break.


Removing the upper-most glass plate

1. Detach the door and, with the handle downwards, lower it onto a soft, even surface.
2. Grasp the upper plate of glass by its lower edge and push it against the pressure spring and towards the oven door handle until it comes free.
3. Hold the plate gently underneath and slide it out.

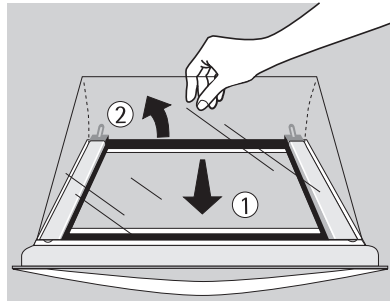

Removing the centre glass plates


1. Grasp the centre plates of glass by their lower edges one after another and push them towards the oven door handle until they come free.
2. Hold the plates gently underneath and slide them out.

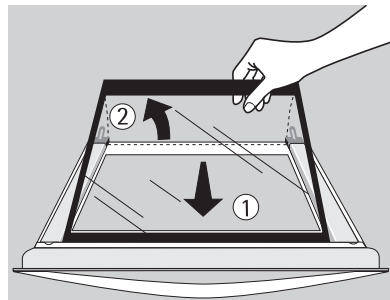

Clean the door glass


Replacing the centre glass plates

1. From above, insert the centre plates obliquely into the retaining frame at the handle, one after another.
2. Lower the centre plates down and push them towards the lower edge of the door as far under the retaining frame as they will go.

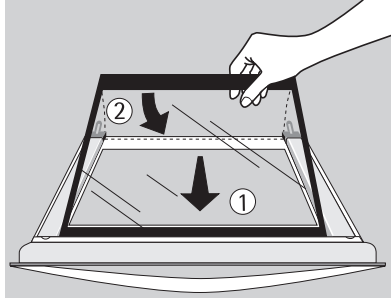

Replacing the upper glass plate

1. From above, insert the upper-most plate obliquely into the retaining frame at the handle.
2. Lower the plate. Place the glass against the pressure spring at the handle, and in front of the retaining frame at the lower edge of the door. Push it into the frame. The glass plates must be firmly attached.

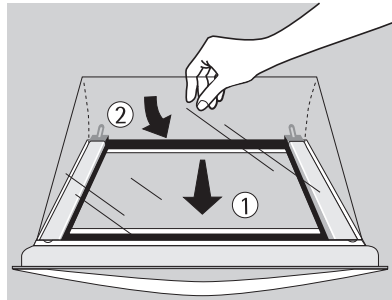

Re-attach the door to the oven

What to do if ...

Symptom	Possible cause	Solution
The oven does not heat up.	The oven has not been switched on.	Switch on the oven.
	The time has not been set.	Set the time.
	The necessary settings have not been made.	Check the settings.
	The circuit breaker (at the household fuse box) has tripped or the fuse has blown.	Check the fuse. If the circuit breaker trips or the fuse blows several times, please call an approved electrician.
	The oven safety cut-out has been activated.	See Safety Cut-out.
The oven lighting does not come on.	The oven light bulb has blown.	Replace the light bulb in the oven (see Cleaning and Care).
Pyroluxe is not functioning ("tEL" appears in the time display)	The oven shelf runner has not been removed	Remove oven shelf runner
The oven door is locked	The appliance is not plugged in; The door lock has been activated.	Plug in the appliance and wait at least 10 seconds until the red temperature pilot light goes off.

If you cannot rectify the fault with the help of the information given above, please contact your specialist dealer or customer service.



Warning: Repairs to the appliance may only be carried out by qualified specialists. Improper repairs can give rise to significant hazards for the user.

If the appliance has been used improperly, the customer service engineer's visit or that of the specialist dealer will not be free of charge, even during the warranty period.

Information for appliances with a metal front:



Due to the cold front of your appliance the inner door glass may steam over briefly if you open the door during or shortly after baking or roasting.

Technical Data

Oven Interior Dimensions

Height x Width x Depth	31 cm x 40 cm x 41 cm
Capacity (usable capacity)	50 l

Regulations, Standards, Directives

This appliance meets the following standards:

- EN 60 335-1 and EN 60 335-2-6
relating to the safety of electric appliances for household use and similar purposes and
- EN 60 350 or DIN 44546 / 44547 / 44548
relating to the operating features of household electric cookers, hobs, ovens, and grills.
- EN 55014-2 / VDE 0875 Part 14-2
- EN 55014 / VDE 0875 Part 14 / 1999-10
- EN 61000-3-2 / VDE 0838 Part 2
- EN 61000-3-3 / VDE 0838 Part 3
relating to basic requirements for electromagnetic compatibility (EMC).

CE This appliance complies with the following EC directives:

- 73/23/EEC dated 19.02.1973 (Low Voltage), including amendment 90/683/EEC
- 89/336/EEC dated 03.05.1989 (EMC) including Amendment 92/31/EEC
- 93/68/EWG (markings and labelling).

Installation Instructions




Important: Any electrical installation work must be carried out by a qualified electrician/competent person.

The oven must be installed according to the instructions supplied.




Safety Instructions for the Installer


- Protection against access to live parts must be guaranteed by the installation.
- The unit in which the appliance is fitted must satisfy the requirements of DIN 68930 in respect of stability.
- This oven must be installed by qualified personnel to the relevant Standards.
- This oven is heavy. Take care when moving it
- Remove all packaging, both inside and outside the oven before using the oven.
- Do not attempt to modify the oven in any way.
- The built-in cooker and hobs are fitted with special connector systems. They may only be combined with units of the corresponding system.

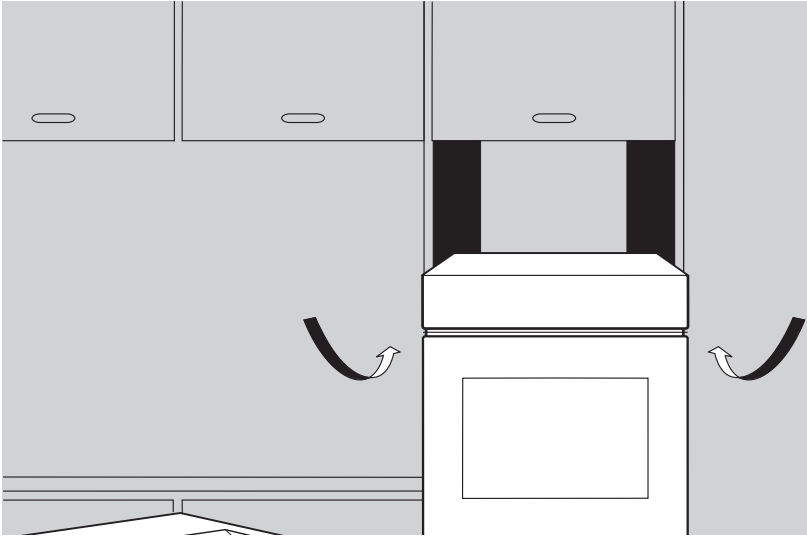


1 This oven can be installed either in-column as shown or under a counter

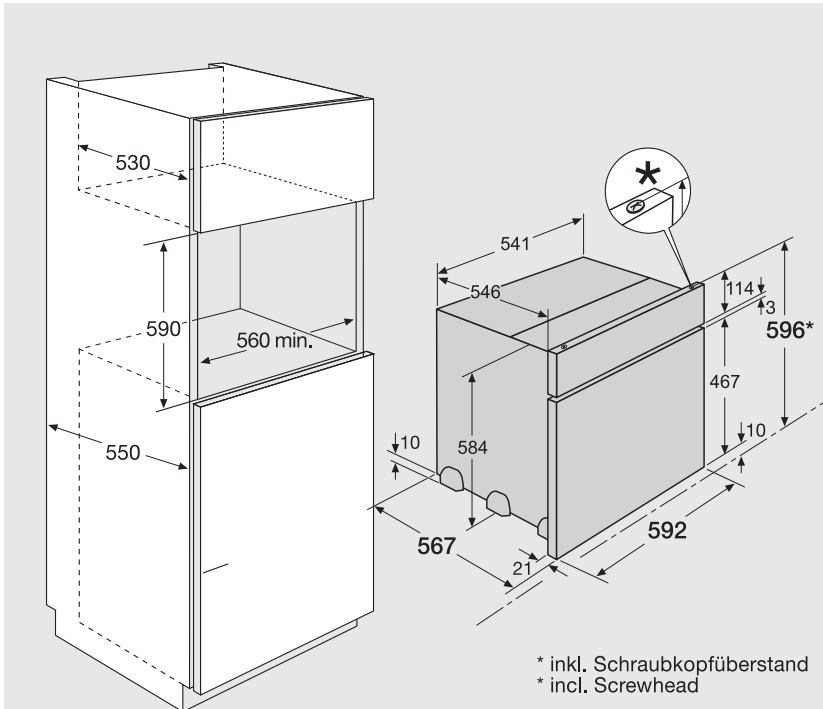

2

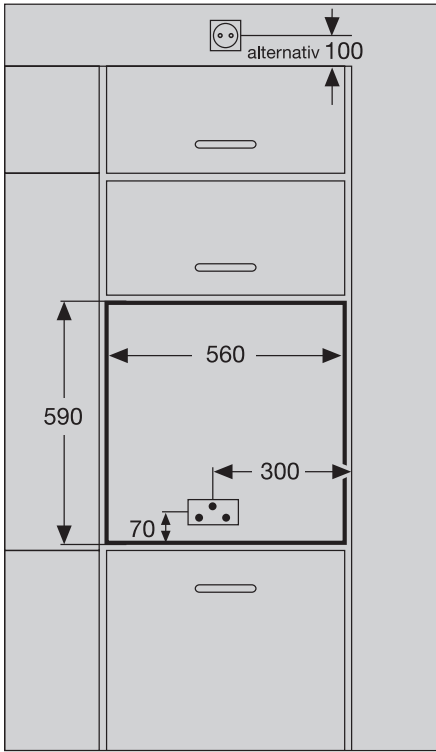


3

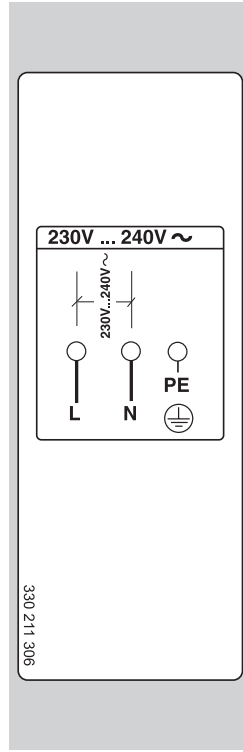


330 211 306


4

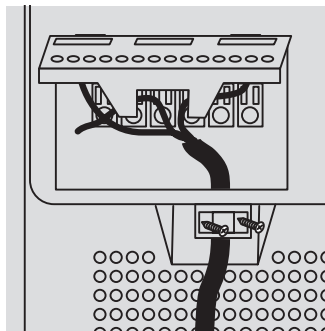


5

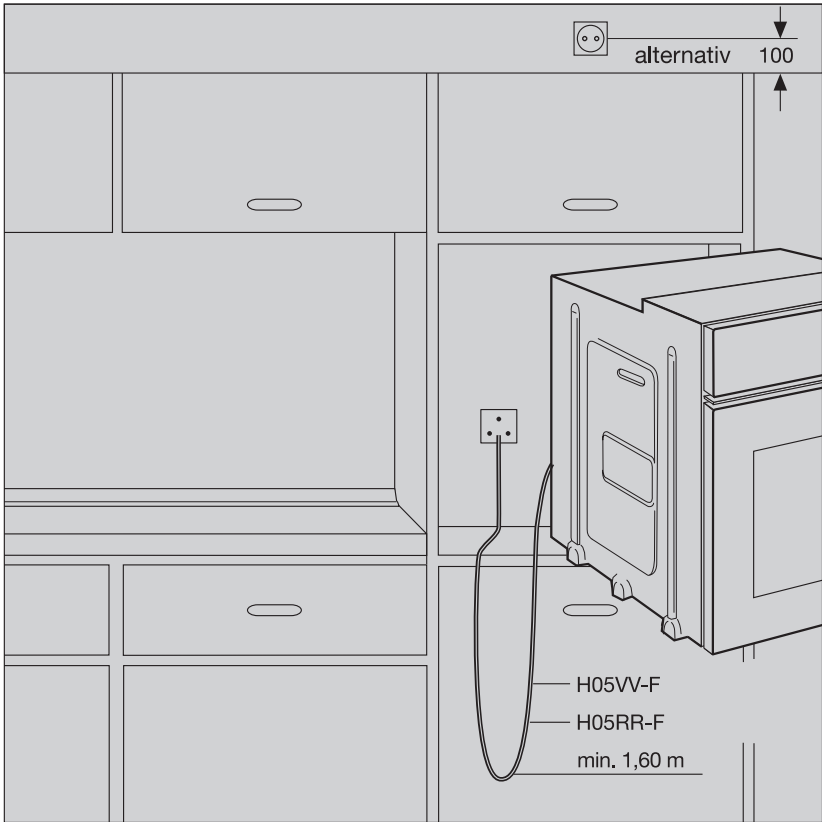


6

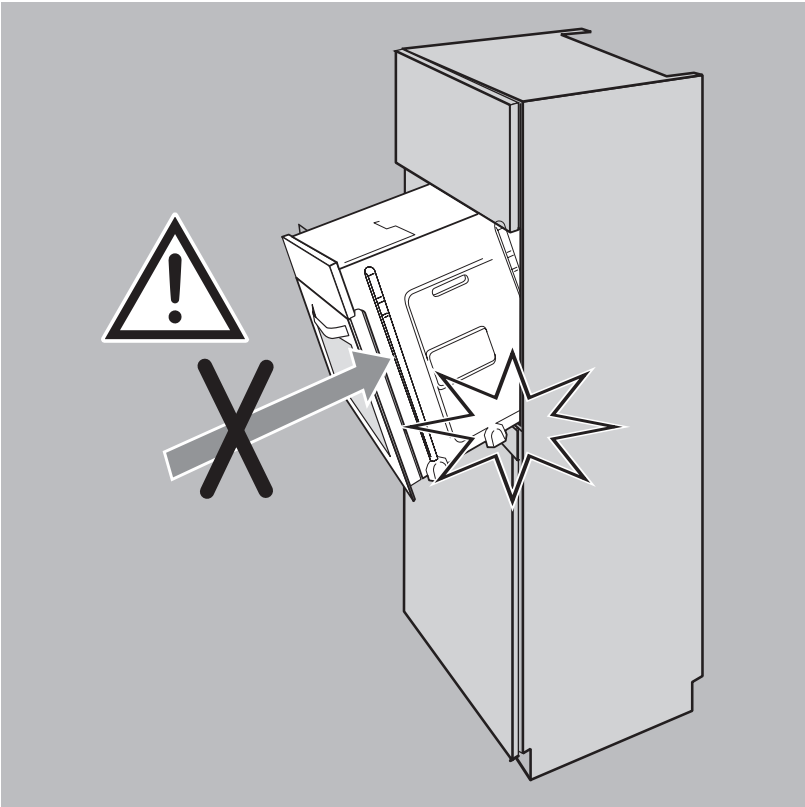

7

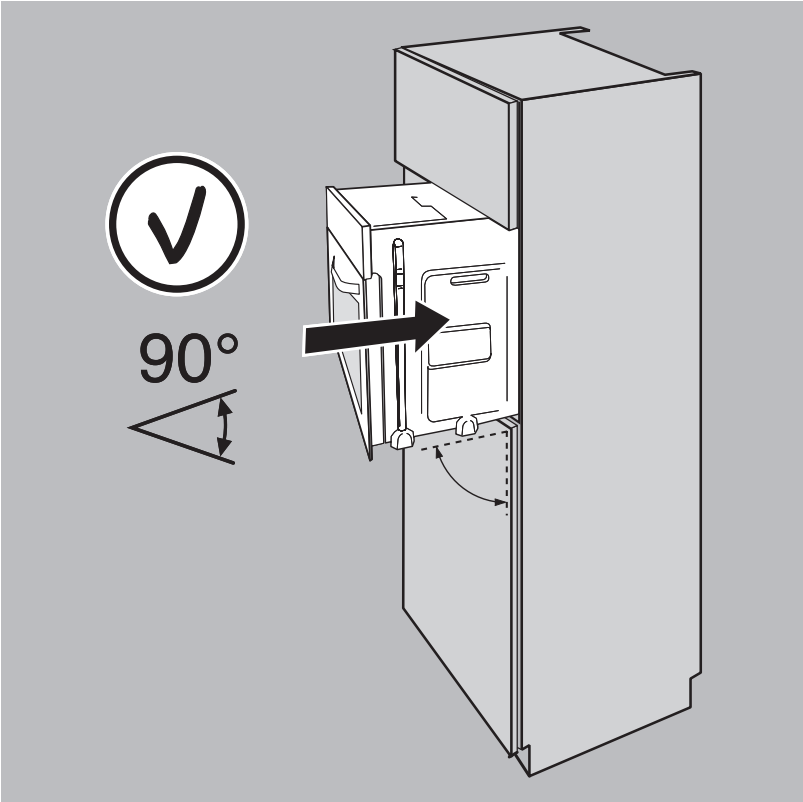

8

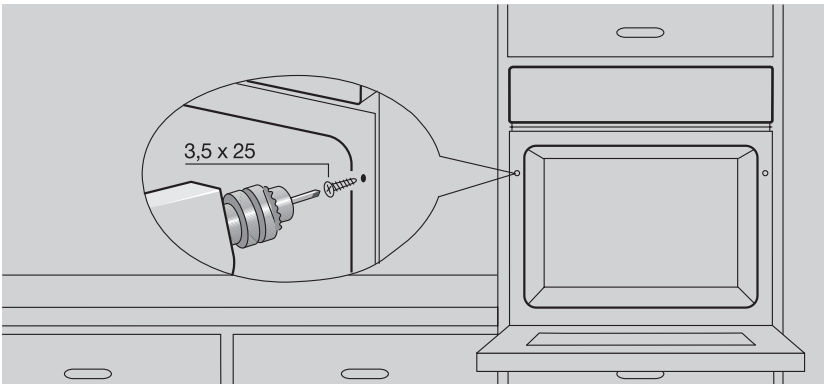

9

Warranty conditions

Great Britain

Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.
The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.
This guarantee does not cover such parts as light bulbs, removable glassware or plastic, dust bags or filters.
3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer's service or authorised agent). AEG reserves the right to stipulate the place of the repair (i. e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The purchaser's statutory rights are not affected by this guarantee.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i. e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899

Customer Service Centres

Great Britain

For general enquiries or information regarding AEG appliances contact:
Customer Services Department
AEG Domestic Appliances
55-77 High Street
Slough
Berkshire
SL1 1DZ
Tel.: 08705 350 350

INDEX

A

Additional Functions 21

B

Baking 15

Bottom heat 16

Button locking feature 34

C

Cakes 22

Child safety feature 33

Cleaning

accessories 59

initial cleaning 13

oven door 64

oven interior 59

pyroluxe 60

Clock 14

functions 26

setting the time 12, 26

Combination shelf 11

Control panel 8

Conventional 15

Customer Service 77

D

Defrosting 16

Description of the appliance 8

Disposal 7

Door 64

Dual grill 16

F

Fan cooking 15

K

Keeping Food Warm 16

L

Light 16

Lighting 18, 63

M

Meat probe 24

O

Oven

accessories 11

door 64

functions 15

light 63

operating 14

P

Pizza 21

Poultry 23

Preserving 57

Pyroluxe 23, 60

R

Repairs 5

Rotitherm 15

S

Safety 5

Single grill 16

Steam vent 10

T

Tables and tips 36

Time display 32

U

Universal baking tray 11

W

Warranty 76

Service and Spare parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

08705 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.


For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading „What to do if.....“

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate).
5. The purchase date

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

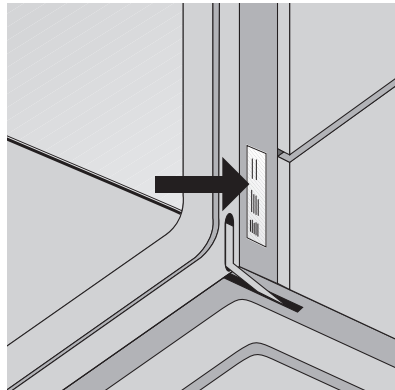

Customer Care

For general enquiries concerning your AEG appliance or for further information on AEG products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.aeghome.co.uk.

Customer Care Department
AEG Domestic Appliances
55-77 High Street
Slough
Berkshire, SL1 1DZ

Tel. 08705 350350 (*)

(*) Calls may be recorded for training purposes

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 947 673-A-040902-08

Subject to change without notice