



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EOB53000. You'll find the answers to all your questions on the AEG-ELECTROLUX EOB53000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EOB53000**  
**User guide AEG-ELECTROLUX EOB53000**  
**Operating instructions AEG-ELECTROLUX EOB53000**  
**Instructions for use AEG-ELECTROLUX EOB53000**  
**Instruction manual AEG-ELECTROLUX EOB53000**



user manual

Built-In Electric Oven

EOB53000



[Your user manual](#)  
[AEG-ELECTROLUX EOB53000](#)

**Manual abstract:**

*Roasting Pan For baking and roasting or as a pan for collecting fat. 10 electrolux before using for the first time Before using for the first time Setting and changing the current time The oven only operates when the time has been set. When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time flashes automatically. 1. To change the time that has already been set, press the Selection button repeatedly, until the function indicator Time flashes. 2. Set the current time using the button. or After approx. 5 seconds, the flashing stops and the clock displays the time of day set. The appliance is now ready to use.*

*The time can only be changed if neither of the automatic functions (Cook time or End time ) have been set. before using for the first time electrolux 11 Initial Cleaning Before using the oven for the first time you should clean it thoroughly. Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged. To clean any metal front panels use commercially available cleaning agents. 1.*

*Turn the oven function switch to oven lighting . 2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid. 3. Then wash out the oven with warm water and washing-up liquid and dry.*

*4. Wipe the front of the appliance with a damp cloth. 12 electrolux operating the oven Operating the Oven Switching the Oven On and Off Oven Power Indicator Temperature Pilot Light Oven Functions Temperature selector 1. Turn the oven functions control knob to the desired function. 2. Turn the temperature control knob to the desired temperature. The power indicator is lit while the oven is on. The temperature power indicator is lit while the oven is heating up. 3. To turn the oven off, turn the oven functions and temperature control knob back to the Off position.*

*Cooling fan The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically. operating the oven electrolux 13 Oven Functions The oven has the following functions: Oven function Light Convection with ring heating element Defrost Use Heating element/ fan With this function you can light up the --oven interior, e.g. for cleaning. For baking on up to three oven shelves at the same time. Set the oven temperatures 20-40 °C lower than when using Conventional. For defrosting e. g. gateaux and flans, butter, bread, fruit or other frozen foods.*

*For grilling flat food items in large quantities and for toasting. Ring element, fan Fan Dual grill Grill, top heat 14 electrolux operating the oven Inserting the Oven Shelf and the Roasting Pan Shelf runner safety and anti-tip device As a shelf runner safety device all insertable components have a small curved indentation at the bottom on the right and left-hand edge. Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping. Inserting the roasting pan: Push the roasting pan between the guide bars of the selected oven level.*

*operating the oven electrolux 15 Inserting the oven shelf: Insert the oven shelf so that the feet point downwards. Push the oven shelf between the guide bars of the selected oven level. The high rim around the oven shelf is an additional device to prevent cookware from slipping. Inserting the oven shelf and the roasting pan together: Lay the oven shelf on the roasting pan. Push the roasting pan between the guide bars of the selected oven level.*

*16 electrolux operating the oven Grill set The grill set consists of grill and roasting pan. The grill can used on both sides..*



[Your user manual](#)

[AEG-ELECTROLUX EOB53000](#)