

The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say “Oh! How did you know? That’s exactly what I wanted!” That’s the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design’s sake, but design for the user’s sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we’re thinking of you, you know we mean just that.

The “Thinking of you” promise from Electrolux goes beyond meeting the needs of today’s consumers. It also means we’re committed to making appliances safe for the environment—now and for future generations.

Electrolux. Thinking of you.

Share more of our thinking at [www.electrolux.com](http://www.electrolux.com)



user manual  
**built-in**  
**rotary control ovens**  
EOB307X, EOB305X, EOB303X

Congratulations

Congratulations and thank you for choosing our built in oven. We are sure you will find your new oven a pleasure to use. Before you use the oven, we recommend that you read through the whole user manual, which provides the description of the built in oven and its functions. To avoid the risks that are always present when you use an electric appliance, it is important that the oven is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this user manual for future reference and pass it on to any future owners. After unpacking the built in oven please check it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Customer Care Centre.

Contents

 
• Control panel EOB307X	ii
• Control panel EOB305X	iii
• Control panel EOB303X	iii
• Important safety instructions	1
• Before using your oven	2
• Cooking functions	3
• Operating sequence	3
• Cooking with the 3 button timer – EOB307X only	5
• Cooking guide	6
• Grilling guide	8
• Dealing with cooking problems	9
• Maintenance and cleaning	10
• Cleaning your accessories	11
• Oven door removal	12
• Troubleshooting	15
• Installation	15
• Technical specifications	17
• Notes	18
• Warranty	20



Information on disposal for users


- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Control panel (EOB307X)

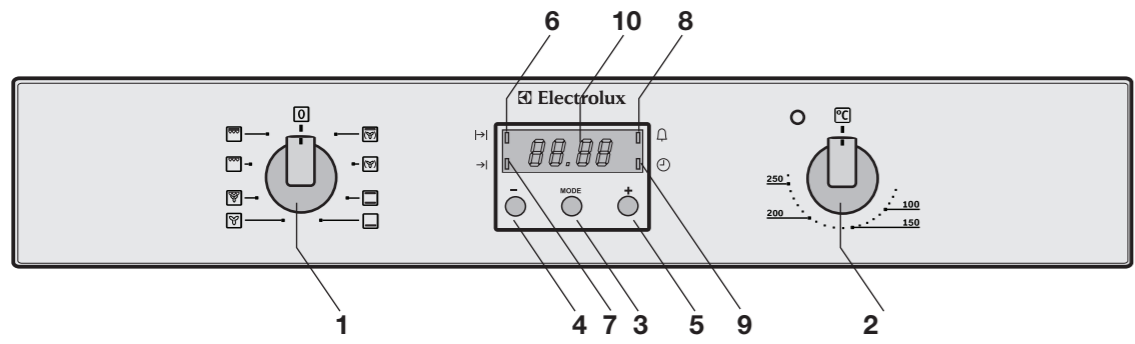


- |  |                              |                          |
|--|------------------------------|--------------------------|
| <b>1</b> Oven function selector          | <b>5</b> Increase time       | <b>9</b> Clock indicator |
| <b>2</b> Oven/grill temperature selector | <b>6</b> Cook time indicator | <b>10</b> Display        |
| <b>3</b> Mode selector                   | <b>7</b> End time indicator  |                          |
| <b>4</b> Decrease time                   | <b>8</b> Timer indicator     |                          |

 Control panel (EOB305X)

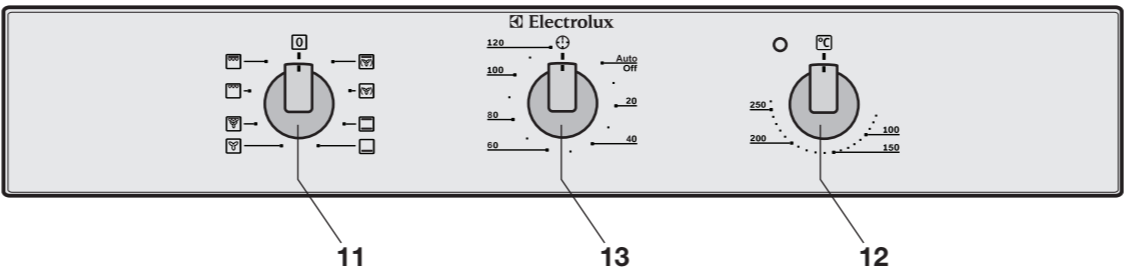

- |   |
|---|
| <b>11</b> Oven function selector          |
| <b>12</b> Oven/grill temperature selector |
| <b>13</b> 2 hour timer                    |

 Control panel (EOB303X)

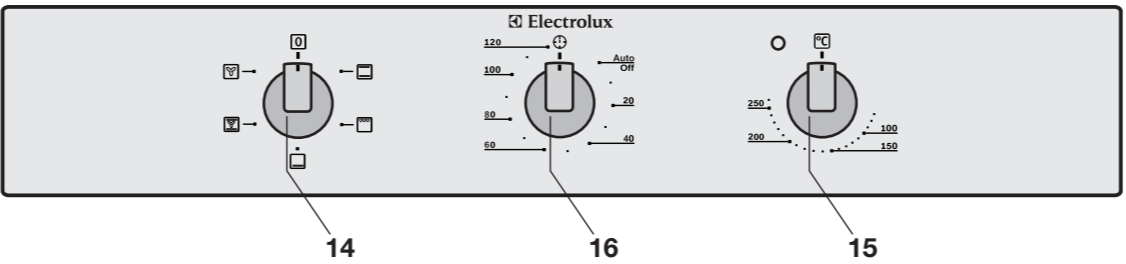

- |   |
|---|
| <b>14</b> Oven function selector          |
| <b>15</b> Oven/grill temperature selector |
| <b>16</b> 2 hour timer                    |

