



user manual

Oven

EOC 69400

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

Contents

Safety tips	2	What to do if...	34
Description of the appliance	3	Disposal	35
The electronic oven controls	6	Installation	35
Operation	9	European Guarantee	38
Tips, tables and advice	16	Consumer services	40
Care and maintenance	29		



Subject to change without notice

Safety tips

Electrical safety

- This appliance must only be connected by a **qualified electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch the appliance off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Care Department or your dealer.

Children's safety

- Never leave small children unattended while the appliance is in operation.
- To protect against unauthorised use the appliance is equipped with a switch-on lock.


Safety during use

- Persons (including children) who, due to their physical, sensory or mental capacity or their inexperience or lack of knowledge are unable to use the appliance safely should not operate this appliance without the supervision or instruction of a responsible person.
- This appliance should be used only for normal domestic cooking, roasting and baking of food.
- Be careful if connecting electrical appliances to sockets near to this appliance. Electrical leads must **not** be caught under the hot oven door.

 **Warning!** WARNING: Risk of burns! The oven interior becomes hot when in use.

- If you use ingredients containing alcohol in the oven, a slightly flammable mixture of alcohol and air may ensue. In this case, be careful when opening the door. Do not handle any sources of heat, sparks or naked flames when doing so.

Information on acrylamides

-  According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking where possible at low temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to and discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.

- Do not store any moist foods inside the oven. These could damage the oven enamel.
- Do not leave dishes uncovered in the oven after switching off the cooling fan. Moisture may form inside the oven or on the glass door and also get onto the units.


affect the oven's suitability for normal and correct use. They therefore do not constitute a defect in terms of warranty law.

i Note: Enamel coating

Changes in the colour of the oven's enamel surface as a result of use do not

Description of the appliance

General view

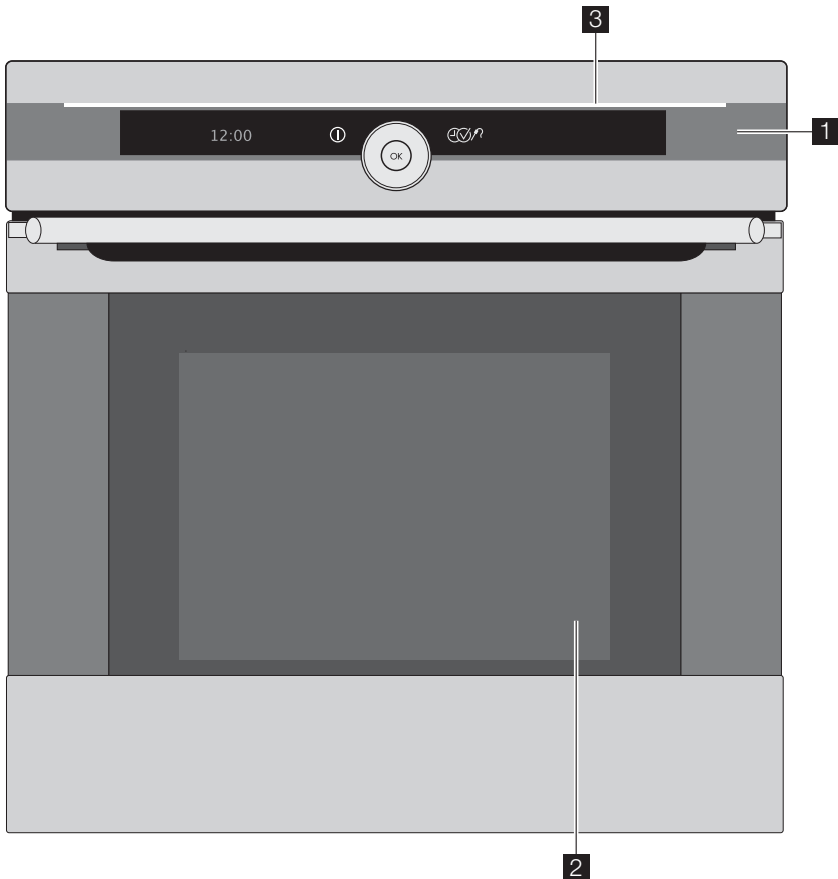

- 1** Operating panel
- 2** Oven door
- 3** Light bar


- i** If no function has been selected and nothing has been changed on the appliance, after 2 minutes the appliance

switches itself off but the light bar remains on.

To switch the light bar off, switch the appliance on and off again.

Operating panel

Overview

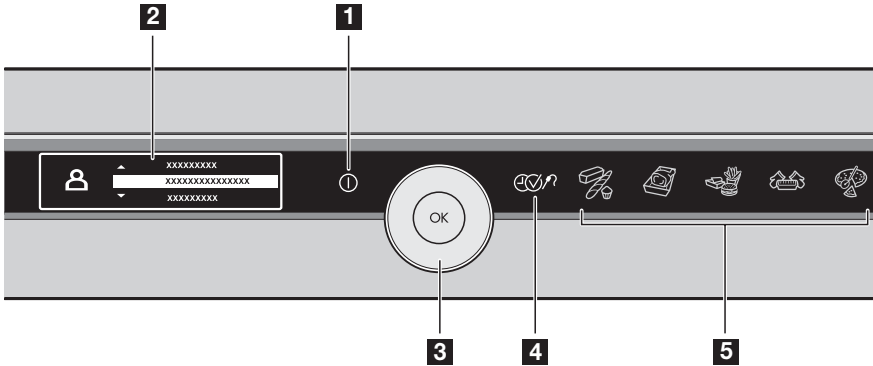

- 1** ON/OFF-Button, to switch on, press and hold
- 2** Display
- 3** Selector with OK key for selecting a menu option
- 4** Additional Functions key
- 5** Sensor keys for selecting a cooking category

If the oven has been switched off, the time of day is shown. If the oven is still hot, a bar appears in the display and shows the residual heat remaining in the oven. When the oven is switched on, the display shows the menu and information about the oven's operating status.


Display

The information shown in the display varies according to the oven's operating status.

Symbols	
	Minute Minder
	Time of Day
	Duration
	End Time
	Running Time
	Oven Temperature
	Calculation
	Rapid Heat Up
	Temperature Display

Oven layout

- 1** Top heat and grill element
- 2** Oven light bulb
- 3** Meat probe socket
- 4** Grease filter
- 5** Oven light bulb
- 6** Ring heating element, fan
- 7** Bottom Heat
- 8** Side rails, removable
- 9** Oven levels
- 10** Rotary spit drive mechanism
- 11** Smell filter

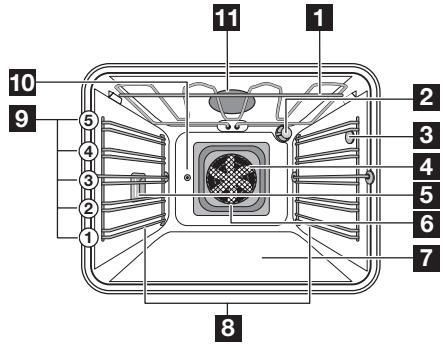


Oven accessories

Tray




For cakes, biscuits and pastry.

Meat/Drip pan

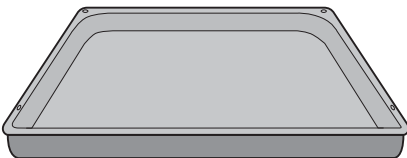


For baking and roasting or for use as a tray to catch grease.

Meat probe

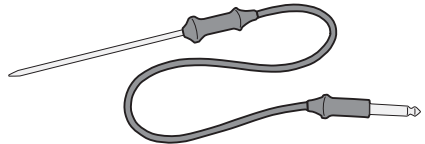


For determining exactly how well done pieces of meat are during cooking.

Rotary spit with support

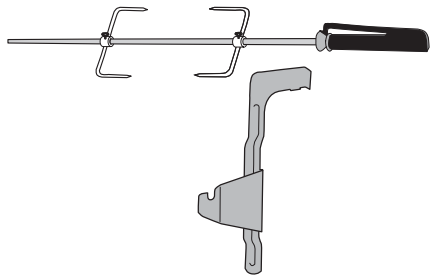

For roasting larger pieces of meat and poultry.

Shelf

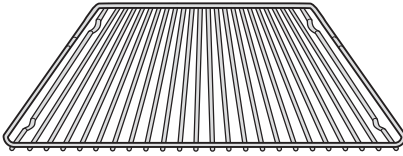

For cookware, cake tins, roasts and for grilling food.

The electronic oven controls

Menus and operation

You use the menu to operate the oven. The Main Menu contains:

Main Menu
Auto Cooking
Heating Functions
Cleaning Menu
Basic Settings
Specials

Selecting the menu options

- Turn the Selector in a clockwise direction to get to the next function.
- Turn the Selector anticlockwise to get to the previous menu function.

Opening the Main Menu

To call up the Main Menu, press the On/Off key. If set to the factory settings, the "Auto Cooking" function is selected.

Opening "Auto Cooking" Menu

1. Press the sensor key for the desired category.
2. Use the Selector to select the desired dish or the subcategory.
3. Follow the instructions in the display.

Selecting a menu option in the menu

1. Use the Selector to select the desired menu option.
2. When the desired menu option is shown in the display, press the OK key to call it up.

i Use "Back" at the end of each menu to get back to the previous menu.





Auto Cooking

General

The "Auto Cooking" menu is divided into five categories. These can be used to select the optimum setting for a variety of dishes. Press the relevant sensor key. The categories are divided into various subcategories and dishes, which are then programmed with the appropriate settings.

i You can find an overview of all the categories and dishes in the "Auto Cooking" menu in the accompanying Quick User's Guide. Assistance as to how the dishes have been classified into the various categories can be found in the accompanying Cooking and Baking Overview.

Symbol	Category
	Baking

Symbol	Category
	Roasting
	Convenience food
	Oven dishes
	Pizza

Operating principle

When using "Auto Cooking" the oven calculates the required cooking time.

Unlike standard ovens, you do not need to set a type of heat or cooking time. Instead, you simply select the desired food type from the category menu.

i "Auto Cooking" is only possible on one oven level.

Only use the grease filter when roasting. Otherwise, the oven is unable to calculate the optimum times.

To attain optimum results, you should use the recommended cookware and/or accessories. You can find further information in the section "Tips, Tables and Advice".

Heating Functions

For manually setting Heating Functions and cooking temperature.

Heating Functions	
Fan Cooking	For baking on up to three levels simultaneously. Set the oven temperatures 20 – 40° lower than for Conventional Cooking
Conventional Cooking	For baking and roasting on one level
Pizza Setting	For baking on one level for dishes that require intensive browning and a crispy base. Set the oven temperatures 20 – 40° lower than for Conventional Cooking
Turbo Grill	For roasting larger pieces of meat or poultry on one level. Also suitable for gratins and browning.
Turbo Grill + Spit Roast	
Economy Grill	For grilling flat foods which are placed in the middle of the rack and for toasting.
Economy Grill + Spit Roast	For grilling a chicken or small rolled roasts
Dual Grill	For grilling flat foods in large quantities and for toasting.
Dual Grill + Spit Roast	For grilling two chickens or one rolled roast
Bottom Heat	For baking cakes with crispy or crusty bases.
Slow Cook	For preparing particularly tender, succulent roasts

Specials

For selecting additional heating functions

Specials	
Defrost	
Drying	
Keep Warm	
Preserving	
Plate Warming	

Basic Settings

For changing various " Basic Settings " of the oven.


Basic Settings	
Set time of day	Sets current time on the clock
Time Indication	When on, the time of day is displayed when the oven is switched off When off, the display switches itself off completely
Contrast	Adjusts the display
Display Brightness	Adjusts the display
Set Language	
Buzzer Volume	
Key Tones	Switches key tones on or off
Alarm/Error Tones	Switches alarm/error tones on or off
Smell Filter	Smell Filter activate or deactivate
Calibration	Adapts oven to the kitchen environment, e.g. after moving house
Service	Indicates the version of the software, the configuration and the period of operation
Factory Settings	Resets all basic settings to the original factory settings

Cleaning Menu

Pyrolytic cleaning and other functions.

Cleaning Menu	
Pyrolytic	To clean the oven using pyrolytic cleaning
Cleaning Assistant	Reminds you of various points that should be noted prior to pyrolytic cleaning. Can be switched on or off.
Cleaning Reminder	Recognises when pyrolytic cleaning is required and alerts the user to this fact. Can be switched on or off.

Additional Functions

You can use the Additional Functions key  to set the available Additional Functions.

Additional Functions menu
Minute Minder
KEY LOCK
Duration/End Time
Meatprobe

Operation

Prior to first use

- i** Before using the oven, first of all the language, then the contrast of the display, the brightness and the current time of day must be set.

When you switch on the oven for the first time, "SET LANGUAGE" appears in the display after a few seconds.

1. Use the Selector to select the desired setting
2. Then press the OK key to confirm your setting.

Make the additional basic settings required in the same way.

Adapting oven to the kitchen environment

For optimum results using "Auto Cooking" the oven must be adjusted to suit the environment. This procedure is called Calibration and takes approximately 4 hours.

- i** If you only want to use the oven for manual cooking, it does not need to be calibrated.

- i** Please take note of the following points prior to Calibration
- **Calibration must take place** at a room temperature below 35°C.
 - For Calibration, the oven must be installed in its **final location**.
 - For Calibration, connect the oven to the mains supply and do not disconnect it again.
 - Be sure to remove the grease filter prior to Calibration.
 - If the installation location, electrical connection or one of the other points listed above is changed, the oven

must always be recalibrated so that the "Auto Cooking" function delivers optimum results.

You will find the calibration in the "Basic Settings", "Calibration" menu.

Following calibration, the appliance is ready to be used, as soon as it has cooled down.

Initial cleaning

The oven should be thoroughly cleaned prior to first use. Wipe all parts and the interior with a solution of water and washing-up liquid.

Important! Do not use any sharp or abrasive cleaning materials. These could damage the surface.

Switching on and off

- Press the ON/OFF button.

- i** If the oven has been switched off, the time of day is shown. If the oven is still hot, a bar appears in the display and shows the residual heat remaining in the oven.

Auto Cooking

1. Switch the oven on.
2. Press the key for the desired category.
 - The available dishes or subcategories will be shown.
3. Select the desired category or the dish directly.
4. Follow the instructions on the display.

Example: Frozen Pizza Calzone

1. Switch the oven on.
2. Press the Pizza button.

- Four different types of pizza are shown.



- Use Selector to select "Frozen Pizza".
- Then press the OK key to call up the sub-category.
 - Three different types of frozen pizza can be selected from.

 


- Use the Selector to select "Calzone".
- Then press the OK key to call up this dish.
- Follow the instructions on the display. After the set time has expired, the heating function with the set temperature can be extended by 20 minutes within the next 5 minutes, if the baking result is not yet satisfactory.

Manual baking and roasting

- i** It is possible to change the oven function or the temperature while the manual baking and roasting is in operation. For more information see the next paragraph.

- Switch the oven on.
- Use the Selector and then the OK key to select "Heating Functions".
 - The heating functions will be shown.
- Select the desired function.
 - A suggested temperature is indicated in the display.



- Change the temperature using the Selector, if you wish.
- Then press the OK key to confirm the oven temperature.
- Press the Additional Functions key.
 - The cooking time will show in the display.



- Turn the Selector to set the cooking time.
- Then press the OK key to confirm the cooking time.
 - The display for the end time will flash.
- Turn the Selector to set the end time.
- Then press the OK key to confirm the end time.
 - The oven will begin to heat or will automatically turn itself on and off at the desired time.

- i** After the set time has expired, the heating function with the set temperature can be extended by 20 minutes within the next 5 minutes, if the baking result is not yet satisfactory.

Changing the temperature while the 'manual baking and roasting' is running

- To change the temperature after starting the oven, turn the selector to the right.
- The frame will mark the right part of the display (where present temperature is displayed). Press the OK key to make the selection.
- The triangle next to the present temperature will start blinking. Then using the selector choose the desired new temperature.
- Accept the new temperature with the OK key.

Changing the oven functions while the 'manual baking and roasting' is running

- To change the oven function after the oven has started turn the selector to the left.
- The frame will mark the left part of the display (where current oven function is displayed). Press OK key to make the selection.
- Choose the desired new oven function.
- Accept the new oven function with the OK key.


Meatprobe

When using the Meatprobe the oven automatically turns itself off when the desired core temperature has been reached.

Important! Important: Only the Meatprobe supplied may be used. If replacing, please use only genuine replacement parts

Using the meatprobe

1. Switch on the oven.
2. Place the meat probe in the meat. The tip of the Meatprobe must be in the middle of the piece of meat.

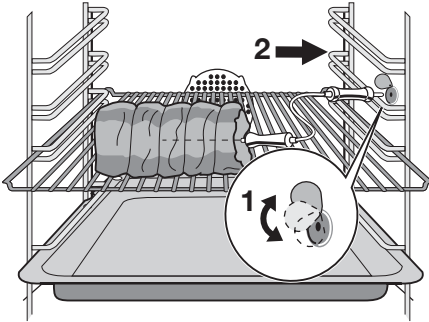

3. Insert the plug of the Meatprobe as far as it will go into the socket on the side wall of the oven.
 - A suggestion for the core temperature will show in the display.



4. Using the Selector, set the desired core temperature.
5. Then press the OK key to confirm the temperature.
6. Set the heating function and the desired oven temperature.

i The core temperature is displayed from 30°

i Within a few minutes, a provisional end time is calculated, at which the core temperature set will be reached. This time is constantly recalculated and updated in the display. The system requires that the Meatprobe is pushed into the meat and into the socket at the beginning of the cooking process and that it is not removed during the cooking process.

Changing the core temperature at a later time

- Repeatedly press the Additional Functions key until the set core temperature appears in the display.
- If necessary, change the temperature using Selector.

Setting the Minute Minder

You can set an alarm using the "Minute Minder" function.

1. Repeatedly press the Additional Functions key until "Minute Minder" appears in the display.



 
2. Turn the Selector to set the desired alarm time.
3. Then press the OK key and the time will count down.

i Press the OK key to switch off the alarm.

KEY LOCK

You can switch the KEY LOCK on and off using the Additional Functions key. The activated KEY LOCK prevents unintentional changing of settings.

1. Repeatedly press the Additional Functions key until "KEY LOCK" appears in the display.



2. Follow the instructions on the display.

Switch-on Lock

The appliance can be locked using the "Switch-on Lock" function. This can prevent e.g. children switching on the appliance when they shouldn't.

Switching the switch-on lock on/off (no function must be selected)


- Simultaneously press "Baking" and "Pizza" until a signal sounds.

When the appliance is locked, "Appliance locked." appears in the display


Mechanical door lock

When the appliance is delivered, the door lock is deactivated.


Activating the door lock

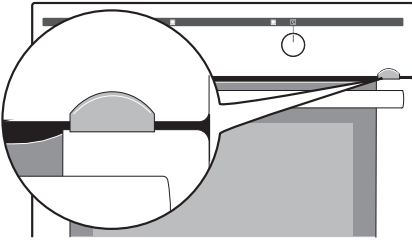


1. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

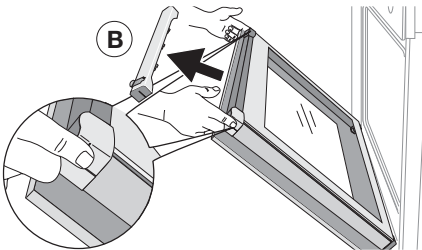



2. Activate lever: Remove lever (1), move it 4 mm to the left (2) and re-insert (3).

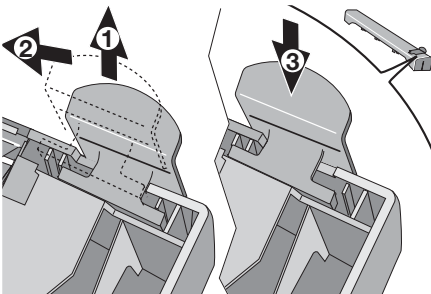


3. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

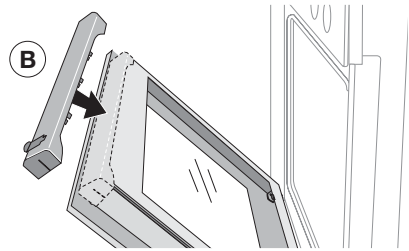

Important! There is a guide bar (C) on the open side of the door trim (B). This must be pushed between the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

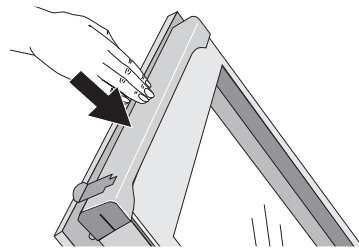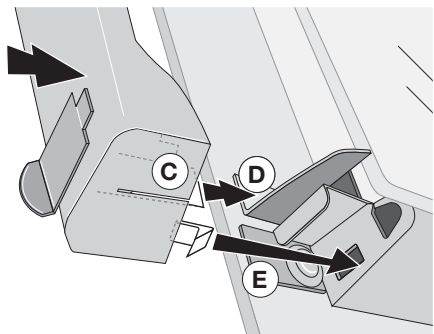

To open the oven door.

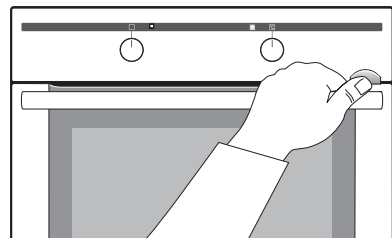

1. Keep lever pressed.

2. Open the door.

To close the oven door


Close door without pressing the lever.

To deactivate door lock


To deactivate the door lock, the lever is moved to the right again. Proceed as described above.

Important! Switching off the appliance does not remove the mechanical door lock.


Removing door lock

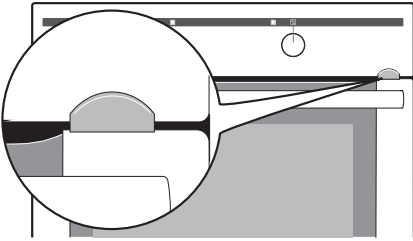


1. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

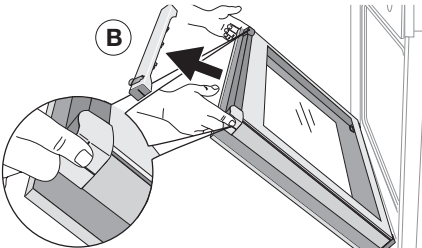


2. Demount lever: Remove lever (1).

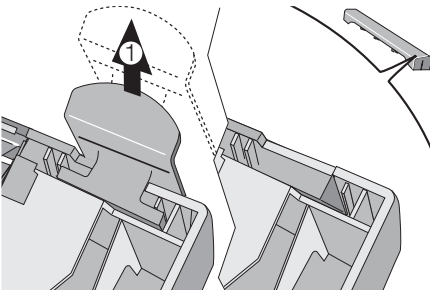



3. Remove trim from the under side of the door trim (B)(2) and push in (3).

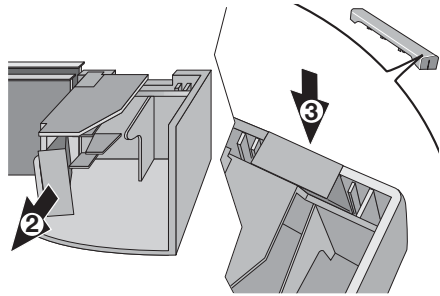


4. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

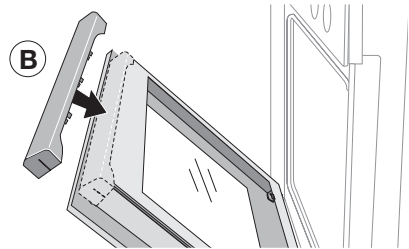

Important! There is a guide bar (C) on the open side of the door trim (B). This must be pushed between the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

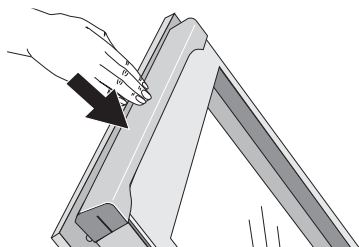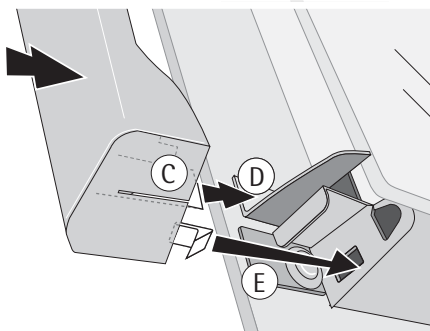

5. Close the oven door.

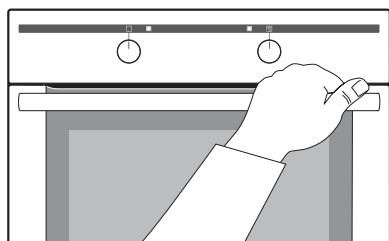

Auto switch-off of the oven

i If the oven is not switched off after a certain time, or if the temperature is not modified, it automatically switches itself off.

The oven automatically switches itself off when the oven temperature is:

- 30 -120°C after 12.5 hours
- 120 -200°C after 8.5 hours
- 200 -250°C after 5.5 hours
- 250 - max°C after 3.0 hours

Starting up after an Automatic switch-off

Press the OK key on the Selector

Smell Filter

The Smell Filter is activated in the "Basic Settings" menu. If the Smell Filter is switched on, it will start automatically during baking and roasting.

i The filter is deactivated when the appliance is set to the factory settings. If the Smell Filter is switched on, the oven uses more energy. Even if the Smell Filter is switched off, it will switch on after every 100 hours of operation during baking or roasting in order to clean itself. The Smell Filter operates during pyrolytic cleaning of the oven, even if it is switched off at the time of cleaning.


1. Select "Basic Settings" from the Main menu.
2. Then press the OK key to call up this menu.
3. Use the Selector to select "Smell Filter".
4. Then press the OK key to make the changes.
5. Use the Selector to activate (ON) or deactivate (OFF) the filter.
6. Press the OK key to confirm the setting. The setting is changed.

Inserting the shelf, tray and roasting tray

i To increase shelf runner safety, all insertable components have a small curved indentation on the right and left-hand edge. Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping.


Push the tray or roasting tray

Push the tray or roasting tray between the guide bars of the selected oven level.

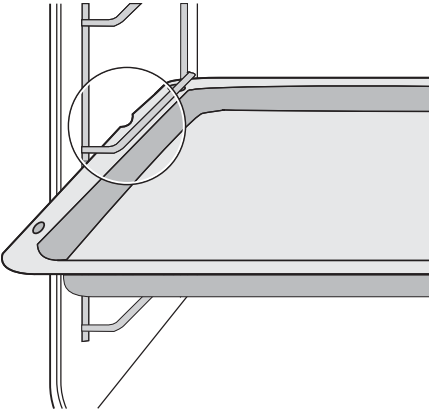


Inserting the oven shelf:

Insert the oven shelf so that the feet point downwards. Push the oven shelf between the guide bars of the selected oven level.

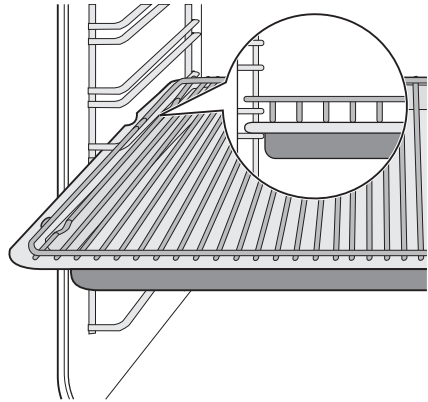

Inserting/Removing the grease filter


Only insert the grease filter when roasting in order to protect the rear wall heating element from spitting fat.

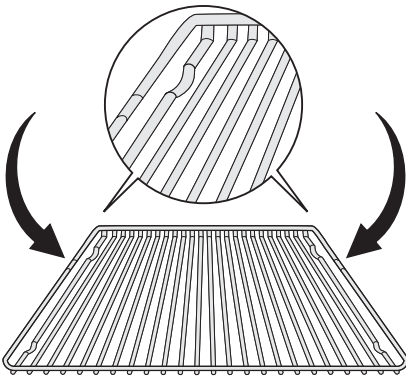

The high rim around the oven shelf is an additional device to prevent cookware from slipping off.

Inserting the oven shelf and roasting tray together:

Place the shelf on the roasting tray. Slide the roasting tray **between** the guide bars of the selected oven level.

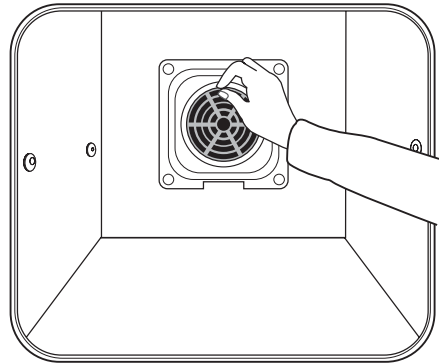

Inserting the grease filter


Hold the grease filter by the tab and insert the two mounts downwards into the opening on the rear wall of the oven (fan opening).

Remove the grease filter

Hold the grease filter by the tab, unhook it and lift out.

Rotary spit


Attaching the food to be grilled

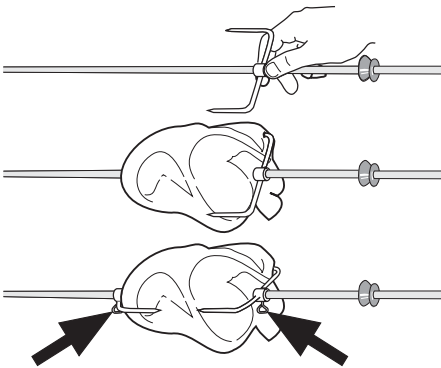

1. Place the fork on the rotary spit.
2. Slide the item to be grilled and the second fork onto the spit.

- i** Centre the item to be grilled, so that it is in the middle.
3. Tighten the forks.


Inserting the rotary spit

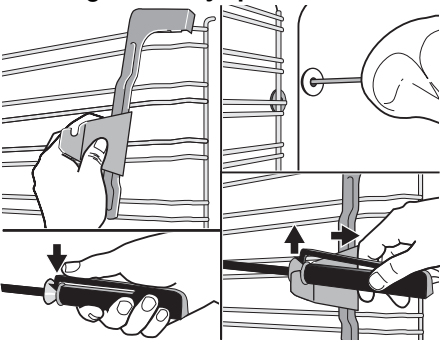

1. Insert the roasting tray into the lowest oven level.
2. Insert the rotary spit support into the 5th level from the bottom at the front right-hand side.

3. Attach the handle and press the clip down.

- i** The clip must remain depressed to ensure that the handle fits securely on the rotary spit.
4. Press the end of the spit into the drive socket on the left-hand side of the rear wall.
 5. Place the groove in front of the handle in the notch in the rotary spit support provided for this purpose.
 6. Remove the handle.
 7. Set the heating function and desired temperature in accordance with the instructions provided in the Rotary Spit Table.

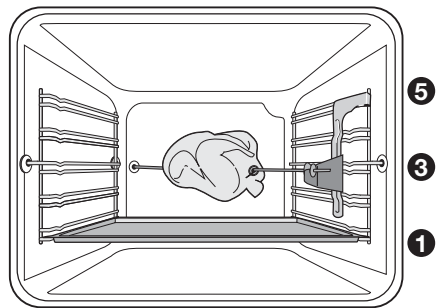

- i** Ensure that the rotary spit is turning.

Removing the rotary spit

Use the handle to remove the spit. The rotary spit is very hot at the end of the cooking process.

- !** **Warning!** There is a risk of burning when removing the spit!

Switch off the appliance

Tips, tables and advice

Auto Cooking

To attain optimum results, you should use the recommended cookware or accessories.

Important! Ensure that cookware made of plastic or with plastic handles is heat-resistant!

Baking, Home Baking

Sponge Cake

Type	Ovenware	Accessories	Notes
-	Spring form	Shelf	Batter with no or very little fat content
Flat sponges, Swiss roll			conventional

Yeast Plait

Type	Ovenware	Accessories	Notes
-	-	Tray	1 piece

Cake Tray

Type	Ovenware	Accessories	Notes
-	-	Tray	Tray completely filled, no roasting tray

Cake Tin

Type	Ovenware	Accessories	Notes
-	cake tin	Shelf	Various types of cake which are baked in tins.
Shortcrust bases			conventional

Tarte

Type	Ovenware	Accessories	Notes
	Tart tin Spring form	Shelf	Cakes with minimal topping, e.g. jam

Pie/Quiche

Type	Ovenware	Accessories	Notes
-	Quiche tin Spring form Tart tin	Shelf	

Strudel

Type	Ovenware	Accessories	Notes
-	-	Tray	1 piece

Fruit Cake

Type	Ovenware	Accessories	Notes
-	Square tin Spring form	Shelf	with dried fruit

Pastry

Type	Ovenware	Accessories	Notes
Sweet	-	Tray	multiple pieces
Salty	-	Tray	multiple pieces

Important! Bake cookies and biscuits the traditional way!

Bread

Type	Ovenware	Accessories	Notes
Tin	Bread tin	Shelf	1 tin
Tray	-	Tray	1 tin
Flat Bread	-	Tray	1 or 2 pieces (e.g. baguettes)

Rolls

Type	Ovenware	Accessories	Notes
Savoury	-	Tray	multiple small pieces
Sweet	-	Tray	multiple small pieces, e.g. sweet yeast rolls

Cake Special

Type	Ovenware	Accessories	Notes
Victoria Sponge Cake	-	-	English speciality

Roasting

i Always insert the grease filter when roasting in order to minimise soiling of the oven.

Beef/Lamb/Game

Type	Ovenware	Accessories	Notes
Top Side Beef	Roasting tin	Meatprobe, Drip pan	Select the desired degree of cooking (Rare, Medium or Well-done)
Scandinavian Beef	Roasting tin	Meatprobe, Drip pan	Select the desired degree of cooking (Rare, Medium or Well-done)
Roast Beef	Roasting tin	Drip pan	Set the weight
Lamb Joint, medium	Roasting tin	Meatprobe, Drip pan	-
Roast Lamb	Roasting tin	Drip pan	Set the weight
Loin of game	Roasting tin	Meatprobe, Drip pan	-
Roast Game	Roasting tin	Drip pan	Set the weight

Poultry/Fish

Type	Ovenware	Accessories	Notes
Boned Poultry	Roasting tin	Meatprobe, Drippan	-
Chicken, whole	Roasting tin	Drip pan	Set the weight
Turkey, whole	Roasting tin	Drip pan	Set the weight
Duck, whole	Roasting tin	Drip pan	Set the weight
Goose, whole	Roasting tin	Drip pan	Set the weight
Whole Fish	Roasting tin	Meatprobe, Drippan	-

Pork/Veal

Type	Ovenware	Accessories	Notes
Loin of pork	Roasting tin	Meatprobe, Drippan	-
Roast Pork	Roasting tin	Drip pan	Set the weight

Type	Ovenware	Accessories	Notes
Back of Veal	Roasting tin	Meatprobe, Drippan	-
Roast Veal	Roasting tin	Drip pan	Set the weight

Convenience food

Frozen Potato Types

Type	Ovenware	Accessories	Notes
-	-	Tray	Various potato convenience foods, chips, wedges, croquettes...

Frozen Pastry

Type	Ovenware	Accessories	Notes
Sweet	-	Tray	multiple small pieces
Salty	-	Tray	multiple small pieces

Fresh Pastry

Type	Ovenware	Accessories	Notes
Sweet	-	Tray	multiple small pieces
Salty	-	Tray	multiple small pieces

Rolls/Baguette

Type	Ovenware	Accessories	Notes
Frozen	-	Tray	multiple small pieces
Not frozen	-	Tray	-

Frozen Fish/Meat

Type	Ovenware	Accessories	Notes
Fish au Gratin	Heat-resistant dish	Shelf	-
Breaded Fish/Meat	-	Tray	multiple small pieces, e.g. fish fingers, cordon bleu

Frozen Pie/Quiche

Type	Ovenware	Accessories	Notes
-	-	Tray	-

Potato Dishes

Type	Ovenware	Accessories	Notes
Frozen	Heat-resistant dish	Shelf	-
Fresh	Heat-resistant dish	Shelf	-

Pasta Dishes

Type	Ovenware	Accessories	Notes
Frozen	Heat-resistant dish	Shelf	-
Fresh	Heat-resistant dish	Shelf	-

Rice Dishes

Type	Ovenware	Accessories	Notes
Frozen	Heat-resistant dish	Shelf	pre-cooked rice

Type	Ovenware	Accessories	Notes
Fresh	Heat-resistant dish	Shelf	pre-cooked rice

Vegetable Dishes

Type	Ovenware	Accessories	Notes
Frozen	Heat-resistant dish	Shelf	-
Fresh	Heat-resistant dish	Shelf	-

Frozen Strudel

Type	Ovenware	Accessories	Notes
-	-	Tray	1 or 2 pieces

Snack

Type	Ovenware	Accessories	Notes
-	-	Tray	multiple small pieces

Oven dishes, home-made

Meat/Fish Casserole

Type	Ovenware	Accessories	Notes
High Casserole	Heat-resistant dish	Shelf	> 4 cm
Flat Casserole	Heat-resistant dish	Shelf	< 4 cm

Potato Dishes

Type	Ovenware	Accessories	Notes
-	Heat-resistant dish	Shelf	-

Pasta Dishes

Type	Ovenware	Accessories	Notes
-	Heat-resistant dish	Shelf	Sprinkle with Parmesan cheese towards the end of the baking time

Vegetable Dishes

Type	Ovenware	Accessories	Notes
-	Heat-resistant dish	Shelf	-

Rice Dishes

Type	Ovenware	Accessories	Notes
-	Heat-resistant dish	Shelf	pre-cooked rice

Sweet Dishes

Type	Ovenware	Accessories	Notes
-	Heat-resistant dish	Shelf	-

Soufflé

Type	Ovenware	Accessories	Notes
One large tin	Heat-resistant dish	Shelf	-
Small Tins	In small tins	Shelf	multiple tins

Au Gratin

Type	Ovenware	Accessories	Notes
-	Heat-resistant dish	Shelf	Sprinkle with Parmesan cheese towards the end of the baking time.

Pizza

Fresh Pizza

Type	Ovenware	Accessories	Notes
Thick	-	Tray	Thick crust, lots of topping (American style)
Thin	-	Tray	Thin crust, little topping (Italian style)
Calzone	-	Tray	

Frozen Pizza

Type	Ovenware	Accessories	Notes
Parbaked	-	Tray	Pizza base, partially baked, without additional topping
Not parbaked	-	Tray	without extra topping
Calzone	-	Tray	-

Fresh Pizza parbaked

Type	Ovenware	Accessories	Notes
-	-	Tray	-

Pizza Snack

Type	Ovenware	Accessories	Notes
-	-	Tray	-

Manual baking and roasting


In case you wish to prepare meals with manual settings, the following tables and tips provide useful information. In the tables you will find a selection of dishes with the appropriate settings.

Baking


Oven levels

- Baking with Conventional Cooking is only possible on one level.
- When baking with Fan Cooking, one to three baking trays can be put into the oven at the same time:


1 tray, e.g. oven level 3

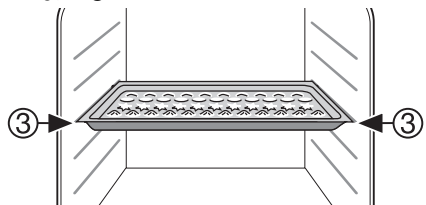


1 cake in cake tin, e.g. oven level 1

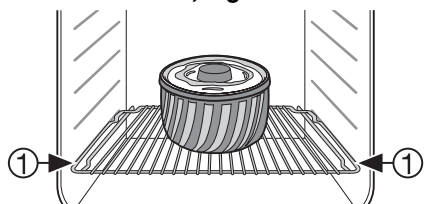

2 tray, e.g. oven levels 1 and 3

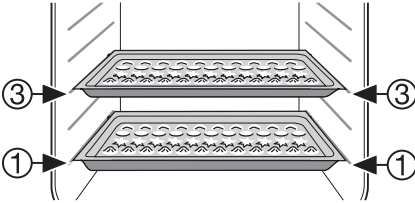

3 trays, oven levels 1, 3 and 5

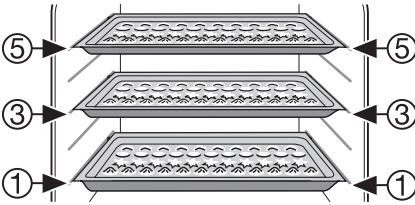

Baking tins

- Baking tins made from dark-coloured metal with Teflon coating are suitable for baking using Conventional Cooking.
- For baking using the Fan Cooking function, baking tins made of shiny light-coloured metal are suitable.
- Baking tins of dark metal with antistick coating are inserted on grid. Baking tins of light metal are inserted on baking tray

General instructions

- Insert the tray with the bevel at the front.
- When baking using Conventional Cooking and Fan Cooking, you can also place two baking trays next to one another on one level. This does not significantly affect the baking time.

i When frozen items are placed on baking trays, they can buckle during cooking.

This happens due to the large difference in temperature between the frozen item and the oven. After cooling, the buckling in the trays disappears.

How to use the Baking Tables

- The tables give the required temperature settings, cooking times and oven levels for a selection of typical dishes.
- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry, dough or mixture, the amount and the type of baking tin.
- We recommend setting the oven to a lower temperature for the first time and only setting a higher temperature when required, e.g. if you require more browning or if the baking is taking too long.
- If you cannot find the settings for a certain recipe, look for similar items.
- The baking time can be 10-15 minutes longer when baking cakes on trays or in tins on multiple levels.
- Recipes with moist ingredients such as pizzas or fruit flans are to be baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. You should not change the temperature setting if this occurs. Different rates of browning even out as baking progresses.
- Baking and roasting times could differ from those of your previous oven. For this reason you should adjust the settings you usually use (temperature, cooking times, etc.) and oven levels to the recommendations provided in the following tables.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking Tables

Baking in tins (on one level)

Type of baking	Heating Function	Level	Temperature (°C)	Time (h:min)
Ring Cake or Brioche	Fan Cooking	1	150 - 160	0:50 - 1:10
Madeira Cake/Fruit Cake	Fan Cooking	1	150 - 160	1:10 - 1:30
Sponge Cake	Fan Cooking	1	140	1:10 - 1:30
Sponge Cake	Conventional Cooking	1	160	1:10 - 1:30
Flan base - shortcrust pastry ¹⁾	Fan Cooking	3	170-180	0:10 - 0:25
Flan base - sponge mixture	Fan Cooking	3	150 - 170	0:20 - 0:25

Type of baking	Heating Function	Level	Temperature (°C)	Time (h:min)
Apple tart (covered)	Conventional Cooking	1	170 - 190	0:50 - 1:00
Apple Pie (2 tins, Ø 20 cm, placed diagonally)	Fan Cooking	1	160	1:10 - 1:30
Apple Pie (2 tins, Ø 20 cm, placed diagonally)	Conventional Cooking	1	180	1:30 - 1:30
Savoury Flans (e.g. Quiche)	Fan Cooking	1	160 - 180	0:30 - 1:10
Cheesecake	Conventional Cooking	1	170 - 190	1:00 - 1:30

1) Pre-heat oven

Cakes/pastries/breads on baking tray (one level)

Type of baking	Heating Function	Level	Temperature (°C)	Time (h:min)
Yeast Plait/Yeast Crown	Conventional Cooking	3	170 - 190	0:30 - 0:40
Christmas Stollen ¹⁾	Conventional Cooking	3	160 - 180	0:30 - 0:40
Bread (rye bread) ¹⁾ -first of all -then	Conventional Cooking	1	- 230 160 - 180	0:25 0:30 - 1:00
Cream puffs/éclairs ¹⁾	Conventional Cooking	3	160 - 170	0:15 - 0:30
Swiss roll ¹⁾	Conventional Cooking	3	180 - 200	0:10 - 0:20
Streusel Cake, dry	Fan Cooking	3	150 - 160	0:20 - 0:40
Buttered Almond Cake/Sugar Cakes ¹⁾	Conventional Cooking	3	190 - 210	0:15 - 0:30
Fruit Cake with Yeast Mixture/Sponge Mixture ²⁾	Fan Cooking	3	150	0:35 - 0:50
Fruit Cake with Yeast Mixture/Sponge Mixture ²⁾	Conventional Cooking	3	170	0:35 - 0:50
Fruit Cake with Shortcrust Pastry	Fan Cooking	3	160 - 170	0:40 - 1:20
Yeast Cake with delicate toppings (e.g. quark, cream, custard) ¹⁾	Conventional Cooking	3	160 - 180	0:40 - 1:20
Pizza (with a lot of topping) ¹⁾²⁾	Fan Cooking	1	180 - 200	0:30 - 1:00
Pizza (thin crust) ¹⁾	Fan Cooking	1	200 - 220	0:10 - 0:25
Unleavened bread	Fan Cooking	1	200 - 220	0:08 - 0:15
Swiss Flaky Pastry Tarts	Fan Cooking	1	180 - 200	0:35 - 0:50

1) Pre-heat oven

2) Use drip /roasting tray

Biscuits (one level)

Type of baking	Heating Function	Level	Temperature (°C)	Time (h:min)
Biscuits	Fan Cooking	3	150 - 160	0:06 - 0:20
Viennese whirls	Fan Cooking	3	140	0:20 - 0:30
Viennese whirls ¹⁾	Conventional Cooking	3	160	0:20 - 0:30
Biscuits made with sponge mixture	Fan Cooking	3	150 - 160	0:15 - 0:20
Pastries made with egg white, meringues	Fan Cooking	3	80 - 100	2:00 - 2:30
Macaroons	Fan Cooking	3	100 - 120	0:30 - 0:60
Biscuits made with yeast dough	Fan Cooking	3	150 - 160	0:20 - 0:40
Puff pastries ¹⁾	Fan Cooking	3	170 - 180	0:20 - 0:30
Bread rolls ¹⁾	Fan Cooking	3	160	0:20 - 0:35
Bread rolls ¹⁾	Conventional Cooking	3	180	0:20 - 0:35
Biscuits (20 per tray) ¹⁾	Fan Cooking	3	140	0:20 - 0:30
Biscuits (20 per tray) ¹⁾	Conventional Cooking	3	170	0:20 - 0:30

1) Pre-heat oven

Baking on multiple oven levels with Fan Cooking (Cakes/pastries/breads)

Type of baking	2 Levels	3 Levels	Temperature (°C)	Time (h:min)
Cream puffs/éclairs ¹⁾	1 / 4	---	160 - 180	0:35 - 0:60
Streusel Cake, dry	1 / 3	---	140 - 160	0:30 - 0:60
Short pastry biscuits	1 / 3	1 / 3 / 5	150 - 160	0:15 - 0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	0:20 - 0:60
Biscuits made with sponge mixture	1 / 3	---	160 - 170	0:25 - 0:40
Pastries made with egg white, meringues	1 / 3	---	80 - 100	2:10 - 2:50
Macaroons	1 / 3	---	100 - 120	0:40 - 1:20
Biscuits made with yeast dough	1 / 3	---	160 - 170	0:30 - 0:60
Puff pastries	1 / 3	---	160 - 180	0:30 - 0:50
Bread rolls	1 / 4	---	160	0:30 - 0:55
Biscuits (20 per tray) ¹⁾	1 / 4	---	140	0:25 - 0:40

1) Pre-heat oven

Tips on Baking

baking results	Possible cause	Remedy
Bottom of cake is too light	Wrong shelf level used	Place cake lower in the oven


baking results	Possible cause	Remedy
Cake collapses (is sticky, lumpy, smooth)	Oven temperature too high	Use a slightly lower temperature setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in mixture	Use less liquid. Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Temperature too low	Use a higher oven temperature setting.
	Baking time too long	Reduce baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Use a lower oven temperature setting and increase baking time
	Cake mixture/dough is unevenly distributed	Spread the mixture/dough evenly on the baking tray
	Grease filter is inserted	Remove the grease filter
Cake not cooked through in the time stated	Temperature too low	Use a slightly higher oven temperature setting
	Grease filter is inserted	Remove the grease filter

Roasting

Insert the grease filter when roasting!

Overware for roasting

- Any heat-resistant overware is suitable to use for roasting. (Please follow the manufacturer's instructions.)
- You can place large roasts **directly in the roasting tray or on the shelf with the roasting tray underneath**.
- We recommend roasting leaner cuts **in a roasting pan with a lid**. The meat will be more succulent.
- All types of meat which are supposed to be browned or form a crust or crackling can be roasted in a **roasting pan without a lid**.

 The information given in the following tables is for guidance only.

- We recommend meat and fish **weighing 1 kg or more** for roasting in the oven.
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting cookware.
- If required, turn the roast after 1/2 - 2/3 of the cooking time.
- Use the cooking juices to baste large roasts and poultry several times during the cooking time. This will give better roasting results.

Roasting Tables

Beef

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Pot roast	1 - 1.5 kg	Conventional Cooking	1	200 - 250	2:00 - 2:30
Topside beef or fillet					per cm of thickness
- rare ¹⁾	per cm of thickness	Turbo Grill	1	190 - 200	0:05 - 0:06

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
- medium	per cm of thickness	Turbo Grill	1	180 - 190	0:06 - 0:08
- well done	per cm of thickness	Turbo Grill	1	170 - 180	0:08 - 0:10

1) Pre-heat oven

Pork

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Shoulder, neck, ham	1 - 1.5 kg	Turbo Grill	1	160 - 180	1:30 - 2:00
Pork chop	1 - 1.5 kg	Turbo Grill	1	170 - 180	1:00 - 1:30
Meatloaf	750 g - 1 kg	Turbo Grill	1	160 - 170	0:45 - 1:00
Knuckle of pork (pre-cooked)	750 g - 1 kg	Turbo Grill	1	150 - 170	1:30 - 2:00

Veal

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Roast veal	1 kg	Turbo Grill	1	160 - 180	1:30 - 2:00
Knuckle of veal	1.5 - 2 kg	Turbo Grill	1	160 - 180	2:00 - 2:30

Lamb

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Roast lamb, leg of lamb	1 - 1.5 kg	Turbo Grill	1	150 - 170	1:15 - 2:00
Saddle of lamb	1 - 1.5 kg	Turbo Grill	1	160 - 180	1:00 - 1:30

Game

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Saddle of hare, leg of hare ¹⁾	Up to 1 kg	Conventional Cooking	3	220 - 250	0:25 - 0:40
Loin of Game	1.5-2 kg	Conventional Cooking	1	210 - 220	1:15 - 1:45
Leg of Game	1.5 - 2 kg	Conventional Cooking	1	200 - 210	1:30 - 2:15

1) pre-heat oven

Roasting Table (poultry)

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Poultry pieces	per 200-250 g	Turbo Grill	1	200 - 220	0:35 - 0:50
Half chicken	per 400-500 g	Turbo Grill	1	190 - 210	0:35 - 0:50

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Poultry	1 - 1.5 kg	Turbo Grill	1	190 - 210	0:45 - 1:15
Duck	1.5 - 2 kg	Turbo Grill	1	180 - 200	1:15 - 1:45
Goose	3.5 - 5 kg	Turbo Grill	1	160 - 180	2:30 - 3:30
Turkey	2.5 - 3.5 kg	Turbo Grill	1	160 - 180	1:45 - 2:30
Turkey	4 - 6 kg	Turbo Grill	1	140 - 160	2:30 - 4:00

Fish - steamed

Type of meat	Quantity	Heating Function	Level	Temperature (°C)	Time (h:min)
Fish, whole	1 - 1.5 kg	Conventional Cooking	1	210 - 220	0:45 - 1:15

Tables for Meatprobe

Beef

Food to be cooked	Core temperature
Top Side Beef, rare	45 - 50 °C
medium	60 - 65 °C
well done	75 - 80 °C

Pork

Food to be cooked	Core temperature
Shoulder of pork, ham joint, neck	80 - 82 °C
Chop (loin)	75 - 80 °C
Meatloaf	75 - 80 °C

Veal

Food to be cooked	Core temperature
Roast veal	75- 80 °C
Knuckle of veal	85 - 90 °C

Mutton/Lamb

Food to be cooked	Core temperature
Leg of mutton	80 - 85 °C
Saddle of mutton	80 - 85 °C
Roast lamb, leg of lamb	75 - 80 °C

Game

Food to be cooked	Core temperature
Saddle of hare	70 - 75 °C
Leg of hare	70 - 75 °C
Whole hare	70 - 75 °C
Saddle of venison	70 - 75 °C
Haunch of venison	70 - 75 °C

Grilling

Use the different Grillfunctions with max. Temperatur. The right function is related to the used area.

Important! Always grill with the oven door closed.

i Always pre-heat the empty oven for 5 minutes using the grilling function.

- To grill, insert the **shelf** into the **recommended oven level**.
- Always place the **roasting tray** in the **1st oven level** from the bottom.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling Table

Food to be grilled	Level	Grilling time	
		1st side	2nd side
Rissoles	4	8-10 mins.	6 - 8 mins.
Pork fillet	4	10-12 mins.	6 - 10 mins.
Sausages	4	8-10 mins.	6 - 8 mins.
Fillet steaks, veal steaks	4	6-7 mins.	5 - 6 mins.
Fillet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	4-6 mins.	3-5 mins.
Toast with topping	3	6-8 mins.	---

1) without pre-heating

Rotary spit

Dish	Quantity kg	Function	Temperature °C	Grilling time h:min
1 Chicken	approx. 1 kg	Economy Grill + Spit Roast	240	1:00 - 1:10
2 Chicken	per 1 kg	Dual Grill + Spit Roast	240	1:15 - 1:20
1 Duck	1.5 - 2 kg	Economy Grill + Spit Roast	240	1:20 - 1:40
Rolled Pork Roast	1	Economy Grill + Spit Roast	240	1:45 - 2:15
Pork Knuckle (pre-cooked for 1/2 hour)	1 - 1.3 kg	Economy Grill + Spit Roast	240	2:00 - 2:30

Slow Cook

With Slow Cook meat becomes beautifully tender and remains particularly succulent. We recommend this function for tender, lean pieces of meat and fish.

Slow Cook is not suitable for pot roasts or fatty pork roasts.

We recommend 120°C for smaller pieces of meat, e.g. steaks.

We recommend 150°C for larger pieces of meat, e.g. fillet of beef.

i When using the heating function Slow Cook **always cook dishes uncovered** without a lid.

1. Sear the meat to be roasted in a pan on each side for 1-2 mins. at very high temperature.
2. Place meat in a roasting dish or directly on the oven shelf with the tray underneath to catch the fat.
3. Place it in the oven. Select heating function Slow Cook. If required, use the selector to select 150°C and cook until ready (see table).

Table Slow Cook

Food to be cooked	Quantity (g)	Setting	Level	Total time (minutes)
Topside beef	1000 - 1500	150 °C	1	90 - 110
Fillet of beef, lamb shank	1000 - 1500	150 °C	3	90 - 110
Roast veal	1000 - 1500	150 °C	1	100 - 120
Steaks	200 - 300	120 °C	3	20 - 30

Care and maintenance

Warning! When cleaning, the appliance must be switched off and cooled down.

Warning! Cleaning the appliance with a steam jet or high-pressure cleaner is prohibited for safety reasons.

Caution! Do not use scourers, sharp tools or rinsing devices to clean the appliance.
Do not use scourers or metal scrapers to clean the glass oven door, as these could scratch the surface. This could cause the glass to shatter.

The outside of the appliance

- Wipe the front of the appliance with a soft cloth and a solution of warm water and washing-up liquid.
- For metal surfaces use standard commercial cleaning products.
- Please do not use any scouring agents or abrasive sponges.

Clean the oven after every use. This is the easiest way to remove dirt which then cannot burn on.

Inside of the oven

1. When the oven door is opened, the oven light bulb automatically illuminates.
2. Wipe out the oven after every use with a solution of washing-up liquid and then dry it.

i Remove stubborn dirt with special oven cleaners.

Important! Important: When using oven sprays, please follow the manufacturer's instructions exactly. Make sure that no visible remaining detergents are left after the cleaning with oven spray!

Accessories

- Clean and dry the oven accessories (shelf, tray, roasting pan, etc.) after each use. Soak the items to make cleaning easier.

Grease filter

1. Clean the grease filter in hot water and washing-up liquid or in the dishwasher.
2. Heavy burnt-on dirt soiling can be removed by boiling the filter in a little water with 2-3 tablespoons of dishwasher detergent.

Pyrolytic cleaning

With the "Pyrolytic" function, you can clean the oven using pyrolysis. Select the function in the "Cleaning Menu" menu.

Warning! The oven will become hot during Pyrolysis! Risk of burn!

i Do not open the door when the oven is heating up as this will cause the process to abort.

As soon as a certain temperature is reached, the oven door is automatically locked.

Cleaning Assistant

When the "Cleaning Assistant" function in the "Cleaning Menu" menu is activated and you start Pyrolysis, messages are shown in the display, which let you know what you need to take note of prior to the start of Pyrolysis.

Cleaning Reminder



When the "CLEANING REMINDER" in the "Cleaning Menu" menu is switched on, an appropriate message is shown in the display, when it is time for the oven to be cleaned.

Side rails

The side rails on the right and left-hand side of the oven interior can be removed for the purpose of cleaning the side walls.

Removing the side rails



First pull the rails away from the oven wall at the front (1) and then unhook them at the back (2).

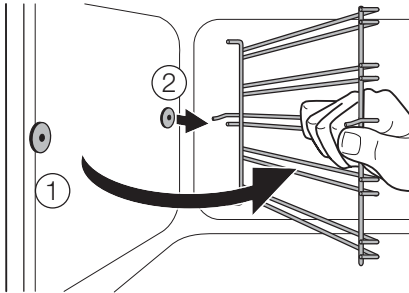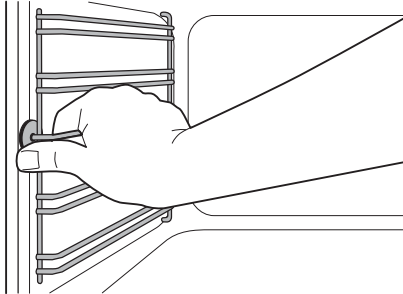

Replace the side rails

Important! The rounded ends of the guide bars must point to the front.

To install, first insert the rails in the holes at the back (1) and then lower into position at the front and press into place (2).

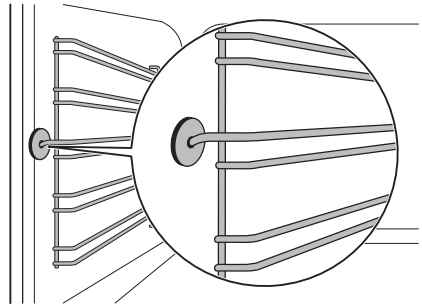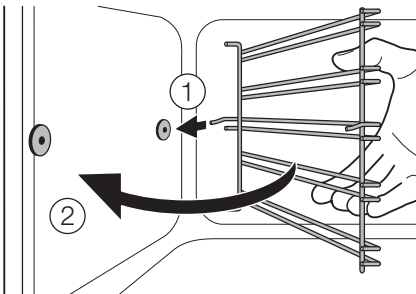

Oven Light


Warning! Risk of electric shock! Before replacing the oven light bulb:

- Switch oven off.
- Unscrew the fuse from the fuse box or switch fuse off.

i To protect the oven light bulb and the glass cover, lay a cloth on the floor of the oven.


Replacing the oven light bulb/Cleaning the glass cover

1. Take off the glass cover by turning it anticlockwise and clean it.

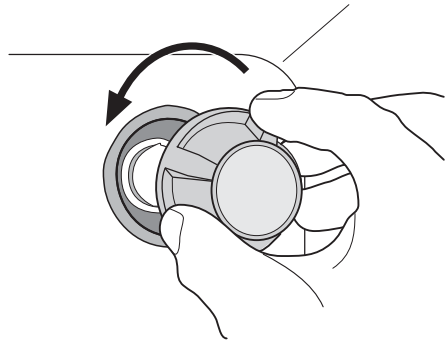


2. If necessary: replace with a **40 Watt, 230V, 300°C heat-resistant oven light bulb.**
3. Refit the glass cover.

Replacing the side oven light bulb/ Cleaning the glass cover

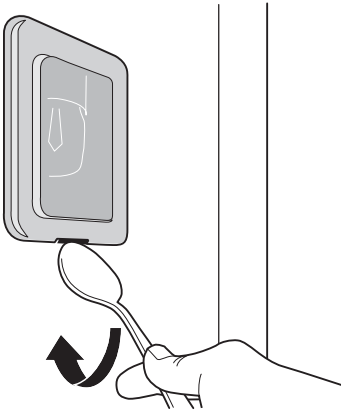

1. Take out the left-hand side rails.
2. Remove the glass cover with the help of a small, blunt object (e.g. a teaspoon) and clean it.
3. If necessary: replace halogen oven light bulb.
Order the replacement light bulb from the Customer Care Department (see section "Service/Customer Care Department").

i Always touch the halogen light bulb using a cloth to avoid grease contamination.

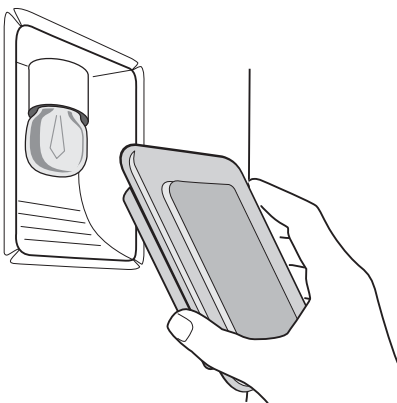


4. Refit the glass cover.
5. Replace the side rails.

Oven door


The oven door can be removed from its hinges to allow for easier cleaning of the oven interior.

Removing the oven door from its hinges


1. Open the door as far as it will go.

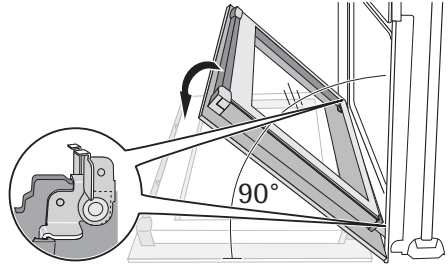


2. Completely loosen the clamp levers on both door hinges (A).

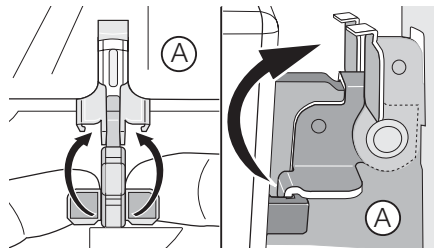

3. Close the oven door to the first open position (approx. 45°).

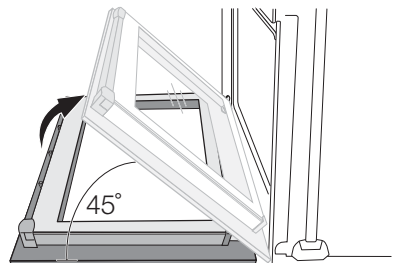


4. Hold the oven door at the level of the door handle with both hands, one on each side, and lift it diagonally upwards from the oven (**Caution:** the door is heavy).

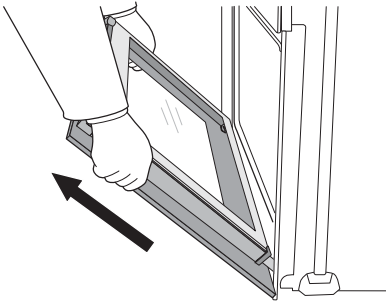


i Lay the oven door on a soft and flat surface (e.g. on a woollen blanket) with the outside facing downwards in order to avoid scratches.

Putting the oven door back on it hinges



1. Hold the oven door with both hands, one on each side, and hold it at an angle of approx. 45°. Align the two notches on the underside of the oven door with the hinges on the oven and allow the door to slide into place as far as possible.

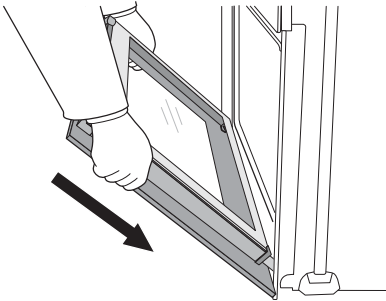

2. Open the door as far as it will go.

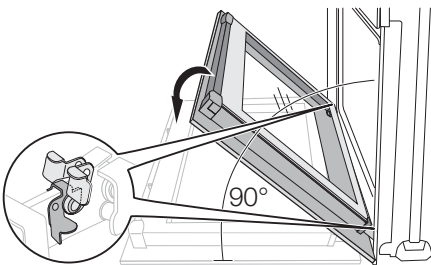

3. Fold the clamp levers on both door hinges (A) down into their original position.

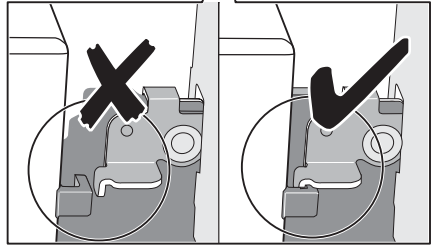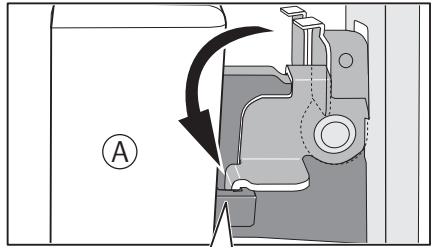

4. Close the oven door.


Oven door glass

The oven door comprises four panels of glass mounted one on top of another. The interior glass panels can be removed for cleaning.


Important! Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing the glass door panels


1. Open the door as far as it will go.

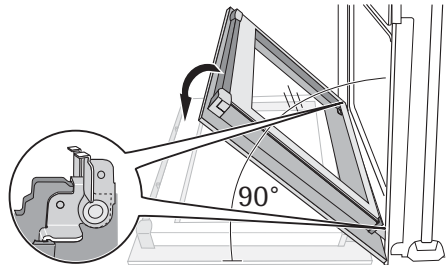


2. Loosen the **clamp levers** on both door hinges (A) **completely**.

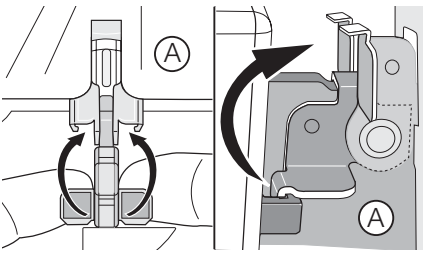


3. Close the oven door to the first open position (approx. 45°).

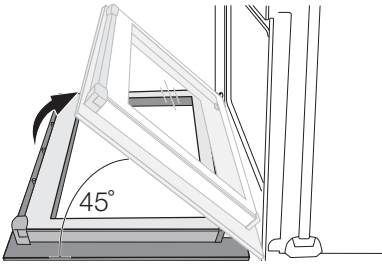

4. Hold the door strip (B) on the upper side of the oven door on both sides and press this inwards in order to loosen the seal. Then pull the door strip upwards and off.

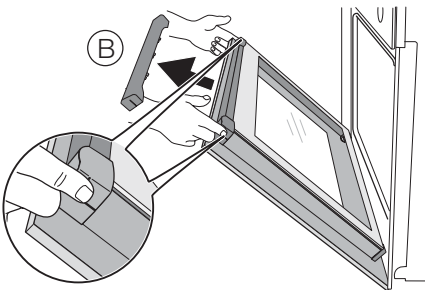

5. Hold the glass panels on their upper side and one after the other pull them up and out of their retainers.

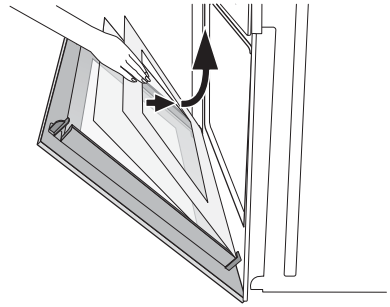


Cleaning the glass door panels

Thoroughly clean the glass door panels using a solution of water and washing-up liquid. Then dry them carefully.


Replacing the glass door panels

1. Slide the glass door panels one after the other into the retainers from above at an angle and then lower the panels.


i The two smaller panels should be inserted first, then the larger panel.

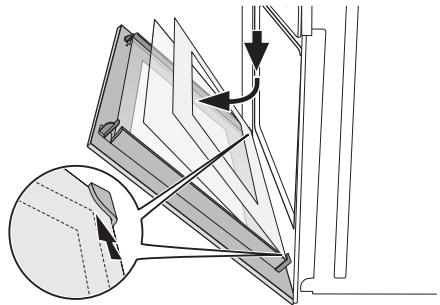

2. Hold the door strip (B) on both sides, align it with the inner edge of the door and press the door strip (B) into the upper edge of the door.



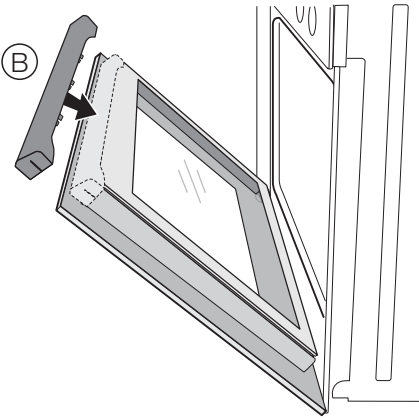


3. Open the door as far as it will go.

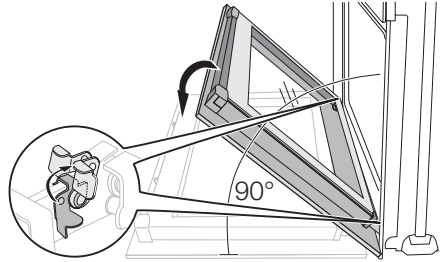


4. Fold the clamp levers on both door hinges (A) down into their original position.

i On the open side of the door strip (B) there is a guide bar (C). This must be pressed between the outer side of the door and the corner (D). The seal (E) must audibly click into place.

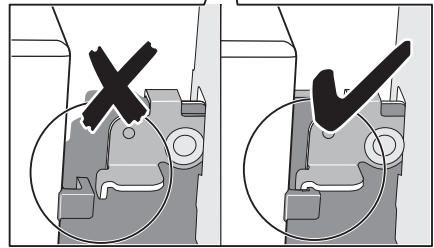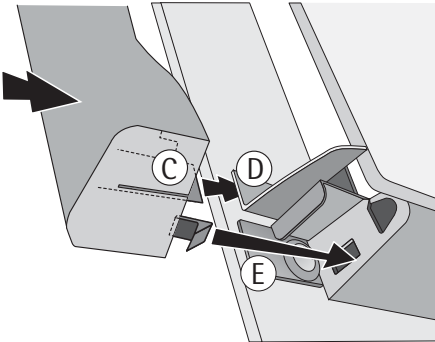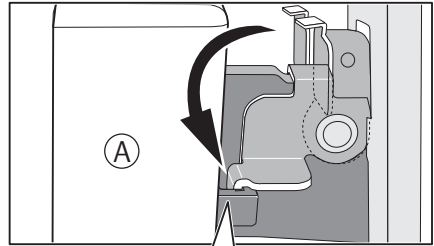


5. Close the oven door.

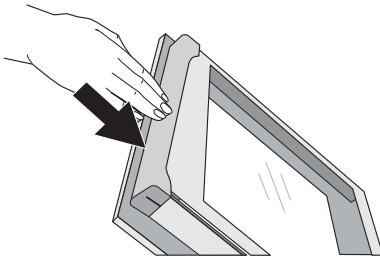



What to do if...

Problem	Possible cause	Remedy
The oven is not heating up	The oven has not been switched on	Switch oven on


Problem	Possible cause	Remedy
	The required settings have not been made	Check settings
	The fuse in the fuse box has blown	Check the fuses. If the fuses trip several times, please call a qualified electrician
The oven light is not working	The oven light bulb has blown	Change the oven light bulb
F11 appears in the time display	The meat probe has short circuited or the meat probe's plug is not firmly in position in the socket	Insert the meat probe plug into the socket on the side wall of the oven as far as it will go
A fault code that is not listed above appears in the time indication	Electronic fault	Switch the appliance off and on again via the house fuse or the circuit breaker in the fuse box. Contact the Customer Care Department when the fault appears again

 **Warning!** Repairs to the appliance must only be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.

 In the case of misuse the visit by the Customer Care Department technician or the repair may be chargeable, even during the warranty period.


 Information for appliances with metal fronts:
Due to the appliance's cool front, when the door is opened during or shortly after baking or roasting, there may be condensation of the inner glass panel for a short while.

Disposal

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

 Packaging material

The packaging material is environmentally-friendly and recyclable. Plastic parts are marked with the international abbreviations such as, e.g. >PE<, >PS< etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.

 **Warning!** Your appliance should be made inoperable before it is disposed of, so that it does not constitute a danger. To do this, take the mains plug from the socket and remove the mains cable from the appliance.

Installation

Important! The new appliance may only be installed and connected by a qualified installation engineer.

Please comply with this instruction. If you do not, any damage resulting is not covered by the warranty.


Safety information for the installer



- The set-up of the electrical installation is arranged so that the appliance can be isolated from the mains with a minimum 3 mm all-pole contact separation. Suitable isolation devices include, for example, circuit breakers, fuses (screw type fuses are to be removed from the holder), RCDs and contactors.
- Anti-shock protection must be provided by the installation.
- The built-in unit must meet the stability requirements of DIN 68930.



- Built-in cookers and cooking surfaces are equipped with special attachment systems. For safety reasons, they must only be combined with appliances from the same manufacturer.

The use of heat protection strips is prohibited for cookers and ovens with Pyrolytic, if the recess has a rear wall and closed ground-level compartment.

However installation is possible with a ground-level compartment that has been shortened by at least 20 mm and which has base ventilation of the same cross-section.

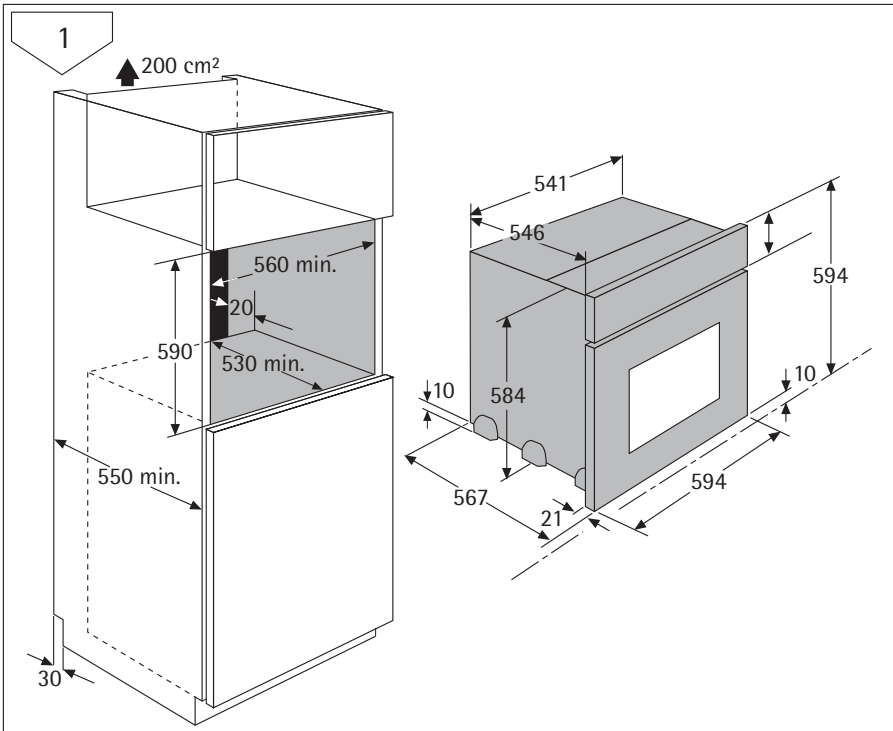

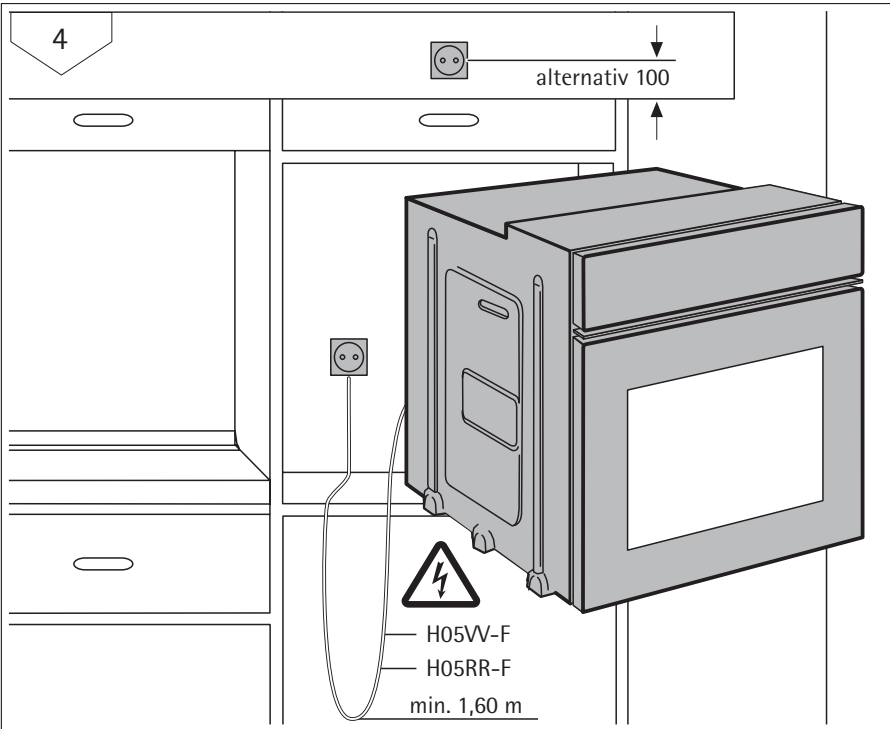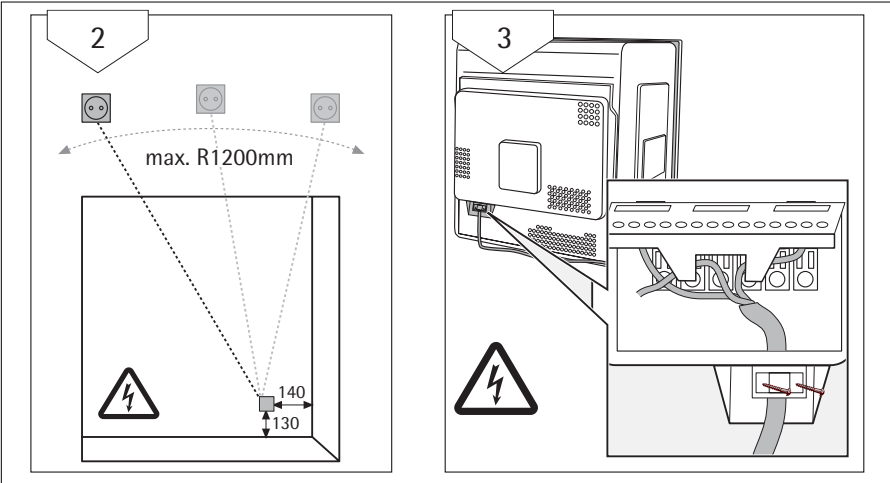

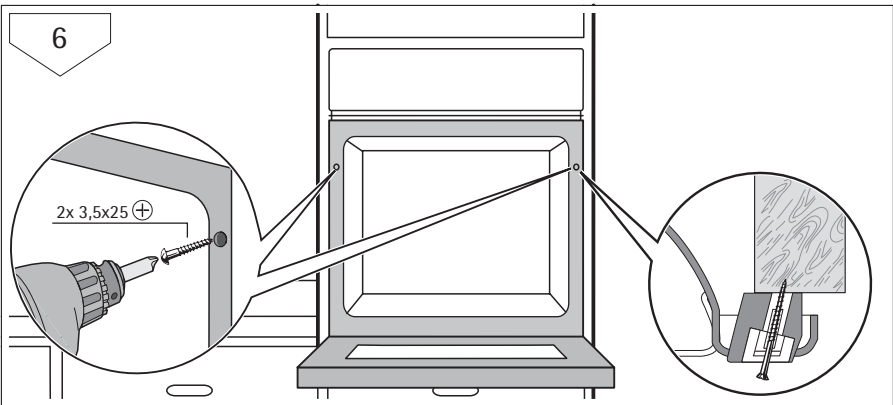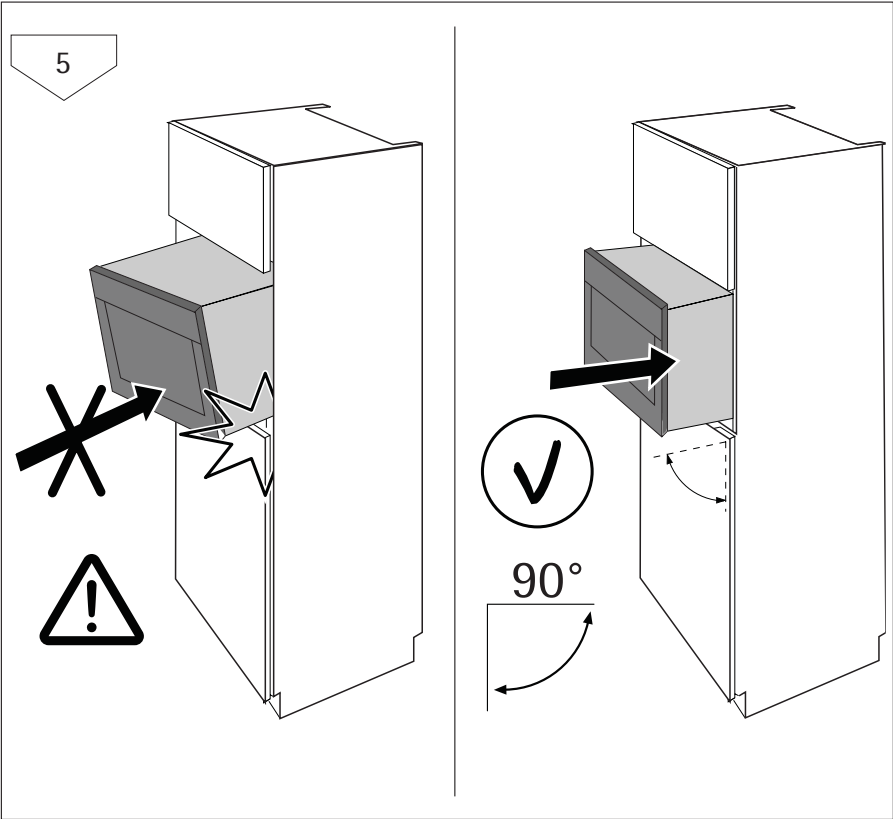

European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the

appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance



guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com


		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Pärnu mnt. 153, 11624 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4, Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+371 67313626	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 278 06 03	Ozo 10a, LT-08200 Vilnius
Luxembourg	+352 42 431 301	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn

		
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warszawa
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 -2774-518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz - Suisse - Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Gerbičeva ulica 98, 1000 Ljubl- jana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Elec- trolux Domáce spotrebiče SK, Seberíniho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Görans- gatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Tak- sim İstanbul
Россия	+7 495 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ "Олимпик"
Україна	+380 44 586 20 60	04074 Київ, вул.Автозаводська, 2а, БЦ "Алкон"

Consumer services

In the event of technical faults, you should first check whether you can remedy the problem with the help of the instructions in the section "What to do if...".

If you are unable to remedy the problem yourself, contact the Customer Care Department or one of our authorised dealers.

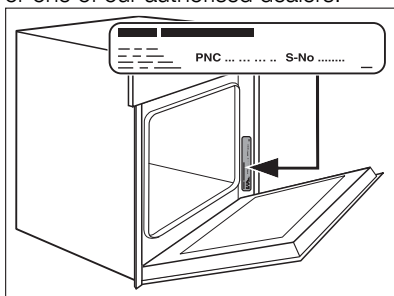

So that we can help you quickly, we will need the following information:

- Model description
- Product number (PNC)
- Serial number
(for numbers see the rating plate)
- Type of fault
- Any error message displayed by the appliance

Note down the relevant numbers from your appliance here, so that you always have them on hand when needed:

Model description:
 Prod. No. (PNC):
 Serial No.:

www.electrolux.com