

Foster

Live the Quality

USER'S MANUAL FOR BUILT-IN OVEN

Multifunction S4000, cod. 7133 043

Foster spa

via M.S. Ottone, 18/20

42041 Brescello (RE) - Italy

tel. +39.0522.687425 - tel. Servizio Assistenza +39.0522.684450

fax +39.0522.686019 - fax Servizio Ricambi +39.0522.962166

 
e-mail: service@fosterspa.com

www.fosterspa.com




EN	The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
DE	Dieses Produkt darf am Ende seiner Lebensdauer nicht über den normalen Haushaltsabfall entsorgt werden, sondern muss an einem Sammelpunkt für das Recycling von elektrischen und elektronischen Geräten abgegeben werden. Das Symbol auf dem Produkt, der Gebrauchsanleitung oder der Verpackung weist darauf hin. Die Werkstoffe sind gemäß ihrer Kennzeichnung wiederverwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutze unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständige Entsorgungsstelle.
IT	Il simbolo sul prodotto o sulla confezione indica che il prodotto non deve essere considerato come un normale rifiuto domestico, ma deve essere portato nel punto di raccolta appropriato per il riciclaggio di apparecchiature elettriche ed elettroniche. Provvedendo a smaltire questo prodotto in modo appropriato, si contribuisce a evitare potenziali conseguenze negative per l'ambiente e per la salute, che potrebbero derivare da uno smaltimento inadeguato del prodotto. Per informazioni più dettagliate sul riciclaggio di questo prodotto, contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti o il negozio in cui è stato acquistato il prodotto.
FR	Ce symbole figure sur le produit ou sur son emballage en application de la directive européenne 2002/96/CE sur les Déchets d'Équipement Électrique et Électronique (DEEE). Cette directive sert de règlement cadre à la reprise, au recyclage et à la valorisation des appareils usagés dans toute l'Europe. Ce produit doit donc faire l'objet d'une collecte sélective. Lorsque vous ne l'utilisez plus, remettez-le à un service de ramassage spécialisé ou à une déchèterie qui traite les DEEE ; vous contribuerez ainsi à éviter des conséquences néfastes pour la santé et l'environnement. Pour tout renseignement sur la mise au rebut et le recyclage de ce produit, veuillez contacter la mairie ou le service de la propreté de votre commune, ou encore le magasin dans lequel vous l'avez acheté.
ES	Este aparato lleva el marcado CE en conformidad con la Directiva 2002/96/EC del Parlamento Europeo y del Consejo sobre residuos de aparatos eléctricos y electrónicos (RAEE). La correcta eliminación de este producto evita consecuencias negativas para el medioambiente y la salud. El símbolo en el producto o en los documentos que se incluyen con el producto, indica que no se puede tratar como residuo doméstico. Es necesario entregarlo en un puntado recogida para reciclar aparatos eléctricos y electrónicos. Deséchelo con arreglo a las normas medioambientales para eliminación de residuos. Para obtener información más detallada sobre el tratamiento, recuperación y reciclaje de este producto, póngase en contacto con el ayuntamiento, con el servicio de eliminación de residuos urbanos o la tienda donde adquirió el producto.
PT	O símbolo no produto ou na embalagem indica que este produto não pode ser tratado como lixo doméstico. Em vez disso, deve ser entregue ao centro de recolha selectiva para a reciclagem de equipamento eléctrico e electrónico. Ao garantir uma eliminação adequada deste produto, irá ajudar a evitar eventuais consequências negativas para o meio ambiente e para a saúde pública, que, de outra forma, poderiam ser provocadas por um tratamento incorrecto do produto. Para obter informações mais pormenorizadas sobre a reciclagem deste produto, contacte os serviços municipalizados locais, o centro de recolha selectiva da sua área de residência ou o estabelecimento onde adquiriu o produto.
UA	Цей символ на виробі або на його упаковці позначає, що з ним не можна поводитися, як із побутовим сміттям. Замість цього його необхідно повернути до відповідного пункту збору для переробки електричного та електронного обладнання. Забезпечуючи належну переробку цього виробу, Ви допомагаєте попередити потенційні негативні наслідки для навколишнього середовища та здоров'я людини, які могли би виникнути за умов неналежного позбавлення від цього виробу. Щоб отримати детальнішу інформацію стосовно переробки цього виробу, зверніться до свого місцевого офісу, Вашої служби утилізації або до магазину, де Ви придбали цей виріб.
NL	Het symbol op het product of op de verpakking wijst erop dat dit product niet als huishoudafval mag worden behandeld. Het moet echter naar een plaats worden gebracht waar elektrische en elektronische apparatuur wordt gerecycled. Als u ervoor zorgt dat dit product op de correcte manier wordt verwijderd, voorkomt u mogelijk voor mens en milieu negatieve gevolgen die zich zouden kunnen voordoen in geval van verkeerde afvalbehandeling. Voor meer details in verband met het recyclen van dit product, neemt u het best contact op met de gemeentelijke instanties, het bedrijf of de dienst belast met de verwijdering van huishoudafval of de winkel waar u het product hebt gekocht.
RO	Simbolul de pe produs sau de pe ambalaj indică faptul că produsul nu trebuie aruncat împreună cu gunoii menajeri. Trebuie predat la punctul de colectare corespunzător pentru reciclarea echipamentelor electrice și electronice. Asigurându-vă că ați eliminat în mod corect produsul, ajutați la evitarea potențialelor consecințe negative pentru mediul înconjurător și pentru sănătatea persoanelor, consecințe care ar putea deriva din aruncarea necorespunzătoare a acestui produs. Pentru mai multe informații detaliate despre reciclarea acestui produs, vă rugăm să contactați biroul local, serviciul pentru eliminarea deșeurilor sau magazinul de la care l-ați achiziționat.
SLO	Simbol na izdelku ali njegovi embalaži označuje, da z izdelkom ni dovoljeno ravnati kot z običajnimi gospodinjstskimi odpadki. Izdelek odpeljite na ustrezno zbirno mesto za predelavo električnih in elektronske opreme. S pravilnim načinom odstranjevanja izdelka boste pomagali preprečiti morebitne negativne posledice in vplive na okolje in zdravje ljudi, ki bi se lahko pojavile v primeru nepravilnega odstranjevanja izdelka. Za podrobnejše informacije o odstranjevanju in predelavi izdelka se obrnite na pristojen mestni organ za odstranjevanje odpadkov, komunalno službo ali na trgovino, v kateri ste izdelek kupili.
PL	Symbol na produkcie lub na opakowaniu oznacza, że tego produktu nie wolno traktować tak, jak innych odpadów domowych. Należy oddać go do właściwego punktu skupu surowców wtórnych zajmujących się złomowaniem sprzętem elektrycznym i elektronicznym. Właściwa utylizacja i złomowanie pomaga w eliminacji niekorzystnego wpływu złomowanych produktów na środowisko naturalne oraz zdrowie. Aby uzyskać szczegółowe dane dotyczące możliwości recyklingu niniejszego urządzenia, należy skontaktować się z lokalnym urzędem miasta, służbami oczyszczenia miasta lub sklepem, w którym produkt został zakupiony.
SK	Symbol na výrobku alebo na jeho obale znamená, že s výrobkom sa nesmie zaobchádzať ako s domovým odpadom. Namiesto toho ho treba odovzdať v zbernom stredisku na recykláciu elektrických alebo elektronických zariadení. Zabezpečte, že tento výrobok bude zlikvidovaný správnym postupom, aby ste predišli negatívnym vplyvom na životné prostredie a ľudské zdravie, čo by bolo spôsobené nesprávnym postupom pri jeho likvidácii. Podrobnejšie informácie o recyklácii tohto výrobku získate, ak zavoláte miestny úrad vo Vašom bydlisku, zberné suroviny alebo obchod, v ktorom ste výrobok kúpili.
CZ	Symbol na výrobku nebo jeho balení udává, že tento výrobek nepatří do domácího odpadu. Je nutné odvézt ho do sběrného místa pro recyklaci elektrického a elektronického zařízení. Zajištěním správné likvidace tohoto výrobku pomůžete zabránit negativním důsledkům pro životní prostředí a lidské zdraví, které by jinak byly způsobeny nevhodnou likvidací tohoto výrobku. Podrobnější informace o recyklaci tohoto výrobku zjistíte u příslušného místního úřadu, služby pro likvidaci domovního odpadu nebo v obchodě, kde jste výrobek zakoupili.
SV	Symbolen på produkten eller emballaget anger att produkten inte får hanteras som hushållsavfall. Den skall i stället lämnas in på uppsamlingsplats för återvinning av el- och elektronikkomponenter. Genom att säkerställa att produkten hanteras på rätt sätt bidrar du till att förebygga eventuellt negativa miljö- och hälsoeffekter som kan uppstå om produkten kasseras som vanligt avfall. För ytterligare upplysningar om återvinning bör du kontakta lokala myndigheter eller soppåmningsjänst eller affären där du köpte varan


1.

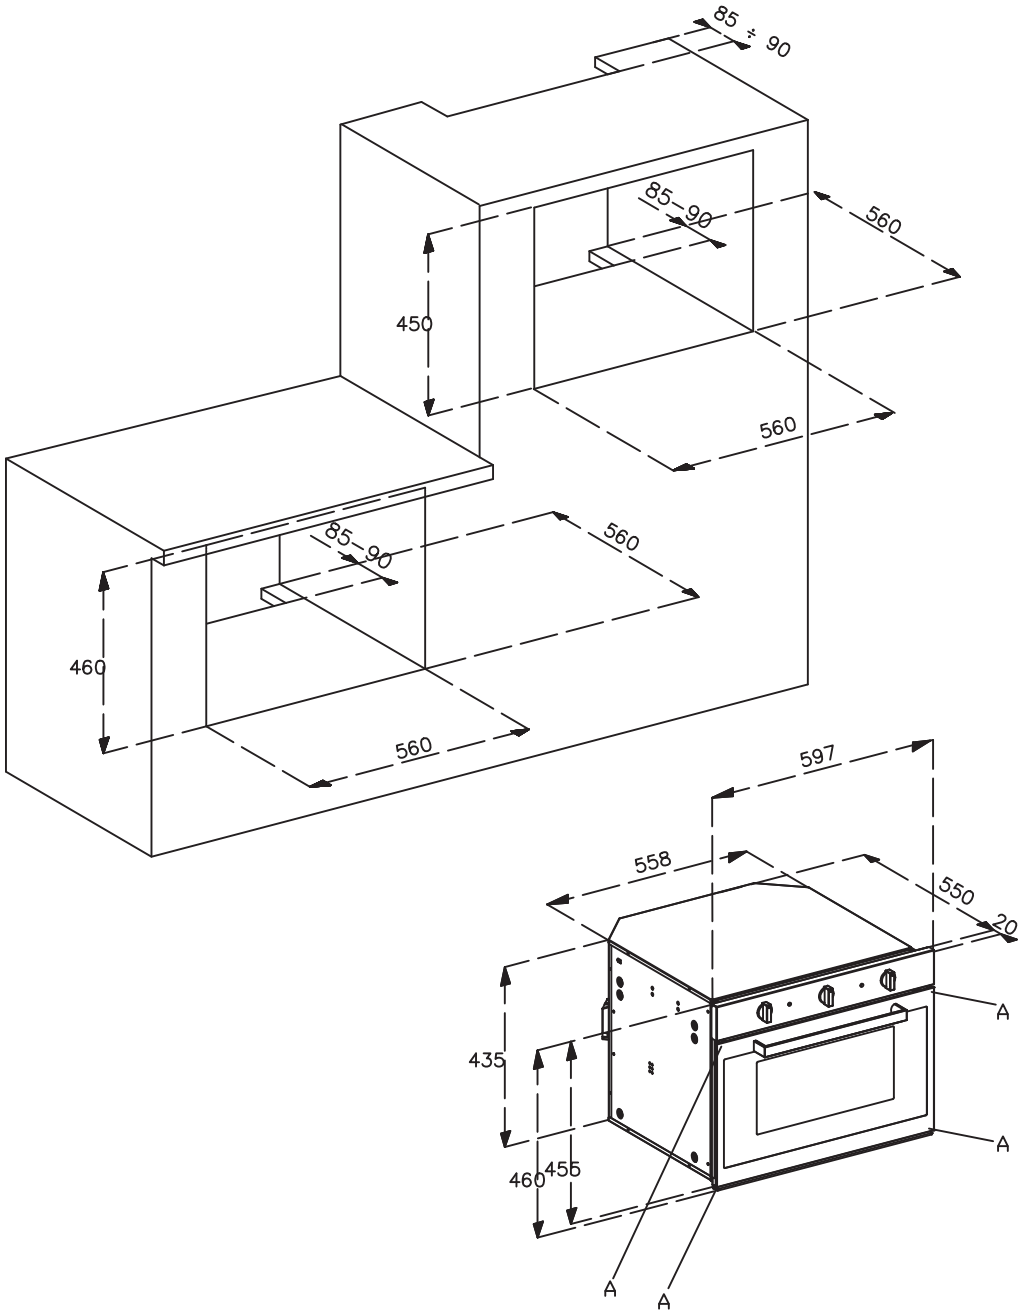

 2.

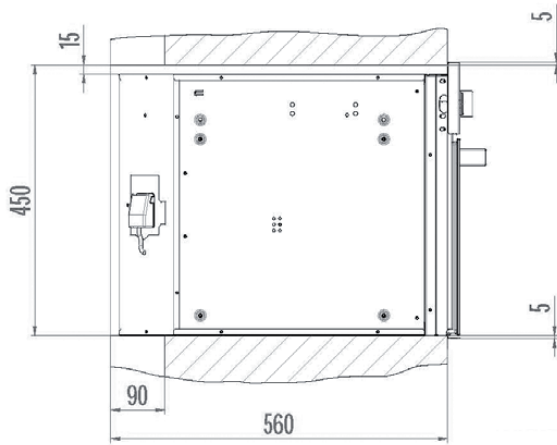

a)

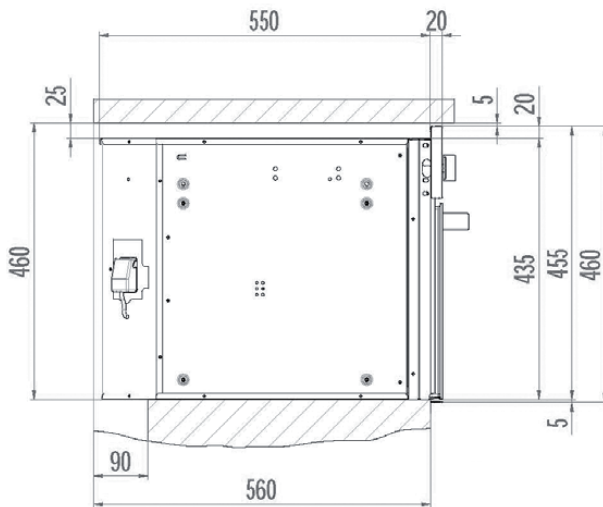 

b)

a) Colonna / column / colonne / Hochschrank / columna / kolom /
Встраивание в колонку / на себе / coluna / kolumna.

b) Sotto top / under top / sous meuble / Unterbau / bajoencimera / onder het aanrecht/
Встраивание под рабочую поверхность / pod pracovnú plochu / debaixo do placa /
pod blatem.

User instructions

Thank you for choosing one of our products. We hope you will get the very best performance from this appliance.

Therefore we would ask you to carefully comply with the the suggestions and instructions in this manual for proper use of our products.

The manufacturer shall not be held liable for damage to persons and property which is due to poor or incorrect installation of the appliance.

The manufacturer reserves the right to modify its products as deemed fit without prior notice.

Technical characteristics

Dimensions:

Height: 460 mm

Width: 597 mm

Depth: 570 mm

Volume:

Gross: 43 dm³

Net: 37 dm³

Power supply voltage: 220-240 V 50 Hz

DECLARATION OF CE COMPLIANCE

This appliance is in compliance with the following European Directives:

93/68 : General regulations

2006/95/CE : Concerning low tensions

89/336/CEE : Electromagnetic compatibility

CE Regulation n° 1935/2004 :

this appliance is suitable to come in contact with food products.

INSTRUCTIONS FOR THE USER

This manual is an integral part of the appliance.

It is necessary to keep it for the life cycle of the oven and to read it carefully for the installation, use, maintenance, cleaning and handling of the appliance.

Unplug the appliance before undertaking any sort of intervention on it.

Attention: earth connection is required by law.

During oven operation, keep children away.

During operation the oven becomes very hot.

Do not touch heating elements on the inside.

Do not use steam cleaners to clean the oven.

Do not use the appliance to heat the room.

The manufacturer will not be held liable if accident prevention measures are not observed.

The manufacturer will not be held liable for damage to persons or property due to poor or lacking maintenance of the appliance.

The manufacturer reserves the right to make any changes to the product which are felt to be useful or necessary without any advance notice.

Packaging materials (sheets, polystyrene) may be hazardous to children (danger of suffocation). Keep packaging materials out of the reach of children.

The appliance is designed for adult users who are familiar with these instructions.

Children are often not able to recognize the risks involved with the use of the appliance.

Please supervise properly and do not let children play with the appliance.

Heat is generated during cooking; the door of the appliance may get very hot, specially if it is made of glass. There is the risk of burns; do not touch and keep children away.

The physically impaired must be assisted by capable adults.

Do not carry out any modifications, tampering or repair attempts, especially with tools such as screwdrivers on the inside or outside of the appliance.

Repair work, especially on the electrical parts, must be performed only by specialized personnel.

Improper repair work can cause serious accidents, damage the appliance and equipment as well as impair proper operation.

Appliances repaired in technical service centres must undergo routine tests, especially a continuity test of the earth circuit.

THIS PRODUCT WAS DESIGNED FOR HOME USE.

THE MANUFACTURER WILL NOT BE HELD LIABLE FOR DAMAGE TO PERSONS OR PROPERTY CAUSED BY IMPROPER INSTALLATION, OR BY IMPROPER, WRONG OR SENSELESS USE.

WARNING: IN CASE OF DISASSEMBLY, MAINTENANCE AND CLEANING OF THE APPLIANCE, BE CAREFUL SOME PARTS COULD BE SHARP. PLEASE USE SUITABLE PREVENTION AND PROTECTION EQUIPMENT (GLOVES, ECT.).

In case of a failure in operation or an indispensable repair job, ask for the intervention of the customer technical service centre.

If the oven shows visible signs of damage, do not use it.

Unplug it and contact the customer technical service centre.

The oven must be unplugged as soon as an operating problem is discovered.

Make sure the power cord of the appliance is not crushed by the oven door as this may damage the electrical insulation.

If the power cord has been damaged, it must be replaced by the technical service centre in order to avoid the creation of hazardous situations.

Before closing the oven door, make sure there are no foreign bodies or pets inside the oven.

Do not place heat-sensitive or flammable materials in the oven such as detergents, oven sprays, and so on.

The oven gets extremely hot during operation.

The oven remains hot for a long time, even after it has been turned off, and cools off only very slowly until reaching room temperature. Wait for a suitable period of time before carrying out work such as cleaning.

When opening the oven door, steam and water droplets may come out.

If the oven contains steam, it is not advisable to insert the hands.

Superheated grease and oil may easily catch fire.

Never use water in an attempt to extinguish burning grease or oil (there is the danger of explosion). Suffocate the fire with wet cloths.

The rack, the plates and the cooking containers become extremely hot.

Use insulated glove or pot holders.

When using and maintaining the oven, be careful not to get fingers caught in the door hinges to avoid crushing or other injuries.

This is specially important when children are around.

Leave the door open only in an ajar position.

If the door is open there is the hazard of tripping or crushing the fingers.

Do not sit or lean on the door and do not use it as a work surface.

All work on the appliances must be carried out by qualified personnel.
For maintenance, moving, installation and cleaning of the appliance use suitable prevention and protection equipment (gloves, etc.).
Lifting and moving of appliances weighing more than 25 kg must be carried out using proper equipment, or by two persons, in order to avoid risks or injuries.

The oven is equipped with a cooling fan that comes on when the cooking cycle is selected. It creates a slight air flow that exits from the slot under the control panel. It shuts down 10-30 minutes after the oven is switched off (depending on oven temperature).

INSTRUCTIONS FOR INSTALLATION OF THE UNIT

All tasks involved in installing the appliance must be carried out by skilled personnel. Any work is to be performed with the appliance unplugged.

Electrical connection:

make sure that the voltage corresponds to that indicated on the tag on the side.
The oven must be connected using a cable with a minimum cross-section of 1,5 mm on the rear, and with an omni-polar switch compliant with current standards with a distance of aperture between contacts of at least 3 mm.

Caution:

if you need to replace the power cord, make sure you comply with the following colour-code when connecting the single wires:

BLUE	- NEUTRAL (N)
BROWN	- PHASE (L)
YELLOW-GREEN	- EARTH (\perp)

Attention: earth connection is required by law.

The manufacturer will in no way be held liable if accident prevention standards area not observed.

Insertion into the furniture unit:

The appliance can be inserted either under a worktop or into a column. In either case comply with the dimensions shown in figures 1 and 2.

For column installation, in order to ensure proper ventilation, it is indispensable to provide an opening of at least 85-90mm as shown in figure 1.

The oven is secured to the furniture unit by four screws “A” located in the holes of the perimeter frame (see fig. 1).

Do not use the door a lever when installing the oven.

 
Do not place excessive pressure on the oven door when it is open.

Before using the oven for the first time

After unpacking the oven, installing it in the furniture unit and removing the accessories (drip pan and racks), it is advisable to run it at the highest temperature for about 20 minutes to remove any oily residues left from the manufacturing process which may cause unpleasant odours during cooking. Aerate the room while doing this. Wash the drip pan and racks with washing up liquid.

For the first few minutes that the oven is in operation, condensation may form on the front. This does not in any way compromise operation of the unit.

INSTRUCTIONS FOR USE

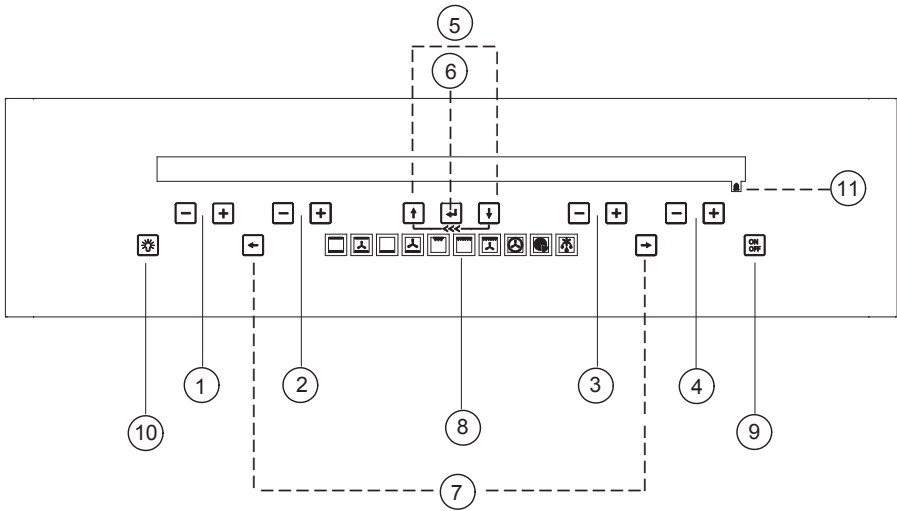

KEYS DESCRIPTION

- 1** Keys for selecting temperature for cooking with pre-set functions(+ to increase, - to decrease)
- 2** Keys for selecting temperature for cooking with food probe (+ to increase, - to decrease)
- 3** Keys to select time for programmed cooking (+ to increase, - to decrease)
- 4** Keys to set time and to select display language
- 5** Selection keys for oven setting menus
- 6** Confirm key
- 7** Keys for selecting cooking functions
- 8** Pre-set cooking function symbols
- 9** Oven on/off key
- 10** Manual on/off key for internal oven light
- 11** Timer symbol

Switching on for the first time selection of language and time setting

To turn the oven on, press the ON/OFF key **(9)** and release it after 1 second. The display will light up and it will show the message **WAIT** . Do not touch any key until the language selection menu appears.

Choose the desired language using the keys **+ - (4)** , and confirm with the Enter key **(6)** or wait a few seconds and confirmation will take place automatically.

Then set the time using the keys **+ - (4)**. The time scrolls more rapidly if you hold down the keys **+ or -**.

Confirm your selection with the key **(6)**.

Once you have set the time, again press ON/OFF and release it after 1 second. The display will show these messages:

← → COOKING SELECTION ↑↓ MENU

"Cooking selection" lets you access the choice of preset cooking functions of the oven, while "menu" lets you choose from the various accessory settings of the oven.

Select a cooking function from among those available using the keys **+ - (7)**.

Confirm your selection with the key **(6)**. Each cooking function includes a preset temperature, which may not be varied with the keys **+ - (1)**.

The display will now show a message requesting pre-heating of the oven. You can accept or refuse with the keys **+ - (4)**, then confirm **(6)**.

If the request is confirmed, the oven will start heating. When this is complete, the display will show a message for the end of the operation and an acoustic signal is emitted.

Then press the key **(6)** to activate the previously chosen cooking.

If you do not press the key **(6)** within 5 minutes, the oven will shut off.

To cancel the selections you have made, simultaneously press the keys **↑ and ↓ (5)**.

If you want to interrupt pre-heating, simultaneously press the keys **↑ and ↓ (5)**.

Preheating will be interrupted and the selected cooking functions will start directly.

If you want to change the cooking function, use the selection keys **(7)**.

Time-controlled cooking

First of all, select a cooking function using the selection keys (7). The temperature can be modified using the keys (1).

You can set a cooking duration time using the keys + - (3) to increase or decrease the desired time. Confirm your selection with the key (6).

The message will then show a request for preheating the oven. Select YES/NO with the keys (4). If confirmed, the time used for preheating will be detracted from the set cooking time.

The message waits for a response for 5 seconds. If no selection is made, the oven automatically goes into cooking mode with no preheating.

During time-controlled cooking, the display shows a countdown in minutes and seconds, and the timer symbol stays on (11).

When the programme is complete, the oven emits an acoustic signal.

To cut off this sound, press any key except for ON/OFF.

Delayed cooking (setting of end of cooking time)

Select a cooking mode and set the duration as described in the previous paragraph.

After selecting the cooking time, press the keys ↑ or ↓ (5), until you come the item "end of cooking". Confirm the selection with the key (6), then set the end of cooking time.

After you have made this setting, a message will appear on the display every 15 seconds which shows the time remaining until the oven switches on.

If you want to modify the times, use the keys - (3).

If you want to delete the programme, simultaneously press the keys (5).

When the programme is complete, the oven emits an acoustic signal.

To cut off this sound, press any key except for ON/OFF.

Note: during operation of the oven in defrost mode, you may not set any end of cooking time.

Your new oven lets you memorize the programmes and cooking modes you have tried and found to be best suited to your needs.

As illustrated, for each cooking mode you can change the temperature, set a duration or a time for end of cooking. These settings can be memorized and recalled any time you like.

With the keys ↑ or ↓ (5), recall the menu and scroll through the various options until you select cooking cycle memorization. Then match a number to the memorized cycle.

You can memorize up to 10 programmes. They will appear on the display as programme 1, programme 2, and so on.

To recall a memorized programme, enter the menu with the keys ↑ or ↓ (5).

Scroll through the various options until you come to Recipes. Confirm this with key (6). Then select Personal Recipes and confirm with the key (6).

The display will show a new menu. It lets you recall memorized programmes or delete them.

Timer

The oven is equipped with an electronic timer that is independent of oven operation. It allows a countdown of the set time.

To set the time, use the keys + - (4).

Use the keys (4) to turn on the timer symbol(11). The display will show the message "Alarm Clock".

You can set a time including between 00h00m and 23h59m.

Confirm the setting with the key (6).

While the time is in operation, the display will continue to show the symbol (11).

When the countdown is complete, the oven will emit an acoustic signal for 5 minutes. To cut off this sound, press any key except for ON/OFF.

If you want to cancel the timer setting, press simultaneously on the keys + and - (4).

Cooking with the food probe

You can cook your favourite dishes using the probe. The probe is inserted in the appropriate hole inside the oven, on the wall at upper left.

The temperature sensor is instead inserted in the food you are going to cook..

It must be completely inserted, if possible in the middle of the food.

The sensor detects the internal temperature of the food during cooking.

Once the probe is connected to the oven, the display shows the symbol of a bar / and the probe temperature (preset to 70°C) to confirm that the probe has indeed been connected.

Choose from among the available cooking functions with the keys (7).

You can modify the oven temperature using the keys (1).

The probe temperature can be modified using the keys + - (2).

The programmes for cooking with the probe can also be memorized. The procedure is the same as described in the previous paragraphs.

When a probe cooking programme is recalled, the display shows the probe insertion notification.

Note: when the oven is operating in defrost mode, if the probe is left inserted, there will be a notice on the display to disconnect it.

Menu options

To select the menu, use the keys \uparrow or \downarrow (5). The display will show the following options: Recipes, Settings, Guide and Exit. You can scroll them using the keys (5). To go back a step, press both keys (5).

After you select the option Recipes with the key (6), a list of various types of foods will appear (meat, bread/pizza, fish, desserts, timbales, personal recipes, and exit menu). Each food type in turn has a sub-group of suggested recipes (for example, if you select "desserts" with key (6) a selection will appear: biscuits, etc.).

Each of these recipes, when selected, will activate the oven according to a cooking programmes with predefined time and temperature.

It is possible to modify the cooking times and temperatures using respectively the keys(1) and (3).

Use the keys **(5)** to select the menu followed by Settings. The display will show a further selection menu, which includes the following:

language: lets you modify the set language

clock setting: includes 3 options.

- possibility to show clock on display (YES/NO selection)
- adjustment of time
- night mode: the display is lit at low intensity from 10:00 pm until 7:00 am.

lock keypad: can be automatic or manual.

With automatic lock, it is activated after the keypad is inactive for 1 minute. To release it, press simultaneously the key at far left – and the key at far right +.

Manual lock is also activated and de-activated by simultaneously pressing the key at far left – and the key at far right + .

acoustic signal: choose the volume from among low, medium and high

illumination: choose whether to shut off the light in the oven automatically or manually. If automatic, after turning it on with key **(10)**, the light will switch off after 5 minutes. With manual shut-off, the light must be turned off using key **(10)**.

restore settings: resets all settings (language, time, programme) to their defaults settings.

If you use the keys **(5)** to select the menu followed by Guide, the menu shows a series of suggestions for cooking and for using the oven.

If you use the keys**(5)** to select the menu followed by Exit, you will leave the menu options.

Cooking functions



Traditional cooking

It is recommended that the oven is pre-heated before introducing the food.



Traditional cooking with fan

Cooking mode suited to bake bread, pizzas and lasagne.

It is recommended that the oven be pre-heated.

Keep the oven door closed during this function.



Bottom element only

Suitable for very slow cooking and warming up of food.



Bottom element with fan

This type of cooking is specially slow and delicate.



Centre grill

This kind of cooking is specially suited to small amounts of food.

Keep the oven door closed during this function.



Double grill

This kind of cooking is specially suited for larger quantities of food that require full width grilling.

Keep the oven door closed during this function.



Double grill with fan

The action of the fan, combined with the action of the grill, allows for quick, thorough cooking of food.

It is advisable to heat the oven for a few minutes before putting food in it.



Fan cooking

This type of cooking allows even heat distribution to all parts of the oven. It is possible to cook two different types of food (e.g. meat and fish) while using their different respective cooking times.



Pizza function

This kind of cooking is ideal for pizza and vegetable dishes. With this function, all the heating elements and the fan work together.



Defrosting

Only the fan works, so there is no transmission of heat. The oven door must be closed. This function makes it possible to defrost foods using only about one-third of the time that would normally be required.

Table of cooking suggestions

Type of dish	Temp. °C	Cooking time in minutes	Level (from bottom)	Cycle
• Bread and biscuits				
Pizza	220	20/30	1	☺ or ☹
Bread	190/200	45/60	1	
Bread with filling	150/160	20/25	1 or 2	
White bread	175/210	25/40	1 or 2	
Biscuits	140/150	20/30	1 or 2	
• Pie and pastry				
Focaccia	175	40/45	2	☺ or ☹ or ☹
Sponge cake	190	25/35	2	
Chocolate cake	175	30/40	2	
Fruit pie	140	50/70	2	
Vol-au-vent	175	20	2	
Doughnut	180	35/45	2	
Angel cake	150	20/25	2	
Souffle	180/200	20/30	2	
Meringue	120/125	25/35	2	
• Meats				
Veal stew (1/1,5Kg)	150/160	180/210	1 or 2	☺ or ☹
Roast veal (1/1,5Kg)	150/160	120/150	1 or 2	
Meat loaf(1/1,5Kg)	180/190	90/120	1 or 2	
Lamb (leg or chop)	180/190	60/90	1 or 2	
Beef (leg or chop)	180	45/60	1 or 2	
Pork (loin or leg)	180	60/90	2	
• Game				
Roast pheasant	180	60/90	1 or 2	☺ or ☹
Venison	175	90/120	1 or 2	
• Poultry				
Chicken	170	90/120	1 or 2	☺ or ☹
Duck	175	180/200	1	
• Fish				
Fish in general	200	15/20	2	☺ or ☹

Foods to be grilled	Cooking time in minutes	
	Over	Under
Cuts of thin meat	6	4
Cuts of normal meat	8	5
Fish (e.g. trout, salmon)	15	12
Sausages	12	10
Toast	5	2

Depending on the type of food (e.g. meats, fish, poultry, etc.), you will need to turn the food to expose both sides to the infrared rays.

The data provided above is approximate. Cooking times vary based on the experience of the person using the oven and the amount and quality of the foods.

The cooking times do not include pre-heating. It is advisable to pre-heat the oven for about 15 min.

With the ventilated grill function, do not select a temperature of more than 190°C.

CLEANING AND MAINTENANCE OF THE OVEN

Important: Before performing any maintenance, you must either unplug the oven or disconnect the power supply via the omni-polar switch of the electrical system.

Cleaning the oven:

- **Let the oven cool after each use** and clean it to keep burnt on residues from being repeatedly heated.
- For tough dirt, use a product specifically for oven cleaning. Follow the instructions on the container of the product.
- Clean the outside with a sponge dampened in lukewarm water.
- Do not use abrasive products, steel wool pads, electrical or steam cleaners, or flammable products.
- Do not use abrasive substances or materials to clean the glass as they may damage it.
- Wash accessories in a dishwasher or by hand using a product for oven cleaning.

ATTENTION: use protective gloves for the following tasks.

How to remove the oven door (fig. 4)

To make it easier to clean the oven, it is possible to remove the door from the hinges as follows:

The hinges A are equipped with 2 mobile U-bolts B.


When the U-bolts B are lifted, the hinges are disconnected from their housing.

- After this, lift the door up and pull it outwards, holding the door on both sides near the hinges.

To re-install the door:

- Slide the hinges into the grooves and open the door all the way.
- Turn the mobile U-bolts to their starting position before closing the door again.

 Fig. 4

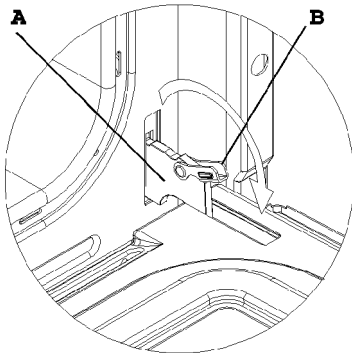

ATTENTION:


Please ensure that you do not remove the hinge locking system when you remove the door. The hinge mechanism has a very strong spring. Never immerse the door in water.

Cleaning the side rails - Fig. 5

The side rails are to be hooked onto the wall of the oven. Slide the racks and tray provided into the side rails.

To remove the side rails press on part A as shown .

 Fig. 5

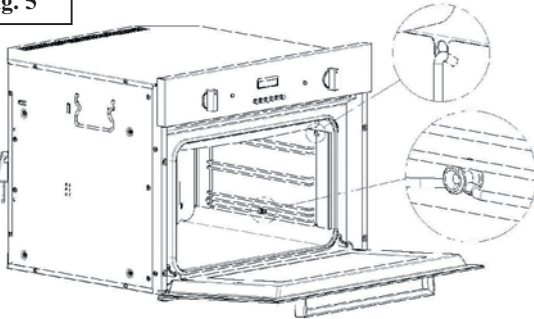

Replacement of oven lamp (fig. 6)

- Disconnect the oven from the electrical power supply.
- Use a screwdriver to remove the light cover.
- Replace the lamp
- Put the light cover back
- Restore the power supply

N.B. : use only lamps that are 25W 230V, type E-14, T 300°C, available from our technical service.

Fig. 6

