


KitchenAid®

OVEN PARTS

For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
(Black) (White) (Stainless)

27" BUILT-IN ELECTRIC
DOUBLE OVEN
THERMAL CONVECTION

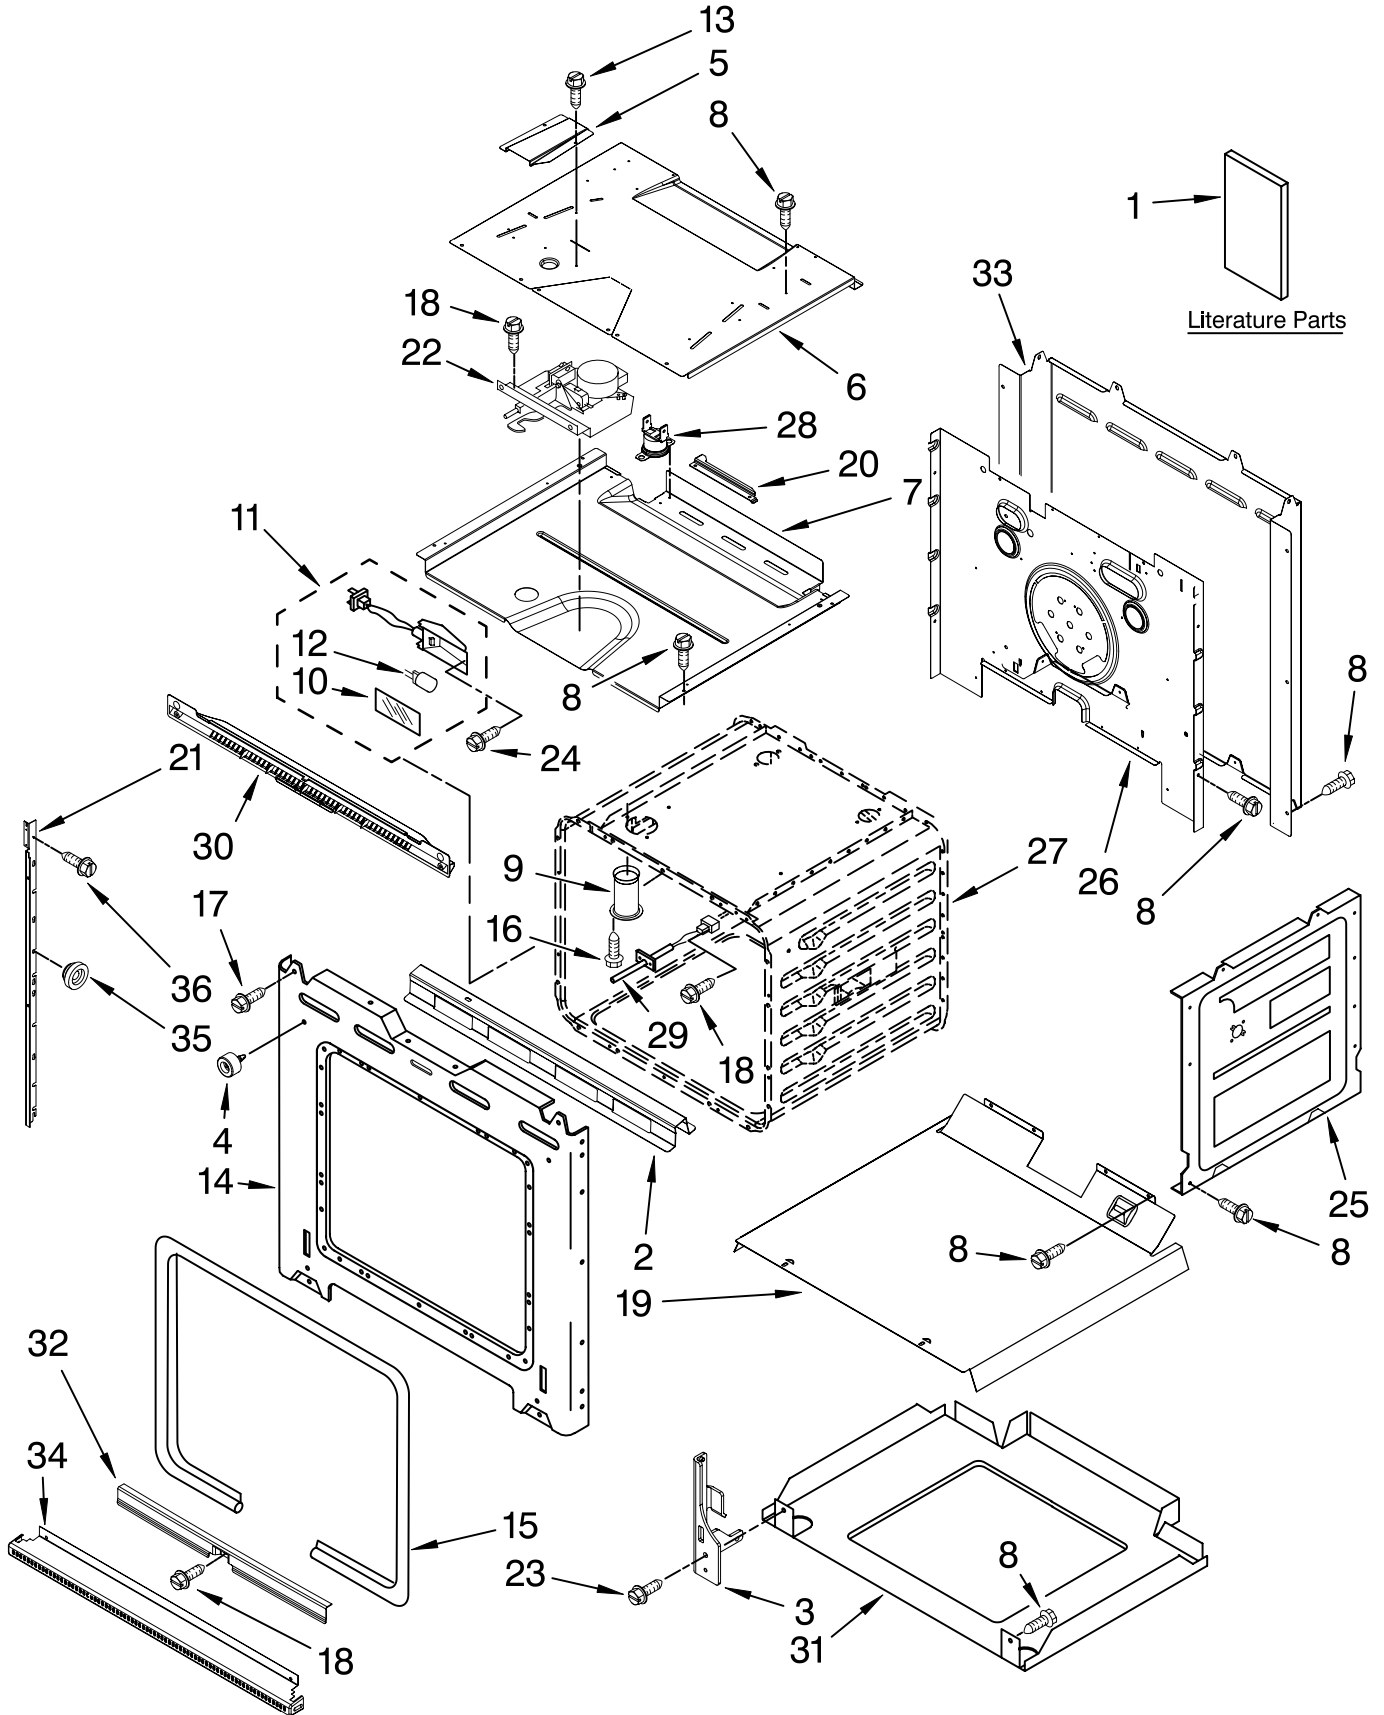

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8304336	Literature Parts Installation Instructions	11	W10009940	Oven Light Assembly	26	8304304	Back, Chassis
	W10162180	Use & Care Guide Tech Sheet	12	W10169757	Bulb, Light	27		Liner, Oven (Not serviceable)
	W10220954	English	13	3400832	Screw (2)	28	8304452	Thermal Fuse 105C
	W10220955	French	14	8304629	Frame, Front	29	W10131825	Sensor
	8304335	Easy Set Guide	15		Gasket, Door	30	8303724	Vent, Center
	9762761	Safer Cooking Tips		8304494	Lower	31	8303772	Base, Chassis
	W10065852	English	16	3196176	Screw	32	8304478	Retainer, Gasket
		French	17	4449040	Screw	33	8303517	Cover, Back
2	W10153090	Bracket, Base	18	4449154	Screw	34		Trim, Bottom Vent
3	4455606	Hinge Receiver Right	19	4451477	Support, Insulation		8303706BL	Black
	4455605	Left	20	W10169348	Bracket, Thermostat		8303706WH	White
4	W10105790	Bumper, Door (2)	21		Mounting Rail, Side		W10165444	Stainless
5	8303829	Exhaust, Vent Slope		8303677BL	Black	35	4448444	Grommet, Mounting Rail
6	W10181198	Divider, Center Vent		8303677WH	White	36	3400893	Screw (12)
7	W10204469	Top Chassis		8303678BL	Black	FOLLOWING PARTS NOT ILLUSTRATED		
8	4449809	Screw		8303678WH	White	INSULATION		
9	4452158	Tube, Vent	22	W10195935	Latch, Mortorized		8303966	Insulation, Wrap
10	W10169756	Lens, Light	23	4449743	Screw		8303968	Insulation, Back
			24	4449748	Screw			
			25	4455641	Side, Chassis			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
 (Black) (White) (Stainless)

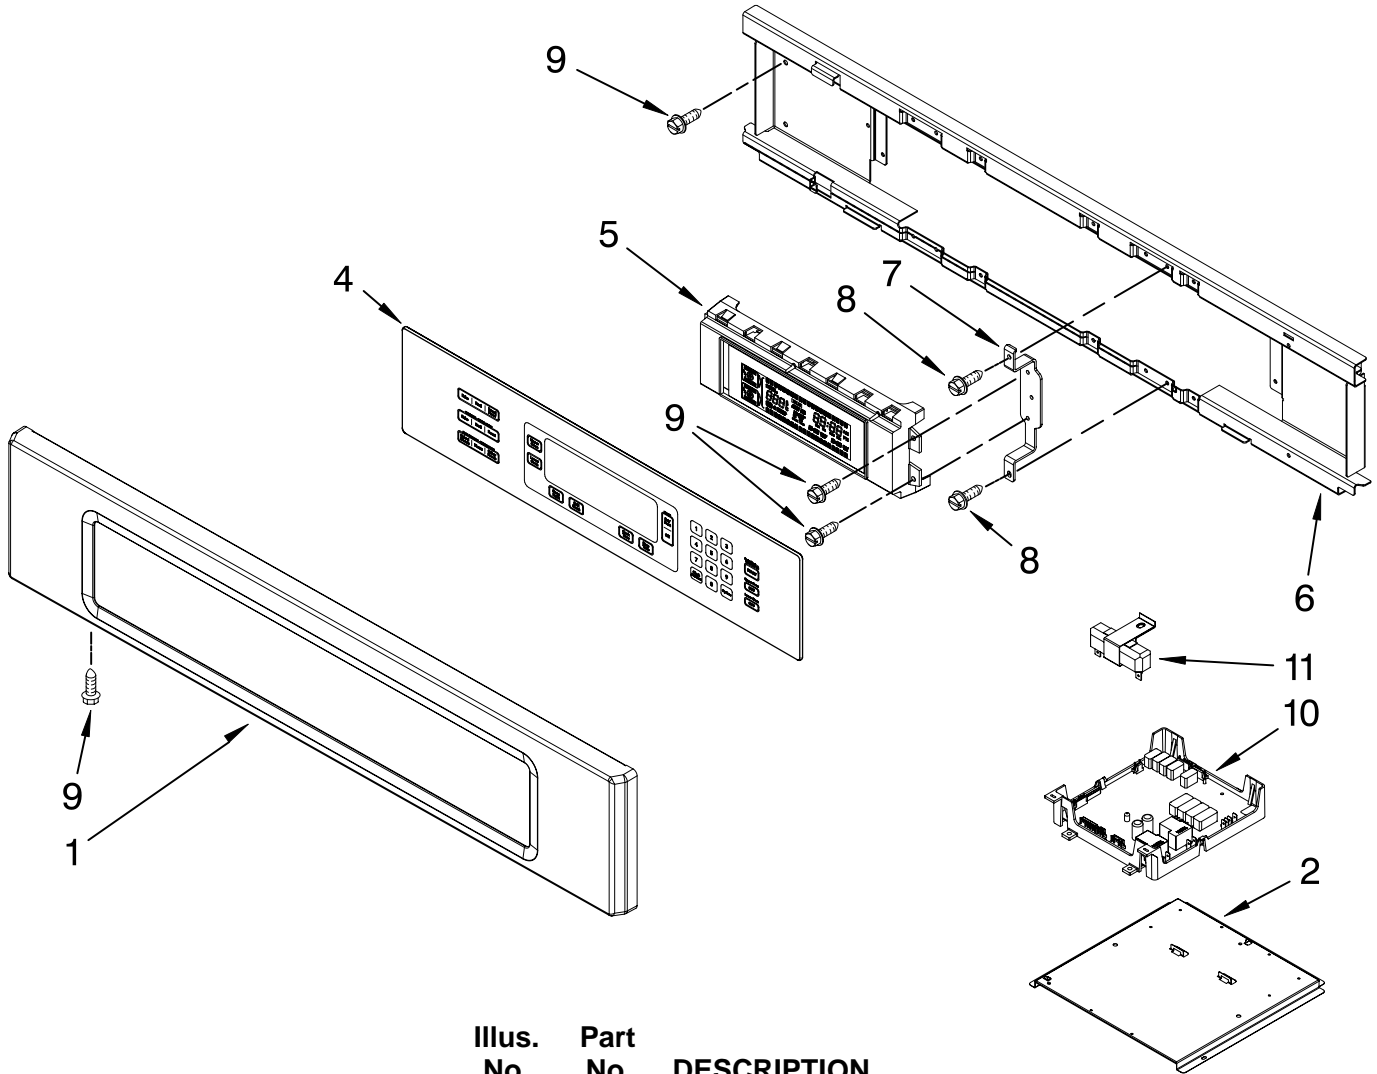


Illus. No.	Part No.	DESCRIPTION
1	8303717BL 8303717WH W10165446	Panel, Control Black White Stainless
2	8303687	Support, Appliance Manager
4	8303880	Control Panel, Glass Touch
5	W10172472	User Interface
6	8303720	Backer, Control
7	8303887	Bracket, Enclosure (2)
8	4449154	Screw
9	3400832	Screw
10	W10119142	Appliance Manager
11	8304441	Resistor, Drop

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
(Black) (White) (Stainless)

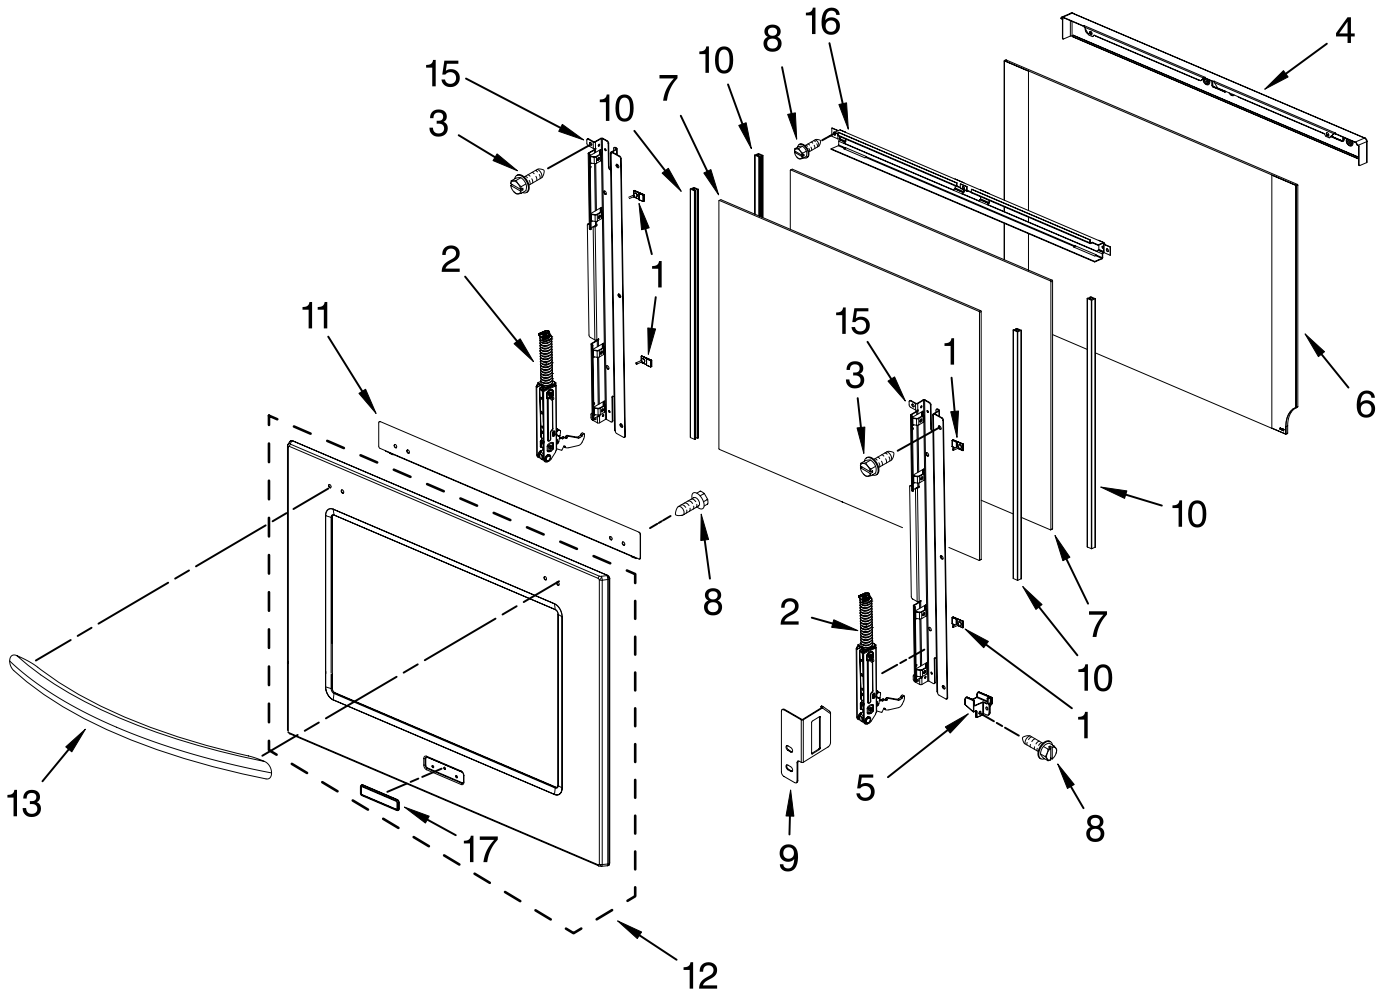

Illus. No.	Part No.	DESCRIPTION
1	8304522	Bumper, Door
2	W10174288	Hinge, Door (2)
3	3196183	Screw
4	8304580BL	Vent, Door Top
5		Bracket, Door
	8304377	Right
	8304378	Left
6	8303738BL	Door Liner
7	8303732	Glass, Inner
8	4449743	Screw
9		Cover, Hinge
	W10137044	Right
	W10137043	Left
10	8304523	Seal


Illus. No.	Part No.	DESCRIPTION
11	8304361BL	Bracket, Handle
12		Door Glass, Assembly
		Lower Includes #17
	8304001	Black
	8304003	White
	W10237352	Stainless
		Door Glass, Assembly
		Upper No Badge
	8304002	Black
	8304004	White
	W10237353	Stainless

Illus. No.	Part No.	DESCRIPTION
13		Door Handle
	8303775BL	Black
	8303775WH	White
	8303775SS	Stainless
15	8303745BL	Frame, Door Side(2)
16	8303754	Door, Top Bracket
17		Badge
	8304603BL	Black
	8304603WH	White
	8304603SS	Stainless

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
 (Black) (White) (Stainless)

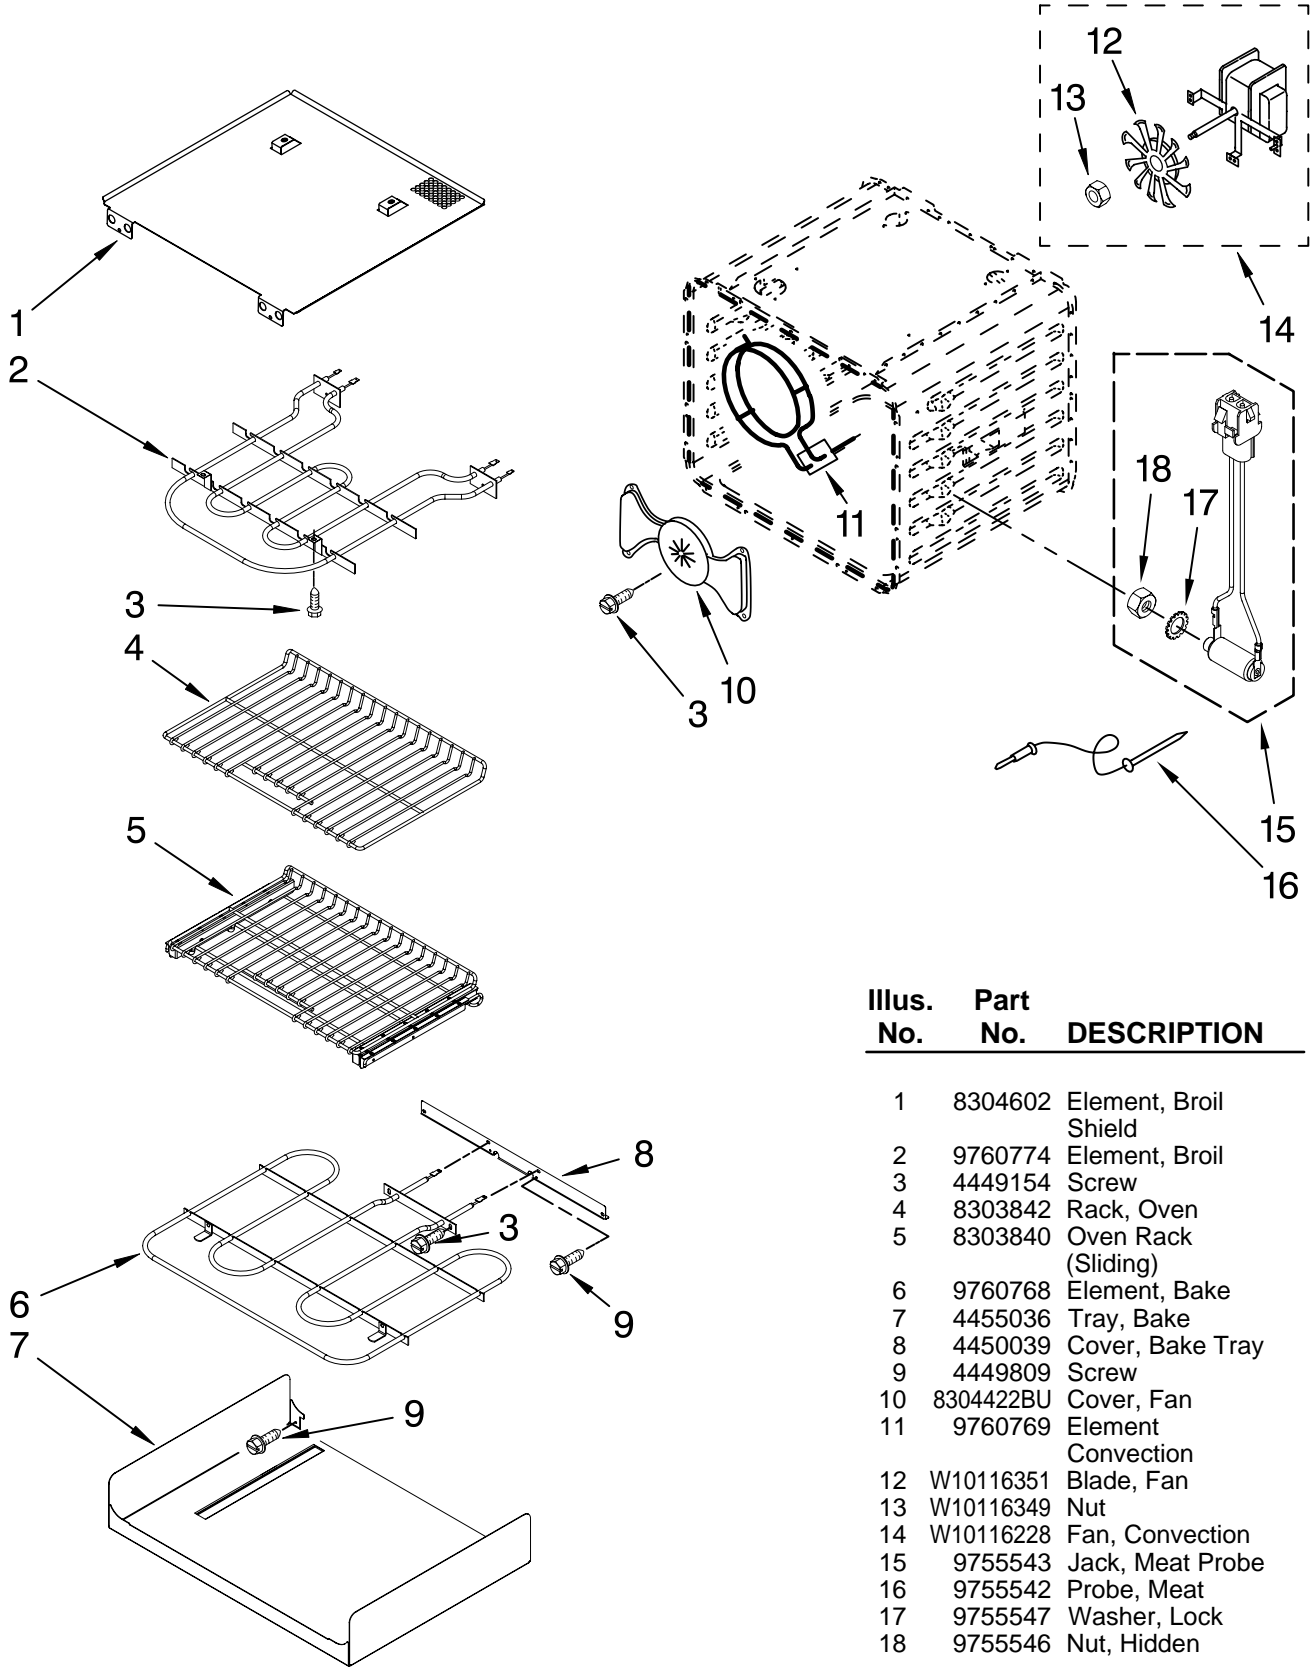


Illus. No.	Part No.	DESCRIPTION
1	8304602	Element, Broil Shield
2	9760774	Element, Broil
3	4449154	Screw
4	8303842	Rack, Oven
5	8303840	Oven Rack (Sliding)
6	9760768	Element, Bake
7	4455036	Tray, Bake
8	4450039	Cover, Bake Tray
9	4449809	Screw
10	8304422BU	Cover, Fan
11	9760769	Element Convection
12	W10116351	Blade, Fan
13	W10116349	Nut
14	W10116228	Fan, Convection
15	9755543	Jack, Meat Probe
16	9755542	Probe, Meat
17	9755547	Washer, Lock
18	9755546	Nut, Hidden

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
 (Black) (White) (Stainless)

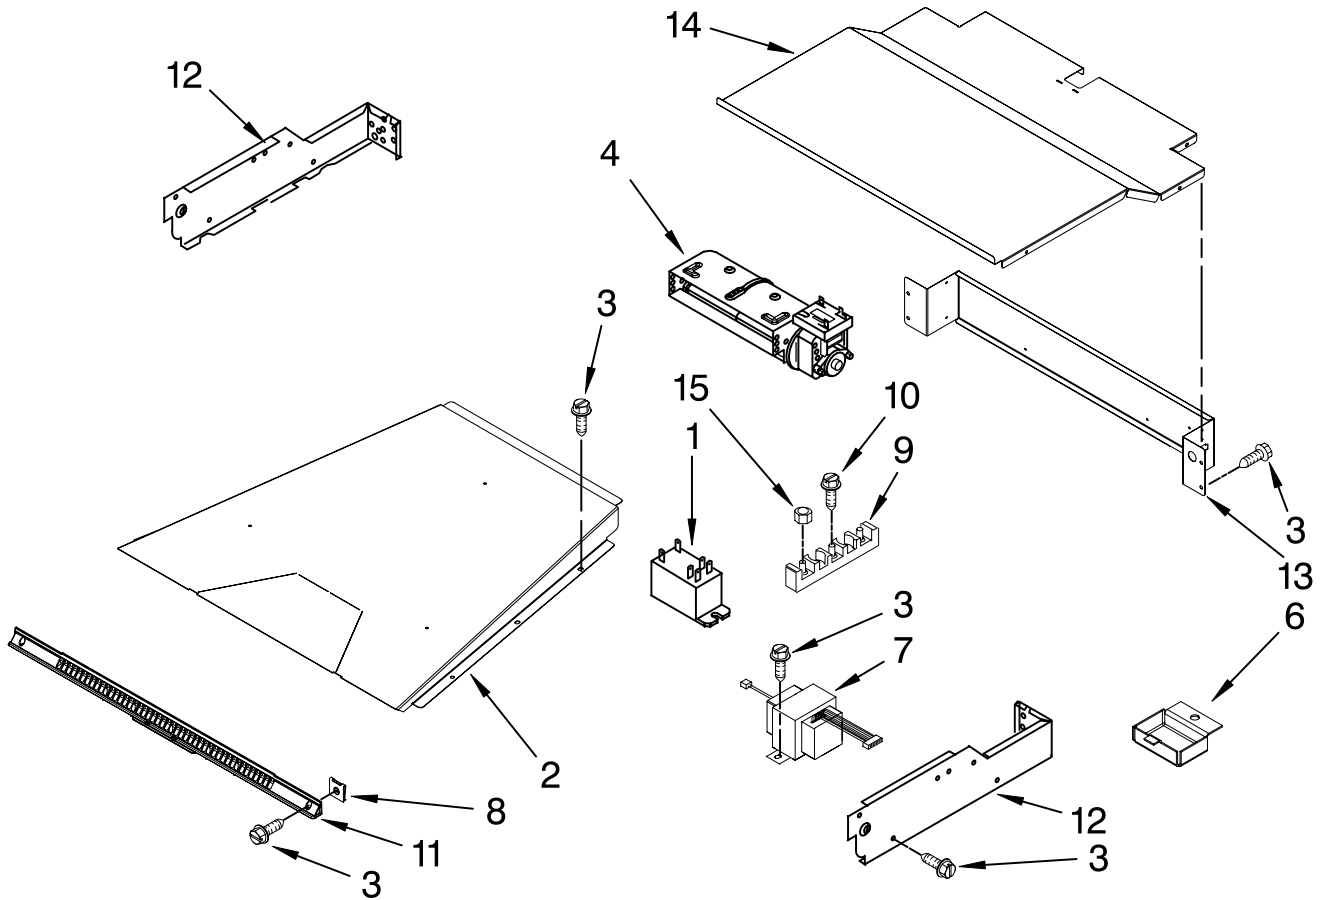

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

1	9752759	Relay (2)
2	8304643	Duct, Air Outlet
3	4449809	Screw
4	8303972	Blower, 60mm
6	8285593	Connector, Cover
7	W10111628	Transformer, Control
8	4450118	Nut
9	4449868	Block, Terminal
10	3400080	Screw
11	8303722	Vent, Control Panel
12		Side, Control Top
	8303518	Right
	8304255	Left
13	8303520	Back, Control
14	8304220	Cover, Top
15	112432	Nut (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: KEBS278SBL04, KEBS278SWH04, KEBS278SSS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
261869 Cord Brown
72032 Black

PAINT, SPRAY

350930 White
261900 Citrine White
830864 Black

ADHESIVE

591014 Adhesive
Loctite (1/3 oz.)
482338 Sealer, Silastic
(3 oz.)

WIRING HARNESS PARTS

W10143473 Harness, Latch
W10155291 Harness, Keyboard
W10171560 Harness, GOC
8304051 Harness, Main
W10155291 Connector, Flex
8304439 Conduit, Double
7103P027-60 Nut
4450800 Screw, Ground
4452260 Spacer, Foam

Miscellaneous

4448950 Screw, Install (4)
98997 Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST