


OVEN PARTS

For Models: KEMS308SSS03
(Stainless)

30" BUILT-IN ELECTRIC
COMBO OVEN
THERMAL CONVECTION

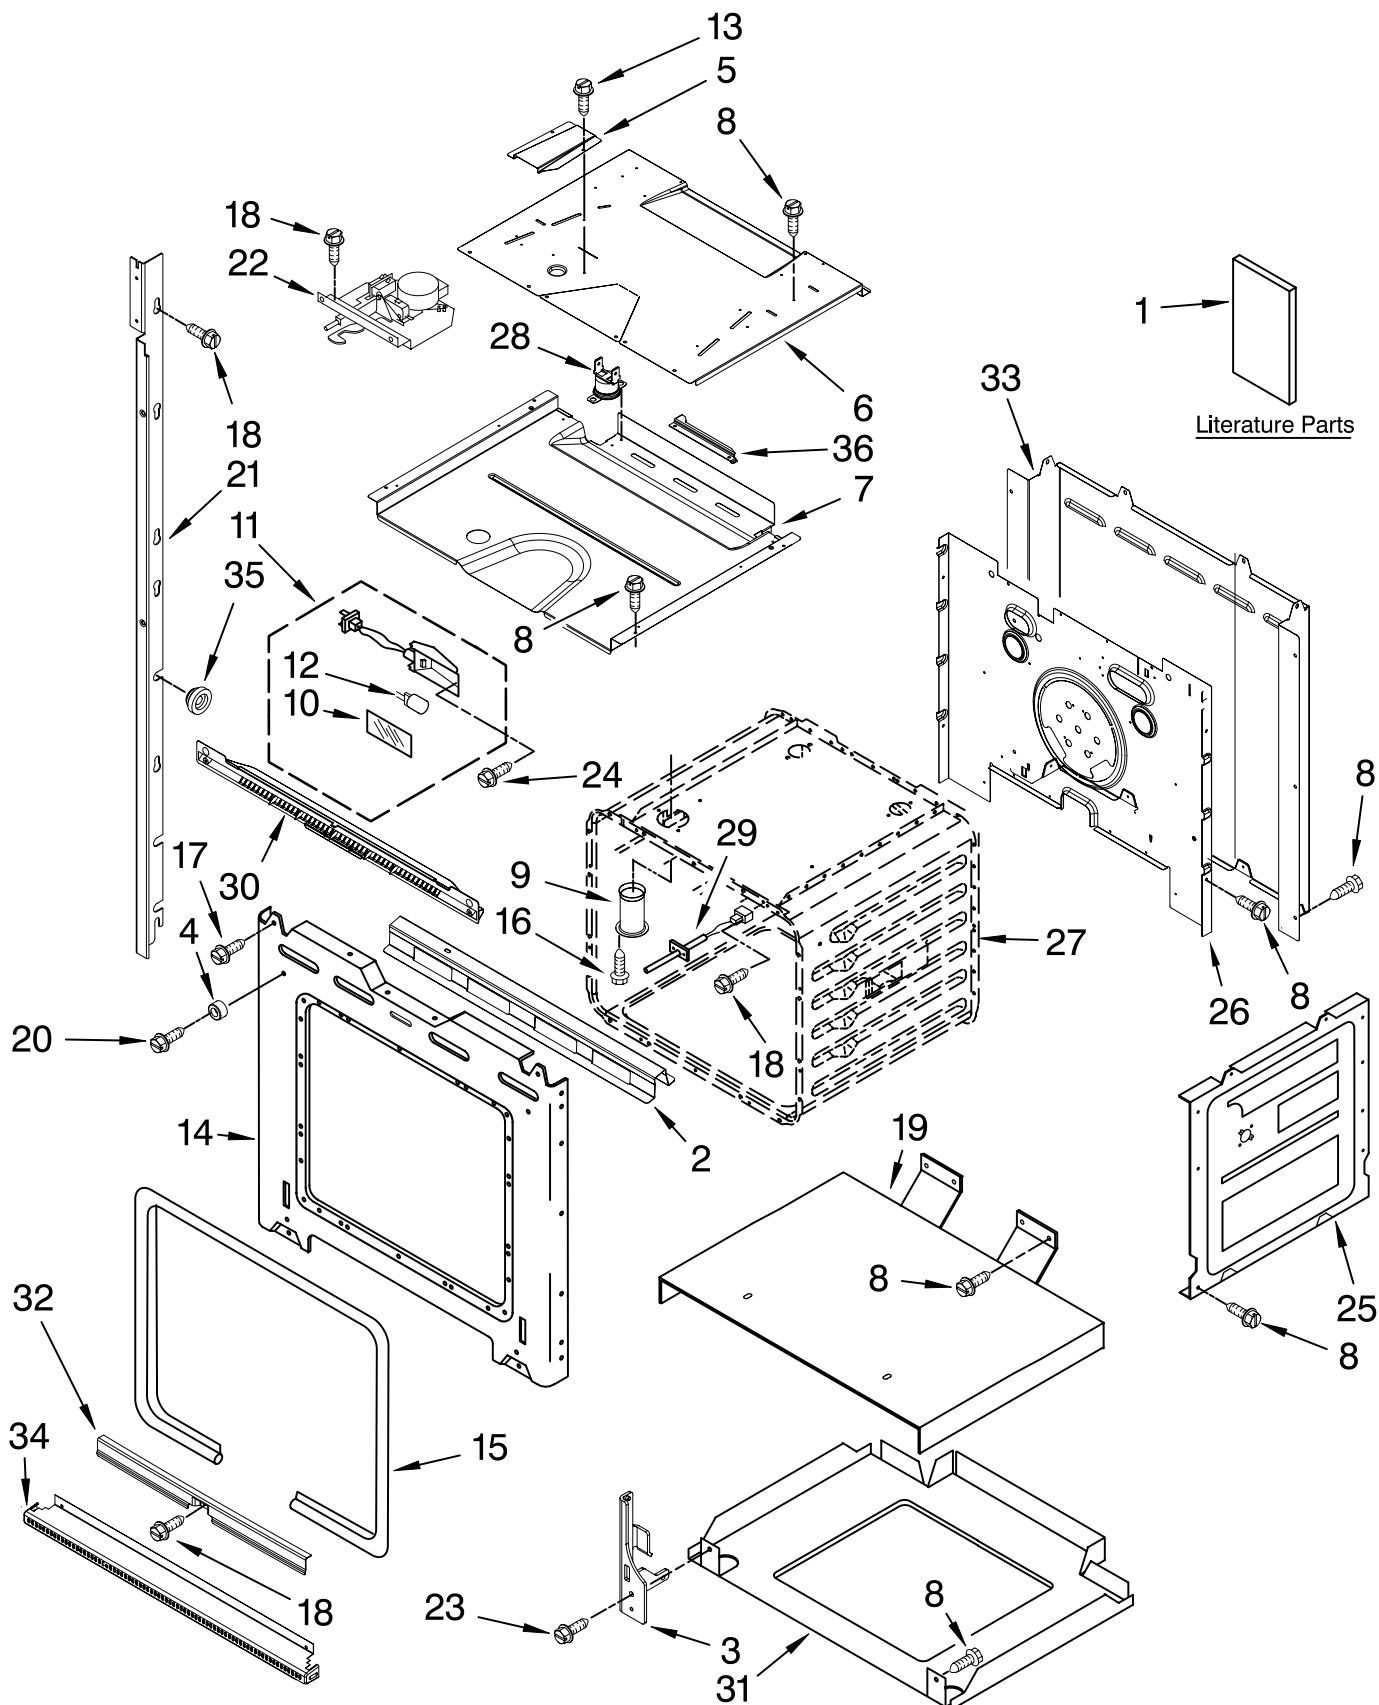

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:KEMS308SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION
1	8304337	Literature Parts Installation Instructions Use & Care Guide
	W10162223	Combo, Lower
	W10162181	Microwave Tech Sheet
	W10220956	English
	W10220957	French Easy Set Guide
	8304338	Oven
	8304375	Microwave Safer Cooking Tips
	9762761	English
	W10065852	French
2	W10153090	Bracket, Base
3		Hinge Receiver
	4455606	Right
	4455605	Left
4	W10105790	Bumper, Door (2)
5	8303829	Exhaust,Vent Slope

Illus. No.	Part No.	DESCRIPTION
6	W10181196	Divider, Center Vent
7	W10204470	Top Chassis
8	4449809	Screw
9	4452158	Tube, Vent
10	W10169756	Lens, Light
11	W10009940	Oven Light Assembly
12	W10169757	Bulb, Light
13	3400832	Screw (2)
14	W10115861	Frame, Front
15	8304493	Gasket, Door
16	3196176	Screw
17	4449040	Screw
18	3400893	Screw
19	4451478	Support, Insulation
20	4450038	Screw (2)
21		Mounting Rail,Side
	8303679BL	Right
	8303680BL	Left
22	W10195935	Latch, Motorized
23	4449743	Screw

Illus. No.	Part No.	DESCRIPTION
24	4449748	Screw
25	4455641	Side, Chassis
26	8304303	Back, Chassis
27		Liner, Oven (Not serviceable)
28	8304452	Thermal Fuse
29	W10131825	Sensor
30	8303685	Vent, Center
31	8303516	Base, Chassis
32	8304478	Retainer, Gasket
33	8303517	Cover, Back
34	W10216230	Trim, Bottom Vent
35	4448444	Grommet, Mounting Rail
36	W10169348	Bracket, Thermostat

FOLLOWING PARTS NOT ILLUSTRATED


INSULATION

8303965	Insulation, Wrap
8303967	Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:KEMS308SSS03
(Stainless)

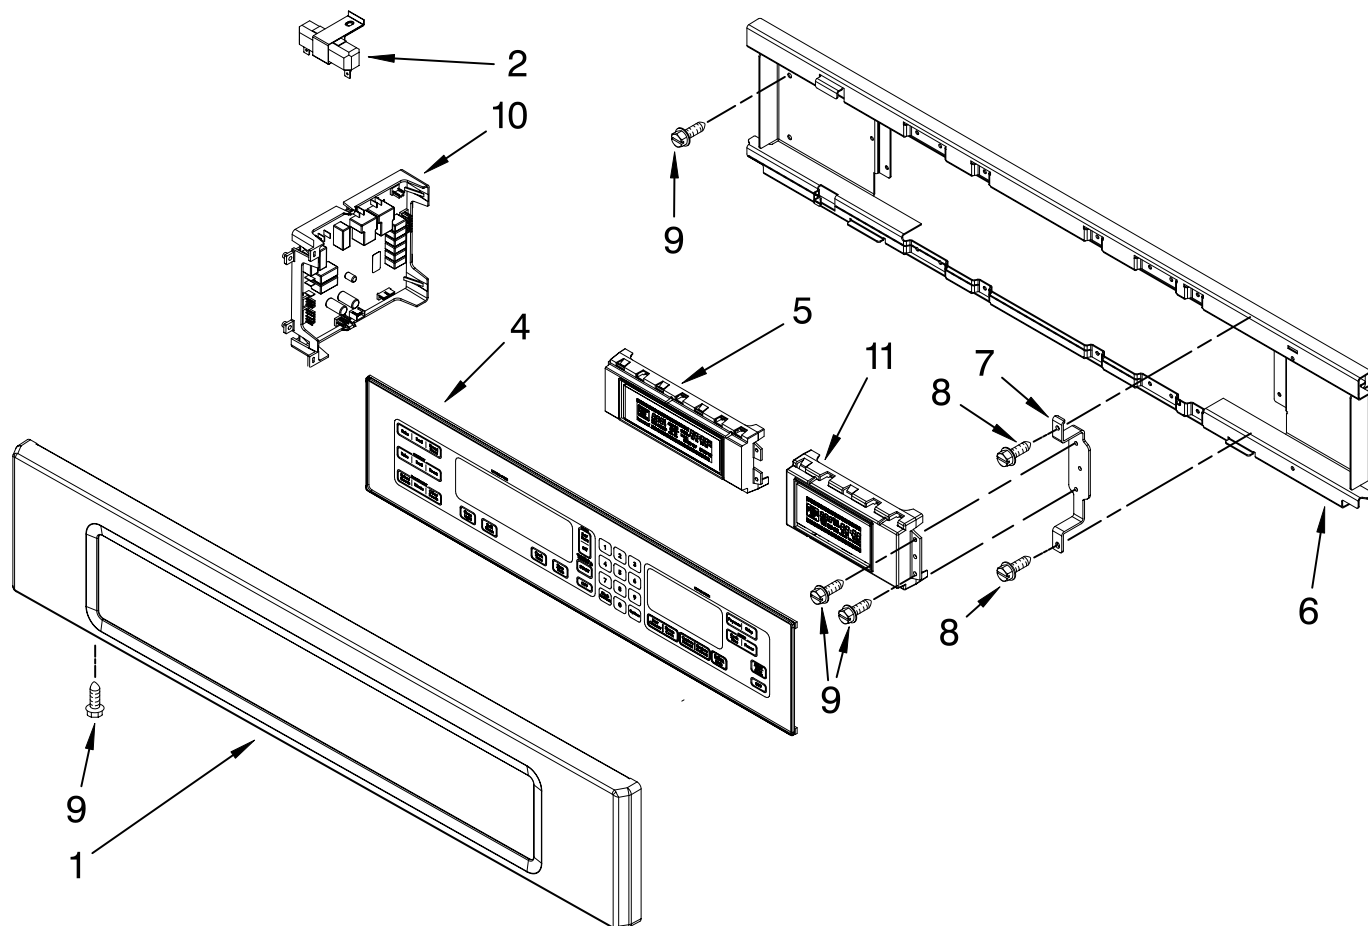


Illus. No.	Part No.	DESCRIPTION
1	W10216219	Panel, Control
2	8304441	Resistor, Drop
4	8303882	Keyboard, Glass Touch
5	W10118734	User Interface, Oven
6	8303719	Backer, Control
7	8303887	Bracket, Enclosure
8	4449154	Screw
9	3400832	Screw
10	W10119143	Appliance Manager
11	W10118735	User Interface, Microwave

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models:KEMS308SSS03
(Stainless)

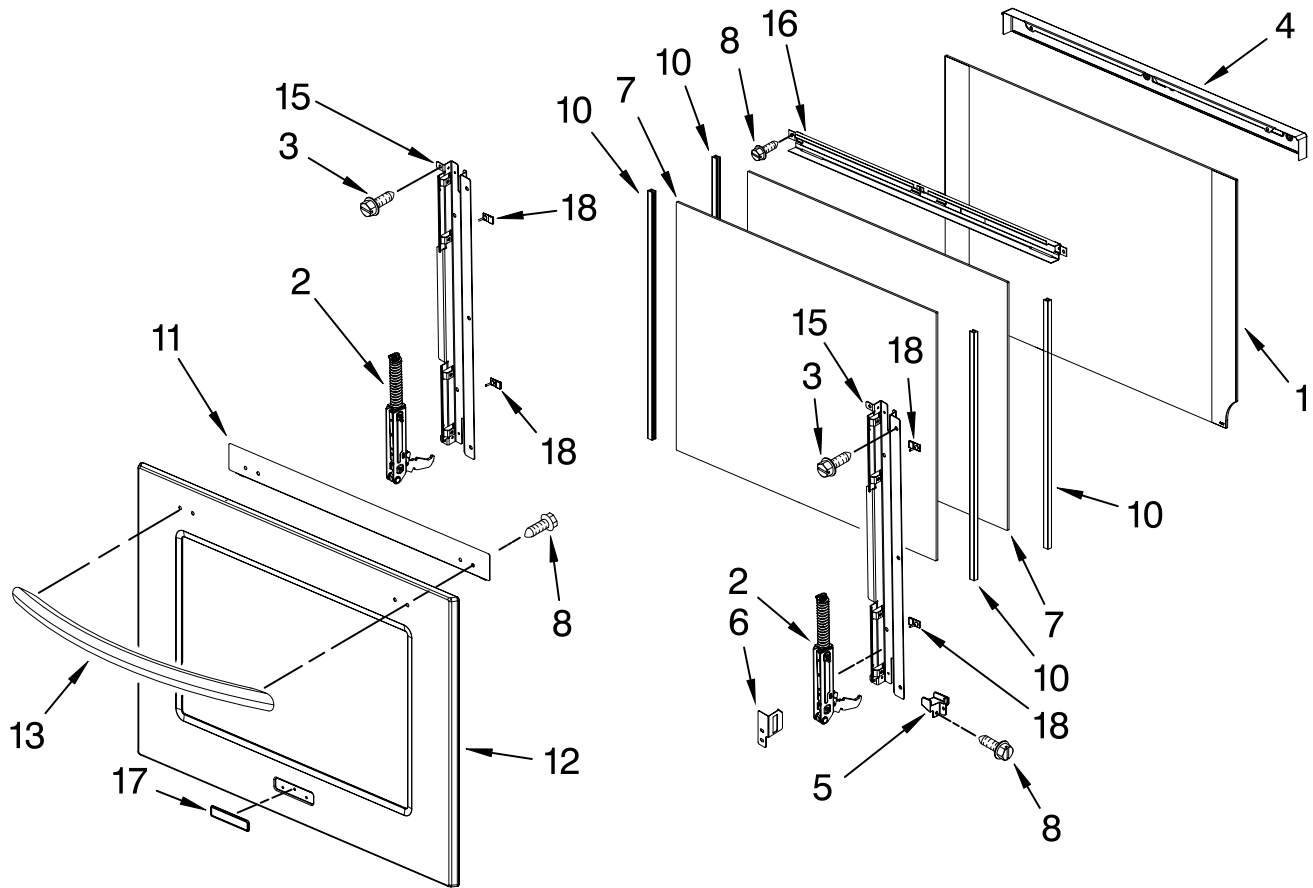

Illus. No.	Part No.	DESCRIPTION
1	8303737BL	Door Liner
2	W10174285	Hinge, Door (2)
3	3196183	Screw
4	8304581BL	Vent, Door Top
5	8304377	Right Bracket, Door
	8304378	Left


Illus. No.	Part No.	DESCRIPTION
6	W10137044	Cover, Hinge Right
	W10137043	Left
7	8303731	Glass, Inner
8	4449154	Screw
10	8304523	Seal
11	8304360BL	Bracket, Handle

Illus. No.	Part No.	DESCRIPTION
12	W10237350	Door Glass, Assembly Lower Includes #17
13	8303774SS	Door Handle
15	8303745BL	Frame, Door Side
16	8303746	Door, Top Bracket
17	8304603SS	Badge
18	8304522	Bumper, Glass

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models:KEMS308SSS03
(Stainless)

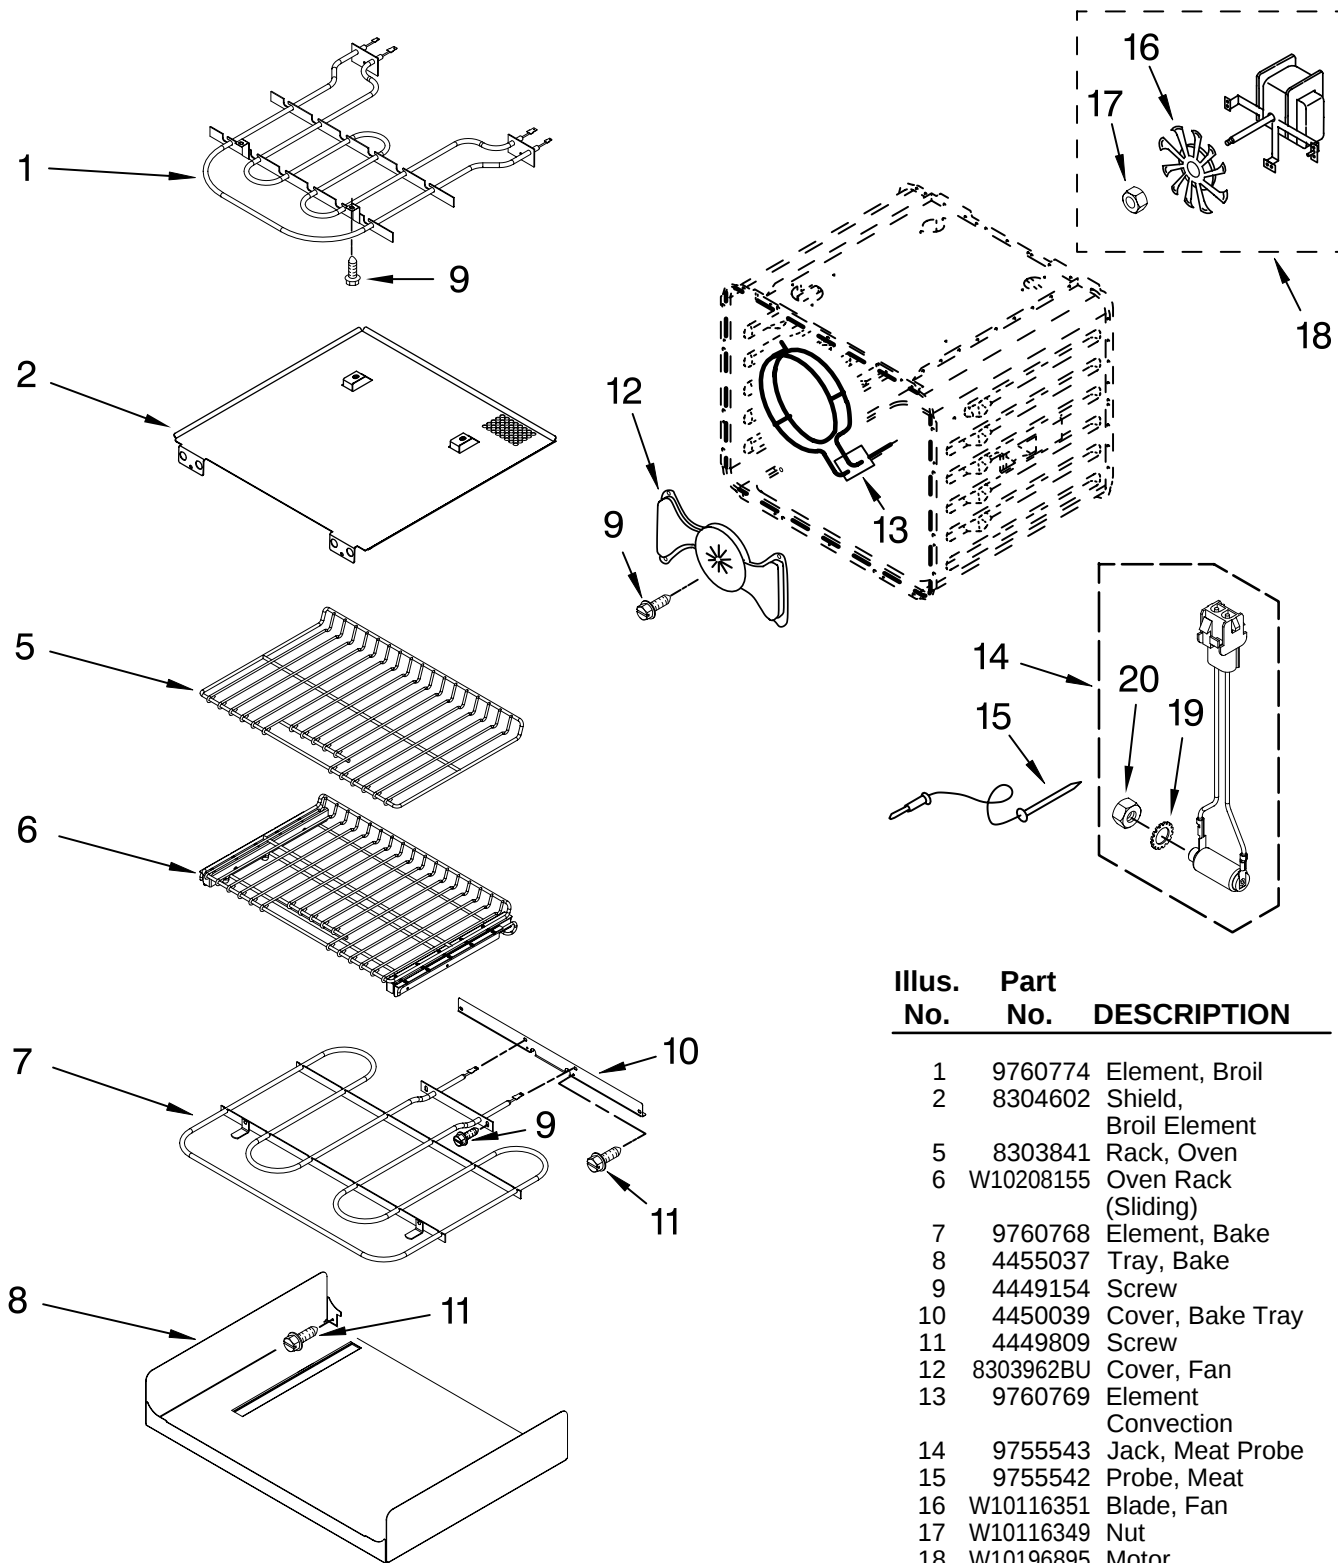


Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	8304602	Shield, Broil Element
5	8303841	Rack, Oven
6	W10208155	Oven Rack (Sliding)
7	9760768	Element, Bake
8	4455037	Tray, Bake
9	4449154	Screw
10	4450039	Cover, Bake Tray
11	4449809	Screw
12	8303962BU	Cover, Fan
13	9760769	Element Convection
14	9755543	Jack, Meat Probe
15	9755542	Probe, Meat
16	W10116351	Blade, Fan
17	W10116349	Nut
18	W10196895	Motor, Convection Fan
19	9755547	Washer, Lock
20	9755546	Nut, Hidden

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models:KEMS308SSS03
(Stainless)

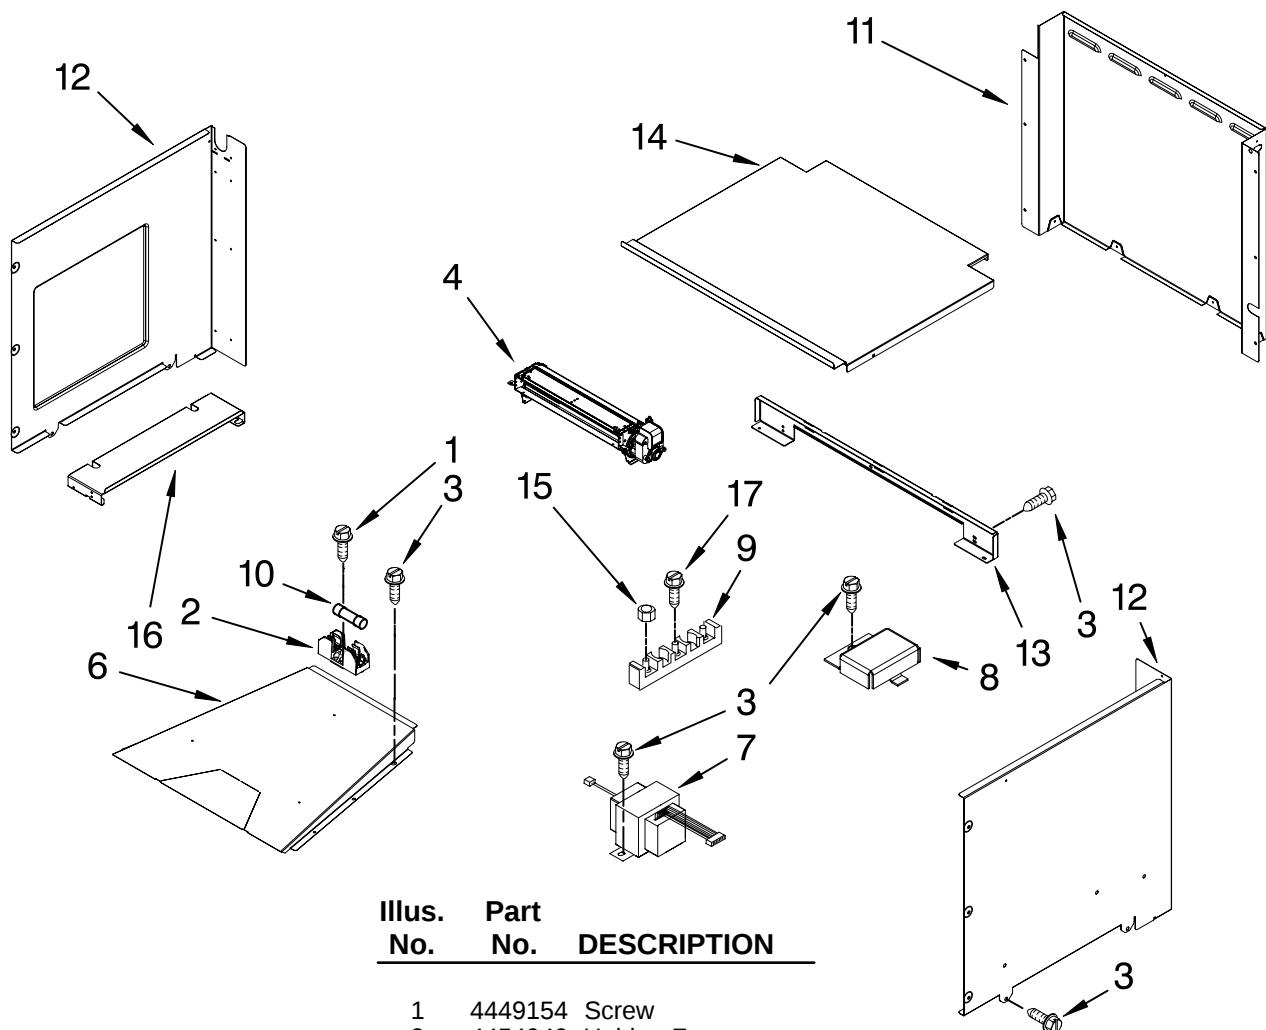


Illus. No.	Part No.	DESCRIPTION
1	4449154	Screw
2	4454949	Holder, Fuse
3	4449809	Screw
4	8303972	Blower
6	8304643	Duct, Air Outlet
7	9762053	Transformer, Control
8	8285593	Cover, Connector
9	4449868	Block, Terminal
10	W10017410	Fuse
11	8304509	Chassis, Back Combo
12	8304546	Right
	8303539	Left
13	8303537	Back, Control
14	8303519	Cover, Top Rear
15	7103P027-60	Nut, Terminal Block
16	8304569	Support, Microwave Module
17	3400080	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models: KEMS308SSS03
(Stainless)

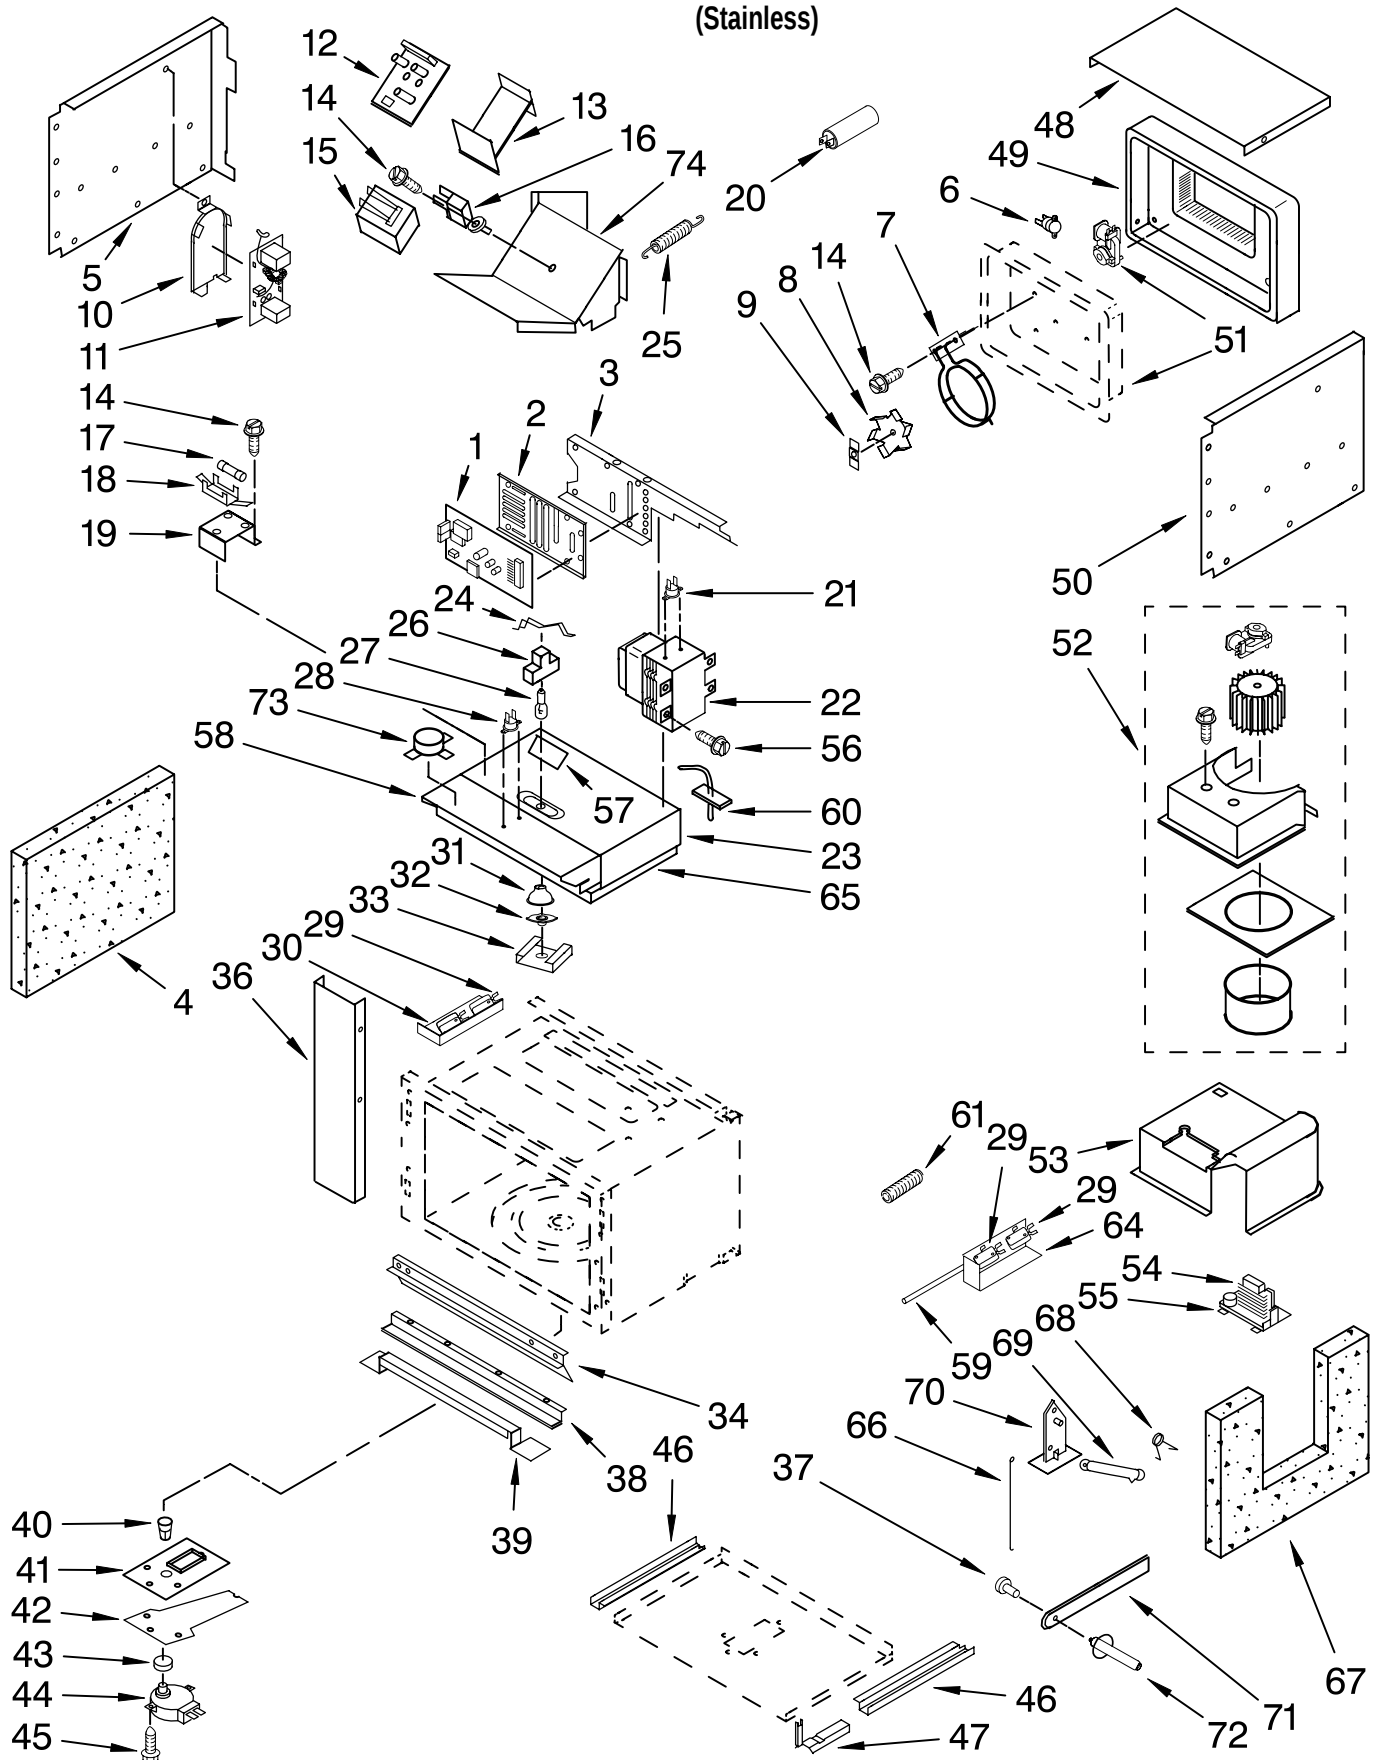

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS


For Models:KEMS308SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10120227	Control, Electric	23	W10130895	Plate, Air	47	W10120478	Hinge, Door
2	8205669	Support	24	4375319	Spring, Lamp	48	W10130903	Cover, Plate
3	W10130892	Plate, Air	25	8205685	Spring	49	W10130904	Cover, Rear
4	W10130901	Insulation, Side Left	26	8205658	Housing, Lamp	50	8205680	Cover, Side Right
5	W10120471	Cover, Side Left	27	4375348	Lamp	51	W10120221	Convection, Motor Assmebly
6	W10120223	Thermostat	28	W10120222	Thermostat	52	8205721	Blower Assembly
7	W10120224	Element, Convection	29	W10131248	Switch	53	W10130907	Cover, Inverter
8	4375418	Fan	30	8205683	Holder, Switch	54	W10120229	Inverter
9	W10120233	Nut, Speed	31	4375320	Reflector	55	W10130906	Holder, Inverter
10	W10130891	Holder	32	4375318	Lens, Lamp	56	W10130890	Screw
11	W10120220	Noise Filter	33	W10120231	Clip, Spring	57	W10130908	Baffle, Air
12	W10120228	Control, Electric Converter	34	W10120477	Top Vent	58	W10130899	Plate, Air
13	W10130909	Bracket, Support	36	W10120473	Trim, Side Right	59	W10120235	Rod, Release
14	W10131249	Screw		W10120475	Left	60	W10120225	Sensor
15	8205692	Transformer	37	W10120469	Bushing	61	8205685	Spring
16	4375427	Actuator	38	W10130905	Bracket, Support	64	8205683	Interlock
17	4375321	Fuse	39	8205708	Bracket, Support	65	W10130900	Insulation
18	4375231	Block, Fuse	40	8205682	Shaft, Turntable	66	8205704	Spring
19	W10130897	Bracket, Support			Turntable	67	W10130902	Insulation
20	8205653	Filter, Noise	41	8205681	Cover, Motor	68	8205689	Spring
21	8205654	Thermostat			Turntable	69	8205688	Arm
22	W10120113	Magnetron	42	W10120234	Cover	70	8205686	Support
			43	4375252	Gasket, Shaft	71	W10120236	Arm
			44	8205655	Motor, Turntable	72	W10120470	Pin, Damper
			45	4375202	Screw	73	8205690	Sensor
			46	8205707	Support	74	W10130898	Duct, Magnetron

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL MICROWAVE PARTS

For Models:KEMS308SSS03
(Stainless)

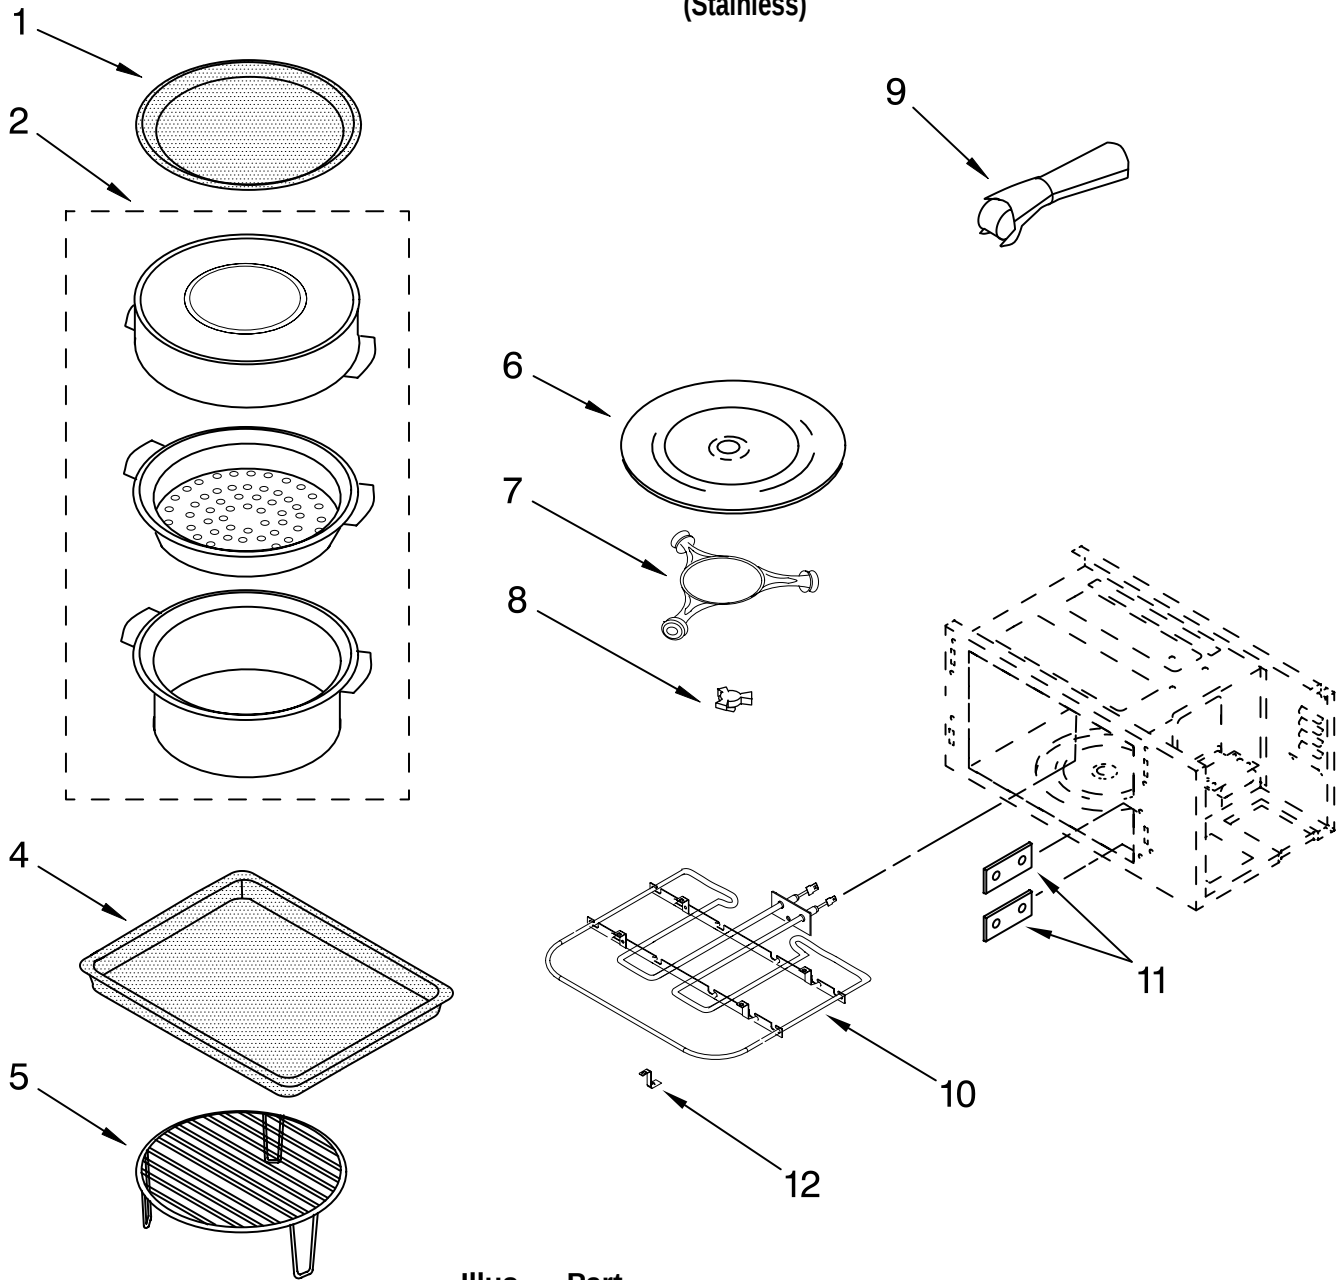


Illus. No.	Part No.	DESCRIPTION
1	W10120480	Crisp Plate
2	W10120484	Steamer
4	W10120486	Plate, Baking
5	W10120483	Rack
6	8205676	Turntable
7	8205678	Ring
8	8205677	Drive, Turn Table
9	W10120481	Handle, Pan
10	W10120226	Grill Heater
11	W10120230	Cover, Plates (2)
12	W10120232	Bracket, Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE DOOR PARTS

For Models:KEMS308SSS03
(Stainless)

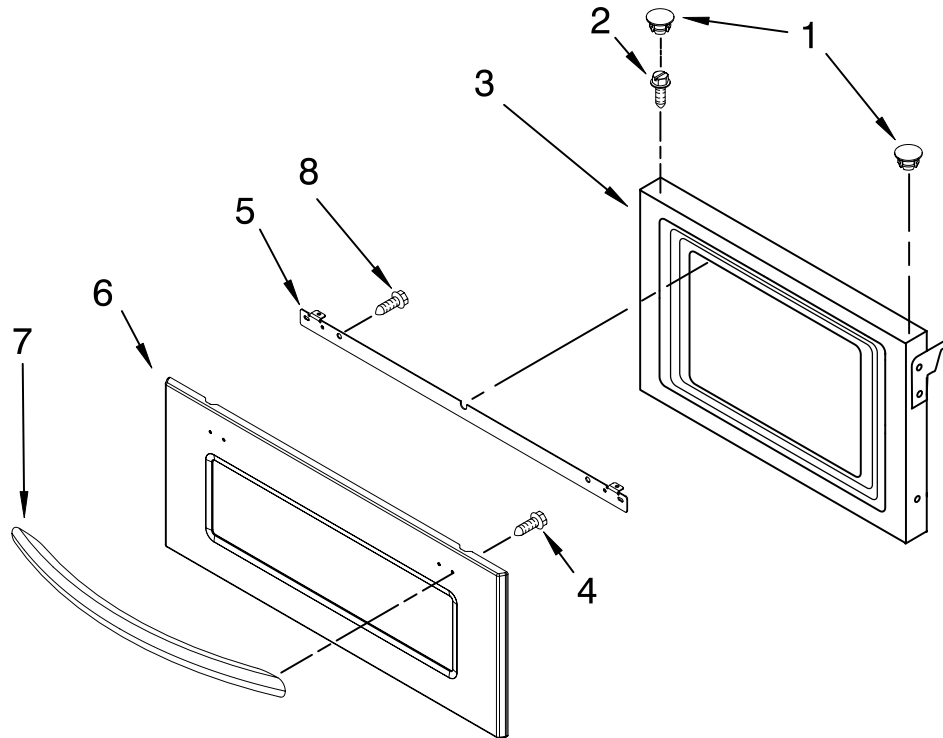

Illus. No.	Part No.	DESCRIPTION
1	8304588BL	Cap, Screw
2	4449809	Screw
3	8303703	Door, Microwave
4	4449154	Screw (4)
5	8303033	Bracket, Door
6	W10237360	Assmebly, Door Glass
7	8303774SS	Handle, Door
8	W10143304	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:KEMS308SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
261869 Cord Brown
72032 Black

PAINT, SPRAY

350930 White
261900 Citrine White
830864 Black

ADHESIVE

591014 Adhesive
Loctite (1/3 oz.)
482338 Sealer, Silastic
(3 oz.)

FOLLOWING PARTS NOT ILLUSTRATED

WIRING HARNESS PARTS

W10143473 Harness,
Door Latch
8304052 Harness,
Communication
4452400 Lead, Ground
4449809 Screw
W10171567 Harness, Main
4450800 Screw, Ground
4449809 Screw
8304440 Conduit, Combo

Miscellaneous

4448950 Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST