


# KitchenAid®

## OVEN PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00  
(Black) (White) (Stainless)

27" BUILT-IN ELECTRIC  
COMBO OVEN  
THERMAL CONVECTION

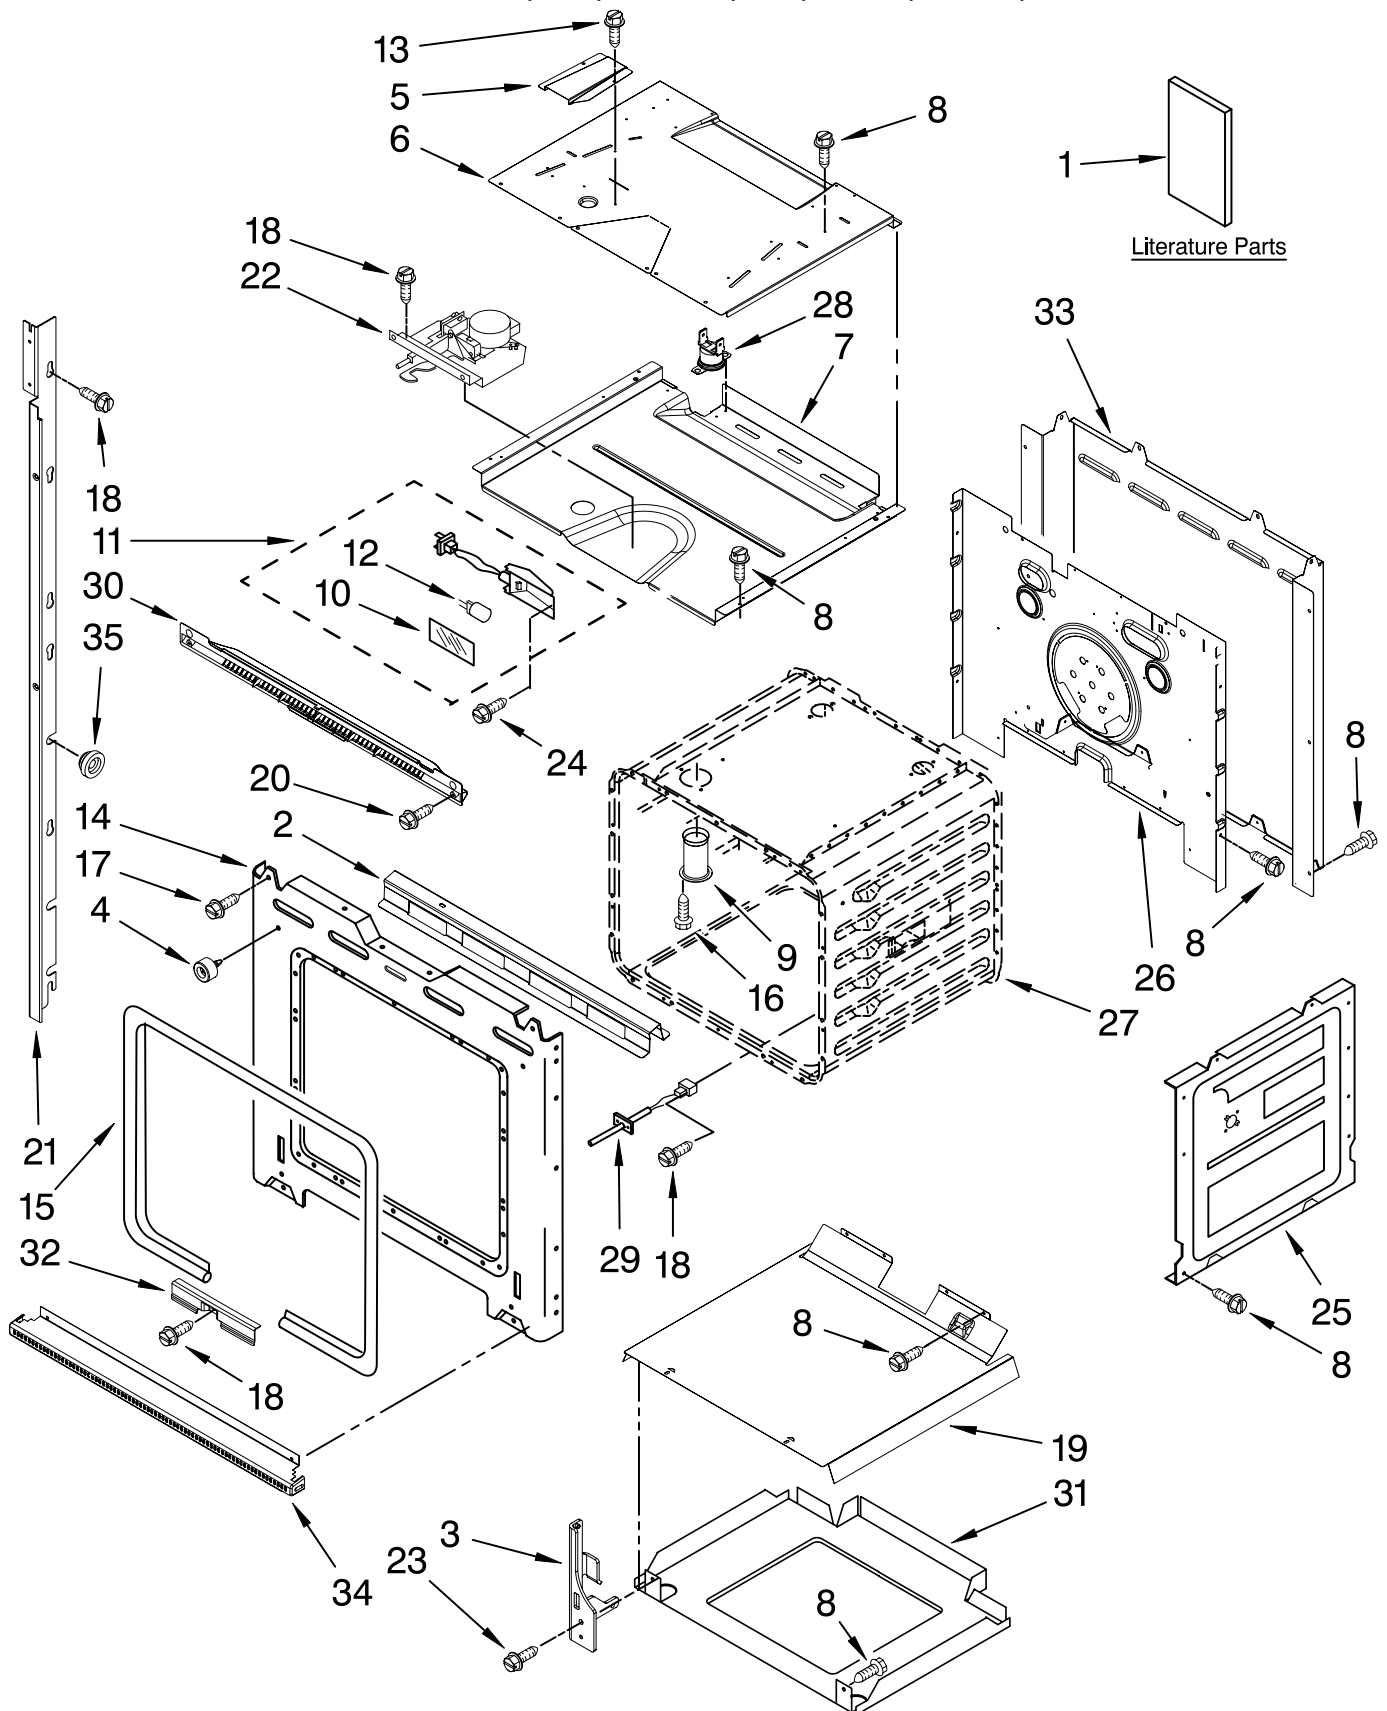

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)


(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	9	4452158	Tube, Vent	27		Liner, Oven (Not serviceable)
	8304337	Installation Instructions	10	4452163	Lens, Light	28	8304452	Thermal Fuse
	8304358	Use & Care Guide	11	4448972	Oven Light Assembly	29	4455636	Sensor
		Tech Sheet	12	4452164	Bulb, Light	30	8303724	Vent, Center
	8304098	English	13	3400832	Screw (2)	31	8303772	Base, Chassis
	8304417	French	14	W10118751	Frame, Front	32	8304478	Retainer, Gasket
		Easy Set Guide	15	8304494	Gasket, Door	33	8303517	Cover, Back
	8304338	Oven	16	3196176	Screw	34		Trim, Bottom
	8304375	Microwave	17	4449040	Screw		8303706BL	Black
		Safer Cooking Tips	18	3400893	Screw		8303706WH	White
	3191638	English	19	4451477	Support, Insulation		8303706SS	Stainless
	9759133	French	20	4450038	Screw (2)	35	4448444	Mounting Grommet, Rail (2)
			21		Mounting Rail, Side Right	<b>FOLLOWING PARTS NOT ILLUSTRATED</b>		
2	8304420	Bracket, Base		8303679BL	Black	<b>INSULATION</b>		
3		Hinge Receiver		8303679WH	White		8303966	Insulation, Wrap
	4455606	Right			Left		8303968	Insulation, Back
	4455605	Left		8303680BL	Black			
4	W10105790	Bumper, Door (2)		8303680WH	White			
5	8303829	Exhaust, Vent Slope	22	8303692	Latch, Motorized			
6	8303771	Divider, Vent Center	23	4449743	Screw			
7	8303770	Top Chassis	24	4449748	Screw			
8	4449809	Screw	25	4455641	Side, Chassis			
			26	8304304	Back, Chassis			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00  
 (Black) (White) (Stainless)

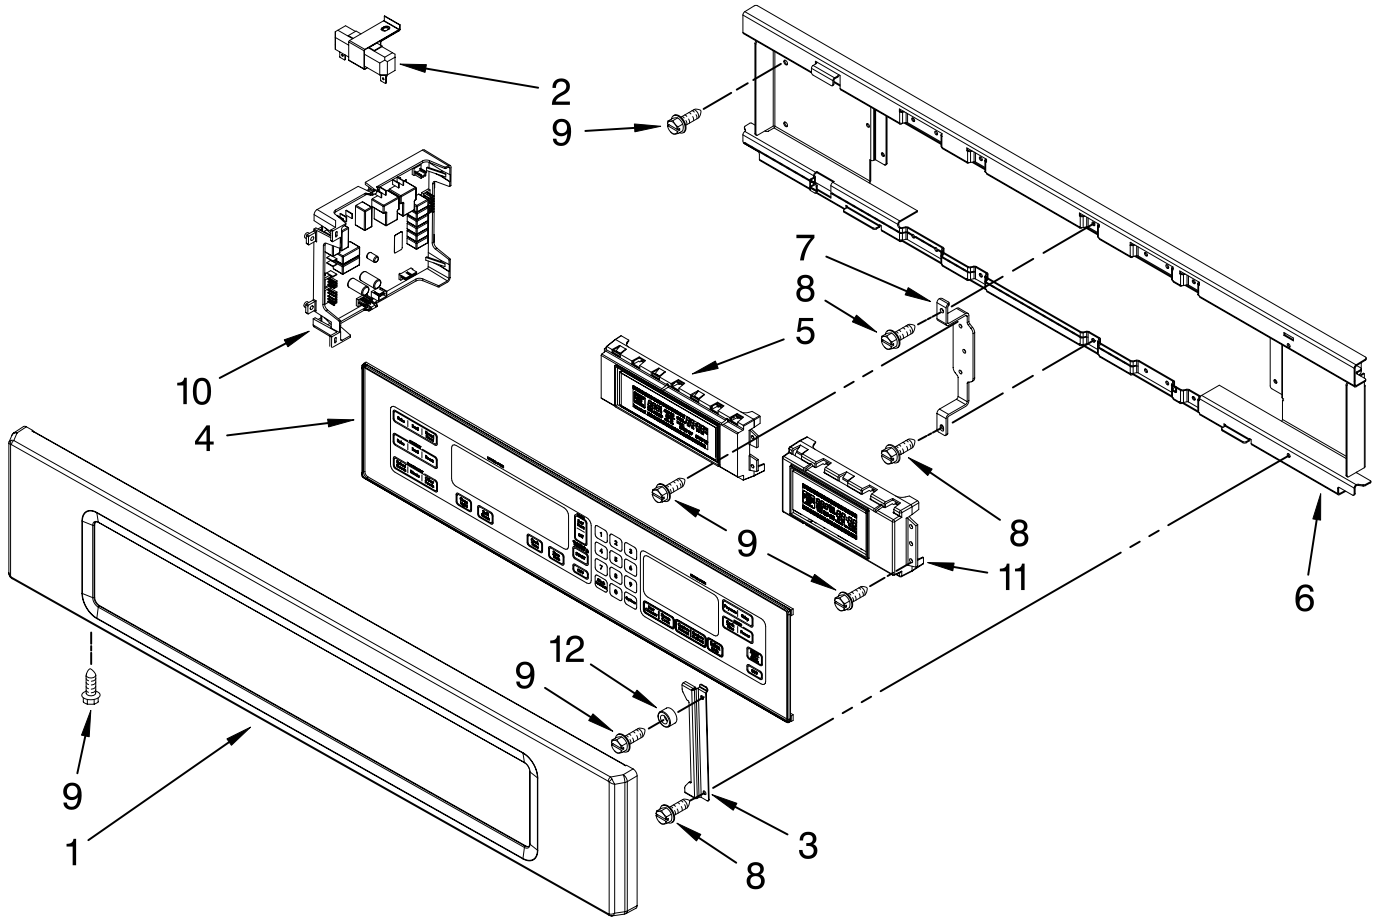


Illus. No.	Part No.	DESCRIPTION
1	8303717BL 8303717WH 8303717SS	Panel, Control Black White Stainless
2	8304441	Resistor, Drop
3	8303797	Bracket, Glass Touch
4	8303881	Keyboard, Glass Touch
5	W10118734	Oven, User Interface
6	8303720	Backer, Control
7	8303887	Bracket, Enclosure
8	4449154	Screw
9	3400832	Screw
10	W10119143	Appliance Manager
11	W10118735	Microwave, User Interface
12	9760749	Bumper

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN DOOR PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00  
 (Black) (White) (Stainless)

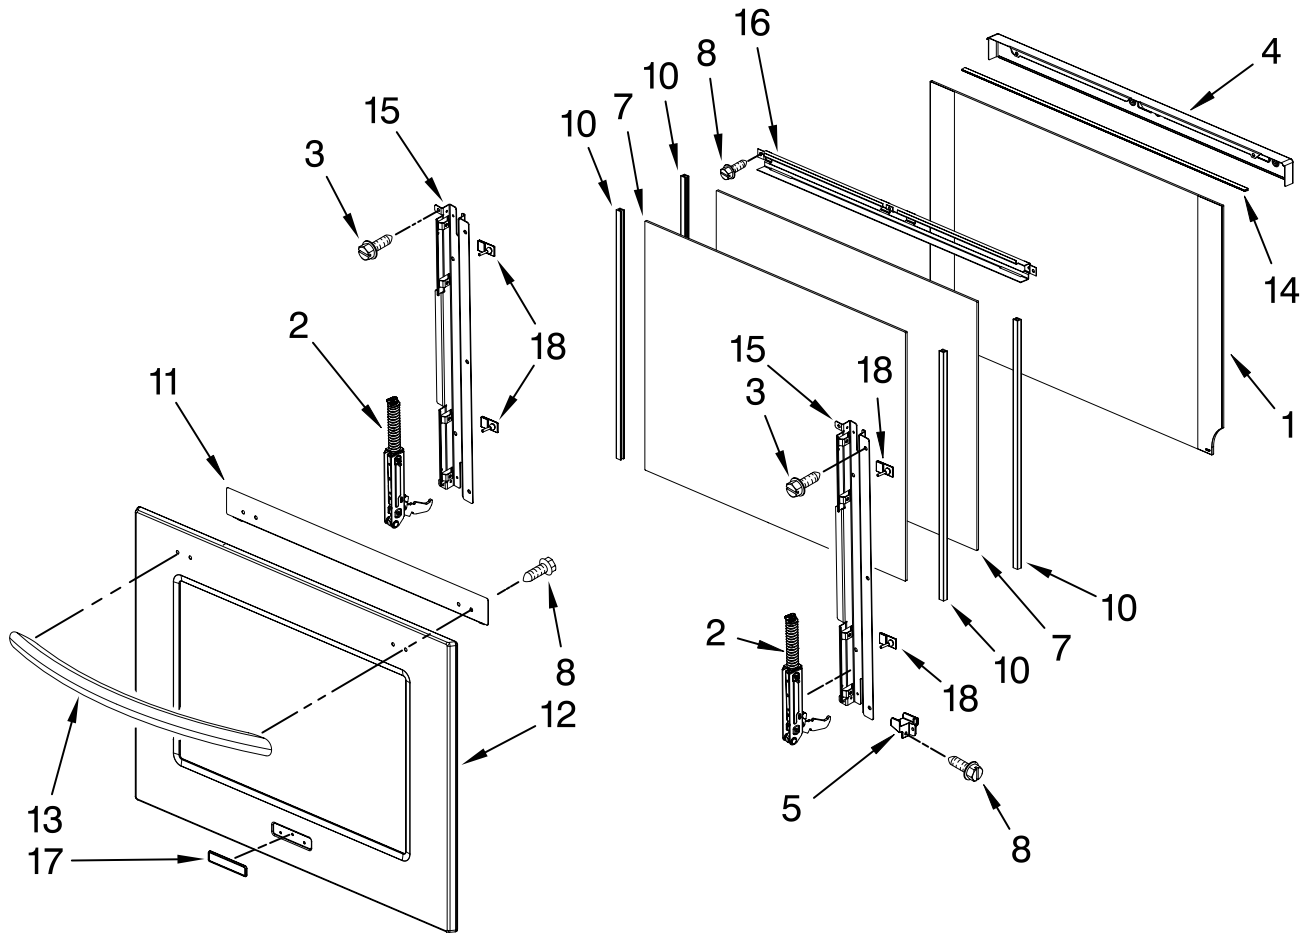

Illus. No.	Part No.	DESCRIPTION
1	8303738BL	Door Liner
2	8303990	Hinge, Door (2)
3	3196183	Screw
4	8304580BL	Vent, Door Top
5		Bracket, Door
	8304377	Right
	8304378	Left
7	8303732	Glass, Inner
8	4449154	Screw
10	8304523	Seal

Illus. No.	Part No.	DESCRIPTION
11	8304361BL	Bracket, Handle
12		Door Glass, Assembly
		Includes #17
	8304001	Black
	8304003	White
	8303999	Stainless
13		Door Handle
	8303775BL	Black
	8303775WH	White
	8303775SS	Stainless

Illus. No.	Part No.	DESCRIPTION
14	8304525	Seal
15	8303745BL	Frame, Door Side
16	8303754	Door, Top Bracket
17		Badge
	8304603BL	Black
	8304603WH	White
	8304603SS	Stainless
18	8304522	Bumper, Glass

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# INTERNAL OVEN PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)

(Stainless)

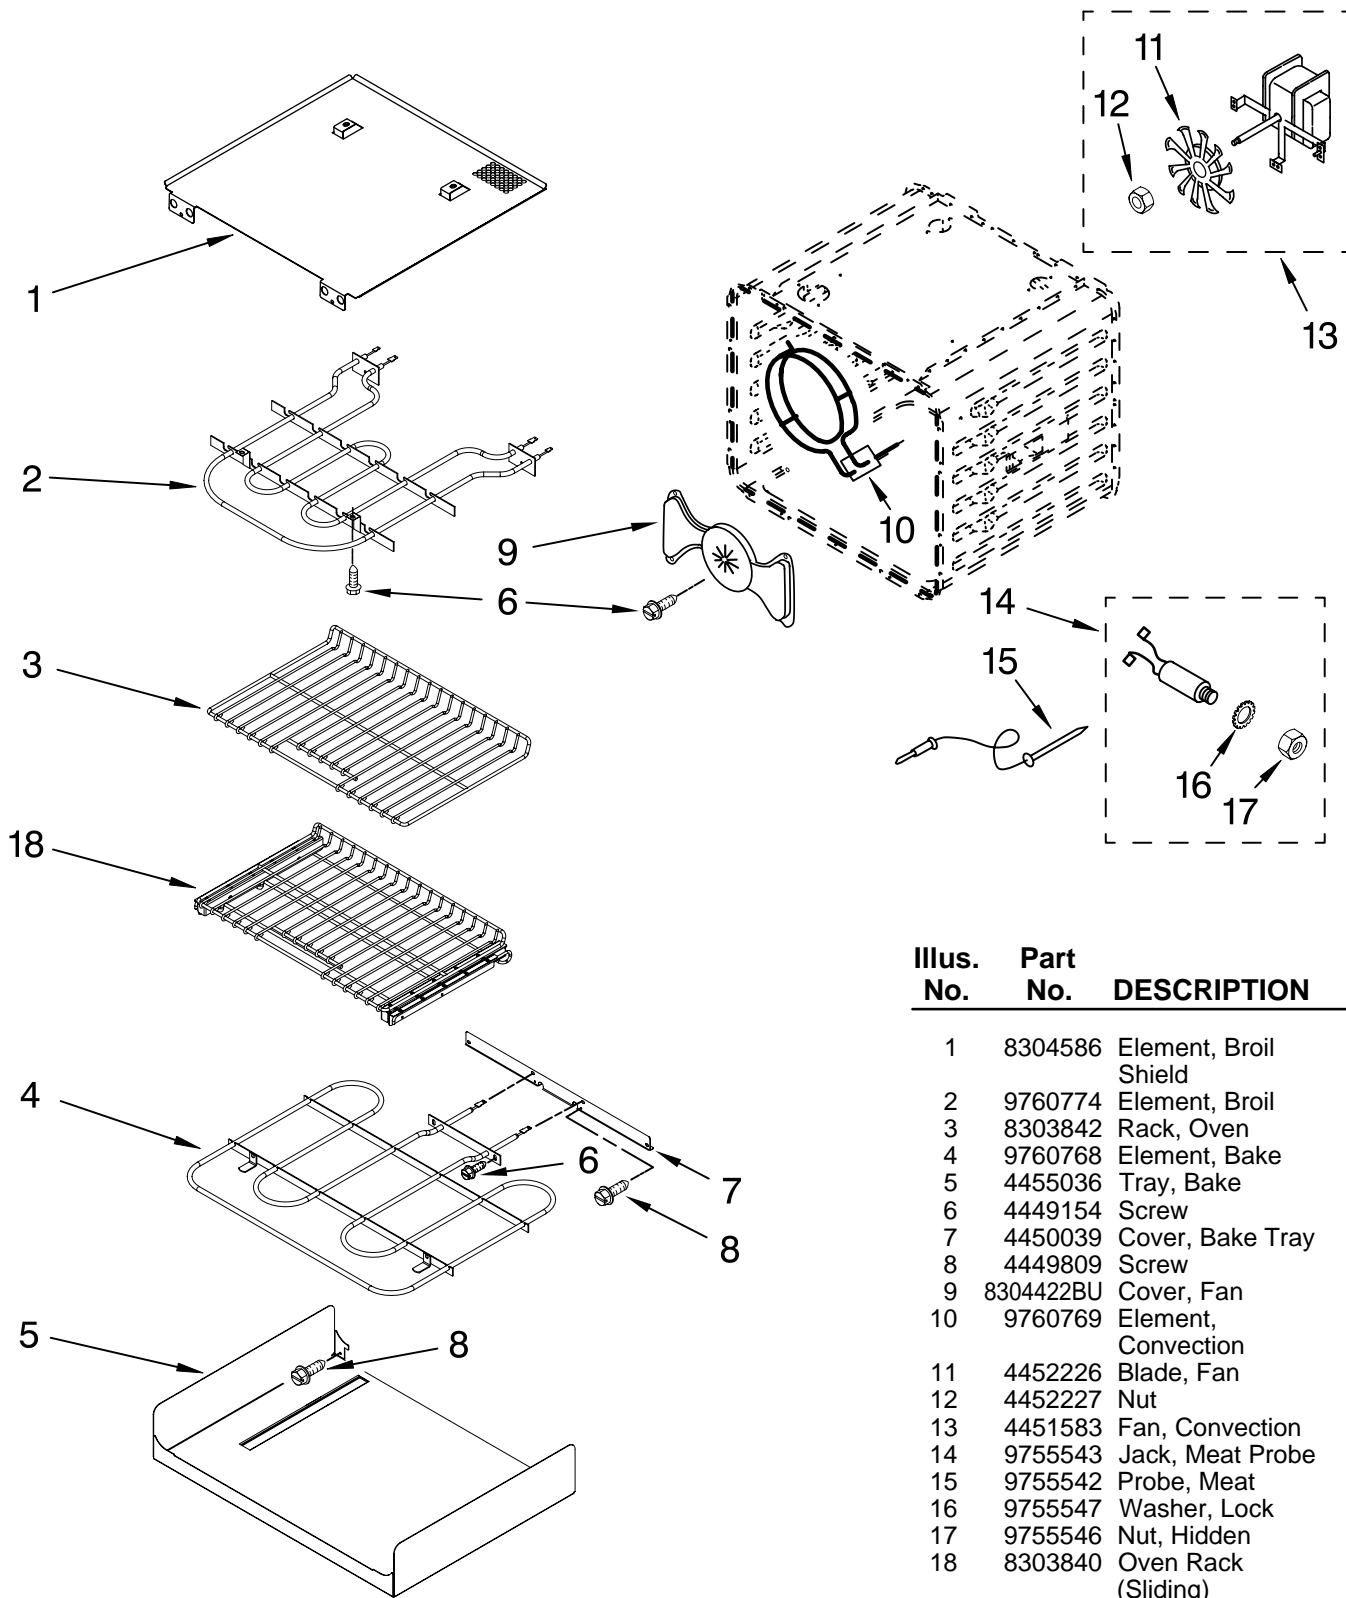

Illus. No.	Part No.	DESCRIPTION
1	8304586	Element, Broil Shield
2	9760774	Element, Broil
3	8303842	Rack, Oven
4	9760768	Element, Bake
5	4455036	Tray, Bake
6	4449154	Screw
7	4450039	Cover, Bake Tray
8	4449809	Screw
9	8304422BU	Cover, Fan
10	9760769	Element, Convection
11	4452226	Blade, Fan
12	4452227	Nut
13	4451583	Fan, Convection
14	9755543	Jack, Meat Probe
15	9755542	Probe, Meat
16	9755547	Washer, Lock
17	9755546	Nut, Hidden
18	8303840	Oven Rack (Sliding)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# TOP VENTING PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)

(Stainless)

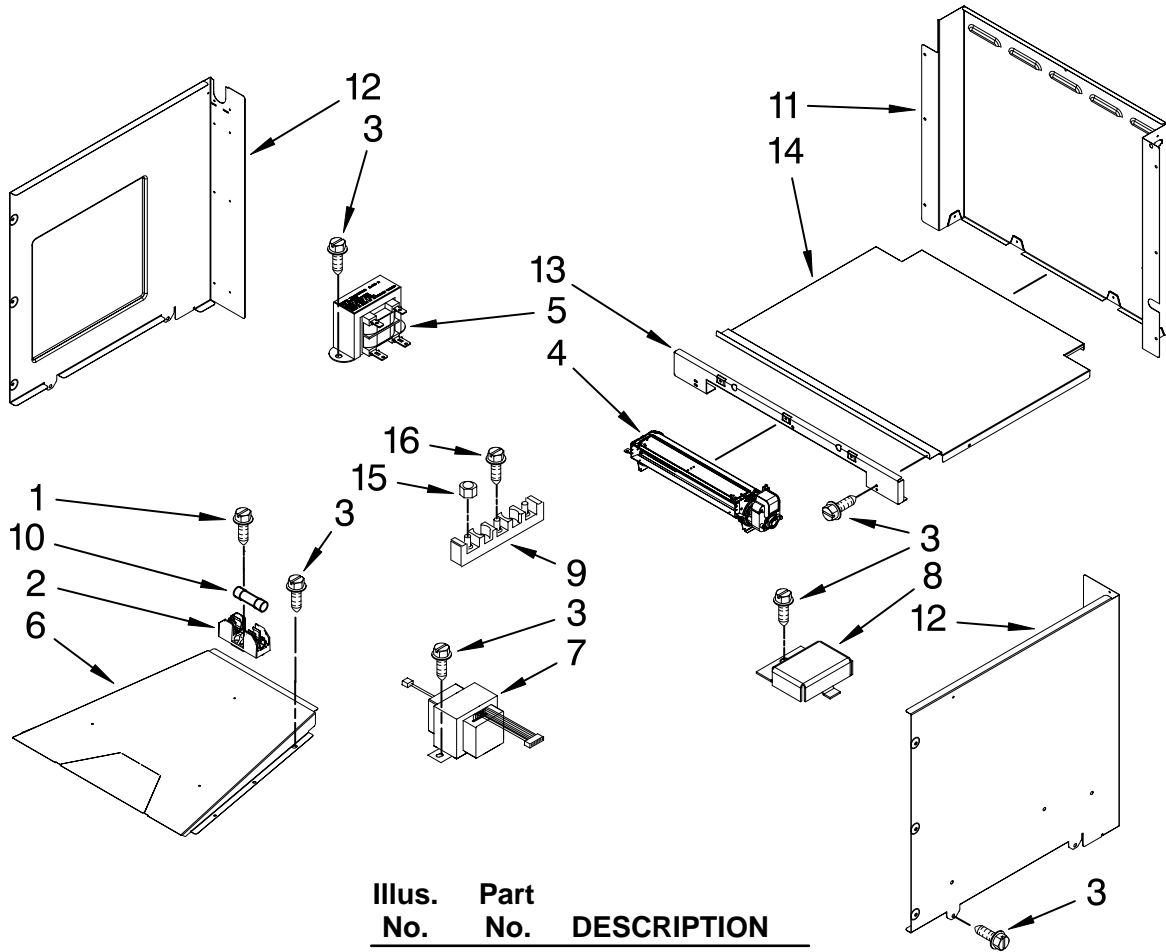

Illus. No.	Part No.	DESCRIPTION
1	4449154	Screw
2	4454949	Holder, Fuse
3	4449809	Screw
4	8303972	Blower
5	9760588	Transformer, Lights
6	8303514	Exhaust Duct
7	9762053	Transformer, Control
8	8285593	Control Cover
9	4449868	Block, Terminal
10	W10017410	Fuse
11	8304509	Back Chassis Panel
12		Side, Combo
	8304546	Right
	8303539	Left
13	8303538	Channel, Rear Combo
14	8303802	Cover, Top
15	112432	Nut
16	3400080	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# CABINET AND STIRRER PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)

(Stainless)

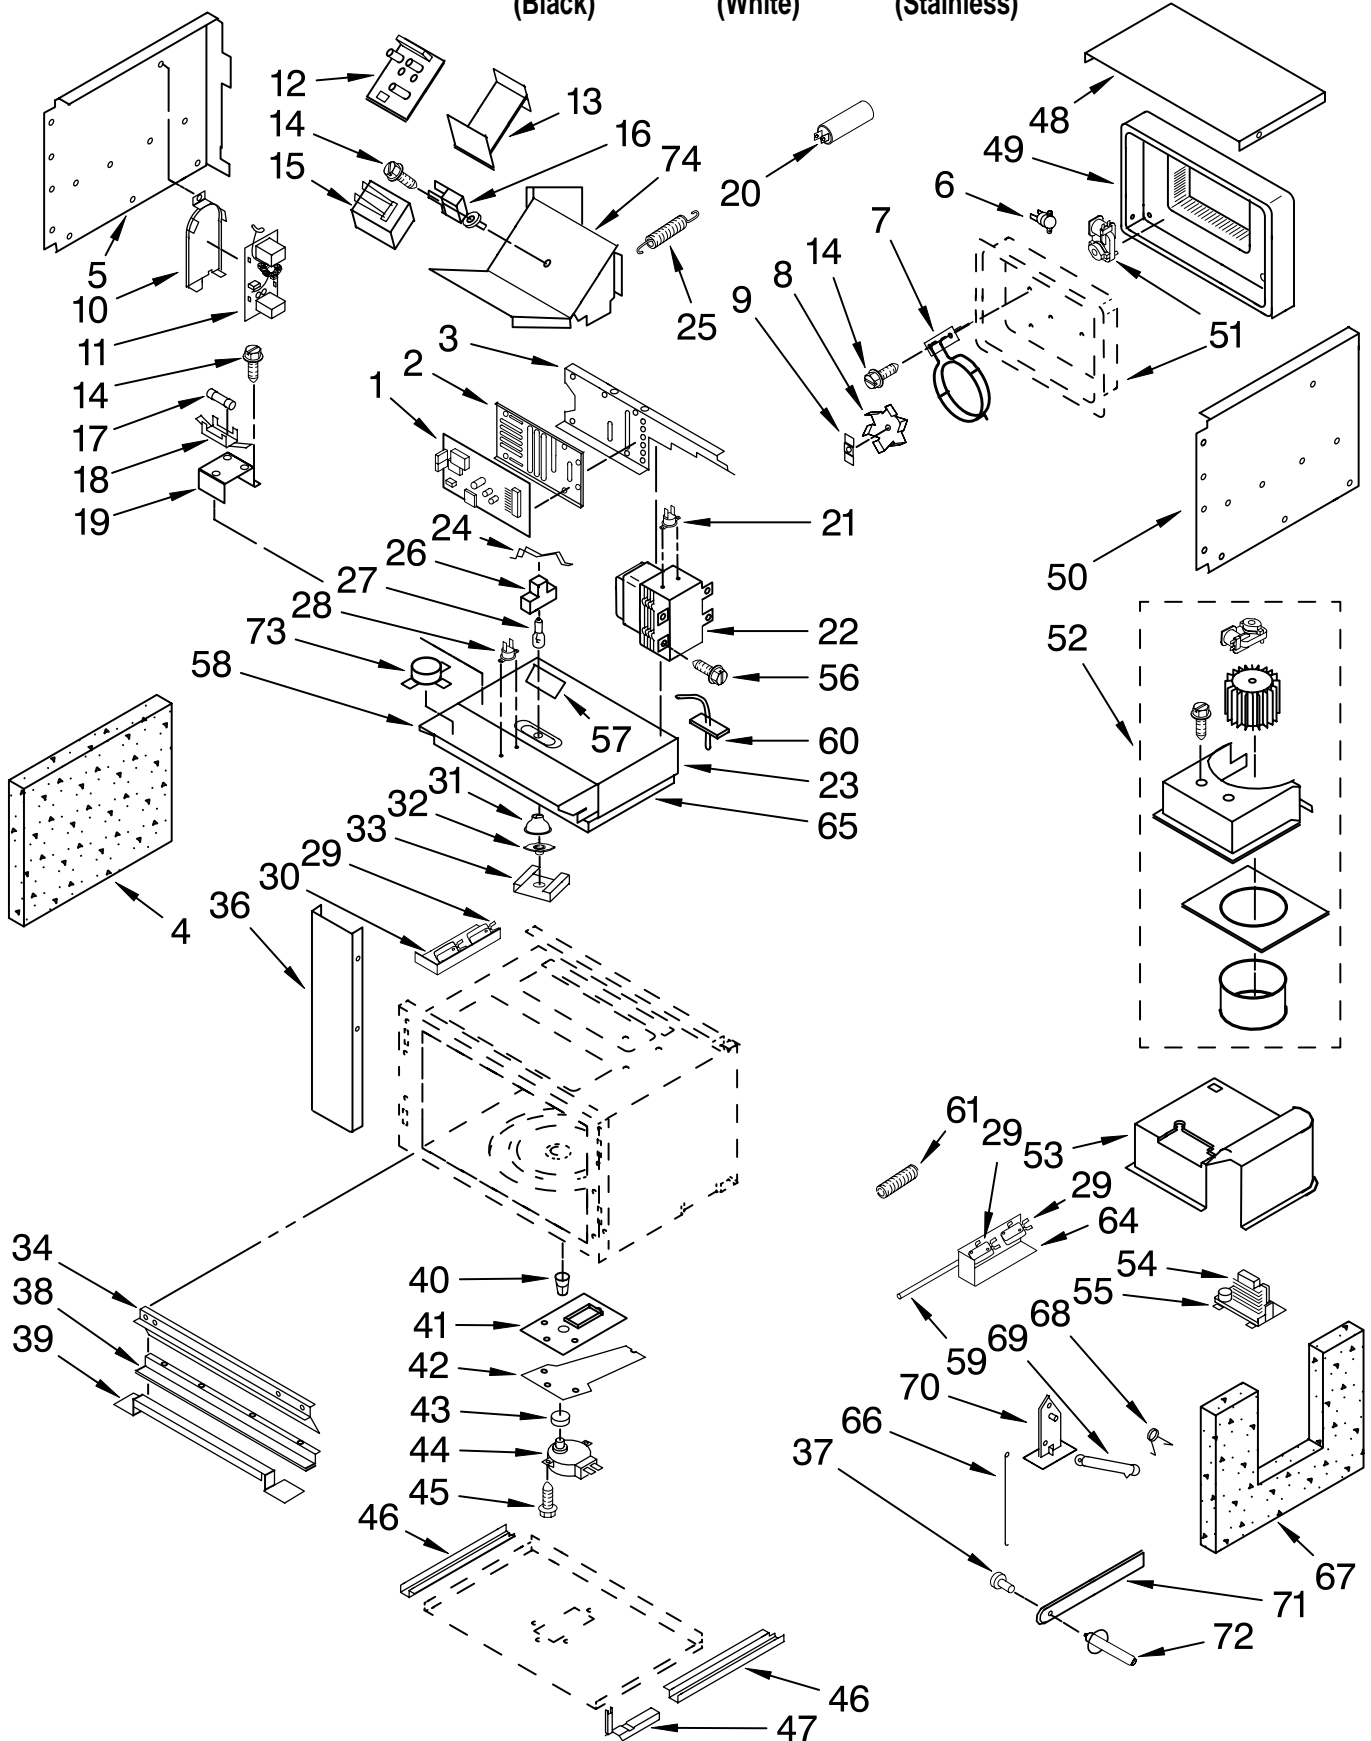

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET AND STIRRER PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)

(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10120227	Control, Electric	24	4375319	Spring, Lamp	48	W10130903	Cover, Plate
2	8205669	Support	25	8205685	Spring	49	W10130904	Cover, Rear
3	W10130892	Plate, Air	26	8205658	Housing, Lamp	50	8205680	Cover, Side Right
4	W10130901	Insulation, Side Left	27	4375348	Lamp	51	W10120221	Convection, Motor Assmebly
5	W10120471	Cover, Side Left	28	W10120222	Thermostat	52	8205721	Blower Assembly
6	W10120223	Thermostat	29	W10131248	Switch	53	W10130907	Cover, Inverter
7	W10120224	Element, Convection	30	8205683	Holder, Switch	54	W10120229	Inverter
8	4375418	Fan	31	4375320	Reflector	55	W10130906	Holder, Inverter
9	W10120233	Nut, Speed	32	4375318	Lens, Lamp	56	W10130890	Screw
10	W10130891	Holder	33	W10120231	Clip, Spring	57	W10130908	Baffle, Air
11	W10120220	Noise Filter	34	W10120476	Top Vent	58	W10130899	Plate, Air
12	W10120228	Control, Electric Converter	36		Trim, Side	59	W10120235	Rod, Release
13	W10130909	Bracket, Support		W10120472	Right	60	W10120225	Sensor
14	W10131249	Screw		W10120474	Left	61	8205685	Spring
15	8205692	Transformer	37	W10120469	Bushing	64	8205683	Interlock
16	4375427	Actuator	38	W10130905	Bracket, Support	65	W10130900	Insulation
17	4375321	Fuse	39	8205708	Bracket, Support	66	8205704	Spring
18	4375231	Block, Fuse	40	8205682	Shaft, Turntable Turntable	67	W10130902	Insulation
19	W10130897	Bracket, Support	41	8205681	Cover, Motor Turntable	68	8205689	Spring
20	8205653	Filter, Noise	42	W10120234	Cover	69	8205688	Arm
21	8205654	Thermostat	43	4375252	Gasket, Shaft	70	8205686	Support
22	W10120113	Magnetron	44	8205655	Motor, Turntable	71	W10120236	Arm
23	W10130895	Plate, Air	45	4375202	Screw	72	W10120470	Pin, Damper
			46	8205707	Support	73	8205690	Sensor
			47	W10120478	Hinge, Door	74	W10130898	Duct, Magnetron

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST




# INTERNAL MICROWAVE PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)

(Stainless)

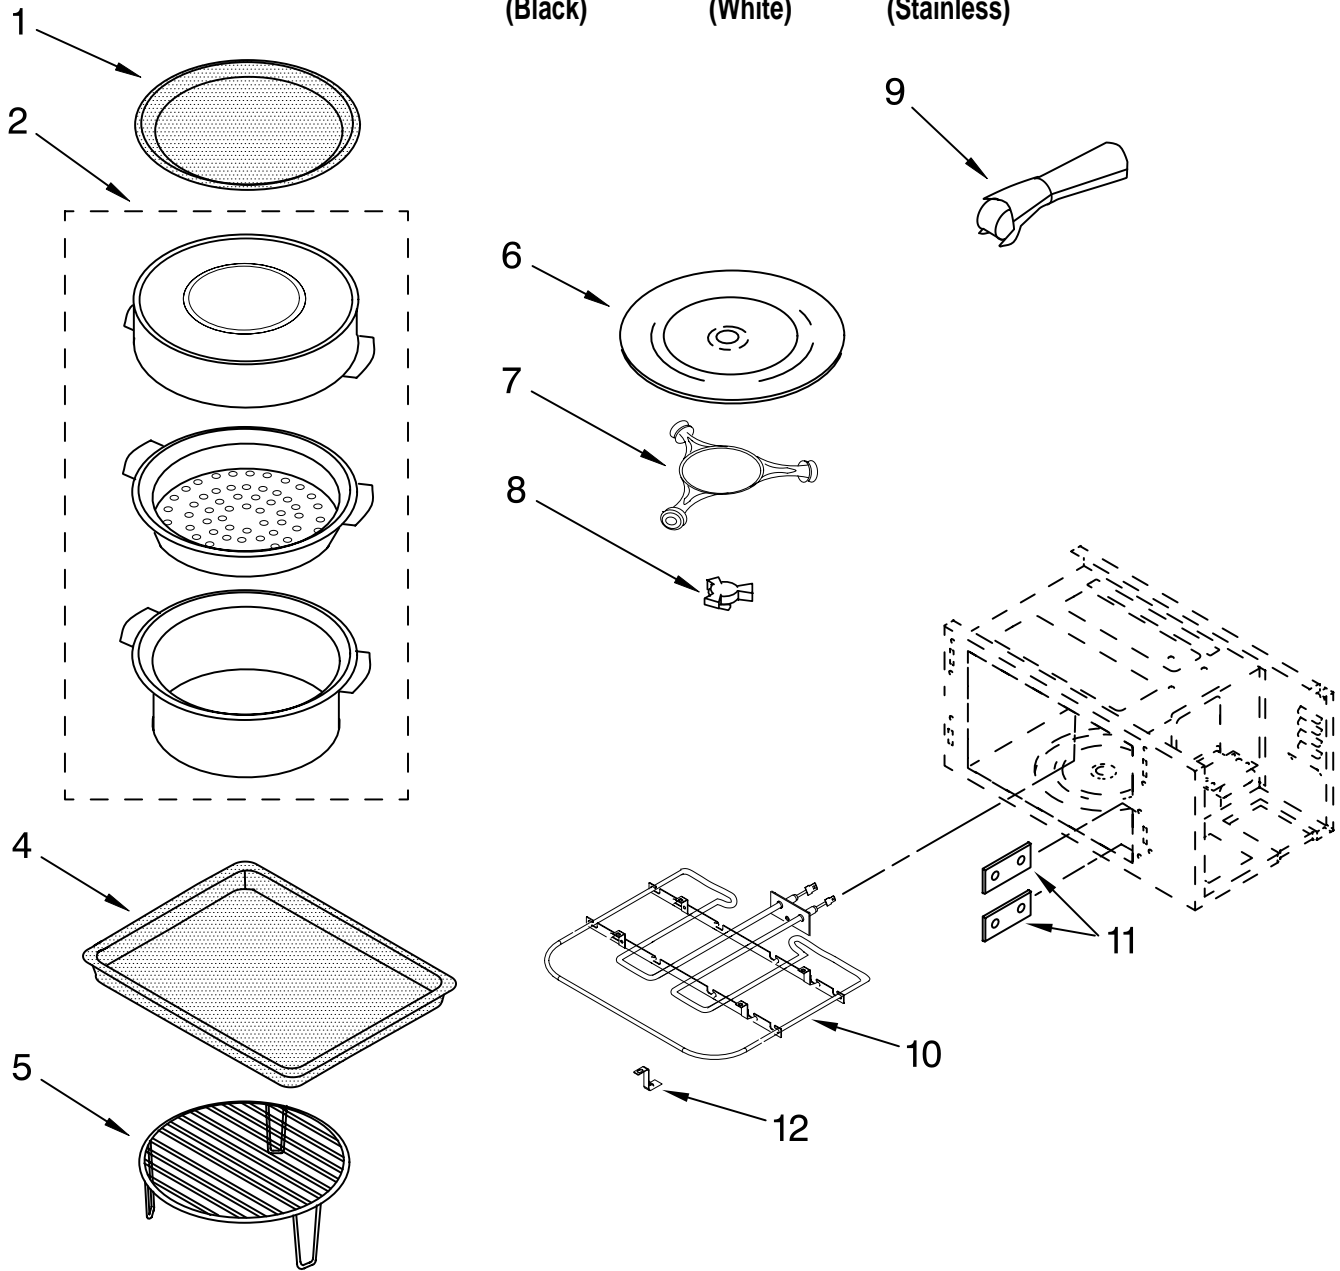


Illus. No.	Part No.	DESCRIPTION
1	W10120480	Crisp Plate
2	W10120484	Steamer
4	W10120486	Plate, Baking
5	W10120483	Rack
6	8205676	Turntable
7	8205678	Ring
8	8205677	Drive, Turn Table
9	W10120481	Handle, Pan
10	W10120226	Grill Heater
11	W10120230	Cover, Plates (2)
12	W10120232	Bracket, Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MICROWAVE DOOR PARTS

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00  
 (Black) (White) (Stainless)

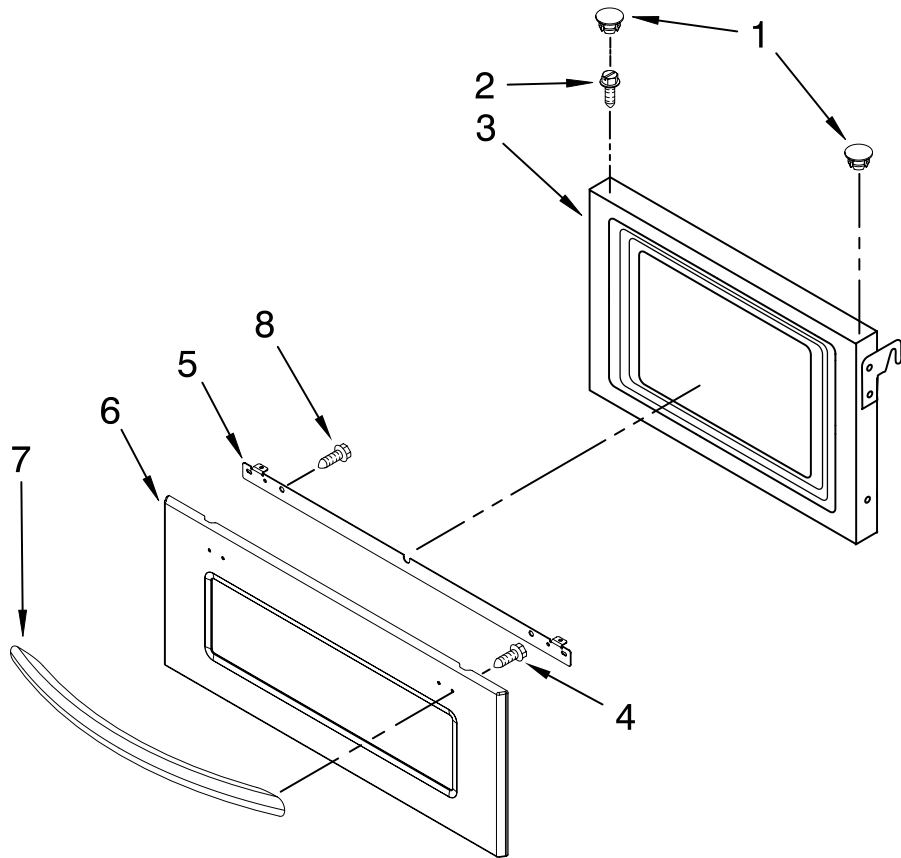

Illus. No.	Part No.	DESCRIPTION
1	8304588BL	Button, Plug (2)
2	4449809	Screw
3	W10120488	Door, Microwave
4	4449154	Screw (4)
5	8303033	Bracket, Handle
6		Glass Assembly
7		Handle, Door
	8304030	Black
	8304031	White
	8304029	Stainless
	8303775BL	Black
	8303775WH	White
	8303775SS	Stainless
8	W10143304	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: KEMS378SBL00, KEMS378SWH00, KEMS378SSS00

(Black)

(White)

(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>			<b><u>SPLICING WIRES--25FT. LENGTH</u></b>			<b><u>WIRING HARNESS PARTS</u></b>		
	72017	White		242828	Wire (12 Ga. 150 c Black)		8304102	Harness, Latch
	261869	Cord Brown		242820	Wire (14 Ga. 150 c Black)		8304052	Harness, User Interface
	72032	Black		242821	Wire (14 Ga. 150 c Blue)		4452400	Lead, Ground
<b><u>PAINT, SPRAY</u></b>				242822	Wire (14 Ga. 150 c Brown)		4449809	Screw
	350930	White		242830	Wire (14 Ga. 200 c Brown)		8304038	Harness, Main
	261900	Citrine White		242823	Wire (14 Ga. 150 c Green)		4450831	Ground, Microwave
	830864	Black		242824	Wire (14 Ga. 150 c Orange)		4450800	Screw, Ground
<b><u>ADHESIVE</u></b>				242825	Wire (14 Ga. 150 c Red)		4449809	Screw
	591014	Adhesive Loctite (1/3 oz.)		242831	Wire (14 Ga. 200 c Red)		8304440	Conduit, Combo
	482338	Sealer, Silastic (3 oz.)		242827	Wire (14 Ga. 150 c Yellow)		313438	Clip, Harness
							4454835	Tie, Cable
							<b><u>Miscellaneous</u></b>	
							4448950	Screw, Install (4)
							98997	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST