


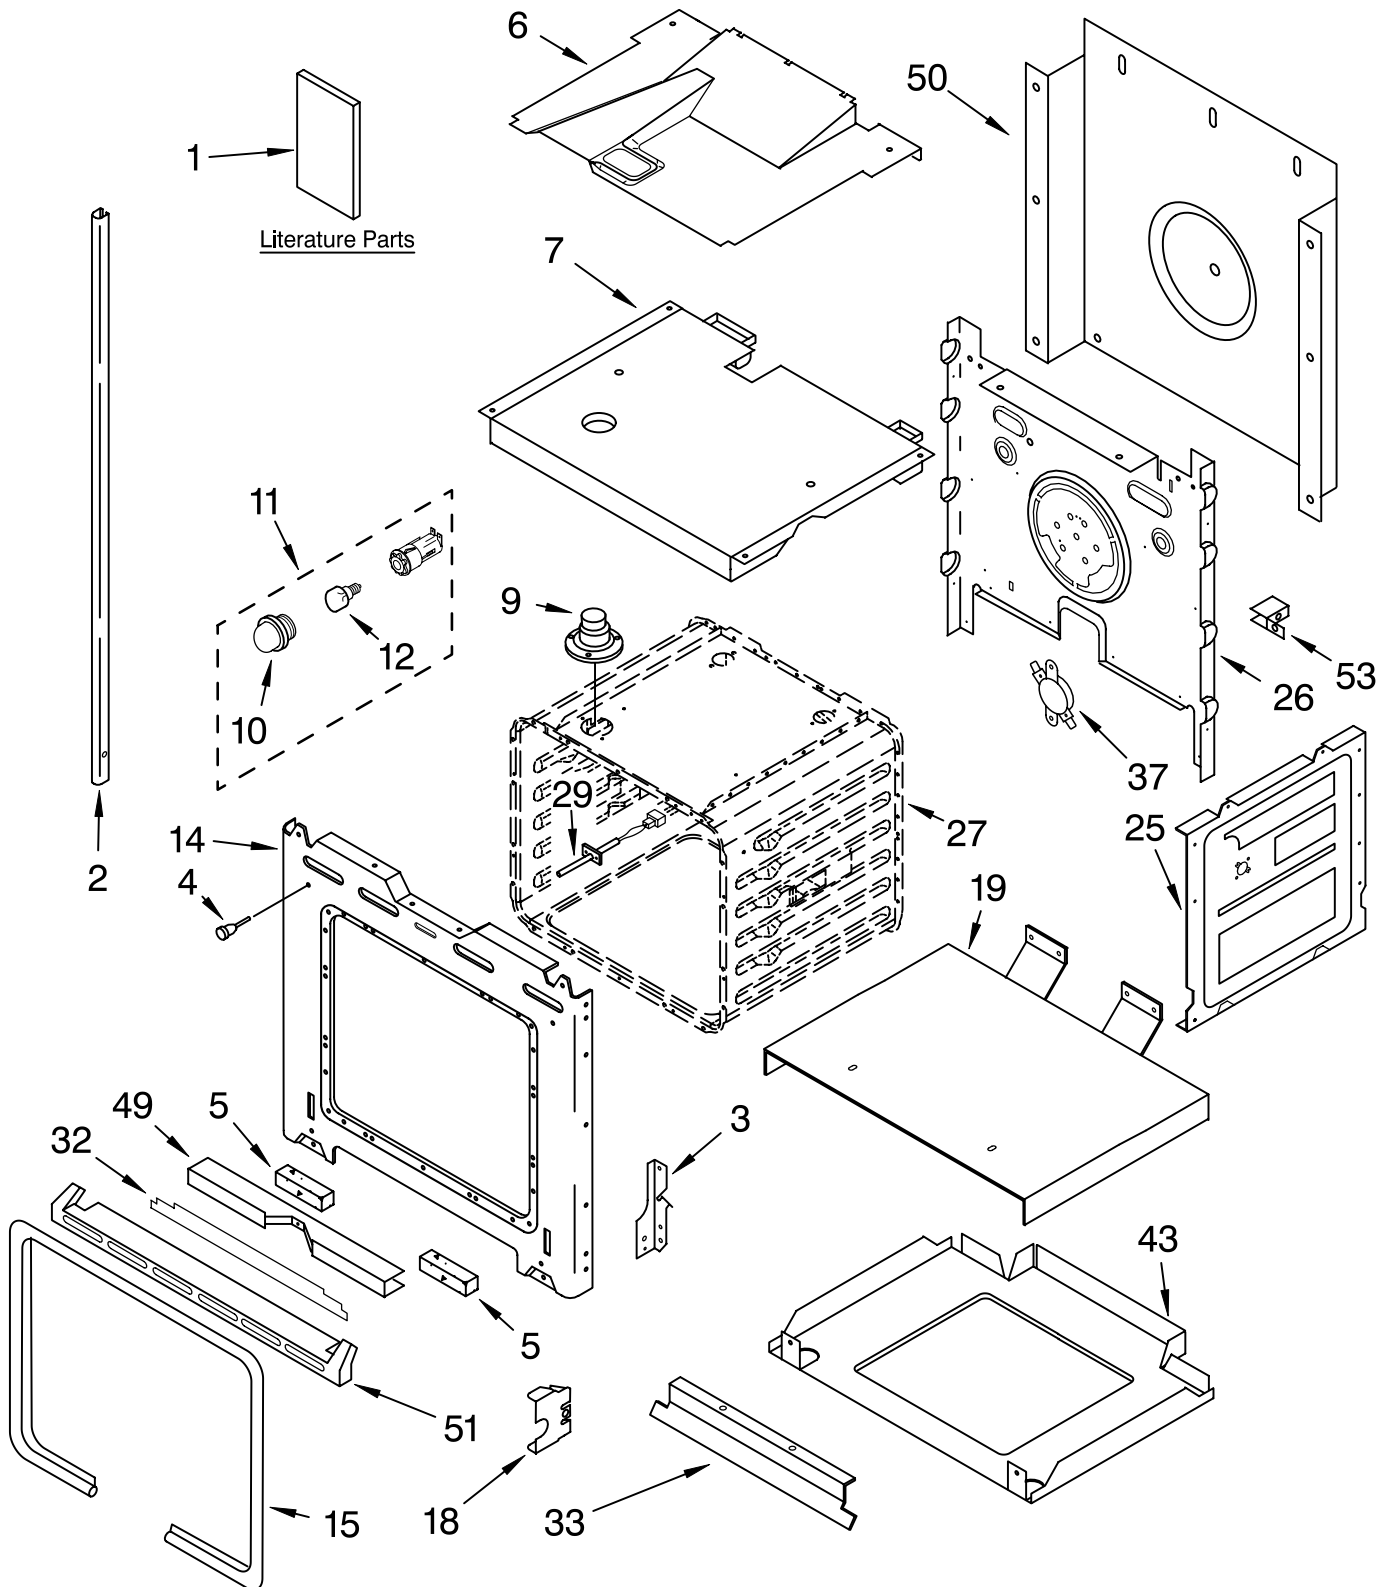

LOWER OVEN PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
(Designer White) (Black) (S.Steel) (Biscuit)

30" BUILT-IN ELECTRIC
DOUBLE OVEN
CONVECTION-UPPER
SELF-CLEAN (GOLD LINE)



FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN PARTS


For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8303647	Literature Parts Installation Instructions	7	4455865	Top, Chassis	37	9759242	Thermostat (TOD) (Temp.) SPST
	8303645	Use & Care Guide (Oven)		4449809	Screw		4449809	Screw
	8302068	Tech Sheet (Oven)	9	4452158	Tube, Vent	43	9759713	Base, Chassis
	4449237	Cookbook, WP Conv.	10	3196176	Screw		4449809	Screw
	3191638	Safer Cooking Tips	11	4452165	Lens, Light	49	4448933	Retainer, Gasket
	9759133	Safer Cooking Tips	12	4452368	Oven Light Assy		4449154	Screw
2		Trim, Side	14	4452166	Bulb, Light	50	4451747	Cover, Back
	8302919	RH White		9759060	Frame, Front		4449809	Screw
	8302920	LH White		4449040	Screw	51		Trim, Bottom
	8302921	RH Biscuit	15	4450118	Nut		8302948	White
	8302922	LH Biscuit	18	4455382	Gasket, Door		8302947	Black
	8302917	RH Black	19	4452152	Bracket, Mounting		8302949	Biscuit
	8302918	LH Black	25	4451478	Support, Insulation		8302950	S.Steel
	8303209	LH S.Steel		4455641	Side, Chassis (R.H. & L.H.)			Screw
	8303210	RH S.Steel		4449809	Screw	53	4449845	Support, Bracket
	8281236	Screw	26	4452234	Back, Chassis		4449809	Screw
3		Hinge Receiver		4449809	Screw	FOLLOWING PARTS NOT ILLUSTRATED		
	4455605	Left Hand	27		Liner, Oven (Not serviceable)	INSULATION		
	4455606	Right Hand	29	4455636	Sensor		4449316	Insulation, Wrap
4	4448520	Bumper, Door		4449154	Screw		4450365	Insulation, Back
5	4452490	Spacer, Foam	32	8300154	Insulation, Bottom Vent			
6	8302349	Divider, Vent	33	9760677	Deflector (Btm)			
	4449809	Screw		4449154	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
(Designer White) (Black) (S.Steel) (Biscuit)

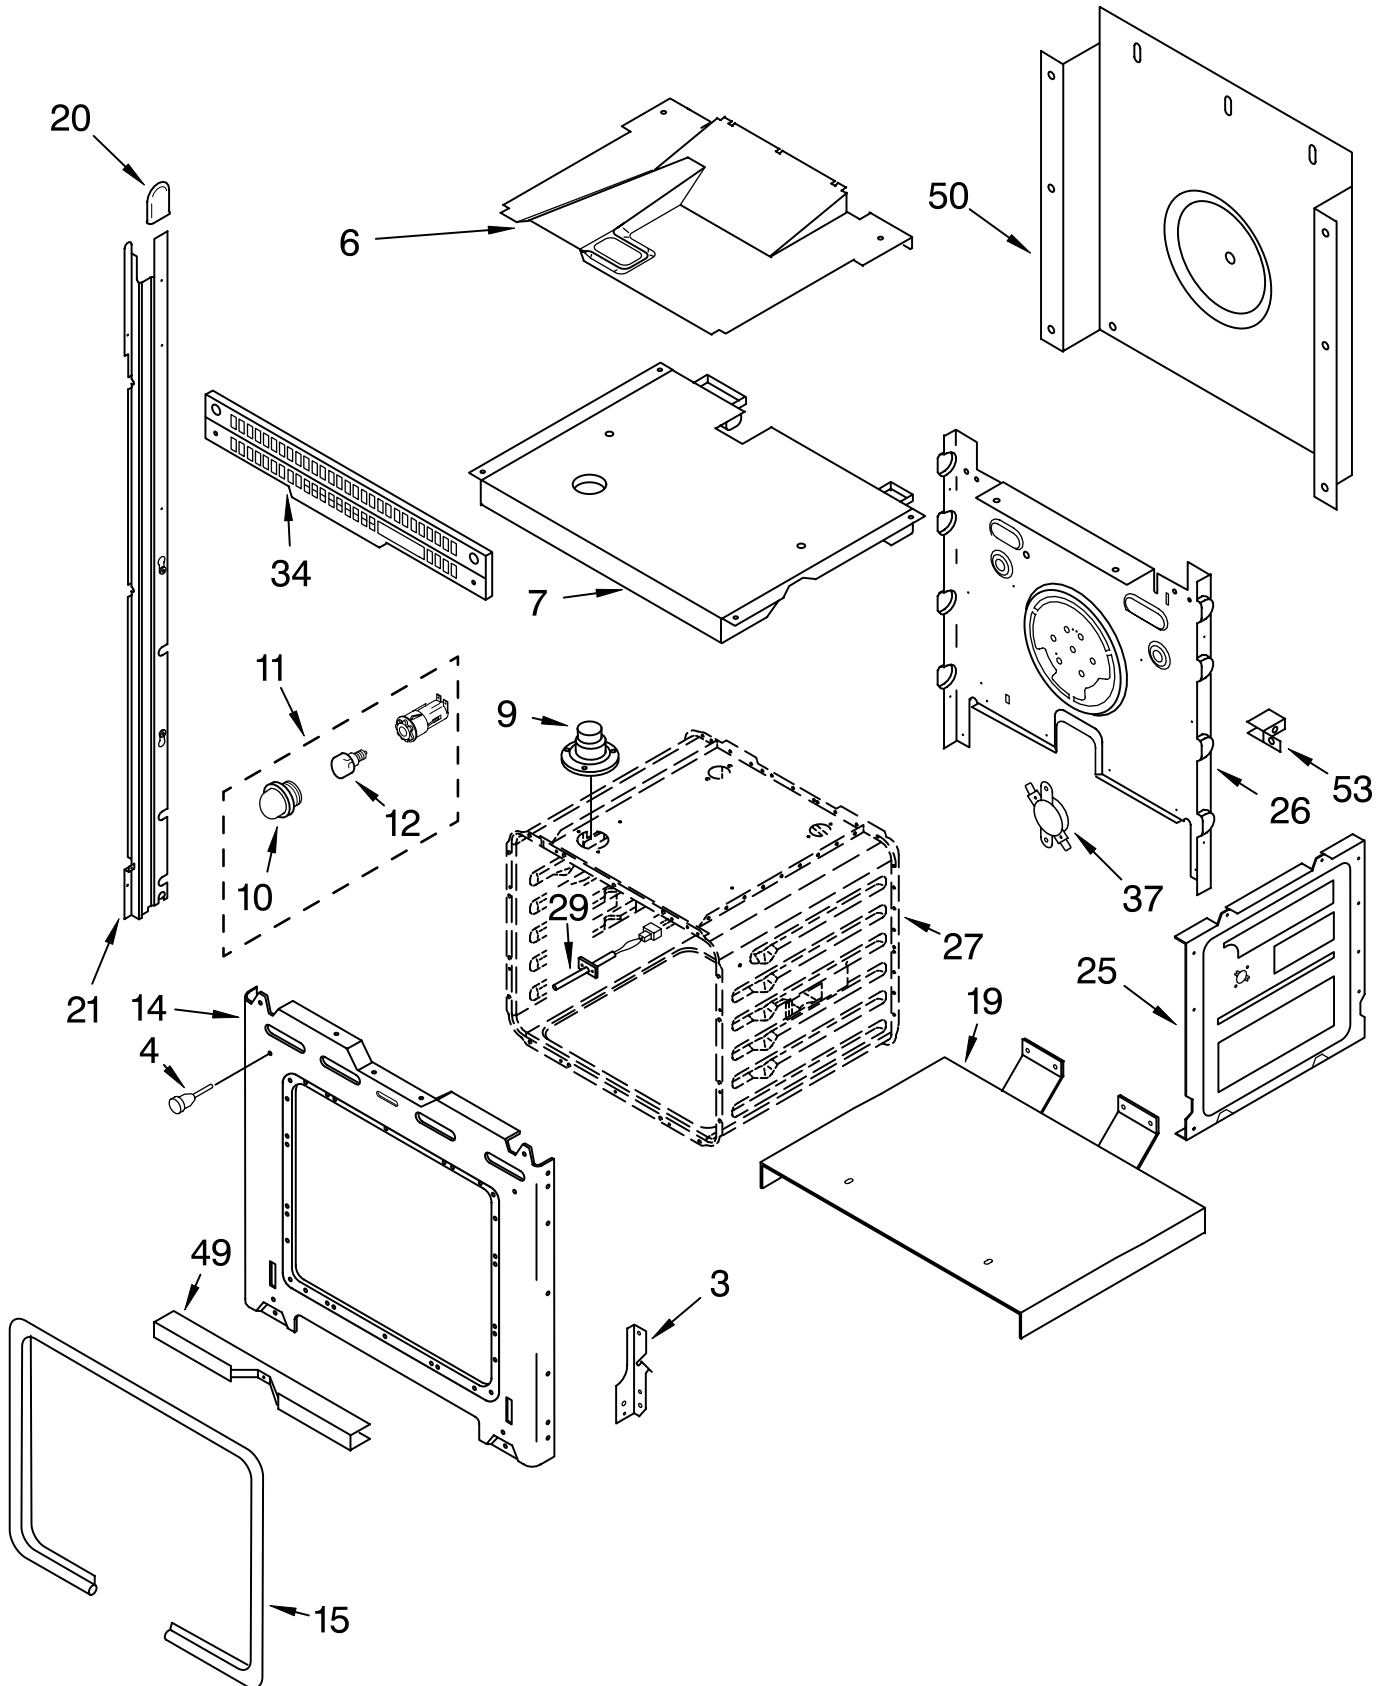

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
6	8302349	Divider, Vent
	4449809	Screw
7	4455865	Top, Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	9759060	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	8302793	Right Side
	8302794	Left Side
	4448444	Grommet
	4449154	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
34	4452267	Vent, Center
	3400832	Screw
37	9759242	Thermostat (TOD) (Temp.) SPST
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316 Insulation, Wrap
 4450365 Insulation, Back

OVEN DOOR PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

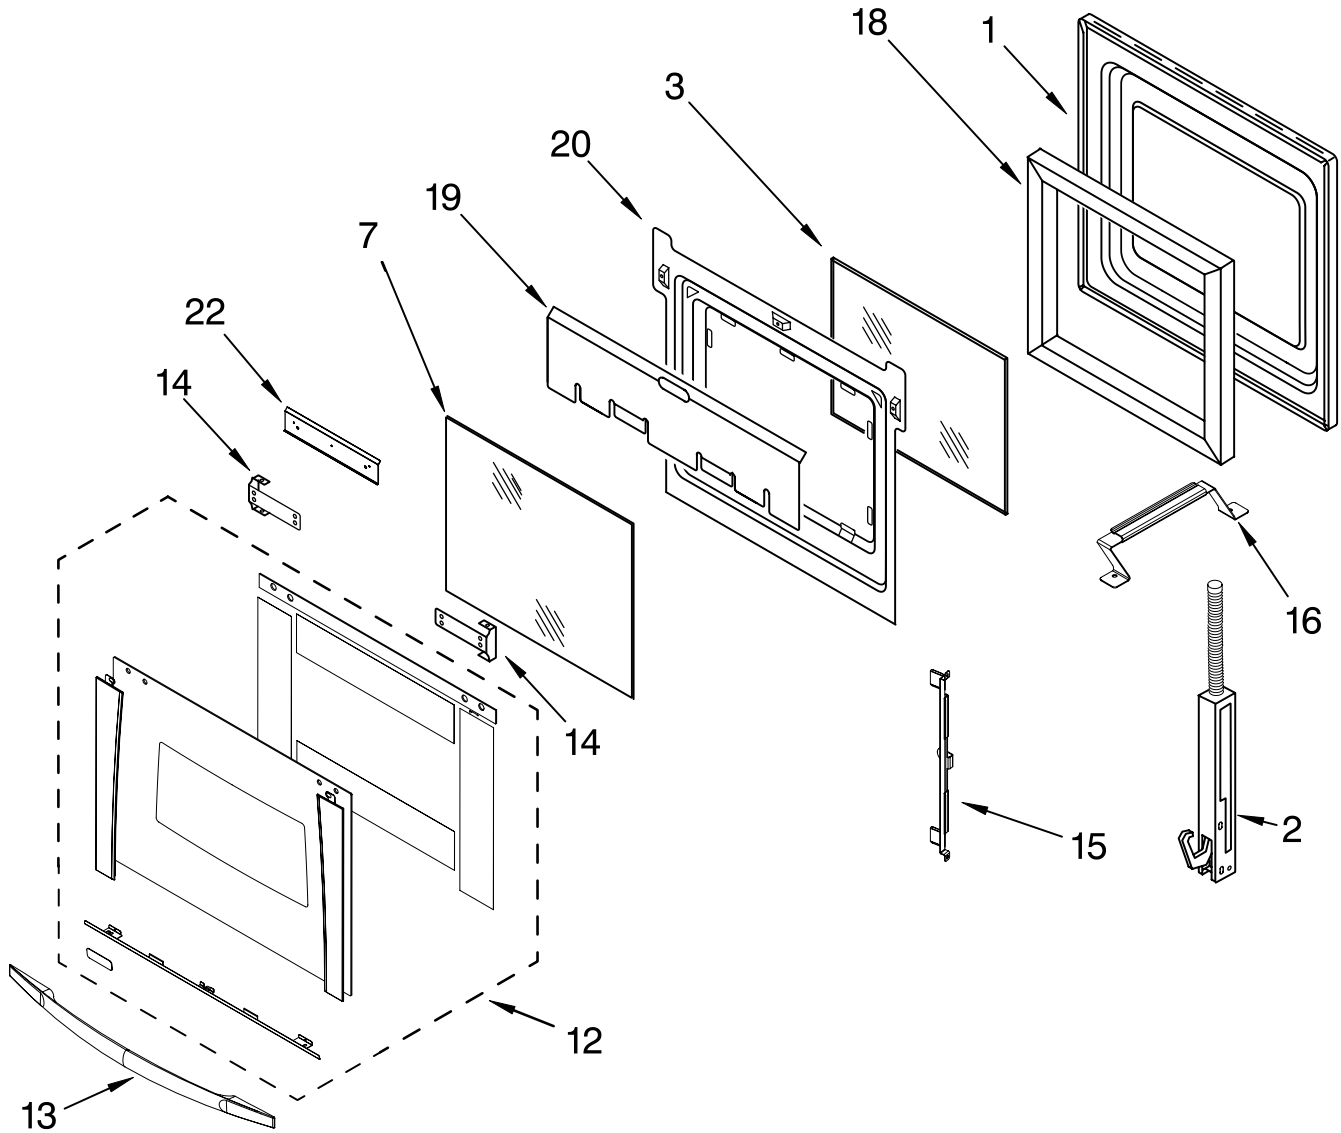


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8303700	Door Liner	12		Door Glass Assy (Upper)	13		Door Handle
2		Hinge, Door		8303306	White		8302814	White
	8300577	R.Hand (Yellow)		8303300	Black		8302813	Black
	8300578	L.Hand (Yellow)		8303310	Biscuit		8302815	Biscuit
	4449743	Screw		8303288	S.Steel (Lower)	14	8303164	S.Steel
3	4449259	Glass, Inner		8303307	White		8303167	Bracket, Handle
7	9759225	Glass, Inner		8303301	Black		4451040	Screw
				8303311	Biscuit	15	9759229	Bracket(2nd Glass)
				8303289	S.Steel	16	9759230	Bracket(3rd Glass)
						18	4451722	Insulation, door
						19	4457103	Shield, Heat
							4449809	Screw
						20	4457132	Retainer, Glass
							4449809	Screw
						22	4457114	Shield, Heat

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS


For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
(Designer White) (Black) (S.Steel) (Biscuit)

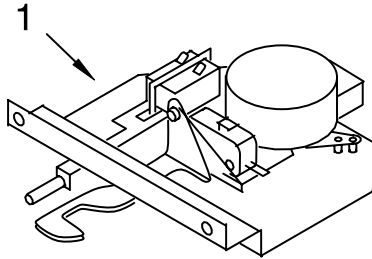

<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
1	9759481	Latch, Motorized

INTERNAL OVEN PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

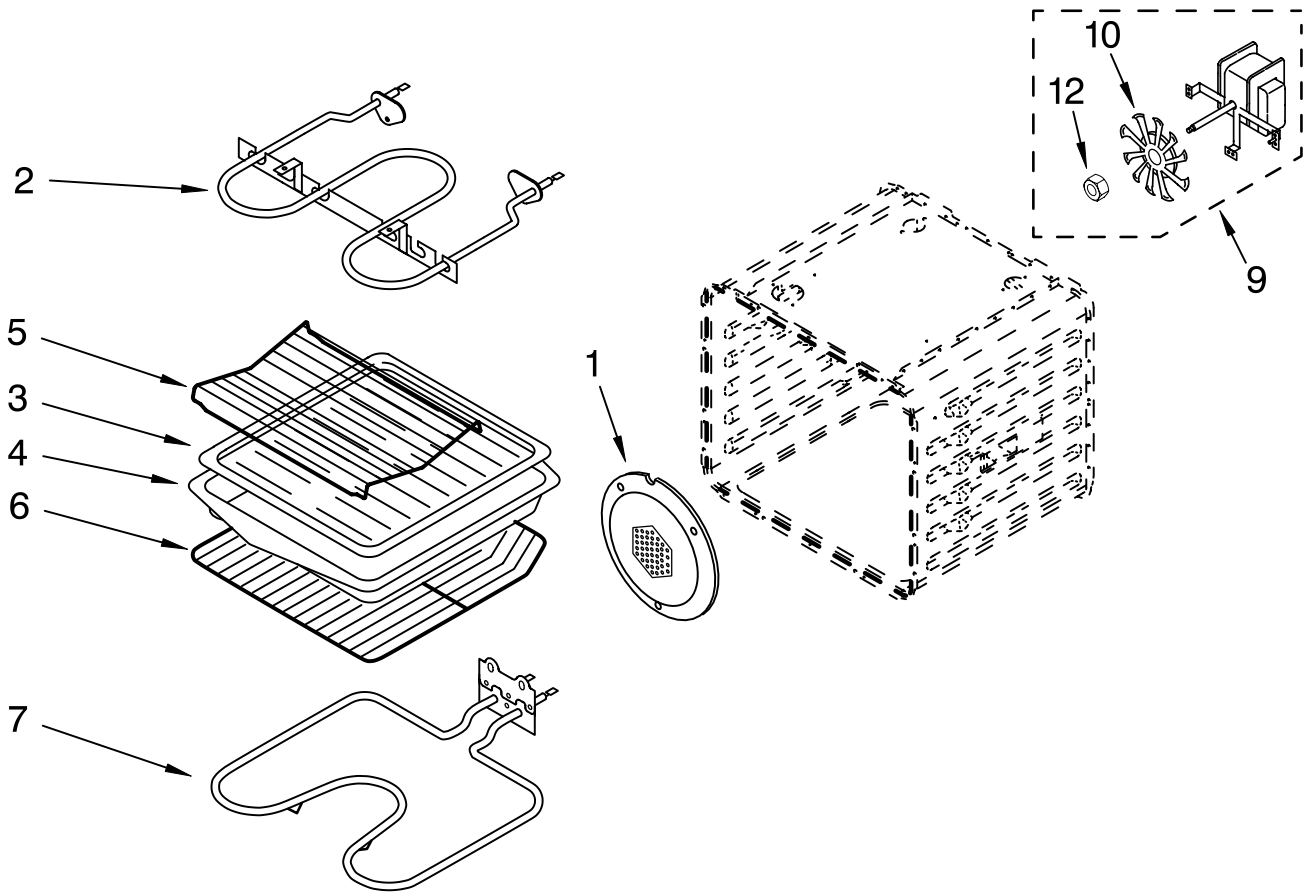


Illus. No.	Part No.	DESCRIPTION
1	4448988	Cover, Fan
	4449154	Screw
2	4456103	Element, Broil
	4449154	Screw
3	4457277	Grill, Broiler
4	4457276	Pan, Broiler
5	3181534	Rack, Roasting
6	4448717	Rack, Oven
	9759322	Pad, Rack
7	4452153	Element, Bake
	4449154	Screw
9	4451583	Fan, Convection
	4449154	Screw
10	4452226	Blade, Fan
12	4452227	Nut

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

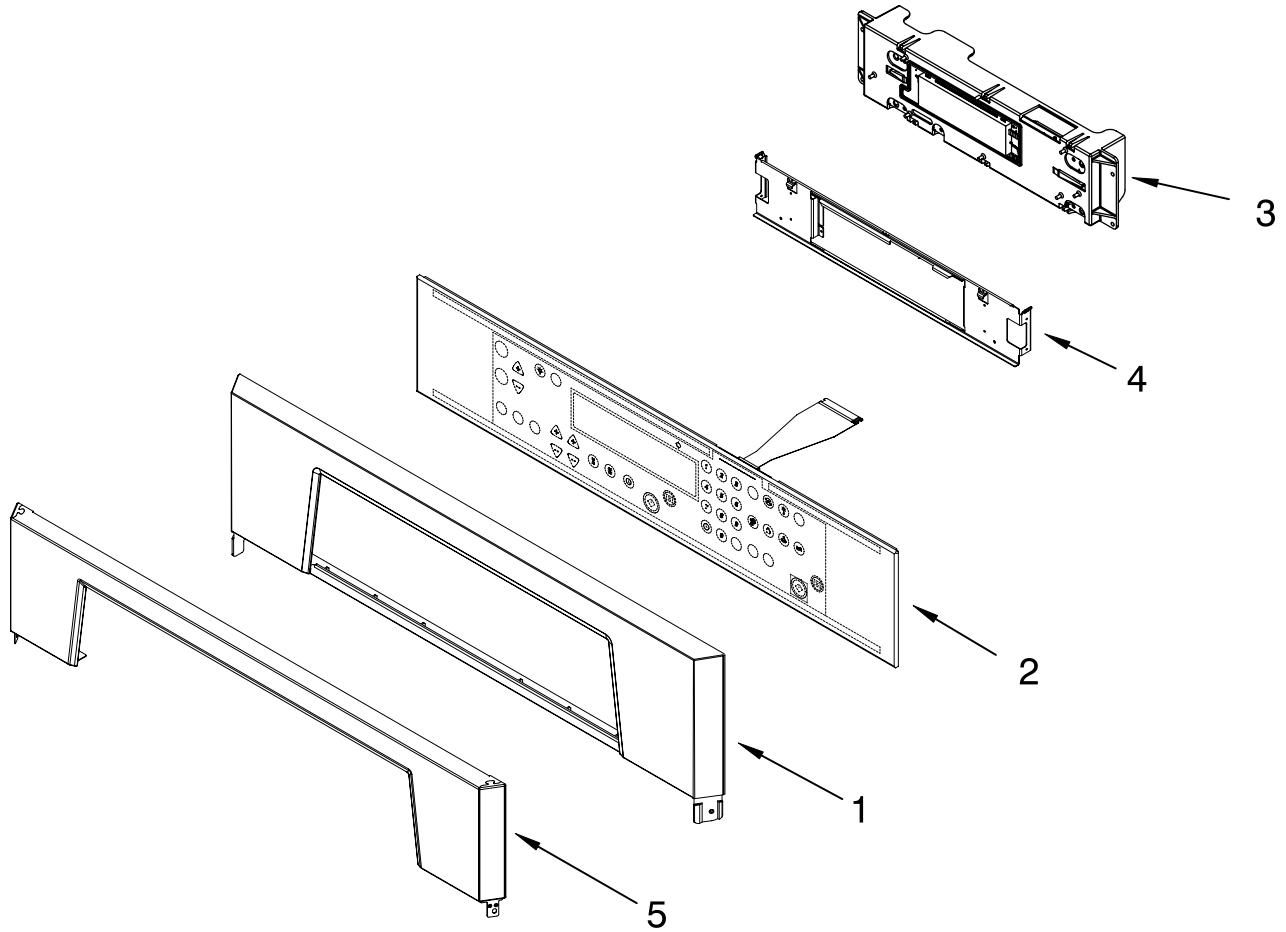


Illus. No.	Part No.	DESCRIPTION
1	8302849	Control Panel White
	8302848	Control Panel Black
	8302850	Control Panel Biscuit
2	8303182	Assy, Switch Black
	8303224	Assy, Switch White
	8303230	Assy, Switch Biscuit
3	8303817	Assy, Control
	4449745	Screw
	8301848	Latch, Sister Board
4	8302990	Control, Bracket
5	8302877	Trim-Panel (Use on S.Steel model only)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

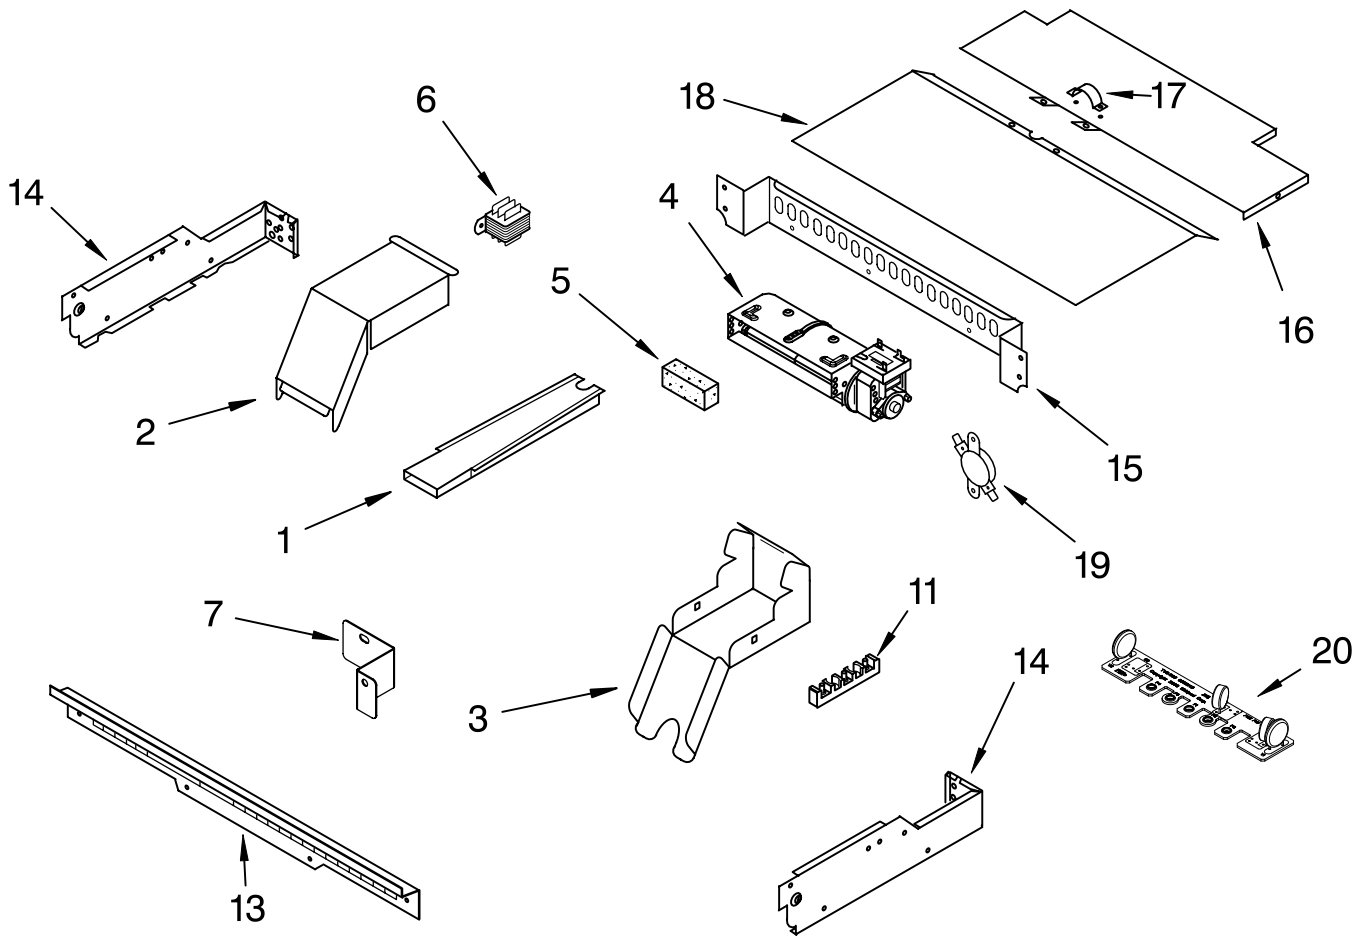

Illus. No.	Part No.	DESCRIPTION
1	4451759	Assembly,
2	4455178	Elbow, Vent Top
3	4455177	Elbow, Vent Btm
4		Blower
	6610168	45MM Lower Oven
	4457289	65MM Upper Oven
	4455191	Bracket
5	4451758	Foam, Block
6	8300642	Transformer, Control

Illus. No.	Part No.	DESCRIPTION
7	8302390	Bracket, Support (Air Stop)
11	4449868	Block, Terminal
	3400080	Screw
13	8303497	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
	4449154	Screw

Illus. No.	Part No.	DESCRIPTION
15	9759135	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
	112432	Nut
18	4452367	Cover, Top Front
	4449809	Screw
19	9759243	Thermostat, Oven
20	8302143	Suppressor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: GBD307PRQ00, GBD307PRB00, GBD307PRS00, GBD307PRT00
 (Designer White) (Black) (S.Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

	72017	White
	261869	Cord Brown
	72032	Black

PAINT, SPRAY

	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

SPLICING WIRES--25FT.

LENGTH

	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

	8301909	Harness, Wire (Latch, Lower)
	4449809	Screw
	8301777	Harness, Wire (Main)
	4450953	Conduit, Double
	4450800	Screw
	4448664	Clamp
	4449809	Screw
	112432	Nut
	4452222	Spacer, Harness
	4454835	Tie, Cable
	4451761	Support, Wiring
	4454842	Tie, Cable

Miscellaneous

	814381	Pin Hinge Kit
	4448950	Screw, Install (4)