



Use And Care

G U I D E

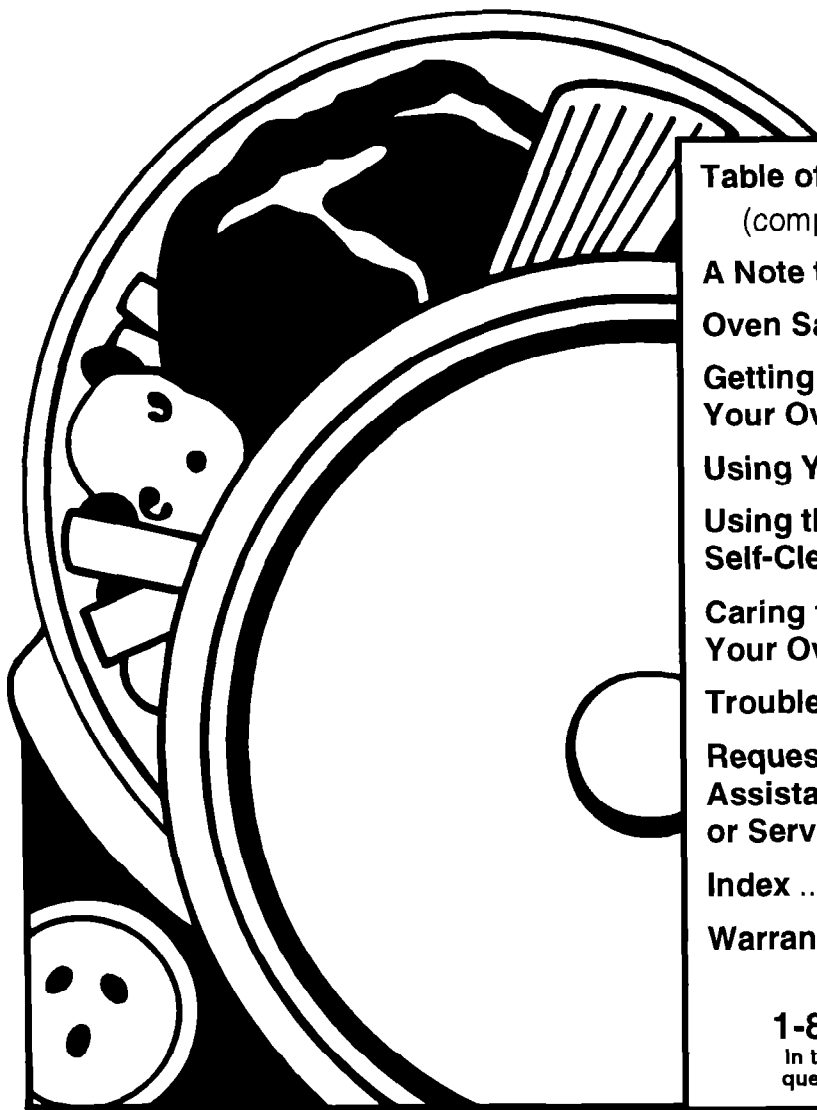


Table of Contents (complete)	2
A Note to You	3
Oven Safety	4
Getting to Know Your Oven	6
Using Your Oven	7
Using the Self-Cleaning Cycle	30
Caring for Your Oven	38
Troubleshooting	42
Requesting Assistance or Service	44
Index	47
Warranty	48

1-800-253-1301

In the U.S.A., call us with
questions or comments.

ELECTRIC BUILT-IN OVENS

MODELS RBS240PD RBS270PD RBS245PD RBS275PD
RBS305PD RBD245PD RBD275PD RBD305PD

5/95 RBD276PD RBD306PD

PART NO. 4448976

Table of Contents

A Note to You	3	Energy saving tips	18
Oven Safety	4	Using the electronic MEALTIMER* control	18
Getting to Know Your Oven	6	The oven vent(s)	29
Using Your Oven	7	Using the Self-Cleaning Cycle	30
Positioning racks and pans	7	Before you start	30
For best air circulation	7	Before setting the controls	31
Using aluminum foil for baking	8	Setting the controls	31
The electronic oven control	8	Special tips	37
Starting a function	9	How the cycle works	37
Canceling a function	10	Caring for Your Oven	38
Setting the clock	10	Cleaning chart	38
Using the electronic Minute Timer	10	Removing the oven door	40
Audible signals	12	The oven light(s)	41
Baking/roasting	12	Troubleshooting	42
Adjusting the oven temperature control	14	Requesting Assistance or Service	44
Broiling	15	Index	47
Broiling tips	17	Warranty	48

A Note to You

Thank you for buying a WHIRLPOOL* appliance.

Because your life is getting busier and more complicated, WHIRLPOOL ovens are easy to use, save time, and help you manage your home better. To ensure that you enjoy years of trouble-free operation, we developed this Use and Care Guide. It is full of valuable information about how to operate and maintain your appliance properly and safely. Please read it carefully.

Also, please complete and mail the Ownership Product Registration Card (U.S.A. or Canadian, whichever applies to you) provided with your appliance. This will help us notify you about any new information on your appliance.

Please record your model's information.

Whenever you call to request service for your appliance, you need to know your complete model number and serial number. You can find this information on the model and serial number plate (see diagram on page 6 for location of plate).

Please also record the purchase date of your appliance and your dealer's name, address, and telephone number.

Model Number _____

Serial Number _____

Purchase Date _____

Dealer Name _____

Dealer Address _____

Dealer Phone _____

Keep this book and the sales slip together in a safe place for future reference.

**Our Consumer Assistance Center
number is toll-free 24 hours a day
(for U.S.A. only).**

1-800-253-1301

Oven Safety

Your safety is important to us.

This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the symbol.

⚠ WARNING

This symbol alerts you to such dangers as fire, electrical shock, burns, and personal injury.

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the oven, follow basic precautions, including the following:

General

- Read all instructions before using the oven.
- Install or locate the oven only in accordance with the provided Installation Instructions. The oven must be installed by a qualified installer. The oven must be properly connected to electrical supply and grounded.
- **CAUTION:** Do not store things children might want above the oven. Children could be burned or injured while climbing on it.
- Do not leave children alone or unattended in area where the oven is in use. They should never be allowed to sit or stand on any part of the oven. They could be burned or injured.
- Do not operate the oven if it is damaged or not working properly.
- Do not use the oven for warming or heating the room. Persons could be burned or injured, or a fire could start.
- Use the oven only for its intended use as described in this manual.
- Do not touch heating elements or interior surfaces of oven. Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the oven, such as the oven vent opening, the surface near the vent opening, and the oven door and window, could also become hot enough to cause burns.
- Do not wear loose or hanging garments when using the oven. They could ignite if they touch a hot heating element and you could be burned.
- Use only dry pot holders. Moist or damp pot holders on hot surfaces could result in burns from steam. Do not let pot holder touch hot heating elements. Do not use a towel or bulky cloth for a pot holder. It could catch on fire.
- Keep oven vents unobstructed.

- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Use only utensils approved for oven use. Follow utensil manufacturer's instructions, especially when using glass or plastic utensils.
- Do not store flammable materials on or near the oven. The fumes could create an explosion and/or fire hazard.
- Do not repair or replace any part of the oven unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Disconnect the electrical supply before servicing the oven.

When using the oven

- Always position oven rack(s) in desired location while oven is cool. If a rack must be removed while oven is hot, do not let pot holder contact hot heating element in oven.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.
- Small amounts of formaldehyde and carbon monoxide are given off in the Self-Cleaning cycle from

fiberglass insulation and food decomposition. Significant exposure to these substances could cause cancer or reproductive harm. Exposure can be minimized by venting with a hood or open window and wiping out excess food spills prior to self-cleaning.



- Do not use oven cleaners in the self-cleaning oven. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- Before self-cleaning the single/upper oven (or both ovens on some models), remove broiler pan, broiler grid, oven racks, and other utensils. Do not use your oven to clean miscellaneous parts unless you are instructed to do so in this Use and Care Guide.
- Do not clean door seal. It is essential for a good seal. Care should be taken not to rub, damage, or move the seal. Clean only parts recommended in this Use and Care Guide.


– SAVE THESE INSTRUCTIONS –

Getting to Know Your Oven

This section tells you what features your oven has and where they are located. Please review this information before using your oven. To help you find information on specific parts or features quickly, page references are included.

Feature locations

(Models RBD276PD and RBD306PD shown)

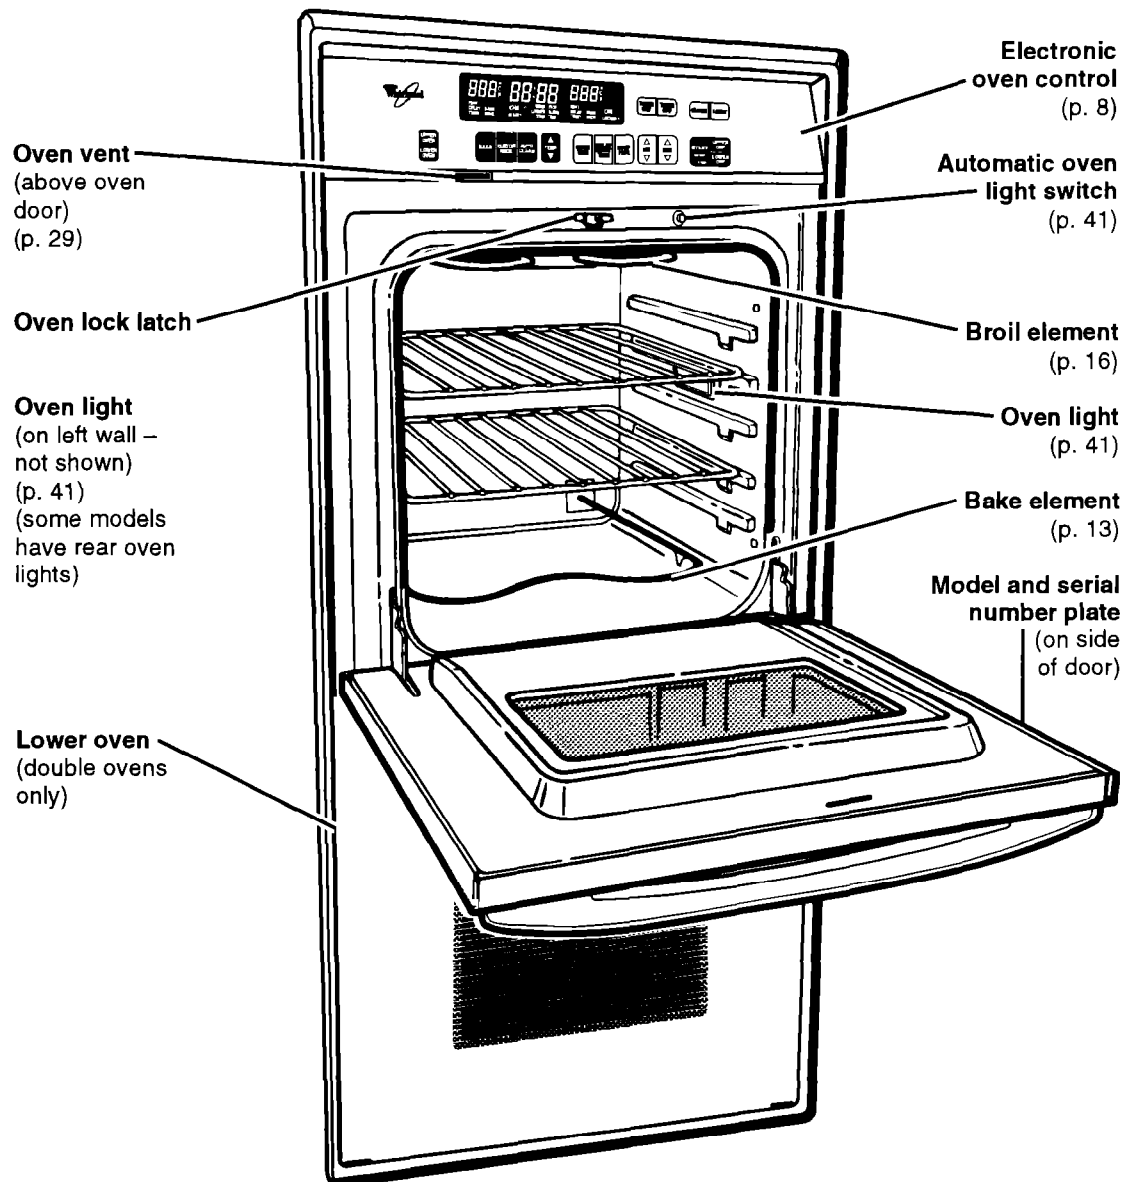

Using Your Oven

To obtain the best cooking results possible, you must operate your oven properly. This section gives you important information for efficient and safe use of your oven.

Positioning racks and pans

For baking/roasting with one rack, place the rack so the top of the food will be centered in the oven.

Rack placement for specific foods:

FOOD	RACK POSITION
Frozen pies, large roasts, turkeys, angel food cakes	Lowest level or 2nd level from bottom
Bundt cakes, most quick breads, yeast breads, casseroles, meats	2nd level from bottom
Cookies, biscuits, muffins, cakes, nonfrozen pies	2nd or 3rd level from bottom

When baking on two racks, arrange racks on second and fourth level from bottom.

To change rack position, lift rack at front and pull out.

NOTE: For recommended rack placement when broiling, see "Broiling rack position chart" on page 17.


⚠ WARNING

Personal Injury Hazard

- Always position oven rack(s) in desired location before turning oven on. Be sure the rack(s) is level.
- If rack(s) must be moved while oven is hot, use pot holders or oven mitts to protect hands.
- Do not let pot holder or oven mitt touch heating elements.

Failure to follow the above precautions could result in personal injury.

For best air circulation

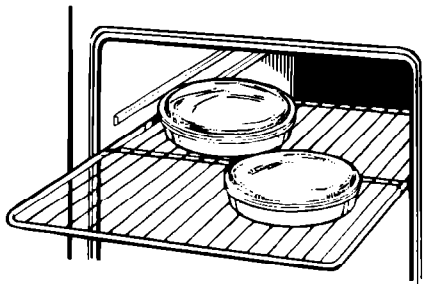

Hot air must circulate around the pans in the oven for even heat to reach all parts of the oven. This results in better baking.

- **Place** the pans so that one is not directly over the other.
- **For best results**, allow 1½ to 2 inches (4-5 cm) of space around each pan and between pans and oven walls. There must be a minimum space of 1 inch (3 cm).
- **Use** only one cookie sheet in the oven at a time.

Use the following as a guide to determine where to place the pans:

One pan

Place in the center of the oven rack.


Two pans

Place in opposite corners of the oven rack.

Three or four pans

Place in opposite corners on each oven rack. Stagger pans so no pan is directly over another.

Using aluminum foil for baking

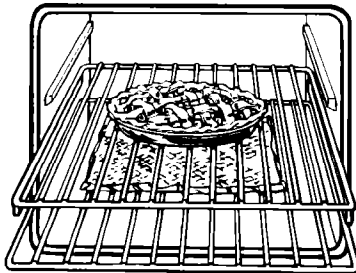

Use aluminum foil to catch spillovers from pies or casseroles:

- Place the foil on the oven rack below the rack with the food. Turn up foil edges and make sure foil is about 1 inch (3 cm) larger all around than the dish holding the food.

⚠ WARNING

Fire Hazard

Do not allow foil to touch the heating elements.


Failure to follow this precaution could result in fire or electrical shock hazard and damage to the elements.

- Do not cover the entire rack with aluminum foil. It will reduce air circulation and cause poor cooking results.
- Do not line oven bottom or entire oven rack with foil or other liners. Poor baking will result.

The electronic oven control

(Models RBD276PD and RBD306PD shown)


NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

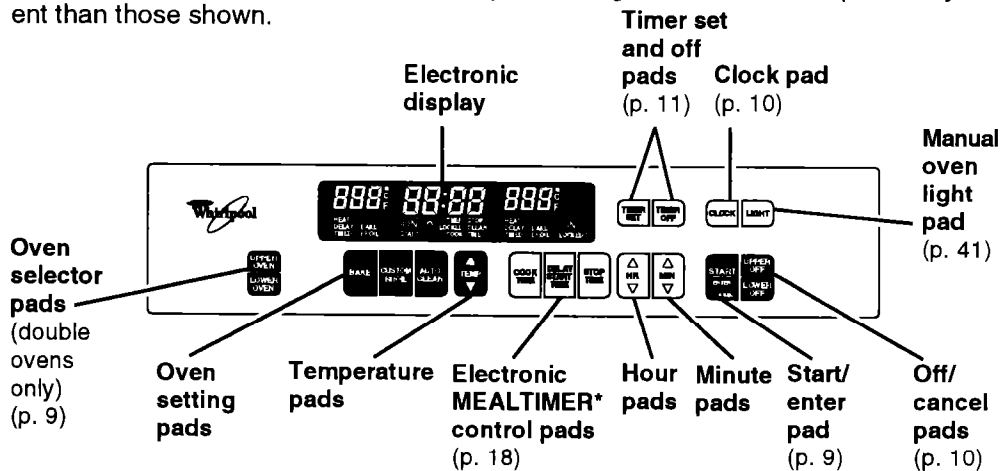

Display/clock

- When you first plug in the oven, everything on the display will light up for a few seconds, then a time of day and "PF" will appear on the temperature display. If after you set the clock (page 10), "PF" again appears on the display, your electricity was off for a while. Reset the clock.
- When you are not using the oven, the control is an accurate clock.
- When you are using the oven or Minute Timer, the display will show times, temperature settings, and what command pads have been pressed.

- **When showing the time of day**, the display will show the hour and minutes.
- **When you are using the Minute Timer**, the display will show hours, minutes, and seconds in the following sequence:
 - **For settings from 1-59 minutes**, the display will count down each second (minutes and seconds displayed).
 - **For settings 1 hour or over**, the display will count down each minute (hours and minutes displayed).
- **When you are using Cook Time and/or**

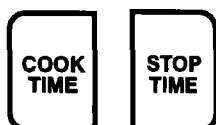

Stop Time, the display will show cooking time counting down.

- **For settings from 1-59 minutes**, the display will count down each second (minutes and seconds displayed).
- **For settings 1 hour or over**, the display will count down each minute (hours and minutes displayed).

Command pads

The command pads tell the oven what to do and in what order. Some command pads have an Indicator Light. The Indicator Light comes on when you press the command pad. The ON Indicator Light comes on when you press the Start/Enter pad for an oven function.

Selecting an oven (double ovens)

To choose the oven you want to use, press the Upper Oven or Lower Oven pad.




Using the control lock

The control lock prevents unwanted use of the oven by disabling most of the control panel command pads (except CLOCK, TIMER SET/OFF, and LIGHT).

NOTES:


- **Control lock** is only available when oven is not in use or control has not been set.
- **Set** control lock when cleaning the control panel to prevent oven from accidentally turning on.

To lock or deactivate the control panel:

Press and hold the Start/Enter pad for 5 seconds. A single tone will sound and "Loc" and  will appear on the temperature display. When the control is locked, "START?" will appear on the display if you press any command pad.



To unlock the control panel:

Press and hold the Start/Enter pad for 5 seconds. A single tone will sound and "Loc" and  will disappear from the temperature display.



Starting a function

After programming a function, you must press the Start/Enter pad to start the function. If you do not press the Start/Enter pad within 5 seconds of programming, "START?" will show on the display as a reminder.



USING YOUR OVEN

Canceling a function

The Off/Cancel pad will cancel any function except for the Clock and Timer Set functions. When you press the Off/Cancel pad, the display will show the time of day or, if Minute Timer is also being used, the time remaining.



(single ovens)

OR



(double ovens)

NOTE: You may hear a fan blowing in the oven even after you press the Off/Cancel pad. This is the cooling fan. It will turn off when the oven cools to a certain temperature.

Setting the clock

NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

1. Press Clock pad.

PRESS



YOU SEE



(last time of day set)

2. Set time.

Press the "up" (▲) or "down" (▼) pad(s) until the correct time shows on the display.

PRESS



YOU SEE



(example for 5:30)

3. Start clock.

NOTE: If you do not want the clock time displayed, press and hold the Clock pad for 5 seconds. To display the clock time again, press and hold the Clock pad for 5 seconds. You should not have to reset the time.

PRESS



YOU SEE



Using the electronic Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. It can be set in hours and minutes up to 12 hours 59 minutes. The Minute Timer will display minutes and seconds for settings under one hour.

10

You will hear four 1-second tones when the set time is up.

NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

USING YOUR OVEN

1. Press Timer Set pad.

PRESS



YOU SEE



2. Set time.

Press the "up" (▲) or "down" (▼) pad(s) until the correct time shows on the display.

PRESS



YOU SEE



(example for ten minutes)

3. Start Minute Timer.

The Minute Timer will begin counting down immediately after the timer is started.

PRESS



YOU SEE



(display counts down)

When the time is up:

You will hear four 1-second tones, then four 1-second **reminder tones** every minute until you press the Timer Off pad.

NOTE: To disable the **reminder tones**, press and hold the Timer Set pad for 5 seconds. To reactivate the tones, follow the same step. After disabling or reactivating **reminder tones**, a single tone will sound and the display will return to the Minute Timer countdown or the time of day.

YOU SEE



4. Turn off Minute Timer.

PRESS



YOU SEE



(time of day)

To cancel the Minute Timer:

Press Timer Off pad.

PRESS



YOU SEE



(time of day)

USING YOUR OVEN

Audible signals

Audible signals tell you if a function is entered correctly or not. They also tell you when a cycle is completed.

To shut off all signals except for error tones and the hidden function signal:

Press and hold the Stop Time pad for 5 seconds. A short tone will sound to tell you the signals have been changed. "Snd" and "On" or "Snd" and "Off" will appear on the display.



Repeat the above step to turn the signals back on.

To choose between high and low volume signals:

Press and hold the Delay Start Time pad for 5 seconds. A short tone will sound to tell you the signals have been changed. Either "HI" and "Snd" or "LO" and "Snd" will appear on the time display to show the volume you chose. If the volume is changed while the audible signals are off, when signals are turned back on they will be at the volume setting chosen.



 
Baking/roasting

NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower

oven displays and single oven command pads may look different than those shown.

1. Position racks.

For more information, see "Positioning racks and pans" on page 7.



2. Choose baking/roasting setting.

PRESS



YOU SEE



3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F. Press ▲ to raise the temperature or ▼ to lower the temperature in 5°F amounts. Use these pads until the desired temperature shows on the small display. (If the Temp pads are held down the temperature will change faster.)

PRESS




YOU SEE



(example for Bake at 375°F)

4. When roasting or cooking casseroles, put food in oven.

You do not have to preheat the oven when roasting or cooking casseroles.

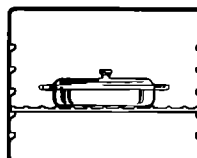

5. Press the Start/Enter pad.

A preheat time will count down on the display. The oven control automatically sets preheat times depending on the oven temperature you select:

Single ovens:

TEMPERATURE (in °F)	PREHEAT TIME (in min. and sec.)
0-325	5:45
325-375	7:30
375-500	11:00

Double ovens:

TEMPERATURE (in °F)	PREHEAT TIME (by oven size) (in min. and sec.)		
	24"	27"	30"
0-250	3:15	3:30	3:30
255-300	4:45	4:45	5:00
305-350	6:00	6:30	6:30
355-400	6:30	8:30	8:30
405-450	9:30	10:30	10:30
455-500	11:30	12:30	13:00

The oven is preheated when you hear a 1-second tone and "PrE" on the display changes to the set temperature.

NOTES:

- **You can change** the temperature setting any time after pressing the Start/Enter pad. However, you must press the Start/Enter pad again for the control to accept the temperature changes.
- **The display** will show "door" and the heating elements will not heat if the door is open when you try to bake/roast.


PRESS



YOU SEE



(example from double ovens for temperature of 350°F)

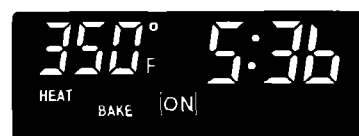


(display shows set temperature after preheat)

6. When baking, put food in oven after oven is preheated.

During baking/roasting, the elements will turn on and off to keep the oven temperature at the setting.

NOTE: The top element helps heat during baking/roasting, but does not turn red.

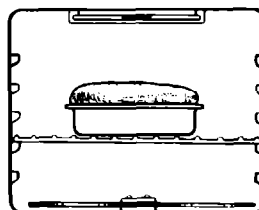

USING YOUR OVEN

7. After cooking, turn off oven.

PRESS



OR



(single ovens)

(double ovens)

YOU SEE



(time of day)

Adjusting the oven temperature control

Although your new oven is properly adjusted to provide accurate temperatures, it may cook faster or slower than your old oven. If, after using the oven for a period of time, you are not satisfied with the baking/roasting results, you can change the offset temperature by following these steps:

NOTE: DO NOT measure oven temperature with a thermometer. Opening the oven door will lower the oven temperature and give you an inaccurate reading. Also, the thermometer temperature reading will change as your oven cycles.

NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

1. Press and hold Bake pad for 5 seconds.

The display will show the current offset temperature, for example "0", if you have not previously adjusted the temperature.

PRESS



YOU SEE



(factory setting of "0")

2. Set new offset temperature.

Press ▲ to raise the temperature or ▼ to lower the temperature in 10°F amounts. You can set the temperature change to as low as -30°F or as high as +30°F. A minus (-) sign will appear before the number when decreasing the temperature setting to show the oven will be cooler by the displayed amount. There is no sign in front of the number when increasing the temperature setting.

PRESS



YOU SEE



(example when making oven 10°F hotter)

3. Enter the adjustment.

PRESS



YOU SEE



(time of day)

How to determine the amount of adjustment needed

The chart at the right tells you how much to adjust the offset temperature to get the desired cooking results. You can determine cooking results by the amount of browning, moistness, and rising times for baked foods.

TO MAKE FOOD...	ADJUST BY THIS NUMBER OF DEGREES
A little more done	+10°F/+6°C
Moderately more done	+20°F/+12°C
Much more done	+30°F/+16°C
A little less done	-10°F/-6°C
Moderately less done	-20°F/-12°C
Much less done	-30°F/-16°C

To display temperatures in °C instead of °F:

Press and hold the Custom Broil pad for 5 seconds. A short tone will sound and the temperatures displayed will be converted. To switch back to °F, repeat the instructions above.

CUSTOM
BROIL

NOTE: The temperature display will go off after a conversion. The temperature display will reappear the next time you press a cook function command pad.


Broiling

NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

NOTE: Preheating is not necessary when broiling.

1. Position rack.

See "Broiling rack position chart" on page 17.

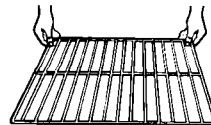

2. Put food on broiler pan and place in center of oven rack.

3. Close door.

NOTE: Do not keep the door open as on other electric ovens. Unlike other electric ovens, the broil element will only stay on with the door closed. This gives you the

high heat you need for broiling. However, if you leave the door open, the broil element will go off.

4. Press Custom Broil pad.

PRESS



YOU SEE



continued on next page

USING YOUR OVEN

5. Start oven.

NOTE: You can change the temperature setting any time after pressing the Start/Enter pad. To change the setting, see "To custom broil at a lower temperature" below. After changing the setting, you must press the Start/Enter pad again.

PRESS



YOU SEE



6. When broiling is done, turn off oven.

PRESS



YOU SEE



(single ovens) (time of day)

OR



(double ovens)

To custom broil at a lower temperature:

- If food is cooking too fast, press the Custom Broil pad and press the ▼ Temp pad until "325°F" shows on the small display. Press the Start/Enter pad.

NOTE: If the Temp pads are held down the temperature will change faster.

PRESS



YOU SEE



(example shows Broil at 325°F)



- If you want food to broil slower from the start, press the Custom Broil pad and press the ▼ Temp pad so a temperature between 170°F and 500°F (75°C and 260°C) shows on the small display. Press the Start/Enter pad.

Lower temperature settings allow for broil heating element cycling and slower cooking. The lower the temperature, the slower the cooking.

NOTE: Fish and chicken are some foods that may cook better if you use lower broiling temperatures.

 
PRESS



YOU SEE




(example shows Broil at 400°F)



Broiling rack position chart

RACK POSITION FROM BOTTOM	TYPE OF FOOD/ DONENESS
4	Quickly searing food, hamburger patties and thin steaks, 1/2" thick or less, rare steaks
3	Medium steaks, medium patties, ham slices, fish steaks, frankfurters, well-done steaks and patties, lamb chops, split chicken, pork steaks and chops, whole fish
1 and 2	Not used for broiling

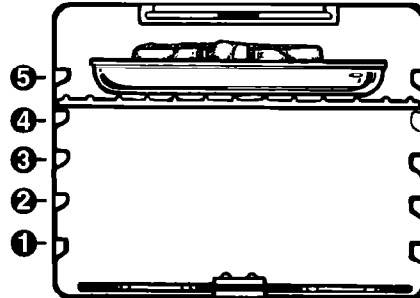

Broiling tips

- **Use** the broiler pan and grid for broiling. They are designed to drain excess liquid and grease away from the cooking surface to help prevent spatter, smoke, or fire.
- **After broiling, remove** the broiler pan from the oven when you remove the food. Drippings will bake on the pan if you leave it in the heated oven.

⚠ WARNING

Fire Hazard

- Place food about 3" or more from the broil element.
- To ensure adequate grease drainage, do not use cookie sheets or similar pans for broiling. Also, covering the broiler grid with foil is not recommended. If foil is used, cut slits in foil to line up with all openings in broiler grid. Grease can then drain away and cool in pan.

Failure to follow the above could result in fire, burns, or other personal injury.

USING YOUR OVEN

Energy saving tips

Although the energy used for cooking is usually a very small percentage of the total energy used in the home, cooking energy can be used efficiently. Here are some tips to help you save energy when using your cooking product:

- **Preheat** only when recommended and for the shortest time possible.
- **“Oven peeking”** may cause heat loss, longer cooking times, and unsatisfactory baking results. Rely on your timer to keep track of the cooking time.

- **Bake** cakes, pies, or cookies when oven is warm. Best time to bake is right after a meal has been cooked in oven.
- **Plan** your meals for the most efficient use of the oven. When using the oven to cook one food, try to cook the rest of the meal in it also.
- **Do not preheat** when broiling, roasting, or cooking items such as casseroles.

Using the electronic MEALTIMER* control

The electronic MEALTIMER control will turn the oven on and off at times you set, even when you are not around.

Delayed time baking/roasting is ideal for foods which do not require a preheated oven, such as meats and casseroles. **Do not use delayed time cooking for cakes, cookies, etc. – they will not rise properly.**

This section discusses two methods for starting baking/roasting now and stopping automatically later, and three methods for starting and stopping baking/roasting automatically. Read this section carefully to choose which method(s) is best for you.

Before using the electronic MEALTIMER control, make sure the clock is set to the correct time of day. (See “Setting the clock” on page 10.)


NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

To start baking/roasting now and stop automatically:

Method 1—Using Cook Time:

1. Prepare oven.

Position the oven rack(s) properly and put food in the oven. For correct rack placement, see “Positioning racks and pans” on page 7.

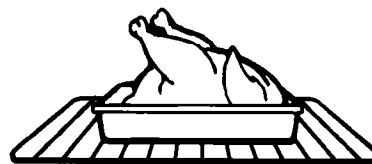

2. Choose Bake setting.

PRESS



YOU SEE



USING YOUR OVEN

3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F. Press ▲ to raise the temperature or ▼ to lower the temperature in 5°F amounts. Use these pads until the desired temperature shows on the small display. (If the Temp pads are held down the temperature will change faster.)

PRESS



YOU SEE



(example shows Bake at 375°F)

4. Press Cook Time pad.

PRESS



YOU SEE



5. Set cook time.

Press the “up” (▲) or “down” (▼) pad(s) until the correct time shows on the display.

PRESS



YOU SEE



(example shows 30-minute baking/roasting time)

6. Start oven.

NOTES:

- **You can change** the temperature or time settings any time after pressing the Start/Enter pad by repeating Steps 2 through 6.
- **The display** will show “door” and the heating elements will not heat if the door is open when you try to bake/roast.
- **When you press the Start/Enter pad**, the display will count down the baking/roasting time in hours and minutes (if cook time is more than one hour) or in minutes and seconds (if cook time is less than one hour).

PRESS



YOU SEE




(display counts down cook time)

7. When baking/roasting is done:

The oven will turn off automatically and beep four times. You will also hear four 1-second tones every minute until you press the Off/Cancel pad.

NOTE: To disable reminder tones, press and hold the Cook Time pad for 5 seconds. To reactivate tones, repeat this step.

YOU SEE

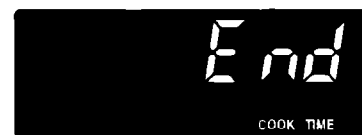

continued on next page

USING YOUR OVEN

8. Turn off oven.

NOTE: You can do this step any time to cancel the MEALTIMER* control setting.

PRESS



YOU SEE



(single ovens) (time of day)

OR




(double ovens)

Method 2—Using Stop Time:

1. Prepare oven.

Position the oven rack(s) properly and put food in the oven. For correct rack placement, see "Positioning racks and pans" on page 7.

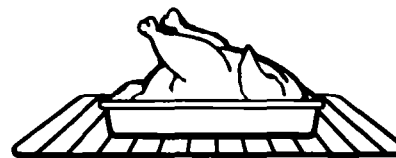

2. Choose Bake setting.

PRESS



YOU SEE



3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F. Press ▲ to raise the temperature or ▼ to lower the temperature in 5°F amounts. Use these pads until the desired temperature shows on the small display. (If the Temp pads are held down the temperature will change faster.)

PRESS



YOU SEE



(example shows Bake at 375°F)

4. Press Stop Time pad.

PRESS



YOU SEE



5. Set stop time.

Press the “up” (▲) or “down” (▼) pad(s) until the correct time shows on the display.

Example at right shows a desired stop time of 2 o'clock. This provides a 2-hour cook time (the difference between the time of day and the stop time).

PRESS



YOU SEE



(example shows 2 o'clock stop time)

6. Start oven.

NOTES:

- **You can change** the temperature or time settings any time after pressing the Start/Enter pad by repeating Steps 2 through 6.
- **The display** will show “door” and the heating elements will not heat if the door is open when you try to bake/roast.
- **When you press the Start/Enter pad**, the display will count down the baking/roasting time in hours and minutes (if cook time is more than one hour) or in minutes and seconds (if cook time is less than one hour).

PRESS



YOU SEE



7. When baking/roasting is done:

The oven will turn off automatically and beep four times. You will also hear four 1-second tones every minute until you press the Off/Cancel pad.

NOTE: To disable reminder tones, press and hold the Cook Time pad for 5 seconds. To reactivate tones, repeat this step.

YOU SEE




8. Turn off oven.

NOTE: You can do this step any time to cancel the MEALTIMER* control setting.

PRESS



YOU SEE

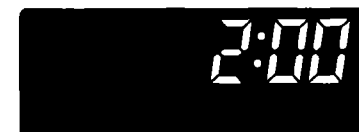

(single ovens) (time of day)

OR



(double ovens)


USING YOUR OVEN

To delay start and stop automatically:

Method 1—Using Cook Time and Delay Start Time:

1. Prepare oven.

Position the oven rack(s) properly and put food in the oven. For correct rack placement, see "Positioning racks and pans" on page 7.

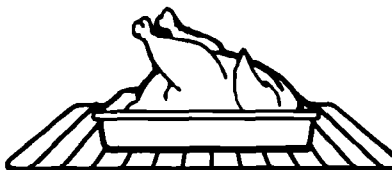

2. Choose Bake setting.

PRESS



YOU SEE



3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F. Press ▲ to raise the temperature or ▼ to lower the temperature in 5°F amounts. Use these pads until the desired temperature shows on the small display. (If the Temp pads are held down the temperature will change faster.)

PRESS



YOU SEE



(example shows Bake at 375°F)

4. Press Cook Time pad.

PRESS



YOU SEE



5. Set cook time.

Press the "up" (▲) or "down" (▼) pad(s) until the correct time shows on the display.

PRESS



YOU SEE



(example shows 30-minute baking/roasting time)

6. Press Delay Start Time pad.

PRESS



YOU SEE



7. Set start time.

Press the “up” (▲) or “down” (▼) pad(s) until the correct time shows on the display.

Example at right shows a desired start time of 2 o'clock. The oven will automatically shut off at 2:30 (the set start time plus the set cook time).

PRESS



YOU SEE



(example shows 2 o'clock start time)

8. Complete entry.

NOTES:

- You can change the temperature or time settings any time after pressing the Start/Enter pad by repeating Steps 2 through 8.
- The display will show “door” and the heating elements will not heat if the door is open when you try to bake/roast.

PRESS



YOU SEE



9. When start time is reached:

A 1-second tone will sound. The display will count down the baking/roasting time in hours and minutes (if cook time is more than one hour) or in minutes and seconds (if cook time is less than one hour).

YOU SEE



(display counts down cook time)

10. When baking/roasting is done:

The oven will turn off automatically and beep four times. You will also hear four 1-second tones every minute until you press the Off/Cancel pad.

NOTE: To disable reminder tones, press and hold the Cook Time pad for 5 seconds. To reactivate tones, repeat this step.

YOU SEE



continued on next page

USING YOUR OVEN

11. Turn off oven.

NOTE: You can do this step any time to cancel the MEALTIMER* control setting.

PRESS



YOU SEE



(single ovens) (time of day)

OR




(double ovens)

Method 2-Using Delay Start Time and Stop Time:

1. Prepare oven.

Position the oven rack(s) properly and put food in the oven. For correct rack placement, see "Positioning racks and pans" on page 7.

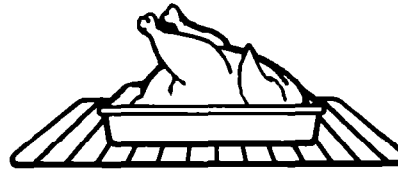

2. Choose Bake setting.

PRESS



YOU SEE



3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F. Press ▲ to raise the temperature or ▼ to lower the temperature in 5°F amounts. Use these pads until the desired temperature shows on the small display. (If the Temp pads are held down the temperature will change faster.)

PRESS



YOU SEE



(example shows Bake at 375°F)

4. Press Delay Start Time pad.

PRESS



YOU SEE



USING YOUR OVEN

5. Set start time.

Press the “up” (▲) or “down” (▼) pad(s) until the correct time shows on the display.
Example at right shows a desired start time of 2 o'clock.

PRESS



YOU SEE



(example shows 2 o'clock start time)

6. Press Stop Time pad.

PRESS



YOU SEE



7. Set stop time.

Press the “up” (▲) or “down” (▼) pad(s) until the correct time shows on the display.
Example at right shows a desired stop time of 2:30. This provides a 30-minute cook time (the difference between the start and stop times).

PRESS



YOU SEE



(example shows 2:30 stop time)

8. Complete entry.

NOTES:

- **You can change** the temperature or time settings any time after pressing the Start/Enter pad by repeating Steps 2 through 8.
- **The display** will show “door” and the heating elements will not heat if the door is open when you try to bake/roast.

PRESS



YOU SEE



9. When start time is reached:

A 1-second tone will sound. The display will count down the baking/roasting time in hours and minutes (if cook time is more than one hour) or in minutes and seconds (if cook time is less than one hour).

YOU SEE



(display counts down cook time)

continued on next page

USING YOUR OVEN

10. When baking/roasting is done:

The oven will turn off automatically and beep four times. You will also hear four 1-second tones every minute until you press the Off/Cancel pad.

NOTE: To disable reminder tones, press and hold the Cook Time pad for 5 seconds. To reactivate tones, repeat this step.

YOU SEE



11. Turn off oven.

NOTE: You can do this step any time to cancel the MEALTIMER* control setting.

PRESS



YOU SEE



(single ovens) (time of day)

OR




(double ovens)

Method 3—Using Cook Time and Stop Time:

1. Prepare oven.

Position the oven rack(s) properly and put food in the oven. For correct rack placement, see "Positioning racks and pans" on page 7.

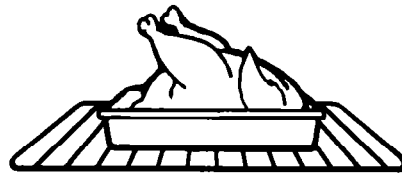

2. Choose Bake setting.

PRESS



YOU SEE



USING YOUR OVEN

3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F. Press ▲ to raise the temperature or ▼ to lower the temperature in 5°F amounts. Use these pads until the desired temperature shows on the small display. (If the Temp pads are held down the temperature will change faster.)

PRESS



YOU SEE



(example shows Bake at 375°F)

4. Press Cook Time pad.

PRESS



YOU SEE



5. Set cook time.

Press the "up" (▲) or "down" (▼) pad(s) until the correct time shows on the display.

PRESS



YOU SEE



(example shows 30-minute baking/roasting time)

6. Press Stop Time pad.

PRESS



YOU SEE



7. Set stop time.

Press the "up" (▲) or "down" (▼) pad(s) until the correct time shows on the display. Example at right shows a desired stop time of 2:30. The oven will automatically start cooking at 2:00 (the set stop time minus the set cook time).

PRESS



YOU SEE



(example shows 2:30 stop time)

continued on next page

USING YOUR OVEN

8. Complete entry.

NOTES:

- You can change the temperature or time settings any time after pressing the Start/Enter pad by repeating Steps 2 through 8.
- The display will show "door" and the heating elements will not heat if the door is open when you try to bake/roast.

PRESS




YOU SEE



9. When start time is reached:

A 1-second tone will sound. The display will count down the baking/roasting time in hours and minutes (if cook time is more than one hour) or in minutes and seconds (if cook time is less than one hour).

YOU SEE

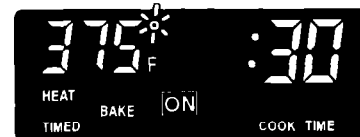

(display counts down cook time)

10. When baking/roasting is done:

The oven will turn off automatically and beep four times. You will also hear four 1-second tones every minute until you press the Off/Cancel pad.

NOTE: To disable reminder tones, press and hold the Cook Time pad for 5 seconds. To reactivate tones, repeat this step.

YOU SEE



11. Turn off oven.

NOTE: You can do this step any time to cancel the MEALTIMER* control setting.

PRESS



(single ovens) (time of day)

OR



(double ovens)

YOU SEE



⚠ WARNING

To avoid sickness and food waste when using the MEALTIMER* control:


- Do not let most UNFROZEN food stand for more than two hours before cooking starts.
- Do not allow food to remain in oven for more than two hours after the end of cooking cycle.

Failure to follow the above could result in sickness.

NOTE: Do not use foods that will spoil while waiting for cooking to start. Such foods are: dishes with milk or eggs, cream soups, and cooked meats or fish. Also, foods containing baking powder or yeast will not rise properly when cooked using delay start.

The oven vent(s)

Hot air and moisture escape from the oven(s) through vent(s). The vent for the oven is above the oven door. This vent is needed for air circulation. **Do not block the vent(s).** Poor baking/roasting can result.

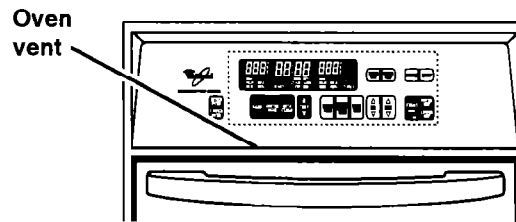


Using the Self-Cleaning Cycle

(some single ovens, some lower ovens, all upper ovens)

The Self-Cleaning cycle saves you from the toil and mess that often come with hand-cleaning the oven interior. Like the other functions of your oven, you operate the Self-Cleaning cycle with the easy-to-use electronic control. Please review the instructions in this section to keep your oven spotless.

Before you start

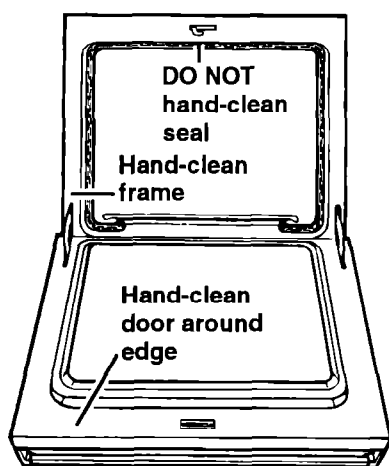

Before you start the Self-Cleaning cycle, make sure you:

- **Hand-clean the areas shown.** They do not get hot enough during the cleaning cycle for soil to burn away. Use hot water and detergent or a soapy steel-wool pad for cleaning.

NOTES:

- **DO NOT** clean, move, or bend the seal. Poor cleaning, baking, and roasting may result.
- **DO NOT** let water, cleaner, etc., enter slots on door and frame.
- **Remove the broiler pan and grid and any pots and pans** being stored in the oven.
NOTE: You can clean the broiler pan (without grid) in the oven if you have first removed most of the soil by hand-cleaning or in a dishwasher. If most of the soil is not removed, too much smoking will occur. The chrome broiler pan grid will discolor if cleaned in the Self-Cleaning cycle.

- **Wipe out any loose soil or grease.** This will help reduce smoke during the Self-Cleaning cycle.
- **Remove the oven racks from the oven if you want them to remain shiny.** You can clean the oven racks in the Self-Cleaning cycle, but they will become harder to slide. (See page 38.) If you clean racks in the Self-Cleaning cycle, place them on the 2nd and 4th rack guides. (Guides are counted from bottom to top.)
- **Heat and odors** are normal during the Self-Cleaning cycle. Keep the kitchen well ventilated by opening a window or by turning on a vent hood or other kitchen vent during the cycle.

⚠ WARNING

Burn Hazard

- Do not touch the oven during the Self-Cleaning cycle.
 - Do not use commercial oven cleaners in your oven.
- Failure to follow the above could result in burns or hazardous fumes.

NOTES:

- **Do not block** the vent during the Self-Cleaning cycle. Air must move freely for best cleaning results.
- **Do not leave** any foil in the oven during the Self-Cleaning cycle. Foil could burn or melt and damage the oven surface.
- **The oven light(s)** will not work during the Self-Cleaning cycle.

Before setting the controls

- Make sure clock is set to correct time of day. (See "Setting the clock" on page 10.)
- Make sure the oven door is completely closed.

Setting the controls

NOTE: Displays shown are from single/upper ovens. Command pads shown are from double ovens. In some cases, lower oven displays and single oven command pads may look different than those shown.

NOTE: On double ovens, you cannot run a Self-Cleaning cycle in both ovens at the same time. Also, if you are setting a Self-Cleaning cycle for the lower oven the control will not let you program any other function in the upper oven.

To start cleaning immediately:


1. Press Auto Clean pad.

A 3½-hour Self-Cleaning cycle will be set automatically.

PRESS



YOU SEE

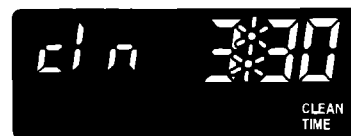

2. Set cleaning time (optional).

If you want a Self-Cleaning cycle longer or shorter than 3½ hours, use the Hour pad to set the desired cleaning time. Press the "up" (▲) or "down" (▼) pad(s) until a time between 2½-4½ hours shows on the display.

- Use 2½ hours for light soil.
- Use 3½-4½ hours for moderate to heavy soil.

PRESS



YOU SEE



(example for 4½-hour cycle)

continued on next page

USING THE SELF-CLEANING CYCLE

3. Start oven.

NOTE: The display will show "door" and a tone will sound once every 5 seconds if the door is not closed.

PRESS



YOU SEE



4. After Self-Cleaning cycle starts:

LOCKED lights up on the display. The door cannot be opened when LOCKED is on.

YOU SEE



5. After Self-Cleaning cycle ends:

YOU SEE



(example for 5:30 stop time)

YOU SEE



USING THE SELF-CLEANING CYCLE

To delay start using stop time:


1. Press Auto Clean pad.

A 3½-hour Self-Cleaning cycle will be set automatically.

PRESS



YOU SEE

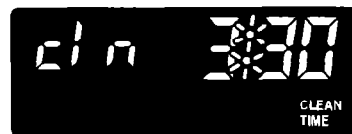

2. Set cleaning time (optional).

If you want a Self-Cleaning cycle longer or shorter than 3½ hours, use the Hour pad to set the desired cleaning time. Press the "up" (▲) or "down" (▼) pad(s) until a time between 2½-4½ hours shows on the display.

- Use 2½ hours for light soil.
- Use 3½-4½ hours for moderate to heavy soil.

PRESS



YOU SEE



(example for 4½-hour cycle)

3. Press Stop Time pad.

PRESS



YOU SEE



4. Set stop time.

Press the "up" (▲) or "down" (▼) pad(s) until the correct time shows on the display. The oven will automatically compute the delay start time by subtracting the set cleaning time from the set stop time.

PRESS



YOU SEE



(example for 5:30 stop time)

5. Complete entry.

The door is locked as soon as you press the Start/Enter pad.

PRESS



YOU SEE



continued on next page

USING THE SELF-CLEANING CYCLE

6. After Self-Cleaning cycle starts:

LOCKED lights up on the display. The door cannot be opened when LOCKED is on.

YOU SEE



7. After Self-Cleaning cycle ends:

YOU SEE



(example for 5:30 stop time)

YOU SEE



USING THE SELF-CLEANING CYCLE

To delay start using delay start time:

1. Press Auto Clean pad.

A 3½-hour Self-Cleaning cycle will be set automatically.

PRESS



YOU SEE



2. Set cleaning time (optional).


If you want a Self-Cleaning cycle longer or shorter than 3½ hours, use the Hour pad to set the desired cleaning time. Press the “up” (▲) or “down” (▼) pad(s) until a time between 2½-4½ hours shows on the display.

- Use 2½ hours for light soil.
- Use 3½-4½ hours for moderate to heavy soil.

PRESS



YOU SEE

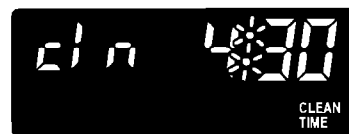


(example for 4½-hour cycle)

3. Press Delay Start Time pad.

PRESS



YOU SEE

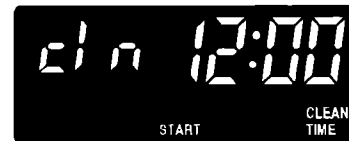

4. Set start time.

Press the “up” (▲) or “down” (▼) pad(s) until the correct time shows on the display. The oven will automatically compute the stop time by adding the set cleaning time to the set start time.

PRESS



YOU SEE



(example for 2:30 start time)


5. Complete entry.

The door is locked as soon as you press the Start/Enter pad.

PRESS



YOU SEE

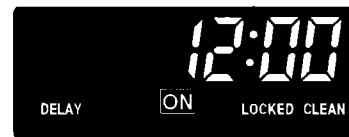

continued on next page

USING THE SELF-CLEANING CYCLE

6. After Self-Cleaning cycle starts:

LOCKED lights up on the display. The door cannot be opened when LOCKED is on.

YOU SEE



7. After Self-Cleaning cycle ends:

NOTES:

- The **stop time** will be the start time plus the cleaning time.
- The **fan** may stay on after the Self-Cleaning cycle ends, until the oven cavity reaches a certain temperature.

YOU SEE



(example for 7:00 stop time)

YOU SEE



To stop the self-cleaning cycle at any time:

If the oven temperature is too high for baking/roasting when you press the Off/Cancel pad, "cln", TIMED, ON, "cool", and LOCKED will appear on the display until the oven cools.

PRESS



(single ovens)

OR



(double ovens)

YOU SEE



Special tips


- **Keep** the kitchen well ventilated during the Self-Cleaning cycle to help get rid of heat, odors, and smoke.
- **After the oven is cool**, wipe up any residue or ash with a damp cloth or sponge. If any spots remain, clean with a mild abrasive cleanser or cleaning sponge.
- **Clean** the oven before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.
- **If the Self-Cleaning cycle** does not get the oven as clean as you expected, the cycle may not have been set long enough or you may not have prepared the oven properly. Set the Self-Cleaning cycle longer the next time and hand-clean areas noted on page 30.

How the cycle works

The Self-Cleaning cycle uses very high heat to burn away soil and grease. During the cycle, the oven gets much hotter than it does for normal baking or broiling. This high heat breaks up the soil or grease and burns it away.

Your oven is preset for a 3½-hour Self-Cleaning cycle. However, you can adjust the cycle time to the amount of soil in your oven. You can set the cycle anywhere between 2½ and 4½ hours. (See "Setting the controls" on page 31.)

The graph at the right is representative of a normal, 3½-hour Self-Cleaning cycle. Note that the heating stops ½ hour before the 3½-hour setting is up to cool the oven enough so the door can be unlocked.

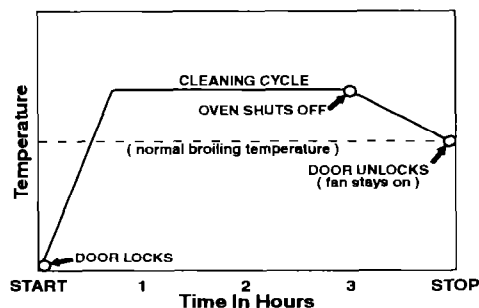

Caring for Your Oven

Your oven is designed for easy care. You can do most cleaning with items found around your home. Cleaning your oven whenever spills or soiling occurs will help to keep it looking and operating like new.

⚠ WARNING

Electrical Shock Hazard

Make sure all controls are OFF and the oven is cool before cleaning.

Failure to do so could result in electrical shock or burns.

Cleaning chart

Use the following table to help you clean your oven.

PART	WHAT TO USE	HOW TO CLEAN
Control panel	Sponge and warm, soapy water OR Paper towel and spray glass cleaner	<ul style="list-style-type: none"> Wash, wipe with clean water, and dry thoroughly. Do not use steel wool or abrasive cleansers. They may damage the finish. Do not spray cleaner directly on panel. Apply cleaner to paper towel. <p>NOTE: Set the Control Lock to prevent the oven from accidentally turning on when you are cleaning the panel. (See "Using the control lock" on page 9.)</p>
Exterior surfaces (other than control panel)	Sponge and warm, soapy water	<ul style="list-style-type: none"> Wash, wipe with clean water, and dry thoroughly. Use nonabrasive, plastic scrubbing pad on heavily soiled areas. Do not use abrasive or harsh cleansers. They may damage the finish.
Broiler pan and grid (clean after each use)	Steel-wool pad and warm, soapy water	<ul style="list-style-type: none"> Wash, rinse, and dry thoroughly. Do not clean in Self-Cleaning cycle. (See note on page 30.)
Oven racks	Steel-wool pad and warm, soapy water OR The Self-Cleaning cycle (some single ovens, some lower ovens, all upper ovens)	<ul style="list-style-type: none"> Wash, rinse, and dry thoroughly. <p>OR</p> <ul style="list-style-type: none"> Leave in oven during Self-Cleaning cycle. <p>NOTE: Racks will permanently discolor and become harder to slide if left in oven during Self-Cleaning cycle. Apply a small amount of vegetable oil to the side rungs to aid sliding.</p>

CARING FOR YOUR OVEN

PART	WHAT TO USE	HOW TO CLEAN
Oven door glass	Paper towel and spray glass cleaner OR Warm, soapy water and a nonabrasive, plastic scrubbing pad	<ul style="list-style-type: none"> • Make sure oven is cool. • Follow directions provided with the cleaner. • Wash, wipe with clean water, and dry thoroughly.
Oven cavity (some single ovens, some lower ovens, all upper ovens)	Self-Cleaning cycle	<ul style="list-style-type: none"> • See "Using the Self-Cleaning Cycle" on pages 30-37.
Oven cavity (some single ovens, some lower ovens)	Sponge and warm, soapy water Soapy steel-wool pad for heavily soiled areas OR Commercial oven cleaner for heavily soiled areas Heavy-duty aluminum foil or shallow pan used while cooking	<ul style="list-style-type: none"> • Remove door for easier access. (See page 40.) • Wash, wipe with clean water, and dry thoroughly. • Wipe well with water. <p>NOTE: Do not let water, cleaners, etc., enter slots in door and frame.</p> <ul style="list-style-type: none"> • Remove door for easier access. • Place newspaper on floor to protect floor surface. • Follow directions provided with the oven cleaner. • Wipe well with clear water. • Use in well ventilated room. • Do not allow commercial oven cleaners to contact the heating elements, heat seal, thermostat, or exterior surfaces of the oven. Damage will occur. • Place piece of foil or shallow pan, slightly larger than the cooking container, on lower rack to catch spillovers. <p>NOTE: Do not use foil or foil liner to cover the oven floor. Poor baking/roasting results could occur.</p>

Removing the oven door

(standard-cleaning ovens only)

Removing the oven door will help make it easier to clean the oven.


⚠ WARNING

Personal Injury Hazard

- Oven door is heavy. Use both hands to remove the oven door.
 - Grasp only the sides of the oven door. Do not use the handle for lifting.
- Failure to properly grasp the oven door could result in personal injury or product damage.

To remove:

1. **Open** the door all the way.

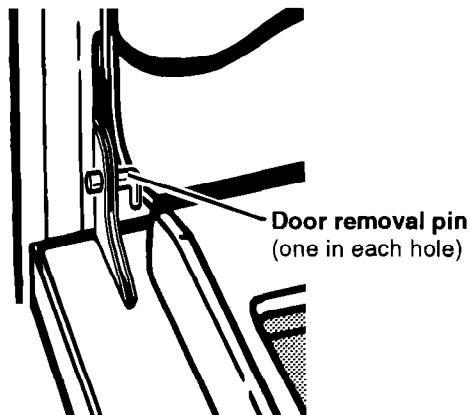


2. **Insert** a door removal pin into each hinge hole from the inside, out.
3. **Close** the door $\frac{3}{4}$ of the way shut or until it contacts the pins.



4. **Grasp** the sides of the oven door. **Move** door toward oven and **lift slightly** to remove.
5. **Set** door aside on protected surface.

To replace:


1. **Fit** hinge arms into slots in frame.

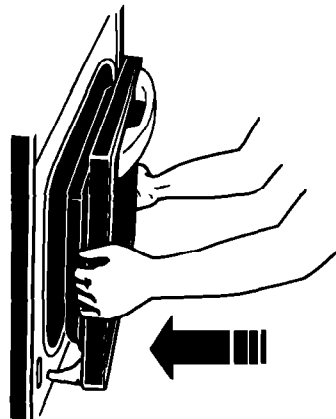

2. **Open** the door all the way.
3. **Remove** the door removal pins from each hole.
4. **Close** the door.

NOTE: If the door does not operate freely, you have not installed it properly. Repeat Steps 1-4.

The oven light(s)

The oven light(s) will come on when you open the oven door. To turn the light(s) on when the oven door is closed, press the Oven Light Pad  on the control panel.

⚠ WARNING

Electrical Shock Hazard


- Make sure oven and light bulb are cool and power to the oven has been turned off before replacing the light bulb.
- The light cover must be in place when using the oven. The cover protects the bulb from breaking, and from high oven temperatures. Because the light cover is made of glass, be careful not to drop it.

Failure to follow the above could result in electrical shock, burns, or injury from broken glass.

To replace an oven light:

Models with side lights:


1. **Disconnect** appliance at the main power supply.

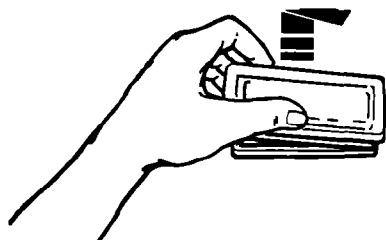


2. **Remove** glass light cover by grasping rear or back edge of cover and pulling it away from the side wall of the oven.
3. **Remove** the light bulb from its socket. **Replace** the bulb with another halogen bulb (12 volt, 5 watt maximum, available at most hardware stores).
4. **Replace** the light cover by snapping it back into wall. **Reconnect** appliance at main power supply.

Models with rear lights:

1. **Disconnect** appliance at the main power supply.

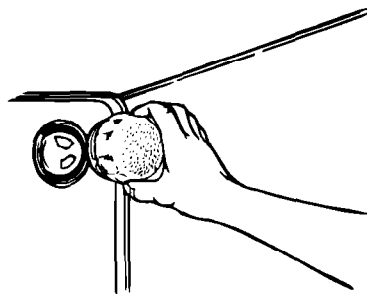

2. **Remove** the glass bulb cover in the back of the oven by screwing it out counter-clockwise.
3. **Remove** the light bulb from its socket. **Replace** the bulb with a similar 125-volt, 15-watt appliance bulb.

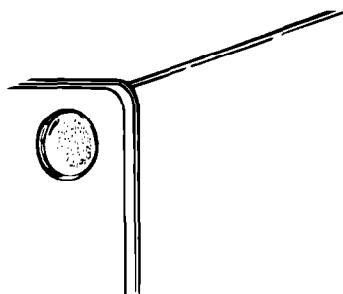


4. **Replace** the bulb cover by screwing it in clockwise. **Reconnect** appliance at the main power supply.

NOTE: The oven light(s) will not work during the Self-Cleaning cycle.


Troubleshooting

Most cooking problems often are caused by little things you can find and fix without tools of any kind. Check the lists below and on the next page before calling for assistance or service. If you still need help, see "Requesting Assistance or Service" on page 44.

If nothing operates, check the following:

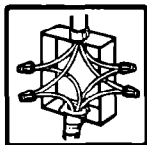

Is the oven wired into a live circuit with the proper voltage?
(See Installation Instructions.)

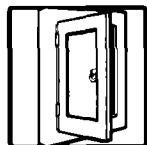

Have you blown a household fuse or tripped a circuit breaker?

Other possible problems and their causes:

PROBLEM	CAUSE
The oven will not operate	<ul style="list-style-type: none">• You have not set the electronic control correctly. Refer to the section in this manual describing the function you are operating.• You have accidentally set the control lock. See "Using the control lock" on page 9.• You have programmed a delayed start time. Wait for the start time to be reached or cancel and reset the controls.
The Self-Cleaning cycle will not operate	<ul style="list-style-type: none">• You did not press the Start/Enter pad.• You have programmed a delayed start time. Wait for the start time to be reached or cancel and reset the controls.
Display is blank	<ul style="list-style-type: none">• You have set the display not to show the clock time. To see the clock time again, press and hold the Clock pad for 5 seconds.

TROUBLESHOOTING

PROBLEM	CAUSE
Cooking results are not what you expected	<ul style="list-style-type: none">• The oven is not level. (See Installation Instructions.)• The oven temperature seems too low or too high. See "Adjusting the oven temperature control" on page 14 to adjust oven temperature.• You did not preheat the oven before baking (if called for in recipe).• The recipe you are using may need to be altered to improve the taste or appearance of the food.• You are using a pan that is not the correct type or size. Refer to a reliable cookbook or recipe for recommended pan type and size.• There is not enough air space around pan when baking. Allow 1½ to 2 inches (4-5 cm) of air space on all sides of pan. There must be a minimum space of 1 inch.
The display is showing "PF"	<ul style="list-style-type: none">• There has been a power failure. Reset the clock. (See page 10.)
"F" followed by a number shows on the display	<ul style="list-style-type: none">• The electronic control, temperature sensor, latch, or some other electronic oven component has failed. Make a note of what appears on the display and call for service. (See Step 2 on page 44.)

If none of these items was causing your problem, see "Requesting Assistance or Service" on page 44.

Requesting Assistance or Service

Before calling for assistance or service, please check "Troubleshooting" on pages 42-43. It may save you the cost of a service call. If you still need help, follow the instructions below.

In U.S.A. :

1. If you need assistance[†] ...

Call the Whirlpool Consumer Assistance Center telephone number. Dial toll-free from anywhere in the U.S.A.:



1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. William Clark
Consumer Assistance Representative
Whirlpool Corporation
2000 North M-63
Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.

2. If you need service[†] ...

Whirlpool has a nationwide network of authorized Whirlpool service companies. Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 1) or look in your telephone directory Yellow Pages under:

• APPLIANCE-HOUSEHOLD-MAJOR, SERVICE & REPAIR
-See: Whirlpool Appliances or Authorized Whirlpool Service
(Example: XYZ Service Co.)

• WASHING MACHINES & DRYERS, SERVICE & REPAIR
-See: Whirlpool Appliances or Authorized Whirlpool Service
(Example: XYZ Service Co.)



3. If you need FSP* replacement parts ...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your WHIRLPOOL* appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new WHIRLPOOL appliance.

To locate FSP replacement parts in your area, refer to Step 2 or call the Whirlpool Consumer Assistance Center number in Step 1.

4. If you are not satisfied with how the problem was solved ...

- Contact the Major Appliance Consumer Action Program (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer, and Whirlpool have failed to resolve your problem.

Major Appliance Consumer Action Program
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

[†]When asking for help or service:

Please provide a detailed description of the problem (including any information that appears on the electronic control display), your appliance's complete model and serial numbers, and the purchase date. (See page 3.) This information will help us respond properly to your request.

REQUESTING ASSISTANCE OR SERVICE

In Canada:

Inglis Limited** Appliance Service – Consumer Service

Direct service branches:

BRITISH COLUMBIA	Vancouver	Inglis Limited Appliance Service 3627 E. 4th Avenue	604-291-6426 1-800-665-6788
	Victoria	Inglis Limited Appliance Service 3117 Steele Street	604-291-6426 1-800-665-6788
ALBERTA	Calgary	Inglis Limited Appliance Service #15 6025 12th Street S.E.	403-253-9267 1-800-661-1022
	Edmonton	Inglis Limited Appliance Service 16236-116 Avenue	403-453-3900 1-800-661-6291
ONTARIO	Toronto (Mississauga)	Inglis Limited Appliance Service 5945 Ambler Drive	905-821-3900 1-800-807-6777
	Toronto (Markham)	Inglis Limited Appliance Service Unit #1, 110 Torbay Road	905-475-9511 1-800-807-6777
	Ottawa	Inglis Limited Appliance Service 28 Capital Drive	613-225-0510 1-800-267-3456
SASKATCHEWAN	Regina	Inglis Limited Appliance Service	1-800-665-1683
	Saskatoon	Inglis Limited Appliance Service	1-800-665-1683
MANITOBA	Winnipeg	Inglis Limited Appliance Service 1683 Church Avenue	204-694-5308 1-800-665-1683
QUEBEC	Montreal (Laval)	Inglis Limited Appliance Service 2750, Francis-Hughes	514-382-8110 1-800-361-3032
	Brossard	Inglis Limited Appliance Service 9605 F. Ignace Street	514-397-1840 1-800-361-0950
	Quebec City	Inglis Limited Appliance Service 5275, Blvd. Wilfrid-Hamel, Suite 140	418-871-5251 1-800-463-1523
	Sherbrooke (Rock Forest)	Inglis Limited Appliance Service 3475 Industrial Blvd.	819-564-6565 1-800-567-6966
NOVA SCOTIA	Dartmouth	Inglis Limited Appliance Service 900 Windmill Road	902-468-6634 1-800-565-1598

For service in areas other than those listed, contact your Appliance Dealer.

Index

This index is alphabetical. It contains all the topics included in this manual, along with the page(s) on which you can find each topic.

TOPIC	PAGE	TOPIC	PAGE
ASSISTANCE	44	LOCK	
BAKING		Control	9
Aluminum foil	8	Self-cleaning cycle	33, 35, 36
Pans	7	MODEL AND SERIAL NUMBER	3
Setting cycle	12	OVEN TEMPERATURE	
BROILING		Adjusting	14
Grid	17	Setting	12, 16, 19, 20, 22, 24, 27
Pan	15	OVEN VENT(S)	29
Rack position chart	17	PARTS	6
Setting cycle	15	RACKS	7
Tips	17	REMOVING THE OVEN DOOR	40
CLEANING		ROASTING	
Broiler pan and grid	38	Aluminum foil	8
Control panel	38	Pans	7
Exterior surfaces	38	Setting cycle	12
Oven cavity	39	SAFETY	4-5
Oven door glass	39	SELF-CLEANING	
Oven racks	38	Delay cleaning	33-36
Self-cleaning cycle	30	How cycle works	37
CONTROL PANEL		Preparing oven	30-31
Canceling	10	Setting controls	31-36
Clock	10	Starting immediately	31
Command pads	9	Stopping cycle	36
Control lock	9	Tips	37
Display	8	SERVICE	44
Hour and minute pads	8	TIMED COOKING	
Minute timer	10	Canceling	20, 21, 24, 26, 28
Selecting an oven	9	Cook time	19, 22, 27
Signals	12	Delay start time	22, 24
Starting	9	Stop time	20, 25, 27
Tones	12	TROUBLESHOOTING	42
ENERGY SAVING TIPS	18	WARRANTY	48
FEATURES	6		
LIGHT(S)	41		

WHIRLPOOL* Electric Built-In Oven Warranty

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP* replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool service company.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of your built-in oven. 2. Instruct you how to use your built-in oven. 3. Replace house fuses or correct house wiring. 4. Replace owner-accessible light bulbs. <p>B. Repairs when your built-in oven is used in other than normal, single-family household use.</p> <p>C. Pickup and delivery. Your built-in oven is designed to be repaired in the home.</p> <p>D. Damage to your built-in oven caused by accident, misuse, fire, flood, acts of God, or use of products not approved by Whirlpool.</p> <p>E. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</p>	

6/94

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Outside the United States and Canada, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "Requesting Assistance or Service" section of this book. After checking "Requesting Assistance or Service," additional help can be found by calling our Consumer Assistance Center telephone number, **1-800-253-1301**, from anywhere in the U.S.A. In Canada, contact your authorized Inglis Limited** Appliance Service company.



Printed on recycled paper –
10% post-consumer waste
50% recovered materials