




# COOKTOP PARTS

For Models:RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

30" DROP-IN  
ELECTRIC  
STANDARD CLEAN  
OVEN

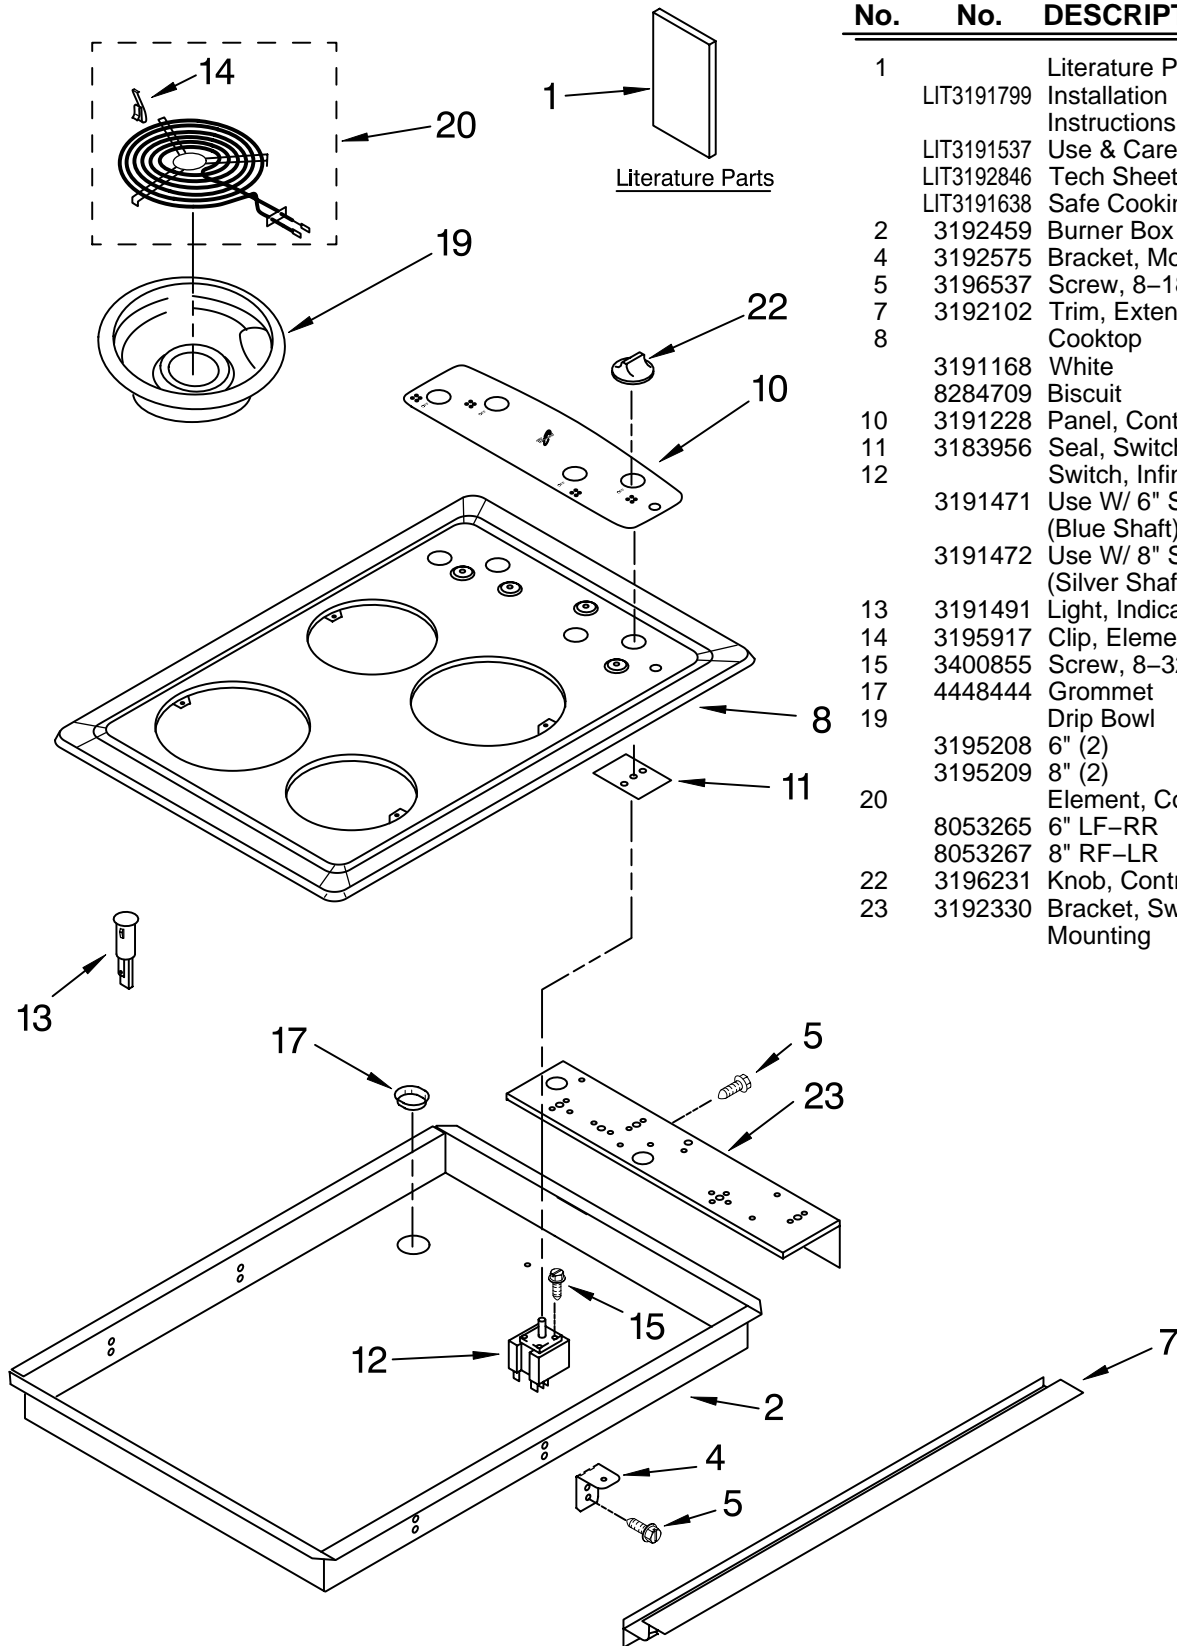


Illus. No.	Part No.	DESCRIPTION
1	LIT3191799	Literature Parts
	LIT3191537	Installation Instructions
	LIT3192846	Use & Care Guide
	LIT3191638	Tech Sheet
	LIT3191638	Safe Cooking Tips
2	3192459	Burner Box
4	3192575	Bracket, Mounting
5	3196537	Screw, 8-18 x 3/8
7	3192102	Trim, Extension
8		Cooktop
	3191168	White
	8284709	Biscuit
10	3191228	Panel, Control
11	3183956	Seal, Switch (4)
12		Switch, Infinite
	3191471	Use W/ 6" Surface (Blue Shaft)
	3191472	Use W/ 8" Surface (Silver Shaft)
13	3191491	Light, Indicator
14	3195917	Clip, Element
15	3400855	Screw, 8-32 x 1/4
17	4448444	Grommet
19		Drip Bowl
	3195208	6" (2)
	3195209	8" (2)
20		Element, Coil
	8053265	6" LF-RR
	8053267	8" RF-LR
22	3196231	Knob, Control (4)
23	3192330	Bracket, Switch Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models:RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

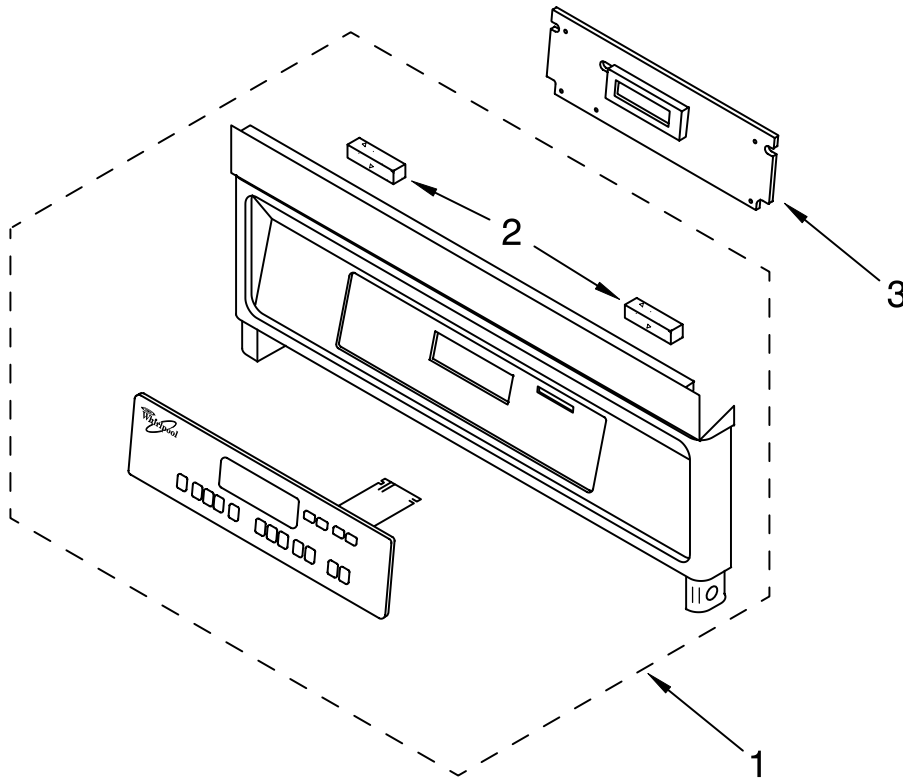

<b>Illus.</b>	<b>Part</b>	
<b>No.</b>	<b>No.</b>	<b>DESCRIPTION</b>


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4452843	Control Panel Assy. W/Membrane Switch
	4449745	Screw
	3400832	Screw
2	4451034	Gasket, Control Panel
3	4452900	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models:RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

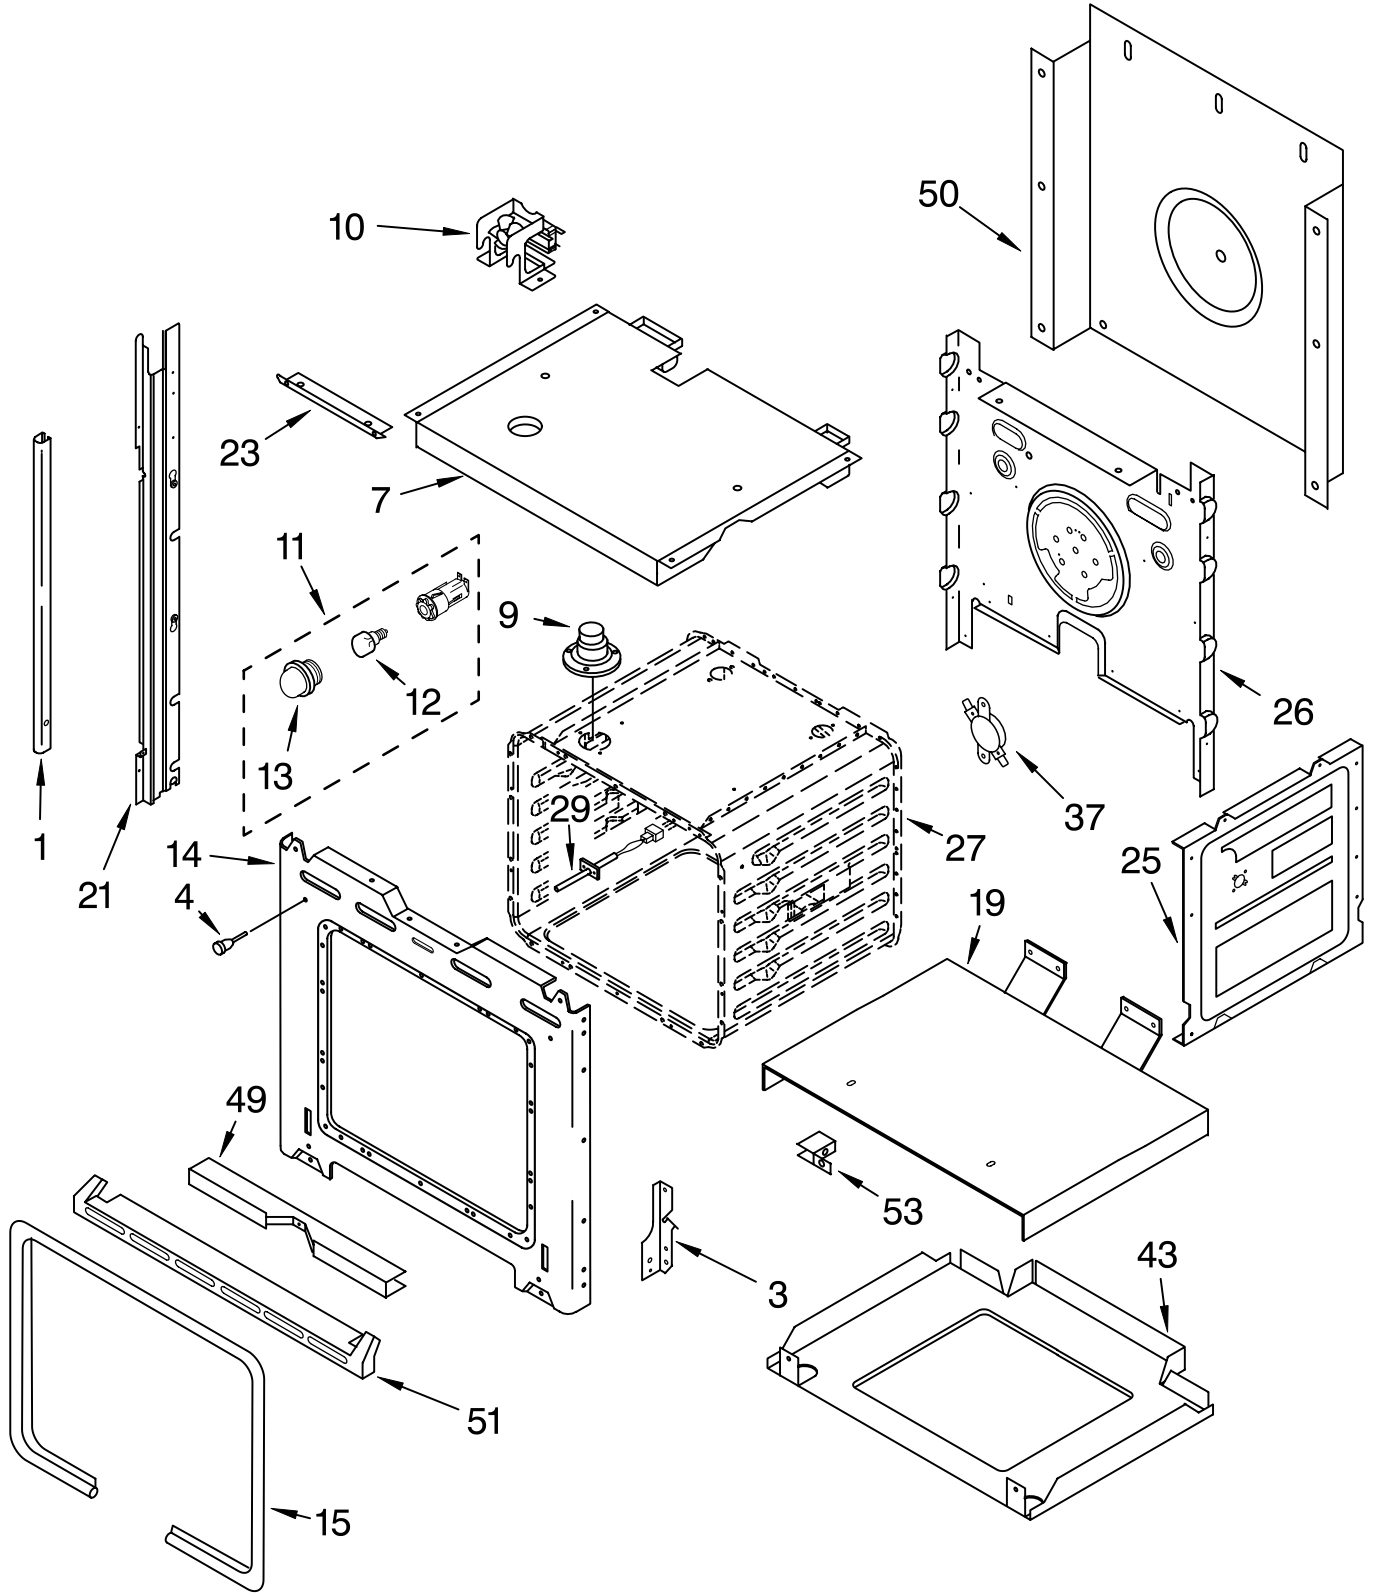

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models:RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4450844	Trim, Side RH Black
	4450847	LH Black
	4449747	Screw
3		Hinge Receiver
	4455520	Left Hand
	4455521	Right Hand
4	4448520	Bumper, Door
7	4455286	Top, Chassis
	4449809	Screw
9	4452159	Tube, Vent
	3196176	Screw
10	4451664	Fan & Bracket Assy
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

11	4452368	Oven Light Assy
12	4452166	Bulb, Light
13	4452165	Lens, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4450493	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
21		Rail, Side
	4450579	Right Side
	4450580	Left Side
	4448444	Grommet
	4449154	Screw
23	4450051	Deflector
	4449154	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

29	4455636	Sensor
	4449154	Screw
37	4451354	Fuse – Thermal
	4449809	Screw
43	4455530	Base, Chassis
49	4448933	Retainer
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51	4448477	Trim, Bottom
53	4449845	Support, Bracket
	4449154	Screw


**FOLLOWING PARTS  
NOT ILLUSTRATED**

**INSULATION**

	4449316	Insulation, Wrap
	4450365	Insulation, Back

# OVEN DOOR PARTS

For Models:RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

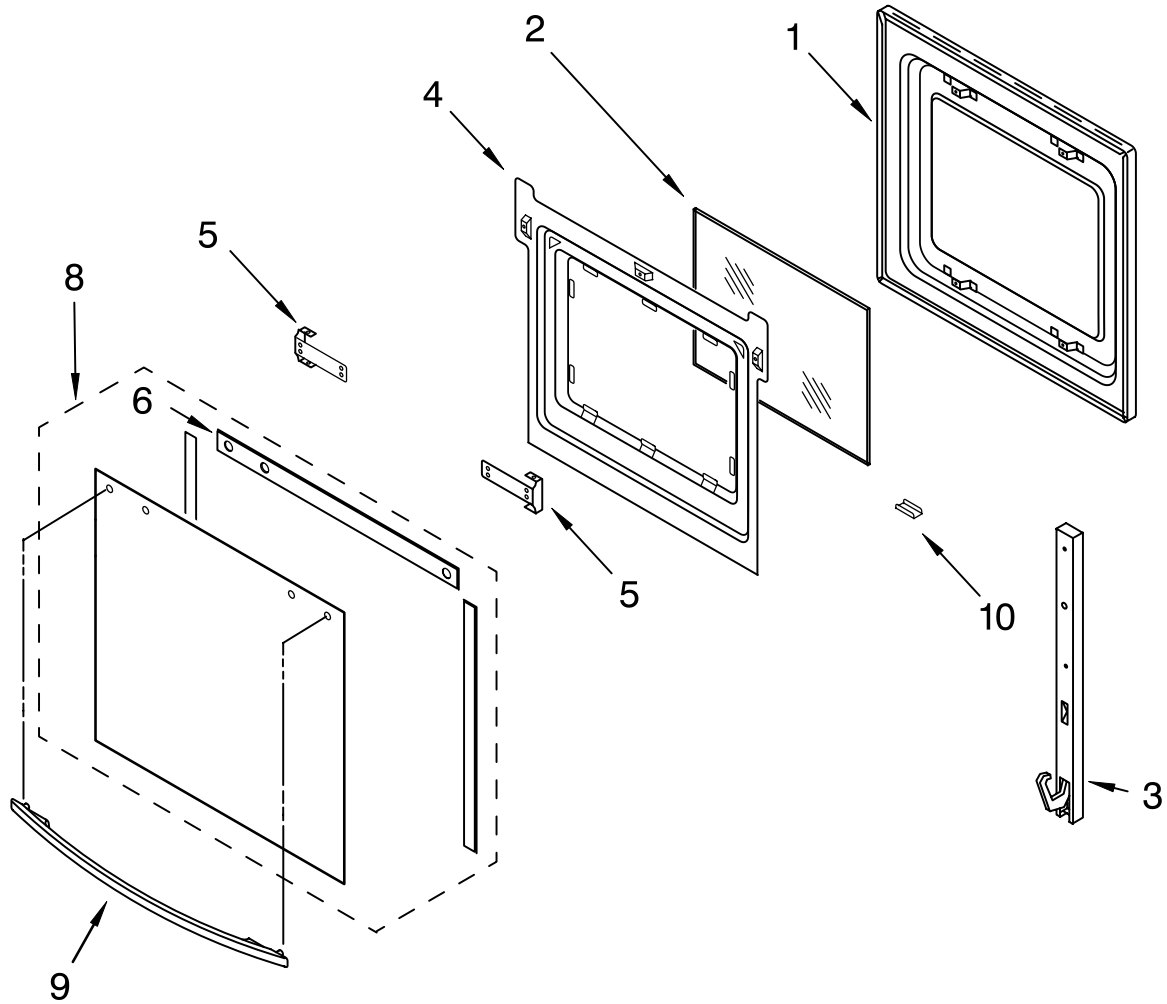

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.


1	4455618	Door Liner
2	4449259	Glass, Inner
3	4455523	Hinge, Door
	4449743	Screw (4)
4	4451671	Retainer, Glass
	4449809	Screw (4)
5	4450813	Bracket, Handle
	4451040	Screw (4)
	4449743	Screw (2)
6	4451674	Seal, Top
8	4452065	Assy, Door Glass
9	4448854	Handle, Door
10	4450863	Retainer, Glass
	4449743	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERNAL OVEN PARTS

For Models:RS610PXGW7, RS610PXGV7

(White) (Black on Biscuit)

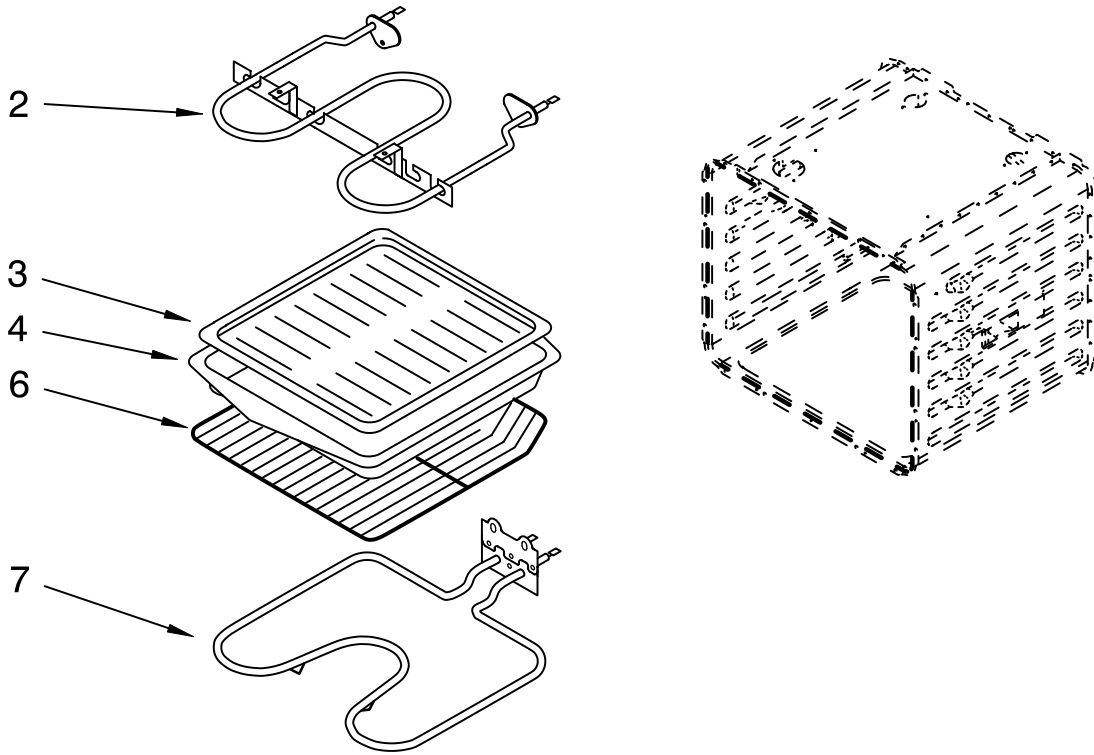


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

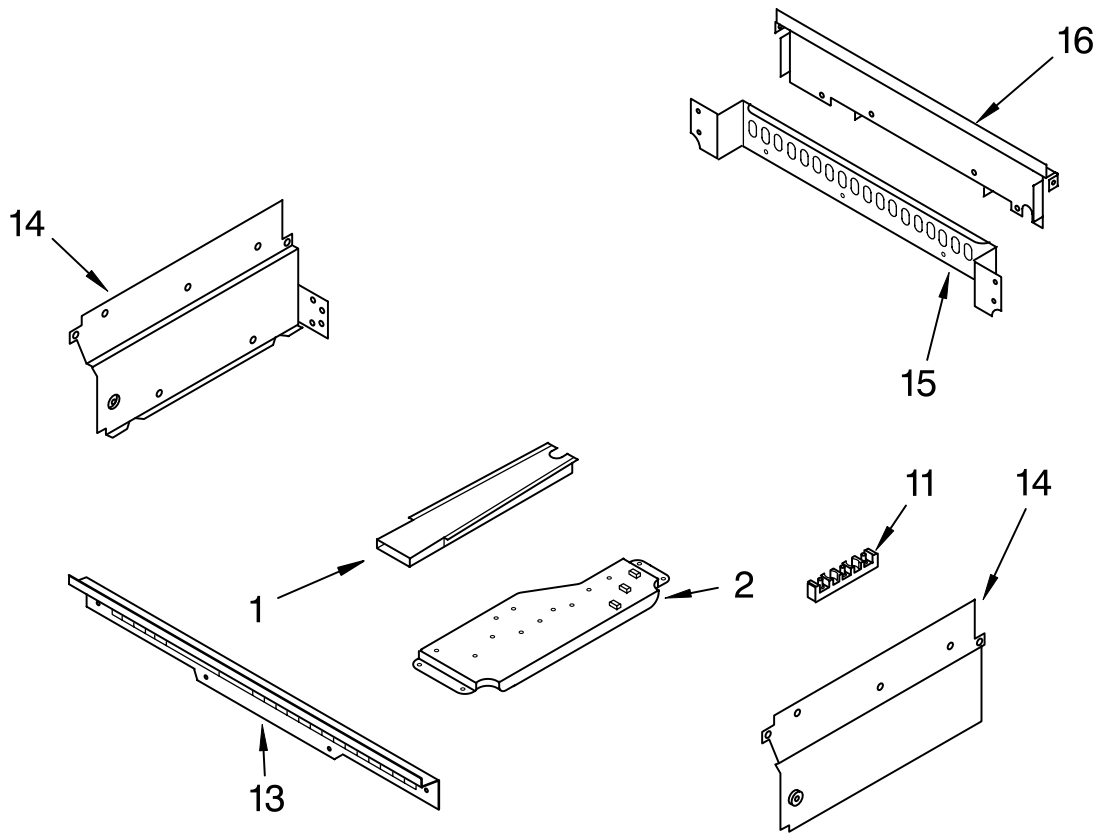

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw
2	4454943	Plate, Mounting
11	4449868	Block, Terminal
	3400080	Screw
	112432	Nut
13	4448549	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Compt.
	3191832	Right
	3191833	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	3191842	Cover, Rear
	4449809	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models:RS610PXGW7, RS610PXGV7  
(White) (Black on Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**PAINT, TOUCH-UP (1/2oz.)**

72017 White  
261869 Cord Brown  
72032 Black

**PAINT, SPRAY**

350930 White  
261900 Citrine White  
830864 Black

**ADHESIVE**

591014 Adhesive  
Loctite (1/3 oz.)  
482338 Sealer, Silastic  
(3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**SPLICING WIRES--25FT.**

**LENGTH**

242828 Wire (12 Ga.  
150 c Black)  
242820 Wire (14 Ga.  
150 c Black)  
242821 Wire (14 Ga.  
150 c Blue)  
242822 Wire (14 Ga.  
150 c Brown)  
242830 Wire (14 Ga.  
200 c Brown)  
242823 Wire (14 Ga.  
150 c Green)  
242824 Wire (14 Ga.  
150 c Orange)  
242829 Wire (12 Ga.  
150 c Red)  
242825 Wire (14 Ga.  
150 c Red)  
242831 Wire (14 Ga.  
200 c Red)  
242826 Wire (14 Ga.  
150 c White)  
242827 Wire (14 Ga.  
150 c Yellow)  
242832 Wire (14 Ga.  
200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**WIRING HARNESS PARTS**

4449809 Screw  
3191220 Harness, Wire  
(Main)  
4455745 Harness, Wire  
(EDC)  
4451163 Conduit  
3400015 Screw, Ground  
4448664 Clamp  
3192236 Harness, Wire  
(Infinite Switch)  
4455592 Harness, Wire  
(Light)  
4454384 Ground, Wire  
4452222 Spacer, Harness  
4454835 Tie, Cable

**Miscellaneous**

4448950 Screw, Install.  
8-14 x 1" (4)  
814381 Hinge Pin Kit