




COOKTOP PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

30" DROP-IN
ELECTRIC
STANDARD CLEAN
OVEN

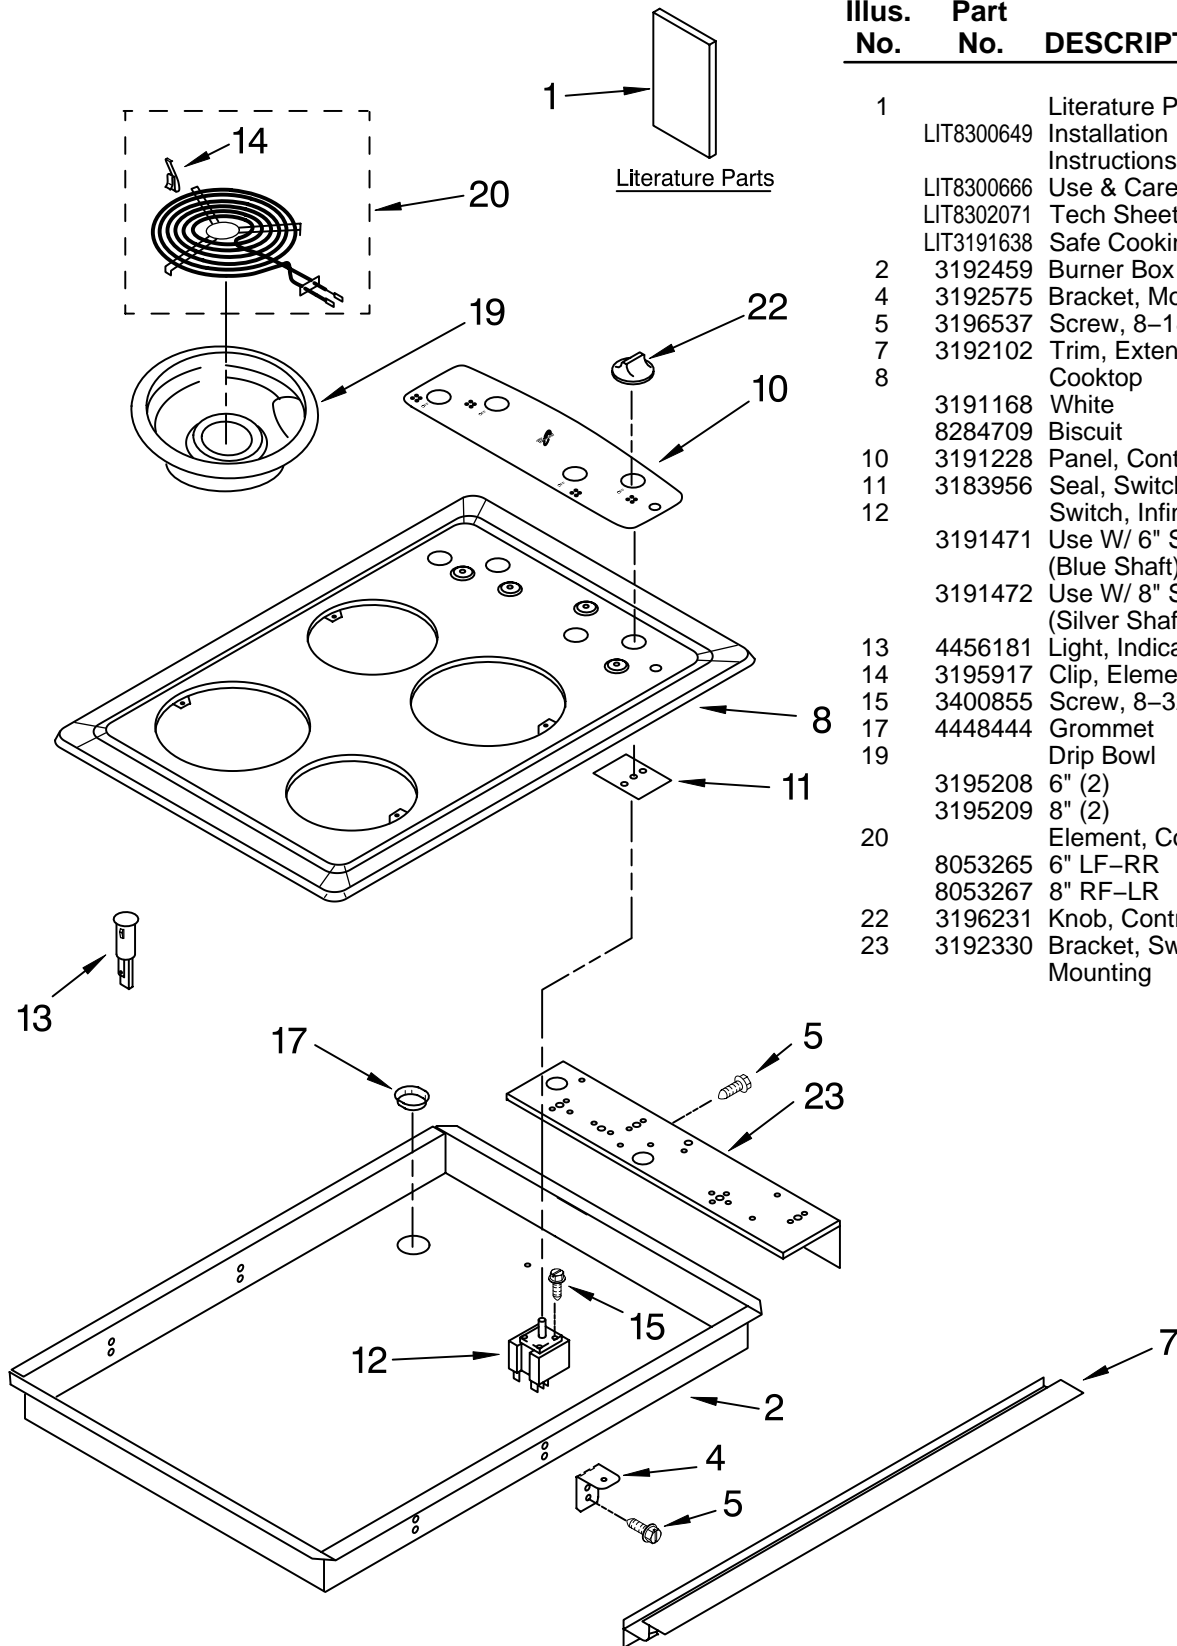


Illus. No.	Part No.	DESCRIPTION
1	LIT8300649	Literature Parts Installation Instructions
	LIT8300666	Use & Care Guide
	LIT8302071	Tech Sheet
	LIT3191638	Safe Cooking Tips
2	3192459	Burner Box
4	3192575	Bracket, Mounting
5	3196537	Screw, 8-18 x 3/8
7	3192102	Trim, Extension
8		Cooktop
	3191168	White
	8284709	Biscuit
10	3191228	Panel, Control
11	3183956	Seal, Switch (4)
12		Switch, Infinite
	3191471	Use W/ 6" Surface (Blue Shaft)
	3191472	Use W/ 8" Surface (Silver Shaft)
13	4456181	Light, Indicator
14	3195917	Clip, Element
15	3400855	Screw, 8-32 x 1/4
17	4448444	Grommet
19		Drip Bowl
	3195208	6" (2)
	3195209	8" (2)
20		Element, Coil
	8053265	6" LF-RR
	8053267	8" RF-LR
22	3196231	Knob, Control (4)
23	3192330	Bracket, Switch Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

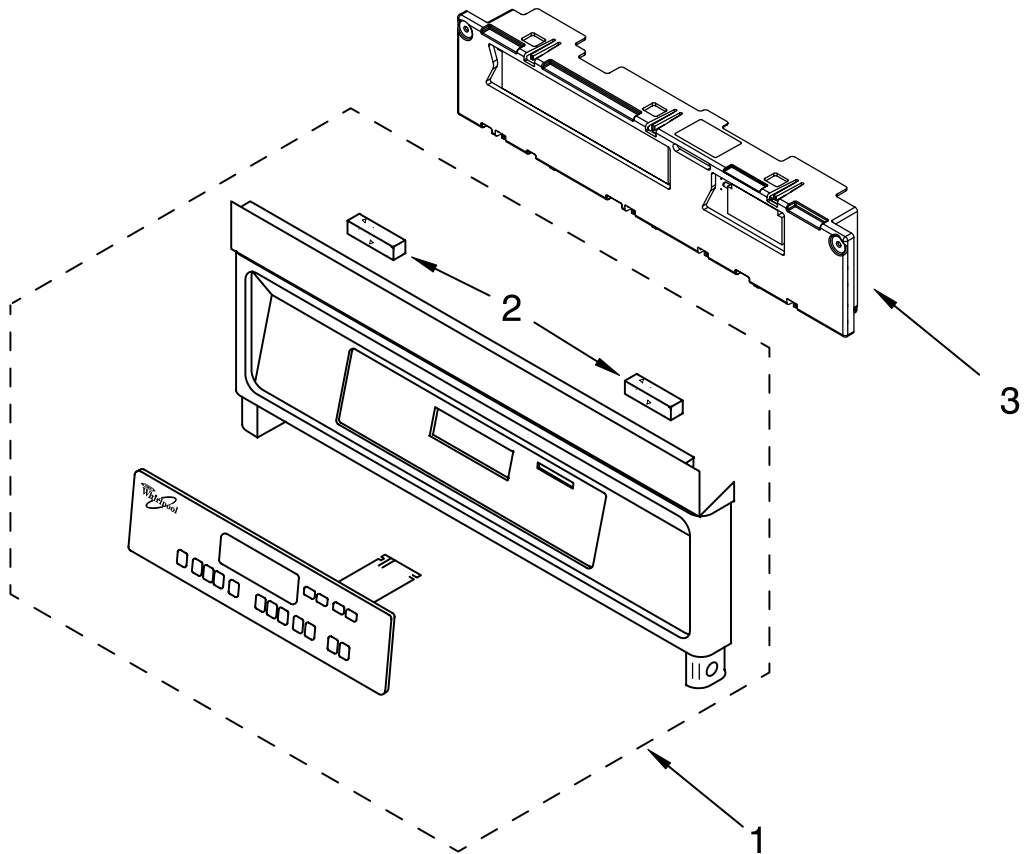

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

- | | | |
|---|---------|--|
| 1 | 4456313 | Control Panel Assy.
W/Membrane Switch |
| | 4449745 | Screw |
| | 3400832 | Screw |
| 2 | 4451034 | Gasket,
Control Panel |
| 3 | 8301919 | Assy, Control |
| | 4449745 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

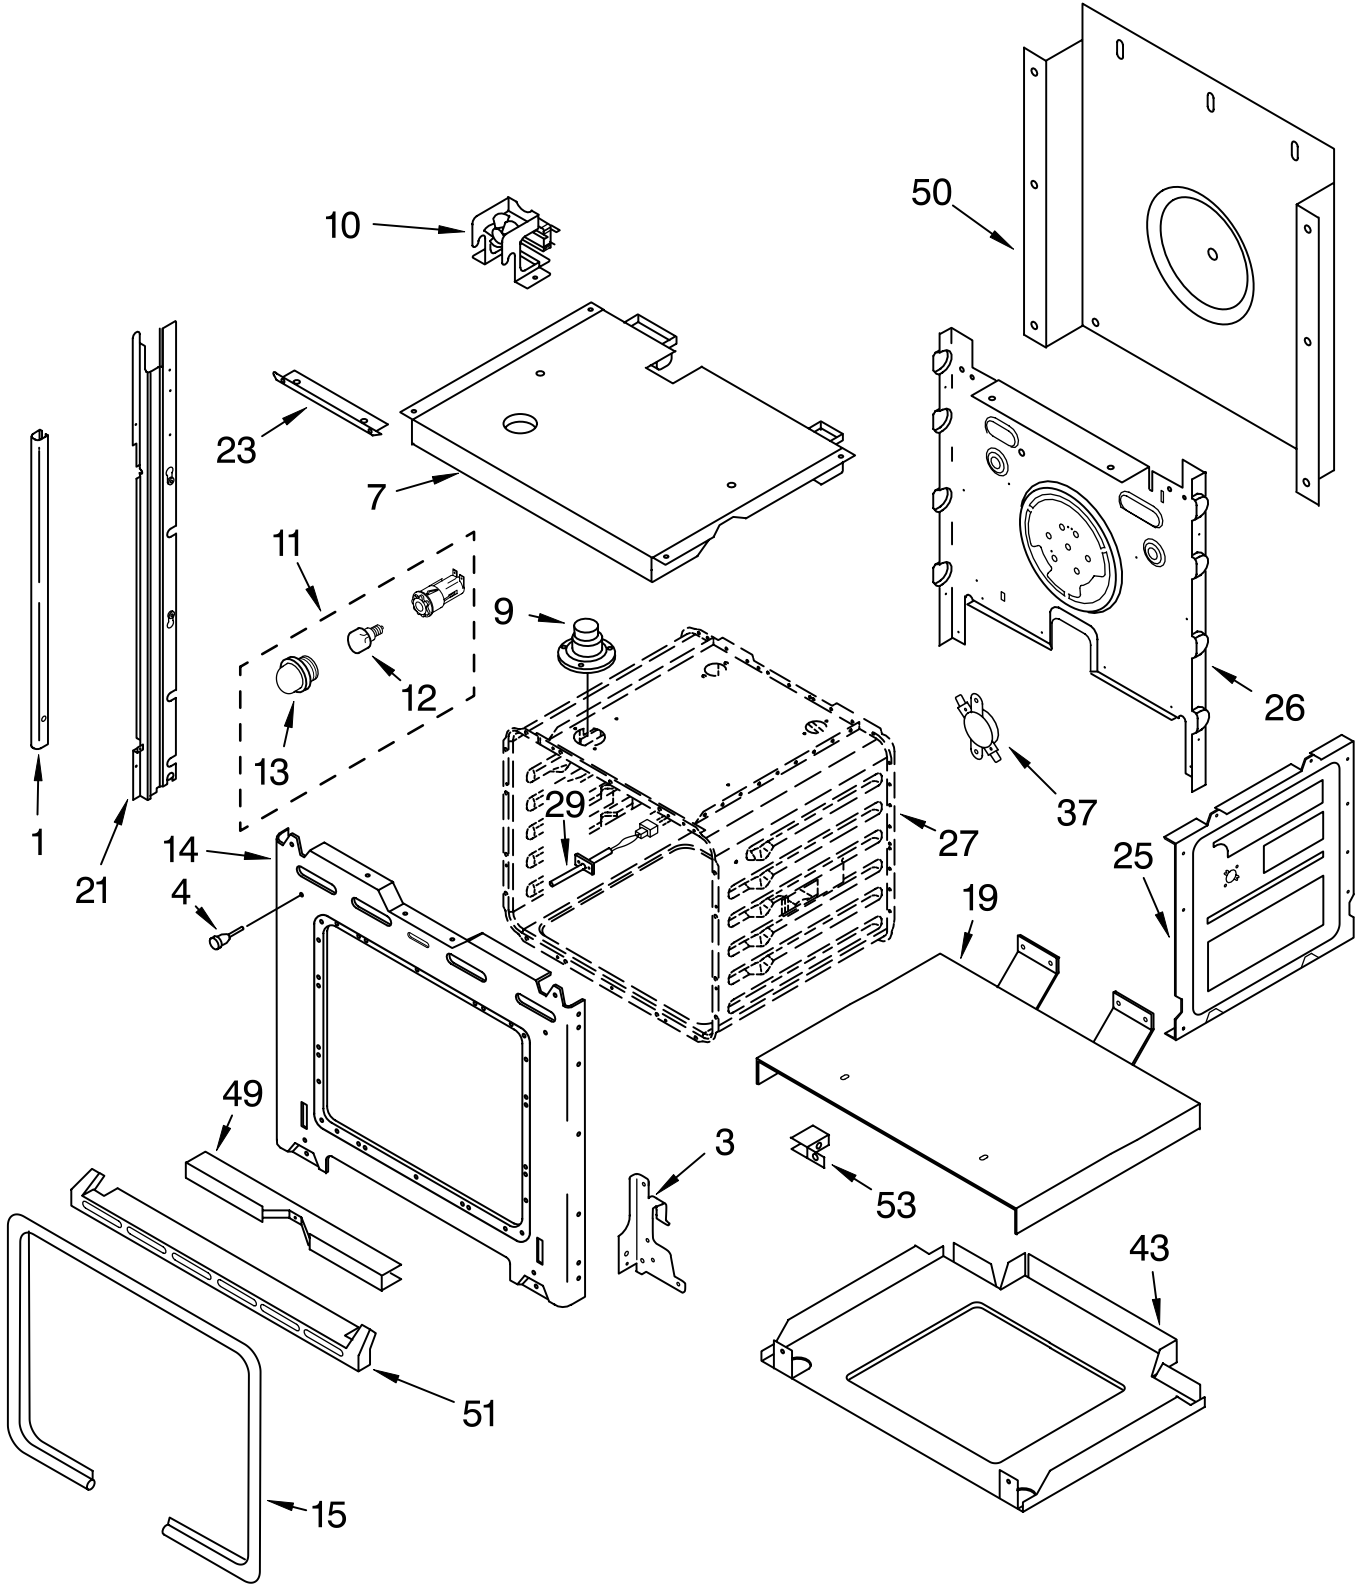

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


OVEN PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			13	4452165	Lens, Light	29	4455636	Sensor
			14	4455612	Frame, Front		4449154	Screw
				4449040	Screw	37	4451354	Fuse – Thermal
				4450118	Nut		4449809	Screw
1		Trim, Side	15	4450493	Gasket, Door	43	4455530	Base, Chassis
	4450844	RH Black	19	4451478	Support, Insulation	49	4448933	Retainer
	4450847	LH Black		4449809	Screw		4449154	Screw
	8281236	Screw	21		Rail, Side	50	4451747	Cover, Back
3		Hinge Receiver		4450579	Right Side		4449809	Screw
	4455605	Left Hand		4450580	Left Side	51	4448477	Trim, Bottom
	4455606	Right Hand		4448444	Grommet	53	4449845	Support, Bracket
4	4448520	Bumper, Door		4449154	Screw		4449154	Screw
7	4455865	Top, Chassis	23	4450051	Deflector	FOLLOWING PARTS NOT ILLUSTRATED		
	4449809	Screw		4449154	Screw	INSULATION		
9	4452159	Tube, Vent	25	4455641	Side, Chassis (R.H. & L.H.)		4449316	Insulation, Wrap
	3196176	Screw		4449809	Screw		4450365	Insulation, Back
10	4451664	Fan & Bracket Assy		4452234	Back, Chassis			
	4449809	Screw	26	4449809	Screw			
11	4452368	Oven Light Assy	27		Liner, Oven (Not serviceable)			
12	4452166	Bulb, Light						

OVEN DOOR PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

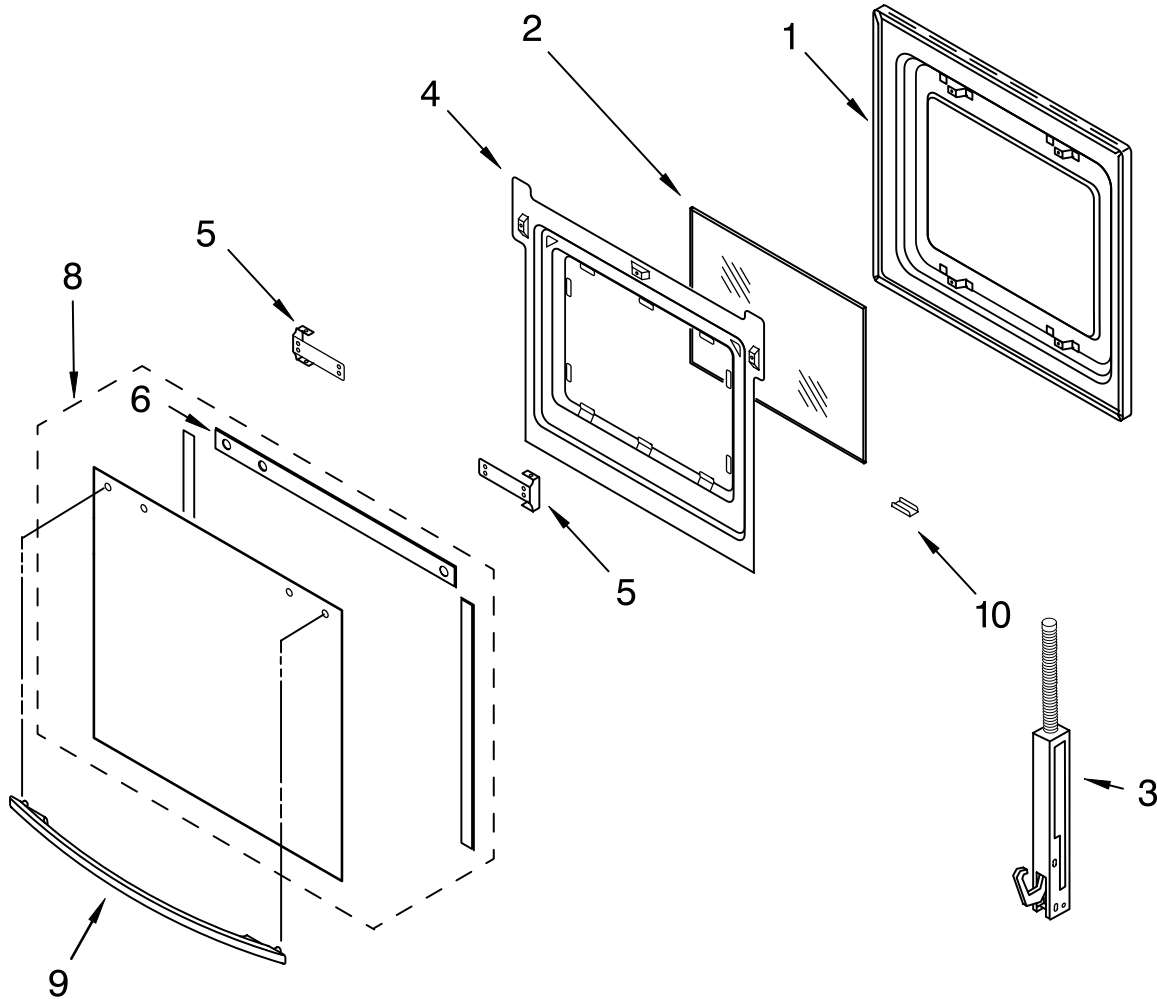

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4455618	Door Liner
2	4449259	Glass, Inner
3		Hinge, Door
	8300565	R.Side
	8300566	L.Side
	4449743	Screw (4)
4	8300778	Retainer, Glass
	4449809	Screw (4)
5	4450813	Bracket, Handle
	4451040	Screw (4)
	4449743	Screw (2)
6	8300820	Seal, Top
8	8300903	Assy, Door Glass
9	4448854	Handle, Door
10	4450863	Retainer, Glass
	4449743	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

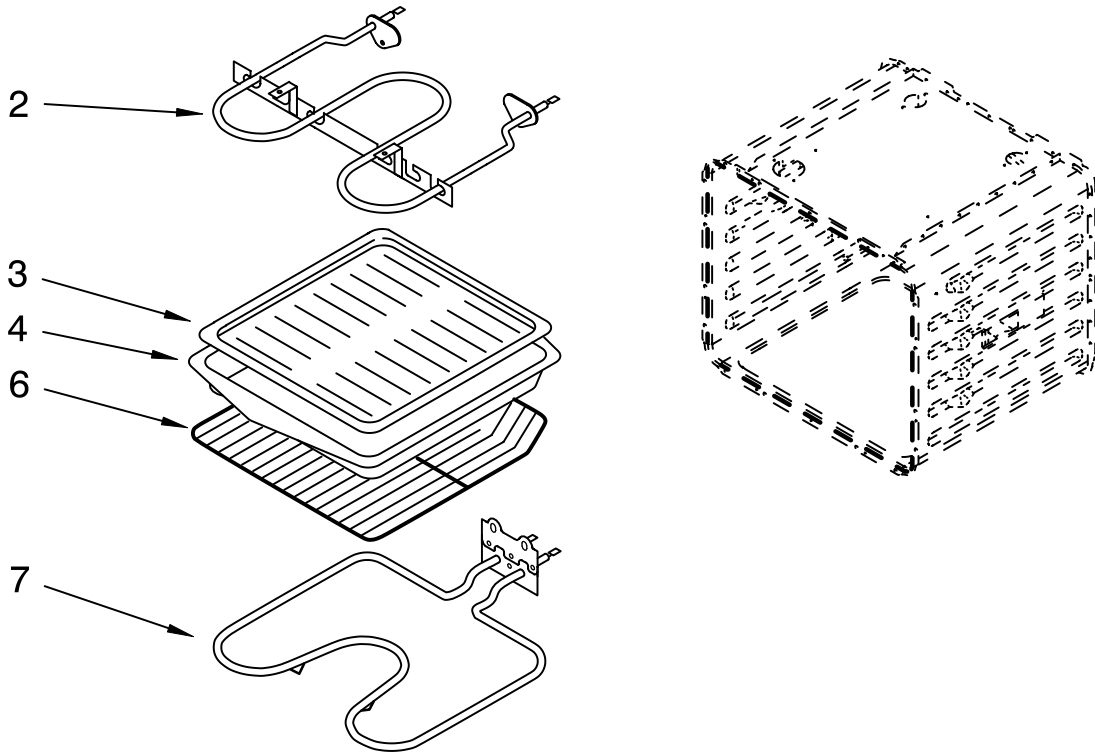


Illus. No.	Part No.	DESCRIPTION
2	4456103	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: RS610PXGW10, RS610PXGV10
(White) (Black on Biscuit)

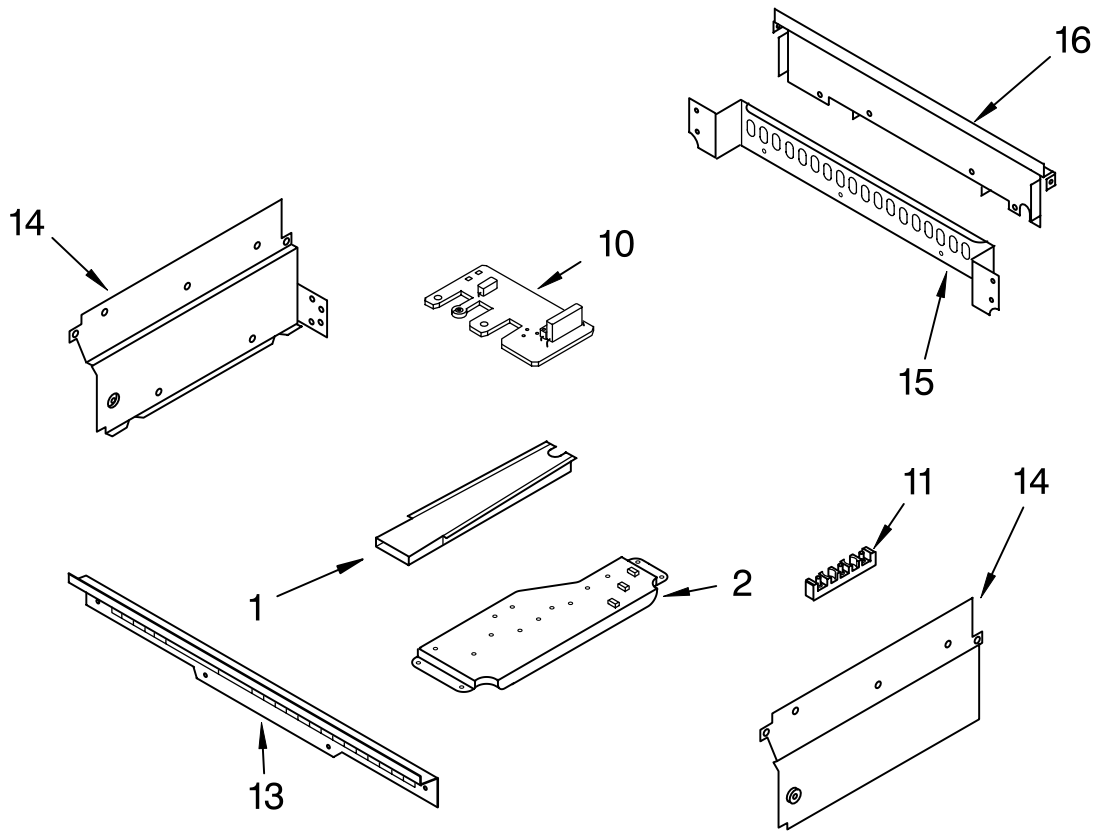

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw
2	4454943	Plate, Mounting
10	4451985	Suppressor
11	4449868	Block, Terminal
	3400080	Screw
	112432	Nut
13	4448549	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Compt.
	3191832	Right
	3191833	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	3191842	Cover, Rear
	4449809	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:RS610PXGW10,RS610PXGV10
(White) (Black on Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
261869 Cord Brown
72032 Black

PAINT, SPRAY

350930 White
261900 Citrine White
830864 Black

ADHESIVE

591014 Adhesive
Loctite (1/3 oz.)
482338 Sealer, Silastic
(3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

SPLICING WIRES--25FT.

LENGTH

242828 Wire (12 Ga.
150 c Black)
242820 Wire (14 Ga.
150 c Black)
242821 Wire (14 Ga.
150 c Blue)
242822 Wire (14 Ga.
150 c Brown)
242830 Wire (14 Ga.
200 c Brown)
242823 Wire (14 Ga.
150 c Green)
242824 Wire (14 Ga.
150 c Orange)
242829 Wire (12 Ga.
150 c Red)
242825 Wire (14 Ga.
150 c Red)
242831 Wire (14 Ga.
200 c Red)
242826 Wire (14 Ga.
150 c White)
242827 Wire (14 Ga.
150 c Yellow)
242832 Wire (14 Ga.
200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

4449809 Screw
3191220 Harness, Wire
(Main)
8301875 Harness, Wire
(EDC)
FE02313 Bushing
4451163 Conduit
3400015 Screw, Ground
4448664 Clamp
3192236 Harness, Wire
(Infinite Switch)
4455592 Harness, Wire
(Light)
4454384 Ground, Wire
4452222 Spacer, Harness
4454835 Tie, Cable

Miscellaneous

4448950 Screw, Install.
8-14 x 1" (4)
814381 Hinge Pin Kit