

# OWNER'S MANUAL

## INSTALLATION & OPERATION



### WKG SERIES GAS CONVECTION OVENS

#### MODELS

WKG	ML-126620
WKGD	ML-126621
WKGC	ML-126622
WKGX	ML-126623
WKGDY	ML-126624
WKGDX	ML-126625

### THE WOLF RANGE COMPANY LLC

19600 S. Alameda St., Compton, California 90221-6291  
P. O. Box 7050, Compton, California 90240-7050  
(310) 637-3737 • FAX (310) 637-7931 • (800) 366-WOLF



# IMPORTANT FOR YOUR SAFETY

THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL GAS EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.

POST IN A PROMINENT LOCATION THE INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED. THIS INFORMATION CAN BE OBTAINED FROM THE LOCAL GAS SUPPLIER.

## IMPORTANT

IN THE EVENT A GAS ODOR IS DETECTED, SHUT DOWN UNITS AT MAIN SHUTOFF VALVE AND CONTACT THE LOCAL GAS COMPANY OR GAS SUPPLIER FOR SERVICE.

## FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

**WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.**

IN THE EVENT OF A POWER FAILURE, DO NOT ATTEMPT TO OPERATE THIS DEVICE.

# TABLE OF CONTENTS

GENERAL .....	4
INSTALLATION .....	4
Unpacking .....	4
Location .....	5
Installation Codes and Standards .....	5
Installing Basic Oven .....	5
Ovens Mounted on Casters .....	5
Assembling the Legs to the Oven .....	6
Assembling the Stand to the Oven .....	6
Assembling Stacked Ovens .....	6
Leveling .....	6
Manual Gas Valve .....	6
Gas Connection .....	7
Testing the Gas Supply System .....	7
Air Adjustment .....	7
Vent System .....	8
Electrical Connections .....	8
OPERATION .....	9
Controls (Models WKG, WKGX, WKGD, WKGDX Without Roast & Hold) .....	9
Controls (Models WKG, WKGX, WKGD, WKGDX With Roast & Hold) .....	10
Before First Use .....	11
Lighting the WKG Series Ovens .....	11
Using the WKG Series Ovens .....	11
Conserving Energy — All Models .....	12
Programmable Controls (Models WKGX, WKGDX) .....	13
Manually Setting the Temperature and Cook Time .....	14
To Program Menu Item and Rack # Cook Times .....	14
Setting the Oven for Roast & Hold .....	15
Roast and Hold Operation .....	16
Proper Utensils .....	16
Operating Hints .....	16
Rack Arrangements .....	17
Special Procedures for Baking .....	17
High Limit Switch .....	17
Recommended Temperatures and Times for Roasting .....	18
Cooking Hints .....	18
Suggested Cooking Guidelines .....	18
Cleaning .....	21
Guidelines for Maintaining Stainless Steel Surfaces .....	21
MAINTENANCE .....	22
Lubrication .....	22
Vent .....	22
Replacing Lamps .....	22
TROUBLESHOOTING .....	22
Service and Parts Information .....	22
IMPORTANT INFORMATION .....	23
WARRANTY .....	24

# Installation, Operation, and Care of WKG SERIES GAS CONVECTION OVENS

## KEEP THIS MANUAL FOR FUTURE REFERENCE GENERAL

Models WKG and WKGX are equipped with a mechanical KX thermostat. Models WKGD and WKGDY feature a solid state temperature control. Models WKGC and WKGCX feature programmable controls. One hour dial timer and buzzer and two-speed 1/2 HP (0.37 kw) blower motor are standard equipment. Porcelain interior is standard on all models; stainless steel interior is optional. The burner input rating for each oven is 44,000 BTU/hr. Models WKGX, WKGDY and WKGCX have a 4" (10 cm) deeper oven cavity. Wolf Range offers a stacking kit for mounting one oven on top of another as an option. Oven doors open independently (standard); simultaneous door opening is optional. All ovens are furnished with 5 racks.

The standard 120 Volts, 60 Hertz, 1 Phase ovens include cord and plug. Optional electrical specifications require hard wire connection. Other available options include: Five-hour timer, 208 / 240 volt electrical service, additional oven racks, an open stand with lower storage rack, and roast and hold.

Wolf Range Gas Convection Ovens are produced with quality workmanship and material. Proper installation, usage and maintenance of your oven will result in many years of satisfactory performance.

It is suggested that you thoroughly read this entire manual and carefully follow all of the instructions provided.

### FEATURES AND OPTIONS

Model	Thermostat	Timer		Oven Lights	Roast & Hold	Legs (Opt.)	Stand With Storage Rack	Voltage
WKG WKGX	Mechanical	1 Hr. Std.	5 Hr. Opt.	Std.	Opt.	25 <sup>3</sup> / <sub>4</sub> " (65 cm)	Opt.	120 / 60 / 1 Std.
WKGD WKGDY	Solid State	1 Hr. Std.	5 Hr. Opt.	Std.	Opt.	25 <sup>3</sup> / <sub>4</sub> " (65 cm)	Opt.	208 / 60 / 1 Opt. 240 / 60 / 1 Opt. 240 / 50 / 1 Opt.
WKGC WKGCX	Programmable	N.A.	N.A.	Std.	Std.	25 <sup>3</sup> / <sub>4</sub> " (65 cm)	Opt.	220 / 380 (3W) / 50 / 3 Opt. 220 / 380 (4W) / 50 / 3 Opt. 240 / 415 (4W) / 50 / 3 Opt.
Stacked Ovens						8" (20 cm)		

## INSTALLATION

Before installing, verify that the electrical service and type of gas supply (natural or L. P. gases) agree with the specifications on the rating plate located behind the top trim panel on the front of the oven. If the supply and equipment requirements do not agree, do not proceed with the installation. Contact your dealer or Wolf Range Company immediately.

### UNPACKING

Immediately after unpacking, check for possible shipping damage. If the oven is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

Carefully unpack the oven and place in a work-accessible near to its final installed position.

Do not use the doors or their handles to lift the oven.

## LOCATION

The equipment area must be kept free and clear of combustible substances.

When installed, minimum clearance from combustible construction must be 1" (2.5 cm) at the left side, 4" (10 cm) at the right side, and 6" (15 cm) at the rear. Minimum clearance from non-combustible construction must be 0" (0 cm) at the left side, 4" (10 cm) at the right side, and 6" (15 cm) at the rear. The oven may be installed on combustible floors.

The installation location must allow adequate clearances for servicing and proper operation.

The oven must be installed so that the flow of combustion and ventilation air will not be obstructed. Adequate clearance for air openings into the combustion chamber must be provided. Make sure there is an adequate supply of air in the room to allow for combustion of gas at the oven burners.

Do not permit fans to blow directly at the oven. Wherever possible, avoid open windows next to the oven. Avoid wall-type fans which create air cross currents within the room.

## INSTALLATION CODES AND STANDARDS

In the United States, Wolf ovens must be installed in accordance with: 1) State and local codes; 2) National Fuel Gas Code, ANSI-Z223.1 (latest edition), available from American Gas Association, 1515 Wilson Boulevard, Arlington, VA 22209; 3) NFPA-96, *Vapor Removal from Cooking Equipment*, (latest edition) available from National Fire Protection Association, Batterymarch Park, Quincy, MA 02269; and 4) National Electrical Code, NFPA-70 (latest edition).

In Canada, Wolf ovens must be installed in accordance with: 1) Local codes; 2) CAN/CGA-B149.1, *Natural Gas Installation Code* (latest edition) or CAN/CGA-B149.2, *Propane Installation Code* (latest edition), available from Canadian Standards Association, 178 Rexdale Boulevard, Etobicoke, Ontario, Canada M9W1R3; and 3) Canadian Electrical Code, CSA Standard C22.2 No.3, *Electrical Features of Fuel Burning Equipment* (latest edition).

## INSTALLING BASIC OVEN

The basic oven must be installed on legs or be mounted on a modular stand. Installations on concrete bases or other supports restricting air circulation underneath the oven is not advisable and may void the warranty.

### Ovens Mounted on Casters

If the oven is to be installed on casters, you must use a flexible connector (not supplied ) that complies with the Standard for Connectors for Movable Gas Appliances, ANSI-Z21.69 (latest edition) and CAN/CGA 6.16 (latest edition), and a quick-disconnect device that complies with the Standard for Quick-Disconnect Devices for Use With Gas Fuel, ANSI-Z21.41 (latest edition) and CAN1-6.9 (latest edition). Provide a restraining device for the gas line to limit movement of the oven without depending on the connector and/or any quick-disconnect device or its associated piping to limit oven movement. Remove two screws from the rear of the oven and install the tie down strap shipped with the casters using these screws (Fig. 1). Attach the gas line strain relief to the tie down strap at the rear of the oven (Fig. 1).

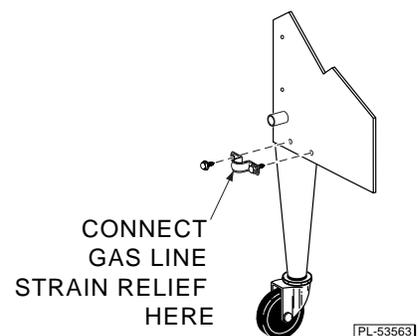


Fig. 1

If disconnection of the restraint is necessary, turn off the gas supply before disconnection. Reconnect this restraint prior to turning the gas supply on and returning the oven to its installation position. Separate instructions for installing casters to the oven are included with the casters.

## Assembling the Legs to the Oven

The legs must be installed on the bottom of the oven. Gently position the oven on its side, taking care not to scratch or damage it.

Attach each of the four leg assemblies to the bottom of the oven with the 24 bolts and lockwashers (6 per leg). Carefully raise the oven to its normal position.

## ASSEMBLING THE STAND TO THE OVEN

Attach each of the four leg assemblies to the bottom of the oven with the 24 bolts and lockwashers (6 per leg). Carefully raise the oven to its normal position. Attach the undershelf to the legs with 8 bolts and lockwashers (2 per leg).

Install the rack guides into the shelf at desired locations (for pan or flat rack), then attach the rack supports to the top end of the rack guides. Attach rack supports to the leg assembly by removing one middle bolt and reattaching back through the end holes in the rack support (Fig. 2).

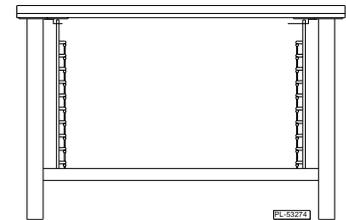
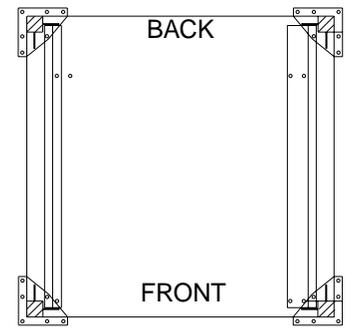


Fig. 2

## ASSEMBLING STACKED OVENS (OPTIONAL)

Unpack the ovens and stack kit. Position the oven to be used as the bottom oven on its back for access to the oven bottom, taking care not to scratch or damage it. The gas pipe protrudes beyond the back; provide for this when the oven is tipped back by resting it on suitable spacers (2 x 4's, etc.). Attach the four leg assemblies with the 24 bolts and lockwashers (6 per leg).

Place the lower oven (with legs) on the floor and remove two  $\frac{7}{16}$ " (1.1 cm) diameter knockouts on each side of the top cover. Remove vent guard and discard it.

Move the oven with legs to the installed position and place upper oven on top of lower oven using the locating studs.

Install the stacking flue (Fig. 3) with the four screws provided.

Connect the piping between the top oven and bottom oven. For all gas supply connections, pipe joint compound must be resistant to the action of propane gases.

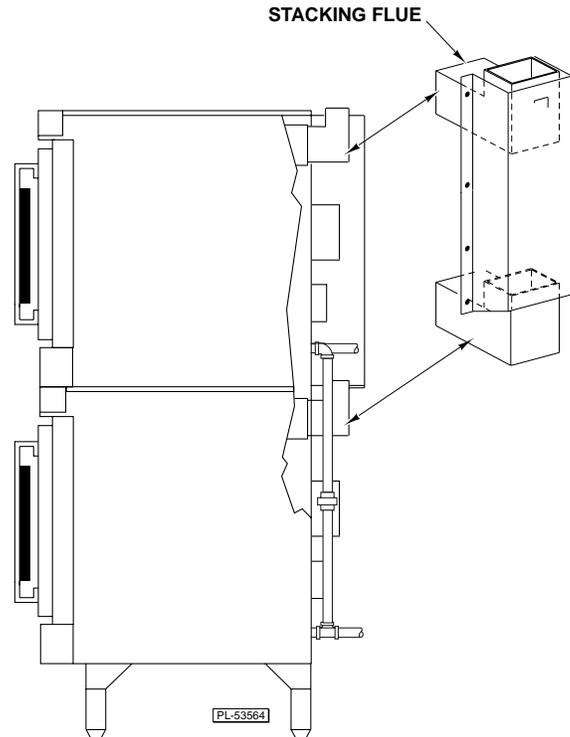


Fig. 3

## LEVELING

Make sure that the oven racks are level in the final installed position. If the oven is installed on legs, turn the adjustable feet in or out to level the oven front-to-back and side-to-side. If the oven is installed on casters, loosen set screws and turn casters in or out to level the oven front-to-back and side-to-side. Retighten set screws after leveling.

## MANUAL GAS VALVE (ALL MODELS)

The manual gas valve, located behind the small door in the lower front panel, should remain off until all electrical and gas connections are made and the ovens are ready to be used.

## GAS CONNECTION

### GAS DATA

MODEL	INPUT RATING		MANIFOLD PRESSURE	
	Natural	L. P. Gases (Propane)	Natural	L. P. Gases (Propane)
WKG WKGD WKGC WKGX WKGDX WKG CX	44,000 BTU/hr	44,000 BTU/hr	3.5" W.C. (0.87 kPa)	10" W.C. (2.49 kPa)

Gas supply connections and any pipe joint compound must be resistant to the action of propane gases.

Location of the gas inlet is at the rear of the oven. Codes require that a gas shutoff valve must be installed in the gas line ahead of the oven.

Connect gas supply after leveling the oven. The gas supply line must be at least the equivalent of  $\frac{3}{4}$ " (1.9 cm) iron pipe. Make sure the pipes are clean and free of obstructions, dirt, or pipe joint compound.

The ovens are equipped with fixed burner orifices which coincide with installation elevation.

The oven is provided with a regulator integral to the gas solenoid valve and requires no external regulator.

Natural gas pressure regulators are preset for 3.5" W.C. (Water Column) (0.9 kPa); propane gas pressure regulators are preset for 10" W.C. (2.5 kPa).

**WARNING:** PRIOR TO LIGHTING, CHECK ALL JOINTS IN THE GAS SUPPLY LINE FOR LEAKS. USE SOAP AND WATER SOLUTION. DO NOT USE AN OPEN FLAME.

After piping has been checked for leaks, all piping receiving gas should be fully purged to remove air.

### TESTING THE GAS SUPPLY SYSTEM

When gas supply pressure exceeds  $\frac{1}{2}$  psig (3.45 kPa), the oven and its individual shutoff valve must be disconnected from the gas supply piping system.

When gas supply pressure is  $\frac{1}{2}$  psig (3.45 kPa) or less, the oven should be isolated from the gas supply system by closing its individual manual shutoff valve.

### AIR ADJUSTMENT

Although main burner air is adjusted before shipment, it should be checked at the time of installation. Excessive air will cause flames to lift off a burner when cold or may cause flash-back during normal cycling of oven, particularly when propane gas is used.

Insufficient air will cause flames to burn with a yellow tip and result in carbon accumulation in the flame chamber and heat exchanger tubes.

Contact your local Wolf Range servicer if required.

## VENT SYSTEM

**DO NOT** obstruct the flow of flue gases from the flue located on the rear of the oven. It is recommended that the flue gases be ventilated to the outside of the building through a ventilation system installed by qualified personnel.

Ovens may use an optional down draft diverter flue method. This optional down draft diverter must be purchased from the oven manufacturer and vented to the outside; otherwise, the installation of any such device will void all oven certifications and warranties. When the diverter is supplied, it may be connected to a Type "B" vent.

From the termination of the flue to the filters of the hood venting system, a minimum clearance of 18" (45 cm) must be maintained.

Information on the construction and installation of ventilating hoods may be obtained from *Vapor Removal from Cooking Equipment*, NFPA Standard No. 96 (latest edition), available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

## ELECTRICAL CONNECTIONS

**WARNING:** ELECTRICAL AND GROUNDING CONNECTIONS MUST COMPLY WITH THE APPLICABLE PORTIONS OF THE NATIONAL ELECTRICAL CODE AND/OR OTHER LOCAL ELECTRICAL CODES.

**WARNING:** DISCONNECT THE ELECTRICAL POWER SUPPLY AND PLACE A TAG AT THE DISCONNECT SWITCH TO INDICATE THAT YOU ARE WORKING ON THE CIRCUIT.

**WARNING:** APPLIANCES EQUIPPED WITH FLEXIBLE ELECTRICAL POWER SUPPLY CORD ARE PROVIDED WITH A THREE-PRONG GROUNDING PLUG. THIS PLUG MUST BE CONNECTED INTO A PROPERLY GROUNDED THREE-PRONG RECEPTACLE. IF THE RECEPTACLE IS NOT THE PROPER GROUNDING TYPE, CONTACT AN ELECTRICIAN. DO NOT REMOVE THE GROUNDING PRONG FROM THE PLUG.

WKG series ovens with 120 Volt / 60 Hertz / 1 Phase electrical specification are equipped with a cord and plug as standard equipment.

A wiring diagram is located on the inside of the control housing.

### ELECTRICAL DATA

Models	Volts / Hertz / Phase	Minimum Circuit Ampacity Maximum Protective Device AMPS
WKG, WKGD, WKGC, WKGX, WKGDY, WKGCX	120 / 60 / 1	15
	208 / 60 / 1	15
	240 / 60 / 1	15
	240 / 50 / 1	15
	220 / 380 (3W) / 50 / 3	15
	220 / 380 (4W) / 50 / 3	15
	240 / 415 (4W) / 50 / 3	15

Compiled in accordance with the National Electrical Code, NFPA-70 (latest edition).


# OPERATION

**WARNING:** THE OVEN AND ITS PARTS ARE HOT. USE CARE WHEN OPERATING, CLEANING, OR PERFORMING ANY MAINTENANCE.


**CONTROLS** (Models WKG, WKGX, WKGD, WKGDY Without Roast & Hold)

Models WKG, WKGX Without Roast & Hold (Fig. 4)


Models WKGD, WKGDY Without Roast & Hold (Fig. 5)

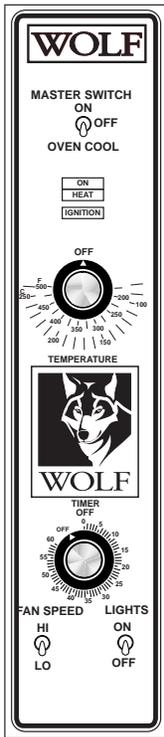


PL-53559

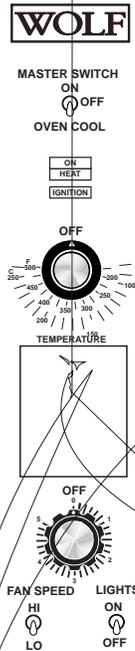

PL-53560

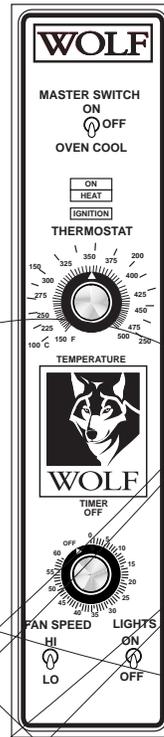

PL-53558

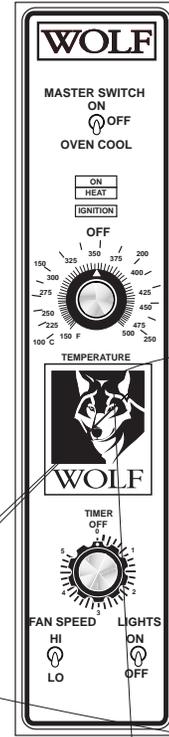

PL-53557

Fig. 4


Fig. 5

- Master Switch** ON — Turns oven control circuits on.
- OFF — Turns oven control circuits off.
- OVEN COOL** — Allows the fan motor to run with the doors ajar to speed overcooling.
- On Light (Amber)** — Lit when Master Switch is positioned at ON.
- Heat Light (White)** — Comes on and goes off when the burner cycles on and off.
- No Ignition Light (Red)** — Comes on if burner fails to ignite. When lighting the oven, the No Ignition Light flashes.
- Thermostat** — Controls oven temperature during cooking operation.
- Timer (1 Hr. or 5 Hr.)** — Sets the Bake time. Buzzer sounds continuously after Timer counts down to 0. Oven does not turn off. Turn Timer Off to stop buzzer. When oven is not in use, keep timer at Off position.
- Fan Switch** — Allows you to select High or Low Fan Speed.
- Light Switch** — Turns the lights in the oven On or Off.

## CONTROLS (Models WKG, WKGX, WKGD, WKGDX With Roast & Hold)


Models WKG, WKGX With Roast & Hold (Fig. 6)

Models WKGD, WKGDX With Roast & Hold (Fig. 7)

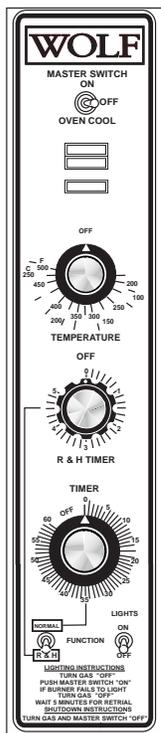


PL-53553

Fig. 6

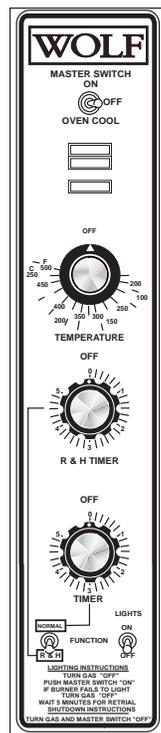


PL-53554

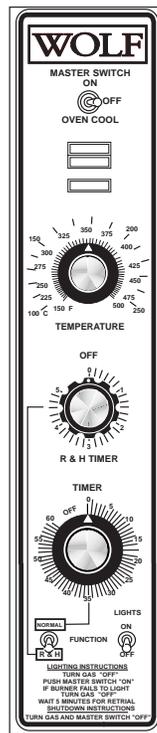

PL-53555

Fig. 7

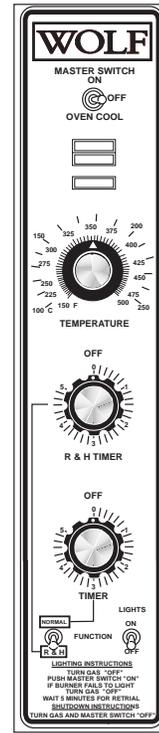

PL-53556

- Master Switch**
  - ON — Turns oven control circuits on.
  - OFF — Turns oven control circuits off.
- OVEN COOL** — Allows the fan motor to run with the doors ajar to speed overcooling.
- On Light (Amber)** — Lit when Master Switch is On.
- Heat Light (White)** — Comes on and goes off when the burner cycles on and off.
- No Ignition Light (Red)** — Comes on if burner fails to ignite. When lighting the oven, the No Ignition Light flashes.
- Thermostat** — Controls oven temperature when Function Switch is on Normal or during the first stage of Roast & Hold.
- Roast & Hold Timer** — Sets the first stage cooking time in Roast & Hold.
- Timer (1 Hr. or 5 Hr.)** — Sets the Bake time when Function Switch is on Normal. Buzzer sounds continuously after Timer counts down to 0. Oven does not turn off at end of cycle. Turn Timer Off to stop buzzer. When oven is not in use, keep Timer at Off position.
- Function Switch** — Allows you to select Normal or Roast & Hold.
  - Normal: Uses the regular timer and High fan speed.
  - Roast & Hold uses the R & H Timer for the first stage of roasting at the thermostat setting, selects a Hold temperature of 160°F during second stage roasting, and uses Low fan speed when burners are on.
- Light Switch** — Turns the lights in the oven On or Off.

## **BEFORE FIRST USE**

Before using the oven for the first time, it must be "burned in" to release any odors that might result from heating the new surfaces in the chamber.

1. Using a clean damp cloth, wipe the inside of the oven, including the racks.
2. Close the oven doors, push the Master Switch to ON, turn the Thermostat to 300°F (149°C), and allow the oven to cycle for 2 hours or until no odor is detected, before pushing the Master Switch OFF.

## **LIGHTING THE WKG SERIES OVENS**

1. Turn the main gas supply ON.
2. Turn the gas control valve (located behind the small door on the lower front panel) ON.
3. Push the Master Switch ON and turn the Thermostat to its maximum setting. Both the ON and HEAT lights should come on. If the HEAT light is not on, make sure the oven door(s) are closed.
4. If the oven fails to light, the red NO IGNITION light will be lit and remain on. Push the Master Switch OFF. Turn the gas supply off.
5. Wait 5 minutes before repeating Steps 1 through 4.

If the oven does not light after three trials, turn off the main gas valve and call a qualified servicer.

## **USING THE WKG SERIES OVENS**

### **Preheating**

1. Select the proper rack arrangement for the product to be cooked. Refer to RACK ARRANGEMENTS, page 17.
2. Make sure the doors are closed.
3. Push the Master Switch ON. The amber ON light will come on, indicating that power to the oven is on.
4. Set the two-speed Fan Switch to the desired setting.
5. Set Thermostat as desired. The Heat light will come on and remain on until the oven reaches set temperature (approximately 10 to 15 minutes for settings from 300°F (149°C) to 400°F (204°C). Refer to SUGGESTED COOKING GUIDELINES for temperatures and times for various products.
6. Prepare product and place in suitable pans. When the white Heat light goes off, the oven has reached the desired preheat temperature.

### **Cooking**

1. Open the doors and load the product into the oven. Place pans in the center of the racks. Close the doors.
2. Set the Timer. After the preset time lapses, turn the timer OFF to stop the alarm.
3. When product is done, open the doors and carefully remove cooked product from the oven. Wipe up any spills.

### **Roast & Hold (When Equipped)**

1. Turn the oven ON.
  2. Set the oven Cooking temperature to the desired setting.
  3. Position the function switch on Roast & Hold.
  4. Set the Roast & Hold Timer to the desired time.
- The oven will roast the product for the time set on the Roast & Hold Timer at the temperature set by the oven Thermostat. After the time has elapsed on the Roast & Hold Timer, the oven control will automatically switch to the Hold temperature of 160°F (71°C). In Hold mode, the oven will maintain a temperature of 160°F (71°C) until the oven is turned OFF. The Blower Fan will run at Low speed while the burner is ON and the unit is operating in Roast & Hold.

### **Changing to Roast & Hold**

1. Flip the function switch to the Normal position or turn the Master switch OFF.
2. Repeat the Roast and Hold instructions above.

### **Turning Roast & Hold OFF**

1. Flip the function switch to the Normal position or turn the Master switch OFF.

### **End of Day**

1. Turn the Thermostat OFF.
2. Push the Master Switch to OVEN COOL. Leave door ajar while the fan is on to cool the oven.
3. When oven has cooled sufficiently, push the Master Switch OFF.
4. Turn the gas valve (located behind panel) OFF and clean oven.


### **Extended Shutdown**

Repeat Steps 1 through 4 above. Unplug oven and shut off manual gas valve.

### **CONSERVING ENERGY — ALL MODELS**

- Turn off unused equipment.
- Adjust menu patterns and cooking/baking schedules for optimum equipment use.
- Reduce thermostat settings in slack periods since gas equipment heats up and recovers quickly.
- Preheat only to required cooking temperature for specific food — not higher.
- Do not open the oven door unless absolutely necessary.
- Keep area around the oven door clean and free of food particles.
- Any obstruction that prevents the door from closing completely will adversely affect oven efficiency.

## PROGRAMMABLE CONTROLS (Models WKGC, WKGCX)

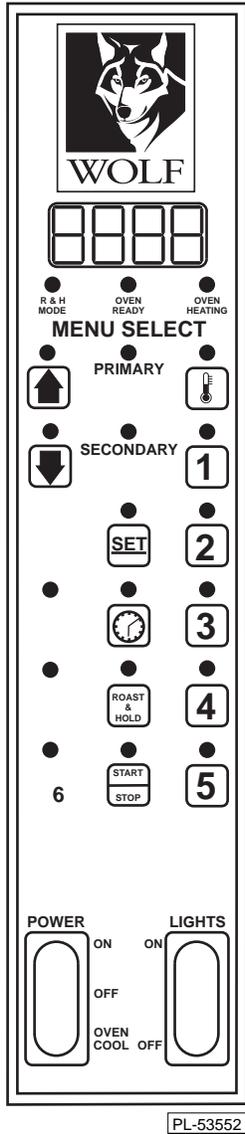

Always displays [HR:Min] when setting the Time.  
 Displays [HR:Min] if the countdown Time is more than 1 Hour.  
 Displays [Min:Sec] if the countdown Time is less than 1 Hour.  
 Displays Temperature in °F.



R & H  
MODE

Indicates the oven is in the Roast and Hold Mode.



OVEN  
READY

Indicates the oven is preheated and ready for cooking.



OVEN  
HEATING

Indicates the oven is preheating.



PRIMARY

Primary indicates Menu Items 1, 3, or 5.



SECONDARY

Secondary indicates Menu Items 2, 4, or 6.



Up arrow increases; Down arrow decreases — a displayed Time or Temperature value (if arrow keys are lit).



TEMPERATURE: Use with SET to set the oven Temperature.



SET: Use with Time or Temperature.



TIME: Use with SET to manually set the cooking Time.



Selects Roast and Hold mode; also selects Low Fan Speed.



Press once to start; press a second time to stop.



Select Menu Cook Times. Press once for Primary (1, 3, or 5).  
 Press a second time for Secondary (2, 4, or 6). See next page.



Rack Buttons select individual Menu / Rack# Cook Times — once programmed.

## MANUALLY SETTING THE TEMPERATURE AND COOK TIME

### To Set the Temperature

- Press the SET button. Press the TEMPERATURE button; *StPt* displays to indicate Setpoint.
- Use the Up and Down Arrow keys to increase or decrease the displayed Temperature value.
- Press the SET button again to save the Temperature setpoint in the computer.

### To Set the Cook Time

- Press the SET button. Press the TIME button. *Tine* displays to indicate TIME.
- Use the Up and Down Arrow keys to increase or decrease the displayed Cook Time (HR:min).
- Press the SET button again to save the Time setting in the computer.

### To Start Cooking

- Press the START / STOP button.
- The manual Cook Time counts down to 00:00. Displays [HR:Min] above 1 hour; [min: sec] below.
- The buzzer will sound. To silence the buzzer, press the START / STOP button again.

\* *The control retains the manual settings for Temperature and Time.*

## TO PROGRAM MENU ITEM and RACK # Cook Times

Factory Preset and Programmable Cook Times are shown in the table, below:

MENU SELECTION	MENU ITEM	FACTORY PRESET MENU ITEM COOK TIME	PROGRAMMABLE VALUES					
			MENU ITEM COOK TIME	RACK 1 COOK TIME	RACK 2 COOK TIME	RACK 3 COOK TIME	RACK 4 COOK TIME	RACK 5 COOK TIME
1 / 2 Primary	1	10 min.						
1 / 2 Secondary	2	15 min.						
3 / 4 Primary	3	20 min.						
3 / 4 Secondary	4	25 min.						
5 / 6 Primary	5	30 min.						
5 / 6 Secondary	6	35 min.						

The Primary indicator light with Menu 1 / 2 selects Menu Item 1 (Factory Preset Cook Time = 10 minutes). The Secondary indicator light with Menu 1 / 2 selects Menu Item 2 (Factory Preset Cook Time = 15 minutes). Similarly, for Menu Buttons 3 / 4 or 5 / 6. Any Menu Item Cook Time can be changed using the procedure below. Rack # Cook Times may be programmed if desired but are not required.

### To Change the Time Setting for any Menu Item (1 – 6)

- To enter program mode, press and hold the Up and Down arrow buttons until PrOG displays.
- ⌘ Select the Menu Item to be programmed (1 – 6). *Tine* displays to indicate TIME. Use the Up and Down arrow buttons to increase or decrease the Menu Item's COOK TIME. Repeat this step for any other Menu Items.
- Press the START / STOP button; LOC displays. Press the START / STOP button a second time to save the Menu Item(s)' COOK TIME(s).
- Press the START / STOP button once to begin cooking (with the Menu Item's Cook Time). To exit, press the START / STOP button a second time.

### To Program Individual Rack # Cook Times for a Menu Item

- To enter program mode, press and hold the Up and Down arrow buttons until PrOG displays.
- Select the Menu Item to be programmed (1 – 6); *Tine* displays to indicate TIME.
- ⌘ Then select the Rack # (1 – 5). [*t 1*] indicates Rack #1; [*t 2*] indicates Rack #2; ... [*t 5*] indicates Rack #5. Use the Up and Down arrows to increase or decrease the COOK TIME for any Rack #.
- Press the START / STOP button; LOC displays. Press the START / STOP button a second time to save the Menu / Rack #'s COOK TIME(s).
- To exit program mode, press START / STOP twice.

## Always Set the Temperature Before Setting the Time

- Press the SET button. Press the TEMPERATURE button; *StPt* displays. Use the Up and Down Arrow keys to increase or decrease the Temperature. To save, press the SET button again.

At startup, the display will initially show a *GROWING BAR*. When the oven temperature reaches the Set Point, the set temperature displays. The READY light is lit, the HEAT light goes out, and the oven is ready for you to select the Cook Time, Menu Item Cook Time, or Menu / Rack # Cook Time.

## Starting a Timed Cycle On All Racks

- Open the door, *door* will display.
  - Place the desired product on any of the five racks.
  - Close the door. The display should return to the set temperature or the *GROWING BAR*.
  - Press the Menu Key once for Primary or twice for Secondary to select a Menu Item Cook Time.
  - Press the START / STOP button \*.
  - The timer will count down the time remaining for the Menu Item Cook Time.
  - When the time has counted down to 00:00, the buzzer will sound and all Rack Buttons will flash.
  - To silence the buzzer, press the START / STOP button.
- \* *Pressing the START / STOP button after making a menu selection will time all racks for the selected menu time.*

## Starting a Timed Cycle using Programmed Individual Menu / Rack # Cook Time(s)

- After the set Temperature is reached, open the door; *door* displays. Place product(s) in oven.
- Close the door. The display returns to the set Temperature or the *GROWING BAR*.
- Select the Menu Item (once for Primary or twice for Secondary) and the Rack # to select the Menu / Rack # Cook Time. If using simultaneous cook times, select the other Menu / Rack #'s.
- The timer selects the Rack # with the shortest Cook Time and counts down to 00:00.
- The buzzer sounds and the Rack # flashes. To silence the buzzer, press the flashing Rack #.
- Open the door; *door* displays; remove the finished product; close the door.
- ⌘ The next shortest Cook Time displays, its Rack # flashes and the time counts down to 00:00.
- The buzzer sounds. Press the flashing Rack #. Open the door, *door* displays. Remove the product, close the door. Repeat from ⌘ until all Rack #'s are done.

## To Display the Actual Oven Temperature

- Press and hold the Temperature button for 3 seconds to display Actual Oven Temp until released.

## To End a Cooking Cycle

At the end of a cooking cycle, the alarm will sound. To silence the alarm and end a Menu Item cooking cycle, press START / STOP. To silence the alarm and end a Rack # cooking cycle, press the Rack #.

To cancel a cooking cycle which might have been started in error, press and hold the Rack button to be terminated and press START / STOP at the same time.

## Door and Timing

Opening the door while loading additional product will interrupt all timing functions until the door is closed and the timer resumes. For example, if a product time had diminished to 1 minute and the door was opened for 30 seconds and then closed, the timer would still show 1 minute.


## SETTING THE OVEN FOR ROAST & HOLD

- Press the Roast & Hold button to select Roast & Hold.
- Set the first stage Temperature and the Cook Time as described in: MANUALLY SETTING THE TEMPERATURE AND COOK TIME. Press START / STOP to begin cooking.
- \* *The HOLD Temperature is preset by the computer control at 150°F (66°C).*
- \* *The LOW FAN SPEED is present during Roast & Hold. Use R&H to select LOW FAN SPEED.*

## ROAST AND HOLD OPERATION — (When Equipped)

Roast and Hold cooks the product in two stages. During First Stage Cooking, the oven temperature is regulated by the Temperature setpoint and the Roast & Hold Timer setting. After the time counts down to 00:00, Second Stage Cooking begins. During Second Stage Cooking, the heating elements are off as the temperature in the oven declines to the Hold Temperature. The doors should remain closed during Second Stage Cooking.

When the Hold temperature is reached, the display flashes *HOLD*. Temperature in the oven will be maintained at the Hold temperature until the oven is turned off.

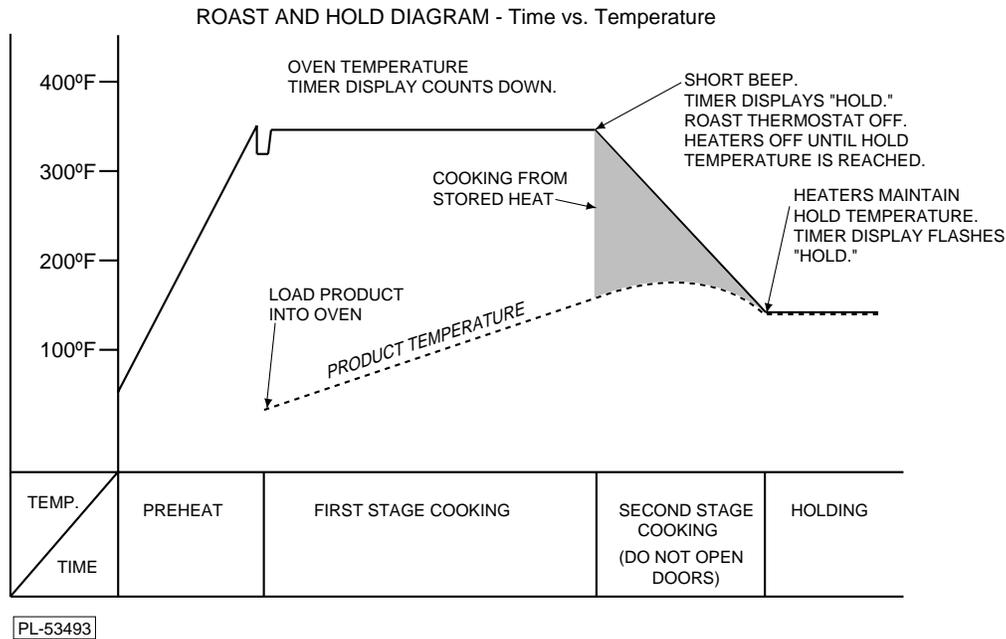

## PROPER UTENSILS

The use of proper utensils can enhance oven operation. Medium and light weight pans allow the product to warm faster. Roast meats in shallow pans deep enough to hold all juices yet allow free air circulation.

## OPERATING HINTS

When using the convection oven for the first time with a particular food, check the degree of doneness periodically before the suggested time has elapsed, to make sure the desired doneness is achieved.

Record your temperature and time settings for various products. The convection oven can provide consistent, repeatable results.

The convection oven is faster than conventional deck-type ovens; temperature settings are lower and cook times are shorter. Since recipes and foods are subject to many variations and tastes, the guidelines regarding Times and Temperatures in this manual are **SUGGESTIONS ONLY**. Experiment with your food products to determine the cooking temperatures and times that give you the best results.

## RACK ARRANGEMENTS

All models are supplied with five racks and have a maximum operating capacity of six racks per oven. The eleven-position rack supports provide for maximum flexibility and proper rack spacing.

The following arrangements are recommended. The position numbers are in numerical sequence starting at the bottom (Fig. 8).

**Arrangement #1** — Five racks in Positions #2, #4, #6, #8, and #10 for cookies or reconstitution of frozen lunches at maximum capacity. These are also the recommended positions for general baking in sheet pans with products not over 2½" (6.4 cm) high.

**Arrangement #2** — Four racks in Positions #1, #4, #7, and #10 are for general baking in sheet pans, muffin pans, pie or cake tins, and pudding pans 3½" (8.9 cm) high with products not over 4" (10.2 cm) high. This arrangement can also be used for casseroles or meat dishes in #200 series food service pans 12" x 20" x 2½" (30.4 x 50.8 x 6.4 cm).

**Arrangement #3** — Three racks in Positions #1, #5, and #9 are for baking breads or cakes in loaf or tube pans and high meringue pies. This arrangement can also be used for casseroles, meat dishes or cooking in pans up to 5½" (14 cm) deep with products up to 6" (15.2 cm) high.

**Arrangement #4** — Two racks in Positions #1 and #6 are for cooking turkeys and other roasts up to 7" (17.8 cm) high.

With the rack in Position #1, there is limited space for a water pan (see cooking chart in this manual). When mixed loads or partial loading is regular practice, some users have developed other rack arrangements to suit their particular needs.


## SPECIAL PROCEDURES FOR BAKING

**Yeast Bread:** Cooking starts immediately in the convection oven. Yeast breads do not usually rise as much in a convection oven as in a conventional oven. Therefore, it is usually necessary to allow fuller proof, 2½ to 3 times increase in volume for best results.

**Pies:** When baking pies in your convection oven, 3 or 4 pies should be put on an 18x26" sheet or bun pan. This procedure helps the bottom crust to bake, makes handling easier, and reduces the possibility of boilover spoiling the appearance of the pies on the lower racks.

## HIGH LIMIT SWITCH

All ovens are equipped with a high limit switch which senses the temperature of the oven to prevent overheating. The high limit switch operates independently and will automatically shut the oven down should the primary control fail. If this situation occurs, DO NOT attempt to bypass the high limit. Shut the oven down and contact your local Wolf Range authorized service agency.

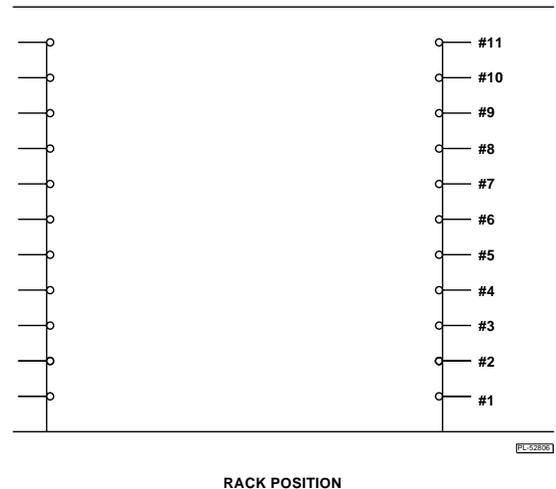

**Fig. 8**

## RECOMMENDED TEMPERATURES AND TIMES FOR ROASTING

Meat roasting is most satisfactory at temperatures of 225 – 325°F (107 – 162°C) for beef, lamb, poultry, and ham; 325°F (162°C) for fresh pork as recommended by USDA and American Meat Institute.

A pan, approximately 12" x 20" x 1" (30.4 x 50.8 x 2.5 cm), full of water may be placed in the oven bottom. This water supplies humidity to reduce shrinkage. Water should be added if necessary during roasting.

Roasting pans should be no deeper than necessary to hold drippings, usually 2 – 2½" (5.1 – 6.4 cm).

Cooking time and shrinkage may vary with roasting temperature, cut, grade of meat, and degree of doneness. Smaller cuts will generally show greater time savings than larger cuts at a given temperature.

### ROASTING TEMPERATURE CHART

PRODUCT	TEMP		APPROXIMATE TIMES
	°F	(°C)	
<b>Standing Rib Roast</b> — Oven Ready	250	(121)	3 to 4 Hrs. — Rare 4 to 4½ Hrs. — Med.
<b>Rolled Rib Roasts</b> — 20 to 22 lb. (9.1 to 10 kg)	275	(135)	4 Hrs. — Med.
<b>Veal Roast</b> — 15 lb. (6.8 kg)	300	(148)	3 Hrs. — Med. Well
<b>Turkeys</b> — 15 to 20 lb. (6.8 to 9.1 kg)	300	(148)	3 Hrs.
<b>Meat Loaf</b> — 8 to 10 lb. (3.6 to 4.5 kg)	350	(176)	45 to 60 Minutes

## COOKING HINTS

Forced air convection cooking is faster than conventional oven cooking, and therefore, overcooking is more common. Do not cook products faster than is practical for the best results. Since forced convection supplies heat to the surface of the product, the thicker or more massive a product is for its type, the longer it will take to absorb enough heat to cook.

The oven will cook or bake full or partial loads at standard recipe temperatures. As with any oven, you may wish to use a temperature of up to 25 F° (14 C°) higher or lower than the recipe, for the particular product result that you prefer.

Once established, convection oven Time and Temperature settings should be noted on your recipe.

## SUGGESTED COOKING GUIDELINES

Recommended temperatures, times, and number of racks are intended as a guide only. Adjustments must be made to compensate for variations in recipes, ingredients, preparation, and personal preference in product appearance.

The oven does not require special recipes. Excellent results can be obtained from any good commercial recipe with reduced cooking times.

**RECOMMENDED TEMPERATURES, TIMES, AND NUMBER OF RACKS FOR BAKING**

PRODUCT	TEMPERATURE		TIME IN MINUTES	NO. OF RACKS
	°F	(°C)		
<b>Cakes</b>				
Sheet Cakes				
18 x 26 x 1" (45.7 x 66 x 2.5 cm) Pan				
Scaled 4½ to 6 lb. (2-2.7 kg) / pan	325-360	(162-182)	20 to 23	5
Scaled 6 to 7½ lb. (2.7-3.4 kg) / pan	335-350	(168-177)	22 to 25	4
Sheet Cakes				
18 x 26 x 2" (45.7 x 66 x 5 cm) Pan	300-325	(149-162)	25 to 35	4
Scaled 10 to 12 lb. (4.5-5.4 kg) / pan	300-325	(149-162)	25 to 35	3
Or, two 12 x 18 x 2" (30.5 x 45.7 x 5 cm) pans				
Scaled 5 to 6 lb. (2.3-2.7 kg) / pan.				
<b>Angel or Sponge Cakes</b>				
Sheet Pans 18 x 26 x 1" (45.7 x 66 x 2.5 cm)				
Scaled 5 to 6 lb. (2.3 to 2.7 kg) per pan	300-325	(149-162)	15 to 20	4
<b>Loaf or Tube Pans</b>				
	315-340	(157-171)	20 to 30	3 – 4
<b>Cupcakes</b>				
	350-400	(177-204)	6 to 12	4
<b>Frozen Fruit Pies</b>				
	350-375	(177-190)	30 to 45	3 – 4
<b>Pumpkin or Custard Pies</b>				
	300-350	(149-177)	30 to 45	3 – 4
<b>Cobblers</b>				
12 x 18 x 2" (30.5 x 45.7 x 5 cm) or	350-400	(177-204)	30 to 45	3 – 4
12 x 20 x 2½" (30.5 x 50 x 6.3 cm)				
<b>Meringue Pies</b>				
	350-425	(177-218)	6 to 10	2 – 4
<b>Fruit Turnovers</b>				
18 x 26 x 1" (45.7 x 66 x 2.5 cm) Pans	350-375	(177-190)	15 to 25	3 – 5
<b>NOTE:</b> Pies and cobblers; fruit, custard, and pumpkin pies in pie pans should be placed on 18x26x1" (45.7x66x2.5 cm) pans for baking.				
<b>Cookies</b>				
Rolled or Pressed	350-400	(177-204)	6 to 12	3 – 5
Drop	350-400	(177-204)	6 to 15	3 – 5
<b>Brownies</b>				
	350	(177)	12 to 20	4 – 5
<b>Yeast Breads</b> NOTE: Yeast breads should be fully proofed for best results.				
<b>Rolls</b> — 1 oz.	350-400	(177-204)	5 to 10	3 – 4
1½ to 2½ oz.	350-400	(177-204)	8 to 15	3 – 4
<b>Loaf Bread</b> — 1 lb. (453.4 g)	325-375	(162-190)	20 to 40	3(30) Pans 2(20) Pans
<b>Sweet Rolls &amp; Danish Pastry</b>				
	325-375	(162-190)	5 to 15	3 – 4
<b>Biscuits</b> — Rolled ½" (1.3 cm) Thick				
	350-400	(177-204)	5 to 15	3 – 4
<b>Muffins</b>				
18 x 26 x 1" (45.7 x 66 x 2.5 cm) pan,	325-375	(162-190)	6 to 18	3 – 4
5 – 7 lb. (2.3 – 3.2 kg) / pan	335-400	(168-204)	10 to 20	4
18 x 26 x 2" (45.7 x 66 x 5 cm) pan,	335-400	(168-204)	15 to 25	4
8 – 20 lb. (3.6 – 9 kg) per pan				
<b>Corn Muffins</b>				
	335-385	(168-196)	10 to 20	3 – 4

## REHEATING PREPARED FOODS

PRODUCT	TEMPERATURE		TIME IN MINUTES	NO. OF RACKS
	°F	(°C)		
<b>Frozen French Fries</b>	400-450	(204-232)	6 to 8 2 to 3	4
<b>Frozen TV Dinners</b>	350-400	(177-204)	10 to 12	2 – 5
<b>Frozen Entrees</b> ¾" to 1" (1.9 – 2.5 cm) Thick	300-350	(149-177)	10 to 20	2 – 5
<b>Frozen Meals</b> , 8 oz. Foil Pkg.	350-400	(177-204)	20 to 30	2 – 5
<b>Fish Sticks &amp; Portions</b> Frozen Breaded, 1 oz. 2½ to 3 oz.	350-400 350-375	(177-204) (177-190)	6 to 10 8 to 15	2 – 4 2 – 4
<b>Chicken Pieces</b> Broiled or Oven Fried 2 to 2½ lb. (0.9 to 1.1 kg) / bird 2½ to 3 lb. (1.1 to 1.4 kg) / bird	375-425 350-400	(190-218) (177-204)	8 to 15 15 to 25	2 – 5 2 – 4
<b>Lobsters</b> — 1 to 1½ lb. (0.45 to 0.7 kg)	400-450	(204-232)	8 to 14	2 – 4
<b>Lobster Tails</b> — Frozen ½ to ¾ lb. (0.2 to 0.3 kg)	350-400	(177-204)	10 to 15	2 – 4
<b>Hamburger Patties</b> 8 per lb., Med. to Well Done 6 per lb. 4 per lb.	400-450 400-450 375-450	(204-232) (204-232) (190-232)	5 to 6 7 to 10 8 to 12	2 – 6 2 – 6 2 – 6
<b>CASSEROLES</b>				
<b>Food Service Pans</b> 2" to 3" (5.0 to 7.6 cm) deep 3" to 4" (7.6 to 10.2 cm) deep	325-375 325-375	(162-190) (162-190)	15 to 25 20 to 35	2 – 4
<b>Ramekins or Foil Pans</b> Up to 1½" (38.1 mm) deep Frozen	350-400	(177-204)	5 to 6 10 to 15	4 – 5 2 – 4
<b>MISCELLANEOUS PRODUCTS</b>				
<b>Baked Potatoes</b> 120 count per 50 lb. (22.7 kg) 100 count per 50 lb. (22.7 kg) 80 count per 50 lb. (22.7 kg)	400-450 400-450 400-425	(204-232) (204-232) (204-218)	20 to 25 25 to 40 30 to 45	2 – 5 2 – 5 2 – 5
<b>Pizza</b> — Frozen or With Prebaked Crust	425-475	(218-232)	5 to 10	2 – 4
<b>Grilled Cheese Sandwiches</b>	400-425	(204-218)	8 to 10	2 – 4

## CLEANING

**WARNING:** DISCONNECT ELECTRICAL SUPPLY AND PLACE A TAG AT THE DISCONNECT SWITCH INDICATING THAT YOU ARE WORKING ON THE OVEN BEFORE CLEANING.

Allow the oven to cool before cleaning.

### Heat Return Tube

The Heat Return Tube opening should never be blocked. The Heat Return Tube should be kept clean at all times for proper operation of the oven. Clean this tube with standard oven cleaner at least once a week. Be sure to thoroughly clean all cleansing solution off the tube before using the oven again. It is also recommended that the oven be run at 400°F (204°C) for 20 minutes before using to burn off any cleaning solution that was not thoroughly rinsed from the tube.

### Daily

Exterior stainless steel oven panels should be cleaned with a damp cloth. Stubborn soil may be removed with detergent. (DO NOT USE "DAWN".) Rinse thoroughly and wipe dry with a soft clean cloth.

Clean porcelain oven interior daily with soap or detergent and water. Rinse thoroughly and wipe dry with a soft clean cloth.

Nickel plated racks and rack supports may be removed for cleaning.

For burned-on foods and grease which resist simple soap and water cleaning, an abrasive cleanser (scouring powder) mixed into a paste may be used. Apply with stainless steel wool or sponge, always rubbing with the "grain." This treatment is equally effective for "heat tint" (slightly darkened areas caused by oxidation). Again, remember to rub in the direction of the polish lines. Rinse with clear water and dry with a soft cloth.

Do not use scouring powder on the glass window; it will scratch and fog the glass.

After processing some foods at low temperatures, odors may linger in the oven. These odors may be cleared by setting the thermostat at 500°F (260°C) and the control at 10 and allowing the oven to run unloaded for 30 to 45 minutes.

## GUIDELINES FOR MAINTAINING STAINLESS STEEL SURFACES

There are three basic things that can breakdown the surface layer of stainless steel and allow corrosion to develop: 1) Abrasion; 2) Deposits and water; and 3) Chlorides.

Avoid abrasion from rubbing with steel pads, wire brushes, or scrapers that can leave iron deposits on stainless steel; instead, use plastic scouring pads or soft cloths. For stubborn stains, use products such as Cameo, Talc, or Zud First Impression. Always rub parallel to the polish lines or with the grain.

Hard water can leave deposits that promote rust on stainless steel. Treated water from softeners or certain filters can eliminate these mineral deposits. Other deposits from food or lubrication must be properly removed by cleaning. Use mild detergent and non-chloride cleaners. Rinse thoroughly. Wipe dry. If using chloride containing cleaners or sanitizers, ***rinse repeatedly*** to avoid stainless steel corrosion. Where appropriate, apply a polish recommended for stainless steel (such as Benefit or Super Sheen) for extra protection and lustre.

# MAINTENANCE

**WARNING:** THE OVEN AND ITS PARTS ARE HOT. USE CARE WHEN OPERATING, CLEANING, OR PERFORMING ANY MAINTENANCE.

**WARNING:** DISCONNECT ELECTRICAL SUPPLY AND PLACE A TAG AT THE DISCONNECT SWITCH INDICATING THAT YOU ARE WORKING ON THE OVEN BEFORE PERFORMING ANY MAINTENANCE.

## LUBRICATION

The fan motor comes with sealed bearings and requires no lubrication.

## VENT

Periodically check the flue, when the oven is cool, to be sure it is free of obstructions.

## REPLACING LAMPS

- Allow oven to cool.
- Remove all racks by pulling forward, lifting up and out.
- Unscrew glass dome from light body.
- Replace the bulb.
- Reassemble glass dome and racks.

# TROUBLESHOOTING

Problem	Possible Cause	Suggested Corrective Action
Uneven browning or overcooked edges.	1. Oven is too hot. 2. Too many racks used.	1. Reduce temperature setting (refer to Cooking Guidelines). 2. Use fewer racks to allow better circulation.
Product pulling to edge of pan or spilling.	1. Oven is not level. 2. Sheet pans are warped.	1. Level oven racks - side to side and front to back. The rack should check dead level side to side and level to 1/8" low at the front from front to back. 2. Keep pans used for baking batter separate from general purpose pans. If any pan shows a tendency to warp, remove it from the baking group.
Excessive shrinkage.	1. Failure to maintain water in oven. 2. Roasting temperature too high.	1. Place pan of water in bottom of oven measuring 12 x 20 x 1" (30.5 x 51 x 2.5 cm). 2. Reduce temperature.
No Ignition Light remains lit for more than 20 seconds after 3 trials.	No gas supply.	<ul style="list-style-type: none"><li>• Turn oven off for 5 minutes before attempting to relight.</li><li>• Check gas supply valves to be sure they are open.</li><li>• Check electrical power source and connections.</li></ul>

## SERVICE AND PARTS INFORMATION

To obtain service and parts information concerning this oven in the United States, call your local Wolf Range service representative. For service and parts information in Canada, contact the Wolf Range service provider in your area.

---

# IMPORTANT INFORMATION

---

When requesting information, Owner's Guides, replacement parts or service, always refer to the model and serial number of your unit. The serial number of your appliance is located on the rating plate. For your convenience, space is provided below to record this information for future reference.

SERIAL NO. \_\_\_\_\_

MODEL NO. \_\_\_\_\_

DEALER: \_\_\_\_\_

INSTALLATION DATE: \_\_\_\_\_

## IMPORTANT

**This equipment is design certified by a Nationally Recognized Testing Laboratory, to the appropriate National Standards as indicated on the Equipment Rating Plate. Any modification without written permission of The Wolf Range Company LLC voids the certification and the warranty of this unit.**

NOTICE: When this appliance is installed with casters, it must be installed with the casters supplied, a connector complying with either the standard for *Connectors of Movable Gas Appliances*, ANSI Z21.69 or *CAN/CGA-6.16*, and a quick disconnect device which complies with either *Quick Disconnect Devices for Use with Gas Fuel*, ANSI Z21.41 or *CAN1-6.9*. It must also be installed with restraining means to guard against transmission of strain to the connector, as specified in the appliance manufacturer's instructions.

If an appliance is equipped with casters and is connected to the supply piping by means of a connector for movable appliances, the user and maintenance personnel must be aware that there is a restraint on the appliance and if disconnection of the restraint must be reconnected after the appliance is returned to its original installed position.

**FOR SAFE OPERATION AND PROPER VENTILATION, KEEP SPACE BETWEEN COOKING EQUIPMENT AND HOOD FREE FROM ANY OBSTRUCTIONS.**

Your selection of Wolf equipment is your assurance of quality and dependability that reflects over 65 years of experience in manufacturing the finest commercial gas cooking equipment. You can always rely on your Wolf dealer and The Wolf Range Company LLC to stand behind every Wolf product anywhere in the world. For additional equipment, service and information, contact your Wolf dealer.

## **THE WOLF RANGE COMPANY LLC**

19600 S. Alameda St., Compton, California 90221-6291  
P. O. Box 7050, Compton, California 90240-7050  
(310) 637-3737 • FAX (310) 637-7931 • (800) 366-WOLF

---

**THE WOLF RANGE COMPANY LLC  
LIMITED COMMERCIAL EQUIPMENT WARRANTY  
EFFECTIVE APRIL 1, 1995**

The Wolf Range Company LLC (Company) warrants to the original owner that the product is free from defect in material and workmanship. This warranty shall be in effect for one (1) year from the date of installation, but shall not exceed eighteen (18) months from the date of shipment. The warranty is limited, at the option of the company, to the replacement or repair of any part found by the company to be defective. The warranty covers normal labor charges for products or parts installed in the United States and Canada. Labor charges shall be covered to the extent the performance is effected within 50 miles from an authorized servicer.

**THE WARRANTY DOES NOT COVER:**

- Misused, abused or improperly installed.
- Exposure to harsh chemicals.
- Altered or modified by persons other than authorized Wolf servicers.
- Where serial numbers have been altered or removed.
- Damaged during transit or handling.
- Damaged by other than genuine Wolf replacement parts.
- Damaged by flood, fire or other acts of God.
- Cleaning, Adjustments or Calibrations.

**THE OWNER SHALL BE RESPONSIBLE FOR:**

- Proper installation and compliance with local codes.
- Supplying proper gas type and pressure.
- Making product reasonably accessible for service.
- Electrical connections, ventilation requirements and scheduled maintenance.
- Observation of instructions in owner's manual.
- Use of authorized servicers only.

The product is intended to be used for commercial purposes. The warranty is void if the product is used for other than commercial purposes. Replacement parts must be supplied by Wolf authorized servicers and defective parts returned intact to the same. Documents verifying ownership and installation date are required. Stainless steel fry tanks are warranted for five (5) years from the date of installation. Labor shall be covered for one (1) year. No warranty applies to range light bulb.

Warranty applies only to products manufactured on or after April 1, 1995 according to the manufacture/date code. The company shall not be liable for any incidental or consequential damages, direct or special damages, claims of loss of use, claims of loss of profit, or any other loss, cost or expense.

**THIS WARRANTY CONSTITUTES THE EXCLUSIVE REMEDY OF THE COMPANY. THE WARRANTY SET FORTH HEREIN, IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE.**

Some areas do not allow limitations on whether, or how long, an implied warranty lasts, so the limitation may not apply to you. Some areas do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific rights, you may also have other rights that vary from location to location.

---

**THE WOLF RANGE COMPANY LLC**

19600 South Alameda Street, Compton, California 90221  
(310) 637-3737 • FAX (310) 637-7931 • (800) 366-WOLF

