

# COMPETENCE B6100-1

The Versatile Built-In Oven

User Instructions



## Dear customer

Please read these operating instructions carefully.

Pay particular attention to the section "Safety Instructions" on the first few pages. Please retain these operating instructions for later reference. Pass them on to possible new owners of the appliance.

### The following symbols are used in the text:



Safety Instructions

**Warning:** Information concerning your personal safety.

**Important:** Information on how to avoid damaging the appliance.



Information and practical tips



Environmental information

1. These numbers indicate step by step how to use the appliance.
2. ...
3. ...

Before calling out an engineer to a fault please read the chapter "What to do if ..." as you may be able to resolve the problem yourself.

For further assistance contact your local AEG Service Force Centre, see the Chapter "Service and Spare Parts".

Your local AEG SERVICE FORCE centre is available at all times to deal with technical problems (addresses and telephone numbers are listed under "Customer Service Centres").

For additional information, also see the section "Service".

Printed on environmentally friendly paper.  
Thinking ecologically means acting ecologically ...

# CONTENTS

<b>Operating Instructions</b> .....	5
<b>Safety</b> .....	5
<b>Disposal</b> .....	7
<b>Description of the Appliance</b> .....	8
General Overview .....	8
Control Panel .....	8
Oven Features .....	10
Oven Accessories .....	11
<b>Before Using for the First Time</b> .....	12
Setting the Time .....	12
Initial Cleaning .....	13
<b>Operating the Oven</b> .....	14
The Electronic Oven Control .....	14
Oven Functions .....	15
Inserting the Shelf and Universal Baking Tray .....	19
Attaching/Removing the Grill Pan Handle .....	20
Clock Functions .....	21
Other Functions .....	28
Switching Off the Time Display .....	28
Oven Child Safety Feature .....	29
Button Locking Feature .....	30
Oven Safety Cut-out .....	31
<b>Usage, Tables and Tips</b> .....	32
Baking .....	32
Baking Tables .....	34
Table: Desserts .....	38
Roasting .....	39
Table: Meat, roasting, casseroles .....	41
Table: Roasting, casseroles, au gratin .....	42
Grilling .....	45
Grilling Table .....	46
Bio-Functions .....	47
Low Temperature Roasting .....	47
Low Temperature Roasting Table .....	49

Making Yoghurt .....	50
Proving Dough .....	50
Drying Fruit, Vegetables .....	51
Defrosting .....	52
Defrosting Table .....	52
Preserving .....	53
<b>Cleaning and Care</b> .....	55
Exterior of the Appliance .....	55
Oven Interior .....	55
Accessories .....	56
Shelf Support Rails .....	57
Oven Lighting .....	58
Cleaning the Oven Ceiling .....	59
Oven Door .....	60
Oven Door Glass .....	61
<b>What to do if ...</b> .....	63
<b>Technical Data</b> .....	64
Oven Interior Dimensions .....	64
Regulations, Standards, Directives .....	64
<b>Installation Instructions</b> .....	65
Safety Instructions for the Installer .....	65
<b>Warranty conditions</b> .....	71
<b>Customer Service Centres</b> .....	72
<b>Index</b> .....	74
<b>Service and Spare parts</b> .....	75

# Operating Instructions



## Safety

### Electrical Safety

- The appliance may only be connected by a **registered specialist**.
- In the event of any faults or damage to the appliance: remove fuses or switch off.
- It is **not permissible** to clean the appliance with a steam or high pressure cleaner for safety reasons!
- **Repairs** to the appliance may **only be carried out by specialists**. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. If your appliance needs repairing, please contact your local AEG Service Force Centre or your specialist dealer.

### Child Safety

- Never leave children unsupervised when the appliance is in use.

### Safety whilst Using

- This appliance is intended to be used for cooking, frying and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with hot rings or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.

## **To Avoid Damaging Your Appliance**

- Do not line your oven with aluminium foil and do not place a baking tray or dish on the oven floor, otherwise the oven enamel will be damaged by the resulting build up of heat.
- Juice from fruit that drips from baking trays will leave marks that cannot be removed. For very moist cakes, use the universal baking tray.
- Do not put any weight on the oven door when it is open.
- Never pour water directly into the hot oven. The enamel may be damaged.
- Using force, especially on the edges of the front glass panel, may break the glass.
- Do not store inflammable objects in the oven. They may ignite when the oven is switched on.
- Do not store moist food in the oven. The enamel may be damaged.



## Disposal

### Disposing of the packaging material

All materials used can be fully recycled.

Plastics are marked as follows:

- >PE< for polyethylene, as used for the outer wrapping and the bags inside.
- >PS< for polystyrene foam, e.g., as used for the padding materials. They are completely free of CFCs.

### Disposal of old appliances



**Warning:** Before disposing of old appliances please make them inoperable so that they cannot be the source of danger.


**To do this, disconnect the appliance from the mains supply and remove the mains lead.**

To protect the environment, it is important that worn out appliances are disposed of in the correct manner.


- The appliance must not be disposed of with household rubbish.
- You can obtain information about collection dates or public refuse disposal sites from your local refuse department or council.

# Description of the Appliance

## General Overview

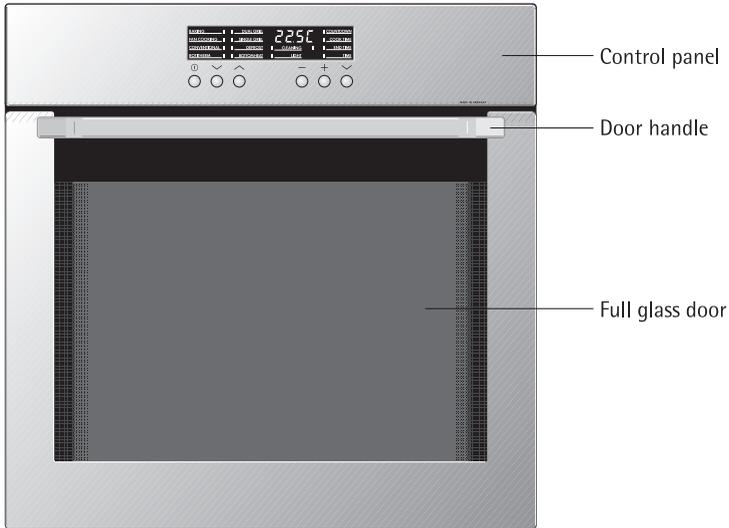


## Control Panel

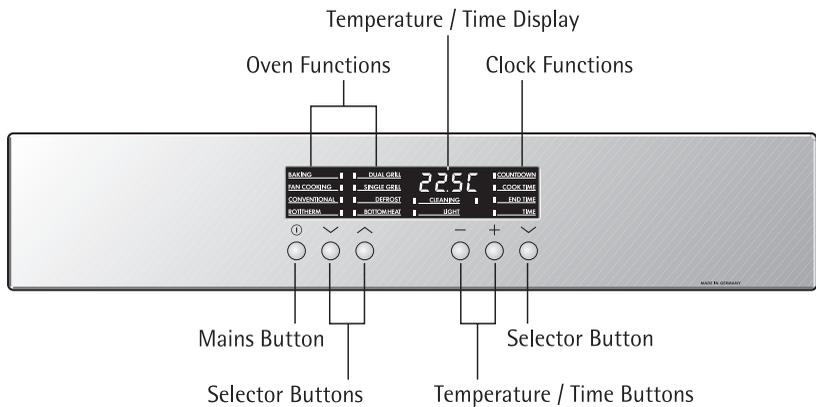


**Mains button**


For switching the entire appliance on and off.

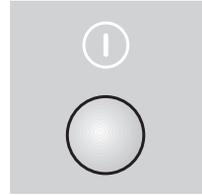**Mains button on appliances with a metal front**

In the following text and in the illustrations the symbol  is always used to indicate the mains button.

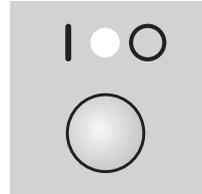

## Oven Features

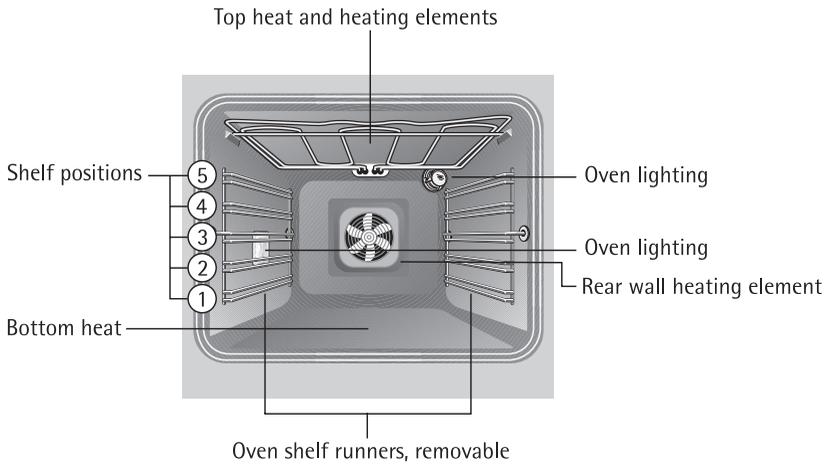

### Oven steam vent

Steam from the oven is fed out below the door handle.


### Relates only to appliances with a metal front:

Steam from the oven is fed out between the upper door edge and the control panel.

## Oven Accessories


### Combination shelf

For dishes, cake tins, items for roasting and grilling.

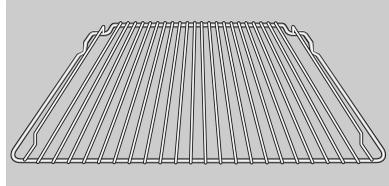


### Universal baking tray

For moist cakes, juicy roasts or as a baking sheet or collecting vessel for fat.

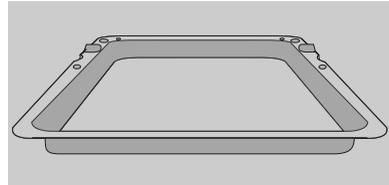


### Grill pan with handle

Support for the grill tray as a collecting vessel for fat.

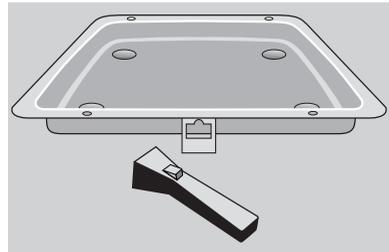

### Grill tray

Insert for the grill pan for grilling smaller amounts of grilled food.

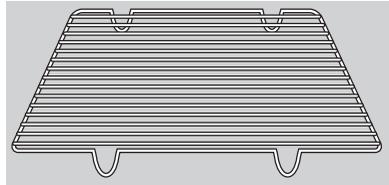

# Before Using for the First Time

## Setting the Time

**i** The oven will only operate when the time has been set.

The time function indicator will flash after the appliance has been connected to the mains or following a power failure.



Using buttons  $\oplus$  or  $\ominus$  set the current time.



Wait for 5 seconds.

The flashing will stop and the clock will show the set time.

The appliance is ready for use.



## Initial Cleaning

Before using the oven for the first time you should clean it thoroughly.




**Important:** Do not use any caustic, abrasive cleaners! The surface could be damaged.




Use commercially available cleaners for metal fronts.

1. Switch on the appliance using the mains button.  
The symbol above the button will be illuminated.

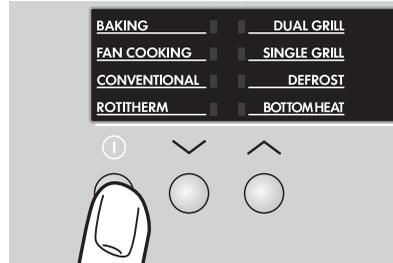


2. Press selector button  once for oven functions.  
The LIGHT function indicator comes on and the oven lighting is switched on.

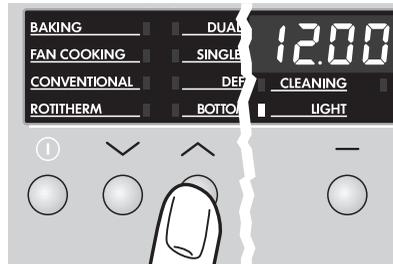

3. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
4. Then wash out the oven with warm water and washing-up liquid, and dry.
5. Wipe off the front of the unit with a damp cloth only.
6. After cleaning switch off the oven lighting with selector button .

# Operating the Oven

## The Electronic Oven Control

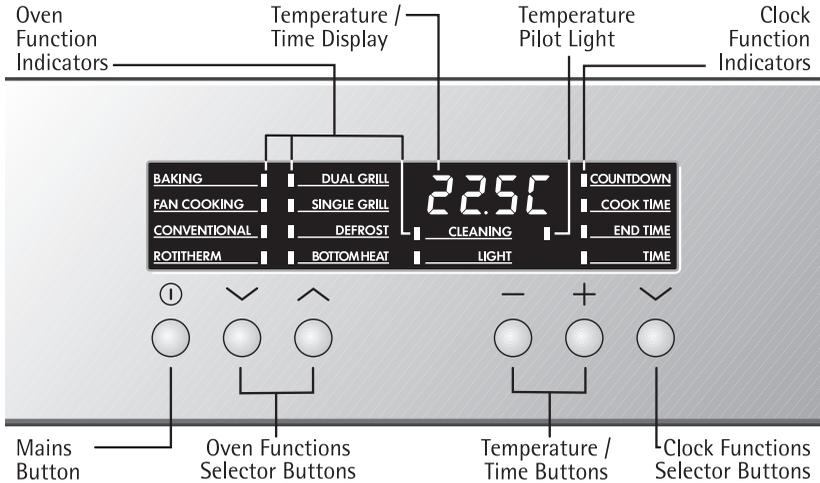

### **i** General information

- Always switch the appliance on first using the mains button ①.
- When the function indicator is on the oven starts to heat up and the set time begins to count down.
- The oven lighting comes on as soon as an oven function is selected.

## Oven Functions

The oven has the following functions:



The BAKING, CONVENTIONAL and ROTITHERM functions include an **automatic fast warm up**. This ensures that the selected temperature is reached as quickly as possible.

### BAKING

Suggested temperature: 150 °C

For baking cakes on **one level** and for pastries that need more browning and a crispy base. These include such foods as pizza, quiche lorraine, and cheese cake.

Set oven temperatures 20-40 °C lower than when using conventional.

Conventional is used and in addition the fan is switched on.

### FAN COOKING

Suggested temperature: 150 °C

For **baking on up to three levels** at the same time.

Set oven temperatures 20-40 °C lower than when using conventional.

The rear wall heating element is used and in addition the fan is switched on.

### CONVENTIONAL

Suggested temperature: 200 °C

For **baking** and **roasting on one level**.

The top and bottom heating elements are in use.

### ROTITHERM

Suggested temperature: 180 °C

For **roasting** larger pieces of meat or poultry on one level. This function is also suited to **cooking foods au gratin** and **browning**.

The grill heating element and top heat operate alternately with the fan.

## DUAL GRILL

Suggested temperature: 300 °C

For **grilling larger quantities** of flat foods such as steaks, escalopes or fish, or for **toasting**.

Top heat and the grill heating element are in use.

## SINGLE GRILL

Suggested temperature: 300 °C

For **grilling** flat foods placed on the **middle of the shelf** such as steaks, escalopes or fish, or for **toasting**.

The grill heating element is in use.

## DEFROST

Temperature setting: 30 °C

To **begin to thaw and to defrost** such items as flan, butter, bread, fruit or other **frozen foods**.

For this function the fan operates **without** heating.

## BOTTOM HEAT

Suggested temperature: 150 °C

For **crisping and browning** cakes with **crispy bases**.

The bottom heating element is in use.

## CLEANING

For cleaning the oven.

Using this oven function you can pre-heat the oven to the optimum temperature for oven cleaners that require a heated oven to take effect.

The grill heating element, top heat and fan are in use.


## LIGHT

To switch the oven lighting on and off.

The oven lighting is switched on automatically as long as the oven is in operation.

## Switching On Oven Functions

1. Switch the appliance on with the mains button .
2. Press selector buttons  or  until the required function indicator is on.

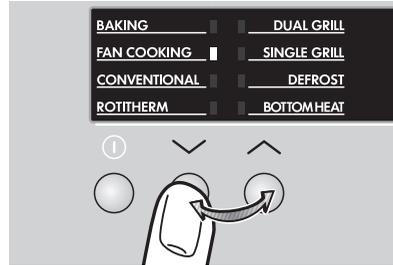

A suggested temperature will appear in the temperature display. The temperature pilot light comes on while the oven is heating up.



## Changing the Oven Temperature


Press the  or  button to increase or decrease the temperature.

The temperature may be set at intervals of 5 °C.




## Changing the Oven Function

Press buttons  or  repeatedly until the required function indicator is on.

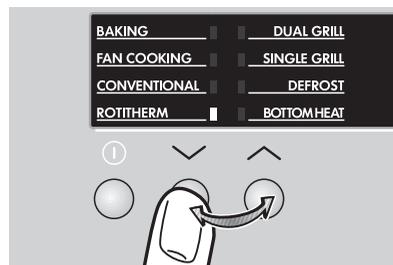

## Switching the Oven Off

To switch the oven off press the selector buttons  or  repeatedly until all function indicators are off.

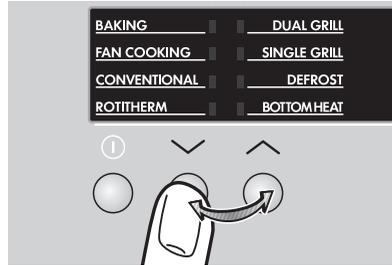

### Cooling fan

The fan comes on automatically when the oven is in use in order to keep the surfaces of the appliance cool. Once the oven has been switched off, the fan continues running to cool down the appliance and then switches itself off automatically.


## Switching the Oven Lighting On and Off

You can also switch on the oven lighting without an oven function.

1. Switch on the appliance using the mains button .

2. Press selector button  once for oven functions.

The "LIGHT" function indicator comes on and the oven lighting is switched on.

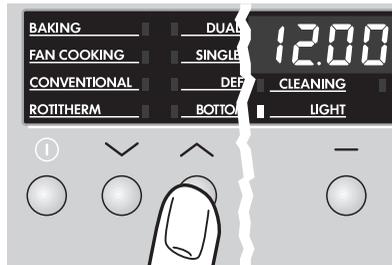

3. Press selector button  once for oven functions.

The oven lighting is switched off.



## Inserting the Shelf and Universal Baking Tray




### Anti-tip device

All slide-in units have a small bulge on the left and right. This bulge is an anti-tip device and must always point to the rear of the oven.


### Tray or universal baking tray:

The anti-tip device must point towards the rear of the oven.

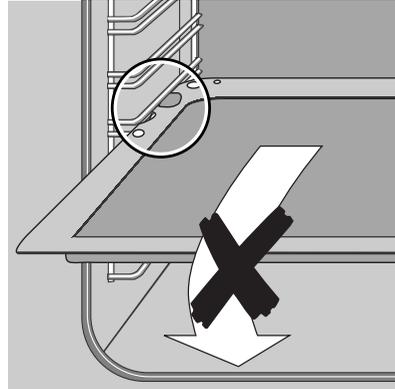


### Inserting shelf:

Insert the shelf unit with both guide rails pointing upwards. The anti-tip device must point downwards and be positioned to the rear of the oven compartment.

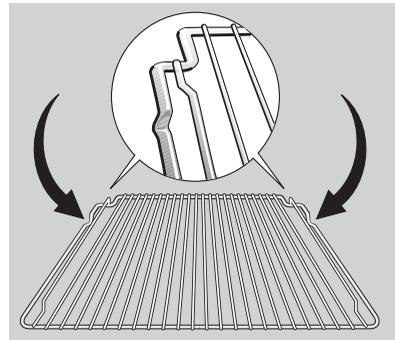

### Inserting shelf and tray:

When the shelf unit and universal baking tray are used together, carefully place the shelf anti-tip device in the bulges on the tray.

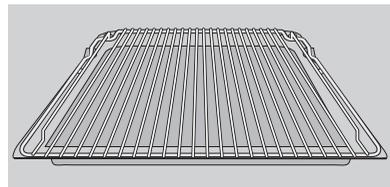

## Attaching/Removing the Grill Pan Handle

The handle is particularly useful for removing the grill pan and tray more easily from the hot oven.


### Attaching the handle

Insert **the handle** at an angle from above into the recess in the side of the grill pan (1) lift it gently and then lower it (2) until you hear it click into place.



**Warning:** Risk of burning!

**Important:** Check that the handle is securely attached!

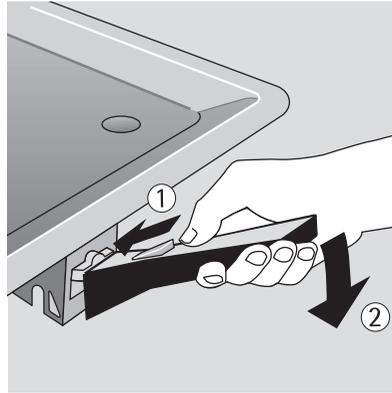


### Removing the handle

Press the release button on the top of the handle (1) and lift up the handle (2) to remove it.



**Important:** Never leave the handle in the heated oven! Overheating can cause the handle to deform or break.

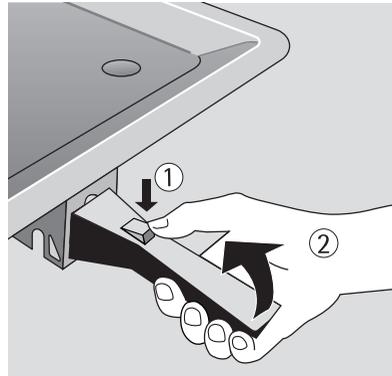

## Clock Functions

### COUNTDOWN

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

### COOK TIME

To set how long the oven is to be in use.

### END TIME

To set when the oven is to switch off again.

### TIME

To set, change or check the time.  
(See also section "Before Using for the First Time".)



### General information

- Before setting the time always switch the appliance on using the mains button .
- After a clock function has been selected the relevant function indicator will flash for approx. 5 seconds. During this time the required times can be set or changed using the  or  button.
- After the required time has been set the function indicator will flash again for approx. 5 seconds. After this the function indicator will stay on. The set time will begin to count down.

## COUNTDOWN

1. Repeatedly press selector button  until the COUNTDOWN function indicator flashes.




2. Using buttons  or  set the required countdown. (Max. 2 hours and 30 minutes.)



After approx. 5 seconds the display will show the remaining time. The COUNTDOWN function indicator is on.



When the time has elapsed the function indicator will flash and an acoustic signal will sound for 1 minute.

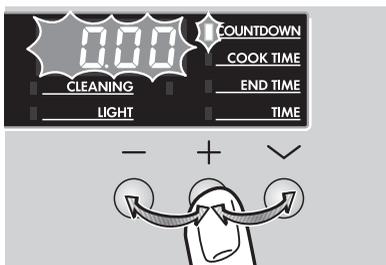

To switch the acoustic signal off: press any button

## COOK TIME

1. Select oven function and temperature.
2. Press selector button  repeatedly until the COOK TIME function indicator flashes.



3. Using buttons  or  set the required cooking time.




After approx. 5 seconds the display will switch to the oven temperature set. The COOK TIME function indicator will come on and the oven will start to work at once.



When the cooking time has elapsed the function indicator will flash, an acoustic signal will sound for 2 minutes and the oven will switch off.

To switch the acoustic signal off: press any button

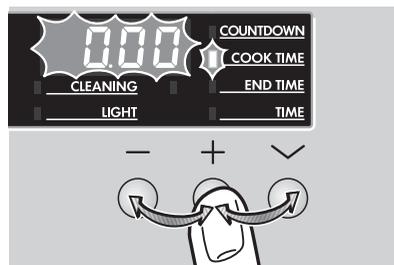

## END TIME

1. Select oven function and temperature.
2. Press selector button  repeatedly until the END TIME function indicator flashes.



3. Using the  or  buttons set the time at which you require the oven to switch off.



After approx. 5 seconds the display will switch to the oven temperature set.

The END TIME function is on.



When the time has elapsed the function indicator will flash, an acoustic signal will sound for 2 minutes and the oven will switch off.

To switch the acoustic signal off: press any button



### COOK TIME and END TIME combined



COOK TIME and END TIME can be used together if the oven is to switch on and off automatically at a **later time**.

1. Select oven function and temperature.
2. Using the COOK TIME function set the time required for the dish to cook.  
E.g., 1 hour.



3. Using the END TIME function set the time at which the dish is to be ready.  
E.g., 14:05.



The COOK TIME and END TIME function indicators will come on and the time will appear in the display.

e.g., 12:05.

The oven will switch on automatically at the calculated time.

E.g., 13:05.



And will switch off again when the given time has expired.

E.g., 14:05.



## Changing TIME

1. Press selector button  repeatedly until the TIME function indicator flashes.



2. Using buttons  or  set the current time.



3. After approx. 5 seconds the function indicator will stop flashing and the clock will display the set time. The appliance is ready for use again.



The TIME can only be changed if the child safety feature is switched off and neither COOK TIME nor END TIME has been set.

## Other Functions



### Switching Off the Time Display

By switching off the time display you can save energy.



The display can only be switched off if the oven is also switched off.

#### Switching off the time display

1. If necessary **switch off** the appliance with the mains button.
2. Press button  and clock functions selector  simultaneously until the display goes dark.



As soon as the appliance is used again the display will automatically switch on.

The next time the appliance is switched off the time display will again go out.

To display the time constantly again the time display must be switched on again.

#### Switching on the time display

1. If necessary **switch off** the appliance with the mains button.
2. Press button  and clock functions  simultaneously until the display reappears.

## Oven Child Safety Feature


The oven is equipped with a child safety feature. As soon as the child safety feature is activated, the oven cannot be used.



To activate the child safety feature, there must be no oven function selected.

### Activating the child safety feature

1. If necessary, switch on the appliance using the mains button.
2. Hold down oven function selector buttons  and  simultaneously until "SAFE" appears in the oven display.

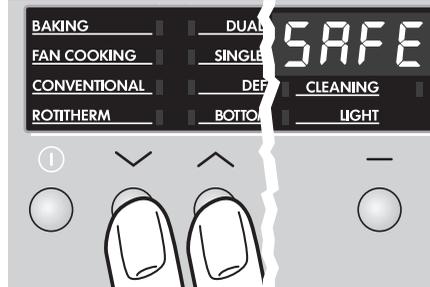

The child safety feature has now been activated.

### Deactivating the child safety feature

Hold down oven function selection buttons  and  simultaneously for approx. 2 seconds.

The child safety feature has now been deactivated and the oven is again ready for use.




Switching off the appliance with the mains button does not cancel the child safety feature.

## Button Locking Feature

To prevent a set oven function being adjusted unintentionally.

### Activating the button locking feature

1. If necessary, switch on the appliance using the mains button.
2. Select oven function.
3. Hold down oven function selector buttons  and  simultaneously for approx. 2 seconds until "LO" appears in the display. The button locking feature has now been activated.

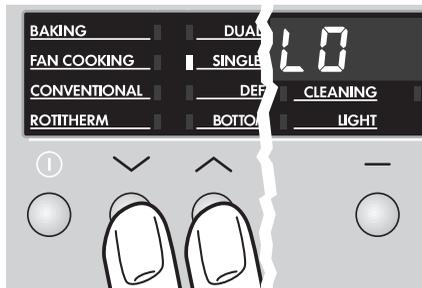

### Deactivating the button locking feature

Hold down oven function selection buttons  and  simultaneously for approx. 2 seconds.

The button locking feature is automatically deactivated when the appliance is switched off.

## Oven Safety Cut-out



If, after a certain period of time, the oven is not switched off or the temperature not changed, the oven switches itself off automatically.

The function indicator for the selected oven function is on.

'0.00' flashes in the temperature/time display and an acoustic signal will sound.

The temperature pilot light flashes.

### **The oven switches itself off at an oven temperature of:**

30 - 120 °C	after	12.5 hours
120 - 200 °C	after	8.5 hours
200 - 250 °C	after	5.5 hours
250 - 300 °C	after	1.5 hours

### **To restart after a safety cut-out**

Pressing any time selection button switches the oven off, after which it can be restarted.

# Usage, Tables and Tips

## Baking

Use the BAKING, FAN COOKING or CONVENTIONAL oven function for baking.


### Cake tins

- Cake tins made of dark metal and coated tins are suitable for CONVENTIONAL.
- Light tins are also suitable for BAKING and FAN COOKING.


### Shelf positions

- Baking using BAKING or CONVENTIONAL should be carried out on one level.
- You can bake on up to 3 levels simultaneously using FAN COOKING :


1 Baking sheet:  
Shelf position 3

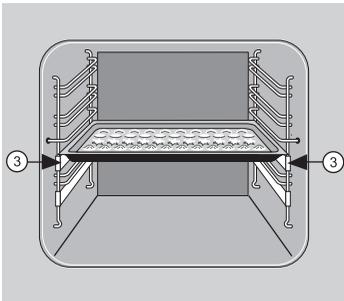


1 Cake tin:  
Shelf position 1

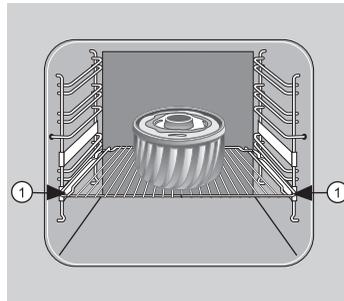

2 Baking sheets:  
Shelf positions 1 and 4

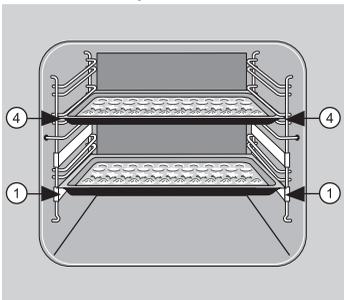

3 Baking sheets:  
Shelf positions 1, 3 and 5

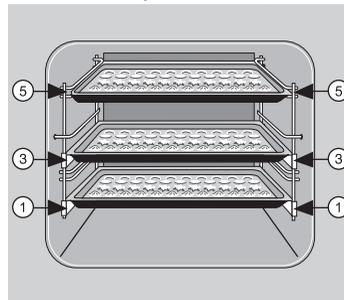

## General information

- Please note that the shelf positions are counted from bottom to top. Always place cakes in cake tins in the middle of the shelf. You can also bake two cakes simultaneously using BAKING or CONVENTIONAL. In this case place the tins side by side on the shelf. The cooking time is then increased only slightly.
- Always preheat the oven when using the CONVENTIONAL oven function.

## Notes on the baking tables

In the tables you will find information on temperatures, cooking times and shelf positions for a selection of recipes.

- Ranges are given for the temperature and cooking time since these are dependent on the mixture, quantity and cake tin used.
- When baking several cakes on baking sheets or in cake tins, the cooking time can be 10-15 minutes longer.
- Moist items (e.g. pizzas, fruit cakes, etc.) should be cooked on a maximum of two levels.
- When using for the first time, we recommend setting the lower temperature. If increased browning is required or the cooking time is too long, select a higher temperature.
- If you cannot find any specific information for one of your own recipes, use information on a similar recipe for guidance.
- Variations in the height of the item to be baked can lead to different degrees of browning at the start of baking. In this case, **please do not change the temperature setting**. Variations in the amount of browning will even themselves out during baking.



Switch off the oven 10-15 minutes before the end of the cooking time to make use of the residual heat.

Unless otherwise stated the information in the tables applies for a cold oven.

## Baking Tables

### Baking on one level

Cakes, Biscuits, Bread, Pies	BAKING		CONVENTIONAL		Time Hours: Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. <sup>1</sup> °C	
<b>Using cake tins</b>					
Cakes in pound cake tins	1	<b>150-160</b>	1	160-170	1:00-1:10
Sandcakes/ Cakes in loaf tins	1	<b>150-160</b>	1	160-170	1:15-1:30
Madeira cake	1	<b>150-160</b>	1	160-170	1:00-1:10
Dundee cake	1	<b>130-140</b>	1	<b>140-150</b>	2:30-3:00
Large Christmas cake (10")	1	<b>130</b>	1	<b>130-140</b>	4:30-5:00
Victoria Sandwich	2	<b>160</b>	2	<b>180-190</b>	0:25-0:35
Pastry cases	3	<b>180-190</b>	2	210-220	0:10-0:25
Bakewell tart	-	<b>160-170</b>	1	180-190	0:45-0:55
Swiss roll	-	-	3	<b>180-200</b>	0:10-0:15
Flans Et quiches	2 or 1	<b>170-180</b>	2	<b>180-200</b>	0:30-0:50
<b>Using baking sheets</b>					
Short bread	3	<b>140-150</b>	3	<b>150-170</b>	0:40-0:50
Biscuits	3	<b>150-170</b>	3	<b>180-200</b>	0:15-0:25
Macaroons	3	<b>140-150</b>	3	<b>150-170</b>	0:25-0:35
Apple strudel	3	<b>170-180<sup>1</sup></b>	3	210-220	0:30-0:50
Choux pastry buns	3	160-170 <sup>1</sup>	3	<b>200-210</b>	0:20-0:35
Buns / cup cakes	3	<b>150-160<sup>1</sup></b>	3	<b>190-210</b>	0:25-0:35
Scones	3	<b>200</b>	3	<b>220-240</b>	0:10-0:15
Meringues	-	-	3	<b>100-120</b>	3:30-4:30

Cakes, Biscuits, Bread, Pies	BAKING		CONVENTIONAL		Time
Sausage rolls	3	<b>170-180<sup>1</sup></b>	3	<b>210-220</b>	0:20-0:35
	<b>Shelf- position from bottom</b>	<b>Temp. °C</b>	<b>Shelf position from bottom</b>	<b>Temp. °C</b>	<b>Hours: Min.</b>
Pizza	4	<b>180-200</b>	4	<b>200-220</b>	0:30-0:50
<b>Bread</b>					
Wholemeal bread	-	-	1	<b>220-240</b>	0:40-0:45
White bread	-	-	1	<b>210-230</b>	0:40-0:45

1) **Pre-heat oven.**

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

## Baking on several levels

Type of Cake or Pastry	FAN COOKING			Time Hr.: Min.
	Shelf position from bottom		Temp. °C	
	2 Levels	3 Levels		
<b>Using cake tins</b>				
Victoria Sandwich	1 + 4	-	160-170	0:25-0:35
Pastry cases	1 + 4	-	170-190	0:10-0:25
<b>Using baking sheets</b>				
Short bread	1 + 4	1. 3. u. 5.	<b>140-150</b>	0:40-0:50
Biscuits	1 + 4	1. 3. u. 5.	<b>150-170</b>	0:15-0:25
Macaroons	1 + 4	1. 3. u. 5.	<b>140-150</b>	0:25-0:35
Choux pastry buns	1 + 4	-	<b>160-170<sup>1</sup></b>	0:20-0:35
Buns / cup cakes	1 + 4	1. 3. u. 5.	<b>150-160<sup>1</sup></b>	0:25-0:35
Scones	1 + 4	-	<b>190-200<sup>1</sup></b>	0:10-0:15
Sausage rolls	1 + 4	-	<b>170-180<sup>1</sup></b>	0:20-0:35

### 1) Pre-heat oven.

Select the lower temperature to start with, then select the higher one only if required.

## Tips on Baking

	Tip
This is how to tell if your cake is cooked through	Push a wooden skewer into the highest point of the cake. When no more cake mixture sticks to the wood, you can switch off the oven and utilise the residual heat.
The cake collapses (is sticky, not properly cooked through, water marks)	Check your recipe. Next time use less liquid. Observe mixing times, particularly when using kitchen appliances.
The cake is too light	Next time select a dark cake tin or place the cake one level lower.
Cake with moist topping/ cake is not cooked through, is unevenly browned	Next time bake at a lower temperature and increase the cooking time.

**Table: Desserts**

Desserts	BAKING		CONVENTIONAL		FAN COOKING		Time Hr.: Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. <sup>1</sup> °C	Shelf position from bottom	Temp. °C	
Apple pie	3	<b>180-190</b>	1	210-220	2	180-190	0:45-0:50
Rice pudding	-	-	1	<b>150</b>	2	130-140	2:00-2:30
Fruit crumble	1	<b>160</b>	2	170-190	2	160	0:50-1:10
Pineapple upside down cake	2	<b>160</b>	2	<b>180-190<sup>1</sup></b>	2	<b>160</b>	0:35-0:45
Pavlova	2	<b>130</b>	2	140-150	2	130	1:00-1:10
Baked custard	-	-	2	160-170	2	150-160	0:45-1:00
Baked apples	2	<b>160-170</b>	2	190-210	2	160-170	0:40-1:00
Bread and butter pudding	2	<b>170-180</b>	2	200-210	2	170-180	0:40-0:55
Apple charlotte	2	<b>180-190</b>	2	<b>210-220</b>	2	<b>180-190</b>	0:40-0:55
Soufflé - sweet/savoury	1	<b>190-200</b>	2	<b>200-210</b>	2	<b>170-190<sup>1</sup></b>	0:30-0:45

**1) Pre-heat oven.**

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

## Roasting

For roasting, use the FAN COOKING, ROTITHERM or CONVENTIONAL oven function.

### Roasting dishes

- Any heat-resistant dish is suitable for roasting.
- If the dish has plastic handles, ensure that the handles are heat-resistant.
- Large roasts can be roasted **directly on the universal sheet or on the shelf with the universal sheet underneath** (e.g. turkey, goose, 3-4 chickens, 3-4 knuckles).
- When roasting meat choose a dish which is just a little larger than the joint itself to retain the juices in a small area thus preventing fat from spitting and soiling the oven.
- We recommend roasting all lean types of meat **in a casserole with a lid** (e.g. veal, pork or beef pot roasts, frozen meat). This way the meat will remain moist.
- You can roast all types of meat that should have a crispy exterior **in a casserole without a lid** (e.g. pork, meat loaf, lamb, duck, 1-2 knuckles, 1-2 chickens, small poultry, sirloin, fillet, game).
- **Tip:** If you use dishes for roasting (particularly for small amounts), the oven will not get so dirty!

### Shelf positions

- Please see the following table for the shelf positions to use.

### Notes on the roasting tables

Information is given in the table on suitable oven functions, temperature settings, cooking times and shelf positions for various types of meat. The cooking times are for guidance only.

- We recommend roasting meat and fish **in the oven from a weight of 1 kg**.
- In general the CONVENTIONAL function is suitable for very lean meat, fish and game.
- For all other types of meat (particularly poultry) we recommend the ROTITHERM function, if you are just roasting meat without cooking any other type of food in the oven at the same time.
- If you wish to roast meat and cook other dishes at the same time, use the FAN COOKING function.

- The cooking time required is dependent on the type and quality of the meat.
- To stop juices that exude from the meat burning onto dishes, we recommend adding a little liquid in the roasting dish.
- Turn the roast after approx. 2/3 of the cooking time.



Switch off the oven 10-15 minutes before the end of the cooking time to make use of the residual heat.

**Table: Meat, roasting, casseroles**

Meat	FAN COOKING		CONVENTIONAL		ROTITHERM		Time Hrs. : Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. <sup>2</sup> °C	
<b>Pork</b>							
Shoulder; leg; rolled; boned spare rib; loin of pork	2	<b>170-180</b>	2 or 1	190-210	2	150-160	0:30-0:35 per 450 g/1 lb plus 30-35 mins
<b>Beef</b>							
Inexpensive cuts	2	<b>160-170</b>	2	180-200	-	-	0:35-0:40 per 450 g/1 lb plus 15-20 mins
Prime cuts							
-rare	2	<b>170-180<sup>1</sup></b>	2	200-210 <sup>1</sup>	3 or 2	150-160 <sup>1</sup>	0:15-0:20 per 450 g/1 lb plus 15-20 mins
-medium	2	<b>170-180</b>	2	190-210	3 or 2	150-160	0:20-0:25 per 450 g/1 lb plus 25-25 mins
-well done	2	<b>170-180</b>	2	190-210	2	150-160	0:30-0:35 per 450 g/1 lb plus 25-30 mins
<b>Yorkshire pudding</b>							
- small	3	<b>200<sup>1</sup></b>	2	200-250	3	250	0:10-0:15
- large	2	<b>180-190<sup>1</sup></b>	2	210-250 <sup>1</sup>	2	220-230	0:30-0:40

Meat	FAN COOKING		CONVENTIONAL		ROTITHERM		Time Hrs. : Min.
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. <sup>2</sup> °C	
<b>Lamb</b>	2	<b>170-180</b>	2	190-210	2	<b>150-160</b>	0:30-0:35 per 450 g/1 lb plus 30-35 mins
<b>Veal</b>	2	<b>170-180</b>	2	190-210	3 or 2	150-160	0:30-0:35 per 450 g/1 lb plus 30-35 mins

1)Pre-heat oven.

2)For Rotitherm roasting and joints of 5 lb & over eliminate the additional time.

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

**Table: Roasting, casseroles, au gratin**

Poultry, Game, Fish, Vegetables	Quantity approx.	FAN COOKING		CONVENTIONAL <sup>1</sup>		ROTITHERM <sup>2</sup>		Time Hr.: Min.
		Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	
<b>Casseroles, miscellan.</b>								
Casseroles	1 kg/ 2 lbs	2	<b>150</b>	2	<b>160-170</b>	-	-	2:30-3:00
Lancashire Hot Pot	1 kg/ 2 lbs	2	150-160	2	<b>180-190</b>	-	-	2:15-2:30
Moussaka	1 kg/ 2 lbs	2	<b>170-180</b>	2	210-215	-	-	0:40-0:50

Poultry, Game, Fish, Vegetables	Quantity approx.	FAN COOKING		CONVEN- TIONAL <sup>1</sup>		ROTITHERM <sup>2</sup>		Time  Hr.: Min.
		Shelf posi- tion from bot- tom	Temp. °C	Shelf posi- tion from bot- tom	Temp. °C	Shelf posi- tion from bot- tom	Temp. °C	
Meat Loaf	675 g/ 1.5 lbs	2	<b>170-180</b>	2	<b>200-210</b>	2	<b>160-170</b>	1:00-1:10
<b>Poultry/ Game</b>								
Chicken	1 kg/ 2 lbs	2	<b>170-180</b>	2	<b>200-220</b>	2	<b>160</b>	0:50-1:10
Chicken	1.5 kg/ 3 lbs	2	170-180	2	200-220	2	<b>160</b>	1:15-1:30
Duck	1.5-2 kg/ 3.5-4 lbs	2	180-190	2 or 1	210-220	2	<b>160</b>	1:15-1:45
Goose	3.5-5 kg/ 8-10 lbs	2 or 1	<b>170-180</b>	2 or 1	<b>200 - 210/250</b>	2 or 1	130-140	2:30-3:00
Turkey	2.5-3.5 kg 5-7 lbs	2	<b>160</b>	2 or 1	<b>180-200</b>	2 or 1	140-150	1:30-2:00
Turkey	4-6 kg/ 8-13 lbs	2 or 1	<b>150-160</b>	2 or 1	<b>180-200</b>	2 or 1	<b>130-140</b>	2:30-4:00
Pheasant, Wild Duck, Rabbit	1 kg/ 2 lbs	3 or 2	210	3 or 2	<b>210-220</b>	3 or 2	170-180	0:30-1:00
Partridge/ Pigeon	per 300- 500 g	3 or 2	190-200	3 or 2	<b>210-220</b>	3 or 2	<b>170-180</b>	0:30-0:50

Poultry, Game, Fish, Vegetables	Quantity approx.	FAN COOKING		CONVEN- TIONAL <sup>1</sup>		ROTITHERM <sup>2</sup>		Time  Hr.: Min.
		Shelf posi- tion from bot- tom	Temp. °C	Shelf posi- tion from bot- tom	Temp. °C	Shelf posi- tion from bot- tom	Temp. °C	
<b>Fish (baked, steamed)</b>								
Whole fish	1-1.5 kg/ 2-3 lbs	2	<b>160-170</b>	2	<b>190-210</b>	3 or 2	150-160	0:45-1:15
Fish pies, bakes	750 g- 1 kg/ 1.5-2 lbs	3 or 2	170-190	3 or 2	<b>210-220</b>	3 or 2	<b>160-180</b>	0:30-1:00
<b>Vegetables</b>								
Stuffed pepper/au- bergines		2	<b>180-190</b>	2	<b>210-225</b>	3 or 2	160-180	0:30-1:00
Au gratin dishes		3	<b>180-200</b>	3	220-250	3	<b>180-190</b>	0:15-0:45

1) Pre-heat oven.

2) Place food in suitable containers and position wire shelf as per chart.

The figures printed in bold indicate the **best oven function and temperature** to use in each case.

Select the lower temperature to start with, then select the higher one only if required.

## Grilling

Use the SINGLE GRILL or DUAL GRILL oven function with a temperature of 275 °C for grilling.

**Important: Always pre-heat the empty oven for 5 minutes using the grill function.**

### Ovenware for grilling

- For small amounts use the grill pan and the grill pan grid together for grilling.
- For larger amounts use the wire shelf and the meat tin together for grilling.



**Warning:** The **grill pan handle must be removed** whilst grilling! Always use oven gloves when removing or attaching the grill pan handle.

### Shelf positions

- For grilling flatter foods, always use the **4th shelf position from the bottom.**

### Notes on the grilling table

The grilling times are for guidance only and are dependent on the type and quality of the meat or fish.

- Grilling is particularly suitable for flat pieces of meat and fish.
- Turn over pieces of meat or fish halfway through the grilling time.



**Warning:** Always grill with the oven door shut. !

## Grilling Table

Food		Shelf Level from down	Grilling Time minutes each side
Bacon rashers		4.	2-3
Beef burgers		4.	6-10
Chicken joints		4.	10-15
Chops:	Lamb Pork	4.	7-10 10-15
Fish:	Whole trout Hering Fillet plaice/cod	4.	8-12 4-6
Kebabs		4.	10-15
Kidneys:	Lamb/pig	4.	4-6
Liver:	Lamb/pig	4.	5-10
Sausages		4.	10-15 (turn as required)
Steaks:	rare medium well	4.	3-6 6-8 7-10

## Bio-Functions

The low temperatures that can be set on this oven enable meat to be cooked so that it is particularly tender and juicy, yoghurt can also be made, dough proven and fruit dried in the oven.



Important: The suggested temperature must be changed for all bio-functions!



When roasting at low temperatures you will save up to 20 percent energy than when roasting conventionally.

### Low Temperature Roasting

Use the ROTITHERM oven function for low temperature roasting.

#### Ovenware for roasting

- Any heat-resistant dish is suitable for roasting.
- If the dishes have plastic handles, ensure that the handles are heat-resistant.
- When roasting at low temperatures, always **roast uncovered without a lid.**

#### Shelf positions

- Use the **4th shelf position from the top** for low temperature roasting.

#### General information

Roasting is performed **in 2 stages:**

- Select a high temperature for browning.
- Then change to a lower temperature.

### Notes on the roasting table

The roasting times are only for guidance and are dependent on the type and quality of the meat or fish.

- The thicker and heavier a piece of meat, the longer the browning time and subsequent final roasting time.
- It is necessary to turn whole poultry only.
- Only add vegetables after approx. 2/3 of the browning time.
- **Once the browning time is at an end, do not open the oven door again!**

(Turn poultry before the end of the browning time.) The heat loss will significantly increase the cooking time.

1. Prepare meat as usual (wash, dry, season, tie into specific shape if required, etc.).
2. Select the ROTITHERM oven function.
3. **Change** the suggested temperature to the **browning temperature** given in the table.
4. At the end of the browning time, **change** the temperature to the **final roasting temperature** given in the table.

## Low Temperature Roasting Table

		ROTITHERM			
Food to be Roasted	Weight kg	1st Stage Browning		2nd Stage Final Roasting	
		Temp. °C	Time Min.	Temp. °C	Time Min.
<b>Meat</b>		<b>220</b>			
Roast Beef	1-1.5		25-45	<b>85</b>	30-60
Beef, Veal Fillet	1-1.5		20-40	<b>85</b>	20-40
Saddle of Veal	1-2		30-50	<b>90</b>	20-60
<b>Game</b>		<b>220</b>			
Saddle of Venison	1.5-2		25-45	<b>90</b>	20-60
Leg of Venison	1.5-2		25-45	<b>120</b>	40-120
<b>Poultry</b>		<b>200</b>			
Turkey Breast	1-2		25-50	<b>100</b>	60-150
Chicken	1-1.5		25-40	<b>100</b>	40-60
Duck	1.5-2.5		30-40	<b>100</b>	40-60
<b>Fish</b>		<b>180</b>			
Sea Trout	0.5-1		15-20	<b>80</b>	10-20
Salmon (Middle Piece)	1-2		25-40	<b>80</b>	10-20
Zander / Pike	0.7-1.5		15-35	<b>80</b>	10-20



**We recommend low temperature roasting for:**  
tender, lean pieces of meat and fish.

**Low temperature roasting is not suitable for:**  
e.g. pot roasts, roast pork.

## Making Yoghurt

Use the CONVENTIONAL oven function for making yoghurt.

### Ovenware for making yoghurt

- Use cups or glasses of approx. 150 ml capacity as containers for yoghurt, cover with foil or a lid.

### Shelf position

- Place the shelf in the **3rd shelf position from the top**.

1. Bring the milk to the boil (e.g. 1 litre for 6-8 portions).
2. Leave the milk to cool to 40 °C.
3. Stir pure yoghurt into the milk, pour into the containers and cover.
4. Place the containers on the shelf.
5. Select the CONVENTIONAL oven function and **change the suggested temperature to 40 °C**.
6. Remove the yoghurt after approx. 5-8 hours (as soon as it set).

## Proving Dough

Use the CONVENTIONAL function for proving dough.

### Ovenware for making yoghurt

- Place the dough in a bowl that is heat resistant up to 40 °C.

### Shelf position

- Place the shelf in the **3rd shelf position from the top**.

1. Cover the bowl containing the prepared dough with transparent film and place on the shelf.
2. Select the CONVENTIONAL oven function and **change** the suggested temperature **to 40 °C**.
3. Leave the dough to rise until it has doubled in size.

## Drying Fruit, Vegetables

Use the FAN COOKING oven function for drying.

### Ovenware for making yoghurt

- Cover the shelf or baking sheet with grease-proof paper.

### Shelf Position

- You can dry fruit on up to 2 levels simultaneously.
- Place the shelf or baking sheet in the **2nd and 5th shelf positions from the top.**

### General information

Suitable for drying are:

- Fruits like apples, pears, plums.  
Only use fully ripe fruit of good quality!
  - Mushrooms
1. Wash the fruit or vegetables, peel if required, chop and dry.
  2. Spread the fruit or vegetables on the shelf or baking sheet.
  3. Select the FAN COOKING oven function and change the suggested temperature to 50-70 °C.
  4. Turn fruit during drying.
  5. Remove the fruit when it can still be bent but no more juice is produced when pressed.

Food	Quantity	FAN COOKING	
		Temperature °C	Time Hr.
Apple rings 1/2 cm thick	700g	50-70	5-8
Plums	1-1.2kg	50-70	8-10
Mushrooms <sup>1</sup>	500g-1kg	50-80	5-7

1) The time is dependent on the moisture content of the food.

## Defrosting

To defrost food, use the oven's function DEFROST at 30 °C.

### Defrosting dishes

- Put the food on a plate and put the plate on the tray.
- Use only parchment paper or film to cover the food. Do not use plates or dishes as they significantly increase the defrosting time.

### Shelf levels

- For defrosting, insert the tray in the **2nd level from the bottom**.

### Notes on the defrosting table

The table below gives you a few reference points on the defrosting times.

## Defrosting Table

Meal	Defrosting time Min.	Standing time Min.	Note
Chicken, 1000 g	100-140	20-30	Place the chicken on an upside-down saucer on a large plate. Defrost open and turn after half the time, or defrost covered with film.
Meat, 1000 g	100-140	20-30	Defrost open and turn after half the time or cover with film.
Meat, 500 g	90-120	20-30	Defrost open and turn after half the time or cover with film.
Trout, 150 g	25-35	10-15	Defrost open
Strawberries, 300 g	30-40	10-20	Defrost open
Butter, 250 g	30-40	10-15	Defrost open
Cream, 2 x 200 g	80-100	10-15	Defrost open (Cream can also be whipped well if parts of it are still slightly frozen)
Flan, 1400 g	60	60	Defrost open.

## Preserving

Use the **BOTTOM HEAT** oven function for preserving.

### Preserving jars

- For preserving use only commercially available preserving jars that are all the same size.



**Screw-top jars, jars with a bayonet fastening and metal containers are unsuitable.**

### Shelf positions

- Use the **1st shelf position from the bottom** for preserving.

### Notes on preserving

- Use the universal tray for preserving. There is room for up to 6 preserving jars each with a capacity of 1 litre on this tray.
- The preserving jars should all be filled to the same level and closed.
- Position the preserving jars on the universal baking tray so that they do not come into contact with one another.
- Pour about 1/2 litre of water into the universal baking tray so that there is sufficient moisture in the oven.
- As soon as bubbles begin to appear in the liquid in the first jars (for 1-litre jars this takes about 35-60 minutes), switch off the oven or reduce the temperature to 100 °C (see table).

## Preserving Table

Preserves	Temperature in °C	Preserving time until bubbles form Mins.	Continued cooking at 100 °C Mins.	Standing time with oven switched off
<b>Soft fruit</b>				
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	-	-
Unripe gooseberries	160-170	35-45	10-15	-
<b>Stone fruit</b>				
Pears, quinces, plums	160-170	35-45	10-15	-
<b>Vegetables</b>				
Carrots	160-170	50-60	5-10	60
Mushrooms	160-170	40-60	10-15	60
Gherkins	160-170	50-60	-	
Mixed pickles	160-170	50-60	15	-
Kohlrabi, peas, asparagus	160-170	50-60	15-20	-
Beans	160-170	50-60	-	-
<b>Plum purée</b>	160-170 50	45 -	6-8 Hrs.	- -

# Cleaning and Care



**Warning:** For safety reasons cleaning the appliance with a steam jet cleaner or high-pressure water cleaner is **not permissible!**

## Exterior of the Appliance

Wipe the front of the appliance with a soft cloth dipped in warm soapy water.

- Do not use scourers, caustic cleaners or abrasive items.
- Use commercially available cleaners for metal fronts.

## Oven Interior

### Cleaning after each use



**Warning:** The oven must be switched off and cold before cleaning.



Clean the appliance after each use. This is the easiest way to remove spills and prevents them being burnt on.

1. Switch on the oven lighting for cleaning.
2. Wash the oven after each use with warm water and washing up liquid and then dry it. Do not use any abrasive items.



Remove stubborn marks with special oven cleaners.

## “CLEANING” oven function

Using the CLEANING oven function you can pre-heat the oven to the optimum temperature for oven sprays to take effect.



**Important:** Only use oven sprays that require a heated oven. **Refer to the manufacturer's instructions!**

1. Press selector button  or  repeatedly until the CLEANING function indicator is illuminated.

“CL” will appear in the temperature/time display.

The oven will now heat up to the necessary temperature.

After approx. 15 minutes the first acoustic signal will sound.

After a further 5 minutes a second acoustic signal will sound for 2 minutes.

“0.00” will flash in the display.



The acoustic signal can be switched off by pressing any button. The time will then appear in the display.

The optimum temperature has now been reached for the spray to take effect.

2. Spray the oven spray into the interior of the oven and leave to take effect (See manufacturer's instructions!).
3. Wipe the oven clean.

## Accessories



Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

## Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

### Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then unhitch at the back (2).

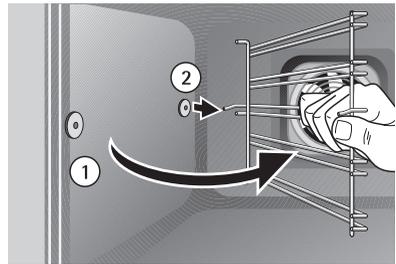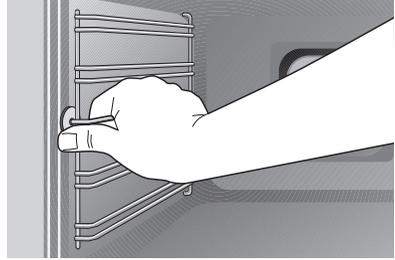


### Fitting the shelf support rails



**Important!** The rounded ends of the guide rails must be pointing forwards!

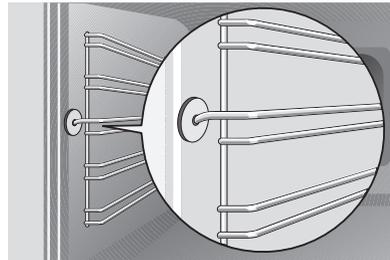

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

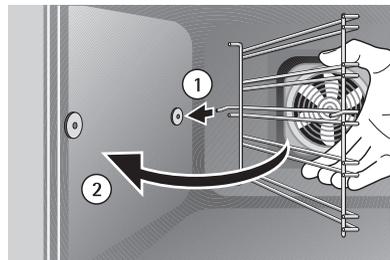

## Oven Lighting



**Warning:** There is a danger of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Remove the fuses in the fuse box or switch off the circuit breaker.



Place a cloth on the oven floor to protect the oven light and glass cover.



### Changing the rear oven light/Cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary:  
**replace bulb with a 40 watt, 230 V, 300 °C heat-resistant, oven light bulb.**
3. Refit the glass cover.

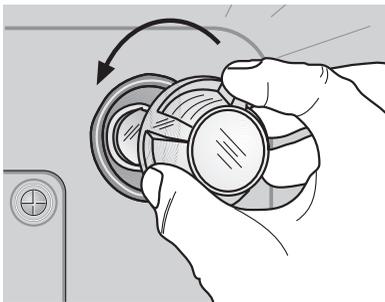

### Changing side oven light/Cleaning glass cover

1. Remove the left shelf support rail.
2. Remove the glass cover with the aid of a narrow, blunt implement (e.g., teaspoon) and clean it.
3. If necessary:  
**replace bulb with a 25 watt, 230 V, 300 °C heat-resistant, oven light bulb.**
4. Refit the glass cover.
5. Insert the shelf support rail.

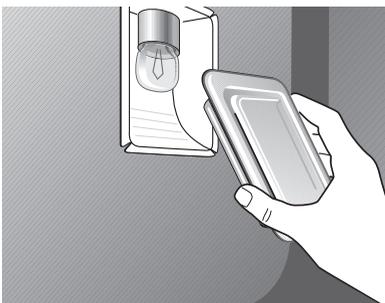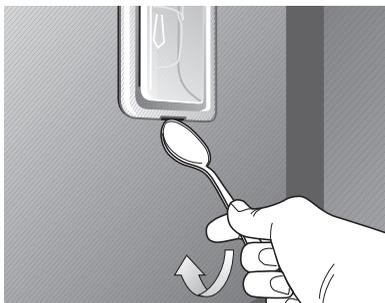

## Cleaning the Oven Ceiling

The upper heating element can be folded down to make it easier to clean the oven ceiling.

### Folding down the heating element



**Warning:** Only fold down the heating element when the oven is switched off and there is no risk of being burnt!

1. Remove the side shelf support rails.
2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven.
3. The heating element will now fold down.



**Caution:** Do not use force to press the heating element down! The heating element might break.





### Cleaning the oven ceiling

#### Repositioning the heating element

1. Move the heating element back up towards the oven ceiling.
2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug.
3. Settle it onto the support.
4. Insert shelf support rail.



**Important:** The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven (2).

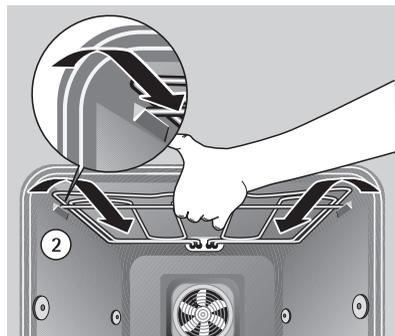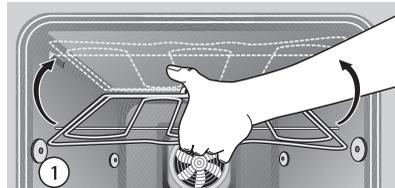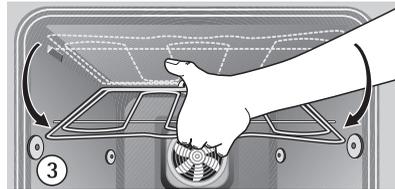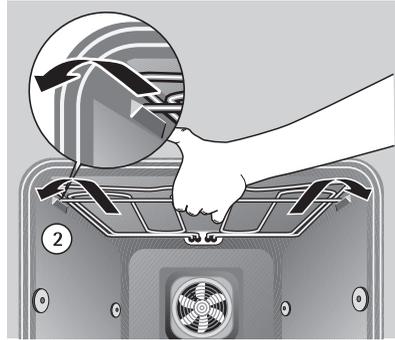


## Oven Door

The oven door of your appliance may be removed for cleaning.


### Removing the oven door

1. Open the oven door completely.
2. **Completely** fold back the **brass-coloured clamping lever** on **both** door hinges.
3. Grip the oven door with both hands on the sides and close it to about  $\frac{3}{4}$  **going past the point of resistance**.
4. Pull the door away from the oven (**Caution: heavy!**).
5. Place the door, with the outer surface downwards, on a soft, flat surface, for example a blanket, to avoid scratches.

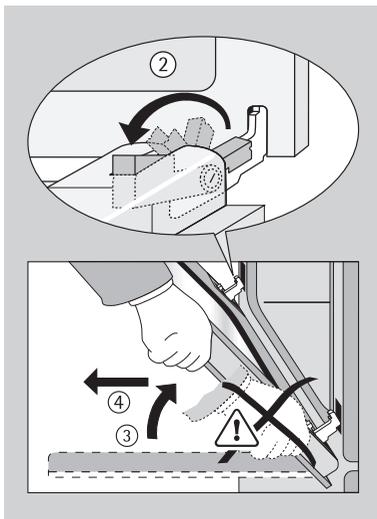

### Hanging the oven door

1. With both hands take hold of the sides of the door from the side on which the handle is positioned.
2. Hold the door at an angle of approx.  $60^\circ$ .
3. Slide the door hinges **simultaneously** as far as possible into the two slots on the right and left at the bottom of the oven.
4. Lift the door up until resistance is met and then open fully.
5. Lift the brass-coloured clamping levers on both door hinges back to their original position.
6. Close the oven door.

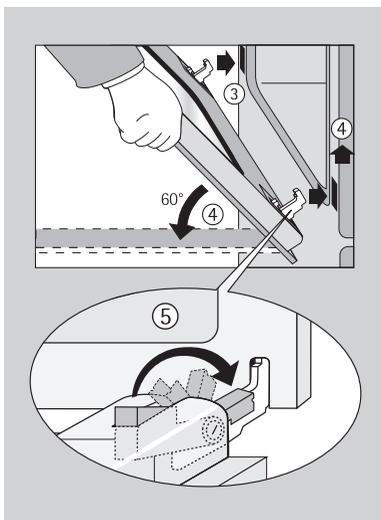

## Oven Door Glass

The oven door is fitted with three glass panels mounted one behind the other. The inner panels may be removed for cleaning.




**Warning:** Carry out the following steps only when the oven door is un-hinged! When left on its hinges, the door could rise rapidly due to the lighter weight when the glass is removed and could cause injury.



**Important:** Using force, especially on the edges of the front glass panel, may break the glass.


### Removing the top door glass

1. Unhinge the oven door and place it on a soft, flat surface with the handle facing down.
2. Take hold of the upper glass panel at the lower edge and slide it against the spring pressure in the direction of the oven door handle until it is free at the base.
3. Raise the panel **gently** at the base and pull out.

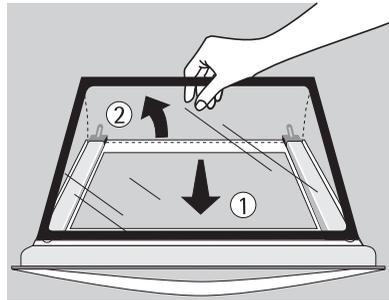

### Removing the middle door glass


1. Grip the bottom edge of the middle glass panel and push it in the direction of the oven door handle until it is free at the base.
2. Raise the panel gently at the base and pull out.

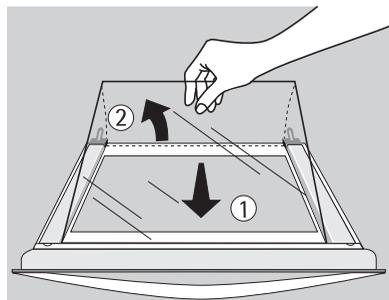

### Clean the glass door panels


### Inserting the middle door glass

1. Insert the middle glass panel at an angle from above into the section of the door in which the handle is located.
2. Lower the middle glass panel and slide it under the lower bracket towards the lower door edge as far as it will go.

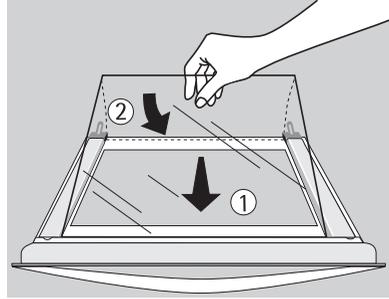

### Inserting the upper door glass

1. Insert the upper glass panel at an angle from above into the section of the door in which the handle is located.
2. Lower the glass panel. Lay the panel against the spring on the lower door edge in front of the retaining section on the handle side and **slide it under the retaining section**. The glass panel must be firmly in position!

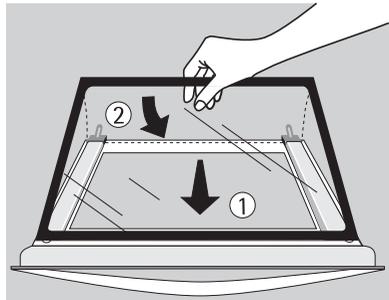

### Re-hang the oven door

## What to do if ...

Symptom	Possible cause	Solution
The oven does not heat up.	The oven has not been switched on.	Switch on the oven.
	The time has not been set.	Set the time.
	The necessary settings have not been made.	Check the settings.
	The circuit breaker (at the household fuse box) has tripped or the fuse has blown.	Check the fuse. If the circuit breaker trips or the fuse blows several times please call an approved electrician.
The oven lighting does not come on.	The oven light bulb has blown.	Replace the light bulb in the oven (see Cleaning and Care).

**If you cannot rectify the fault with the help of the information given above please contact your local Service force Centre.**



**Warning:** Repairs to the appliance must be carried out by qualified service engineers! Improper repairs can give rise to significant hazards for the user. If your appliance needs repairing, please contact your local AEG Service Force Centre.

In-guarantee customers should read the above section, as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

### **Information for appliances with a metal front:**



Due to the cold front of your appliance the inner door glass may steam over briefly if you open the door during or shortly after baking or roasting.

# Technical Data

## Oven Interior Dimensions

Height x Width x Depth	31 cm x 41 cm x 41 cm
Capacity (usable capacity)	52 l

## Regulations, Standards, Directives

This appliance meets the following standards:

- EN 60 335-1 and EN 60 335-2-6  
relating to the safety of electric appliances for household use and similar purposes and
- EN 60 350 or DIN 44546 / 44547 / 44548  
relating to the operating features of household electric cookers, hobs, ovens, and grills.
- EN 55014-2 / VDE 0875 Part 14-2
- EN 55014 / VDE 0875 Part 14 / 1999-10
- EN 61000-3-2 / VDE 0838 Part 2
- EN 61000-3-3 / VDE 0838 Part 3  
relating to basic requirements for electromagnetic compatibility (EMC).

**CE** This appliance complies with the following EC directives:

- 73/23/EEC dated 19.02.1973 (Low Voltage), including amendment 90/683/EEC
- 89/336/EEC dated 03.05.1989 (EMC) including Amendment 92/31/EEC
- 93/68/EWG (markings and labelling).

# Installation Instructions




**Important:** Any electrical installation work must be carried out by a qualified electrician/competent person.

The oven must be installed according to the instructions supplied.




## Safety Instructions for the Installer


- Protection against access to live parts must be guaranteed by the installation.
- The unit in which the appliance is fitted must satisfy the requirements of DIN 68930 in respect of stability.
- This oven must be installed by qualified personnel to the relevant Standards.
- This oven is heavy. Take care when moving it
- Remove all packaging, both inside and outside the oven before using the oven.
- Do not attempt to modify the oven in any way.
- The built-in cooker and hobs are fitted with special connector systems. They may only be combined with units of the corresponding system.

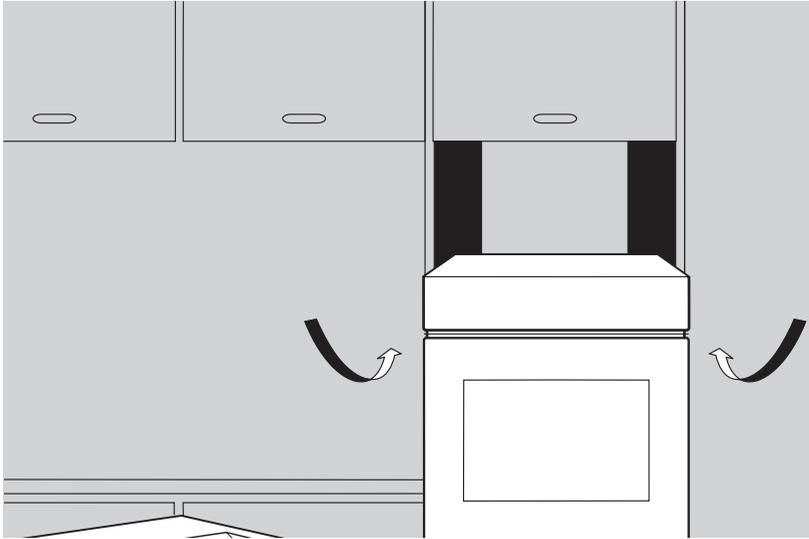


1 This oven can be installed either in-column as shown or under a counter

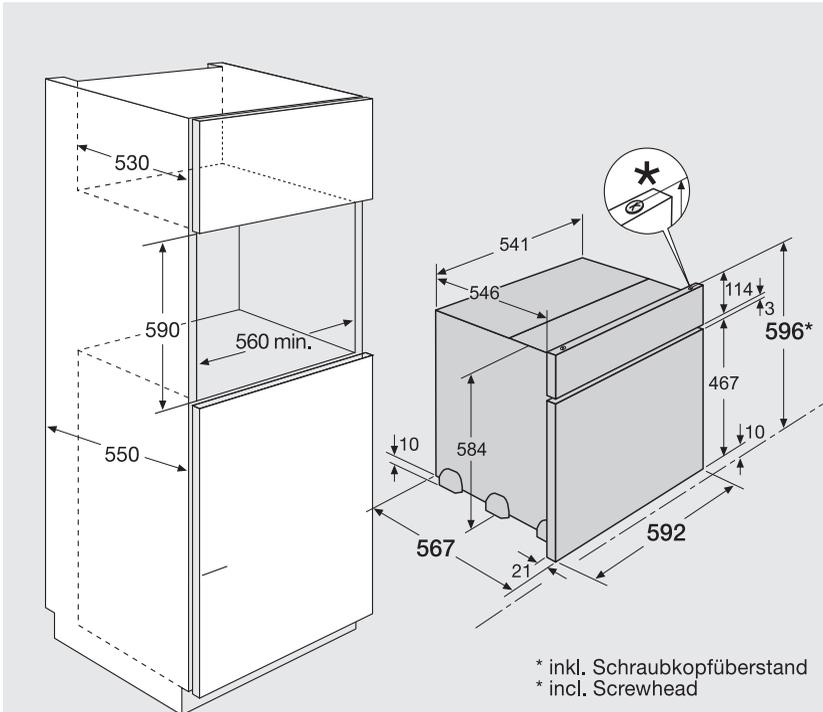


2

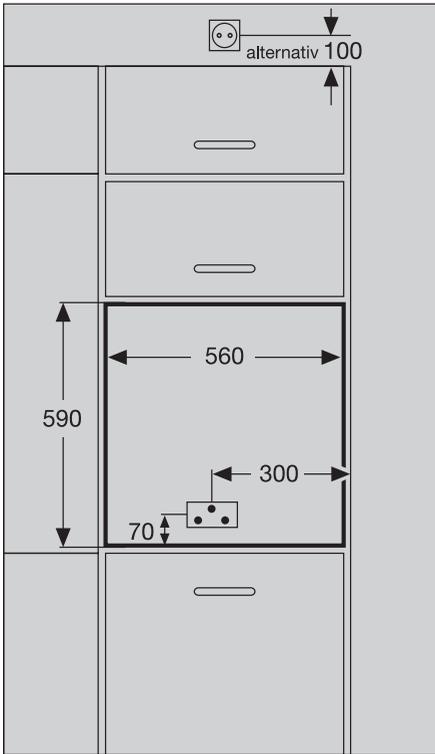


3

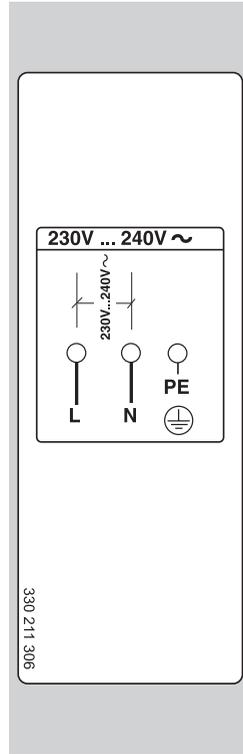


4

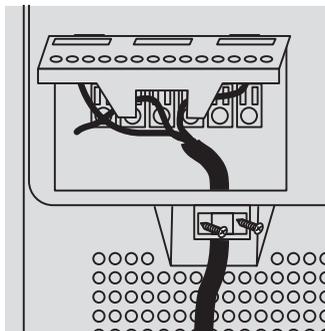


5

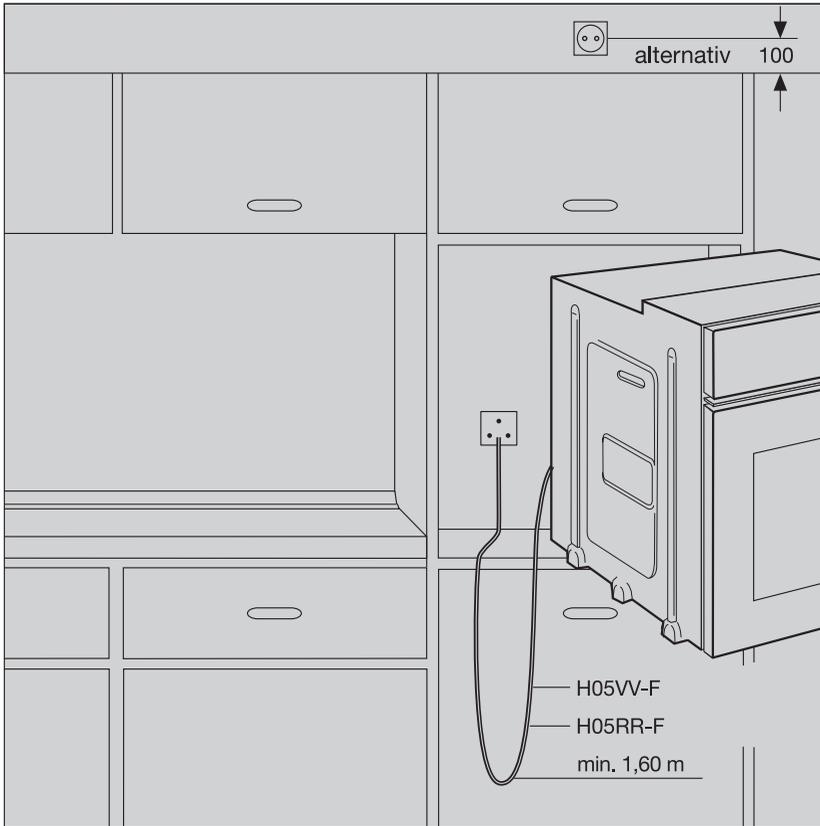


6

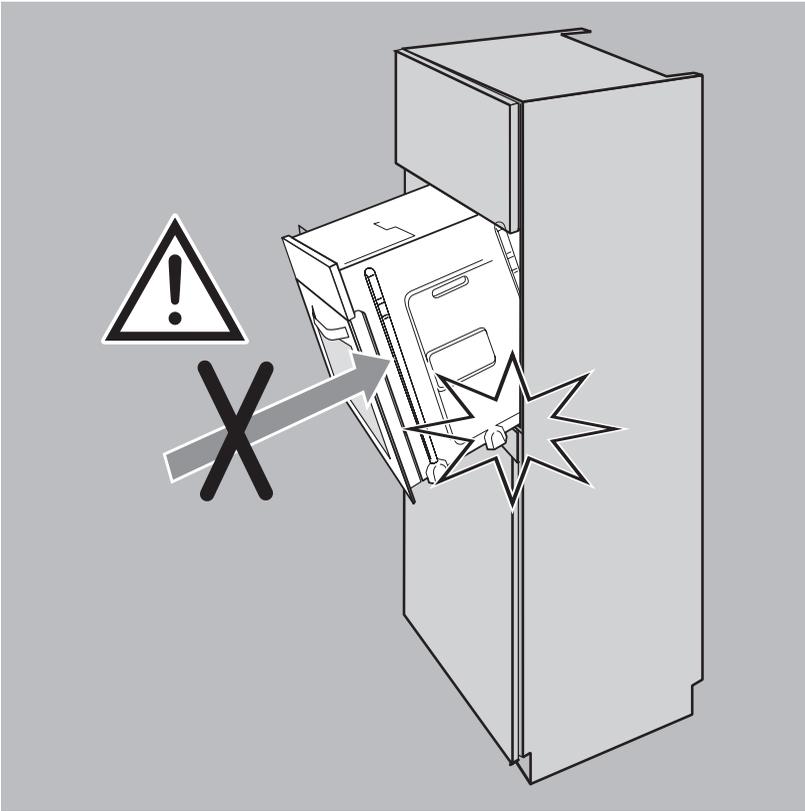

7

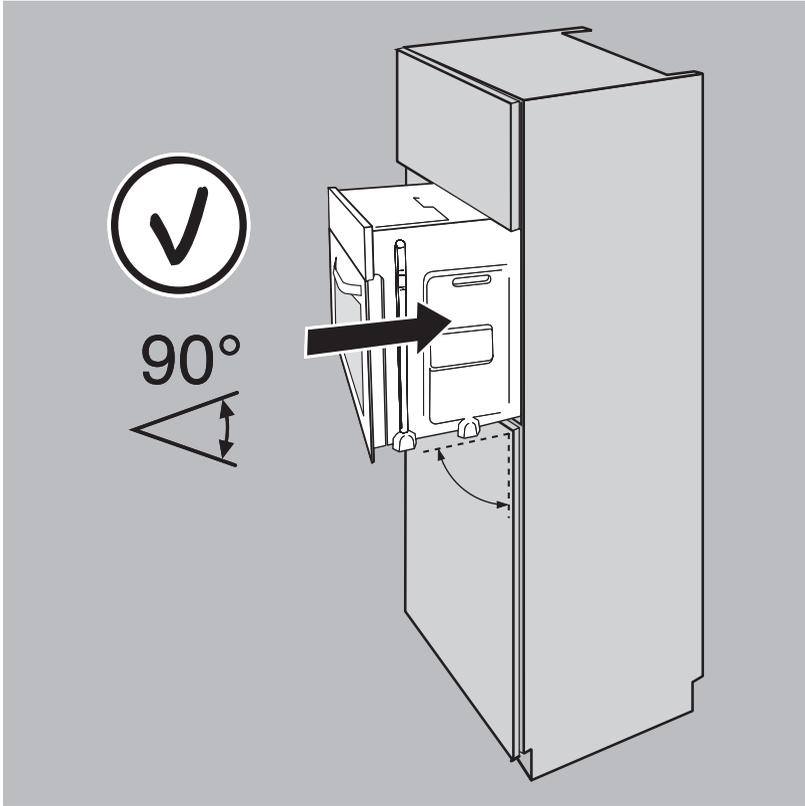

8

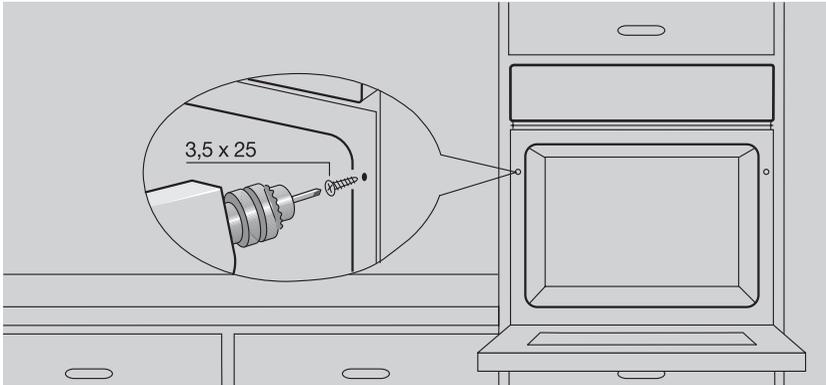

9

# Warranty conditions

## Great Britain

### Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.  
The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.  
This guarantee does not cover such parts as light bulbs, removable glassware or plastic, dust bags or filters.
3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer's service or authorised agent). AEG reserves the right to stipulate the place of the repair (i. e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The purchaser's statutory rights are not affected by this guarantee.

### European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i. e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899

## Customer Service Centres

### **Great Britain**

For general enquiries or information regarding AEG appliances contact:  
Customer Services Department  
AEG Domestic Appliances  
55-77 High Street  
Slough  
Berkshire  
SL1 1DZ  
Tel.: 08705 350 350



# INDEX

## A

Accessories ..... 19

## B

Baking ..... 15

Bottom heat ..... 16

Button locking feature ..... 30

## C

Child safety feature ..... 29

Cleaning ..... 16

    accessories ..... 56

    Initial cleaning ..... 13

    oven door ..... 60

    shelf support rails ..... 57

Clock ..... 14

    functions ..... 21

    setting the time ..... 21

Combination shelf ..... 11

Control panel ..... 8

Conventional ..... 15

Customer Service ..... 72

## D

Defrosting ..... 16

Description of the appliance ..... 8

Disposal ..... 7

Door ..... 60

Dual grill ..... 16

## F

Fan cooking ..... 15

## I

Insert anti-tip ..... 19

## L

Light ..... 16

Lighting ..... 58

## O

Oven

    accessories ..... 11

    door ..... 60

    functions ..... 15

    light ..... 58

    operating ..... 14

## P

Preserving ..... 53

## R

Repairs ..... 5

Rotitherm ..... 15

## S

Safety ..... 5

Shelf ..... 19

Shelf support rails ..... 57

Single grill ..... 16

Steam vent ..... 10

Switching off the time display ..... 28

## T

Tables and tips ..... 32

## U

Universal baking tray ..... 11, 19

## W

Warranty ..... 71

What to do if ..... 63

## Service and Spare parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

**08705 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.


For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk)

Before calling out an engineer, please ensure you have read the details under the heading „What to do if.....“

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate).
5. The purchase date

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

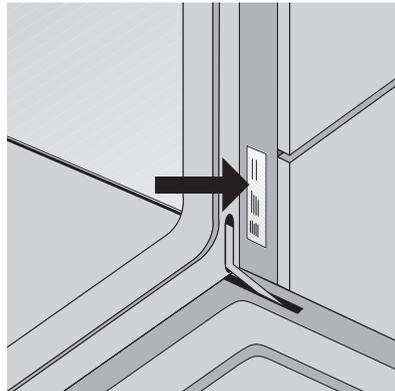

### Customer Care

For general enquiries concerning your AEG appliance or for further information on AEG products please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.aeghome.co.uk](http://www.aeghome.co.uk).

Customer Care Department  
 AEG Domestic Appliances  
 55-77 High Street  
 Slough  
 Berkshire, SL1 1DZ  
 Tel. 08705 350350 (\*)

(\*) Calls may be recorded for training purposes

 **From the Electrolux Group. The world's No. 1 choice.**

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.*

AEG Hausgeräte GmbH  
Postfach 1036  
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 947 671-NO-040902-07

Subject to change without notice