


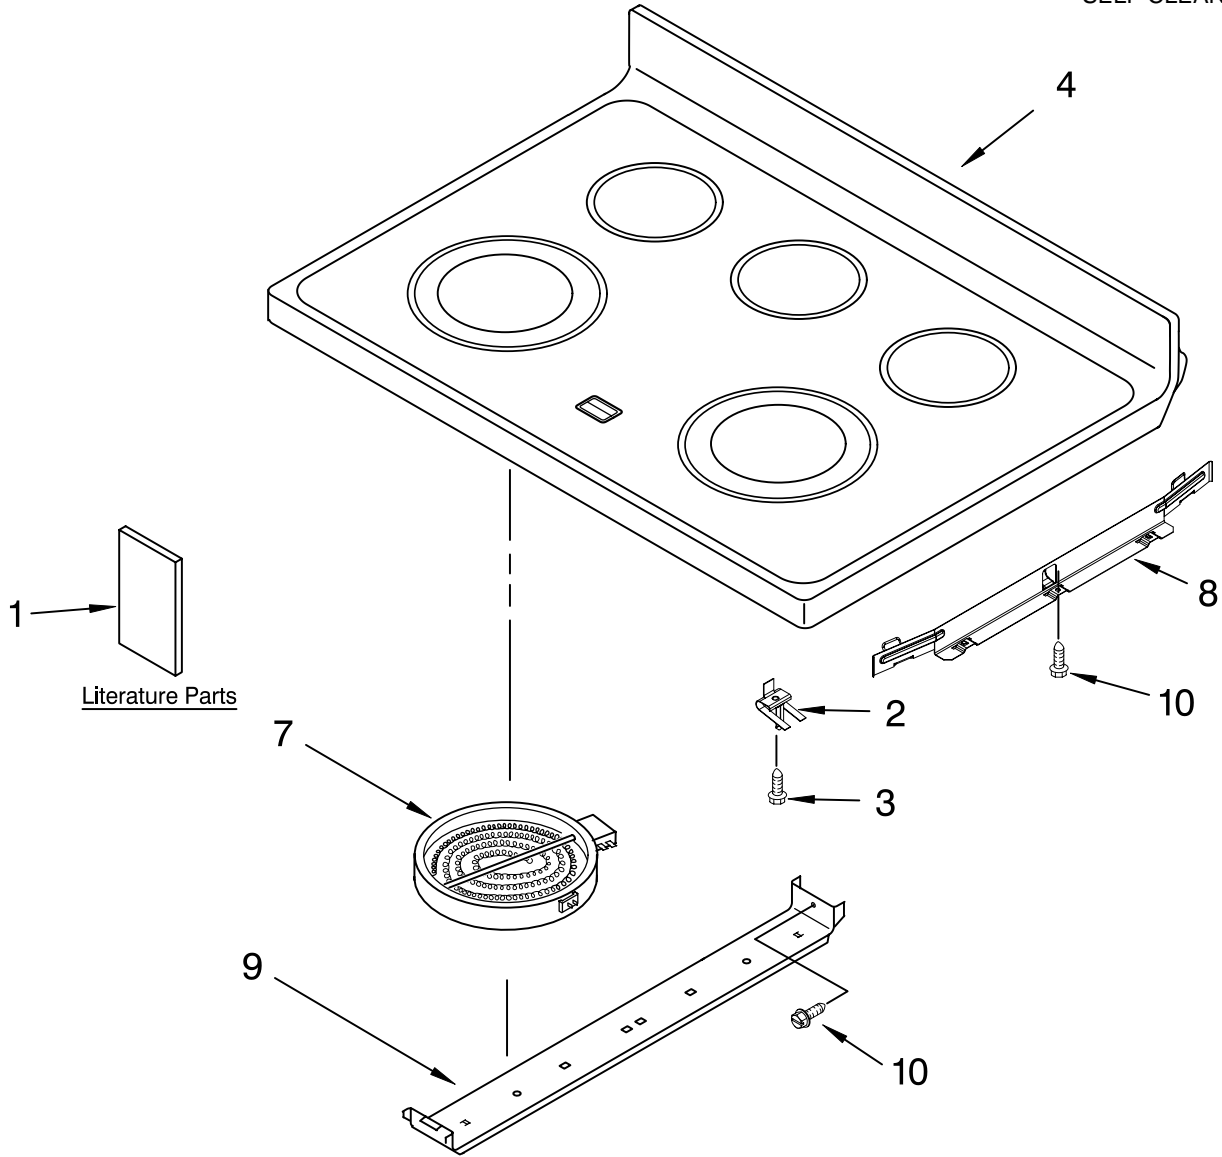

COOKTOP PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
 (White) (Black) (Biscuit) (Black Stainless)

30" ELECTRIC CERAN
 FREESTANDING RANGE
 SELF CLEAN OVEN



Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10159202	Tech Sheet
	W10141166	Installation Instructions
		Template, Anti-Tip
	9757143	English/French
	9757142	English/Spanish
	9762761	Safer Cooking Tips
	W10162204	Owner's Manual


Illus. No.	Part No.	DESCRIPTION
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	W10134943	White
	W10134942	Black
	W10134944	Biscuit

Illus. No.	Part No.	DESCRIPTION
7		Element, Surface
	9759351	2400/1000 W-LF/RF
	8523698	1200 W - LR/RR
	9762851	120 W - CR
8	8524132	Shield, Wiring
9		Bracket, Element
	8272791	(2)
	8273720	(1)
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
 (White) (Black) (Biscuit) (Black Stainless)

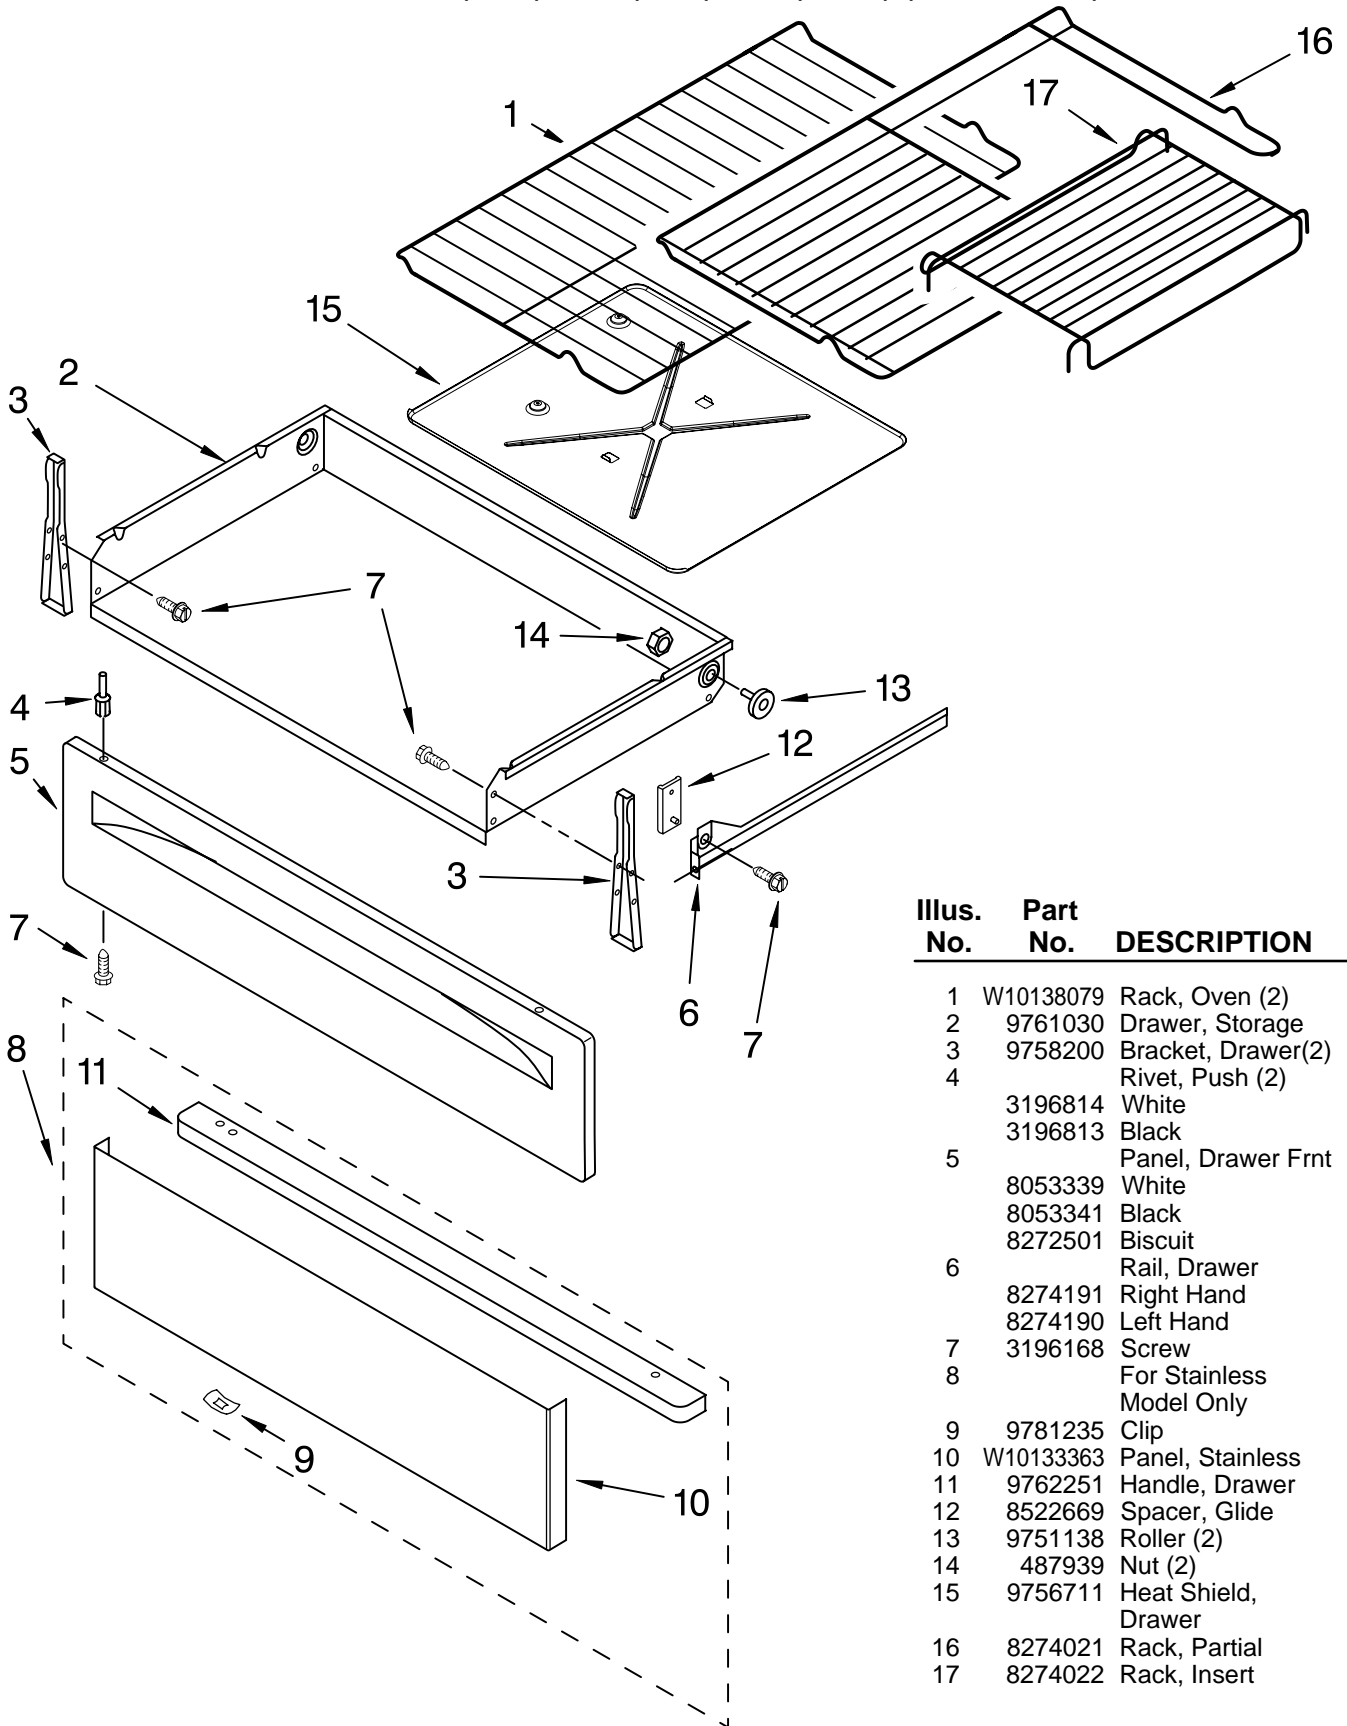


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761030	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196813	Black
5		Panel, Drawer Frnt
	8053339	White
	8053341	Black
	8272501	Biscuit
6		Rail, Drawer
	8274191	Right Hand
	8274190	Left Hand
7	3196168	Screw
8		For Stainless Model Only
9	9781235	Clip
10	W10133363	Panel, Stainless
11	9762251	Handle, Drawer
12	8522669	Spacer, Glide
13	9751138	Roller (2)
14	487939	Nut (2)
15	9756711	Heat Shield, Drawer
16	8274021	Rack, Partial
17	8274022	Rack, Insert

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
(White) (Black) (Biscuit) (Black Stainless)

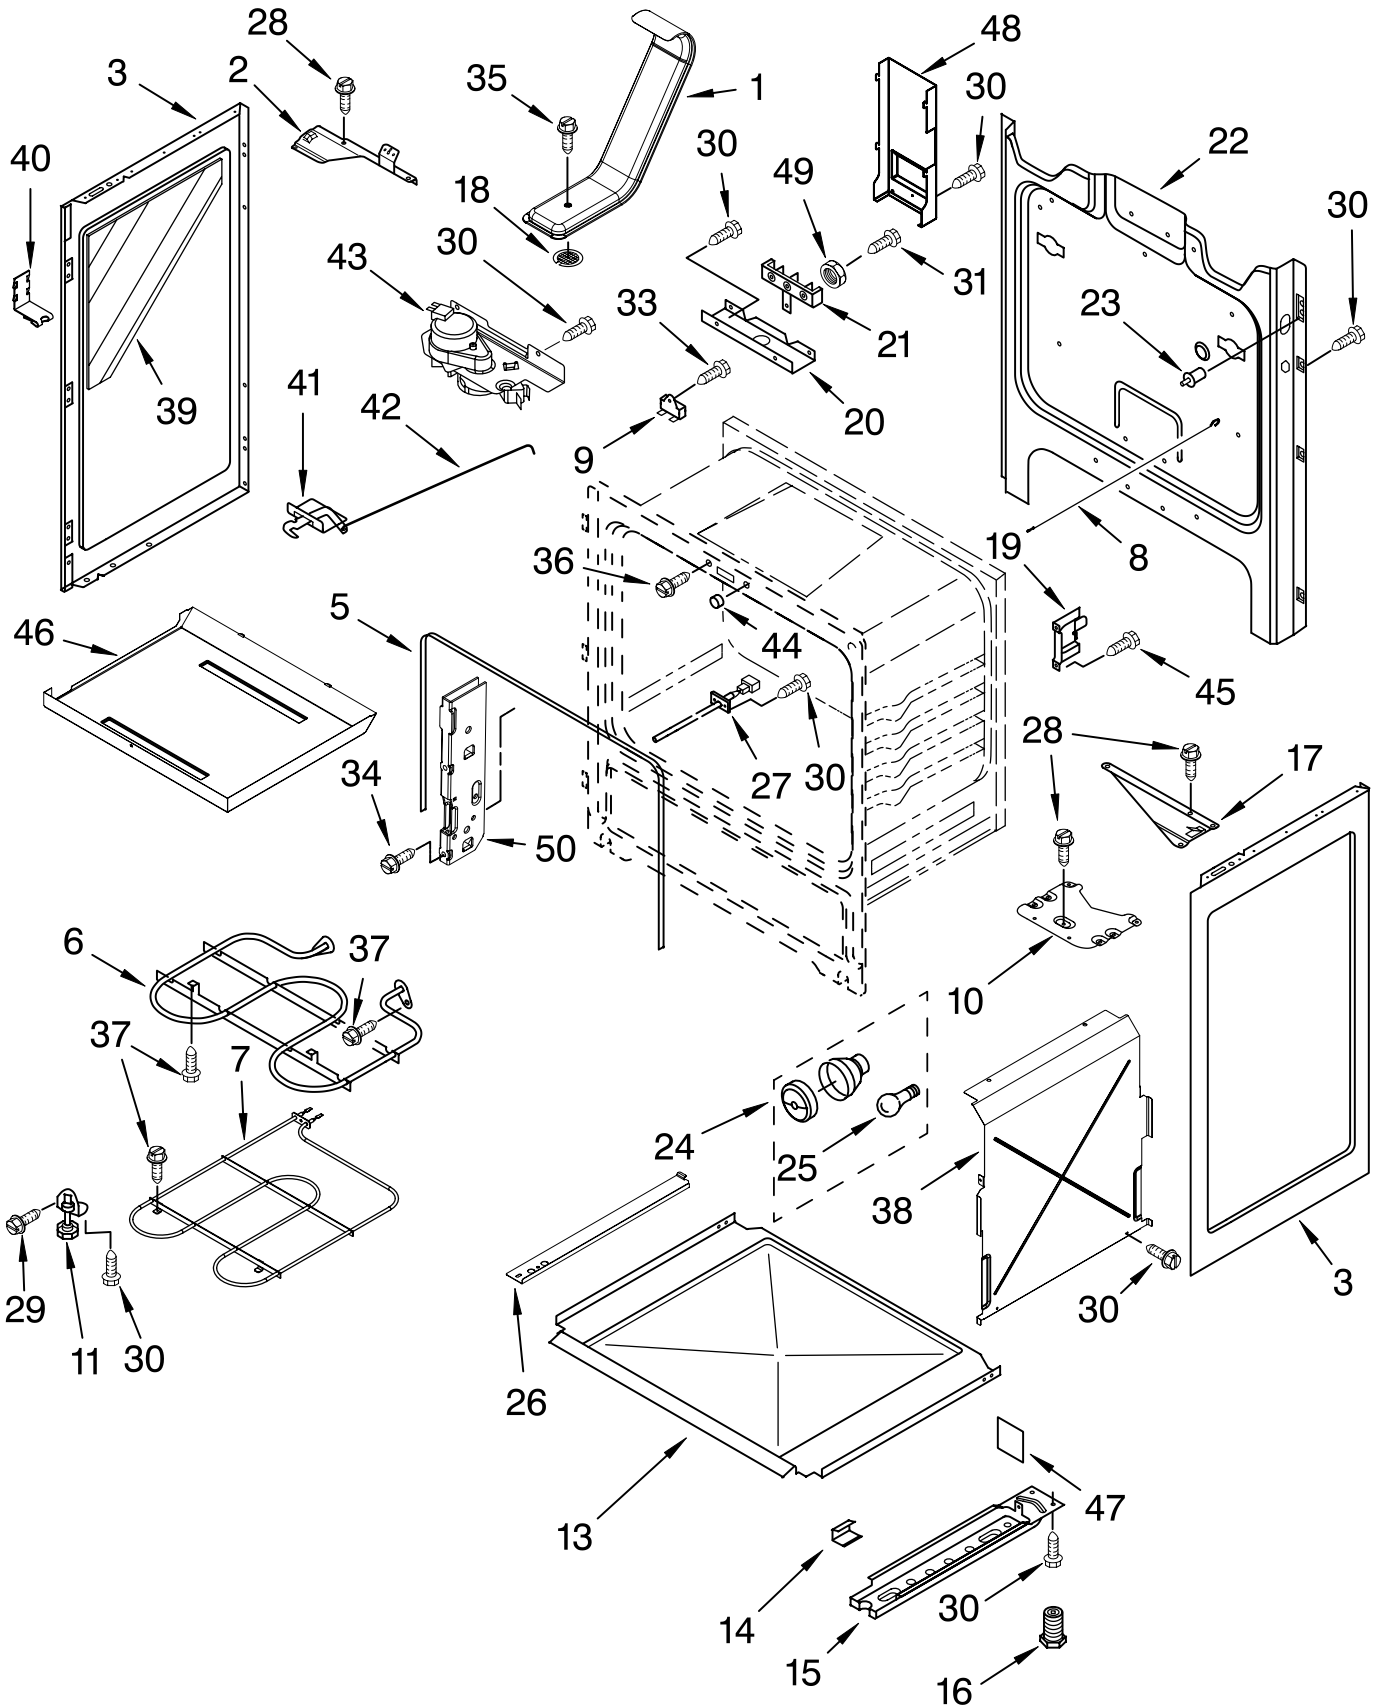

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2

(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10127969	Vent Tube Assbly	19	3186116	Support, Oven (2)	40	9761512	Clip – Mounting
2	8273905	Support, Corner LR	20	3186034	Bracket, Service	41	9761013	Latch, Door
3		Panel, Side (2)	21	9761958	Block, Terminal	42	W10078380	Rod, Latch
	8053830	White–Textured	22	8274034	Back, Main	43	W10107820	Latch Asy, Rear
	8053832	Black–Textured	23	9757262	Switch, Door	44	9758701	Spacer, Door
	8272519	Biscuit–Textured	24	3196701	Light Socket Assy	45	3196169	Screw
5	8522416	Seal, Oven Door	25	311255	Bulb, Oven Light	46	9755769	Tray, Hidden
6	9757341	Element, Broil	26	9755771	Cover, Tray			Bake Element
7	9755770	Element, Bake (Hidden Bake)	27	8273902	Sensor, Oven	47	9759689	Card, Insulator
8	9757239	Rod – Door Switch	28	3196165	Screw	48	9758283	Cover, Box
9	3196548	Fuse, Thermal	29	3196179	Screw	49	112432	Nut (3)
10	3195736	Support, Front (2)	30	3196178	Screw	50	9760407	Bracket–Mounting
11	3196037	Foot, Front (2)	31	3400016	Screw			
13	8054068	Tray, Insulation	33	3196172	Screw			
14	3196576	Clip, Panel (6)	34	W10031780	Screw			
15	9760314	Rail, Base (2)	35	3196566	Screw			
16	W10058460	Foot, Rear (2)	36	3196560	Screw			
17	3195987	Support, Corner RR	37	3196174	Screw			
18	9761301	Screen – Catalyst	38	9758238	Retainer, Side (2)			
			39	9761490	Insulation			


	<u>INSULATION</u>
	8272616 Insulation, Wrap
	9755772 Insulation, Back
	8272613 Insulation, Vent

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2

(White) (Black) (Biscuit) (Black Stainless)

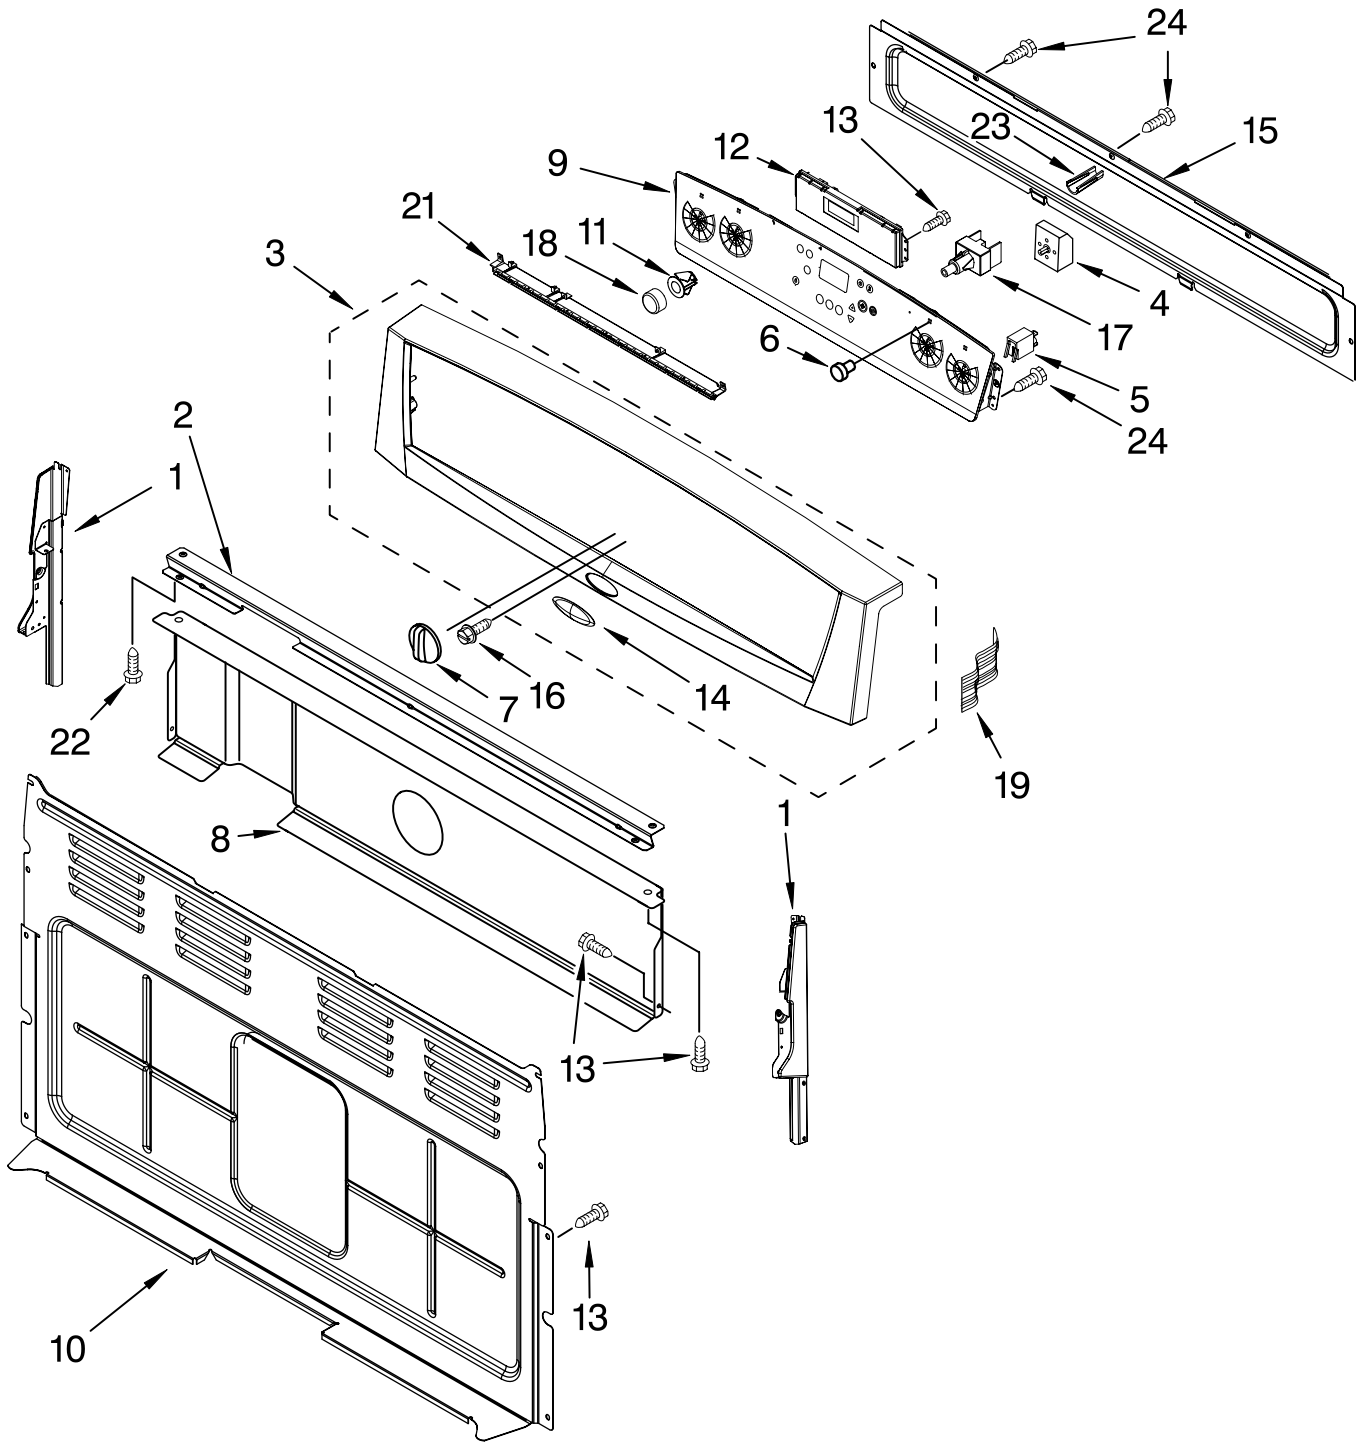

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS


For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
 (White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
2	9762095	Bracket, Console
3		Panel, Backguard
	9762585	White
	9762586	Black
	9762587	Biscuit
	9762588	Unvl Slvr for SS
4		Switch, Infinite
	9758060	Left Front
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9757132	White
	9758129	Black
	9757626	Biscuit
8	W10134247	Shield, Heat
9		GlsS Swtch Membrn
	9763545	White
	9763546	Black
	9763547	Biscuit
10	9756999	Cover, Rear
11		Bezel, Keep Warm
	9757489	White
	9758489	Black
	9758488	Biscuit
12	9763681	Control, Range
13	3196178	Screw
14	9757613	Nameplate
15	9756366	Cover, Rear (Console)
16	3400882	Screw
17	8272820	Switch
18		Button
	9757492	White
	9758491	Black
	9758490	Biscuit
19	9760080	Cntr, Cable Flex
21	9757358	Reflector, Light
22		Screw
	3196166	White
	3196168	Black
	8281194	Biscuit
23	9757490	Support, Glass
24	3196178	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
(White) (Black) (Biscuit) (Black Stainless)

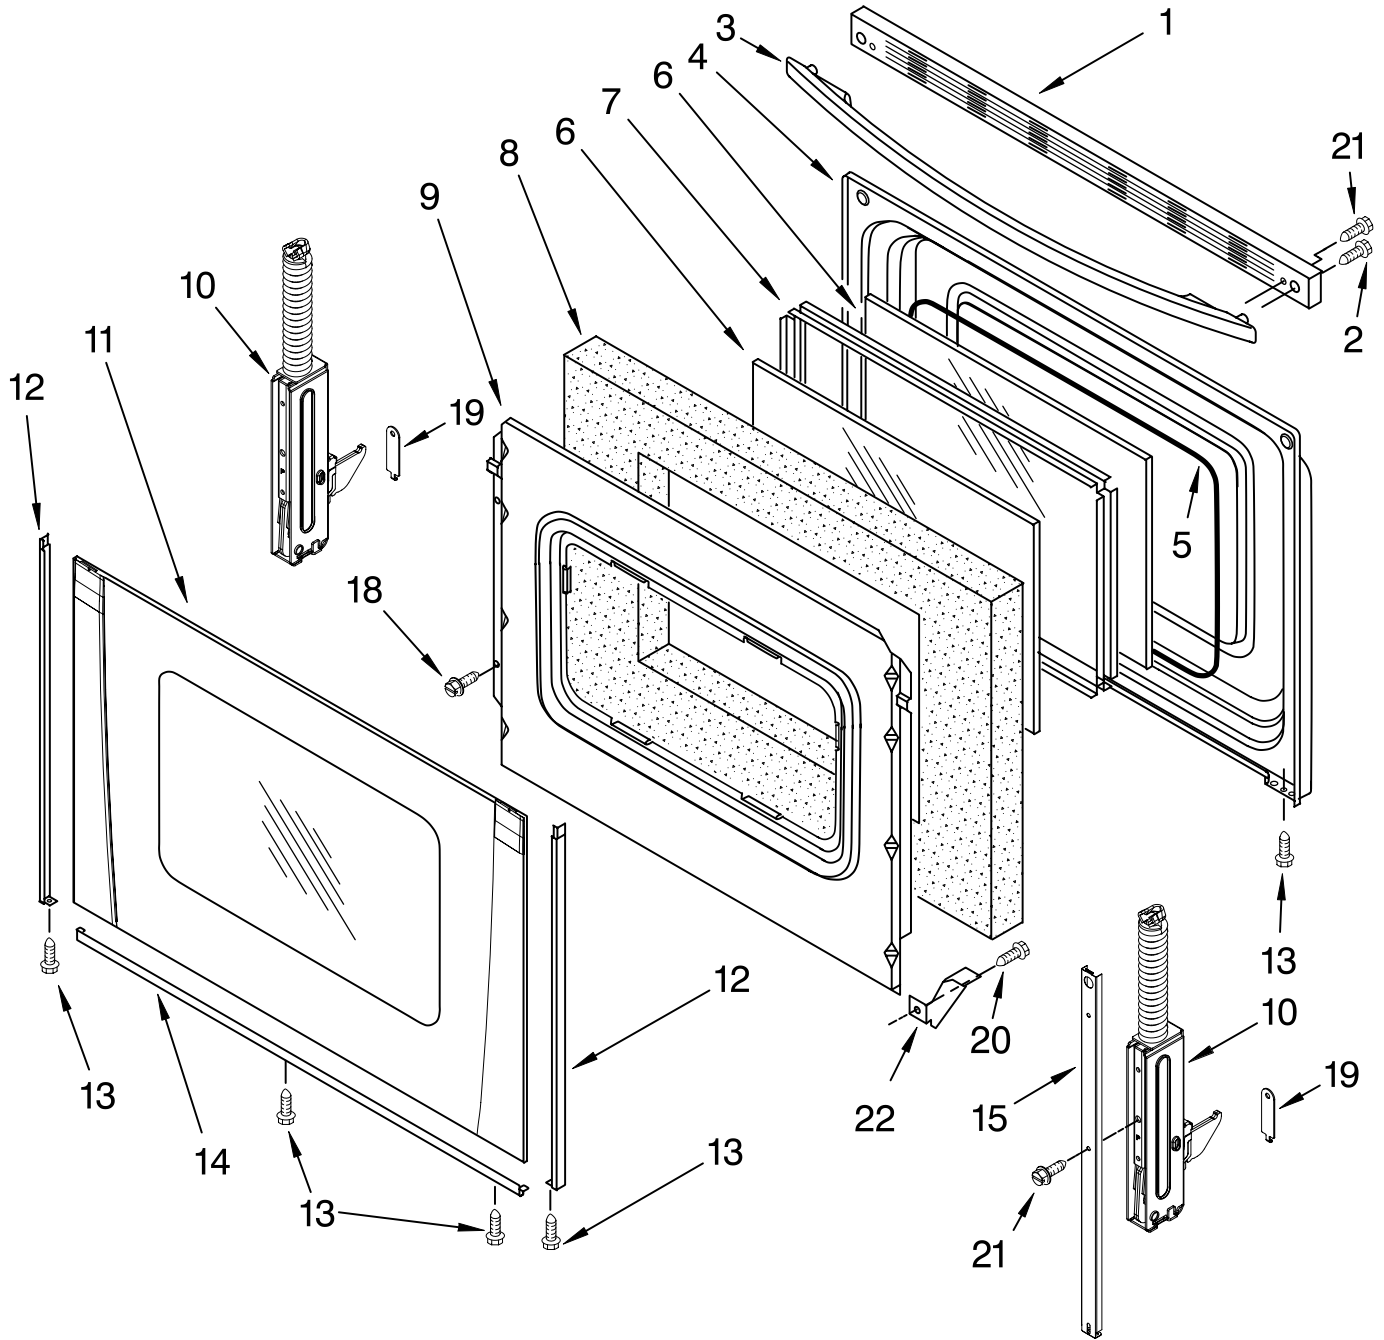

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
 (White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Top
	9761975	White
	9762391	Black
	9761976	Biscuit
2	9761977	Stainless Steel
	3196164	Screw
3		Handle, Door
	9761978	White
	9761979	Black
	9761980	Biscuit
4	9761981	Stainless Steel
	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761496	Hinge, Door (2)
11		Glass, Outer
	W10010660	White
	W10010680	Black
	W10010670	Biscuit
12	W10145299	Stainless Model
		Trim, Side
	8523166	White Left Hand
	8523172	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523167	Biscuit Left Hand
	8523173	Biscuit Right Hand
	W10113926	Unv Slvr LH
	W10113925	Unv Slvr RH
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523177	Black
15	8523178	Biscuit
	W10113759	Strap, Door
18	W10031790	Screw
19	9761517	Clip, Door Mntg
20	3196165	Screw
21	W10031780	Screw
22	3196794	Bracket, Window(2)

OPTIONAL PARTS

For Models: GR563LXSQ2, GR563LXSB2, GR563LXST2, GR563LXSS2
 (White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

- 242828 Wire, Black
12 Ga. 150° c
- 242821 Wire, Blue
14 Ga. 150°c
- 242822 Wire, Brown
14 Ga. 150°c
- 242830 Wire, Brown
14 Ga. 200°c
- 242823 Wire, Green
14 Ga. 150°c
- 242824 Wire, Orange
14 Ga. 150°c
- 242825 Wire, Red
14 Ga. 150°c
- 242831 Wire, Red
14 Ga. 200°c
- 242827 Wire, Yellow
14 Ga. 150°c

REFINISHING MATERIAL

- 799832 Kit, Porcelain
Repair (White)
- 242756 Touch-Up
Self-Clean(1/2 Pt)
- 261582 Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

- 261514 Insulation,
Fiberglass (1-1/2"
x 24" x 120")
- 240132 Insulation,
Fiberglass (2-1/2"
x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

- 72017 White
- 4392899 Biscuit
- 511873 White Porcelain
(2 Oz.)

**PAINT, PRESSURIZED SPRAY
(12 oz.)**

- 350930 White
- 4392901 Biscuit
- 285006 Superior Black
- 206922 Primer (White)

PAINT, BULK (1 qt.)

- 799344 White (Uncut)
- 4392900 Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

- 241430 Foil, Aluminum
Oven (18" x 25')
- 3184478 Cleaner, Glass

ANTI-TIP KIT

- W10017440 Anti-Tip Kit

WIRING HARNESS PARTS

- W10111781 Harness, Wire
(Cooktop Left)
- W10111780 Harness, Wire
(Cooktop Right)
- W10111779 Harness, Wire
(Main)
- 9763631 Harness, Wire
(Sensor/Dr Switch)
- 9757339 Harness, Bake
Element (Hidden)
- 3196520 Clip, Harness
- 8523279 Wire, Ground
- 3196173 Screw, Ground
- 3196154 Screw
- 313660 Clip - Grnd Wire

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST