

# DESKPOWER 5000 Series User's Manual

Fujitsu endeavours to ensure that the information in this document is correct, but accepts no liability for any error or omission in the same. Any procedures described in this document for operating Fujitsu products should be read and understood by the operator before such products are used. To ensure that Fujitsu products function without risk to safety and health, such procedures should be strictly observed by the operator. The development of Fujitsu products and services is continuous and published information may not be up to date. Any particular issue of a product may contain facilities not described herein. It is important to check the current position with Fujitsu. Specifications and statements as to performance in this document are Fujitsu estimates intended for general guidance. They may require adjustment in particular circumstances and should therefore not be taken as formal offers or commitments.

DESKPOWER is a trademark of Fujitsu Limited. The following are registered trademarks of Microsoft Corporation: MS, MS-DOS, Windows® NT, Windows® 98, Windows Millennium, Window® 2000 and Windows XP.

Intel and Pentium are registered trademarks of Intel Corporation in the U.S.

Celeron is a registered trademark of Intel Corporation in the U.S.

ATI and RADEON are registered trademarks of ATI Technologies, Inc.

Other product names are trademarks or registered trademarks of respective companies.

Other products are copyrighted by individual companies.

All Rights Reserved, Copyright © FUJITSU LIMITED 2001

We have been authorized by Microsoft Corporation in the U.S. to use Windows screenshots in this manual.



DECLARATION OF CONFORMITY  
according to FCC Part 15 Class B

This device complies with Part 15 Class B of the FCC Rules. Operations are subject to the following two conditions:

(1) This device may not be allowed to cause harmful interference, (2) This device must accept any interference received, including interference that may cause undesired operation.

Website: [www.fujitsu-pc-asia.com](http://www.fujitsu-pc-asia.com)

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully. Save these instructions for future reference.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. This product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This will only plug into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
9. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
10. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed 15 amperes.
11. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points that could result in a fire or electric shock. Never spill liquid of any kind on the product.
12. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power cord or plug is damaged or frayed.
  - b. If liquid has been spilled into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
  - e. If the product has been dropped or the cabinet has been damaged.
  - f. If the product exhibits a distinct change in performance, indicating a need for service.
  
14. **CAUTION. When replacing the battery, be sure to install it with the polarities in the correct position. There is a danger of explosion if the battery is replaced with an incorrect type or is mistreated. Do not recharge, disassemble or dispose of in fire. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of the used battery according to the manufacturer's instructions.**
  
15. Use only the proper type of power supply cord set (provided in your accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, BS1363,ASTA,SS145 certified, rated 10A 250V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).
  
16. **NOTE:**  
**Please take extra precaution when connecting the LAN cable; do not connect the LAN cable to the peripheral device's connector, that might have excessive voltage.**

## Before reading this manual

This section describes safety precautions and convention used in this manual. Be sure to read this.

### For Safe Operation


This manual contains important information for using the DESKPOWER personal computer. Read this manual thoroughly before using your PC. In particular, "Safety Precautions" in this manual must be read and understood. This manual including "Safety Precautions" must be readily available at all times.

This equipment is compliant with the PC industry standard (PC-11-1988) of the Japan Electronics and Information Technology Industries Association.

### Note

This product is a Class B Information Technology Equipment and conforms to the standard set by the Voluntary Control Council for Interference by Technology Equipment (VCCI). This product is designed to be used in a domestic environment, however, it may cause radio interference when used in the vicinity of a radio or television receiver. Make sure that you read the manual when using this product.

Fujitsu, as a member of the International Energy Star Program, recognizes that this equipment is compliant with the standard of the International Energy Star Program.

The International Energy Star Program is a worldwide program for promoting energy saving for computers and other office equipment. The program aims at promoting the development and use of products equipped with the functions that can effectively reduce energy consumption and uses a voluntary system that allows enterprises to join at their own discretion. The target products are office equipment including computers, displays, printers, facsimiles, and copying machines. The standards for individual types of equipment and the mark (  ) prepared by the Program are used commonly among member countries.



### Caution

This equipment is class B information technology equipment based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). Although the equipment is intended for use in residential environments, it may create interference if placed near radio or television. Handle the equipment in accordance with the manual.

### **Using this Product for High-Safety Applications**

This product is for office, personal, home, ordinary industry and other general use. It is not designed and manufactured for use in high-safety applications.

Do not use this product for such applications without taking measures to satisfy the high-safety requirements.

High-safety applications require extremely high level of safety, and involve serious hazards to life and health if the required safety is not assured. High-safety applications include the following.

- Nuclear reaction control in nuclear facilities, automatic aviation control, air traffic control, mass-transportation control, life-supporting medical equipment, and missile launch control.

Some parts (including the CRT display, LCD, or hard disk drive) used on this product have a limited life. When used continuously for a prolonged period, these parts will need earlier replacement.

### **Backing Up the Data**

The customer is responsible for maintaining the integrity of data (including the basic and application software) stored or installed on the product. We do not warrant the integrity of data stored or installed on the personal computer the customer sent for repair. Take appropriate measures such as making a backup.

We assume no responsibility for loss of data and any direct or incidental damage due to any cause other than those specified in the warranty.

This computer is designed for use within the country. If you are using it abroad, please do so on your own responsibility.

This equipment may be adversely affected by the momentary drop of the supplied voltage due to lightning. Use of an AC uninterruptible power supply is recommended for measures against the momentary drop of the supplied voltage.

(This message is based on the Japan Electronics and Information Technology Industries Association's guidelines for measures against momentary voltage drop in PCs.)

Since this equipment contains special materials controlled by the Foreign Exchange and Foreign Trade Control Law. Authorization under the law may be required to export this equipment.

**Microsoft Service Pack**

Microsoft Corp. offers Service Pack to provide the users of Microsoft® Windows® with more stable system operation (<http://www.microsoft.com/>).

The latest version of the Service Pack helps you configure the most stable system using Microsoft® Windows® provided at that time by Microsoft Corp.

We recommend you to use the latest version.

In some environments, however, the Service Pack may cause unexpected failure. Read Readme.txt for the Service Pack before use.



Again, we recommend you to make a system backup in case of failed installation.

Components of this product (motherboard, CD-ROM, hard disk, and floppy disk drive) contain traces of heavy metals (lead and chrome) and chemical (antimony).




# Conventions Used in This Manual

## Warning messages

This manual uses various signs. These signs urge the user to use the equipment safely so as to prevent personal injury and/or property damage. The following are alert signals and explanations. The signs should be understood before proceeding to subsequent portions of this manual.

 <b>CAUTION</b>	This indicates a hazardous situation that could result in death or severe injury if the user does not perform the procedure correctly.
 <b>WARNING</b>	This indicates a hazardous situation that could result in personal injury or property damage if the user does not perform the procedure correctly.

In addition to the above signs, the following symbols are used to provide detailed information concerning personal injury and/or property damage:

	The symbol marked with [△] indicates a warning or caution item. An explanation of an alert is presented in or beside the symbol.
	The symbol marked with [⊘] indicates what must not be done (prohibited action). The meaning of a direction is presented in or beside the symbol.
	The symbol marked with [●] indicates what must be observed. The meaning of a direction is presented in or beside the symbol.

## Symbols used in the text

Symbol	Meaning
⊙ <b>Important</b>	The statement provided with this symbol explains cautions on use or what must not be done. Be sure to read this first!
⊙ <b>Point</b>	The statement provided with this symbol explains what is required to operate hardware or software correctly. Be sure to read this first!
→	This symbol indicates the page or manual to refer to.

## Representation of keys and their operation method

Key names used in this manual are not exactly represented with the characters appearing on the keyboard but are represented with characters needed for explanation as follows:

**Example:** [Ctrl] key, [Enter] key, [→] key...

Two or more keys that must be pressed simultaneously are represented by combining them with a “+” sign as follows:

**Example:** [Ctrl] + [F3] keys, [Shift] + [↑] keys...

## Command entry (keying in)

In this manual, a command entry is represented as follows:

**diskcopy**    **a:**    **a:**  
                  ↑           ↑

- Where character spacing is provided as shown by [↑], press the [Space] key once. Commands, an example of which is given above in lowercase, can also be entered in uppercase.
- [CD-ROM drive] indicates the name of the CD-ROM drive being used. Enter the drive name in accordance with your PC environment.

**[CD-ROM drive]:\setup.exe**

## Screenshot example and illustrations

The screenshots and illustrations given in this manual are examples. The screenshots and file names may be different from those actually shown on your PC and the illustrations may be different from the actual appearance. For the explanatory purpose, illustration used in this manual may omit cables connected on the actual PC.

## Representation of continuous operation

Continuous operation steps are represented in this manual by combining them with a “••••” sign as shown below:

Example: Sequential operation of clicking the [Start] button, pointing [Program], then clicking [Accessories]



Click the [Start] button → [Program] → [Accessories].

## Representation for BIOS Setup

When the BIOS Setup procedure is explained in this manual, a menu, submenu, and item may be represented by combining them with a hyphen as shown below:

Example: Set the [Serial Port 1] in [Advanced] to [Disable].



[Advanced] - [Serial Port 1]: Disable

## Floppy disk and CD-ROM drives

Users of a model without a floppy or CD-ROM drive should use a separately available drive for operation with a necessary drive.

For operation of peripheral devices, refer to the relevant manuals.



## Reference to products

In this manual, the product names are referred to as follows:  
This manual includes information on other operating systems.

Product name	Description used in the manual		
Microsoft® Windows® XP Professional	Windows XP Professional	Windows XP	Windows*
Microsoft® Windows® XP Home Edition	Windows XP Home Edition		
Microsoft® Windows® 2000 Professional	Windows 2000		
Microsoft® Windows NT® Workstation Operating System Version 4.0	Windows NT		
Microsoft® Windows® Millennium Edition	Windows Me		
Microsoft® Windows® 98 operating system SECOND EDITION	Windows 98		
Microsoft® MS-DOS® operating system	MS-DOS		

Note: Descriptions such as Windows XP/2000/NT/Me/98 are used.

# Recycling

## Disposal of the PC unit

Disposal of the PC unit (including accessories except the LCD unit) is controlled by the Waste Disposal and Public Cleaning Law.

- To institutional and corporate customers

Personal computers must be disposed of as industrial waste. Institutional and corporate customers are obliged to entrust an authorized industrial-waste disposer.

- To individual customers

Personal computers should be disposed of as general waste. Individual customers are advised to follow the disposal rules and regulations set forth by the local municipality.

## Disposal of the LCD unit

The fluorescent tubes in the LCD contain mercury.

Disposal of the LCD unit is controlled by the Waste Disposal and Public Cleaning Law.

- To institutional and corporate customers

LCD units must be disposed of as industrial waste. Institutional and corporate customers are obliged to entrust an authorized industrial-waste disposer.

- To individual customers

LCD units should be disposed of as general waste. Individual customers are advised to follow the disposal rules and regulations set forth by the local municipality.

## Disposal of batteries

The wireless keyboard and mouse use dry batteries. These batteries may explode when plunged into the flames.

Disposal of the batteries is controlled by the Waste Disposal and Public Cleaning Law.

- To institutional and corporate customers

Dry batteries must be disposed of as industrial waste. Institutional and corporate customers are advised to entrust an authorized industrial-waste disposer.

 
- To individual customers

Dry batteries should be disposed of as general waste. Individual customers are advised to follow the disposal rules and regulations set forth by the local municipality.


# Warning and caution labels

Your PC bears the warning and caution labels as shown below. The warning and caution labels must not be removed or damaged.

## Rear of the PC main unit

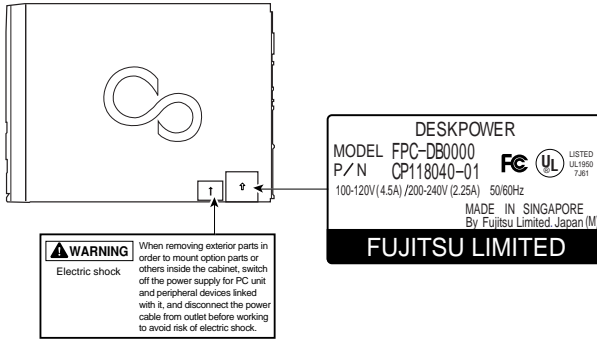

## Inside the PC main unit

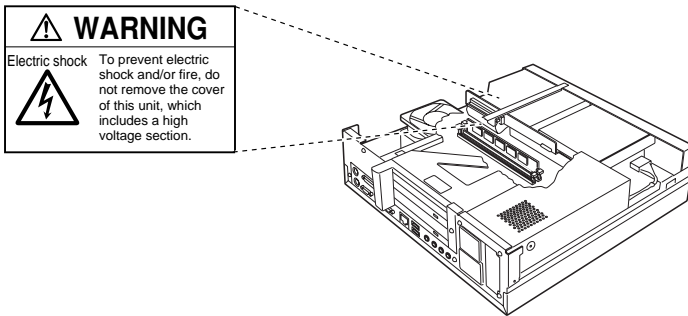

### ATTENTION

115V of voltage switch in the power supply corresponds to 100-120V  
230V of voltage switch in the power supply corresponds to 200-240V

### WARNING

Electric shock



- Before mounting or dismounting an optional unit in/from your PC, switch off the PC and all connected units and unplug all power cords from respective outlets to prevent electric shock.

# Organization of This Manual

## **Before Reading This Manual**

This section contains cautions for safe operation, representations and symbols used in this manual. Be sure to read this first!

## **Chapter 1 Part Names**

This chapter provides the names and functions of individual parts.

## **Chapter 2 Installation and Connection**

This section describes the location of installation and installation of the computer.

## **Chapter 3 Hardware**

This chapter provides the basic information on the PC and operation.

## **Chapter 4 System Expansion**

This chapter provides basic information on how to handle the peripherals installed (or can be installed) on the PC.

## **Chapter 5 Technical Information**

This chapter describes the specifications of this PC.

# Contents

## CHAPTER 1 Part Names

<b>1 Part Names and Functions .....</b>	<b>2</b>
Front of the PC Unit .....	2
Rear of the PC Unit .....	4
Inside the PC Unit .....	6
Motherboard .....	7

## CHAPTER 2 Installation and Connection

<b>1 Installation .....</b>	<b>10</b>
Location of Installation .....	10
Mounting Feet .....	10
Example of Installation .....	12
<b>2 Connection .....</b>	<b>14</b>
Connecting the Display/Keyboard/Mouse .....	15
Connect the Power Cord .....	17
<b>3 Power On .....</b>	<b>19</b>
How to Power On .....	20
<b>4 Setting Up .....</b>	<b>21</b>
Setting Up Windows XP .....	22
Setting Up Windows 2000 .....	23
Problem During Setup? .....	26
<b>5 Turn Off the Computer .....</b>	<b>27</b>
How to Turn Off .....	27

## CHAPTER 3 Hardware

<b>1 Keyboard .....</b>	<b>30</b>
<b>2 CDs .....</b>	<b>32</b>
Inserting or Removing a CD .....	33
<b>3 Floppy Disks .....</b>	<b>35</b>
Inserting or Removing a Floppy Disk .....	35
<b>4 Hard Disk .....</b>	<b>37</b>
<b>5 Maintenance of the Hardware .....</b>	<b>38</b>
Maintenance of the PC Unit .....	38
Maintenance of the Mouse .....	38
Maintenance of the Keyboard .....	39
Cleaning CDs .....	39
Cleaning the Floppy Disk Drive .....	39

## CHAPTER 4 System Expansion

<b>1</b>	<b>Before Installing a Peripheral Device</b> .....	<b>42</b>
<b>2</b>	<b>Removing the Cover</b> .....	<b>44</b>
	Removing the Cover .....	44
<b>3</b>	<b>Installing Memory Modules</b> .....	<b>45</b>
	Location of Memory Modules .....	46
	Applicable Memory Modules .....	46
	Installing Memory Modules .....	47
<b>4</b>	<b>Installing an Expansion Card</b> .....	<b>49</b>
	Location of expansion Cards .....	50
	Applicable Expansion Cards .....	50
	Installing an Expansion Card .....	50

## CHAPTER 5 Technical Information

<b>1</b>	<b>List of Specifications</b> .....	<b>54</b>
	PC Specifications .....	54
	Energy consumption efficiency in accordance with the Law Concerning the Rational Use of Energy .....	55
	LAN function .....	56
<b>2</b>	<b>Connector Specifications</b> .....	<b>57</b>
	<b>Glossary</b> .....	<b>60</b>

# **CHAPTER 1**

---

---

## **Part Names**

---

---


# 1 Part Names and Functions

This section explains the names and functions of the parts of the PC unit and the motherboard.

## ◎ Point

The remaining part of this manual assumes vertical placement. When you place the PC unit horizontally, be careful about geometrical difference.

## ■ Front of the PC Unit

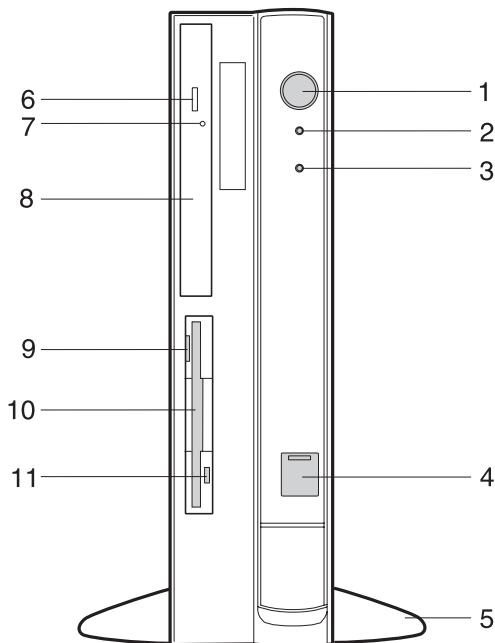

### 1 Power button

Press this button to turn on the PC unit or set the system to the standby mode (power-saving mode).

### 2 Power lamp

This lamp lights up when the PC is on.

It lights up in green when the PC is in operation and in orange when the PC is in the standby mode.



**3 Disk access lamp**

This lamp lights up while the hard disk is accessed.

**4 USB connector**

Slide the cover down and connect USB peripherals.

**5 Foot**

Used for placing the PC.

This also prevents the PC in a vertical placement from tipping over.

**6 CD eject button**

Press this button to load or eject a CD-ROM disk or a music CD. This button can be used when the PC is on. Do not press this button when the CD access lamp is on.

**7 CD access lamp**

The lamp continues to light when data is being read from the CD-ROM disk or when a music CD is being played back.

**8 CD-ROM drive**

Insert a CD-ROM into this drive to read its data or programs, or insert a music CD for playback.

**9 Floppy disk eject button**

Press this button to remove a floppy disk from the floppy disk drive.

Do not press this button when the floppy disk access lamp is on.


**10 Floppy disk drive**

This drive accommodates a floppy disk for writing and reading data.

**11 Floppy disk access lamp**

This lamp lights up while the floppy disk drive is accessed.

## ■ Rear of the PC Unit

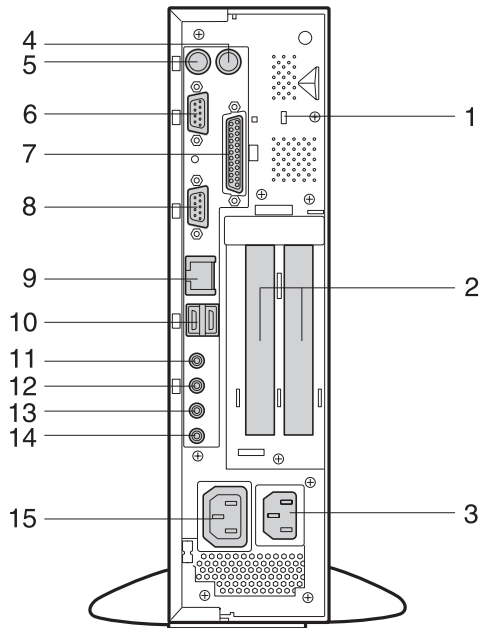

### 1 Burglarproof lock

Install a key to prevent burglary of the components in the PC.

### 2 Expansion card slots

Insert an optional expansion card to this slot.

This slot accommodates a half-size PCI card.

Put the supplied nylon band through the USB fixture slit to tie up the cable.

### 3 Inlet

Connect the power code of the PC unit to this connector.

### 4 Mouse connector

Connect a mouse.

### 5 Keyboard connector

Connect the keyboard.

**6 Serial connector**

Connect an RS-232C device connector.

**7 Parallel connector**

Connect a printer or scanner cable.

**8 CRT connector**

Connect the cable of an analog RGB display.

**9 LAN connector**

Connect a LAN cable.

**10 USB connector**

Connect a USB device.

**11 Line OUT terminal**

A terminal for sound output. Connect the input terminal of audio equipment to this terminal. When connecting speakers, use those with a built-in amplifier.

**12 Line IN terminal**

A terminal for sound input. Connect the output terminal of audio equipment to this terminal.

**13 Microphone jack**

Plug a capacitor microphone to this jack.


**14 Speaker terminal**

Connect a speaker to this jack.

**15 Outlet**

Connect the power code of the display to this outlet.

## ■ Inside the PC Unit

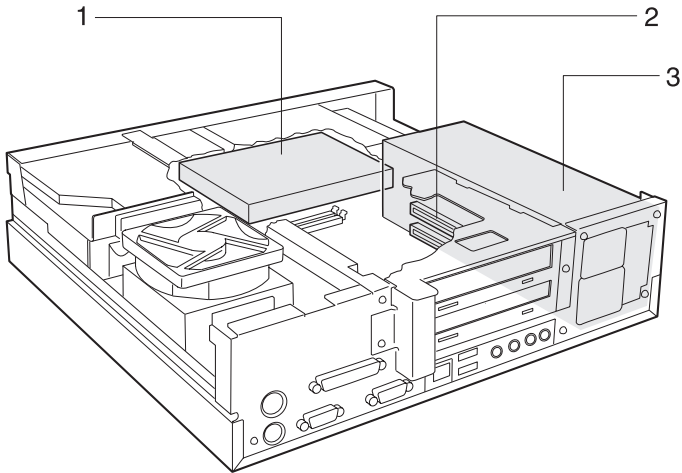

### 1 Internal hard disk drive

An IDE-compliant hard disk drive.

### 2 Expansion card slots


Insert an optional expansion card to this slot.

This slot accommodates a half-size PCI card.

A SCSI card allows you to use an external hard disk drive or a magneto-optical disk drive.

### 3 Power supply unit

## ■ Motherboard

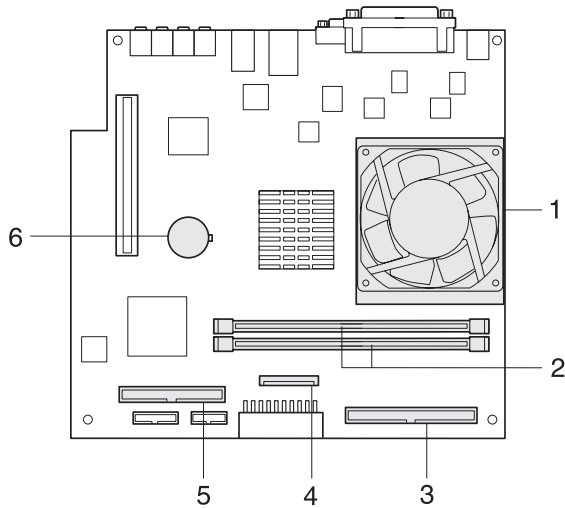

### 1 CPU

### 2 DIMM slots

Memory modules are inserted into these slots.

Increasing the memory capacity increases the amount of data that the system can read at one access, thereby improving the processing capability of the PC.

When viewed from the front of the PC unit, the front slot is DIMM1 and the behind is DIMM2.

The standard memory module is seated in the DIMM1 slot.

### 3 Secondary IDE connector (IDE2)

The standard CD-ROM drive is connected.

### 4 Floppy disk drive connector (FDD)

### 5 Primary IDE connector (IDE1)

The standard hard disk drive is connected.

### 6 Internal battery

This battery provides the power to retain information on date and time, and settings made in BIOS Setup. The life is about 5 years under normal use.

# **CHAPTER 2**

---

## **Installation and Connection**

---

# 1 Installation

This section describes the location and installation of the PC.

## ■ Location of Installation

Avoid the following conditions when installing your PC.

- Location with a large amount of humidity, dusts and oily smoke.
- Location with poor ventilation.
- Location with a fire source.
- Bathroom, shower room, and other location with water splashes.
- Location with elevated temperature such as direct sunlight or heating equipment.
- Location at the temperature below 10°C.
- Location with power cords and cables that may catch your foot.
- Location with strong magnetic fields such as TV or speaker.
- On top of unstable surface, such as vibrated or slant surface.


## ■ Mounting Feet

### Vertical Placement

- When using two feet


When installing your PC in the vertical layout away from a wall, use the following installation procedure.

### 1 Make sure that feet do not exceed the PC width.

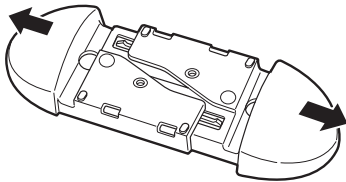

### 2 Mount the feet onto the PC unit.


Fix all feet by tightening setscrews.

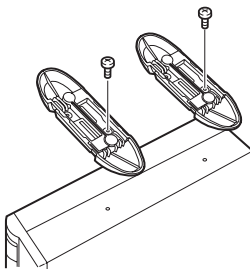

- When using a single foot


When installing your PC in the vertical layout and in contact with the wall, use the following installation procedure.

**1 Disassemble the foot.**

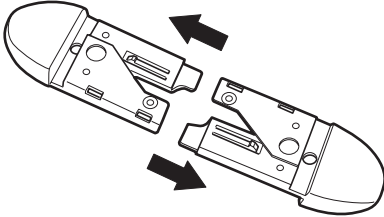


**2 Mount the disassembled foot on the PC unit.**

Fix the foot by tightening the setscrew.

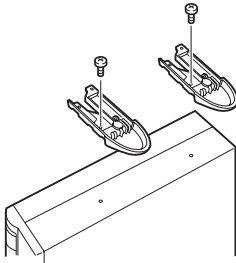


**Horizontal Placement**

**1 Disassemble the foot.**

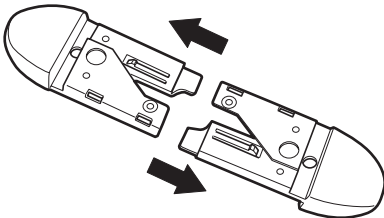

**2 Place the PC on the disassembled foot.**

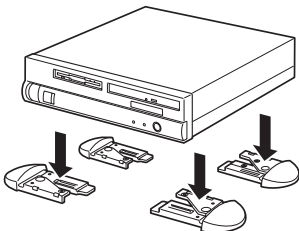




## ◎ Point

You can also mount five rubber feet at the center and four corners of the PC bottom plate during horizontal placement.

Take care not to contact the rubber feet with the foot of PC during vertical placement.

Wipe and clean the mounting surface of the PC when you fix the rubber feet to the PC housing.

Also, do not slide the PC when you move it if you have already mounted the rubber feet on it.

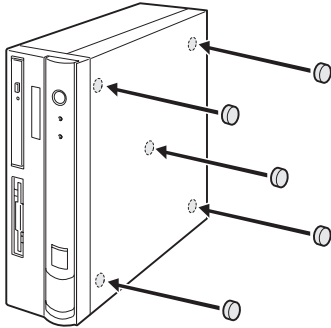


## ■ Example of Installation

To locate the PC, follow the procedure below.


The PC can be placed in a vertical or horizontal layout. Install the PC in a place not to cover vent holes located at the top and rear of the PC.

### □ Vertical Placement

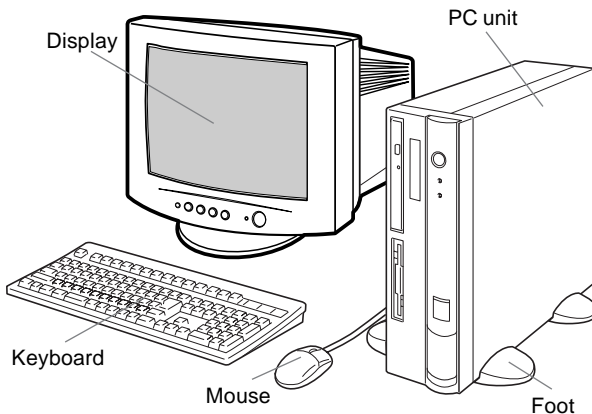

❑ **Horizontal Placement**

17-inch or less CRT display unit (below 19kg) can be placed on the PC housing in horizontal layout.

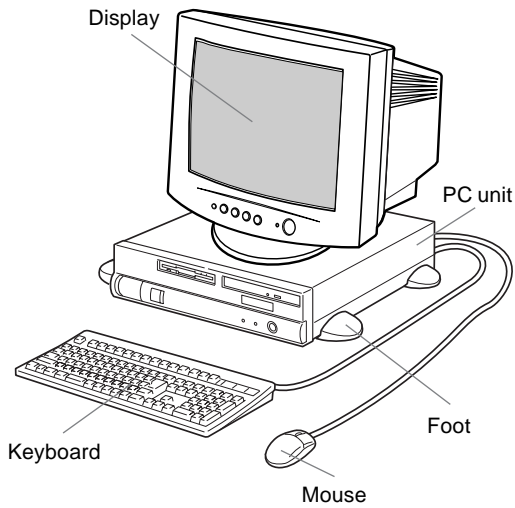

⦿ **Point**

---

The remaining part of this manual assumes vertical PC placement. When you place the PC unit horizontally, be careful about geometrical difference.

---

## 2 Connection

Connect the display, keyboard, and power cord to the PC.

### WARNING

---

#### ELECTRIC SHOCK



- Connect the grounding leads to the device that needs to be grounded before turning it on.

You may get electrical shock if you do not provide grounding.

Do not connect the grounding wire to the gas pipe.

Otherwise it may cause a fire.

#### ELECTRIC SHOCK



- Turn the PC and attached devices off and unplug power cords from their power outlet before installing or uninstalling the display, keyboard, mouse and others.

Otherwise it may cause an electric shock.

#### ELECTRIC SHOCK



- Use the genuine Fujitsu products for display, keyboard and mouse.

Otherwise, it may cause an electric shock or fire.

### CAUTION

---

#### FAILURE



- Make sure that you connect the cable correctly.

The PC and peripheral devices may be damaged, if they are connected with wrong cables.

#### FIRE



- Do not use the service receptacle for plugging of a peripheral device not listed on the manual.

Or, it may cause a fire or a failure.


#### INJURY




- Hold the PC board by touching the specified sections only.

Otherwise, personal injury or a fault may occur.

## ■ Connecting the Display/Keyboard/Mouse

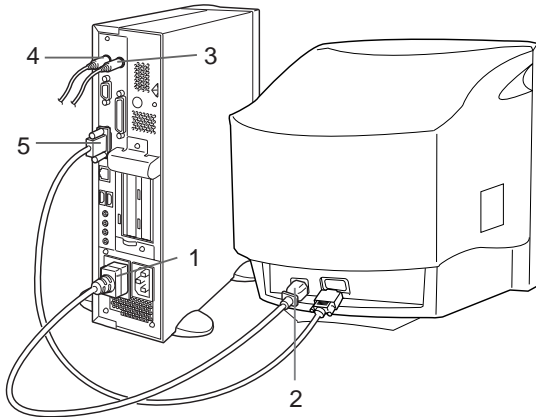


- 1 Plugging the power cord into power receptacle.**  
Plug the power cord of the display unit into the power outlet of the PC.
- 2 Plugging the power cord into inlet of display unit.**  
Plug the other end of power cord into the power inlet at the rear of the display unit.
- 3 Connecting the mouse.**  
Plug the mouse cable into the socket at the rear of the PC, by facing the connector mark to the right and matching the connector color to the mouse label at the rear of the PC.

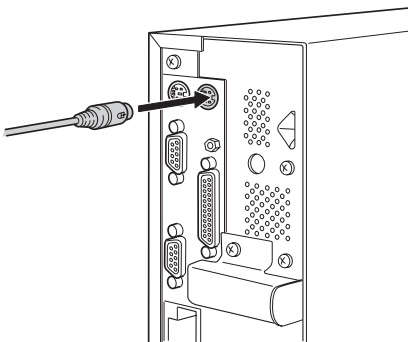


#### 4 Connecting the keyboard.

Plug the keyboard cable into the socket at the rear of the PC, by facing the connector mark to the right and matching the connector color to the keyboard label at the rear of the PC.

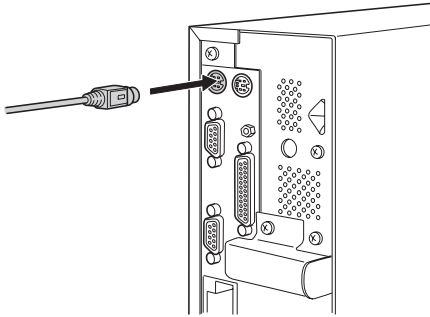

#### 5 Connecting the display cable to the PC unit.


Securely plug the signal cable of the display unit into the display socket at the rear of the PC, and tighten connector setscrews.

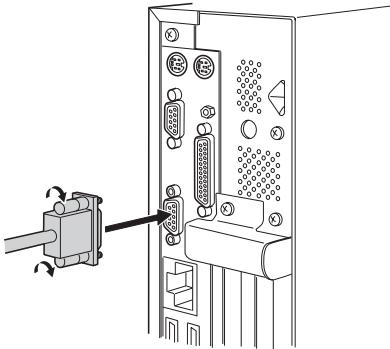


## ■ Connect the Power Cord

When you attach a peripheral device such as the display to your PC, plug its power cord into socket by following the instructions given.


- Do not plug or unplug the power cord with wet hands.
- Do not damage or modify the power cord.
- Do not compress, pull, twist, or heat the power cord.
- Do not use the power cord or power outlet if they are damaged or loose.
- Use a dry cloth to clean the plug pins and power outlet, if they are covered with dust. Connect the power cord to the 230 VAC domestic power.
- Avoid a starburst connection of power cords. Make sure that the power cord is not entangled with the keyboard or mouse cable.
- Disconnect the power cord from the power outlet during a lightning storm.
- If you use a dual-pin power plug, always use the adapter plug (contained in the PC package) for grounding.
- To disconnect the power cord, do not pull the cord but hold the plug and pull.
- Insert the plug fully to the end, when inserting it.
- Unplug the PC power cord from the power receptacle if you are not using your PC for an extended period of time.

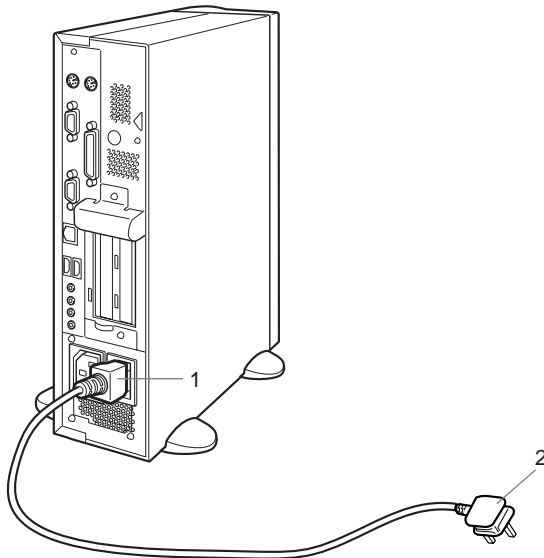

- 1 Plug the power cord into the power inlet at the rear of the PC.**

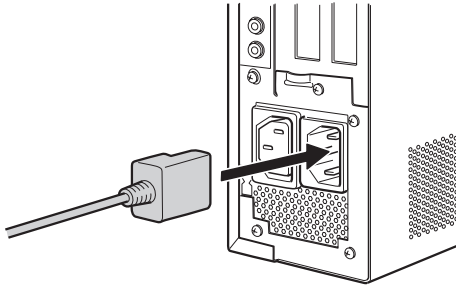

- 2 Connect the power cord to the 230 VAC power source.**  
Plug the other end of power cord into the 230 VAC power receptacle.

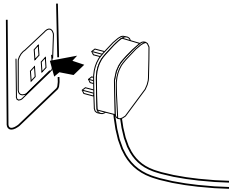

# 3 Power On

## ■ Cautions

- When turning on the PC for the first time after purchase, do not connect any peripheral equipment.
- The power lamp shines orange when the PC is in the standby mode.
- Before turning the PC power switch ON, make sure that the display unit has been connected to the PC. If the display unit is not connected, it is not recognized when you turn the PC power switch on. In such case, the on-screen display may be abnormal when the display unit is connected later. If you use an analog display unit, attach it to the PC. Then, terminate the OS, turn the PC power switch off, and turn it on again.
- If you use a digital display unit by plugging its power cord directly to the power receptacle, make sure that the power switch of the digital display unit is turned on before you turn the PC power switch on. If you turn the PC power switch on before turning on the power switch of digital display unit, nothing appears on the screen. In such case, turn the PC power switch off first, then turn the display and PC power switches on in the correct sequence.
- If you have connected the display power cord to the PC, the display unit is turned on when you turn the PC power switch on. Therefore, you need not use the display power button later once you have pressed it.

The display unit is turned on just when you turn the PC power switch on in the step 2.

- If the window does not appear at the center of screen, check the display frequency for a setup error and correct it from the Control Panel of the PC. If the error continues, fine-adjust the window position using the controls of the display unit.
- If you need to turn the PC power switch off immediately after its power-on, wait until the OS starts up. Then, shut down the PC by following the "Turn off the computer".
- The PC screen may be distorted or it may show horizontal lines when starting to display the image or when changing the display mode (for example, when starting up or shutting down the Windows, or when recovering from the energy saving mode). This is not a fault, you can continue to operate.
- When the FUJITSU logo continues on the screen after you have turn the PC power switch on, the PC is checking its built-in devices by running the POST (Power-On, Self-diagnostic Test). Do not turn the PC power switch off during the POST. If a problem is found during the POST, its error message is displayed.
- The PC screen may be distorted or it may show horizontal stripes instantaneously when the system starts up (including unpacking contract) or shut down. This is not a fault, you can continue to operate.
- If you have added a peripheral device to the PC, do not turn the PC power switch on while the PC upper cover is open.
- After you have turned the PC power switch off, wait at least 10 seconds before turning it on again.
- Check the following, if the screen is blank.
  - The display power switch is turned on.
  - The energy saving mode is not set.  
Move the mouse or press any key. The PC may be shifted to S3 in the ACPI mode, if the standby lamp is orange. Press the power button. If the screen remains blank 30 seconds after you press the power button, then hold down the power button to turn the PC off.
  - The display signal cable is connected correctly.
  - The display power cord is plugged into the power receptacle.
  - The display brightness and contrast controls are adjusted correctly. If not, adjust the screen with the brightness and contrast controls.



## ■ How to Power On

### CAUTION

---


PROHIBITED



- Do not carry or give impact/vibrations to the PC when it is on.  
Or, it may cause a failure.

#### 1 Press the display power button.


Nothing appears on the screen at this time.

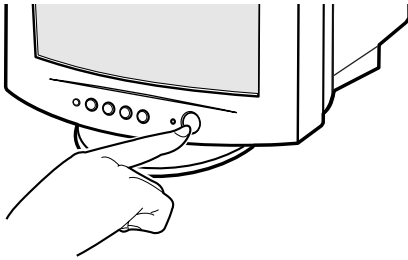

#### 2 Press the PC power button.

The green power lamp will light on both the PC and display unit.

When you turn on the PC, it displays a FUJITSU logo, and starts up the system.

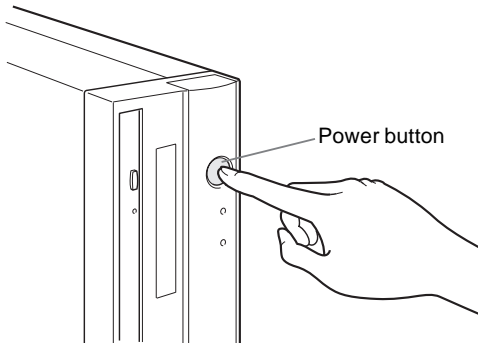

When you turn on the power for the first time, you need to set up Windows.

# 4 Setting Up

This section describes how to set up the Windows when you turn on the PC for the first time. Make sure that you follow the procedure described in this manual.

Read the following Considerations before turning on the PC for setting up the Windows.

## ■ Considerations

- Do not perform the following before setting up Windows. If you do the following, Windows may not be set up correctly, or error messages appear.
  - Connecting peripheral devices
  - Connecting a LAN cable
  - Setting optional cards
  - Installing additional memory
- Considerations for Windows 2000
- During the setup, you may see messages like "The DHCP client failed to acquire IP address" or "The DHCP client failed to rewrite IP address lease." In this case, click [Yes] and complete the setup. After completing the setup, connect and set up the network correctly.

## ■ Setting Up Windows XP

### 1 Turn on the PC.

After a few seconds, [Welcome to Microsoft Windows] appears.

### 2 Click [Next].

[License Agreement] is displayed.

This License Agreement describes the agreement for using preinstalled Windows on the computer.

### 3 Read the [License Agreement] carefully, and click [I agree], and then [Next].

## ◎ Point

---

If you select [I do not agree], click [Next] and follow the instruction message.

---

[Give a name to the Computer] is displayed.

### 4 Enter [Name of This Computer] and [Description of Computer] and click [Next].

You can skip [Description of Computer].

## ◎ Point

---

You can set the name and description of the computer later after completion of setup.

---

[Set Administrator Password] is displayed for Windows XP Professional.  
For Windows XP Home Edition, proceed to step 7.

### 5 Fill out [Administrator Password] and [Reenter Password], and click [Next].

[Will you have this computer participated in domain?] is displayed.

### 6 Click [No] and then [Next].

[Specify how to link to the Internet] is displayed.

### 7 Click [Ignore].

[Are you ready to enter your owner's registration in Microsoft?] is displayed.

### 8 Click [No, I am not going to make my owner's registration this time] and then [Next].

[Setup has been completed] appears.

### 9 Click [Finish].

The PC may restart.

If the Password is entered in step 5, the Password Entry screen appears.

### 10 Enter the password and click [ → ].

### 11 Click [Run this] on the [Start] menu.

[Perform optimum setting for this computer] dialog box appears.

## ⦿ Important

---

You need to perform [Run this] to finalize the setup. Be sure to perform the procedure as it is described here.

---

### 12 Click [Perform].

Final setup is performed, and the restart message is displayed.

### 13 Click [OK].

The PC restarts.

You have completed the Windows setup.

## ■ Setting Up Windows 2000

## ⦿ Point

---

While setting up Windows 2000, you will see a message "The file "xxxxx.xxx" is required from the Windows 2000 Professional CD-ROM" (where "xxxxx.xxx" is replaced with a file name such as "courf.fon"). In this case, enter "c:\support\i386" in the [Copy from] field, and press [OK] to start the setup.

After completing the setup, install Windows 2000 Service Pack2.

---

### 1 Turn on the computer.

After a few seconds, [Starting the Windows 2000 Setup Wizard] is displayed.

### 2 Click [Next].

[License Agreement] is displayed.

This License Agreement describes the agreement for using preinstalled Windows on the computer.

### 3 Read the [License Agreement] carefully, and click [I agree], and then [Next].

## ⦿ Point

---

If you select [I do not agree], click [Next] and follow the instruction message.

---

### 4 Enter [Name] and [Organization] and click [Next].

You can skip [Organization].

[Computer name and administrator password] is displayed.

5 **Fill out [Computer name], [Administrator password], and [Reenter password], and click [Next].**

[Setting up network] appears.

To set up the network, ask your network administrator to check the setup after completing the setup, and set it up for your operating environment.

6 **Click [Standard setting] and [Next].**

## ◎ **Point**

---

With [Standard setting], the following network components are installed.

- Microsoft Network Client
  - Microsoft Network File and Printer Share
  - Internet Protocol (TCP/IP)
- 

[Work group or domain name] appears.

7 **Click [This computer is not on the network, or it is connected to the network without domain], and click [Next].**

[Windows 2000 has been successfully installed] appears.

8 **Click [Restart], or wait 15 seconds to restart the computer.**

[Starting the Network Identification Wizard] appears.

## ◎ **Important**

---

Do not click [Back] on this screen.

To correct the setting, complete the setup, and then correct the setting.

---

9 **Click [Next].**

[Computer user] appears.

10 **Click [User for this computer...] and [Next].**

## ⦿ Point

---

Make sure you select [User for this computer ...]. If you select items other than [User for this computer ...], the setup may not be carried out correctly.

---

[Finishing the Network Identification Wizard] appears.

### **11 Click [Finish].**

The [Windows logon] dialog box appears.

### **12 Enter the password you entered in the step 5, and click [OK].**

The [Introducing Windows 2000] dialog box appears.

### **13 Click [Start] → [Shutdown].**

The computer restarts, showing the [Selecting an Operating System] screen.

### **14 Select [Restart] and click [OK].**

After Windows restarts and the [Windows logo] dialog box appears, log on to the computer.

You have completed the Windows setup.

## ■ Problem During Setup?

If the computer freezes during setup, or if you have any other problem, see the following items.

- The screen does not show anything when the computer is turned on.
  - Turn off the computer, and check the connection of display.
- I cannot go on with the Windows setup.
  - See “Turn off the computer”, turn off the computer, and repeat the setup procedure.
  - If you press a key before a dialog box is completely displayed during the Windows setup, the Windows setup may not be completed successfully. Wait until the dialog box is fully displayed, and then use the mouse to perform the procedure.
- The screen displayed is not centered, or the screen is not clear, after the computer is turned on.
  - If your display has a setting function, see the manual of display.
- The computer makes noise when starting up.
  - Noise is generated during the Windows setup. Adjust the volume, if the speaker is connected.
- The [Add New Hardware Wizard] dialog box appears.
  - Install the driver suitable to your monitor.

# 5 Turn Off the Computer

## ■ Cautions

- Before turning off the computer, finish the work and save your data.
- Before turning of the computer, make sure that the disk access lamp or floppy disk access lamp are all off. If you turn off the computer while these lamps are on, your data may not be saved, or the data stored in the floppy disk or hard disk may be damaged.
- If you have disconnected the power cord or the power has been interrupted while the computer is on, put the power cord back to the power outlet, or wait until power is restored. You do not have to press the power switch. The computer turns on and starts automatically, when power is restored. The computer cannot be turned on, when [Energy saving setting] – [Actions when AC power is restored] is set [Power OFF] in the BIOS Setup.
- You cannot turn the power off during POST. Follow the procedure described later, after the operating system has started up completely.
- If you cannot turn the PC power off or restart the PC, hold down the power button four or more seconds. The PC will be turned off. However, the internal hard disk unit may be damaged if you repeat this power-off operation. Use this power-off operation in emergency only.

## ■ How to Turn Off

To turn off the computer automatically, perform the following operation:

### ● For Windows XP:

Click [Start], [Turn Off Computer] option and [Turn off].






- **For Windows 2000:**

Click [Start] and [Shutdown], select [Shutdown] and click [OK].



- **For Windows Me:**

Click [Start] and [Exit Windows], select [Place into mode of readiness for turning off], and click [OK].

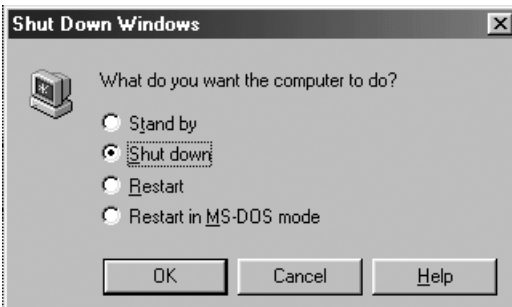

- ◎ **Point**

- If the power is not turned off by the above operation, cut the power by following steps below:
  1. Press [Ctrl] + [Alt] + [Delete] keys.
  2. To turn off the computer automatically, carry out the following steps:
    - For Windows XP  
Click [Shutdown] and [Turn off computer].
    - For Windows 2000  
Click [Shutdown], select [Shutdown] and click [OK].
    - For Windows Me  
Click [Shutdown].
- If you select the menu to restart Windows in the above screen, you can restart the computer. Use the restart menu, when installing a software, or when the software has stopped for some reason while in operation. The data stored in the memory is lost, when you restart the computer. Save important data before restarting the computer.

# **CHAPTER 3**

---

---

## **Hardware**

---


---

# 1 Keyboard

This section explains the functions of the keys on the keyboard.

## ◎ Point

Key functions may vary depending on the operating system and applications used. See manuals attached to the operating system and applications.

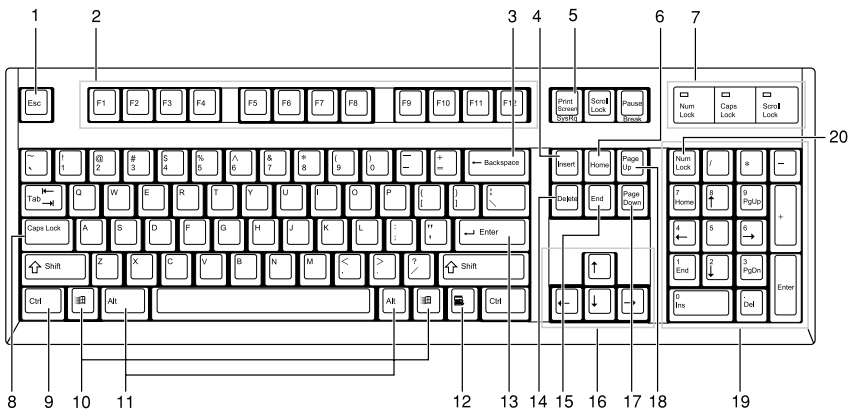

### 1 Esc key

Pressing this key cancels the operation the application program is executing.

### 2 F keys

These F keys are assigned specific functions for each application.

### 3 Back space key

Press the Back Space key to move the cursor to the left while deleting characters.

### 4 Insert key

Press the Insert key to switch between character insert mode and overwrite mode.

### 5 Print Screen key

Pressing this button copies the screenshot to the clipboard.

### 6 Home key

Press the Home key to move the cursor all at once to the beginning of the current line or text.

### 7 Indicators

The indicator lights when you press [Num Lock], [Shift] + [Caps Lock], or [Scroll Lock], indicating that it is enabled. When the key is pressed again, the indicator turns off and the key function is disabled.

## 8 Caps Lock key

Use the Caps Lock key to type alphabetical characters.  
Press [Shift] + [Caps Lock] to switch between uppercase and lowercase.

## 9 Ctrl key

Use the Ctrl key in combination with another key. Its function varies with each application.

## 10 Windows key

Press the Windows key to display the Start menu.

## 11 Alt key

Use the Ctrl key in combination with another key. Its function varies with each application.

## 12 Application key

This key has the same function as clicking the right mouse button.  
Press this key to display the shortcut menu of the selected item.

## 13 Enter key

The Enter key is also referred to as the Return key.  
Press this key to perform line feed or execute a command.

## 14 Delete key

Press the Delete key to delete a character. Press this key together with [Ctrl] and [Alt] to reset the computer.

## 15 End key

Press the End key to move the cursor all at once to the end of the current line or text.

## 16 Cursor keys

Press each of these keys to move the cursor in the desired direction.

## 17 Page Down key

Scrolls down the on-screen page when pressed.

## 18 Page Up key

Scrolls up the on-screen page when pressed.

## 19 Numeric keypad


Enables you to enter numerals when the [Num Lock] indicator is on.  
The function described in the lower part of the numeric key is enabled when the [Num Lock] indicator is off.

## 20 Num Lock key

Press the Num Lock key to change the Ten-key pad functions.

## 🕒 Point

To tilt the keyboard, pull up the tilt foot on the both sides of the underside of the keyboard.

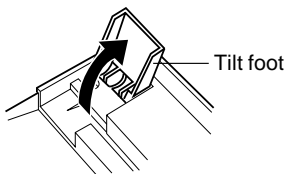

## 2 CDs

This section describes how to handle, insert, and remove a CD.

### ■ Notes on Handling

Follow the following guidelines to prevent faults when handling a CD.

#### Guidelines for CD Media

- Apply no label to any side of the disk. Do not use a ballpoint pen or pencil.
- Do not touch or damage the data side.
- Do not bend the disk or put a heavy object on it.
- If the disk has dirt or water droplets, use a damp cloth to wipe them off and clean the disk with a dry cloth. Always wipe the disk along the radius.
- Keep the disks dry.
- Do not place the disks in an extreme temperature environment.
- Do not place the disks in a humid and dusty environment.

#### Notes on Using the Drive

- Do not use the CD, if it is not safeguarded according to “Handling guidelines for CD media” above, or it has bends, cracks, or fissures. Otherwise, a fault may occur. The warranty is not applied to any failure caused by the use of such CDs.
- This PC accepts only round CDs. Do not use odd-shaped CDs. Otherwise, a fault may occur. The warranty is not applied to any failure caused by the use of CD in a variant shape.
- Use of a commercially available CD-ROM drive cleaning disk may put dusts on the lens. Do not use a CD-ROM drive cleaning disk.

### ◎ Point

- A CD-ROM is the same as a music CD (compact disc) except it has computer information (characters) instead of sound. ROM stands for Read Only Memory. This PC can read data from CD-ROMs but cannot write data, except when CD-R/RW is selected.
- This PC accepts any CD that has one of the following marks. Do not use the CD if it does not carry any of them. Or, it may cause a failure. An additional application may be necessary to use particular types of CDs.



\*1 You can write on the CD if you have a CD-R/RW drive.


\*2 If you write data at 8X speed or higher, you need to have a high speed-ready drive.

## ■ Inserting or Removing a CD

### ● Inserting a CD


#### 1 Press the CD eject button.

Press the middle of the CD eject button, and the CD tray pops out.

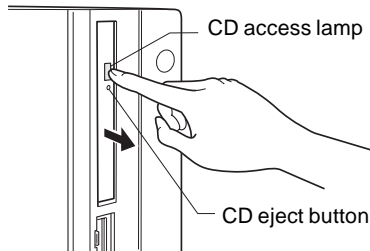


#### 2 Pull the tray out with a hand.

As shown in the figure, hold the center of the tray.

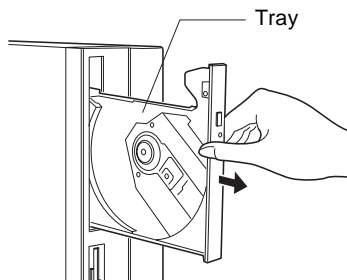

#### 3 Mount the CD by facing its label to the left, and push the CD until it snaps onto the hub at the center of the tray.

When pressing the CD, hold the tray not to tip over the PC.

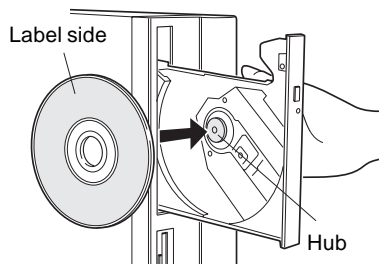

### ◎ Point

Be sure to press the CD until it snaps onto the hub at the center of the tray. Otherwise, a fault may occur.

#### 4 Manually push the tray until it clicks.

The tray goes into the computer, and sets the CD.

#### ⦿ **Point**

---

- The CD access lamp lights when the CD is set. Wait until the CD access lamp turns off, and then do the following.
  - The tray is not set correctly, if you press the CD eject button while pushing in the tray.
- 

#### ● **Removing the CD**

Before ejecting the CD, make sure that the CD access lamp is off. If OK, press the CD eject button.

# 3 Floppy Disks

This section explains how to handle, insert, and remove a floppy disk.

## ■ Notes on Disk Handling

To prevent faults, note the following when handling floppy disks.

- Keep the disks dry.
- Do not touch the disk inside.
- Do not bend the disk or put a heavy object on it.
- Keep the disks away from magnetism.
- Do not drop the disks.
- Do not place the disks in an extreme temperature environment.
- Do not place the disks in a humid and dusty environment.
- Do not affix two or more labels.
- Keep them free from condensation or moisture.


## ■ Inserting or Removing a Floppy Disk

### ◎ Point

Use DOS/V formatted floppy disks. Operation with other types of floppy disks is not guaranteed.

### ● Inserting a Floppy Disk


- 1 **With the label side on the left and the shutter end on the front, insert a floppy disk into the drive.**

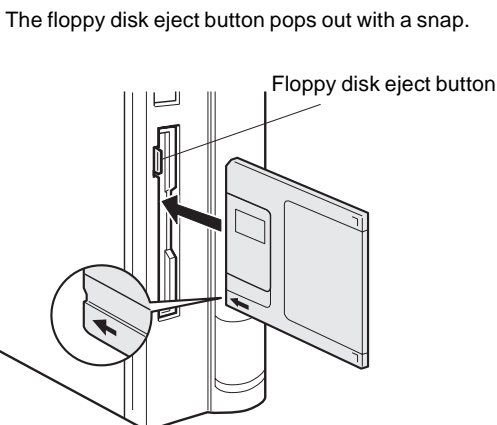



## ● Removing a Floppy Disk

- 1 Make sure that the floppy disk access lamp is off.

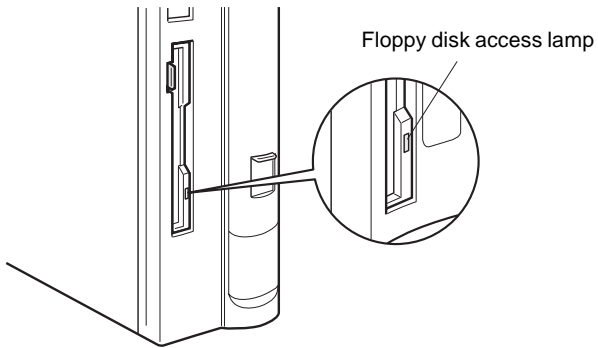

## ⦿ Point

---

Do not press the floppy disk eject button while the floppy disk access lamp is on. Data stored on the disk may be damaged.

---

- 2 Press the Floppy disk eject button.

The floppy disk comes out.

# 4 Hard Disk

This section provides cautions on handling the hard disk drive.

## ■ Cautions

To prevent faults, note the following.

- Data is read from the hard disk drive or written to it while the internal disk that stores data is rotating at high speeds. Since it is a very delicate device, do not carry the PC with the power on or do not apply shock or vibration to the PC.
- Do not use or store the hard disk drive in an area where temperature changes sharply in an extremely wide range.
- Do not place the hard disk drive in an area exposed to direct sunlight or near a heater.
- Do not use or store the hard disk drive in an area subjected to shock or vibration.
- Do not use or store the hard disk drive in a humid or dusty area.
- Do not use or store the hard disk drive near a magnet or device that generates a strong magnetic field.
- Do not disassemble or break down the hard disk drive.
- Keep them free from condensation or moisture.

## ◎ Point

---

- Improper handling may damage the data stored on the disk. Always make backup copies of important data.
  - Even hard disks of the same type have different capacities. It is recommended to back up data not in units of hard disks but in units of files or sectors.
-

# 5 Maintenance of the Hardware

## ■ Maintenance of the PC Unit

### CAUTION

ELECTRIC SHOCK



- Before starting maintenance work, turn off the PC and all devices connected to it, and unplug them.  
Otherwise, electric shock may occur.

- Clean the PC using a soft dry cloth. Wipe remaining dirt off using a damp cloth, moistened with neutral detergent and wrung well. Once the dirt is wiped off, remove the neutral detergent from the PC with a well-wrung cloth moistened with water. Be careful not to let water enter the PC system.
- Clean the ventholes regularly to prevent dust buildup.
- Do not use solvents. Use neutral detergent only. Otherwise, the PC may be damaged.


## ■ Maintenance of the Mouse

Clean the surface using a soft dry cloth. If the mouse ball does not roll freely, remove and clean the ball.

Take the following steps.


### 1 Remove the mouse bottom cover.

Remove the cover on the bottom of the mouse by turning it in the direction of the arrow.

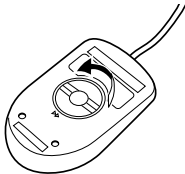


### 2 Remove the ball and clean it with water.

Turn over the mouse to remove the ball. Clean the ball with water.

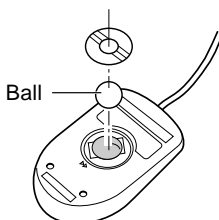

### 3 Clean the inside of the mouse.

Wipe the inside of the mouse, roller, and the bottom cover with a damp cloth.

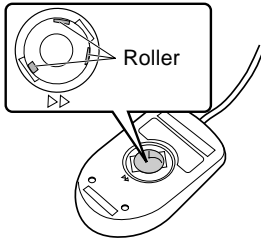

### 4 Reassemble the ball and bottom cover.

When the ball and the inside of the mouse are dry, reassemble the ball and cover.

## ■ Maintenance of the Keyboard

Clean the PC using a soft dry cloth.

## ■ Cleaning CDs

- If the disk has dirt or water droplets, use a damp cloth to wipe them off and clean the disk with a dry cloth. Always wipe the disk along the radius.
- Use of a commercially available CD-ROM drive cleaning disk may put dusts on the lens. Do not use a CD-ROM drive cleaning disk.

## ■ Cleaning the Floppy Disk Drive

As the floppy disk drive is used for a prolonged period, the head (the part that reads or writes data) becomes dirty. A dirty head may affect the data reading and writing operation on floppy disks. Use the separately sold cleaning floppy (supply item) for about once every three months.

### 1 Insert a cleaning floppy disk into the floppy disk drive.

### 2 At the command prompt, run the “dir” or similar command that accesses to the disk.

Example: Enter a command as shown below and press the [Enter] key.

```
dir a:
```

### 3 Make sure that the floppy disk access lamp is off, then remove the cleaning floppy disk.

# **CHAPTER 4**

---

---

## **System Expansion**

---

---

# 1 Before Installing a Peripheral Device

This PC can accommodate various peripheral devices to expand its functions.

## CAUTION

---

ELECTRIC SHOCK



- Use only peripheral devices recommended by Fujitsu. Otherwise, electric shock, fire or a fault may occur.

## CAUTION

---

PROHIBITED



- When installing or removing a peripheral device, do not remove screws other than those specified in the manual. Otherwise, personal injury or a fault may occur.

FAILURE



- Read this manual carefully to ensure correct cable connections. An incorrect connection can damage the PC or peripheral devices.

## ■ Notes on Handling

When installing a peripheral device, note the following.

- Some peripheral devices may not be used on your PC. Before purchasing a peripheral device, refer to the “System configuration diagram” to determine whether the peripheral device can be used on your PC.
- Whenever possible, use Fujitsu peripheral devices. Malfunction or damage caused by the use of a third-party product instead of the Fujitsu device shall not be covered by the warranty. Before using a peripheral device in a category for which Fujitsu does not supply genuine products, contact the third-party manufacturer to ask whether the device is compatible with the PC.
- Install one peripheral device at a time. Installing more than one peripheral device at a time may cause driver installation to fail. After finishing installation of one peripheral, install another.
- Turn off the PC and connected devices. For safety, be sure to unplug the PC and connected devices. Even if the PC is turned off, an electric current flows in the PC unit.
- Do not start work immediately after turning off the power. Components inside the PC may be still hot. Turn the computer off, remove the plug from the power outlet, and wait for approximately ten minutes before starting to work.
- Do not disassemble the power supply unit. The power supply unit is a box-shaped component on the back inside the PC.

- After removing the feet, place the PC unit on a soft cloth.  
Placing the PC directly on a hard surface may cause scratches on the PC.
- Be careful with the cables and components inside.  
Do not damage or modify them.
- Be careful of static electricity.  
PC boards and electronic parts of internal peripheral devices are exposed. They may be damaged by static electricity generated on your body. Before handling these parts, touch a large metallic object to discharge static electricity.
- Do not touch PC board surface, soldered parts or connectors.  
Hold PC boards by the brackets or edges.
- Power supply for peripheral devices  
Typical peripheral devices should be turned on before turning on the PC, however, some should be turned on after the PC. See the manual for the peripheral device.
- Use ACPI peripheral devices only.  
This PC conforms to the ACPI standard (one of the power supply control standards for power saving). When you use a peripheral device on an ACPI-conforming OS, ask the device manufacturer if your device conforms to ACPI. Non-conforming devices may not work properly.
- Use an appropriate screwdriver.  
You must use a Phillips screwdriver to install/remove peripheral devices.  
Use a screwdriver of an appropriate size not to damage screw heads.


## 2 Removing the Cover

When mounting a peripheral device, remove the upper cover so that the inside can be seen.

### ■ Removing the Cover


Remove the feet, if any, from the PC unit. Place the PC unit in a horizontal position and remove the upper cover.

- 1 Remove the two screws on the PC unit.

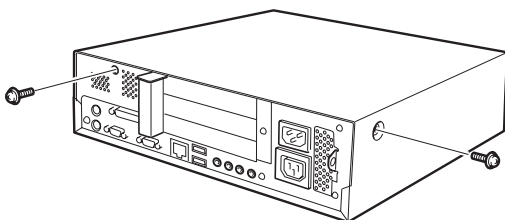

- 2 Remove the upper cover.

Slide the upper cover to the front of the PC unit and lift it for removal.

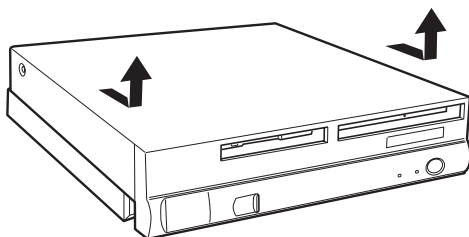

### ⦿ Point

For installation, use the removal procedure in the reverse order.



# 3 Installing Memory Modules

Increasing the memory capacity increases the amount of data that the system can read at one access, thereby improving the processing capability of the PC.

## ◎ Point

---

If you want to install a memory module to the PC you have just purchased, set up Windows, turn off the PC, and then install the memory module.

---

## ⚠ CAUTION

---

ELECTRIC SHOCK



- Before installing or removing a memory module, turn off the PC and all devices connected to it, and unplug them. Otherwise, electric shock may occur.

ELECTRIC SHOCK



- Use a Fujitsu memory module. Otherwise, electric shock, fire or a fault may occur.

## ⚠ WARNING

---

PROHIBITED




- When installing or removing a memory module, do not remove screws other than those POINT specified. Otherwise, personal injury or a fault may occur.

INJURY



- When accessing the PC board, touch the specified areas only. Otherwise, personal injury or a fault may occur.

## ■ Location of Memory Modules

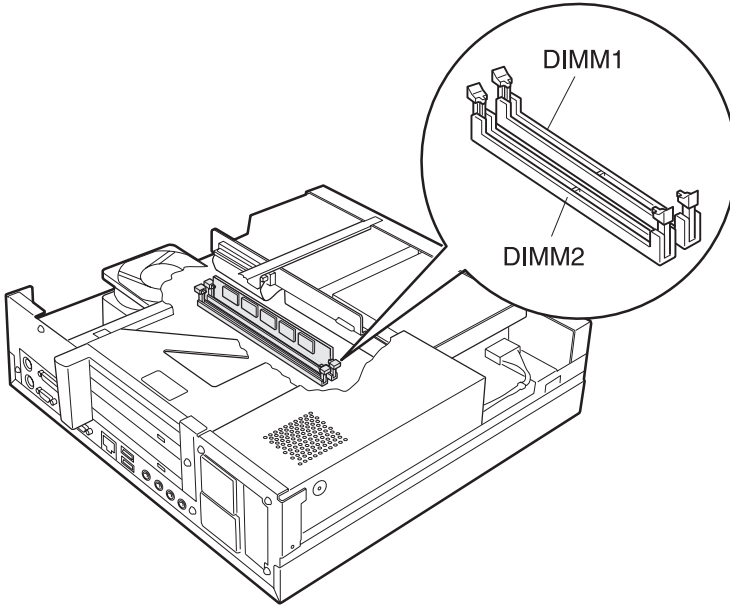

## ■ Applicable Memory Modules

Use Fujitsu 1 84-pin DDR SDRAM DIMM memory (PC 2100 ECC-incompatible) memory modules. The maximum memory capacity is 1 GB (512 MB x 2).

For the standard configuration, memory is installed in DIMM1. To add memory, install it in DIMM2. The memory module in slot DIMM1 must be changed depending on the total memory capacity you want.

### ● Memory Module Combinations

DIMM1	DIMM2	Total memory capacity
128 MB	–	128 MB
128 MB	256 MB	384 MB
128 MB	512 MB	640 MB
256 MB	–	256 MB
256 MB	256 MB	512 MB
256 MB	512 MB	768 MB
512 MB	–	512 MB
512 MB	256 MB	768 MB
512 MB	512 MB	1 GB

## ■ Installing Memory Modules


1 Unplug the PC.

2 Remove the upper cover.


3 Remove the expansion card mounting bracket and reinforcing fitting.

Remove the two screws and pull straight up the expansion card mounting bracket. (The reinforcing fitting is removed together with the expansion card mounting bracket.)

When an expansion card has been installed, remove the cable from the card and remove the bracket.

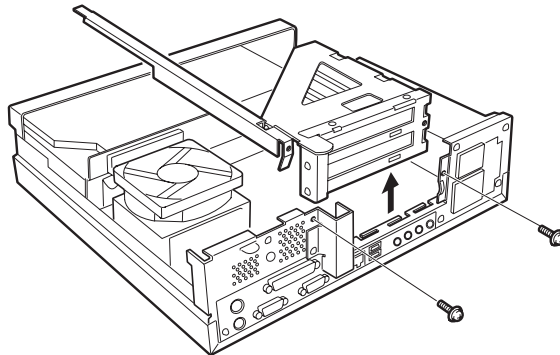


4 Pull the hooks on both sides of the slot outward.

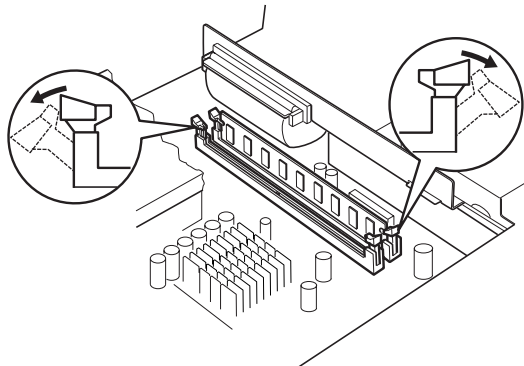

5 Insert a memory module into the slot.


Insert the memory module into the slot while aligning the notch on the memory module with that on the slot.

When the memory module is inserted correctly, the hooks on both side rise. Make sure that the hooks hold the memory module securely.

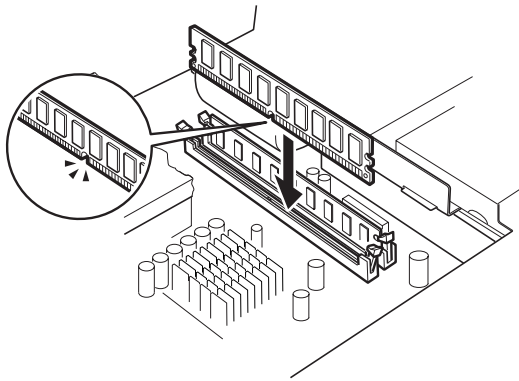


**6 Install the expansion card mounting bracket and reinforcing fitting.**

Secure it with the two screws you have removed in Procedure 3.

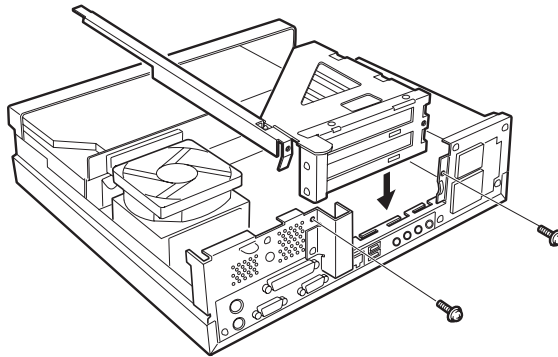

**7 Installing Memory Modules**

Reinstall the upper cover.

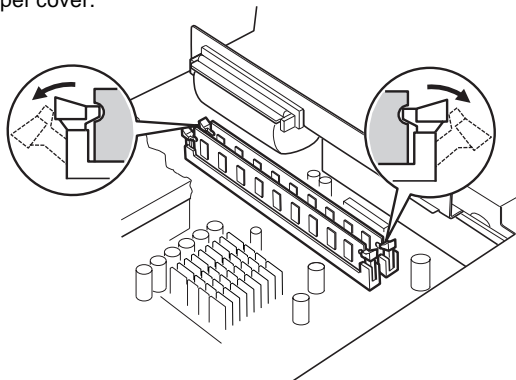

**⦿ Point**

To remove a memory module, open module hooks at both sides of the slot. Do not pull the hooks too violently. Otherwise, the memory module may jump out of the slot and become faulty.

# 4 Installing an Expansion Card

Expansion cards are used to enhance the PC functions.

## ◎ Point

If you want to install an expansion card to the PC you have just purchased, set up Windows, turn off the PC, and then install the card.

## ⚠ CAUTION

ELECTRIC SHOCK



- Before installing or removing an expansion card, turn off the PC and all devices connected to it, and unplug them. Otherwise, electric shock may occur.

ELECTRIC SHOCK



- Use Fujitsu expansion cards. Otherwise, electric shock, fire or a fault may occur.

## ⚠ WARNING

PROHIBITED




- When installing or removing an expansion card, do not remove screws other than those specified. Otherwise, personal injury or a fault may occur.

INJURY



- When accessing the PC board, touch the specified areas only. Otherwise, personal injury or a fault may occur.
- Do not touch the metal fittings on the back of the motherboard. Otherwise, personal injury or a fault may occur.

## ■ Location of expansion Cards

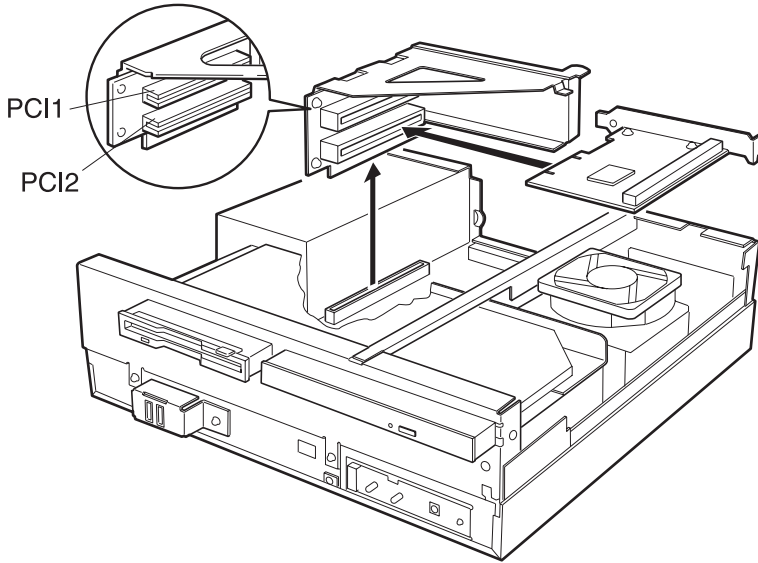

## ■ Applicable Expansion Cards

This PC accommodates a PCI expansion card.

The PCI1 slot holds an expansion card with a maximum length of 176 mm (half size) and the PCI2 slot holds an expansion card with a maximum length of 120 mm (half size).

To run the expansion card, the generally called resource necessary for operation must be assured. The floppy disk drive and hard disk drive inside the PC use paths predetermined according to each component to swap data with the CPU, memory module, and so on. As the types of these paths, the I/O port addresses, DMA channel, and intervention required (IRQ) are provided, which are generally called "resource".


The Plug-and-Play expansion card for the PCI bus automatically configures the resource when it is installed.

## ■ Installing an Expansion Card

- 1 Unplug the PC.
- 2 Remove the upper cover.


### 3 Remove the expansion card mounting bracket.

Remove the two screws and pull straight up the expansion card mounting bracket. When an expansion card has been installed, remove the cable from the card and remove the bracket.

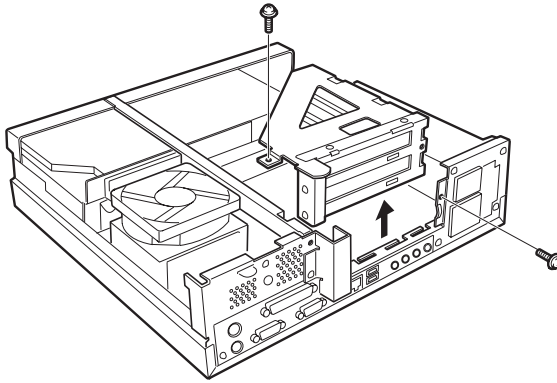

### 4 Remove the slot cover.

Remove one screw from the position where the expansion card is installed, and remove the slot cover.

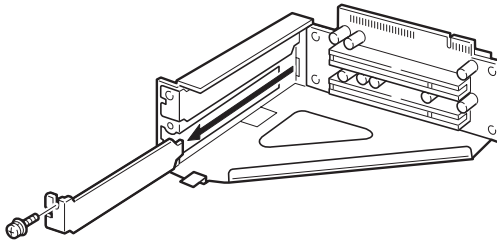

## ⦿ Point


---

Keep the removed slot cover.  
Use the cover to keep an empty slot from dust.

---


**5 Insert the expansion card into the slot.**

Insert the expansion card into the slot, and secure it with the screw removed in Procedure 4.

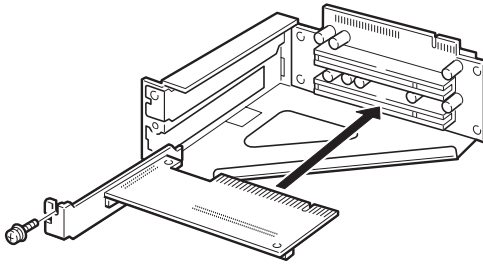

**6 Install the expansion card mounting bracket.**

Secure it with the four screws you have removed in Procedure 3.

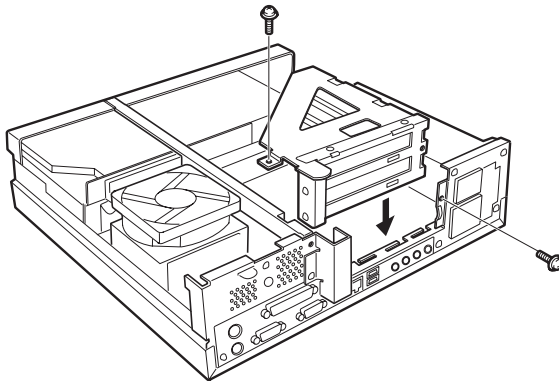

**7 Reinstall the upper cover.**

**⦿ Point**

To remove the expansion card, use the installation procedure in the reverse order.

**8 Plug the PC.**

**9 Turn on the PC.**

The system configures the device driver and resource to enable the expansion card.

**⦿ Point**

- The device drivers automatically selected by the Plug & Play functions are those included in the Windows XP/2000. Device drivers for some of expansion cards and peripherals are not included. If so, use a CD-ROM containing the device driver supplied with the expansion card and install it by following the messages. For more information, refer to the manual provided with the expansion card and peripherals.
- Before using the installed expansion card, use Device Manager to check whether the device driver is installed. If not, delete the device driver and then reboot the Windows XP/2000.



# **CHAPTER 5**

---

---

## **Technical Information**

---

---

# 1 List of Specifications

## ■ PC Specifications

Product Name		DESKPOWER 5000
CPU		Intel® Pentium® 4 processor 1.7/1.9/2.0/2.2 GHz
Cache memory		Intel® Pentium® 4 processors 2A GHz Primary 8KB + Secondary 512KB (CPU integrated) Intel® Pentium® 4 processors 1.70GHz Primary 8KB + Secondary 256KB(CPU integrated)
System bus		400MHz
BIOS ROM		512 KB (Flash ROM)
Main memory		128 MB (184Pin PC2100 DDR SDRAM DIMM) as a standard feature, ECC-incompatible 1GB, max.
Memory slot		×2 (Empty slot ×1)
Display function	Graphic accelerator	Intel® 845G (AGP4 × •GMCH Chipset integrated)
	Video RAM	48MB, max. (Shared with main memory, DVMT "1)
	Video output signals	Video: Analog RGB, Sync signals; TTL-compatible
	Resolution/number of colors	1280 × 1024 dots, max., 16.77 million colors, max.
Floppy drive		3.5", 1.44 MB
Harddisk drive (EIDE)		20/40/80 GB*3
Optical drive		CD-R/RW (32×/8×/4×), Combo Drive [DVD (8×) & CD-E/RW (32×/8×/8×)] or CD-ROM (24×)
Auto Function		
Sound Controller		Chip set incorporated + AC97 codec
PCM recording/playback functions		Sampling frequency: 48 kHz, max. 16-bit stereo signals Simultaneous recording and playback functions
MIDI playback function		Supported by the standard functions of the OS
Communication function	LAN	100BASE-TX/10BASE-T, Wakeup On LAN and Alert On LAN supported
Interface	Display	Analog RGB min-SUB 15-pin
	Serial	Asynchronous RS-232C × 1, D-sub 9-pin
	Parallel	Centronics compliant ECP-compatible D-sub 25-pin × 1
	Keyboard/mouse	Mini-DIN 6-pin (For keyboard•1\$for mouse•1)
	USB	USB connector 4-pin × 5 (USB2.0 compliant) (On front × 2, on rear × 2)
	LAN	RJ-45•1
Audio System		Microphone terminal (3.5mm monaural mini jack), speaker terminal (3.5mm stereo mini jack), line-in terminal (3.5mm stereo mini jack), line-out terminal (3.5mm stereo mini jack)
Expansion slots		× 2 (Rev. 2.2-supported) PCI(Half: 176mm)•1 PCI(Half: 120mm)•1
Storage bays		•4 Front: A CD-ROM drive is installed. A 3.5-inch floppy disk drive is installed. Smart Card bay (for custom-made option) Inside: A 3.5-inch hard disk drive is installed.

Product Name	DESKPOWER 5000
Power/Frequency	100/230 VAC, 50/60 Hz
Outer dimensions	80(W)•326(D)•305(H)mm(excluding foot and protrusions)
Weight	Approx. 7 kg
Burglarproof lock	Yes

- \*1: The capacity is automatically changed by Intel Dynamic Video Memory Technology according to system conditions.  
 \*2: Disk capacities are based on a conversion of 1 MB = 1000 2 bytes and 1 GB = 1000 3 bytes. Actual disk capacities based on conversion of 1 MB = 1024 2 bytes and 1 GB = 1024 3 bytes are displayed on Windows as smaller than those described on this manual.  
 \*3: Data is written and rewritten at 8X speed, and read at 24X speed when CD-R/W/R is selected.  
 \*4: Energy consumption in the power OFF state can be canceled by unplugging the PC power cord from the power receptacle.  
 \*5: These values are subject to change depending on the configuration of the system you use.

## ◎ Point

The PC specifications are subject to change for improvements without notice. Please note the above cautions.

## ■ Energy consumption efficiency in accordance with the Law Concerning the Rational Use of Energy

	CPU	Pentium® 4-2A GHz	Pentium® 4-1.70GHz
In accordance with the Law Concerning the Rational Use of Energy consumption	Windows XP model	0.0045	0.0053
	Windows 2000 model	0.0047	0.0053

## ■ LAN function

LAN Controller	Intel 82801DB(ICH4)integrated + 82562EM
Transmission buffer RAM	3K bytes for transmission (send/receive)
External Interface	ISO8802-3 100BASE-TX/10BASE-T
Transmission media	Twisted pair cable ** (100Mbps: Category 5, 10Mbps: Category 3 - 5)
Transmission system	Baseband
Access method	CSMA/CD
Data transfer rate	100 Mbps, 10 Mbps
Cabling form	Star form
Maximum segment length	100 m
Maximum nodes/segments	Depending on the hub unit <sup>2</sup>

\*1: To successfully activate the network at 100 Mbps, use a non shield twisted pair (UTP) cable of Category 5 or higher. The data may be lost, if Category 3 cable is used.

\*2: The hub unit implies a 100 BASE-TX/10BASE-T concentrator.


### ◎ Point

The standard built-in LAN of this computer automatically supports the data rate of the network. If the network speed changes due to changes in the hub unit, be sure to use cables of an appropriate data grade for that speed.

## 2 Connector Specifications


The following table provides the pin assignment and signal names.

### ● CRT connector

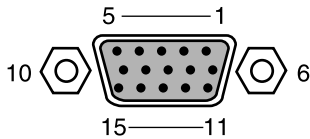


Pin number	Signal name	Direction	Description
1	RED	Output	Red (R) signal output
2	GREEN	Output	Green (G) signal output
3	BLUE	Output	Blue (B) signal output
4	NC	–	Not connected
5 - 8	GND	–	Ground
9	+5V	–	+5V
10	GND	–	Ground
11	NC	–	Not connected
12	SDA	Input and output	Data
13	HSYNC	Output	Horizontal synchronization signal
14	VSYNC	Output	Vertical synchronization signal
15	SCL	Input and output	Data clock

● LAN connector (100BASE-TX/10BASE-T)

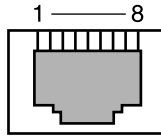


Pin number	Signal name	Direction	Description
1	TD+	Output	Send data +
2	TD-	Output	Send data -
3	RD+	Input	Receive data +
4	NC	-	Not connected
5	NC	-	Not connected
6	RD-	Input	Receive data -
7	NC	-	Not connected
8	NC	-	Not connected

● Parallel connector

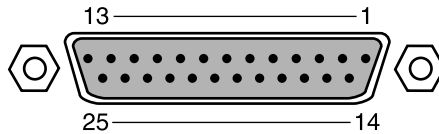


Pin number	Signal name	Direction	Description
1	*STROBE	Input and output	Strobe
2	DATA 0	Input and output	Data 0
3	DATA 1	Input and output	Data 1
4	DATA 2	Input and output	Data 2
5	DATA 3	Input and output	Data 3
6	DATA 4	Input and output	Data 4
7	DATA 5	Input and output	Data 5
8	DATA 6	Input and output	Data 6
9	DATA 7	Input and output	Data 7
10	*ACK	Input	Acknowledge
11	BUSY	Input	Busy
12	PE	Input	Out of paper
13	SELECT	Input	Select
14	*AUTOFD	Output	Auto forward
15	*ERROR	Input	Error
16	*INIT	Output	Initialization
17	SLCTIN	Output	Select
18-25	GND	-	Ground

## ● Serial connector

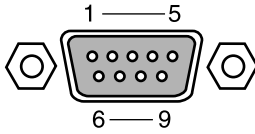


Pin number	Signal name	Direction	Description
1	CD	Input	Carrier detect
2	RD	Input	Receive data
3	TD	Output	Transmission data
4	DTR	Output	Data terminal ready
5	GND	–	Ground
6	DSR	Input	Data set ready
7	RTS	Output	Request to send
8	CTS	Input	Clear to send
9	RI	Input	Ring indicate

## ● Mouse connector

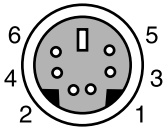

Pin number	Signal name	Direction	Description
1	DATA	Input and output	Data
2	NC	–	Not connected
3	GND	–	Ground
4	VCC	–	Power
5	CLK	Input and output	Clock
6	NC	–	Not connected

## ● Keyboard Connector

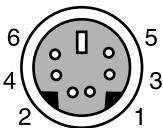

Pin number	Signal name	Direction	Description
1	DATA	Input and output	Data
2	NC	–	Not connected
3	GND	–	Ground
4	VCC	–	Power
5	CLK	Input and output	Clock
6	NC	–	Not connected

# Glossary

## Symbol

100BASE-TX/10BASE-T ..... 58

## C

### CD

- inserting ..... 33

- removing ..... 33

- maintenance ..... 39

Connector specifications ..... 57

CRT connector ..... 57

## E

Expansion card ..... 49

- installation ..... 50

## F

Floppy disk ..... 35

- cleaning the drive ..... 39

- inserting ..... 35

- removing ..... 36

## H

Hard disk ..... 37

## K

Keyboard ..... 30

- maintenance ..... 39

## L

LAN connector

- specifications ..... 58

## M

Maintenance of the PC unit ..... 38

Memory ..... 45

Motherboard ..... 7

Mouse

- maintenance ..... 38

## N

Names and functions ..... 2

## P

Parallel connector ..... 58

Power switch ..... 20

## R

Removing the Cover ..... 44

## S

Serial connector ..... 59

Specifications ..... 54

## V

Venthole ..... 38