

# Photo Cartridge Caution

Carefully follow the photo cartridge installation instructions on the *Start Here* poster. If the cartridge is installed incorrectly, ink may leak.

After installing the cartridge, make sure the sides of the cartridge are even.

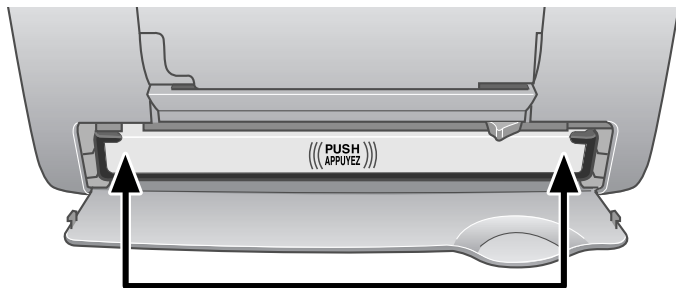


Photo cartridge installed correctly.

If the photo cartridge is crooked, release the lever, then remove the cartridge and reinstall it following the instructions on the *Start Here* poster.



If either side of the photo cartridge sticks out, the cartridge is installed incorrectly.