




Planer

MODEL KP312

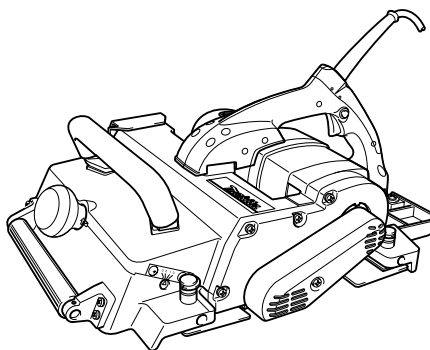

003868



I N S T R U C T I O N M A N U A L

⚠ WARNING:

For your personal safety, READ and UNDERSTAND before using.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

www.makitatools.com

SPECIFICATIONS

Model	KP312
Planing width	312 mm (12-1/4")
Planing depth	0 - 3.5 mm (0 - 1/8")
No load speed (RPM)	12,000/min.
Overall length	551 mm (21-3/4")
Net weight	18 kg (39.7 lbs)

- Manufacturer reserves the right to change specifications without notice.
- Specifications may differ from country to country.

GENERAL SAFETY RULES

USA002-2

(For All Tools)

⚠ WARNING:
Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

Work Area

1. **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
3. **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control.

Electrical Safety

4. **Double insulated tools are equipped with a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way.** Double insulation  eliminates the need for the three wire grounded power cord and grounded power supply system.

-
5. **Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is grounded.
 6. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
 7. **Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately.** Damaged cords increase the risk of electric shock.
 8. **When operating a power tool outside, use an outdoor extension cord marked “W-A” or “W”.** These cords are rated for outdoor use and reduce the risk of electric shock.

Personal Safety

9. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
10. **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.
11. **Avoid accidental starting. Be sure switch is off before plugging in.** Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.
12. **Remove adjusting keys or wrenches before turning the tool on.** A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
13. **Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations.
14. **Use safety equipment. Always wear eye protection.** Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions. Ordinary eye or sun glasses are NOT eye protection.

Tool Use and Care

15. **Use clamps or other practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.
16. **Do not force tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.
17. **Do not use tool if switch does not turn it on or off.** Any tool that cannot be controlled with the switch is dangerous and must be repaired.
18. **Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the tool.** Such preventive safety measures reduce the risk of starting the tool accidentally.
19. **Store idle tools out of reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
20. **Maintain tools with care. Keep cutting tools sharp and clean.** Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
21. **Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tools operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.
22. **Use only accessories that are recommended by the manufacturer for your model.** Accessories that may be suitable for one tool, may become hazardous when used on another tool.

SERVICE

23. Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.

24. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of electric shock or injury.

USE PROPER EXTENSION CORD: Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table 1 shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Table 1: Minimum gage for cord

Ampere Rating		Volts	Total length of cord in feet			
		120 V	25 ft.	50 ft.	100 ft.	150 ft.
More Than	Not More Than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	

SPECIFIC SAFETY RULES

USB042-2

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to planer safety rules. If you use this tool unsafely or incorrectly, you can suffer serious personal injury.

1. Rags, cloth, cord, string and the like should never be left around the work area.

2. Avoid cutting nails. Inspect for and remove all nails from the workpiece before operation.

3. Use only sharp blades. Handle the blades very carefully.

4. Be sure the blade installation bolts are securely tightened before operation.

5. Hold the tool firmly with both hands.
6. Keep hands away from rotating parts.

7. Before using the tool on an actual workpiece, let it run for a while. Watch for vibration or wobbling that could indicate poor installation or a poorly balanced blade.

8. Make sure the blade is not contacting the workpiece before the switch is turned on.

9. Wait until the blade attains full speed before cutting.

-
- 10. Keep at least 200 mm (8") away from the tool at all times.
 - 11. Always switch off and wait for the blades to come to a complete stop before any adjusting.
 - 12. Never stick your finger into the chip chute. Chute may jam when cutting damp wood. Clean out chips with a stick.
 - 13. Do not leave the tool running. Operate the tool only when hand-held.
 - 14. When leaving the planer, switch off and set it with the front base up on a wooden block, so that the blades do not contact anything.
 - 15. Always change both blades or covers on the drum, otherwise the resulting imbalance will cause vibration and shorten tool life.
 - 16. Wait for complete run-down before putting the tool aside.
 - 17. Use only Makita blades specified in this manual.
 - 18. Some material contains chemicals which may be toxic. Take caution to prevent dust inhalation and skin contact. Follow material supplier safety data.

SAVE THESE INSTRUCTIONS

 **WARNING:**
MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

SYMBOLS


USD201-2

The followings show the symbols used for tool.

- | | | | |
|--|---------------------|---|---|
| V | volts | n ₀ | no load speed |
| A | amperes |  | Class II Construction |
| Hz | hertz | .../min..... | revolutions or reciprocation per minute |
|  | alternating current | | |

FUNCTIONAL DESCRIPTION

- ⚠ **CAUTION:**
- Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

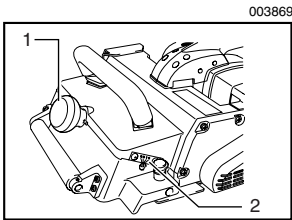


1. Knob
2. Scale plate

Adjusting depth of cut

The depth of cut can be adjusted within a range of 0 - 3.5 mm (1/8"). Turn the knob on the front of the tool until the pointer is aligned with the desired cutting depth on the scale. Set the depth of a cut observing the maximum depth which is limited by width according to the following table.

Corelation of width of cut and maximun depth of cut

Width of cut	Maximum depth of cut
0 - 150 mm (0 - 5-7/8")	3.5 mm (1/8")
150 - 240 mm (5-7/8" - 9-1/2")	2 mm (3/32")
240 - 312 mm (9-1/2" - 12-1/4")	1.5 mm (1/16")

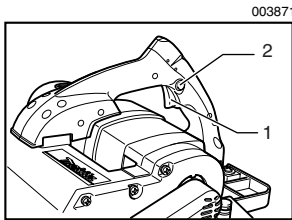

1. Switch trigger
2. Lock button

Switch action


- ⚠ **CAUTION:**
- Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.
 - Switch can be locked in "ON" position for ease of operator comfort during extended use. Apply caution when locking tool in "ON" position and maintain firm grasp on tool.

To start the tool, simply pull the switch trigger. Release the switch trigger to stop.

For continuous operation, pull the switch trigger and then push in the lock button.

To stop the tool from the locked position, pull the switch trigger fully, then release it.

003873

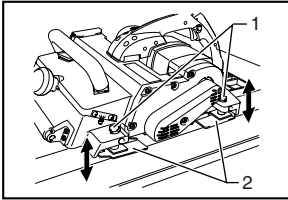


1. Pins
2. Edge fence (Guide rule)

Edge fence (Guide rule)

Edge fence is useful for minimizing a short run of cut by cutting in a uniform width. The edge fence (guide rule) is provided on the side of the tool. Press two pins for the edge fence (guide rule) so that the edge fence appears. Move the tool forward while keeping the flat surface of the edge fence in contact with the side of the workpiece.

To return the edge fence to an original position, push it upwards from its underside.

003874

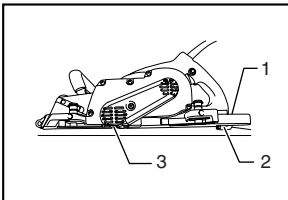


1. Rear base
2. Foot
3. Planer blade

Foot

After a cutting operation, raise the back side of the tool and a foot comes under the level of the rear base. This prevents the tool blades to be damaged.

003875

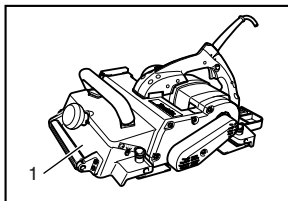

1. Front base

Guideline of cutting blade passage

Both ends of the front base are a guideline to show the ends of cutting blades passage.

ASSEMBLY


⚠ CAUTION:

- Always be sure that the tool is switched off and unplugged before carrying out any work on the tool.


Removing or installing planer blades

⚠ CAUTION:

- Tighten the blade installation bolts carefully when attaching the blades to the tool. A loose installation bolt can be dangerous. Always check to see they are tightened securely.
- Handle the blades very carefully. Use gloves or rags to protect your fingers or hands when removing or installing the blades.
- Use only the Makita wrench provided to remove or install the blades. Failure to do so may result in overtightening or insufficient tightening of the installation bolts. This could cause an injury.

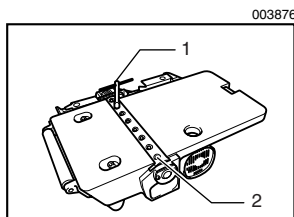

1. Socket wrench
2. Installation bolt

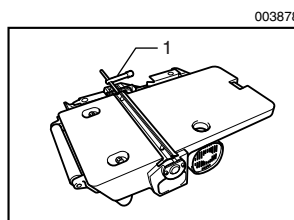


1. Socket wrench

To remove planer blades from the drum, loosen the eight installation bolts by only one full turn with the socket wrench. Then push and slide a planer blade sideways from the belt side using the helm of the socket wrench.


To remove another planer blade, follow the same procedure as above.

To install the blades, first clean out all chips or foreign matter adhering to the drum or blades.

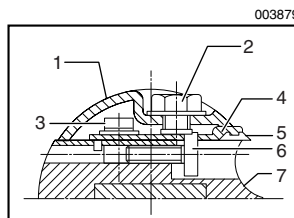

1. Drum plate
2. Installation bolt
3. Set plate screw
4. Set plate
5. Planer blade
6. Adjusting screw
7. Drum

003880

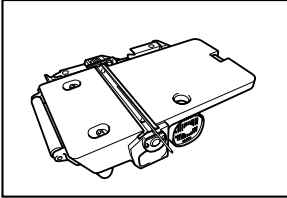

Insert the blade between the drum and the set plate from the nozzle extraction side so that the blade will be centered from both ends of the drum or set plate.

First tighten the eight installation bolts lightly and evenly shifting from the center bolts to the outward bolts with the socket wrench.

And then, tighten all of the installation bolts securely. Install another blade in the same manner as above.

For the correct planer blade setting

Your planing surface will end up rough and uneven, unless the blade is set properly and securely. The blade must be mounted so that the cutting edge is absolutely level, that is, parallel to the surface of the rear base.


Below are some examples of proper and improper settings.

EN0004-1

(A) Front base (Movable shoe)

(B) Rear base (Stationary shoe)

 Correct setting




Although this side view cannot show it, the edges of the blades run perfectly parallel to the rear base surface.

Nicks in surface




Cause: One or both blades fails to have edge parallel to rear base line.

 Gouging at start




Cause: One or both blade edges fails to protrude enough in relation to rear base line.

 Gouging at end



Cause: One or both blade edges protrudes too far in relation to rear base line.

003879

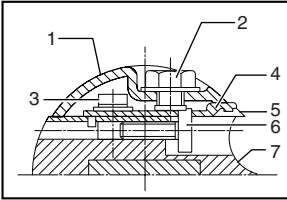


1. Drum plate
2. Installation bolt
3. Set plate screw
4. Set plate
5. Planer blade
6. Adjusting screw
7. Drum

Blade height adjustment

Blade height adjustment is usually not necessary. However, if you notice that the blade edge is below the level of the rear base or protrudes too far from the rear base, proceed as follows.

Loosen the eight installation bolts and the set plate screws. Turn the adjusting screws clockwise to retract the blade or counterclockwise to protrude it. After adjusting the blade height, tighten the set plate screws and the eight installation bolts securely.

003882

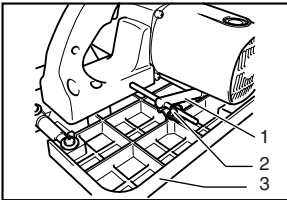


1. Socket wrench
2. Wrench holder
3. Rear base

Socket wrench storage

When not in use, store the socket wrench as shown in the figure to keep it from being lost.

003884

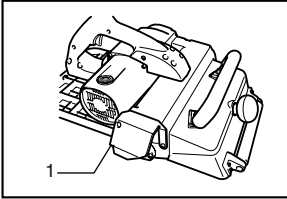

1. Chip guide

Nozzle assembly and joint (optional accessory)


Nozzle assembly and joint are used when connecting the tool to vacuum cleaner.

When you wish to perform cleaner operation, connect a vacuum cleaner to your tool.

To connect vacuum cleaner, remove the chip guide from the tool. Place nozzle assembly and joint in its place and then tighten screws to secure them.

Connect a hose of vacuum cleaner to the joint.


003885

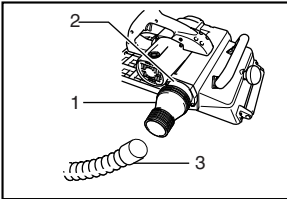

1. Joint
2. Nozzle assembly
3. Hose

OPERATION

003886

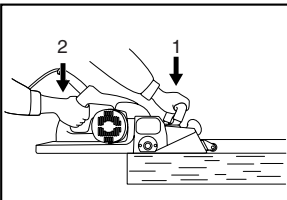


1. At the start of planing
2. At the end of planing

Planing operation

First, rest the tool front base flat upon the workpiece surface without the blades making any contact. Switch on and wait until the blades attain full speed. Then move the tool gently forward. Apply pressure on the front of tool at the start of planing, and at the back at the end of planing.

The speed and depth of cut determine the kind of finish. The power planer keeps cutting at a speed that will not result in jamming by chips. For rough cutting, the depth of cut can be increased, while for a good finish you should reduce the depth of cut and advance the tool more slowly.

003887

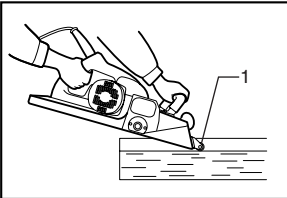

1. Front roller

Front roller


When performing repeated cuts, the use of the front roller enables quick and effortless return of the tool toward an operator by raising the back end of the tool so that the tool blades do not contact a workpiece and then sliding tool on the front roller.

MAINTENANCE

CAUTION:

- Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.

001145

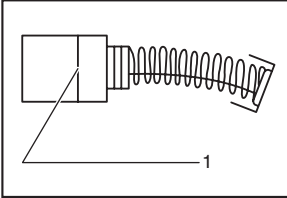


1. Limit mark

Replacing carbon brushes

Remove and check the carbon brushes regularly. Replace when they wear down to the limit mark. Keep the carbon brushes clean and free to slip in the holders. Both carbon brushes should be replaced at the same time. Use only identical carbon brushes.

003888

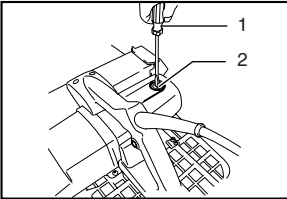

1. Screwdriver

2. Brush holder cap

Use a screwdriver to remove the brush holder caps. Take out the worn carbon brushes, insert the new ones and secure the brush holder caps.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

ACCESSORIES

CAUTION:

- These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Makita service center.

- Planer blade
- Triangular rule
- Nozzle assembly
- Joint
- Socket wrench

Cut



First-Class
Postage
Required

Post Office will
not deliver
without proper
postage.

Makita U.S.A., Inc.
14930 Northam Street
La Mirada, CA 90638-5753



Fold

MAIL THIS PORTION

Your answers to the following questions are appreciated.

1. This product was purchased from:

☐ Home Center

☐ Hardware/Lumber Store

☐ Tool Distributor

☐ Industrial Supply

☐ Construction Supply

☐ Other ()

3. How did you learn about this product:

☐ Magazine

☐ From Dealer

☐ Newspaper

☐ Store Display

☐ Catalog

☐ Radio

☐ Exhibition

☐ From Friend

☐ Previous Usage

☐ Other ()

2. Use of the product is intended for:

☐ Construction Trade

☐ Industrial Maintenance

☐ Home Maintenance

☐ Hobby

☐ Other ()

4. Most favored points are:

☐ Design

☐ Features

☐ Size

☐ Price

☐ Makita Brand

☐ Repair Service

☐ Durability

☐ Power

☐ Other ()

5. Any comments:

DATE PURCHASED												MODEL NO.																			
MONTH				DAY				YEAR				SERIAL NO.																			
INTL.												LAST NAME / COMPANY NAME												STATUS				SEX			
																								Married Single				M F			
STREET ADDRESS																															
CITY																															
STATE				ZIP CODE								PHONE				AREA CODE															
AGE:				Under 19				20-29				30-39				40-49				50-60				Over 60							

BE SURE TO COMPLETE THE CUSTOMER'S PORTION OF THIS FORM AND RETAIN FOR YOUR RECORDS.

Please return this portion by facsimile or mail.

Facsimile No: (714) 522-8133

FACTORY SERVICE CENTERS

1-800-4-MAKITA

RETAIN THIS PORTION FOR YOUR RECORDS

ARIZONA 3707 E. Broadway Rd., Ste. 6 Phoenix, AZ 85040 (602) 437-2850	FLORIDA 750 East Sample Road Pompano Beach, FL 33064 (954) 476-6333	MISSOURI 9876 Watson Road St. Louis, MO 63126-2221 (314) 909-9889	PENNSYLVANIA 1704 Babcock Blvd. Pittsburgh, PA 15209 (412) 822-8770
CALIFORNIA 41850 Christy St. Fremont, CA 94538-5107 (510) 657-9881 14930 Northam St. La Mirada, CA 90638-5753 (714) 522-8088 1970 Fulton Avenue Sacramento, CA 95825 (916) 482-5197 7674 Clairemont Mesa Blvd. San Diego, CA 92111 (858) 278-4471 16735 Saticoy St., Ste. 105 Van Nuys, CA 91406 (818) 782-2440	GEORGIA 4680 River Green Parkway NW Duluth, GA 30096 (770) 476-8911 ILLINOIS 1450 Feehanville Dr. Mt. Prospect, IL 60056-6011 (847) 297-3100 MARYLAND 7397 Washington Boulevard, Suite 104 Elkridge, MD 21075 (410) 796-4401 MASSACHUSETTS 232 Providence Hwy. Westwood, MA 02090 (781) 461-9754 MINNESOTA 6427 Penn Ave. South Richfield, MN 55423 (612) 869-5199	NEBRASKA 4129 S. 84th St. Omaha, NE 68127 (402) 597-2925 NEVADA 3375 S. Decatur Blvd. Suites. 22 - 24 Las Vegas, NV 89102 (702) 368-4277 NEW JERSEY 251 Herrod Blvd. Dayton, NJ 08810-1539 (609) 655-1212 NEW YORK 4917 Genessee Street Cheektowaga, NY 14225 (716) 685-9503 OREGON 828 19th Avenue, N.W. Portland, OR 97209 (503) 222-1823	PUERTO RICO 200 Guayama St. Hato Rey, PR 00917 (787) 250-8776 TENNESSEE 1120 Elm Hill P. Suile 170 Nashville, TN 372 (615) 248-3321 TEXAS 12801 Stemmons Fwy Ste. 809 Farmers Branch, TX 75234 (972) 243-1150 12701 Directors Dr. Stafford, TX 77477-3701 (281) 565-8665 3453 IH-35 North, Ste. 101 San Antonio, TX 78219 (210) 228-0676 WISCONSIN Lincoln Plaza Shopping Ctr. 2245 S. 108th St. West Allis, WI 53227 (414) 541-4776

CUSTOMER'S RECORD

When you need service: Send complete tool (prepaid) to one of the Makita Factory Service Centers listed, or to an Authorized Makita Service Center. Be sure to attach a letter to the outside of the carton detailing the problem with your tool.	Date Purchased
	Dealer's Name & Address
	Model No.
	Serial No.

WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others:
- repairs are required because of normal wear and tear:
- the tool has been abused, misused or improperly maintained:
- alterations have been made to the tool.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation

3-11-8, Sumiyoshi-cho,
Anjo, Aichi 446-8502 Japan