



M968586 Rev. 1.1



- Move HANDLE (1) down into "off" position.
- Turn on water supplies. Check connections for leaks.
- Remove AERATOR (2).

With HANDLE (1) down in "off" position, pull HAND SPRAY (3) from FAUCET (4). SPRAY (HOSE (3) should pull approximately 2 feet and direct open SPRAY END (3) into sink.

- Operate handle up and down, in COLD and HOT positions, to flush water lines thoroughly.
- Replace AERATOR (2). Place HAND SPRAY (3) back into FAUCET (4).
- Check HAND SPRAY (3) operation:
- With faucet on push BUTTON (6) for a broad cleansing spray. BUTTON (6) will lock into this position.
- To unlock push opposite end of BUTTON (6). Faucet will return to standard spray.

SER\

SERVICE

- If faucet drips, operate HANDLE several times from "off" to "on." Do not apply excessive force.
- Clogged CARTRIDGE outlets or inlets may cause reduced flow. To clean, first turn off water supply then:
 - Remove INDEX BUTTON (1), loosen HANDLE SCREW (2) and remove HANDLE (3).
 - Unthread ESCUTCHEON CAP (4). Unthread three MOUNTING SCREWS (5).
 - Lift CARTRIDGE (6) off MANIFOLD (7) and remove CARTRIDGE SEALS (8).
 - Clean MANIFOLD (7), CARTRIDGE (6) ports and SEALS (8).
 - Place SEALS (8) into CARTRIDGE PORTS (6a).
 - Place CARTRIDGE (6) onto MANIFOLD (7) and tighten MOUNTING SCREWS (5) alternately.
 - Replace ESCUTCHEON CAP (4), HANDLE (3), tighten HANDLE SCREW (1) and install INDEX BUTTON (2).
 - Test fitting.

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

6a

7

ᢙ

4

2

3

5

8