

ITEM# D3201

Mobile 1 DIN DVD Player



INSTRUCTION MANUAL

nextar[™]

ITEM# D3201

TABLE OF CONTENTS

| | |
|--------------------------|----|
| Table of Contents | 1 |
| Precautions | 2 |
| Basic Operation | 3 |
| Front Panel | 3 |
| Remote Control | 4 |
| Connection | 7 |
| Disc Player Operation | 8 |
| Basic Playback | 8 |
| Advance Playback | 8 |
| System Setup | 11 |
| MP3 Operation | 17 |
| Trouble Shooting | 18 |
| Specification | 19 |
| Accessories and Hardware | 20 |


ITEM# D3201

PRECAUTIONS

- Use only in a 12-volt DC negative-ground electrical system.
- Disconnect the vehicle's negative battery terminal while mounting and connecting the unit.
- When replacing the fuse, be sure to use one with an identical amperage rating. Using a fuse with a higher amperage rating may cause serious damage to the unit.
- The player is a class 1 laser product, do not attempt to disassemble the unit. Last beams from the optical pickup are dangerous to the eyes.
- Make sure that pins or other foreign objects do not get inside the unit; they may cause malfunctions, or create safety hazards such as electrical shock or laser beam exposure.
- When your vehicle has been parked in direct sunlight resulting in a considerable rise in the temperature inside, allow the unit to cool off before operating it.
- Keep the volume at a level at which you can hear outside warning sounds (horns, sirens, etc)

ITEM# D3201


BASIC OPERATION

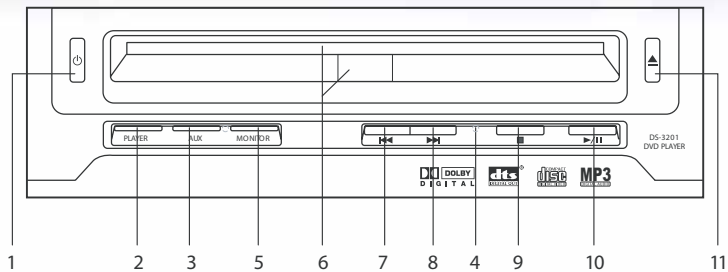


1. **Power/source** button/indicator *Press this key to turn on the unit and press again to turn off the unit. If press and hold over 3 seconds, then release this key will select **PLAYER** or **AUX INPUT**.*
2. **PLAYER** indicator
3. **AUX** indicator
4. **RESET** button *Press to reset the original settings.*
5. **MONITOR** indicator
6. **Disc slot/open, close** indicator
7. **◀◀ Previous** button *Press to go to the previous track/ chapter.
If press and hold over 2 seconds, it performs fast reverse playback.*
8. **▶▶ Next** button *Press to go to the next track/ chapter.
If press and hold over 2 seconds, it performs fast forward playback.*
9. **■ Stop** button/indicator *Press to stop playback*
10. **▶/|| Play/Pause** button/indicator *Press first to pause playback and press second to playback*
11. **▲ Eject** button/indicator *Press to eject the disc.*

ITEM# D3201

Remote Control

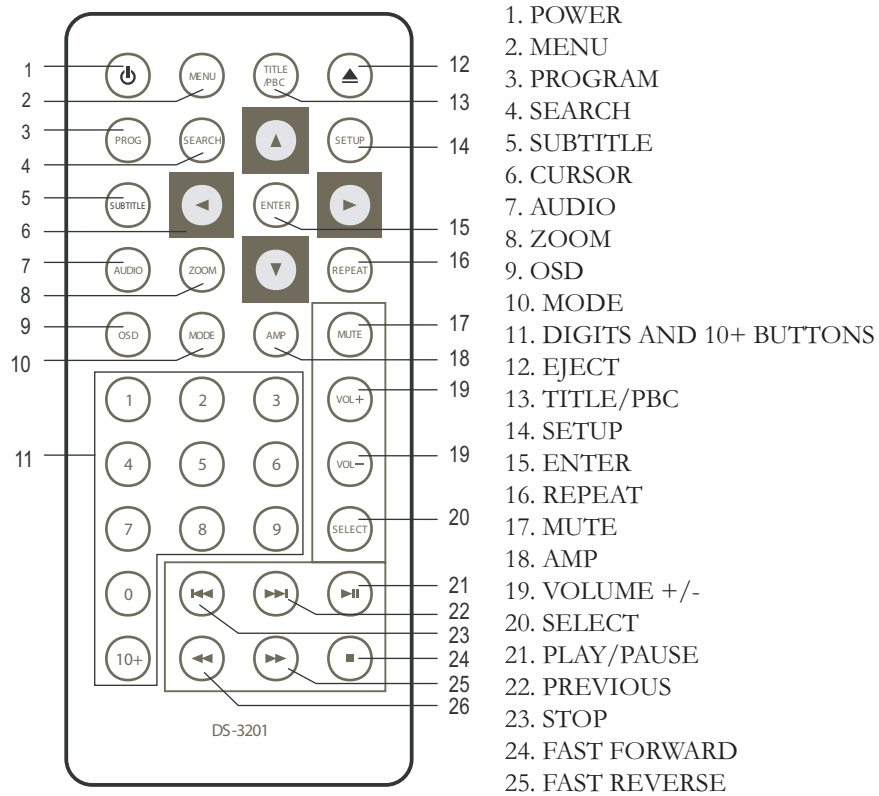

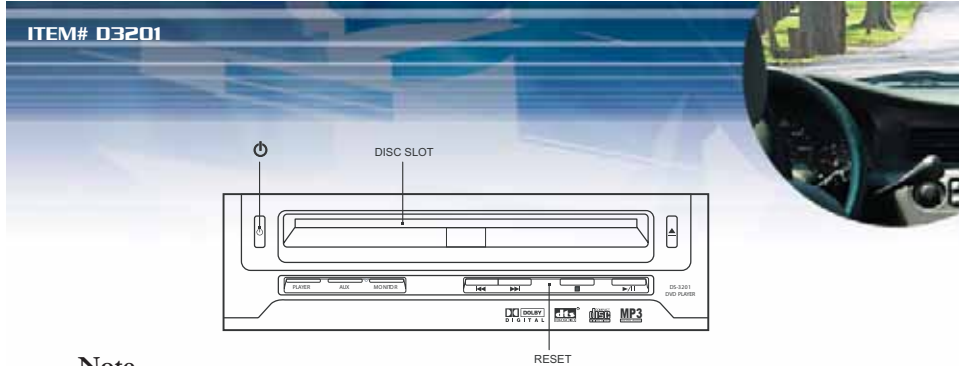

Note

Some keys are assigned two or more functions. For detailed descriptions, refer to the related pages.

Preparing the remote control

Insert battery (3V, CR2025) into the remote control.



Make sure the + side of the battery faces up before closing the cover.

- Turning the unit on/off
 - Press ⏻ to turn on the unit
 - Press ⏻ again to turn off the unit

- Changing the source mode
 - Press and hold ⏻ over 3 seconds, cycles through source modes in the following order
 PLAYER → AUX
 - The “PLAYER” or “AUX” indicator will turn on
 - You can also press the “MODE” key to select “Player” or “Aux” input on the remote.

- Eject
 - Press this key to eject the disc




ITEM# 03201

- Previous, Next
Each time you press the PREVIOUS key “◀◀” during playback will skip a track/chapter backward.
Each time you press the NEXT key “▶▶” during playback will skip the track/chapter and play the next one.
- Fast Reverse/Fast Forward
The first four pressings of Fast Reverse key “◀◀” or Fast Forward key “▶▶” during playback will enter different fast modes, the fifth time you press it will return to normal playback speed.
- Volume and Mute
Press “+” to increase volume, and press “-” to decrease.
The first press of MUTE will display MUTE, the second press will return to normal playback.
- Equalizer On/Off
Press SELECT on the remote to turn on Equalizer. Press again to turn off Equalizer.
Under the “equalizer ON” mode, you can select the following audio effect:
Classic -> Jazz -> Rock -> Pops -> Balled -> Dance -> Personal
In the “personal” mode, use < or > on the remote you can change the equalizer setting.
- Reset button
If the unit does not operate properly, press the reset button with a pointed object such as a pencil etc.
Note: If you press reset, all your settings will be erased and set to default.

ITEM# D3201

Connections

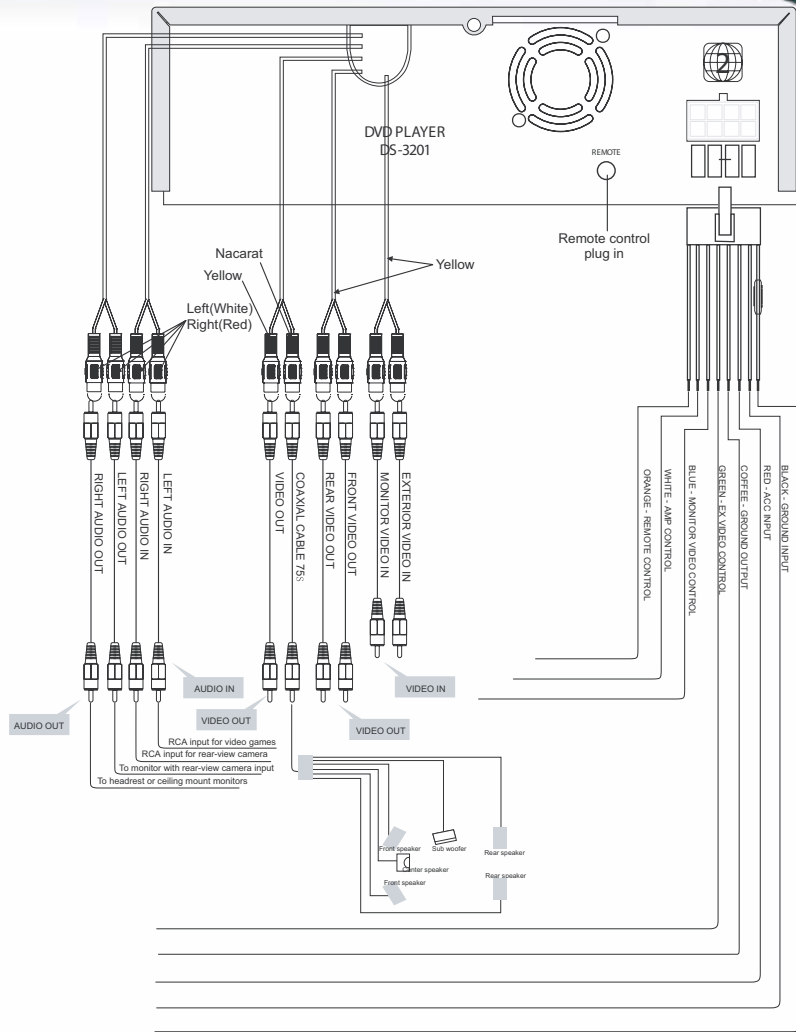







ITEM# 03201

DISC PLAYER OPERATION

Basic Playback

Plays DVD, CD, CD-R, CD-RW, Kodak Picture CD procedure described below.

- Press and hold  key for 3 seconds to select PLAYER mode
- “PLAYER” indicator turns on.
- Press  Eject button to eject the disc
- Press  play/pause button first to pause playback and press again to start playback
- Press  Previous button to go to the previous track, and hold down for 2 seconds to perform fast reverse playback.
- Press  Next button to go to the next track, and hold down for 2 seconds to perform fast forward of playback
- Press  Stop button to stop playback

Advance Playback

• MENU

Press the button to go to the root menu. Select track according to your preference. (This key is valid to DVD disc possessing multi-layer menu, you can select according to your preference)

• PROG

Press “PROG” to enter program mode. Press the digits to select tracks. Press “ENTER” to start program playback. If you want to cancel this function, press “STOP” first, then press “PROG” and “ENTER” to cancel (For VCD, press “ENTER” to cancel)

• SEARCH

Press “SEARCH” and input the desired time, then press “ENTER” to start playing from the input time. The input cannot exceed the actual maximum time of a disc.



- **OSD**

Press OSD four times to cycle between title elapsed title remain, chapter elapsed, and chapter remain. Press a fifth time to cancel the DISPLAY

- **ZOOM**

The picture can be zoomed to enlarge the image. Each time the ZOOM button is pressed, the image size will increase.

- **SUBTITLE**

Press "SUBTITLE" five times to cycle between SUBTITLE 01/04, SUBTITLE 02/04, SUBTITLE 03/04, SUBTITLE 04/04, and SUBTITLE CANCEL. This function can select up to 32 languages displayed on screen. (Valid for discs possessing this function)

- **AUDIO**

Press "Audio" on remote control or "L/R" on front panel during DVD playback, and audio 1, audio 2 will be displayed on screen when playing VCD disc. LEFT, RIGHT STERERO will be displayed.

- **TITLE/PBC**

On same DVD disc, pressing this key will display the title menu which you can use to select preferred tracks. On some VCD disc, pressing this key will turn on/off PBC."

- **CURSOR**

Use to select options when playing disc. Cursors in four directions enable a convenient way for users to make selections in the operating interface, menu, and disc operation. Likewise, the cursor can be used to move the on-screen image when in 4X (or greater) zoom mode.

ITEM# 03201

- **SELECT**

Press this button to select the audio effect functions.

- **REPEAT**


Press “REPEAT” and “CHAPTER REPEAT” will be displayed on screen. The second press will display “TITLE REPEAT”. The third press will cancel repeat function. For CD playing, the first press will display track; the second press will display “ALL REPEAT”, and the third press will cancel repeat function.

Disc Note:

- Playing a defective or dusty disc can cause dropouts in sounds.
- DO NOT touch the unlabelled side.
- DO NOT attach any seal, label, or data protection sheet to either side of disc.
- DO NOT expose a disc to direct sunlight or excessive heat.
- Wipe a dirty disc from the center outward with a clean dry cloth.
- NEVER use solvents such as benzenes or alcohol.
- This unit can not play 3-inch (8cm) disc.



Press “SETUP” on remote control to enter system setup. In this menu, you can setup “GENERAL SETUP”, “SPEAKER SETUP”, “AUDIO SETUP”, or “PREFERENCES”. If the unit is in playback mode, it will automatically pause, press RETURN or SETUP to continue playing.

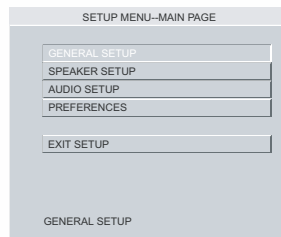

In setup menu, you can use the cursor to select an option, then press “ENTER” to confirm. Press “SETUP” to exit, and the unit will save your setup selections automatically.


The TV Display selects the different display formats and the screen size of your TV. There are various types of displays on screen for different matches between Disc and TV.

Note:


- No matter which display format is selected, a picture recorded in standard 4:3 format always displays in the 4:3 aspect ratio.
- The display format of DVD titles may vary, please refer to the information that accompanies your specific DVD title.
- If the DVD title is recorded in 16:9 widescreen format and the TV is a standard 4:3 screen, horizontal compression of the image will result.
- Some DVD titles may be recorded in special formats. In such cases, the DVD titles will always appear on the screen in their original format, regardless of which TV display format you select.



1. GENERAL SETUP PAGE

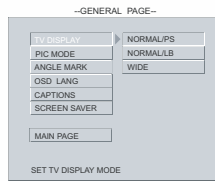


1.1 TV DISPLAY

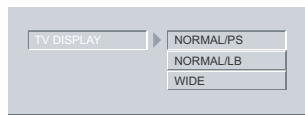

1.2 PICTURE MODE

This sets the quality of the video output from DVD player

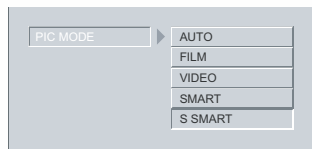

1.3 ANGLE MARK

Users can select a particular camera angle when playing a DVD which offers multiple angles.



1.4 ON SCREEN DISPLAY (OSD) LANGUAGE

Users can select the setup menu and on-screen display language



1.5 CAPTIONS

For the hearing-impaired, the picture can be displayed with recorded explanatory captions.




1.6 SCREEN SAVER

If the screen saver is on, then there will be an animated picture on the screen whenever the DVD player is idle for a certain period of time.






2. SPEAKER SETUP PAGE

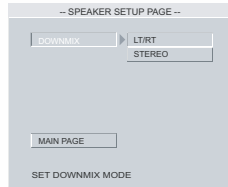


DOWNMIX MODE: sets front speakers to LT/RT STEREO

- Turn first 2 settings (LT/RT STEREO) downmix the sounds speakers. This setting allows you to enjoy the multi channel audio effects with only two speakers.

3. AUDIO SETUP PAGE

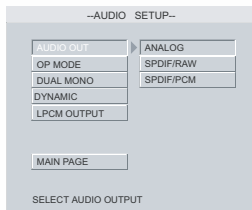

 3.1 AUDIO OUT:
Sets the audio outputs



This DVD player includes three kinds of audio inputs:

- 1) **ANALOG.** An analog surround sound format is output through the back-panel connects for left and right channels.
- 2) **SPDIF/RAW or SPDIF/PCM:** This surround sound format is output to a Dolby Digital/DTS decoder through the optical and coaxial connectors on the back-panel of the unit.

Note: The DVD player simultaneously outputs a Dolby Digital signal and an analog signal, but you have to select the Analog output if you want to take advantage of the Karaoke effects contained on certain discs.

3.2 OPERATIONAL MODE

This can set the type of output and adjust audio frequency.






3.3 DUAL MONO

If your amplifier/decoder has Dolby Digital output, you may select stereo, left mono, right mono, or mixed mono mode for your amplifier decoder.




3.4 DYNAMIC

This setting can dynamically lower the volume while still maintaining the original tone quality. This selection is the range, measured in decibels (dB), between the loudest and the quietest sound peaks in the program material.

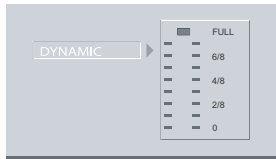


3.5 LPCM OUTPUT

 Includes LPCM 48K and LPCM 96K, PCM audio format output.




4. PREFERENCES SETUP PAGE

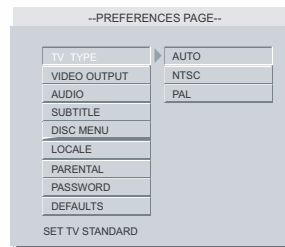

4.1 TV TYPE

This player supports multiple TV output, including MULTI (Auto), NTSC and PAL systems.

If your TV support only NTSC or PAL, and you inadvertently selected the wrong TV type, the TV screen will become black and white. In this case, you should press the SETUP button to set the right setting.

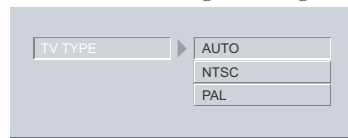

Note: How to Set the TV Type?

- You may switch the NTSC/PAL settings of the DVD player to match the video signal of your TV.



4.2 VIDEO OUTPUT

Use to set the video output mode



4.3 AUDIO

Sets the preferred audio language as the default when playing DVD.



4.4 SUBTITLE

Sets the preferred subtitle language as the default when playing DVD



4.5 PREFERRED MENU LANGUAGE

Sets the preferred menu language as the default when playing DVD. Actual language support depends on DVD.



4.6 LOCALE


Sets the preferred country region language as the default when playing DVD. Actual language support depends on DVD.



4.7 PARENTAL


The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that can be viewed.

Note: The PARENTAL is changeable when you input the password

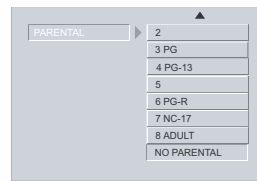

4.8 PASSWORD CHANGE

 
In this setup, you can change the password for parental control setup. The initial number is 3308.



ITEM# 03201

4.9 DEFAULT

 This function will reset the DVD player to all the manufacturer's original settings. Only reset the DVD if you have changed settings and the DVD no longer functions as it does before settings are changed.





MP3 Operation

When the Navigation Menu is set up, a Navigation Menu will be displayed automatically when loading an MP3 disc.

In the Menu, use Left or Right button to move the Cursors to select operation position, use UP or DOWN button to move the Cursors to choose operation object, and use ENTER button to select operation object item.

On the page, use LEFT or RIGHT button to move the Cursor to the playing mode option; use UP or DOWN button to choose playing mode, then when chosen, use LEFT or RIGHT key to move the Cursor to select the item.

| SMART NAVI | |
|------------|------------|
| ROOT | ROOT 0 |
| | AALB1(1) 1 |
| | BALB1(2) 2 |
| | CALB1(3) 3 |
| | DQPN1 4 |
| | EPLP1 5 |

| SMART NAVI | |
|------------|------------|
| ROOT | AALB1(1) 0 |
| AALB1(1) | MP3 A01 1 |
| BALB1(2) | MP3 A02 2 |
| CALB1(3) | MP3 A03 3 |
| DQPN1 | MP3 A04 4 |
| EPLP1 | MP3 A05 5 |

Note:

Menu interface may have different formats for different MP3 discs.

TROUBLE SHOOTING

If operation freezes the screen goes black or the unit should otherwise not function properly, try turning the power off then back on. Alternatively, try the following methods in the order listed until the unit returns to normal playback mode.

1. Turn the car's ignition OFF and back ON again.
2. Press the RESET button on the face of the unit.

This guide will help you isolate the problems if the unit is at fault. Otherwise, make sure the rest of your system is properly connected, or consult a professional mobile video installer.

| Symptom | Cause | Remedy |
|------------------------------------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Unit does not operate | Fuse is blown | Replace with a fuse of the specified capacity |
| | Monitor's power is not ON | Turn on the monitor's power |
| | Condensation | Wait a while (about 1 hour) for the condensation to dry |
| Operation is unstable | Remote control battery is out | Replace the remote control unit's battery with new one |
| | Remote control sensor or transmitter is dirty | Clean the sensor or transmitter |
| No picture | Monitor's mode is not switched to the correct mode | Clean the disc |
| Playback does not start | Disc is loaded upside-down | Check the disc and load it with the labeled side facing upward |
| | Disc is dirty | Clean the disc |
| | Disc is not in correct format for playback | Check if the disc format is supported |
| | Parental lock is set | Cancel the parental lock or change the rating level |
| Picture is unclear or noisy | Disc is doing fast-forwarded or fast-reversed | The picture may be slightly disturbed, but this is normal |
| | Vehicle's battery power is weak | Check the battery power and wiring. The unit may malfunction if the battery power is under 10 volts with a load applied |
| | Monitor's fluorescent tube is worn | Replace the monitor's fluorescent tube |
| Image stops at times | Disc is scratched | Replace with a non-scratched disc |
| No disc | No disc is loaded | Load a disc |
| | Disc is dirty | Clean a disc |
| "Not valid" message displayed | Remote control operation is not allowed | For some discs or playing modes, certain operations are not allowed. This is not a malfunction |
| Video signal system is not correct | PAL (or NTSC) disc is loaded | Change the TV TYPE of the unit |
| No sound | Wrong Audio Out selected | According to the connections, set ANALOG for using audio cable, set SPDIF/RAM/PCM for using coaxial cable |

ITEM# 03201

SPECIFICATION

AUDIO

| | |
|------------------------|--------------------------------------------|
| Audio output (analog) | $2 \pm 0.2 \text{ V } 100\text{K } \Omega$ |
| Audio output (coaxial) | $0.5 \text{ V } 75\Omega$ |
| Signal-to-noise ratio | More than 90dB |
| Dynamic Range | More than 85dB |
| Distortion | Less than 0.08% |

VIDEO

| | |
|--------------|---------------------|
| Video output | $1 \pm 0.2\text{V}$ |
| Resolution | More than 500 lines |

POWER

| | |
|-------------------|-----------------------------------------------|
| Power requirement | $12^{+20\%}_{-20\%} \text{ V DC, } 3\text{A}$ |
| Power consumption | Less than 20W |

GENERAL


| | | |
|------------------------------------|------------------------------------------------|--|
| Dimensions (approx) | 178x50x183mm (w/h/d) include. Projecting parts | |
| Weight | 1.4Kg | |
| Normal Operation temperature range | 23°F to 131°F | |

Note


- We reserve the right to modify the design without notice
- The illustrations in this manual may appear different from the actual product due to printing limitations

ITEM# D3201


ACCESSORIES AND HARDWARE

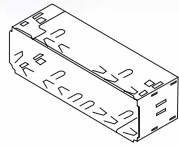


Mounting Bracket
(Half Sleeve) X1

 


Rear Strap
(Brace) X1

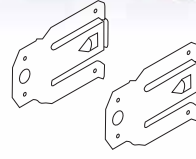


Side bracket X2

 


Hex bolt M5X14(4PCS)

 


Half head screw M5X6(4PCS)

 


Self-screw

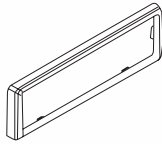


Removable Trim Ring
equipped on the unit
X1

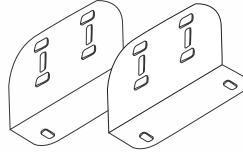


Mounting Bracket X2

 

Mounting Grommet
X1

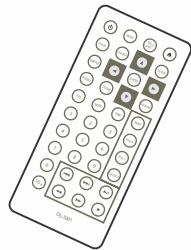


Remote Control X1

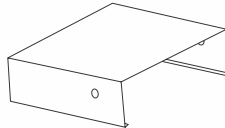

Metal Cover (x1)



Lithium Button ce (3V) X1

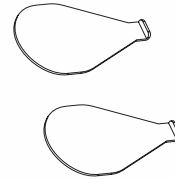

KEY(2PCS)