


INSTRUCTION BOOK

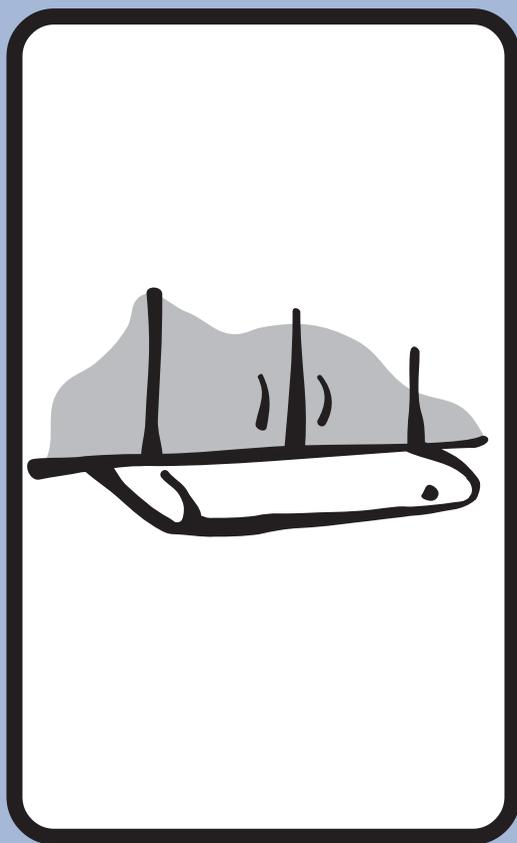

FOR ELECTROLUX
COOKER HOOD
EFT 605

 **Electrolux**

UK

Thank you for buying an Electrolux product.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Electrolux Products, please contact our Customer Care Department. For general enquiries concerning your Electrolux appliance or for further information, visit our website at <http://www.electrolux.se>

Customer Care Department
Electrolux
55 - 77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 08705 950 950
Fax: 01635 42970

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

For the User

Important Safety Information

Your Appliance

Operating Instructions

The Controls
To Operate
Extraction
Recirculation

Maintenance and Cleaning

External Cleaning
Synthetic Paper Grease Filter
To Replace the Synthetic Paper Grease Filter
Charcoal Filters (Optional Extra)
To Remove/Replace the Charcoal Filter
Changing the Light Bulb

Something Not Working

Service and Spare Parts

Guarantee Conditions

For the Installer

Installation Instructions

Technical Information

Electrical Connections

Electrical Requirements
Electrical Connection

Installing the Cooker Hood

Installation Requirements
Ducting
Clearance Height
Unpacking
Wall Fitting
Venting
To Fit the Ducting
Recirculation
Fitting the Cooker Hood to the Wall

Service Force Centres

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instruction book



Safety instructions



Step by step instructions

IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department.

■ Installation

- Any installation work must be undertaken by a qualified electrician or a competent person.
- This hood must be installed in accordance with the installation instructions and all measurements must be adhered to.
- If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS.6172, BS.5440 and BS.6891 (Natural Gas) and BS.5482 (LP Gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Department of the Environment, the Building standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department.
- The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height', or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The cut-out device will reset itself when the fan motor has cooled significantly.
- It is dangerous to alter the specifications or modify this product in any way.
- When installed between adjoining wall cabinets the wall cabinets must not overhang the hob.
- If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type.
- If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.
- The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose.

- Do not install above a cooker with a high level grill.

■ Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.


■ During Use

- This product is for domestic use only.
- Never leave frying pans unattended during use as over-heated fats and oils might catch fire.
- Never do flambé cooking under this cooker hood.
- Do not leave naked flames under the hood.

■ Maintenance and Service

- This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunction. Refer to your local Electrolux Service Force Centre. Always insist on genuine spare parts.

YOUR APPLIANCE

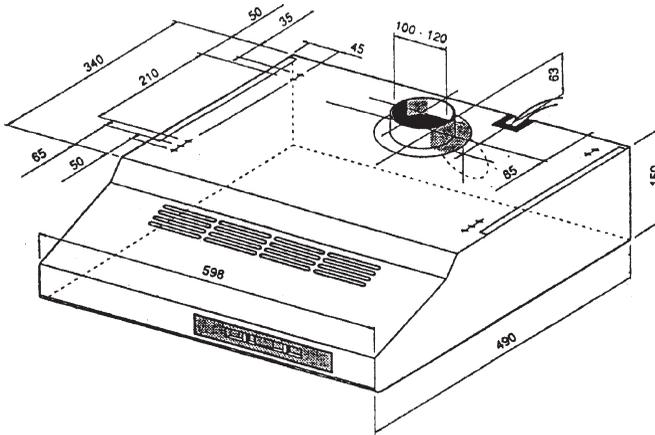

OPERATING INSTRUCTIONS

This cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam.

To obtain the best performance it is advisable to switch on the hood a few minutes before you start cooking and leave it running for approximately 15 minutes after finishing.

The cooker hood controls are located on the right hand side, in the front fascia panel.

The Controls

Fan ON/OFF/Speed Control

- Position 0 - Off
- Position 1 - Low
- Position 2 - Normal
- Position 3 - Boost

Light ON/OFF control

- 0 - Off
- 1 - On

To Operate

Select the required fan speed and light if required.

Extraction

The contaminated air enters the hood passing through the grease filter and out through the ducting into the atmosphere.

Recirculation

In the recirculation mode contaminated air is passed through the charcoal filter (**optional extra**) to be purified and recirculated into the kitchen through a recirculation grille.



When the ducting position is selected the charcoal filter is not required.

Never do flambé cooking under this cooker hood.

Take extra care when frying and never leave frying pans unattended during use as overheated fats and oils might catch fire.

Do not leave naked flames under the cooker hood.

Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously.

MAINTENANCE AND CLEANING

 Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.

The cooker hood must be kept clean, a build up of grease or fat can be a fire hazard.

External Cleaning

Wipe the cooker hood frequently with warm soapy water using a mild detergent.

 Always wear protective gloves when cleaning the hood.

Never use scouring pads or abrasive cleaners.

Never use excessive amounts of water when cleaning particularly around the control panel.

Synthetic Paper Grease Filter


The filter has saturation indicators, which are small squares made from a series of dots. When the white paper inside the squares becomes saturated with grease the coloured dots start to run and spread across the paper, indicating that the filter has reached saturation point and must be replaced.

 The synthetic paper grease filter cannot be cleaned.

It must not be washed.

To Replace the Synthetic Paper Grease Filter

1. Open the glass visor.
2. Press inwardly on the two slide catches as illustrated in (A) and the grille will open from the front.
3. Slide the right edge of the grille forward until it clears the guide and then unhook the left hinge pin.
4. Carefully ease out the metal wire retaining clips as illustrated in (B).
5. Clean the metal grille and clips before replacing the filter.

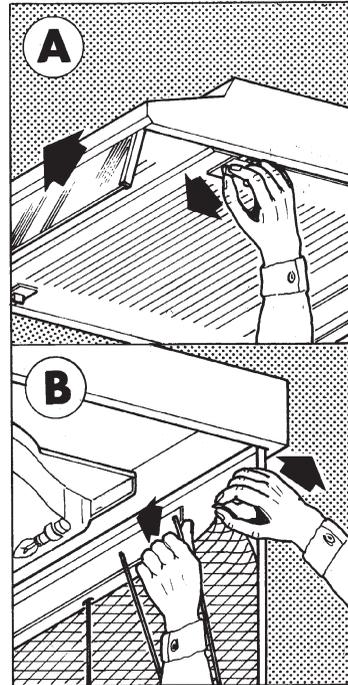

 Handle the wire clips with care and keep away from children as they have sharp points.


Charcoal Filter (Optional Extra)

The charcoal filter cannot be cleaned.

The filter should be replaced at least every three months or more frequently if the hood is used more than three hours per day.

To Remove/Replace the Charcoal Filter

1. Remove the metal inlet grille.
2. Carefully remove the screw from the centre of the charcoal filter, while holding the filter securely.
3. Clean the metal inlet grille and motor support before replacing the charcoal filter.

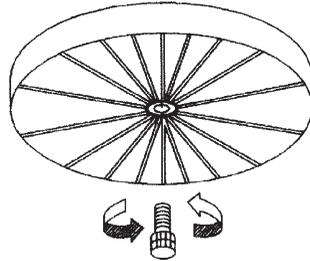

Changing the Light Bulb

If a lamp fails to function check that the bulb is screwed into the holder.

If bulb failure has occurred then it should be replaced with a 220-240V 40W clear cylindrical shape bulb with a small E14 screw thread.

Charcoal filters, grease filters and light bulbs can be obtained from your local Service Force



This appliance can be a fire hazard if the grease and charcoal filters are not cleaned and replaced as recommended.

SOMETHING NOT WORKING

If, having followed these instructions carefully, your cooker hood fails to work properly please carry out the following checks.

Symptom	Solution
The cooker hood will not start	<ul style="list-style-type: none"> • Check the hood is connected to the electricity supply. • Make sure the switch is in the 'ON' position.
The cooker hood is not working effectively	<ul style="list-style-type: none"> • The fan speed is set high enough for the task • The grease filter is clean. • The kitchen is adequately vented to allow the entry of fresh air. • If set up for recirculation, check that the charcoal filter is still effective. • If set up for extraction, check that the ducting and outlets are not blocked.
The cooker hood has switched off during operation	<ul style="list-style-type: none"> • The safety cut-out device has been tripped. • Turn off the hob and then wait for the device to reset.

If after all these checks, the fault persists, contact your local Service Force Centre, quoting the model and serial number.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

SERVICE AND SPARE PARTS

If you require an engineer or spare parts contact your local Service Force Centre by telephoning:

0990 929929

Your telephone call will be routed to your local Service Force Centre. The addresses are listed in the back of the book.

For general assistance with your appliance or for further information on Electrolux products please contact our Customer Care Department.

Customer Care Department,
Electrolux
55 - 77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 08705 950 950*

* calls to this number may be recorded for training purposes.

GUARANTEE CONDITIONS

We, Electrolux Ltd., undertake that if within twelve months of the date of the purchase this Electrolux built-in appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by Electrolux Service Force Centre.
- Any appliance or defective part replaced shall become the property of this company.

Home visits are made between **8.30am and 5.30pm Monday to Friday**. Visits may be available outside these hours in which case a premium will be charged.

EXCLUSIONS

This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of Electrolux manufacture which are not marked by Electrolux Ltd.

This guarantee is in addition to your statutory and legal rights.

ELECTROLUX EUROPEAN GUARANTEE

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 22 22
Germany	Nurnberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Newbury	+44 (0)1635 522 799

INSTALLATION INSTRUCTIONS



It is dangerous to alter the specifications or attempt to modify this product in any way.

Technical Information

DIMENSIONS

HEIGHT:	15cm
WIDTH:	60cm
DEPTH:	48cm
DEPTH WITH VISOR OPEN:	53cm

WEIGHT

GROSS:	7,75kg
NET:	6,75kg

ELECTRICAL SUPPLY:

Voltage (50Hz) 220-240 V

POWER CONSUMPTION:

115W

FAN MOTOR:

75W

LAMP:

40W

SUITABLE FOR INSTALLATION

ABOVE:

ELECTRIC HOB:	7KW (max)
GAS HOB:	10KW (max)
SLOT-IN GAS COOKER	13.5KW (max)
SLOT-IN ELECTRIC COOKER	12.4KW (max)



Note: CE Marking certifies that this appliance complies with the requirements laid down in EEC directive 89:336. (Electromagnetic compatibility) and subsequent modifications and Low Voltage directive 72/23/E.

ELECTRICAL CONNECTIONS



WARNING: DOUBLE INSULATED-DO NOT EARTH

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local Electricity Board regulations. For your own safety this should be undertaken by a qualified electrician e.g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).

Electrical Connection

Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

This appliance is fitted with a 2 core mains cable and must be permanently connected to the electricity supply via a double-pole switch having 3mm minimum contact gap on each pole. A Switched Fuse Connection Unit to BS.1363 Part 4, fitted with a 3 A fuse is a recommended mains supply connection accessory to ensure compliance with the Safety Requirements applicable to fixed wiring instructions.

This appliance conforms to BS.800: 1988 and EEC Directive No. 78 308 regarding suppression of radio and television interference.

INSTALLING THE COOKER HOOD

Please ensure that when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.



All installations must comply with the local authorities requirements for the discharge of exhaust air.

Incorrect installation may affect the safety of this cooker hood.

Installation Requirements



Before installation check the wall to which the cooker hood is to be fitted for electric cables, water pipes or gas.

If it is necessary to fix the hood to a hollow construction plaster or partition board structure then it should be sufficiently reinforced to be quite rigid in the area of the cooker hood keyhole fixing screws, and the appropriate rawl plugs used for this type of fixing (not supplied).

Ducting

The ducting must be fire retardant 100mm (4ins) in diameter and the length should be no more than:

3 metres with one 90° bend

2 metres with two 90° bends

Bends of more than 90° will reduce the efficiency of the hood and reduce the airflow.

Clearance Height

The cooker hood is designed to be fitted over a cooking appliance at the clearance heights stated, providing the maximum output of the appliance beneath does not exceed the maximums quoted in the Technical Specifications.


If the output of the appliance below the cooker hood exceeds the maximum output quoted, please refer to the cooker hood manufacturer's installation instructions.

Clearance Height

A minimum clearance height of 650mm (25 1/2 ") is required when installed above a built-in electric hob, or 700mm (27 1/2 ") when installed above a built-in gas hob.

A minimum clearance height of 685mm (27") is required when installed above a slot-in electric oven, or 787mm (30 1/2 ") when installed above a slot-in gas oven.

When installed between adjoining wall cabinets, the wall cabinets must not overhang the hob and the distance between the underside of the cabinet and the worktop must be 450mm. If the height of the wall cabinet is less than 450mm a gap of 50mm must be maintained either side of the hob.

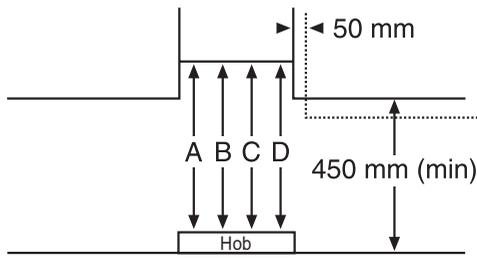

- A: Built-in Electric Hob: 650mm minimum clearance
B: Built-in Gas hob: 700mm minimum clearance
C: Slot-in Electric Cooker: 685mm minimum clearance
D: Slot-in Gas Cooker: 787mm minimum clearance



This cooker hood must not be installed above a cooking appliance with a high level grill.

Unpacking


The fittings supplied to install this cooker hood can be found with the instruction book inside the packaging and consists of the following:

- Wall/suspended fixing template
- Plastic rawl plugs (2)
- Fixing screws (4)

Wall Fitting

The cooker hood is fitted to the wall using the keyhole slots in the back of the hood.

1. Mark the position on the wall for the two 8mm dia screw holes (A) as illustrated in the drawing opposite at 568mm.
2. Check that the hole distances are correct and are level using a spirit level.
3. At this stage it is important to allow 25mm (1") clear space above the cooker hood to enable it to be hooked onto the screws and for subsequent removal for decorating or servicing.
4. Insert the screws and tighten to a distance of 5mm.

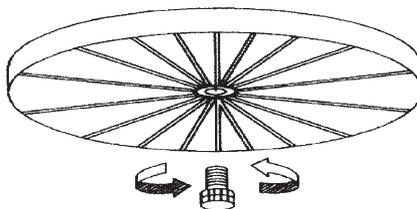

Venting

The hood is more effective when used in the extraction setting (ducted to the outside).


Venting kits may be purchased through your retailer or DIY store, and must be ducted to an outside vent of 100mm (4") minimum.

 *The ducting used must be manufactured from fire retardant material which should conform to the relevant British Standard or DIN4102-B1.*

When the hood is ducted externally the charcoal filter must be removed and the slider control must be in the ducting position.

To Fit the Ducting

1. Fit the ducting spigot and blanking plate, by aligning the interlocking lugs on the fittings, with the recesses in the aperture as illustrated in (A) and (B) opposite.
2. Insert and turn anti-clockwise to lock the spigot and blanking plate into position.


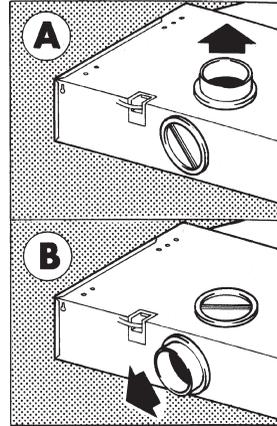


Recirculation

The charcoal filter (**optional extra**) must be fitted for recirculation and the slider control must be in the recirculation position.

Fitting the Cooker Hood to the Wall

1. Remove the grille by pressing inwardly on the two slide catches.
2. Hinge the grille forward to free it from the guides in the side of the casing. The two keyhole slots are now visible.
3. Hook the hood onto the screws using the keyhole slots.
4. Tighten the screws to secure the hood to the wall. **Ensure the cooker hood is correctly located before letting go.**
5. Refit the grille onto the cooker hood
 - insert the left hand hinge pin into the hole in the left hand side of the casing.
 - slide the right hand hinge pin into the guide over the stop position.
 - close the grille and secure using the two slide catch bolts.

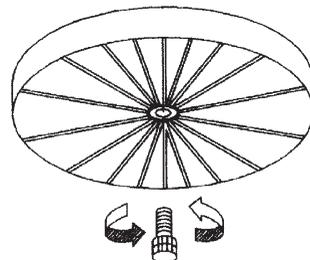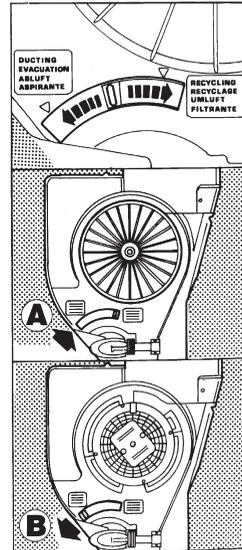

To contact your local Electrolux Service Centre telephone **08705 929 929**

CHANNEL ISLANDS

GUERNSEY Guernsey Electricity
PO Box 4
Vale, Guernsey
Channel Islands

JERSEY Jersey Electricity Company
PO Box 45
Queens Road
St Helier, Jersey
Channel Islands JE4 8NY

SCOTLAND

ABERDEEN 54 Claremont Street
(M05) Aberdeen AB10 6RA

AUCHTERMUCHY 33a Burnside
(M03) Auchtermuchy
Fife KY14 7AJ

BLANTYRE Unit 5
(M07) Block 2
Auchenraith Ind Estate
Rosendale Way
Blantyre G72 0NJ

DUMFRIES 93 Irish Street
(M01) Dumfries
Scotland DG1 2 PQ

DUNOON Brair Hill
(M67) 7 Hill Street
Dunoon
Argyll PA23 7AL

GLASGOW 20 Cunningham Road
(M04) Clyde Estate
Rutherglen
Glasgow G73 1PP

INVERNESS Unit 3B
(M06) Smithton Ind Estate
Smithton
Inverness IV1 AJ

ISLE OF ARRAN Arran Domestic
Unit 4 The Douglas Centre
Brodick
(OWN SALES) Isle of Arran KA27 8AJ

ISLE OF BARRA J Zerfah
244 Bruemish
Isle of Barra
(OWN SALES) Western Islands HS9 5QY

ISLE OF BUTE Walker Engineering
(M66) Glenmhor
Upper Serpentine Road
Rothesay
Isle of Bute PA20 9EH

ISLE OF LEWIS ND Macleod
(M69) 16 James Street
Stornoway
Isle of Lewis PA87 2QW

KELSO 2-8 Wood Market
(M08) Kelso
Borders TD5 7AX

ORKNEY Corsie Domestic
(M65) 7 King Street
Kirkwall
Orkney KW15

PERTH Hydro Electrical
Inveralmond House
Ruthervenfield Road
Perth PH1 3AQ

PERTH Graham Begg
(OWN SALES) Unit 4
Airport Ind Estate
Wick KW1 4QS

SHETLAND Tait Electronic Systems Ltd
(OWN SALES) Holmsgarth Road
Lerwick
Shetland ZE1 0PW

SHETLAND Bolts Sheltand Ltd
(OWN SALES) 26 North Road
Lerwick
Shetland ZE1 0PE

WHALSAY Leask Electrical
(OWN SALES) Harisdale
Symbister, Whalsay
Shetland ZE2 9AA

NORTHERN IRELAND

BELFAST Owenmore House
(M27) Kilwee Business Park
Upper Dunmury Lane
Belfast
BT17 0HD

To contact your local Electrolux Service Centre telephone **08705 929 929**

WALES

CARDIFF
(M28) Guardian industrial Estate
Clydesmuir road
Tremorfa,
Cardiff CF2 2QS

CLYWD
(M14) Unit 6-7 Coed -Parc
Abergele Road
Rhuddlan
Clwyd
Wales LL18 5UG

DYFED
(M77) Maes Y Coed
High Mead
Llanybydder
Carmarthenshire
SA40 9UL

HAVERFORDWEST
(M75) Cromlech Lodge
Ambleston
Haverfordwest
Pembrokeshire
SA62 5DS

OSWESTRY
(M17) Plas Flynnon Warehouse
Middleton Road
Oswestry
SY11 2PP

NORTH EAST

GAESHEAD
(M39) Unit 356a
Dukesway Court
Dukesway
Team Valley
Gateshead NE11 0BH

GRIMSBY
(M42) 15 Hainton Avenue
Grimsby
South Humberside
DN32 9AS

HULL
(M41) Unit 1
Boulevard Industrial Estate
Hull
HU3 4AY

LEEDS
(M37) 64-66 Cross Gates Road
Leeds
LS15 7NN

NEWTON AYCLIFFE
(M45) Unit 16
Gurney Way
Aycliffe Industrial Estate
Newton Aycliffe
DL5 6UJ

SHEFFIELD
(M38) Pennine House
Roman Ridge Ind.
Roman Ridge Road
Sheffield S9 1GB

NORTH WEST

BIRKENHEAD
(M11) 1 Kelvin Park
Dock Road
Birkenhead
L41 1LT

CARLISLE
(M10) Unit 7 James Street
James Street Workshops
James Street
Carlisle
Cumbria CA2 5AH

ISLE OF MAN
(M64) South Quay Ind Estate
Douglas
Isle of Man

LIVERPOOL
(M15) Unit 1
Honeys Green Precinct
Honeys Green Lane
Liverpool
L12 9JH

MANCHESTER
(M09) Unit B
Central Industrial Estate
St Marks Street
Bolton
BL3 6NR

PRESTON
(M13) Unit 250
Dawson Place
Walton Summit
Bamber Bridge
Preston
Lancashire PR5 8AL

STOCKPORT
(M16) Unit 20 Haigh Park
Haigh Avenue
Stockport
SK4 1QR

To contact your local Electrolux Service Centre telephone **08705 929 929**

MIDLANDS

BIRMINGHAM (M18)	66 Birch Road East Wyrley Road Ind Estate Wilton Birmingham B6 7DB
BOURNE (M44)	Manning Road Ind Estate Pinfold Road Bourne PE10 9HT
BRIDGNORTH (M72)	68 St. Mary's Street Bridgnorth Shropshire WV16 4DR
GLOUCESTER (M23)	101 Rycroft Street Gloucester GL1 4NB
HEREFORD (M31)	Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX
HIGHAM FERRERS (M51)	30 High Street Higham Ferrers Northants NN10 8BB
ILKESTON (M43)	Unit 2 Furnace Road Ilkeston DE7 5EP
LEICESTER (M22)	Unit 7 Oaks Ind Estate Coventry Road Narborough Leicestershire LE0 5GF
LINCOLN (M40)	Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA
NEWCASTLE UNDER LYME (M12)	18-21 Croft Road Brampton Ind Estate Newcastle under Lyme Staffordshire ST5 0TW
NUNEATON (M21)	19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX

REDDITCH (M20)	13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND
-------------------	--

TAMWORTH (M19)	Unit 3 Sterling Park Claymore Tamworth B77 5DO
-------------------	--

WORCESTER (M73)	Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP
--------------------	--

LONDON & EAST ANGLIA

BECKENHAM (M79)	11a Gardener Ind Estate Kent House Lane Beckenham Kent BR3 1QZ
--------------------	---

CHELMSFORD (M47)	Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE
---------------------	---

COLINDALE (M53)	Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ
--------------------	---

ELTHAM (M78)	194 Court Road Mottingham Eltham London SE9 4EW
-----------------	--

ENFIELD (M49)	284 Alma Roa Enfield London EN3 7BB
------------------	---

GRAVESEND (M57)	Unit B4 Imperial Business Estate Gravesend Kent DA11 0DL
--------------------	--

HARPENDEN (M46)	Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN
--------------------	--

To contact your local Electrolux Service Centre telephone **08705 929 929**

LETCHWORTH (M50) 16-17 Woodside Ind Est
Works Road
Letchworth
Herts SG6 1LA

LONDON (M76) 2/4 Royal Lane
Yiewsley
West Drayton
Middlesex UB7 8DL

MAIDENHEAD (M60) Reform Road
Maidenhead
Berkshire
SL6 8BY

MOLESEY (M61) 10 Island Farm Avenue
West Molesey
Surrey KT8 2UZ

NEWBURY (M24) 9 Pipers Court
Berkshire Drive
Thatcham
Berkshire
RG19 4ER

IPSWICH (M48) Unit 6C
Elton Park Business Centre
Hadleigh Road
Ipswich
IP2 0DD

NORWICH (M52) 2b Trafalgar Street
Norwich
NR1 3HN

SUNBURY (M63) Unit 1a
The Summit
Hanworth Road
Hanworth Ind Estate
Sunbury on Thames
TW16 5D

SOUTH EAST

ASHFORD (M58) Unit 2
Bridge Road Business Est
Bridge Road
Ashford
Kent TN2 1BB

FLEET (M59) Unit 1
Redsfield Ind Estate
Church Crookham
Fleet
Hampshire GU13 0RD

HAYWARDS HEATH (M55) 21-25 Bridge Road
Haywards Heath
Sussex RH16 1UA

SOUTH WEST

BARNSTAPLE (M30) Main Road
Fremington
Barnstaple
North Devon EX31 2NT

BOURNEMOUTH (M26) 63-65 Curzon Road
Bournemouth
Dorset
BH1 4PW

BRIDGEWATER (M35) 6 Hamp Ind Estate
Bridgewater
Somerset TA6 3NT

BRISTOL (M25) 11 Eldon Way
Eldonwall Trading
Bristol
Avon BS4 3QQ

EMSWORTH (M33) 266 Main Road
Southbourne
Emsworth
PO10 8JL

ISLE OF WIGHT (M34) Unit 8
Enterprise Court
Ryde Business Park
Ryde
Isle of Wight PO33 1DB

NEWTON ABBOT (M29) Unit 2
Zealley Ind Estate
Kingsteignton
Newton Abbot
S. Devon
TQ12 3TD

PLYMOUTH (M32) 16 Faraday Mill
Cattledown
Plymouth PL4 0ST

REDRUTH (M36) Unit 7D
Pool Ind Estate
Wilson Way
Redruth
Cornwall TR15 3QW



55 - 77 High Street - Slough
BERKSHIRE SL1 1DZ

© Electrolux Household Appliances Limited 2000