




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EL4101A. You'll find the answers to all your questions on the AEG-ELECTROLUX EL4101A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EL4101A
User guide AEG-ELECTROLUX EL4101A
Operating instructions AEG-ELECTROLUX EL4101A
Instructions for use AEG-ELECTROLUX EL4101A
Instruction manual AEG-ELECTROLUX EL4101A

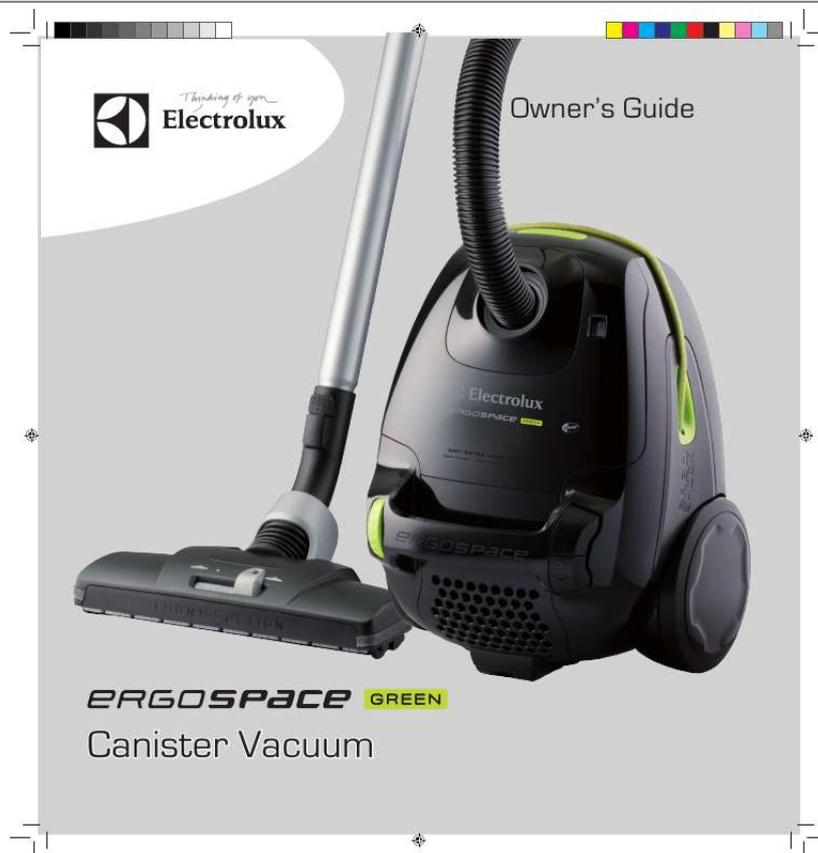

[Your user manual](#)
[AEG-ELECTROLUX EL4101A](#)

Manual abstract:

additional suction power control: Use the suction control on the hose handle. 11 A practical parking positions (and at the same time a backsaving feature) when you pause during cleaning. 12 & 13 You can also carry the vacuum cleaner using the handle on top (Fig. 14 Keep the hose in place while storing the vacuum cleaner by extending the Ergoshock elastic bumper cord and placing it across the hose. Note: Do not pull or carry by cord. Use the carpet/hard floor nozzle with lever in position 1 (Fig. Use the carpet/hard floor nozzle with lever in position 2 (Fig. 2). Use the Turbo Nozzle for deep cleaning of carpets. (Fig. 3) Reduce suction power for small rugs. Attach the turbo nozzle to the telescopic wand by inserting the wand into the turbo nozzle until the catch clicks (press the catches to release the hose). Note: Do not use the turbo nozzle on skin rugs, rugs with long fringes or a pile depth exceeding 1/2". To avoid damaging the carpet, do not keep the nozzle stationary while the brush is rotating. Do not pass the nozzle across the cord, and be sure to switch off the vacuum cleaner immediately after use.

CAUTION: To reduce risk of injury, unplug before servicing 1a The dust bag must be changed when the bag indicator light is illuminated in red. 1b Open the front cover and lift out the insert holding the s-bag®. 1c Pull the cardboard handle to close and remove the s-bag®. 1d Insert a new s-bag® by pushing the cardboard straight into the bag holder. 1e Put the insert back into the bag compartment, and close the cover.

If the s-bag® is not properly installed or is missing, the lid will not close. Replace the s-bag® even if it is not full (it could be obstructed). also replace after vacuuming carpet-cleaning powder. Be sure to use only an original Electrolux dust bags, s-bag® Replace the motor filter when dirty. Never use the vacuum cleaner without filters. The filter must always be replaced with a new one and cannot be washed. Open the front cover and lift out the insert holding of s-bag® (Fig. 1b) 2a Pull the filter holder upwards until coming away from the groove. 2b Carefully pull the old, dirty filter out of the filter holder and replace with a new filter. 2c Reattach the filter holder containing the new filter.

Put the insert holding of s-bag® back in the cleaner and then close the cover. The filter must always be replaced with a new one and cannot be washed. 3a Place your thumbs on the back edge of the lid and then open the lid by pulling the release tabs backwards and upwards with your middle and index fingers. In such cases, disconnect from outlet and allow to cool for 20-30 minutes. However, be careful in case the obstruction is caused by glass or needles caught inside the hose. Note: The warranty does not cover any damage to the hose caused by cleaning it. Cleaning the floor nozzle 5a To avoid loss of suction power, frequently clean the carpet/ hard floor nozzle. The easiest way to clean it is by using the hose handle. cleaning the turbo nozzle 6a Disconnect the nozzle from the vacuum cleaner tube and remove entangled threads , etc. By snipping them away with scissors.

TROUBLESHOOTING CAUTION: To reduce risk of injury, unplug before servicing The vacuum cleaner does not start If so, replace it with a new one.

Electrolux declines all responsibility for all damages arising from any improper use of the appliance or in cases of tampering with the appliance. Your Electrolux cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of five years. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

This warranty does not cover parts of the cleaner that require replacement under normal use, such as disposable dust bags, fans, filters, drive belts, light bulbs, brushroll bristles, impellers and cleaning. Any damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide are not covered by this warranty. Likewise, any defects or damages caused by unauthorized service or the use of other than Genuine Electrolux parts is not covered. Electrolux will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty..



[Your user manual](#)
[AEG-ELECTROLUX EL4101A](#)