
### Installation Instructions 4771

# American Standard Williamsburg™ TOP MOUNT KITCHEN FAUCETS


Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothlyplease read these instructions carefully before you begin.

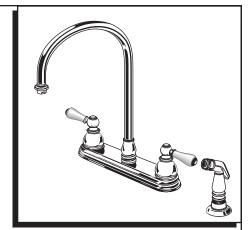


Certified to comply with ANSI A112.18.1M U.S. Patent No. 5,819,789 M968950 Rev. 1.1

### **INSTALL FAUCET**

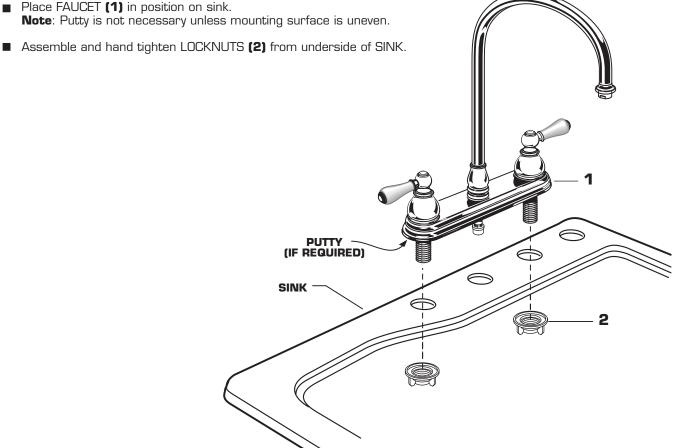

### **INSTALLATION OF OPTIONAL METAL LEVER HANDLES** (Supplied with Faucet)

- Thread PORCELIAN LEVER HANDLE (2) counter-clockwise and remove INDEX BUTTON with MOUNTING ROD ASSEMBLY (1), HANDLE COLLAR (4) and O-RING (5).
- Insert MOUNTING ROD ASSEMBLY (1) into METAL HANDLE (3). HANDLE COLLAR (4) and O-RING (5).
- Thread HANDLE ASSEMBLY (6) into ball of HANDLE BASE (7). Apply pressure to the MOUNTING ROD ASSEMBLY (1) while turning the HANDLE COLLAR (4), in order to tighten firmly.

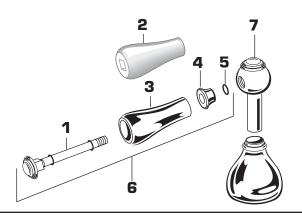

## WATER SUPPLY CONNECTIONS AND INSTALL SPRAY HOLDER

Place SPRAY HOLDER (1) into separate hole of sink and assemble NUT (2) onto shank.

From underside of sink hand tighten NUT (2).


Do not use putty.

 Connect water supply to FAUCET with 1/2" IPS FLEXIBLE SUPPLIES (3) or 3/8" O.D. BULL-NOSE RISERS (4). Use adjustable wrench to tighten connections.

 Do not over tighten. Be careful not to kink copper supply when bending. Use tubing cutter to cut to proper length.


### **CHECK FOR LEAKS**

■ With HANDLES in OFF position, turn on WATER SUPPLIES (5) and check all connections for leaks. ⇒

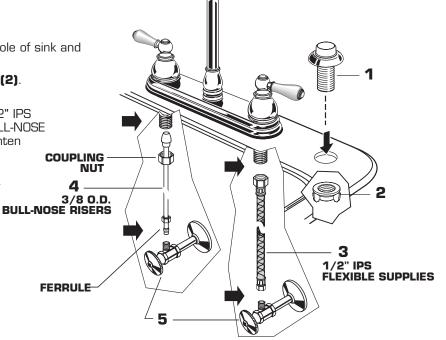

### 4. INSTALL SPRAY

- Unscrew SPRAY CAP (1).
- Feed SPRAY HOSE **(2)** through HOLDER **(3)** so SPRAY (4) sits in HOLDER **(3)**.
- From underneath sink, attach COUPLING NUT (5) of SPRAY HOSE (2) to HOSE SHANK (6). Tighten COUPLING NUT (5) firmly.
- Turn faucet on and activate SPRAY (4) into sink. Check spray connections for leaks. ⇒

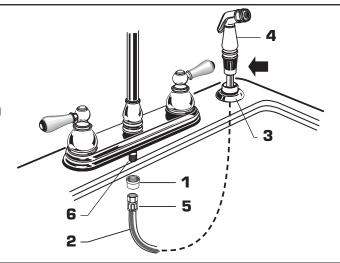

### 5 TEST INSTALLED FAUCET

- Remove AERATOR (1).
- Operate both handles to flush water lines thoroughly.
- Turn handles into OFF position and replace AERATOR (1).



### SERVICE

- To change direction of handle rotation, proceed as follows: WASHER
  - Turn valve to OFF position.
  - Pull out INDEX CAP and remove HANDLE SCREW.
  - Pull off HANDLE BASE and remove ADAPTER.
  - Remove SPRING CLIP.
  - Lift STOP WASHER, turn 90° and replace.
  - Replace SPRING CLIP.
  - Reinstall HANDLE.

- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.

