

SONY®

3-262-448-11 (1)

TV/WB/FM/AM

Portable CD Player

Operating Instructions




D-FJ200

Sony Corporation ©2003 Printed in China <http://www.sony.net/>


“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. is a trademark of Sony Corporation.

CD player (front)

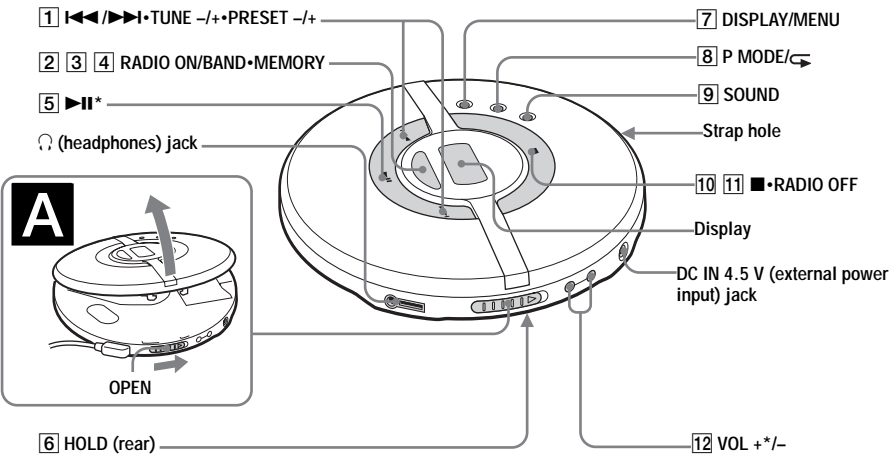


*The button has a tactile dot.

CD player (inside)

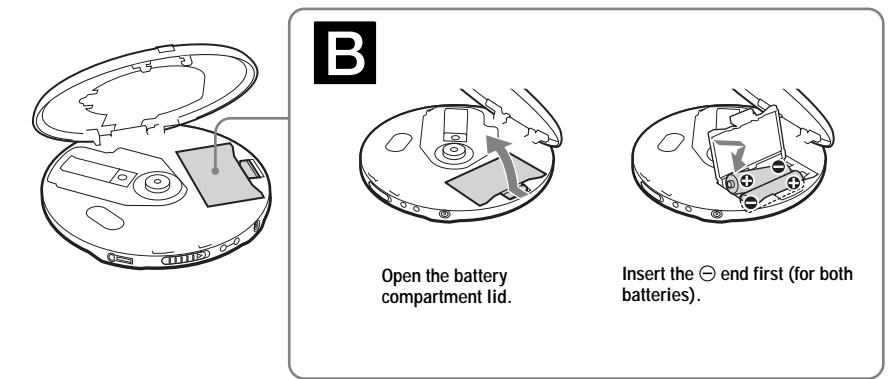

Remote control

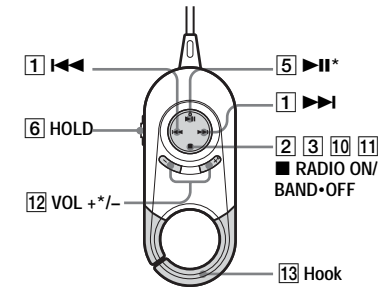


*The button has a tactile dot.


Note

Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

C

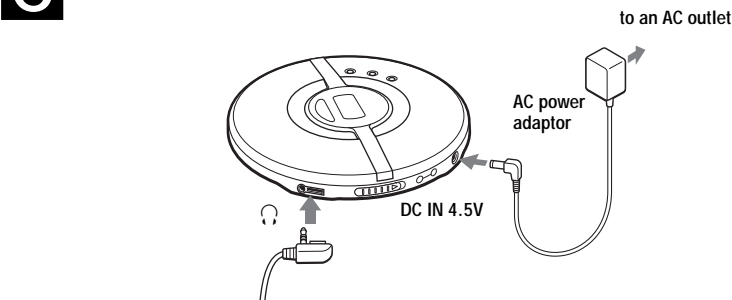

Headphones or earphones

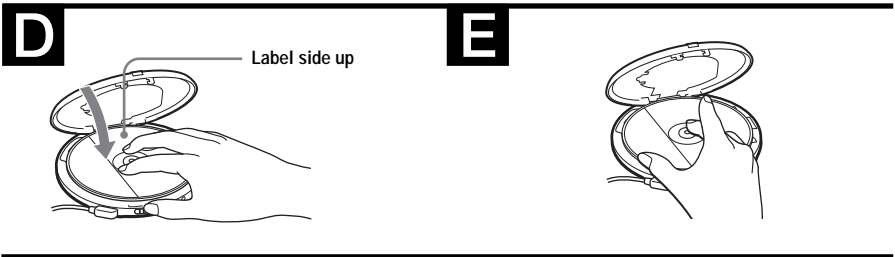

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT
- CLASS 1M INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

For customers who purchased this product in the USA

Owner's Record

The model number and the serial number are located at the rear of the CD player. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.
Model No. D-FJ200
Serial No. _____

Product registration

Please register this product on line at www.sony.com/productregistration.
<<http://www.sony.com/productregistration>>

Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

If you have any questions about this product, you may call; **Sony Customer Information Services Center 1-800-222-7669** or <http://www.sony.com/>

Declaration of Conformity	
Trade Name:	SONY
Model No.:	D-FJ200
Responsible Party:	Sony Electronics Inc.
Address:	680 Kinderkamack Road, Oradell, NJ 07649 USA
Telephone No.:	201-930-6972
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

For the area code of the model you purchased, check the upper left side of the bar code on the package.

Power Sources

To use the AC power adaptor (C)

- 1 Connect the AC power adaptor (not supplied) to an AC outlet.

To use the batteries (B)

Use only the following batteries for your CD player:

Dry batteries

- LR6 (size AA) alkaline batteries

To insert the batteries

- 1 Open the battery compartment lid inside your CD player.
- 2 Insert two batteries by matching the to the diagram in the battery compartment and close the lid until it clicks into place.

Battery life* (approx. hours)


(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	G-PROTECTION ON	OFF	RADIO ON
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	48	42	70

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

To check the remaining power of the batteries

 You can check it in the display.
Replace the batteries when “” flashes.



Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Playing a CD

To insert a CD

- 1 Press OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (D).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch	Function/Operation
1 (AMS*/search) TUNE +/- PRESET +/-	For CD player: Press or once to find the beginning of the current/next track. Press or repeatedly to find the beginning of the previous/succeeding tracks. Press and hold or to go backward/forward quickly. For radio: Press to tune in the station you want. Also press to select the preset station you want.
2 RADIO ON	Press to turn on the radio.
3 BAND	Press to change the band.
4 MEMORY	Press and hold to enter the preset mode. Also press to store the station in memory.
5 (play/pause)	<ul style="list-style-type: none">• Press to start play. Press again to pause play.To play from the first track, press for 2 seconds or more while the CD player is stopped.• Also press to enter the selection.
6 HOLD	Use to lock the controls on your CD player or remote control to prevent accidental button presses. HOLD on the CD player works only for the player, while HOLD on the remote control works only for the remote control.
7 DISPLAY/MENU	<ul style="list-style-type: none">• Press once to display “track number and remaining time of the current track.”Press twice to display “the number of tracks left and the time remaining on the CD.”Press three times to display “track number and elapsed playing time (normal display).”• Also press to enter the menu and to enter the selection.

Button/Switch	Function/Operation
8 P MODE/ (play mode/repeat)	For CD player: During play, press repeatedly until the play mode you want appears on the display. No indication: Normal play “1”: Single track play “SHUF”: Shuffle play “”: Bookmark track play “PGM”: PGM (program) play To repeat the play mode you selected, press and hold until “” appears. For radio: Press to switch the tuning mode and the preset mode.
9 SOUND*	<ul style="list-style-type: none">• Use to emphasize the bass-boosted sound. Press repeatedly to select BASS or BASS . BASS enhances more than BASS .• Also use to keep down the maximum volume to protect your hearing. Press and hold until “AVLS*” appears in the display. The AVLS function is turned on. To turn off the AVLS function, press and hold again until “AVLS” disappears.
10 (stop)	Press to stop playing.
11 RADIO OFF	Press to turn off the radio.
12 VOL +/-	Press to adjust the volume.
13 Hook	Use to hang the remote control on a knapsack, etc.

*1 AMS = Automatic Music Sensor
*2 If you disconnect the power sources, all settings return to the defaults.
*3 If the sound is distorted when using the SOUND function, turn down the volume.
*4 AVLS = Automatic Volume Limiter System

To remove the CD

Remove the CD while pressing the pivot (E).

Playing your favorite tracks by adding Bookmarks (Bookmark track play)

You can add Bookmarks to up to 99 tracks for each CD. You can use this function for up to 5 CDs.

To add Bookmarks

- 1 During playback of the track where you want to add a Bookmark, press and hold until “” (Bookmark)” flashes in the display. When the Bookmark has been added successfully, flashing of “” becomes slow.
- 2 Repeat step 1 to add Bookmarks to the tracks you want.

To listen to the tracks with Bookmarks

- 1 Press P MODE/ repeatedly until “” flashes.
- 2 Press . “” lights up in the display and the playback of the tracks with Bookmarks starts.

To remove the Bookmarks

During playback of the track with a Bookmark, press and hold until “” disappears from the display.

To check the tracks with Bookmarks

During playback of the tracks with Bookmarks, “” keeps flashing slowly in the display.

Notes

- During playback of the tracks with Bookmarks, tracks are played in order of track number, and not in the order you added the Bookmarks.
- If you try to add Bookmarks to the tracks on the 6th CD, the Bookmarks of the CD you played back first will be erased.
- If you remove all power sources, all Bookmarks stored in memory will be erased.

Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 64 tracks in your favorite order.

- 1 During playback, press P MODE/ repeatedly until “PGM” appears.
- 2 Press or to select a track.
- 3 To enter the selected track, press and hold until the playing order increases by one. “00” appears and the playing order increases by one.
- 4 Repeat steps 2 and 3 to select the tracks in your favorite order.
- 5 Press to start PGM play.

To check the program

During programming:

Press and hold repeatedly before step 5.

During the PGM play:

Press P MODE/ repeatedly until “PGM” flashes, then press and hold repeatedly. Each time you press , the track number appears.

Notes

- When you finish entering the 64th track in step 3, the first selected track appears in the display.
- If you select more than 64 tracks, the first selected tracks are erased.

