

Compact Disc Compact Player

Operating Instructions

About area code

The area code of the player you purchased is shown on upper left of the bar code label on the package. For accessories supplied with your player, check the area code of your model and refer to "Supplied accessories" toward the end of this manual.



D-E771
D-E776CK

Sony Corporation ©1999 Printed in Malaysia

Welcome!

Thank you for purchasing the Sony Compact Disc Compact Player. Before operating your player, please read this manual and retain it for future reference.

About this manual

The instructions in this manual are for the D-E771 and D-E776CK. Before you start reading, check your model number.

Owner's Record

The model and the serial numbers are located at the bottom. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

The use of optical instruments with this product will increase eye hazard.

For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

For the customers in Australia

The supply cord of the AC power adaptor cannot be replaced; if the cord is damaged, the AC power adaptor should be discarded.

For the customers not in Poland

The (B) mark on the unit is valid only for products marketed in Poland.

For the customers not in Europe

The CE mark on the unit is valid only for products marketed in the European Union.

For the customers not in Russia


The mark on the unit and package is valid only for products marketed in Russia.

AR46


Playing a CD right away!

If you want to play a CD right now, choose to use your player on house current. Other choices are the following three: rechargeable battery, dry batteries (see "Power Sources" on the reverse side) and car battery.

 
1 Connect

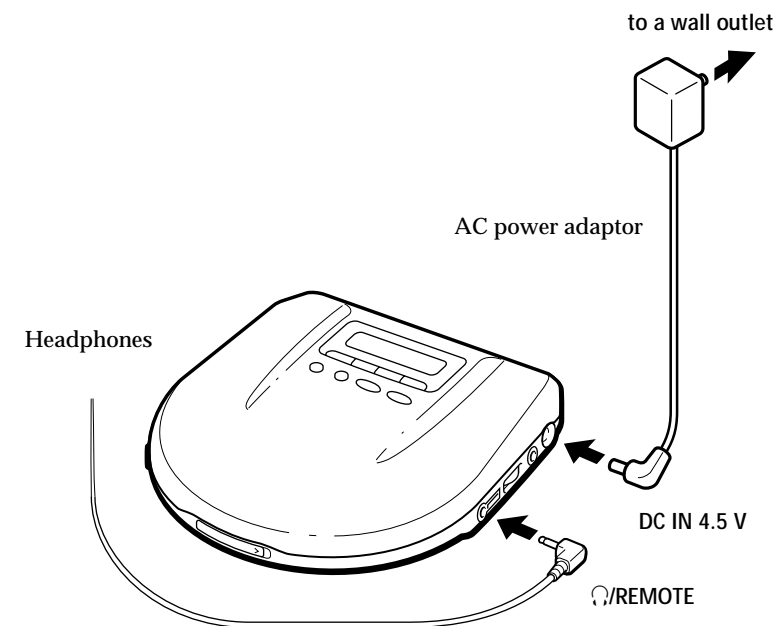

2 Place a CD

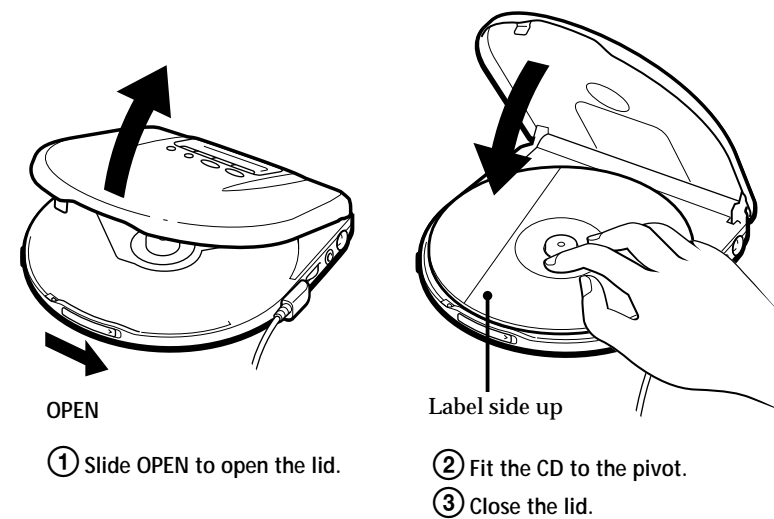 

3 Play

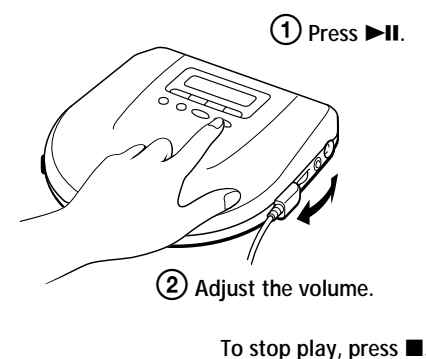 


| To | Press |
|--|-----------------|
| Pause | ⏸ |
| Resume play after pause | ▶▶ |
| Find the beginning of the current track (AMS*) | ⏮ once** |
| Find the beginning of previous tracks (AMS) | ⏮ repeatedly** |
| Find the beginning of the next track (AMS) | ▶▶ once** |
| Find the beginning of succeeding tracks (AMS) | ▶▶ repeatedly** |
| Go forward quickly | Hold down ▶▶▶** |
| Go backwards quickly | Hold down ⏮** |

*AMS = Automatic Music Sensor
**These operations are possible during both play and pause.

If you press REPEAT/ENTER on the player to display "◀", you can locate the tracks continuously in the following order:

- When using ▶▶▶: next track → next track last track → first track → second track
- When using ⏮: previous track → previous track first track → last track

 To remove the CD
Remove the CD while pressing the pivot.

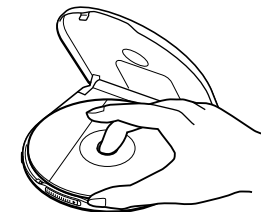


Notes on display

- When you press ▶▶ (when RESUME is set to OFF), the total number of tracks in the CD and the total playing time appear for about 2 seconds.
- During play, the track number and the elapsed playing time of the current track appear.
- During pause, the elapsed playing time flashes in the display.
- Between tracks, the time to the beginning of the next track will appear with the "-" indication.

Notes on handling CDs

 
- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

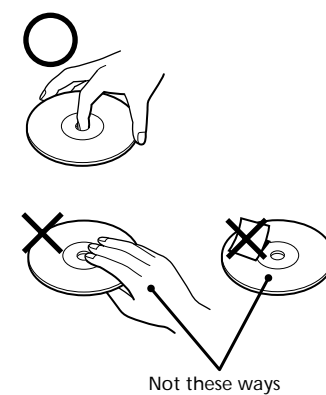

▶Other Operations

Playing tracks repeatedly (Repeat Play)

 You can play tracks repeatedly in normal, INTRO PGM, shuffle or RMS (Random Music Sensor) play modes. Repeat all the tracks, only one track or the specified part within the same track.

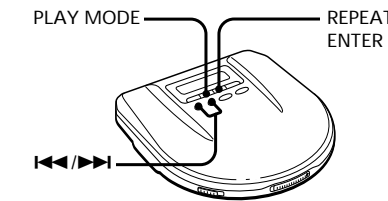


To repeat all the tracks
Press REPEAT/ENTER during play. The "◀" indication appears.



To cancel repeat play, press REPEAT/ENTER again.

To repeat a single track

 1 Press REPEAT/ENTER while the track you want to repeat is playing. The "◀" indication appears.



2 Press PLAY MODE repeatedly until "1" appears.

 


To repeat another track, press ⏮ or ▶▶.


To cancel repeat play, press REPEAT/ENTER again.

To repeat the specified part within the same track (LOOP Play)


1 During play, press PLAY MODE repeatedly until "A↔B" flashes in the display.

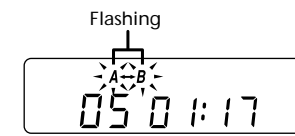

 2 Press REPEAT/ENTER to set the point (point A) where you want to start repeat play. Point A is stored in the memory.

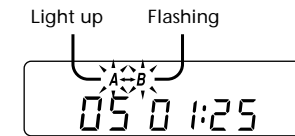

 3 Press REPEAT/ENTER again to set the point (point B) where you want to stop repeat play. Point B is stored in the memory, and repeat play starts from point A.

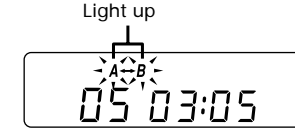

To change points A and B, press and hold REPEAT/ENTER until "A↔B" flashes in the display, then do steps 2 and 3 again.

 
To set points A and B on other tracks, press ⏮ or ▶▶ to select another track, then do steps 2 and 3 again.

If you press ■, the stored points will be erased. To prevent accidental erasure, set the RESUME switch at the rear of the player to ON.


To cancel repeat play, press PLAY MODE until "A↔B" disappears from the display.

Playing only the tracks you want (INTRO PGM Play)

You can choose and play your favorite tracks by scanning through the beginning of each track in a CD.

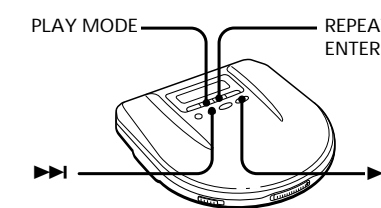

 1 During play, press PLAY MODE repeatedly until "INTRO PGM" flashes.

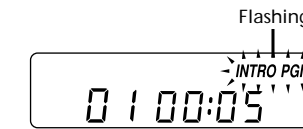

2 Press ▶▶ to start scanning. The player plays about the first 15 seconds of each track and "INTRO PGM" flashes faster.

3 Press REPEAT/ENTER while the track you want is playing. To skip the track, press ▶▶ or just wait for the next track.

After you have gone through the CD, "INTRO PGM" stops flashing and the tracks you have chosen play automatically.

 
To finish programming before going through the whole CD, press ▶▶. The selected tracks will be played.

If you press ■, the program will be erased. To prevent accidental erasure, set the RESUME switch at the rear of the player to ON.


To cancel INTRO PGM play, press PLAY MODE repeatedly until the play mode indication disappears from the display.

Playing tracks in random order (Shuffle Play)

You can play the tracks in a CD in random order.

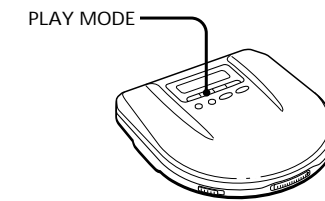

 During play, press PLAY MODE repeatedly until "SHUF" appears. The tracks play in random order.




To cancel shuffle play, press PLAY MODE repeatedly until the play mode indication disappears from the display.

Note


- During shuffle play, you cannot return to previous tracks by pressing ⏮.

Playing tracks in the order you want (RMS play)

 You can program up to 22 tracks to play in any order you choose.

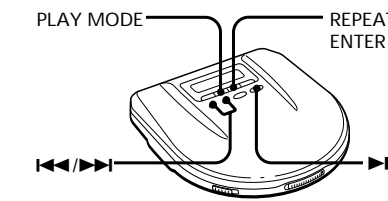


 1 During play, press PLAY MODE repeatedly until "RMS*" flashes.

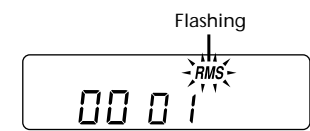

*RMS = Random Music Sensor

 2 Press ⏮ or ▶▶ to choose a track. The track number and the playing order appear.

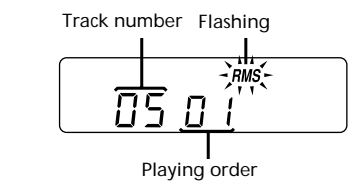

3 Press REPEAT/ENTER to program the track.

4 Repeat steps 2 and 3 to program the remaining tracks.

5 Press ▶▶. "RMS" stops flashing and the tracks you have chosen play in the order you specified.

If you press ■, the program will be erased. To prevent accidental erasure, set the RESUME switch at the rear of the player to ON.

To cancel RMS play, press PLAY MODE until "RMS" disappears from the display.

To check the program

During programming:
Press REPEAT/ENTER before step 5.

During RMS play:
Press PLAY MODE repeatedly until "RMS" flashes, then press REPEAT/ENTER.

Each time you press REPEAT/ENTER, the track number and the playing order appear in the order you specified.

Note

- If you program another track after the 22nd track, the first track programmed is cleared and the new track is programmed instead.

Continue to the reverse side →

