 


JENSEN[®] audio

MODEL CD- 36

PERSONAL CD PLAYER

INSTRUCTION MANUAL

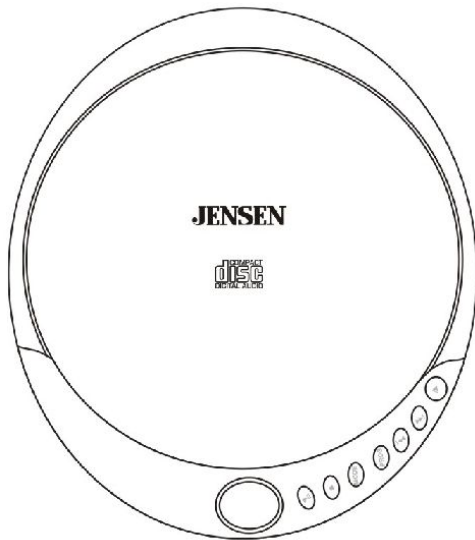

**Please read this Instruction Manual carefully before
using the unit and retain it for future reference**

DEAR JENSEN CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its bottom cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: CD-36

 
Serial Number: _____

WARNING

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM

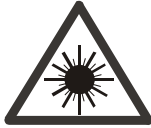

This product contains a low power laser device.

SAFETY PRECAUTIONS

1. As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
2. Stop operation immediately if any liquid or solid object should fall into the cabinet. Unplug the unit and have it checked by qualified personnel.
3. Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
4. Do not put anything in the safety slot. If you do, the laser diode will be ON when the lid is still opened.
5. If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC adaptor from the wall outlet. Make it a practice to remove the AC adaptor by grasping the main body and not by pulling the cord.
6. This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified herein may result in exposure to hazardous radiation.

EN-2

COMPLIANCE WITH FCC REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
IMPORTANT NOTE

1. This product does not contain a separate Power On / Off switch. After inserting a disc and installing batteries / AC adaptor, simply press the Play button to switch on and play a disc.
2. In order to maximize battery life and provide optimum playing time this product incorporates an Auto Power Off function. The power to the player will automatically switch off approximately 30 seconds after a disc has finished playing or when the CD lid is opened.

EN-3

LOCATION OF CONTROLS

1. LCD Display
2. DC Power Jack
3. Battery Compartment Cover (bottom)
4. Play/Pause Button
5. Volume Control
6. CD LID Button
7. Headphones Jack
8. Stop Button
9. Next Button
10. Previous Button
11. Mode Button
12. Program Button
13. CD Door

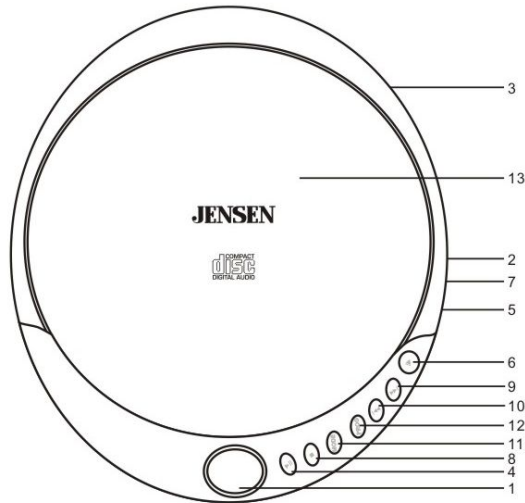

POWER SOURCE

This CD player operates on two 1.5V DC 'AA' size (UM-3) alkaline batteries (not included) or with an AC adaptor with an output of 4.5VDC/700mA (not included).

To install batteries into the player

1. Open the battery compartment cover located on bottom of cabinet.
2. Insert two 1.5V DC 'AA' size (UM-3) alkaline batteries (not included) into the Battery Compartment following the polarity markings as indicated in the compartment.
3. Close the battery door and completely slide it back to its original position.

 


Battery care

- i. Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
- ii. (a) Do not mix old and new batteries.
(b) Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- iii. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
- iv. Never attempt to charge "Non-rechargeable" batteries.
- v. Do not dispose of batteries in fire, batteries may explode or leak.

Using an adaptor (not included) to power the player

1. Before connecting the adaptor to the player, make sure that the AC voltage of the adaptor corresponds to your local AC outlet voltage. The polarity of the adaptor must match the polarity markings next to the DC jack on the player.
2. Plug the 4.5VDC/700mA AC-DC adaptor into an AC outlet.
3. Insert the DC plug into the jack on the player.



NOTE: When the adaptor is connected, the batteries will be automatically disconnected and the player will now operate on the adaptors power. Once the adaptor is unplugged the player will automatically switch to back to battery power.

EARPHONES CONNECTION

Connect the plug of the stereo earbuds (included) into the PHONES socket.

CAUTION

- **AVOID EXCESSIVE VOLUME LEVELS FOR LONG PERIODS OF TIME WHEN USING THE HEADPHONES. PROLONGED USE AT HIGH LEVELS MAY IMPAIR YOUR HEARING.**
- **Do not use earphones while operating a motorized vehicle, as it may create a traffic hazard and is illegal in many areas.**

BASIC OPERATION

NOTE: This unit can also play 3 inch (8cm) single CDs without an adaptor. Do not use a CD single adaptor for these smaller discs.

1. Press the CD LID OPEN button to release the CD lid.
2. Insert a disc with the label side facing up.
3. Close the CD Lid. A click will be heard when it locks into place.
4. Press the PLAY/PAUSE ►|| button once to start playing.
5. The display will show the total number of tracks and playing time. The player will then start playing the first track.
6. Adjust the volume by turning the Volume Control.



Locating a Particular Track

To skip back to the beginning of the current or a previous track
To skip to the beginning of following tracks

Press ◀◀ once or repeatedly.

Press ▶▶ once or repeatedly.

Locating a Particular Point in a Track

To search back at a high speed

Press & hold ◀◀

To search forward at a high speed

Press & hold ▶▶

Turning Power On and Off

To turn ON and OFF, press the following buttons after a disc is inserted into the player.

To turn ON: Press PLAY/PAUSE ►|| button (playback starts)

To turn OFF : Press STOP ■ button once for standby mode.

 
Press STOP ■ button again to turn off the power.

Auto power-off function

When the unit is stopped (Standby mode) for approximately 30 seconds, the power is automatically turned off.

To Remove the Disc

1. Press the CD LID OPEN button to open the CD compartment lid.
2. Hold the edge and gently press the center pivot as illustrated, then pick up the disc.

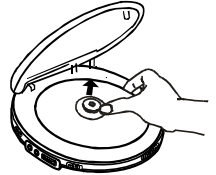

CAUTION: WAIT FOR THE DISC TO STOP SPINNING BEFORE SLIDING THE OPEN SWITCH AND OPENING THE LID.

LCD DISPLAY INFORMATION

When the ►|| button is pressed at initial start up

- The display will show “- -” and then the total number of tracks and total playing time. The disc will start playing and the display will show the first track number and instant playing time.
- To review the total number of tracks and total playing time of the disc, press the STOP ■ button once.


During PLAY mode

- The track number and instant playing time are displayed.

During PAUSE mode

- When the track playback is paused, the playing time flashes.

Battery Low Indicator

A flashing battery indicator  flashes in the display when the batteries need to be changed.

VARIOUS PLAYBACK MODES

NORMAL PLAYBACK

The whole disc is played and the player will stop after the last track is finished.

Every time the **MODE** button is pressed, the corresponding mode appears in the display window, in the following sequence:

REPEAT 1 In stop or playback mode press the MODE Button once.



When shown on the LCD display, the current track on the disc will be repeated.

REPEAT ALL In stop or playback mode press the MODE Button twice.



When shown in the LCD display, all tracks on the disc will be repeated.

To cancel the Repeat Function, press the **MODE** Button repeatedly until “1” or “ALL” disappears.

INTRODUCTORY SCAN

To play the first 10 seconds of each track on the disc.

1. In STOP mode press the **MODE** button three times, INTRO is displayed.



2. Press **▶▶** button to start INTRO play from track number 01.

3. If INTRO mode is selected during play, **INTRO** will start flashing in the display.
- Press **▶▶** button. INTRO stops flashing and INTRO play starts from track 01.
 - Press **▶▶▶** to start INTRO play from next track.
 - Press **◀◀** to start INTRO play from current track.
 - To cancel INTRO play, press **▶▶** again. Playback continues on current track.

RANDOM

Enables all the tracks on the disc to be played in a Random sequence.

1. In STOP mode press the **MODE** button four times, RANDOM Indicator, “RND”, will be displayed.
2. Press **▶▶** button. A track is selected at random and playback begins.
3. If RANDOM mode is selected during play, “RND” will appear and flash in the LCD Display.
4. Press **◀◀** or **▶▶** button once. “RND” stops flashing and RANDOM playback begins.
5. Press the **MODE** Button again to return to normal play mode.



PROGRAMMED PLAY

Programs can be set in either the STOP or normal play mode.

1. Press the PROG button once, PROG No. 01 appears. **PROG** and Track No. **00** start flashing in the display.
2. Press **◀◀** or **▶▶** to select the desired track.
3. When the desired track is displayed, press the PROG button to register. The PROG No. changes to **02**. Track No. returns to **00** and flashes together with **PROG**.
4. Repeat steps 2 and 3 to program more tracks. Up to 20 tracks can be programmed into the memory.
5. Press **▶▶** to start the programmed play.
6. To erase the program, in STOP mode simply press the **▶▶** button.



PLAYER MAINTENANCE

Cleaning the Cabinet

Wipe with a soft cloth. If the cabinet is very dirty, dampen the cloth with a weak solution of neutral detergent and water, and then wipe clean.

Cleaning the Lens

A dirty lens will cause sound skipping and, if the lens is very dirty, the CD may not work. Never touch the lens with your finger or press down on the lens assembly. Damage may occur or you may scratch the lens. Open the disc cover and clean the lens as follows:

Dust or Dry Particles

Using a camera lens brush/blower, blow on the lens a couple of times, wipe it lightly with the brush to remove dust. Then, blow on the lens once more.

DISC CLEANING AND TROUBLESHOOTING GUIDE

Cleaning the Disc

When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



Note

Do not use solvents such as benzene petrol, thinner, commercially available cleaners or anti-static spray intended for analogue discs.

TROUBLESHOOTING GUIDE

Should you experience difficulties in the use of this player please refer to the following chart or call 1-800-777-5331 for Customer Service.

Problem	Points to Check
Player fails to function	Disc may be inserted upside down Disc not mounted correctly on chuck Dirty or defective disc Dirty pick up lens Player lid not closed Moisture/Condensation, allow player to warm up to room temperature for 60 minutes AC power to adaptor switched off Weak batteries Auto switch off has occurred
No sound from Headphones	Headphone plug is not firmly inserted into the Phones socket.
Intermittent sound	Dirty or defective disc Dirty pick up lens Player is subject to excessive vibration or shock Low battery power Poor Headphone connection

SERVICE

Please refer to the instructions on the enclosed warranty card for returning your unit for service. When returning the unit, please remove batteries to prevent damage to the unit in transit and/or from possible battery leakage. We are not responsible for batteries returned with the product or for the cost of replacement.

Distributed by:
SPECTRA - Merchandising International, Inc.
Chicago Industry Tech Park
4230 North Normandy Avenue,
Chicago. IL 60634, U. S. A.
Please have model number ready,
for Customer Service, call 1-800-777-5331