

SONY

SONY®

HANDYCAM

Digital HD Video Camera Recorder
HANDYCAM®

Operating Guide

HDR-FX7

US

 Enjoying pictures with high definition quality 12

Getting Started 16

 Recording/ Playback 28

Using the Menu 56


Dubbing/Editing 76

Using a Computer 86

Troubleshooting 92

Additional Information 104

Quick Reference 119

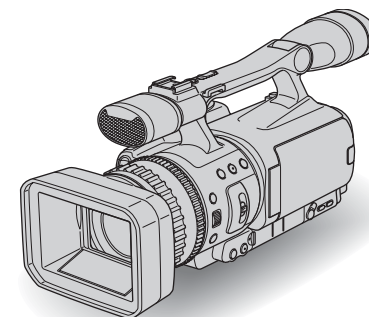

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>



Printed on 70% or more recycled paper using VOC (Volatile Organic Compound) -free vegetable oil based ink.

Printed in Japan




HDV Mini DV Digital Video Cassette   **HDMI**

HDV 1080i

© 2006 Sony Corporation

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

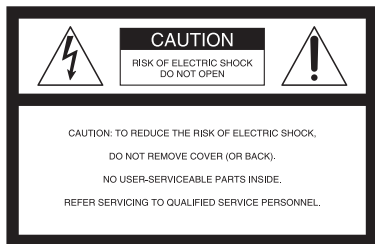

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

Use

Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

Installation

Water and Moisture

Do not use power-line operated sets near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface.
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

IMPORTANT SAFEGUARDS (Continued)

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance – this indicates a need for service.

Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.

Read this first

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

CAUTION

Replace the battery with the specified type only. Otherwise, fire or injury may result.

For customers in the U.S.A. and CANADA

RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrcc.org/>

Caution: Do not handle damaged or leaking Lithium-Ion batteries.



Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. HDR-FX7

Serial No.

Model No. AC-

No.

For customers in the U.S.A.

If you have any questions about this product, you may call:
Sony Customer Information Center 1-800-222-SONY (7669).
The number below is for the FCC related matters only.

Regulatory Information

Declaration of Conformity

Trade Name: SONY
Model No.: HDR-FX7
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230
This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

Read this first (Continued)

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Notes on use

Types of cassette you can use in your camcorder

You can use mini DV cassettes marked with ^{Mini}DV. Mini DV cassettes with Cassette Memory are incompatible (p. 105).

Types of “Memory Stick” you can use in your camcorder

There are two sizes of “Memory Stick.” You can use “Memory Stick Duo” marked with MEMORY STICK DUO or MEMORY STICK PRO DUO (p. 106).

“Memory Stick Duo”
(This size can be used with your camcorder.)



“Memory Stick”
(You cannot use it in your camcorder.)



Note

- You cannot use any type of memory card except “Memory Stick Duo.”

- “Memory Stick PRO” and “Memory Stick PRO Duo” can be used only with “Memory Stick PRO” compatible equipment.
- Do not attach a label or the like on a “Memory Stick Duo” or a Memory Stick Duo Adaptor.

When using a “Memory Stick Duo” with “Memory Stick” compatible equipment

Be sure to insert the “Memory Stick Duo” into the Memory Stick Duo Adaptor.

Memory Stick Duo Adaptor




Using the camcorder


- Do not hold the camcorder by the following part.




Lens hood

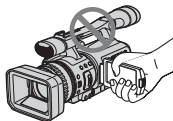


LCD panel

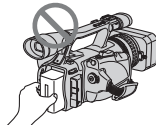

Battery pack

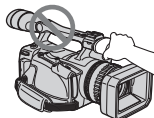

Microphone

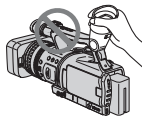


Viewfinder

Note

- The camcorder is not dustproof, dripproof or waterproof.
See “Maintenance and precautions” (p. 111).
- Before connecting your camcorder to another device with an HDMI cable, component video cable, USB or i.LINK cable, be sure to insert the connector plug the correct way, and not forcibly to avoid damaging the terminal, or cause a malfunction of your camcorder.

About menu items, LCD panel, viewfinder, and lens

- A menu item that is grayed out is not available under the current recording or playback conditions.
- The LCD screen and the viewfinder are manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue, or green in color) that appear constantly on the LCD screen and the viewfinder. These points are normal results of the manufacturing process and do not affect the recording in any way.

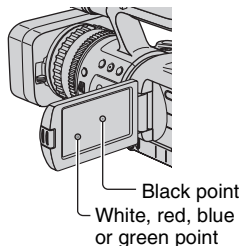

- Exposing the LCD screen, the viewfinder, or the lens to direct sunlight for long periods of time may cause malfunctions.

- Do not aim at the sun. Doing so might cause your camcorder to malfunction.
Take pictures of the sun only in low light conditions, such as at dusk.

On recording


- Before starting to record, test the recording function to make sure the picture and sound are recorded without any problems.
- Compensation for the contents of recordings cannot be provided, even if recording or playback is not possible due to a malfunction of the camcorder, storage media, etc.
- TV color systems differ depending on the countries/regions. To view your recordings on a TV, you need an NTSC system-based TV.
- Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the copyright laws.


On playing back HDV tapes on other devices


You cannot play back a tape recorded in the HDV format on DV format video cameras or on mini DV players.

 
Check the contents of tapes by playing them back on this camcorder prior to playing them back on other devices.

Note on the icons used in this manual

 Features available for the HDV format only

 Features available for the DV format only

 This function that can be used when i.LINK cable is connected.

 This function that can be used when USB cable is connected.

Read this first (Continued)

About this manual

- The images of the LCD screen and the viewfinder used in this manual for illustration purposes are captured using a digital still camera, and therefore may appear different.
- The on-screen displays in each local language are used for illustrating the operating procedures. Change the screen language before using your camcorder if necessary (p. 74).
- Design and specifications of recording media and other accessories are subject to change without notice.

About the Carl Zeiss lens

Your camcorder is equipped with a Carl Zeiss lens, which was developed jointly by Carl Zeiss, in Germany, and Sony Corporation, and produces superior images. It adopts the MTF measurement system for video cameras and offers a quality typical of a Carl Zeiss lens. Also, the lens for your camcorder is T*[®]-coated to suppress unwanted reflections and faithfully reproduce colors.

MTF= Modulation Transfer Function. The number value indicates the amount of light from a subject coming into the lens.

Table of Contents

IMPORTANT SAFEGUARDS	3
Read this first	5



Enjoying pictures with high definition quality

Trying out the new HDV format!	12
Features of this camcorder	13
Handy Functions for Recording	14
Viewing video recorded in the HDV format!	15

Getting Started

Step 1: Checking supplied items	16
Step 2: Attaching the lens hood with lens cover	17
Step 3: Charging the battery pack	18
Step 4: Turning the power on and holding your camcorder properly	21
Step 5: Adjusting the LCD panel and viewfinder	22
Step 6: Setting the date and time	24
Step 7: Inserting a tape or a "Memory Stick Duo"	26









Recording/Playback

Recording	28
Playback	31
Changing the settings of your camcorder recordings	33
Adjusting the zoom	33
Adjusting the focus manually	34
Adjusting the EXPOSURE/IRIS	35
Adjusting to Natural Color (White balance)	38
Customizing the picture quality (Picture profile)	39
Assigning the functions to the ASSIGN buttons	42
Focusing on a distant subject (Focus infinity)	43
Recording an index signal	44
Reviewing the most recently recorded scenes (Rec review)	44
Searching for the last scene of the most recent recording (End search)	44
Using the Shot transition	45
Changing/checking the settings in your camcorder	47
Changing the screen	47

Displaying the settings in your camcorder (Status check)	47
Checking the remaining battery (Battery Info)	48
Locating a scene on a tape	49
Searching quickly for a desired scene (Zero set memory)	49
Searching for a scene by date of recording (Date search)	49
Searching for a recording start point (Index search)	50
Playing the picture on a TV	51

Using the Menu

<i>Using the menu items</i>	56
Menu items	57
 (CAMERA SET) menu	59
Settings to adjust your camcorder to the recording conditions (EXPOSURE/ IRIS/STEADYSHOT/BACK LIGHT, etc.)	
 (AUDIO SET) menu	64
Settings for the audio recording (AUDIO REC LV/DV AU. MODE, etc.)	
 (DISPLAY SET) menu	65
Display settings of the display and the viewfinder (MARKER/VF B.LIGHT/ DATA CODE, etc.)	
 (IN/OUT REC) menu	69
Recording settings, input and output settings (VCR HDV/DV/DV REC MODE/ DV WIDE REC/ TV TYPE, etc.)	
 (MEMORY SET) menu	71
Settings for the "Memory Stick Duo" (QUALITY/ALL ERASE, etc.)	
 (OTHERS) menu	73
Settings while recording on a tape or other basic settings (USB SELECT/ QUICK REC/BEEP, etc.)	

Dubbing/Editing

Dubbing to VCR, DVD/HDD device, etc.	76
Recording pictures from a VCR	79
Copying movies from tape to "Memory Stick Duo" as still images	82
Deleting recorded pictures from the "Memory Stick Duo"	82
Printing recorded images (PictBridge compliant printer)	83

Using a Computer

Connecting to a computer	86
Copying still images to a computer	86
Copying movies on a tape to a computer	89

Troubleshooting

Troubleshooting	92
Warning indicators and messages	101

Additional Information

Using your camcorder abroad	104
HDV format and recording/playback	105
About the “Memory Stick”	106
About the “InfoLITHIUM” battery pack	108
About i.LINK	110
Maintenance and precautions	111
Specifications	115

Quick Reference

Identifying parts and controls	119
Indicators for the LCD screen and viewfinder	124
Index	127

Trying out the new HDV format!

High image quality

The HDV format has about 2 times the horizontal resolution of a standard TV resulting in about 4 times the amount of pixels providing high quality images.

Being HDV format compliant, your camcorder is ready to shoot crystal clear, high-definition images.

? What is the HDV format?

The HDV format is a new video format for shooting and playing back high definition images on popular DV standard cassette tapes.

- **Your camcorder adopts the HDV1080i specification, which utilizes 1,080 effective scanning lines, within the HDV standards,** and records pictures at the image bit rate of about 25 Mbps.



1,080 effective scanning lines

- These operating instructions refer to the HDV1080i specification as HDV format unless there is a need to specify.

? Why shoot in the HDV format?

By moving to digital video, like the rest of the world, you will be able to capture important moments in your life in high quality digital HDV format, allowing you to relive them.

Your camcorder's down convert function converts pictures in HDV format to SD (standard definition) quality for viewing on older wide TV formats, and on 4:3 aspect ratio TVs when a high definition TV set is not available. This provides an easy path to HDV format video.

- The down convert function converts HDV format video to DV for playback or editing when your camcorder is connected to a TV or VCR that is not HDV1080i compliant. The resulting image is displayed in SD (standard definition).

Features of this camcorder

The HDV1080i specification digital HD video camera recorder has the following features to enable you to record beautiful scenery while traveling, etc., in high definition quality.

1 3-ClearVid CMOS sensor system installed

This camcorder is fitted with the 3-ClearVid CMOS sensor system. Superb spectroscopic characteristics and high definition are achieved by the use of three ClearVid CMOS sensors developed by Sony for high definition, enabling reproduction of digital high definition with excellent sensitivity and color reproducibility.

2 Carl Zeiss Vario-Sonnar T* 20X optical zoom lens installed

The Carl Zeiss Vario-Sonnar T* 20× optical zoom lens lets you zoom in on distant objects and record in high definition quality.

3 Realistic sound recording with built-in high performance microphone

The high performance stereo microphone built into this camcorder enables highly realistic sound recording.

4 Detailed manual settings for serious filming

Extensive manual setting functions allow you to shoot high definition videos with customized settings.

- The zoom ring, focus ring and EXPOSURE/IRIS dial provide full manual control.
- You can manually fine-adjust the shutter speed, white balance and gain.

5 Connecting to other devices

Superb external connectability is provided by a “Memory Stick Duo” slot, USB port, HDMI OUT jack, and headphone jack on the left side of your camcorder and an i.LINK (HDV/DV) jack, COMPONENT OUT jack, A/V OUT jack, and DC IN jack on the right side.

Handy Functions for Recording

Still image Dual Rec (p. 30)

You can record 1.2M still images on the “Memory Stick Duo” during recording movie.

Smooth slow recording (p. 59)

Moving subjects can be shot in smooth moving slow-motion.

Saving Camera profile (p. 73)

Two settings profiles, including brightness, color, etc., can be saved in your camcorder. This enables you to use saved settings data to quickly reproduce suitable shooting settings.

EXPOSURE/IRIS dial (p. 35)

You can adjust the brightness using the EXPOSURE/IRIS dial. The EXPOSURE/IRIS dial can be used to adjust [EXPOSURE], [IRIS] or [AE SHIFT].

Viewing video recorded in the HDV format!



Viewing on a high definition TV (p. 51)

Pictures recorded in the HDV format can be played back as crisp HD (high definition) picture on a high definition TV.

- For details on HDV1080i specification compliant TVs, see page 53.



Viewing on a 16:9 TV/4:3 TV (p. 51)

Your camcorder can down convert video recorded in the HDV format to SD (standard definition) quality for playback on a conventional TV.



Dubbing to other video equipment (p. 76)

■ Connecting to an HDV1080i specification

An optional i.LINK cable allows you to copy pictures in HD (high definition) quality.

■ Connecting to HDV1080i non-compliant specification

Use your camcorder to convert HDV format video to SD (standard definition) quality to enable copying.



Connecting to a computer (p. 86)

■ Copying “Memory Stick Duo” still images to a computer.

■ Copying movie from tape to a computer

You can copy movie to a computer, and save to DVD from copying movie.


The computer will need to be set up differently depending on whether HDV or DV format video is to be copied. See page 89 for details.

Step 1: Checking supplied items

Make sure that you have following items supplied with your camcorder. The number in the parentheses indicates the number of that item supplied.

- The cassette tape and “Memory Stick Duo” are not included. See page 26, 105 and 106 for compatible cassettes and “Memory Stick Duo” for your camcorder.

AC Adaptor (1) (p. 18)

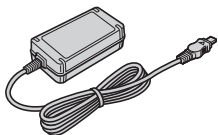

Power cord (1) (p. 18)



Wireless Remote Commander (1) (p. 123)




A button-type lithium battery is already installed.


A/V connecting cable (1) (p. 51, 76)




Component video cable (1) (p. 51)

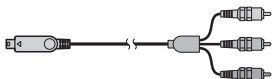


USB cable (1) (p. 86)

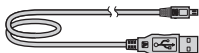


Large eyecup(1) (p. 23)

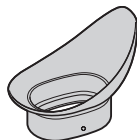

Rechargeable battery pack NP-F570 (1) (p. 18, 108)

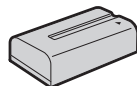


Lens hood with lens cover (1) (p. 17)

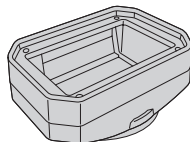

Operating Guide (This manual) (1)

Step 2: Attaching the lens hood with lens cover

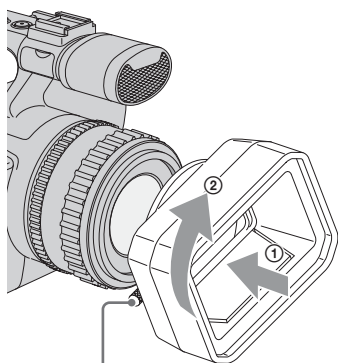

Lens hood fixing screw

Align the marks on the lens hood to those on the camcorder, and turn the lens hood in the direction of the arrow. Tighten the lens hood fixing screw.

To remove the Lens hood with lens cover


Loosen the lens hood fixing screw and turn the lens hood in the opposite direction of the arrow in the illustration above.

Tip

- If you attach, remove or adjust an 62mm (2 1/2 in.) PL filter or MC protector, remove the lens hood.

To open the shutter of the Lens hood with lens cover

Move the lens cover lever up and down to open or close the lens cover.

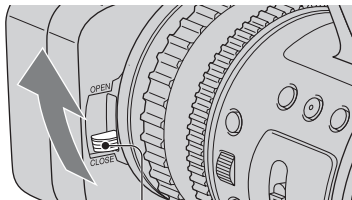


Move the lens cover lever to OPEN to open the lens cover, and move the lever to CLOSE to close the lens cover.

Step 3: Charging the battery pack


You can charge the battery by attaching the “InfoLITHIUM” battery pack (L series) to your camcorder.

Note


- You cannot use batteries other than the “InfoLITHIUM” battery pack (L series) (p. 108).

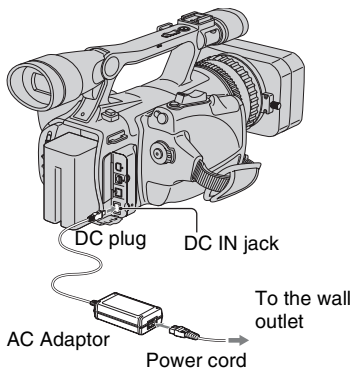

- 1 Press the battery pack and slide it down.

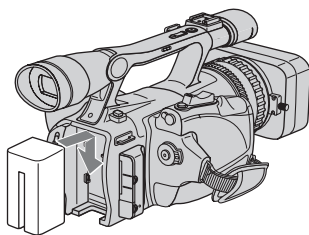

- 2 With the ► mark on the DC plug facing the cassette compartment, connect the AC Adaptor to the DC IN jack on your camcorder.

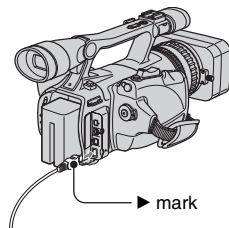


- 3 Connect the power cord to the AC Adaptor.

- 4 Connect the power cord to the wall outlet.

- 5 Set the POWER switch to OFF (CHG).

The CHARGE lamp lights up and charging starts.

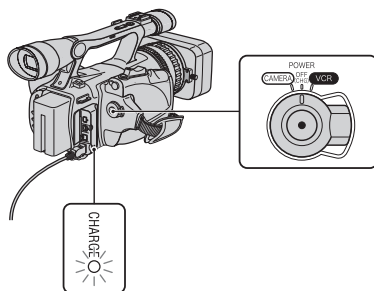

After charging the battery


The CHARGE lamp turns off when the battery is fully charged. Disconnect the AC Adaptor from the DC IN jack.

Tip

- You can check the remaining battery with Battery info (p. 48).

To remove the battery pack

Slide the POWER switch to OFF (CHG). Push the BATT RELEASE (battery release) button and remove the battery pack.

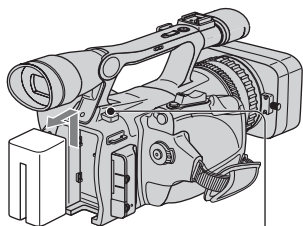

BATT RELEASE
(battery release) button

Charging time

Approximate time (min.) required when you fully charge a fully discharged battery pack.

Battery pack	Charging time
NP-F570 (supplied)	260
NP-F770	370
NP-F970	485

Recording time

Approximate time (min.) available when you use a fully charged battery pack.

Recording in the HDV format

Battery pack	Continuous recording time	Typical recording time*
NP-F570 (supplied)	155	90
	160	95
	155	90
NP-F770	320	185
	335	195
	320	185
NP-F970	480	290
	500	300
	480	290

Recording in the DV format

Battery pack	Continuous recording time	Typical recording time*
NP-F570 (supplied)	160	100
	165	105
	160	100
NP-F770	335	200
	350	210
	335	200
NP-F970	500	300
	520	315
	500	300

Top: When the LCD backlight turns on.

Middle: When the LCD backlight turns off.

Bottom: Recording time when recording with the viewfinder while the LCD panel is closed.

* Typical recording time shows the time when you repeat recording start/stop, turning the power on/off and zooming.

Step 3: Charging the battery pack (Continued)

Playing time

Approximate time (min.) available when you use a fully charged battery pack.

HDV format pictures

Battery pack	LCD panel opened*	LCD panel closed
NP-F570 (supplied)	245	245
NP-F770	510	510
NP-F970	760	760

DV format pictures

Battery pack	LCD panel opened*	LCD panel closed
NP-F570 (supplied)	270	270
NP-F770	550	550
NP-F970	830	830

* When the LCD backlight turns on.

On the battery pack

- Before changing the battery pack, slide the POWER switch to OFF (CHG).
- The CHARGE lamp flashes during charging, or Battery Info (p. 48) will not be correctly displayed under the following conditions.
 - The battery pack is not attached correctly.
 - The battery pack is damaged.
 - The battery pack is worn-out (For Battery Info only).
- The power will not be supplied from the battery as long as the AC Adaptor is connected to the DC IN jack of your camcorder, even when the power cord is disconnected from the wall outlet.
- When attaching an optional video light, it is recommended that you use a NP-F970 battery pack.

On the charging/recording/playback time

- Times measured with the camcorder at 25 °C (77 °F) (10 to 30 °C (50 °F to 86 °F) is recommended).
- The recording and playback time will be shorter when you use your camcorder in low temperatures.

- The recording and playback time will be shorter depending on the conditions under which you use your camcorder.

Using an outside power source

You can use the AC Adaptor to obtain AC. While you are using the AC Adaptor, the battery pack will not lose its charge even when it is attached to your camcorder.

Connect your camcorder as shown in Step3:Charging the battery pack (p. 18).

On the AC Adaptor


- Use the nearby wall outlet when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet immediately if any malfunction occurs while using your camcorder.
- Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.
- Do not short-circuit the DC plug of the AC Adaptor or battery terminal with any metallic objects. This may cause a malfunction.

PRECAUTION


- Even if your camcorder is turned off, AC power (house current) is still supplied to it while connected to the wall outlet via the AC Adaptor.

Step 4: Turning the power on and holding your camcorder properly

To record or play back, slide the POWER switch to the respective direction. When using it for the first time, [CLOCK SET] screen appears (p. 24).

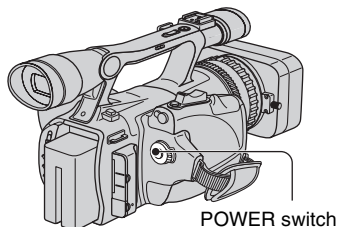

1 While pressing the green button, set the POWER switch.

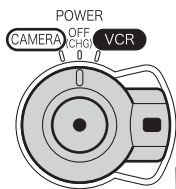


If the POWER switch is set to OFF (CHG), slide it while pressing the green button.

CAMERA: To record pictures.
VCR: To play or edit pictures.


Note

- After you have set the date and time ([CLOCK SET], p. 24), the next time you turn on the power of your camcorder, the current date and time will be displayed on the LCD screen for a few seconds.

2 Hold the camcorder properly.

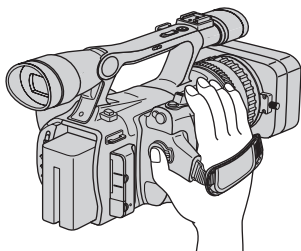

3 Ensure a good grip, then fasten the grip belt.

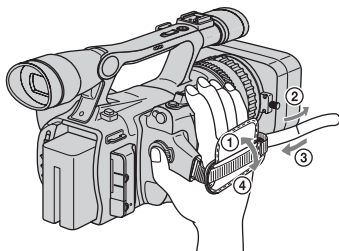

To turn off the power

Slide the POWER switch to OFF (CHG).


Note

- If warning messages appear on the screen, follow the instructions (p. 102).

Step 5: Adjusting the LCD panel and viewfinder


The LCD panel

Open the LCD panel while pressing the OPEN button 90 degrees to the camcorder (①), then rotate it to the best angle to record or play (②).

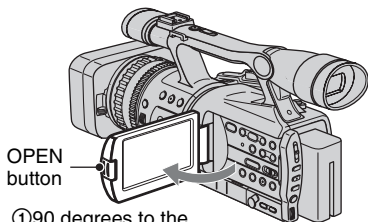

① 90 degrees to the camcorder

② 180 degrees (max.)

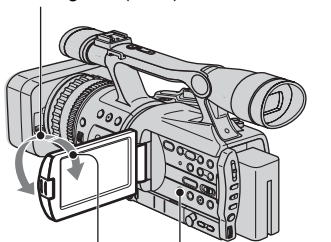

② 90 degrees (max.) DISPLAY/BATT INFO

💡 Tips

- If you rotate the LCD panel 180 degrees toward the lens from the position ①, you can close the LCD panel with the LCD screen facing outward. This is convenient during playback operations.
- To close the LCD panel with the LCD screen inward, rotate the LCD panel to the position ①, and then close the LCD panel.

To turn off the LCD backlight to make the battery last longer

Press and hold the DISPLAY/BATT INFO button for a few seconds until \square_{OFF} appears. This setting is practical when you use your camcorder in bright conditions or where you want to save battery power. The recorded picture will not be affected by the setting. To turn on the LCD backlight, press and hold the DISPLAY/BATT INFO button for a few seconds until \square_{OFF} disappears.

💡 Tip


- See [LCD BRIGHT] (p. 67) to adjust the brightness of the LCD screen.

The viewfinder


You can view pictures using the viewfinder to save the battery, or when the picture on the LCD screen is not clear.

Viewfinder lens adjustment lever

Move it until the picture becomes clear.

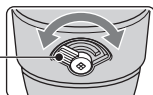

Viewfinder

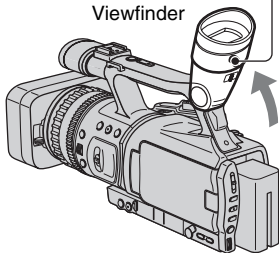

💡 Tip

- You can adjust the brightness of the viewfinder backlight from [VF B.LIGHT] (p. 67).

When the picture in the viewfinder is hard to see



If you cannot see the picture in the viewfinder clearly under bright circumstances, use the supplied large eyecup. To attach the large eyecup, stretch it slightly and align it with the eyecup groove in the viewfinder. You can attach the large eyecup facing either the right or left side.

Note

- Do not remove the pre-attached eyecup.

Attach with the protruding part at the top.

Large eyecup
(supplied)

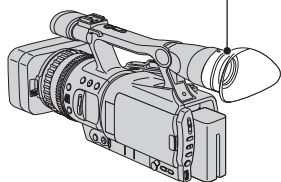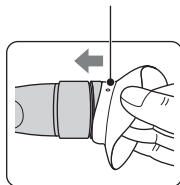


Step 6: Setting the date and time

Set the date and time when using this camcorder for the first time. If you do not set the date and time, [CLOCK SET] screen appears every time you turn on your camcorder or change the POWER switch position.


Tip

- If you do not use your camcorder for **about 3 months**, the built-in rechargeable battery gets discharged and the date and time settings may be cleared from the memory. In that case, charge the rechargeable battery and then set the date and time again (p. 113).

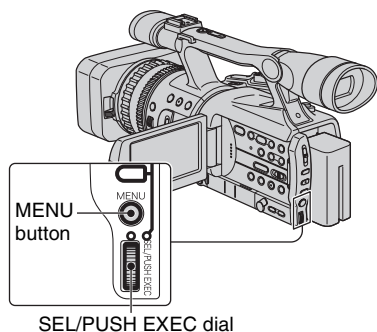


Skip to step 4 when you set the clock for the first time.


1 Press the MENU button.

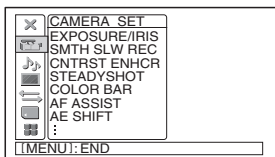

2 Select (OTHERS) by turning the SEL/PUSH EXEC dial, then press the dial.

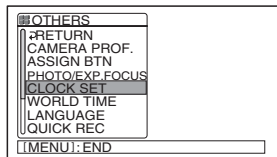


3 Select [CLOCK SET] by turning the SEL/PUSH EXEC dial, then press the dial.

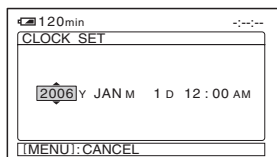

4 Set [Y] (year) by turning the SEL/PUSH EXEC dial, then press the dial.

You can set any year up to the year 2079.

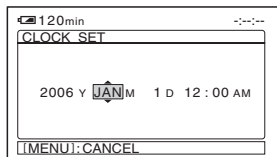

5 Set [M] (month), [D] (day), hour and minute, then press the dial.

The clock starts.

For midnight, set it to 12:00 AM.

For midday, set it to 12:00 PM.

Tip

- The date and time do not appear during recording, but they are automatically recorded on the tape, and can be displayed during playback ([DATA CODE] (p. 67)).


Changing the language setting


You can change the on-screen displays to show messages in a specified language. Select the screen language in [LANGUAGE] (p. 74).

Step 7: Inserting a tape or a “Memory Stick Duo”


Cassette tape

You can use mini DV ^{Mini}**DV** cassettes only (p. 105).


- 1 Slide and hold the  OPEN/EJECT lever in the direction of the arrow and open the lid.

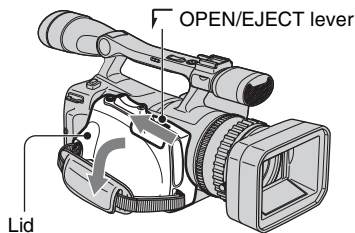

The cassette compartment automatically comes out and opens up.


- 2 Insert a cassette with its window facing outwards, then press  [PUSH].

Push the center of the back of the cassette lightly.

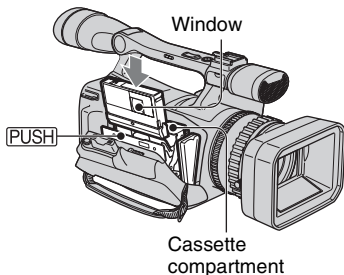


The cassette compartment automatically slides back in.

Note

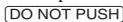- Do not push the portion marked  while it is sliding in. It may cause a malfunction.

- 3 Close the lid.

Tip

- The recordable time varies depending on [DV REC MODE] (p. 69). 


To eject the cassette

Open the lid following the same procedure as described in step 1 and remove the cassette.


“Memory Stick Duo”

You can use only a “Memory Stick Duo” marked with **MEMORY STICK DUO** or **MEMORY STICK PRO DUO** (p. 106).

- 1 Open the jack cover.

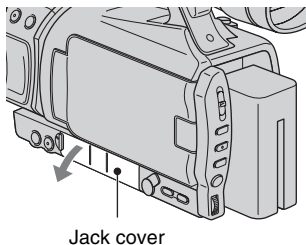

-
- 2** Insert the “Memory Stick Duo” into the “Memory Stick Duo” slot in the right direction until it clicks.

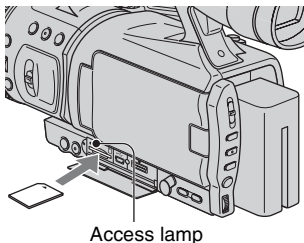

Note

- If you insert the “Memory Stick Duo” into the slot in the wrong direction, the “Memory Stick Duo,” the “Memory Stick Duo” slot, or image data may be damaged.


To eject a “Memory Stick Duo”

Lightly push the “Memory Stick Duo” once.

Notes

- When the access lamp is lit or flashing, your camcorder is reading/writing data. Do not shake or knock your camcorder, turn the power off, eject the “Memory Stick Duo,” or remove the battery pack. Otherwise, image data may be damaged.
- When inserting or ejecting the “Memory Stick Duo,” be careful with the “Memory Stick Duo” from popping out and dropping.


Recording

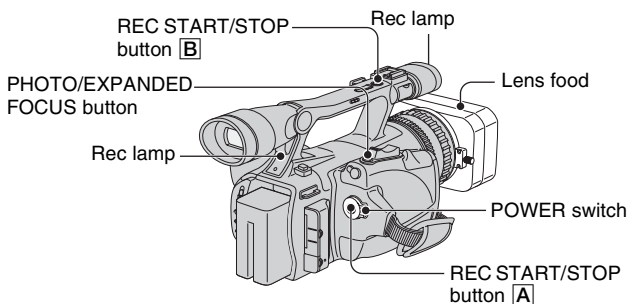


This camcorder records movies on tape and still images on “Memory Stick Duo”. The procedure for recording movies is below.

- This camcorder can record movies in either HDV or DV format. The factory setting is HDV format ([REC FORMAT] p. 69).


1 Open the shutter of the lens hood.

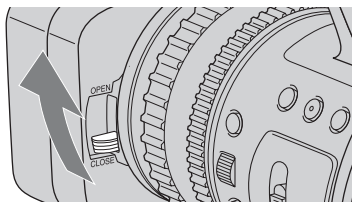

2 While pressing the green button, set the POWER switch to CAMERA.

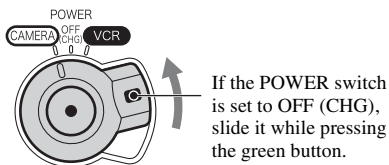

3 Press the REC START/STOP button **[A]** (or **[B]**).

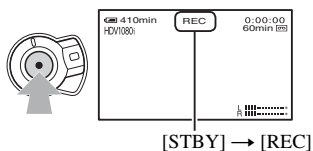

The Rec lamp lights up during recording.


To stop the movie recording, press the REC START/STOP button again.

💡 Tips

- When recording in HDV format, the aspect ratio is fixed to 16:9. When recording in DV format, you can switch the aspect ratio to 4:3 ([DV WIDE REC] p. 70).
- You can change the screen display during recording (p. 47).
- Indicators displayed on the screen during recording are shown on page 124.
- The recording lamp can be set to stay off ([REC LAMP] p. 75).
- You cannot record the movie on a "Memory Stick Duo".

To record in mirror mode


Open the LCD panel 90 degrees to the camcorder (①), then rotate it 180 degrees toward the lens (②).

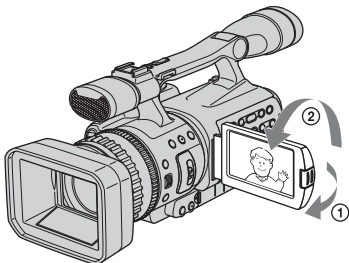


💡 Tip

- A mirror-image of the subject appears on the LCD screen, but the recorded picture will be normal.


To record still images

Press the PHOTO/EXPANDED FOCUS button. The image is recorded on a “Memory Stick Duo.” Recording is complete when  disappears. You can also record still images during movie recording.

Tips


- When you are not recording a movie, you will hear the shutter click.
- The still image size is as follows:
 - When recording in HDV or DV (16:9) format: 1.2M (1,440 × 810 dots)
 - When recording in DV (4:3) format: 0.9M (1,080 × 810 dots)
- You can change the image quality and number of recordable images ([ QUALITY] (p. 71)).
- Indicators displayed on the screen during shooting are shown on page 124.
- You can set the PHOTO/EXPANDED FOCUS button to start the expanded focus function as you press the button ([PHOTO/EXP.FOCUS] (p. 74)).

Playback

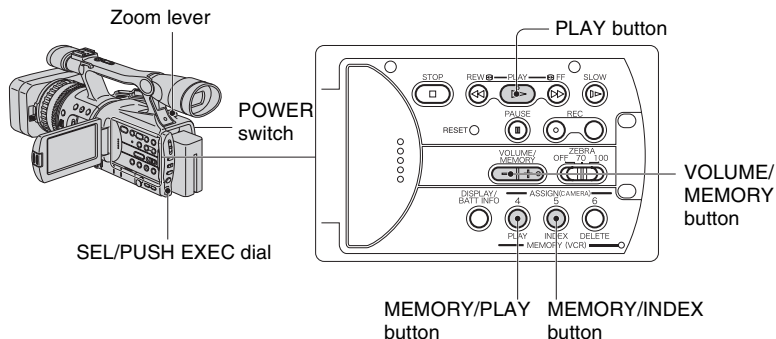

You can play back movies as follows.

- 1** While pressing the green button, set the POWER switch to VCR.

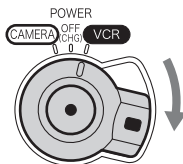

- 2** Start playing back.

Press ◀◀ (rewind) to go to the point you want to view, then press ▶▶ (play) to start playback.

- : Stop
- ⏸ : Pause (Press ▶▶ or ⏸ again to restart the playback)
- ▶▶ ◀◀ : Forward/Rewind
- ▶▶ : Slow

⚙ Notes

- Playback automatically stops if pause is engaged for more than 3 minutes.
- When playing back a tape recorded in the HDV and DV formats, and the signal switches between HDV and DV, the picture and sound disappear temporarily.
- You cannot play back the tape recorded in the HDV format on video cameras of the DV format or mini-DV players.

💡 Tips

- Indicators displayed on the screen during playback are shown on page 125.
- You can change the screen display during playback (p. 47).
- To play back the tape recorded using an external monaural microphone connected, see [MULTI-SOUND] (p. 64).

Playback (Continued)

To search for a scene while viewing a movie

Press ►►/◀◀ during playback (Picture Search). To view during fast forward press and hold ►► and to view during rewind press and hold ◀◀ (Skip Scan).

🔊 Note

- Reverse picture search/skip scan is not possible with tapes recorded in HDV format.

To adjust the volume


Adjust using the VOLUME/MEMORY button.

To view still images

- ① Slide the POWER switch to VCR.
- ② Press the MEMORY/PLAY button.
- ③ Select still image that you want to look using the VOLUME/MEMORY button.
To stop viewing still images, press the MEMORY/PLAY button once more.

To display the list of still photos (index screen)


- ① Slide the POWER switch to VCR.
- ② Press the MEMORY/INDEX button.

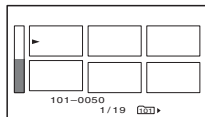

- ③ Select a picture by pressing the VOLUME/MEMORY button.
To display a single image, move ► to that image and press the MEMORY/PLAY button.
To stop displaying the list of still photos, press the MEMORY/INDEX button again.


Changing the settings of your camcorder recordings

Adjusting the zoom

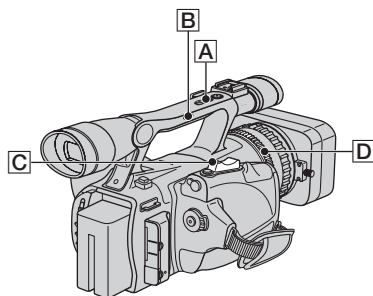

Move the power zoom lever **C** slightly for a slower zoom. Move it further for a faster zoom.

Wide view: (Wide angle)

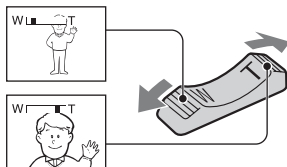

Close view: (Telephoto)

💡 Tips

- The minimum distance required between your camcorder and the subject for focus is about 1 cm (about 13/32 in.) for wide angle and about 80 cm (about 2 5/8 feet) for telephoto.
- The focus may not be adjusted at certain zoom positions if the subject is within 80 cm (about 2 5/8 feet) from your camcorder.
- Be sure to keep your finger on the power zoom lever. If you move your finger off the power zoom lever, the operation sound of the power zoom lever may also be recorded.

Using the handle zoom

- ① Set the handle zoom switch **B** to H (high) or L (low).

💡 Tip

- You can set the zoom speed of the handle zoom lever in [HANDLE ZOOM] (p. 61).

- ② Press the handle zoom lever **A** to zoom in or out.

⚠ Notes

- You cannot adjust the zoom speed by pressing the handle zoom lever.
- You cannot use the handle zoom lever when the handle zoom switch is set to OFF.
- You cannot change the zoom speed of the zoom lever **C** with the handle zoom switch **B**.


Using the zoom ring

You can zoom at the desired speed by turning the zoom ring **D**. Fine adjustment is also possible.

⚠ Note

- Turn the zoom ring at a reasonable speed. If you turn it too fast, the zoom speed may not catch up with the zoom ring rotating speed.


Adjusting the focus manually

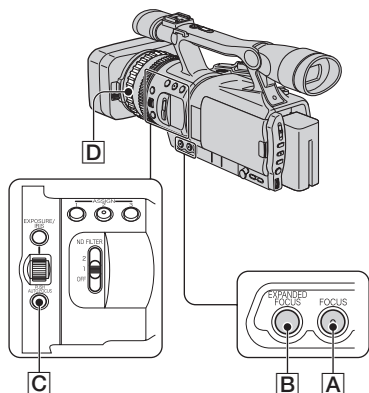

You can adjust the focus manually for different recording conditions.

Use this function in the following cases.

- To record a subject behind a window covered with raindrops.
- To record horizontal stripes.
- To record a subject with little contrast between the subject and its background.
- When you want to focus on a subject in the background.

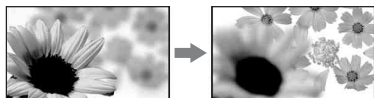
 
 
 


- To record a stationary subject using a tripod.

1 During recording or standby, press the FOCUS button [A].

 appears.

2 Rotate the focus ring [D] and adjust the focus.

 changes to  when the focus cannot be adjusted any farther.  changes to  when the focus cannot be adjusted any closer.

Note


- The setting returns to automatic adjustment (default) when you set the POWER switch to OFF (CHG) for more than 12 hours.

Tips

For focusing manually

- It is easier to focus on the subject when you use the zoom function. Move the power zoom lever towards T (telephoto) to adjust the focus, and then, towards W (wide angle) to adjust the zoom for recording.
- When you want to record a close-up image of a subject, move the power zoom lever towards W (wide angle) to fully magnify the image, then adjust the focus.

To restore automatic adjustment

Press the FOCUS button [A] once again.  disappears and AUTO FOCUS is restored.

To use AUTO FOCUS temporarily (One push auto focus)

Record the subject while pressing and holding the PUSH AUTO FOCUS button [C].

If you release the button, the setting returns to manual focusing.

Use this function to shift the focus on one subject to another. The scenes will shift smoothly.

💡 Tip

- The focal distance information (for when it is dark and hard to adjust the focus) appears for about 3 seconds in the following cases. (It will not be displayed correctly if you are using a conversion lens (optional)).
 - When the focus mode is switched from automatic to manual.
 - When you rotate the focus ring.

To use the expanded focus (Expanded focus)

During standby, press the EXPANDED FOCUS button **[B]**. [EXPANDED FOCUS] appears and the center of the screen is magnified by about 2 times. It will be easier to confirm the focus setting during manual focusing. The screen returns to the original size when you push the button again.


🔊 Note

- The image returns to the original size when you press the REC START/STOP button or the PHOTO/EXPANDED FOCUS button.

💡 Tip

- You can select the type of a picture on EXPANDED FOCUS ([EXP.FOCUS TYPE] p. 66).

Adjusting the EXPOSURE/IRIS

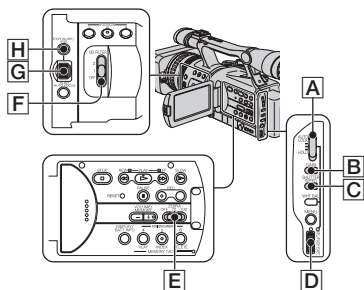

You can adjust the brightness of a picture with the EXPOSURE/IRIS dial **[G]**.

You can assign any one of [EXPOSURE] (the default setting), [IRIS] and [AE SHIFT] to the EXPOSURE/IRIS dial **[G]** from the menu (p. 59).

💡 Tips

- Even if you open the aperture more than F2.8 (i.e. make the iris value smaller, such as F1.6) during camera EXPOSURE/IRIS setting, changing the zoom from wide to telephoto will change the iris to F2.8.
- When the EXPOSURE/IRIS dial is set to [EXPOSURE], **[E]** appears next to the values that can be set with the EXPOSURE/IRIS dial.

■ EXPOSURE (the default setting)

You can adjust the display brightness by adjusting the iris and gain (the shutter speed remains fixed).

The iris, gain and shutter speed are displayed on the screen.



🔊 Note

- The GAIN button and the SHUTTER SPEED button are inactive.

💡 Tip

- This is handy for changing the brightness of the screen and setting the desired brightness by dial operation.

■ IRIS

You can manually adjust the light volume of the light entering the lens between F1.6 and F11 or close the aperture.

As the iris is opened (smaller aperture values), the light volume increases or the iris is closed (larger aperture values), the light volume decreases. The current aperture value (F) appears on the screen.




Tips

- The range of focus, an important effect of the aperture, is called the depth of field. The depth of field gets shallower as the aperture is opened, and deeper as the aperture is closed. Use the aperture creatively to obtain the desired effect in your photography.
- This is handy for making the background blurred or sharp, or when you want to manually adjust the iris, gain or shutter speed on the screen.

■ AE SHIFT

You can slightly adjust the exposure between -7 (dark) and +7 (bright) during the auto recording. **AS** appears.

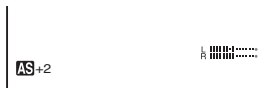

Notes

- You cannot manually adjust the IRIS.
- [AE SHIFT] does not work when the exposure is manually set or the iris, gain and shutter speed are all set manually.

Tip

- You can adjust the AE SHIFT from the menu (p. 61).

1 During recording or standby, set the AUTO LOCK switch **A** to the center position to release the auto lock mode.

This operation is not required when AE SHIFT is assigned to the EXPOSURE/IRIS dial.

2 Press the EXPOSURE/IRIS button **H**.

The EXPOSURE/IRIS dial **G** will be effective.

3 Adjust the picture quality by turning the EXPOSURE/IRIS dial **G**.

Tip

- If you set the AUTO LOCK switch **A** to HOLD after manual adjustment, the manually adjusted items are saved.

To restore automatic adjustment

Press the EXPOSURE/IRIS button **H**, or set the AUTO LOCK switch **A** to AUTO LOCK.

Notes

- If you set the AUTO LOCK switch **A** to AUTO LOCK, other manually adjusted items (gain, shutter speed, white balance) also become temporarily automatic.
- As you shift the zoom from W (wide) to T (telephoto), the aperture value varies from F1.6 to F2.8.
- The setting returns to automatic adjustment (default) when you set the POWER switch to OFF (CHG) for more than 12 hours.

Tips

- You can adjust the dial sensitivity of the EXPOSURE/IRIS dial **G** by selecting [EXPOSURE/IRIS] → [DIAL SENS](p. 59), and the dial operating direction by selecting [EXPOSURE/IRIS] → [DIAL ROTATE] (p. 59).
- Settings can also be checked by pressing the STATUS CHECK button (p. 47).
- See page 62 for [BACK LIGHT].

Adjusting the volume of light (ND filter)

You can record the subject clearly by using the ND filter when the recording environment is too bright.

There are 2 levels of ND filter setting. ND filter 1 reduces the volume of light to about 1/4, and ND filter 2 to about 1/16.

If **ND₁** flashes during standby mode, set the ND FILTER switch **[F]** to 1 to turn on the **ND₁** indicator. If **ND₂** flashes, set the ND FILTER switch to 2 to turn on the **ND₂** indicator. If **ND_{OFF}** flashes, set the ND FILTER switch to OFF to turn off the indicator.

Notes

- If you move the ND FILTER switch during recording, the picture and sound may be distorted.
- If you adjust the iris manually, no ND filter indicator will appear even if the ND filter should be activated.

Tip

- If you close the iris extensively when recording a bright subject, diffraction may occur, resulting in a fuzzy focus (this is a common phenomenon with video cameras). The ND filter suppresses this phenomenon and gives better recording results.

Displaying the zebra pattern to adjust the brightness

If there is a part of the screen where brightness is over a certain level, the part may appear excessively white when played back. By displaying the zebra pattern on such a part, you can be reminded to adjust the brightness before recording.

Select the brightness level to display the zebra pattern with the ZEBRA switch **[E]**, then the zebra pattern will appear. Select the brilliance value from [70] or [100].

If you select [70], the zebra pattern appears at the part with 70±5 % of the brilliance signal.

If you select [100], the zebra pattern appears at the part with 100% or more.

To hide the zebra pattern

- Set the ZEBRA switch **[E]** to OFF.

Note

- The zebra pattern is not recorded on the tape.

Tip

- This is convenient for adjusting the brightness while a histogram (p. 65) is displayed.

Adjusting the gain

You can adjust the gain manually when shooting blackish or dark objects if you do not want the AGC (auto gain control) to be activated.

- ① During recording or standby, set the AUTO LOCK switch **[A]** to the center position to release the auto lock.
- ② Press the GAIN button **[B]**.
The current gain value appears.
- ③ Adjust the gain by turning the SEL/PUSH EXEC dial **[D]**.
The gain can be adjusted between 0dB and 18dB by every 3dB.

Tip

- The gain value can be stored temporarily by setting the AUTO LOCK switch **[A]** to HOLD after the manual adjustment.

To restore automatic adjustment

Press the GAIN button **[B]**, or set the AUTO LOCK switch **[A]** to AUTO LOCK.

Notes

- If you set the AUTO LOCK switch **[A]** to AUTO LOCK, other manually adjusted items (iris, shutter speed, white balance) also become temporarily automatic.
- The setting returns to automatic adjustment when you set the POWER switch to OFF (CHG) for more than 12 hours.

Adjusting the shutter speed

You can manually adjust and fix the shutter speed. Depending on the shutter speed, you can make the subject look still, or emphasize the fluidity of movement.

- ① During recording or standby, set the AUTO LOCK switch **[A]** to the center position to release the auto lock mode.
- ② Press the SHUTTER SPEED button **[C]**.

Changing the settings of your camcorder recordings (Continued)

- ③ Adjust the shutter speed by turning the SEL/PUSH EXEC dial **D**.
You can set a shutter speed between 1/4 second and 1/10000 second.

The selected shutter speed appears on the screen. For example, if you select 1/100 second, [100] appears. The larger the number that appears on the screen, the faster the shutter speed.

💡 Tip

- The shutter speed can be stored temporarily by setting the AUTO LOCK switch **A** to HOLD after the manual adjustment.

To restore automatic adjustment

Press the SHUTTER SPEED button **C**, or set the AUTO LOCK switch **A** to AUTO LOCK.


🔊 Notes

- If you set the AUTO LOCK switch **A** to AUTO LOCK, other manually adjusted items (iris, gain, white balance) also become temporarily automatic.
- The setting returns to automatic adjustment when you set the POWER switch to OFF (CHG) for more than 12 hours.

💡 Tips

- It is difficult to focus automatically at a lower shutter speed. Manual focusing with your camcorder attached to a tripod is recommended.
- The picture may flicker or change colors under fluorescent lamps, sodium lamps, or mercury lamps.

Adjusting to Natural Color (White balance)

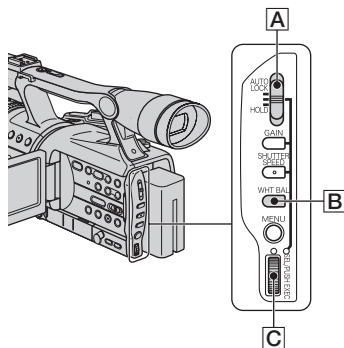

You can adjust the white balance according to the light of the recording environment. You can set two sets of white balance adjustment data separately in memory A and memory B for two different recording conditions with **A** and **B**. During recording, you can select the setup data with the SEL/PUSH EXEC dial. The setup data will be retained as long as it is not readjusted even if the power is disconnected.

- 1** During recording or standby, set the AUTO LOCK switch **A** to the center position to release the auto lock mode.
- 2** Press the WHT BAL button **B**.
- 3** Display desired item by turning the SEL/PUSH EXEC dial **C**, then press the dial.

The display changes. A → B
 → (OUTDOOR) → (INDOOR)

Indicator	Shooting conditions
A (MEMORY A)	• White balance values adjusted for light sources can be stored in memory A and memory B. Follow the steps below
B (MEMORY B)	
 (Outdoor)	<ul style="list-style-type: none"> • Recording a sunset/sunrise, just after sunset, just before sunrise, neon signs, or fireworks. • Under daylight color fluorescent lamps
 (Indoor)	<ul style="list-style-type: none"> • Under the lighting condition that changes quickly • Under strong light such as in a photography studio • Under sodium lamps or mercury lamps

Tip

- The white balance can be stored temporarily by setting the AUTO LOCK switch to HOLD after the manual adjustment.

To save the adjusted white balance value in memory A or B

- ① Select A or B according to step 3 of “Adjusting to Natural Color (White Balance).”
- ② Shoot something white (such as a sheet of paper) full-screen under the same lighting conditions as the subject.
- ③ Press the SEL/PUSH EXEC dial . Pressing the dial switches between blinking A and B.

When the white balance is adjusted, A or B stops blinking and remains on. The adjusted value is now saved in the selected A or B memory.


To restore the automatic white balance

Press the WHT BAL button , or set the AUTO LOCK switch to AUTO LOCK.

Notes

- If you set the AUTO LOCK switch to AUTO LOCK, other manually adjusted items (iris, gain, shutter speed) also become temporarily automatic.
- The setting returns to automatic adjustment when you set the POWER switch to OFF (CHG) for more than 12 hours.

Customizing the picture quality (Picture profile)

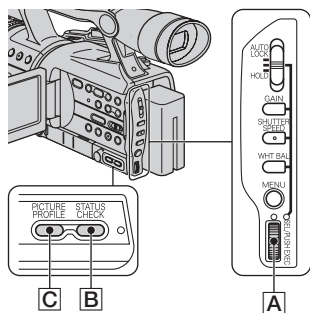

You can customize the picture quality by adjusting [COLOR LEVEL], [SHARPNESS], etc. You can set 6 different picture quality settings depending on the recording time of day, the weather, or the camera person, and store them in the memory.

Connect your camcorder to a TV or monitor, and adjust the picture quality while observing the picture on the TV or monitor screen.

At the default setting, [PP1] through [PP6] are registered with picture quality settings for the following recording conditions.

Changing the settings of your camcorder recordings (Continued)

Picture profile number (setting name)	Recording condition
PP1 :PORTRAIT	Appropriate setting to record people
PP2 :CINEMA	Appropriate setting to record film-like pictures
PP3 :SUNSET	Appropriate setting to record sunset
PP4 :MONOTONE	Appropriate setting to record monotone pictures
PP5 :-----	You can assign your own setting
PP6 :-----	You can assign your own setting.

1 During standby, press the **PICTURE PROFILE** button **[C]**.

2 Select a picture profile number by turning the **SEL/PUSH EXEC** dial **[A]**, then press the dial.

[PP1] through [PP6] are available.

You can shoot with the settings of the selected picture profile.

3 Select **[OK]** by turning the **SEL/PUSH EXEC** dial **[A]**.

To cancel the picture profile recording

Select **[OFF]** in step 2, then press the **SEL/PUSH EXEC** dial **[A]**.

To change the picture profile

You can change the settings in [PP1] through [PP6].

- ① Press the **PICTURE PROFILE** button **[C]**.
- ② Select the **PICTURE PROFILE** number by turning the **SEL/PUSH EXEC** dial **[A]**, then press the dial.
- ③ Select **[SETTING]** by turning the **SEL/PUSH EXEC** dial **[A]**, then press the dial.
- ④ Select an item to be adjusted by turning the **SEL/PUSH EXEC** dial **[A]**, then press the dial.
- ⑤ Adjust the picture quality by turning the **SEL/PUSH EXEC** dial **[A]**, then press the dial.

Item	Adjustment
[COLOR LEVEL]	-7 (low) to +7 (high) -8 (black and white)
[COLOR PHASE]	-7 (greenish) to +7 (reddish)
[SHARPNESS]	0 (softer) to 15 (clearer)
[SKINTONE DTL]	To make wrinkles less noticeable by suppressing the outlines on the part of skin color. [TYPE1] (the color range recognized as a skin color is narrow) to [TYPE3] (the color range recognized as a skin color is wide) [OFF]: no adjustment
[WB SHIFT]	-7 (to make picture bluish) to +7 (to make white parts reddish)
[CINEMATONE GAMMA]	When you set [ON] , pictures are recorded with the gamma curve that reproduces the natural gradation sequence, similar to that of film cameras

Item	Adjustment
[PROFILE NAME]	To name the set picture profiles [PP1] through [PP6] (p. 39)
[COPY]	To copy a picture profile setting to other picture profiles
[RESET]	To restore the default setting of the picture profile

- ⑥ Repeat steps 4 and 5 to adjust other items.
- ⑦ Select [↵ RETURN] by turning the SEL/PUSH EXEC dial **[A]**, then press the dial.
- ⑧ Select [OK] by turning the SEL/PUSH EXEC dial **[A]**, then press the dial. A picture profile indicator appears.

🔦 Note

- In the case of [TYPE3] of [SKINTONE DTL], the effect may also be applied to a color that is not a skin color.

To check the picture profile settings

During recording or standby, press the STATUS CHECK button **[B]** (p. 47).

🔦 Tip


- You can assign picture profiles to the ASSIGN buttons and use them to turn the picture profiles on and off (p. 42).

To name the picture profile settings

You can name on picture profile 1~6.

- ① Press the PICTURE PROFILE button **[C]**.
- ② Select the picture profile that you want to name by turning the SEL/PUSH EXEC dial **[A]**, then press the dial.
- ③ Select [SETTING] → [PROFILE NAME] by the SEL/PUSH EXEC dial **[A]**.

- ④ Select a letter by turning the SEL/PUSH EXEC dial **[A]**, then press the dial. Repeat this operation until a complete name is entered.

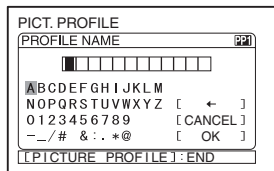

🔦 Tips

- Each name can be up to 12 characters long.
 - Characters that can be used in profile names:
 - A~Z
 - 0~9
 - - _ / # & : . * @
- ⑤ Select [OK] by turning the SEL/PUSH EXEC dial **[A]**, then press the dial. The profile name is changed.
 - ⑥ Select [↵ RETURN] → [OK] by the SEL/PUSH EXEC dial **[A]**.

To copy the picture profile setting to other picture profiles

- ① Press the PICTURE PROFILE button **[C]**.
- ② Select the picture profile that you want to copy from by turning the SEL/PUSH EXEC dial **[A]**, then press the dial.
- ③ Select [SETTING] → [COPY] by SEL/PUSH EXEC dial **[A]**.
- ④ Select the number of the picture profile that you want to copy to by turning the SEL/PUSH EXEC dial **[A]**, then press the dial.
- ⑤ Select [YES] by turning the SEL/PUSH EXEC dial **[A]**, then press the dial.
- ⑥ Select [↵ RETURN] → [OK] by the SEL/PUSH EXEC dial **[A]**.

Changing the settings of your camcorder recordings (Continued)

To reset the picture profile settings

You can reset the picture profile settings by each picture profile number. You cannot reset all picture profile settings at once.

- ① Press the PICTURE PROFILE button **C**.
- ② Select the picture profile by turning the SEL/PUSH EXEC dial **A**, then press the dial.
- ③ Select [SETTING] → [RESET] → [YES] → [**↩** RETURN] → [OK] by the SEL/PUSH EXEC dial **A**.

Assigning the functions to the ASSIGN buttons


You may need to assign some functions to the ASSIGN buttons. You can assign a single function to each the ASSIGN button 1 to 6.

Functions you can assign to the ASSIGN buttons

- MARKER (p. 66)
- D.EXTENDER (p. 63)
- FOCUS INFNTY (p. 43)
- REC REVIEW (p. 44)
- END SEARCH (p. 44)
- INDEX MARK (p. 44)
- PEAKING (p. 65)
- STEADYSHOT (p. 60)
- COLOR BAR (p. 60)
- SPOTLIGHT (p. 63)
- BACK LIGHT (p. 62)
- FADER (p. 63)
- DISPLAY (p. 47)
- Picture profile (p. 39)
- SHOT TRANS (p. 45)

Note

- The ASSIGN buttons 4 to 6 are exclusively used for memory playback when the POWER switch is set to VCR, and cannot be used as ASSIGN buttons. You cannot assign functions to the ASSIGN buttons 4 to 6 while the POWER switch is set to VCR.

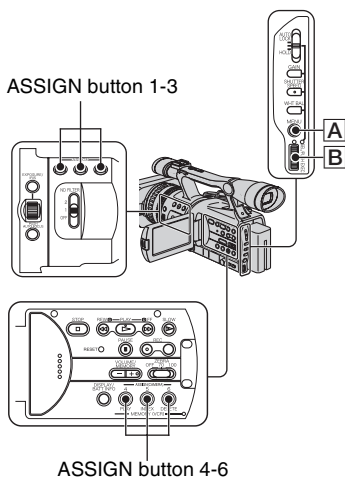

1 Press the MENU button **A**.

2 Select the **OTHERS** → **[ASSIGN BTN]** by the SEL/PUSH EXEC dial **B**.

3 Select the number of the ASSIGN button (ASSIGN 1-6, [SHOT TRANS]) you want to assign the function by turning the SEL/PUSH EXEC dial **B**, then press the dial.

- [-----] is displayed at the number that no function is assigned.
- When you select [SHOT TRANS], select [YES], then proceed to step 6.

4 Select the function to be assigned by turning the SEL/PUSH EXEC dial **B**, then press the dial.

5 Select [OK] by turning the SEL/PUSH EXEC dial **B**, then press the dial.

6 Press the MENU button **A** to hide the menu.

💡 Tips

- Shot transition is assigned to the ASSIGN buttons 1, 2 and 3 (p. 45). Cancel the shot transition assignment to return to the pre-setting assignment.
- To cancel the shot transition, select [SHOT TRANS] → [YES] in step 3.

Focusing on a distant subject (Focus infinity)

🔍 Note

- [FOCUS INFNTY] is only available during the manual focus. It is not available during the auto focus.

1 Assign [FOCUS INFNTY] to one of the ASSIGN buttons (p. 42).

2 Press the ASSIGN button assigned to [FOCUS INFNTY].

▲ appears.

If you release the switch, it returns to manual focusing.

Use this function to record a distant subject when the focus is automatically set on a close subject.

Assigning the functions to the ASSIGN buttons (Continued)


Recording an index signal

If you make an index for a scene, you can easily search for the scene later (p. 50). The index function will make it easier to check the transition of recording or edit your pictures using index signals.


1 Assign [INDEX MARK] to one of the ASSIGN buttons in advance (p. 42).


2 Press the ASSIGN button assigned to [INDEX MARK].

When pressed during recording

 appears for about 7 seconds and an index signal is recorded.

When pressed during standby

 flashes.

After you press the REC START/STOP button to start recording,  appears for about 7 seconds and an index signal is recorded.

To cancel the operation

Before starting to record, press the ASSIGN button assigned to [INDEX MARK] again.

Note

- You cannot record an index signal on a recorded tape afterward.

Reviewing the most recently recorded scenes (Rec review)

You can view about 2 seconds of the scene recorded just before you stopped the tape. This is convenient during playback of the latest scene check.

1 Assign [REC REVIEW] to one of the ASSIGN buttons in advance. (p. 42).

2 Press the ASSIGN button assigned to [REC REVIEW] during standby mode.

The last 2 seconds (approx.) of the most recently recorded scene are played back. Then, your camcorder is set to the standby.

Searching for the last scene of the most recent recording (End search)

Note

- End search will not work correctly when there is a blank section between recorded sections on the tape.

1 Assign [END SEARCH] to one of the ASSIGN buttons in advance (p. 42).

2 Press the ASSIGN button to which [END SEARCH] is assigned.

The last scene of the most recent recording is played back for about 5 seconds, and the camcorder enters the standby mode at the point where the last recording has finished.

Note

- The End search function will not work correctly when there is a blank section between recorded sections on the tape.


Using the Shot transition

You can register the settings of focus, zoom, iris, gain, shutter speed, and white balance, and then change the recording setting from the current one to the registered one, resulting in a smooth transition of scenes (Shot transition). For example, you can shift the focus from closer objects to farther objects, or change the depth of field by adjusting the iris. In addition, you can develop scenes under different recording conditions smoothly. If you register the manual adjustment function of the white balance, the scenes will develop smoothly between objects indoor and those outdoor. Use a tripod to avoid camera-shake.



You can set the transition curve and duration using [SHOT TRANS] (p. 62).

ASSIGN button1-3

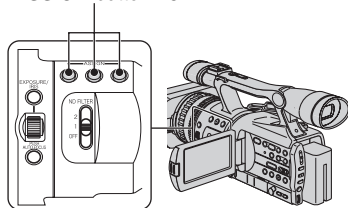


1 Assign [SHOT TRANS] to the ASSIGN buttons (p. 42).

Tip

- Shot transition is assigned to ASSIGN buttons 1, 2 and 3.

2 Store the settings (shot)

- 1 Press the ASSIGN button 1 repeatedly to bring up the SHOT TRANSITION STORE screen.

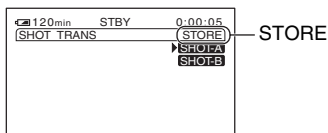


- 2 Adjust the desired items manually. See pages 33 to 39 for details on adjustment.
- 3 Press the ASSIGN button 2 for storing the setting in SHOT-A, or the ASSIGN button 3 for storing the setting in SHOT-B.

Note

- The setting values assigned to SHOT-A and SHOT-B are deleted when the POWER switch is turned to OFF (CHG).

3 Check the stored settings

- 1 Press the ASSIGN button 1 repeatedly to bring up the SHOT TRANSITION CHECK screen.

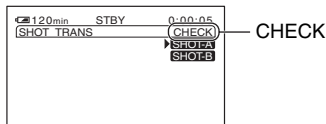

- 2 Press the ASSIGN button 2 to check the SHOT-A. Press the ASSIGN button 3 to check the SHOT-B.


The selected setting will take effect on the picture on the screen. The focus, zoom, and so on, are automatically adjusted as stored in the setting.

Note

- You cannot check the transition time and curve set using [SHOT TRANS] (p. 62).

4 Record using the shot transition function

- 1 Press the ASSIGN button 1 repeatedly to bring up the SHOT TRANSITION EXEC screen.

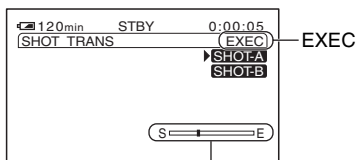

Transition bar

S: start

E: end

- 2 Press the REC START/STOP button.
- 3 Press the ASSIGN button 2 to record movie using the SHOT-A. Press the ASSIGN button 3 to record movie using the SHOT-B.

Pictures will be recorded with the settings that are changed automatically

from the current ones to the stored ones.

Tip

- Press the ASSIGN button 1 repeatedly to cancel the SHOT TRANSITION.

Notes

- You cannot zoom, focus, or adjust manually while checking or activating the Shot transition.
- When you change [SHOT TRANS] (p. 62), press the ASSIGN button 1 repeatedly to exit the shot transition screen.
- You cannot return from the stored SHOT-A or SHOT-B settings to previous settings after you activate the shot transition during recording.
- If you press the following buttons during the shot transition operation, the operation is canceled:
 - PICTURE PROFILE
 - MENU
 - EXPANDED FOCUS
 - STATUS CHECK


Tips

- You can also make a transition from saved SHOT-A to saved SHOT-B or vice versa. For example, to make a transition from SHOT-A to SHOT-B. Display the shot transition CHECK screen, press the ASSIGN button 2 and press the REC START/STOP button. Next, display the shot transition EXEC screen and press the ASSIGN button 3.
- You can rehearse the shot transition by pressing the ASSIGN button 2 or 3, in which the desired setting was stored, before pressing the REC START/STOP button in step 4.

To cancel the operation

Press the ASSIGN button 1 repeatedly to exit the shot transition screen.

Changing/checking the settings in your camcorder

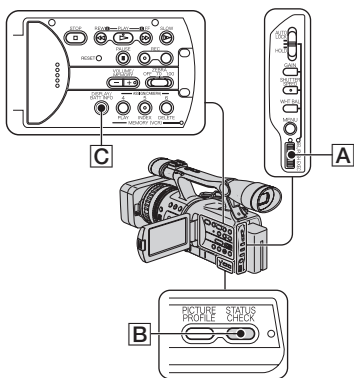

Changing the screen

You can turn on and off the display of the time code, tape counter, and other information on the screen.

Press the **DISPLAY/BATT INFO** button **C**.

The screen indicators turn on (displayed) and off (undisplayed) as you press the button.

Tip

- You can display the screen indicators during playback on a TV. Select [DISP OUTPUT], then [V-OUT/PANEL] (p. 68).

Displaying the settings in your camcorder (Status check)

You can check the setup value of the following items.

- Audio setup such as [DV AUDIO MIX] (p. 64)
- Output signal setup ([VCR HDV/DV], etc.) (p. 69)
- Functions assigned to the ASSIGN buttons (p. 42)
- Camera setup. (p. 59)
- Picture profile (p. 39)

1 Press the **STATUS CHECK** button **B**.

2 Turn the **SEL/PUSH EXEC** dial **A** to display the desired item.

When the POWER switch is set to CAMERA, the items appear in the following order:

AUDIO → OUTPUT → ASSIGN →
CAMERA → PICT.PROFILE

When the POWER switch is set to VCR, the items appear in the following order:

AUDIO → OUTPUT → ASSIGN


Note

- When [PICT.PROFILE] is set to [OFF], the settings of PICTURE PROFILE are not displayed.


To turn off the setup value

- Press the **STATUS CHECK** button **B**.

Checking the remaining battery (Battery Info)


Set the POWER switch to OFF (CHG), then press the DISPLAY/BATT INFO button . The approximate recordable time in the selected format and battery information appear for about 7 seconds. You can view the battery information for up to 20 seconds by pressing the button again while the information is displayed.

Remaining battery (approx.)

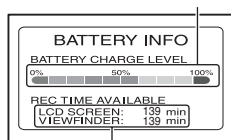

Recording capacity (approx.)

Locating a scene on a tape

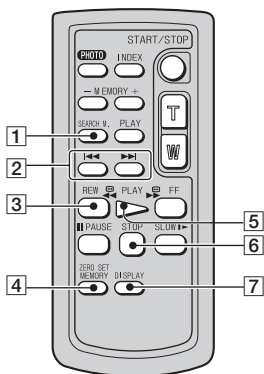


Note

- See page 123 for details on how to use the Remote Commander.

Searching quickly for a desired scene (Zero set memory)

1 During playback, press ZERO SET MEMORY [4] at a point you want to locate later on.

The tape counter is reset to “0:00:00” and $\rightarrow 0+$ appears on the screen.

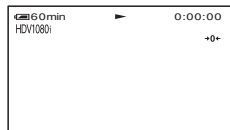

If the tape counter is not displayed, press DISPLAY [7].

2 Press STOP [6] when you want to stop playback.

3 Press \leftarrow REW [3].

The tape stops automatically when the tape counter reaches “0:00:00.”

The tape counter returns to the time code display, and the zero set memory display disappears.

4 Press PLAY [5].

Playback starts from the point designated “0:00:00” on the tape counter.

To cancel the operation

Press ZERO SET MEMORY [4] again before rewinding.

Notes

- There may be a discrepancy of several seconds between the time code and the tape counter.
- Zero set memory will not function correctly if there is a blank section between recorded sections on the tape.

Searching for a scene by date of recording (Date search)

You can locate the point where the recording date changes.

1 Set the POWER switch to VCR.

2 Press SEARCH M. [1] on the Remote Commander repeatedly to select [DATE SEARCH].

Locating a scene on a tape (Continued)

-
- 3** Press **I◀◀ (previous)/▶▶I (next)** **[2]** on the Remote Commander to select a recording date.

You can select the previous or the next date of the present point on the tape.

Playback starts automatically from the point where the date changes.

To cancel the operation

Press STOP **[6]** on the Remote Commander.

🔊 Notes

- If one day's recording is less than 2 minutes, your camcorder may not accurately find the point where the recording date changes.
- The Date search will not function correctly when there is a blank section between recorded sections on the tape.

Searching for a recording start point (Index search)

You can locate the point where an index signal is recorded (p. 44).

- 1** Set the POWER switch to VCR.
-

- 2** Press SEARCH M. **[1]** on the Remote Commander repeatedly to select [INDEX SEARCH].
-

- 3** Press **I◀◀ (previous)/▶▶I (next)** **[2]** on the Remote Commander to select an index point.

You can select the index signal of the point that you want to start playing back the tape.

Playback starts automatically from the point where the selected index signal is recorded.

To cancel the operation

Press STOP **[6]** on the Remote Commander.

🔊 Notes

- If index recording is less than 2 minutes, your camcorder may not accurately find the index point.
- The Index search will not function correctly when there is a blank section between recorded sections on the tape.

Playing the picture on a TV


Connection methods and image quality differ depending on what type of TV is connected and connectors used.

Use the supplied AC Adaptor to obtain AC power (p. 18).

Refer also to the instruction manuals supplied with the device to be connected.


Selecting the connection method according to your TV type and connectors

High definition TV

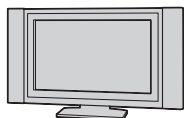


HD (high definition) image quality*

- An HDV formatted picture is played back as it is (HD image quality).
- A DV formatted picture is played back as it is (SD image quality).

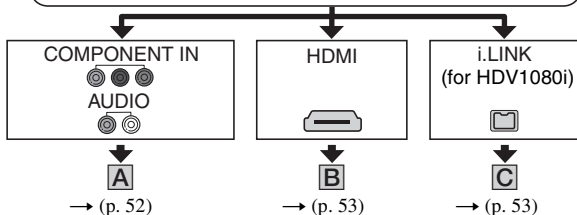


16:9 (wide) or 4:3 TV

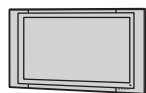

SD (standard definition) image quality*

- An HDV formatted picture is down converted to DV format (SD image quality) and played back.
- A DV formatted picture is played back as it is (SD image quality).

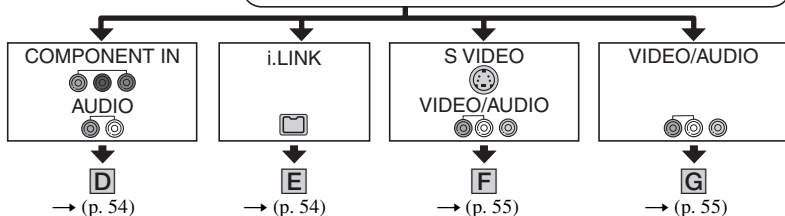

Notes


- Make all menu settings on your camcorder before connecting. The TV may not recognize the video signal properly when changing [VCR HDV/DV] and [i.LINK CONV] settings after connecting with an i.LINK cable.

* Pictures recorded in the DV format are played back as SD (standard definition) images regardless of the connection.

Playing the picture on a TV (Continued)

Jacks on your camcorder

Open the jack cover and connect the cable.

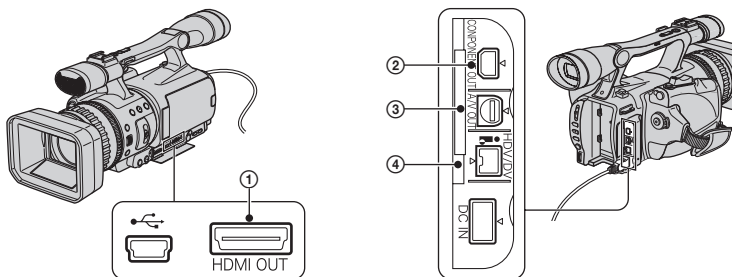

Connecting to a high definition TV


: Signal flow

Type	Camcorder	Cable	TV	Menu Setting
A		Component video cable (supplied) 		(IN/OUT REC) menu → [VCR HDV/DV] → [AUTO] (p. 69) [COMPONENT] → [1080i/480i] (p. 70)
		A/V connecting cable (supplied) 		

Note

- An A/V connecting cable is also needed to output audio signals. Connect the white and red plugs of the A/V connecting cable to the audio input jack of your TV.

↗ : Signal flow

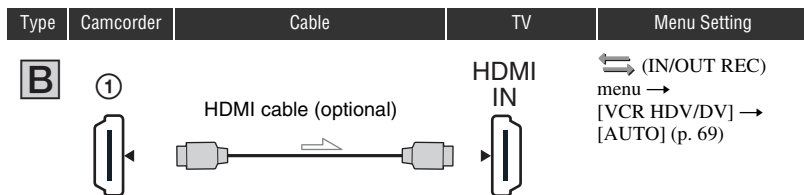


Notes

• **Use an HDMI cable with the HDMI logo.**

- Pictures in the DV format are not output from the HDMI OUT jack, if copyright protection signals are recorded in the pictures.
- DV format pictures input to the camcorder via i.LINK cable (p. 76) cannot be output.
- Your TVs may not function correctly (for example, no sound or image). Do not connect the HDMI OUT jack of your camcorder and HDMI OUT jack of the external device with the HDMI cable. This may cause a malfunction.

Tip

- HDMI (High Definition Multimedia Interface) is an interface to send both video and audio signals. Connecting HDMI OUT jack to an external device supplies high quality images and digital audio to you.

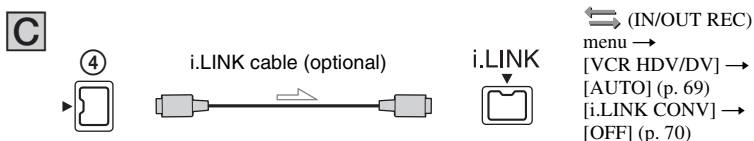

Notes

• **Your TV needs to have an i.LINK jack compatible with HDV1080i. For details, confirm the specifications of your TV.**

- If your TV is not compatible with HDV1080i, connect your camcorder and TV with the supplied component video cable and A/V connecting cable as illustrated in **A**.
- The TV needs to be set so that it recognizes that the camcorder is connected. See the instruction manuals supplied with your TV.
- This camcorder has a 4-pin i.LINK terminal. Select a cable that fits the terminal on the device to be attached.

Connecting to a 16:9 (wide) or 4:3 TV

To set the aspect ratio according to the connected TV (16:9/4:3)

Change [TV TYPE] setting to match your TV (p. 70).


Note

- When you play back a tape recorded in the DV format on a 4:3 TV not compatible with the 16:9 signal, set [DV WIDE REC] to [OFF] on your camcorder when recording a picture (p. 70).

Tip

- When your TV is monaural (When your TV has only one audio input jack), connect the yellow plug of the A/V connecting cable to the video input jack and connect the white (left channel) or the red (right channel) plug to the audio input jack of your TV or VCR. When you want to play the sound in monaural mode, use a connecting cable for that purpose.


 : Signal flow

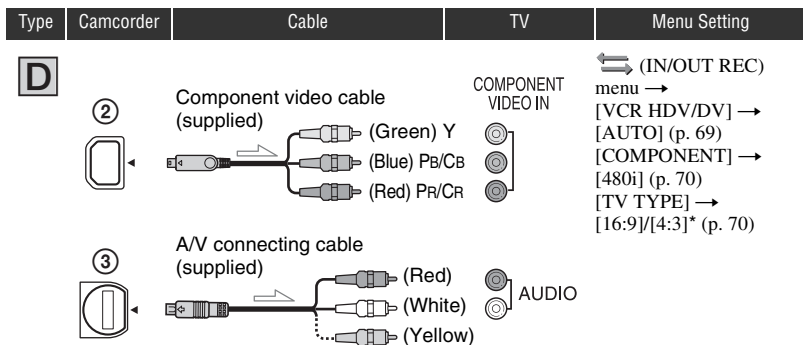

Note

- A/V connecting cable is also needed to output audio signals. Connect the white and red plugs of the A/V connecting cable to the audio input jack of your TV.

E

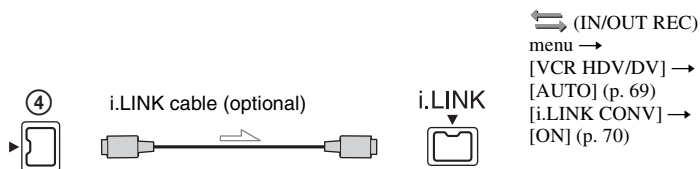


Notes

- The TV needs to be set so that it recognizes that the camcorder is connected. See the instruction manuals supplied with your TV.
- This camcorder has a 4-pin i.LINK terminal. Select a cable that fits the terminal on the device to be attached.

↗ : Signal flow

Type	Camcorder	Cable	TV	Menu Setting
------	-----------	-------	----	--------------

F

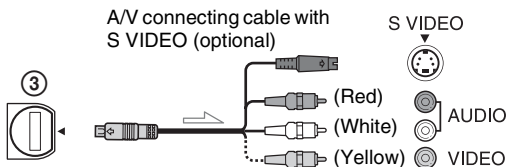


↔ (IN/OUT REC)
 menu →
 [VCR HDV/DV] →
 [AUTO] (p. 69)
 [TV TYPE] →
 [16:9]/[4:3]* (p. 70)

Notes

- When connecting only an S VIDEO plug (S VIDEO channel), audio signals are not output. To output audio signals, connect the white and red plugs of the A/V connecting cable with an S VIDEO cable to the audio input jack of your TV.
- This connection produces higher resolution pictures compared with the A/V connecting cable (Type **G**).

G

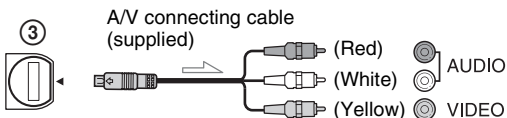

↔ (IN/OUT REC)
 [VCR HDV/DV] →
 [AUTO] (p. 69)
 [TV TYPE] →
 [16:9]/[4:3]* (p. 70)

* Change the settings according to the TV connected.

Notes


- If you connect your camcorder to your TV using more than one type of cable to output images from a jack other than the i.LINK jack, the order of priority of the output signals is as follows:
 HDMI → component video → S VIDEO → audio/video.
- See page 110 for the details of i.LINK.

When connecting to your TV via a VCR


Select the connecting method on page 76 depending on the input jack of the VCR. Connect your camcorder to the LINE IN input on the VCR using the A/V connecting cable. Set the input selector on the VCR to LINE (VIDEO 1, VIDEO 2, etc.).

Using the menu items


You can change various settings or make detailed adjustments using the menu items displayed on the screen.

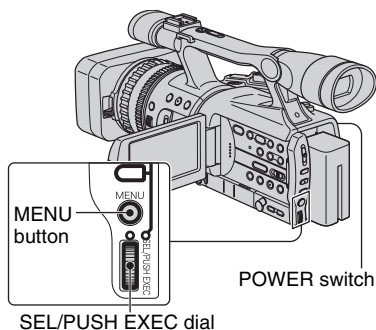

1 While pressing the green button, set the POWER switch.

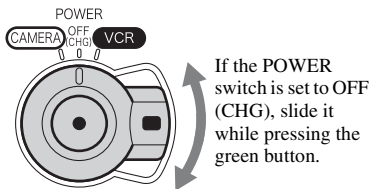



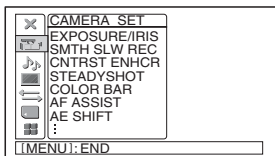


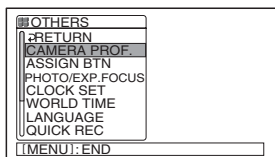
2 Press the MENU button to display the menu index screen.




3 Select the icon of the desired menu by turning the SEL/PUSH EXEC dial, then press the dial.

 CAMERA SET (p. 59)

-  AUDIO SET (p. 64)
-  DISPLAY SET (p. 65)
-  IN/OUT REC (p. 69)
-  MEMORY SET (p. 71)
-  OTHERS (p. 73)




4 Select the desired item by turning the SEL/PUSH EXEC dial, then press the dial.

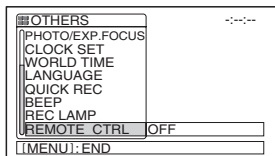

The available menu items vary depending on the power mode of your camcorder. Unavailable items will be grayed out.

5 Select the desired setting by turning the SEL/PUSH EXEC dial, then press the dial.

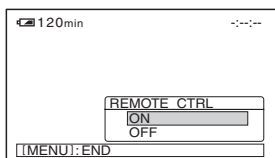

6 Press the MENU button to hide the menu screen.

To return to the previous screen, select [↩ RETURN].

Menu items

Available menu items (●) vary depending on the POWER switch position.

Position of POWER switch:

CAMERA

VCR



(CAMERA SET) menu (p. 59)

	CAMERA	VCR
EXPOSURE/IRIS	●	-
SMTH SLW REC	●	-
CNTRST ENHCR	●	-
STEADYSHOT	●	-
COLOR BAR	●	-
AF ASSIST	●	-
AE SHIFT	●	-
AE RESPONSE	●	-
AGC LIMIT	●	-
AT IRIS LMT	●	-
AWB SENS	●	-
FLCKR REDUCE	●	-
HANDLE ZOOM	●	-
SHOT TRANS	●	-
DV FRAME REC DV	●	-
BACK LIGHT	●	-
SPOTLIGHT	●	-
D.EXTENDER	●	-
FADER	●	-



(AUDIO SET) menu (p. 64)

	CAMERA	VCR
AUDIO REC LV	●	-
DV AU. MODE DV	●	-
MULTI-SOUND	-	●
DV AUDIO MIX DV	-	●



(DISPLAY SET) menu (p. 65)

	CAMERA	VCR
PEAKING	●	-
HISTOGRAM	●	-
MARKER	●	-
EXP.FOCUS TYPE	●	-
CAM DATA DSP	●	-
AU.LVL DISP	●	-
LCD BRIGHT	●	●
LCD COLOR	●	●
LCD BL LEVEL	●	●
VF B.LIGHT	●	●
VF POWERMODE	●	●
DATA CODE	-	●
LETTER SIZE	●	●
REMAINING	●	●
DISP OUTPUT	●	●

Menu items (Continued)

Position of POWER switch:

CAMERA

VCR


(IN/OUT REC) menu (p. 69)

REC FORMAT	●	—
VCR HDV/DV	—	●
DV REC MODE 	●	●
DV WIDE REC 	●	—
COMPONENT	●	●
i.LINK CONV	●	●
TV TYPE	●	●

(MEMORY SET) menu (p. 71)

 QUALITY	●	●
 ALL ERASE	—	●
 FORMAT	●	●
FILE NO.	●	●
NEW FOLDER	●	●
REC FOLDER	●	●
PB FOLDER	—	●

(OTHERS) (p. 73)


CAMERA PROF.	●	●
ASSIGN BTN	●	●
PHOTO/EXP.FOCUS	●	●
CLOCK SET	●	●
WORLD TIME	●	●
LANGUAGE	●	●
USB SELECT	—	●
PB ZOOM	—	●
QUICK REC 	●	—
BEEP	●	●
REC LAMP	●	—
REMOTE CTRL	●	●

(CAMERA SET) menu

Settings to adjust your camcorder to the recording conditions (EXPOSURE/IRIS/STEADYSHOT/BACK LIGHT, etc.)

The default settings are marked with ►.
The indicators in parentheses appear when the items are selected.

See page 56 for details on selecting menu items.

Press the MENU button → select the  (CAMERA SET) by turning the SEL/PUSH EXEC dial.

EXPOSURE/IRIS

■ DIAL ASSIGN

You can select assign settings with the EXPOSURE/IRIS dial from [EXPOSURE] (default settings), [IRIS] and [AE SHIFT] (p. 35).

🔊 Note

- If you change the assign function from EXPOSURE/IRIS to other function, manually adjusted items (iris, gain, shutter speed) also become automatic.

■ DIAL SENS

You can select the EXPOSURE/IRIS dial sensitivity from [HIGH], [MIDDLE] (default settings) or [LOW].

■ DIAL ROTATE

You can select the rotation direction of the EXPOSURE/IRIS dial.

► NORMAL

You can change the screen brightness by turning the dial up.

OPPOSITE

You can change the screen brightness by turning the dial down.

SMTH SLW REC (Smooth slow recording)

Fast moving subjects and actions, which cannot be captured under the general shooting conditions, can be shot in smooth moving slow-motion.


This is useful to shoot fast actions such as a golf or tennis swing.

Select [EXECUTE], and press the REC START/STOP button on the [SMTH SLW REC] screen.

An about-6-second movie is recorded as a 24-second slow-motion movie.

When [Recording...] disappears, recording is finished.

Select [TIMING] to select one of the following start points for recording before pressing the REC START/STOP button.

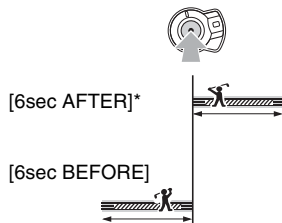

* The default setting is [6sec AFTER].

To cancel [SMTH SLW REC], press the MENU button.

🔊 Notes

- Sounds cannot be recorded.
- [SMTH SLW REC] settings are automatically canceled when you switch off your camcorder.
- Recording time is estimated time. The recording time may be shorter than the set time according to recording condition.

Press the MENU button → select the  (CAMERA SET) by turning the SEL/PUSH EXEC dial.

CNTRST ENHCR

 
Since the default setting is [ON], high contrast images, such as backlit scene images, are detected and unexposed shadows of the images are automatically reduced

Note

- When you set [BACK LIGHT] to [ON], [CNTRST ENHCR] is temporarily turned off.

STEADYSHOT

ON/OFF

You can compensate for camera shake (the default setting is [ON]). Set [ON/OFF] to [OFF] () when using a tripod (optional), then the image becomes natural.

TYPE

You can select the type of the SteadyShot function that compensates for camera-shake.

HARD

Select to activate the SteadyShot function with stronger effect. This mode is not recommended for recording with camera pan, tilt technique.

STANDARD

Select to activate the standard SteadyShot function.

SOFT

Select to activate the SteadyShot function so that it leaves a slight unsteadiness on the picture so the picture looks natural.

WIDE CONV.

Select when a wide conversion lens (optional) is attached. This mode is the most effective with Sony VCL-HG0862 wide conversion lens.

COLOR BAR

ON/OFF


You can display the color bar or record it on the tape by setting to [ON]. It is convenient to adjust the color on the monitor connected (the default setting is [OFF]).

Note

- This is automatically set to [OFF] the next time you switch on the camcorder.

TYPE

You can select the color bar type.

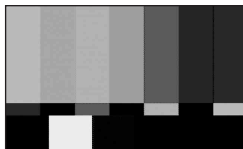

TYPE 1



TYPE 2



TYPE 3

AF ASSIST

When you set [AF ASSIST] to [ON], you can briefly focus manually by turning the focus ring during the auto focus. (The default setting is [OFF]).

AE SHIFT

You can adjust the exposure between -7 (dark) and +7 (bright) using the SEL/PUSH EXEC dial. **AS** and the setting value appear when [AE SHIFT] is set to anything other than the default setting.

Note

- If you adjust all of the iris, gain, shutter speed manually, you cannot obtain the effect of [AE SHIFT].

AE RESPONSE

You can select the speed to adjust the exposure automatically, in accordance with the brightness of the subject. [FAST], [MIDDLE], and [SLOW] are available (the default setting is [FAST]).

AGC LIMIT

You can select the upper limit for the Auto Gain Control (AGC) from [OFF] (18dB, the default setting), [12dB], [6dB] or [0dB].

Note

- If you adjust the gain manually, you cannot obtain the effect of [AGC LIMIT].

AT IRIS LMT

You can select the highest iris value for the automatic adjustment from [F11] (the default settings), [F5.6], [F4].

Note

- If you adjust the iris manually, you cannot obtain the effect of [AT IRIS LMT].

AWB SENS

You can set the auto white balance operation under a reddish light source such as an incandescent lamp or candle, or under a blueish light source such as in outdoor shade.

► INTELLIGENT

Adjustment is automatically performed to achieve a natural atmosphere according to the brightness of the scene.

HIGH

Redness or blueness will decrease.

MIDDLE

LOW

Redness or blueness will increase.

Note

- This is only effective when white balance is adjusted automatically.
- [AWB SENS] is not effective under a clear sky or the sun.

FLCKR REDUCE

► ON

Select to record under normal conditions. Flickering of the screen under a light source such as fluorescent lamps will be reduced.

OFF

Select when you do not want to reduce flickering of the screen.

Note

- Flickering may not be reduced depending on the light source.

HANDLE ZOOM

You can change the zoom speed of handle zoom switch positions H and L (p. 33).

■ H

You can select the zoom speed of position H of the handle zoom switch from 1 (slow) through 8 (fast) (the default setting is 6).

■ L

You can select the zoom speed of position L of the handle zoom switch from 1 (slow) through 8 (fast) (the default setting is 3).

Press the MENU button → select the  (CAMERA SET) by turning the SEL/PUSH EXEC dial.

SHOT TRANS

Select this setting to set the transition time and curve. See page 45 for details on using the shot transition function.

■ TRANS TIME

Select transition time ([3.5 sec] to [15.0 sec] seconds, the default setting is [4 sec]).

■ TRANS CURVE


Select the transition curve. The transition curve changes as follows.

*1: parameter level

*2: transition of time


LINEAR

Make the transition linearly.

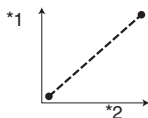


▶ SOFT STOP

Make the transition slowly at the end.

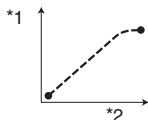

SOFT TRANS

Make the transition slowly at the beginning and end, and linearly in between.

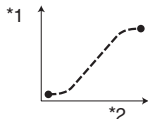

⚡ Note

- You cannot change [TRANS TIME] and [TRANS CURVE] settings during store, check, or execution of [SHOT TRANS]. Cancel [SHOT TRANS] setting by pressing the

ASSIGN button 1 several times before changing [TRANS TIME] or [TRANS CURVE] setting.

DV FRAME REC DV

You can record pictures with a stop-motion animated effect by alternately recording a few frames and then moving the subject a little. Operate your camcorder using the Remote Commander to prevent camera shake.

▶ OFF

Select to record in the standard recording mode.

ON (DV)


Select to record pictures using the DV FRAME REC function.

- ① Select [ON] by the SEL/PUSH EXEC dial.
- ② Press the MENU button to hide the menu screen.
- ③ Press the REC START/STOP button.
A picture (approximately 6 frames) is recorded, and your camcorder enters the standby mode.
- ④ Move the subject and repeat step 3.

⚡ Note

- When you use frame recording continuously, the remaining tape time will not be indicated correctly.
- The last scene will be longer than other scenes.
- You cannot record index signals during frame recording.
- This is automatically set to [OFF] if you turn the power off and back on.

BACK LIGHT

When you set [BACK LIGHT] to [ON],  is displayed and the back light function is enabled (the default setting is [OFF]).

⚡ Notes

- The back light function is canceled when you set [SPOTLIGHT] to [ON].

- You cannot use the back light function if 2 or more items out of iris, gain, and shutter speed are adjusted manually.
- The setting returns to [OFF] when you set the POWER switch to OFF (CHG) for more than 12 hours.

SPOTLIGHT

When you set [SPOTLIGHT] to [ON] (☺), you can reduce overexposed highlights on faces of people who are under strong light, such as on a stage, during recording (the default setting is [OFF]).

🔌 Notes

- The spotlight function is canceled when you set [BACK LIGHT] to [ON].
- You cannot use the spotlight function if 2 or more items out of iris, gain, and shutter speed are adjusted manually.
- The setting automatically returns to [OFF] (default) when you set the POWER switch to OFF (CHG) for more than 12 hours.

D.EXTENDER (Digital Extender)

When you set [D.EXTENDER] to [ON] (🔍), the image is displayed about 1.5 times larger. The picture quality deteriorates due to the digital process. You can enlarge images of distant subjects such as wild birds. (The default setting is [OFF]).

🔌 Note

- This is automatically set to [OFF] if you turn the power off and back on.

FADER

You can record a transition with the following effects adding to the interval between scenes.

- ① Select the desired effect in [STBY] (during fading in) or [REC] (during fading out) mode.
- ② Press the REC START/STOP button. The fader indicator stops flashing and disappears when the fade is complete.

To cancel before starting the operation, select [OFF] in step ①. Once you press the REC START/STOP button, the setting is canceled.



WHITE FADER



BLACK FADER



🔌 Note


- This is automatically set to [OFF] if you turn the power off and back on.

(AUDIO SET) menu

Settings for the audio recording (AUDIO REC LV/DV AU. MODE, etc.)

The default settings are marked with ►. The indicators in parentheses appear when the items are selected.

See page 56 for details on selecting menu items.

Press the MENU button → select the  (AUDIO SET) by turning the SEL/PUSH EXEC dial.

AUDIO REC LV

You can adjust the recording sound level manually.

■ AUTO/MANUAL

► AUTO

Select [AUTO] to adjust the recording sound level automatically.

MANUAL (M)

Select [MANUAL] to adjust the recording sound level during recording or standby.

■ LEVEL

You can adjust the recording sound level when you set [AUDIO REC LV] to [MANUAL]. The recording sound level increases as the level bars go to the right.

Tips

- Use headphones to monitor the sound when adjusting it.
- The setting returns to [AUTO] when you set the POWER switch to OFF (CHG) for more than 12 hours.

DV AU. MODE

(DV Audio mode) DV

► 12BIT

Records in the 12-bit mode (2 stereo sounds).

16BIT (16b)

Records in the 16-bit mode (1 stereo sound with high quality).

Note

- When recording in the HDV format, sound is automatically recorded in [16BIT] mode.

MULTI-SOUND

You can select whether to play back audio recorded using other devices with dual sound or stereo sound.

► STEREO

Plays back with main and sub sound (or stereo sound).

1

Plays back with main sound (or the left channel sound).

2

Plays back with sub sound (or the right channel sound).

Notes

- You can play back, but cannot record a dual sound track cassette on your camcorder.
- The setting automatically returns to [STEREO] (default) when you set the POWER switch to OFF (CHG) for more than 12 hours.

DV AUDIO MIX DV

You can monitor the sound recorded on the tape with audio dubbing or 4ch microphone recording during playback.

► ST1

Select to output only the originally recorded sound.

MIX

Select to synthesize and output the originally recorded sound and the sound added afterwards.

ST2

Select to output only the sound added afterwards.

(DISPLAY SET) menu


Notes

- You cannot adjust the balance of the sound recorded on a tape in the 16-bit DV audio mode.
- The setting automatically returns to the default setting when you set the POWER switch OFF (CHG) for more than 12 hours.

Display settings of the display and the viewfinder (MARKER/VF B.LIGHT/DATA CODE, etc.)

The default settings are marked with ►. The indicators in parentheses appear when the items are selected.

See page 56 for details on selecting menu items.

Press the MENU button → select the  (DISPLAY SET) by turning the SEL/PUSH EXEC dial.

PEAKING

■ ON/OFF

When you set [PEAKING] to [ON], the outline of the subject on the screen is enhanced for easier focusing. (The default setting is [OFF]).

■ COLOR

[WHITE], [RED], [YELLOW] are available for the outline color. (The default setting is [WHITE].)

■ LEVEL

[HIGH], [MIDDLE], [LOW] are available for the outline level. (The default setting is [MIDDLE].)

Note

- The image with enhanced outline is not recorded on the tape.

Tip


- This makes focusing easier when used with expanded focus display (p. 35).

HISTOGRAM

When you set [HISTOGRAM] to [ON], [HISTOGRAM] (a graph to display a distribution of tones in your picture) window appears on the screen (the default setting is [OFF]).

Press the MENU button → select the  (DISPLAY SET) by turning the SEL/PUSH EXEC dial.

This item is useful when you adjust exposure. You can adjust EXPOSURE/IRIS while checking [HISTOGRAM] window (p. 35). [HISTOGRAM] will not be recorded on a tape or “Memory Stick Duo.”

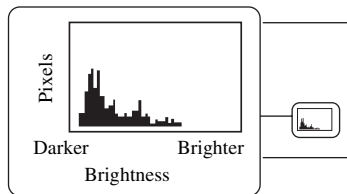

Tips

- The left area on the graph shows the darker areas of the picture while the right area shows the brighter areas.
- If you set ZEBRA to [70] or [100], the guide is displayed (p. 37).

MARKER

When you set [ON/OFF] to [ON], you can display [CENTER] and [GUIDEFRA] markers.

■ ON/OFF

When you select [ON], a marker is displayed (the default setting is [OFF]). The marker is not recorded.

■ CENTER

When you set [CENTER] to [ON], the marker is displayed at the center of the screen (the default setting is [ON]).



■ GUIDEFRA

When you set [GUIDEFRA] to [ON], the marker for checking the horizontal and vertical positions of the subject is displayed (the default setting is [OFF]).



Note

- Screen indicators are not output from the analog jacks when a marker is displayed.

Tips

- You can display the center marker and the guideframe marker at the same time.
- You can obtain a balanced composition by positioning the subject at the cross points of the guideframe marker.
- Markers are displayed only on the LCD panel and viewfinder (they are not output from the jacks).

EXP.FOCUS TYPE

You can set a type of the expanded focus display.

► TYPE 1


Simply enlarges images.

TYPE 2


Enlarges and shows images in white and black.

CAM DATA DSP (Camera data display)

When you set [CAM DATA DSP] to [ON], the iris, shutter speed, and gain settings are constantly displayed (the default setting is [OFF]).

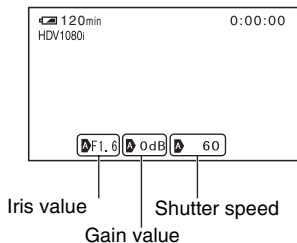

Tips

- When set to manual, the values are displayed regardless of the camera data display settings.
-  indicates auto settings.

- The items displayed by setting [CAM DATA DSP] to [ON] are different from the items that will be displayed when [DATA CODE] is set to [CAMERA DATA] (p. 67).

AU.LVL DISP (Audio level display)

Since the default setting is [ON], audio level meter is displayed.



Audio level meter

LCD BRIGHT

You can adjust the LCD bright using the SEL/PUSH EXEC dial. The brightness of recorded pictures is not affected.

Tip

- You can also turn off the LCD backlight (p. 22).

LCD COLOR

You can adjust the LCD color intensity using the SEL/PUSH EXEC dial. The color of recorded pictures is not affected.

LCD BL LEVEL

You can adjust the brightness of the LCD screen's backlight.

► NORMAL

Standard brightness.

BRIGHT

Brightens the LCD screen.

Notes

- When you connect your camcorder to outside power sources, [LCD BL LEVEL] is automatically set to [BRIGHT].

- When you select [BRIGHT], the recordable time with the battery is slightly reduced.

VF B. LIGHT

You can adjust the brightness of the viewfinder.

► NORMAL

Standard brightness.

BRIGHT

Brightens the viewfinder screen.

Notes

- When you connect your camcorder to outside power sources, [BRIGHT] is automatically selected for the setting.
- When you select [BRIGHT], the recordable time with the battery is slightly reduced.

VF POWERMODE

► AUTO

When the LCD screen is closed or during reverse shooting, the finder is lit.

ON

The LCD screen and finder are always lit.

DATA CODE

During playback, you can display the information (data code) recorded automatically at the time of recording is displayed.

► OFF

Data code is not displayed.


DATE

Displays the date and time.

CAMERA DATA

Displays camera setting data.

Press the MENU button → select the  (DISPLAY SET) by turning the SEL/PUSH EXEC dial.

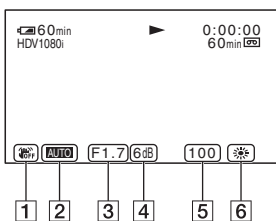

1 SteadyShot off

2 Exposure

AUTO is displayed when shooting with automatic adjustment of iris/gain/shutter speed, and **MANUAL** is displayed when shooting with manual adjustment.

3 Iris

CLOSE is displayed in the iris value display area when you manually set the iris value to the maximum.

4 Gain

5 Shutter speed

6 White balance

PWB is displayed when you play back images recorded using shot transition.

Notes

- The exposure adjustment value (0EV), the shutter speed, and the iris value appear when still images on a “Memory Stick Duo” are played back.
- In the DATE display, the date and time are displayed in the same area. If you record a picture without setting the clock, [---- -- --] and [--:--:--] will appear.

LETTER SIZE

► NORMAL

Select to display the menu screen at normal size.


2x

Select to display the selected menu item at double the normal height.

REMAINING

► AUTO

Displays the remaining tape indicator for about 8 seconds in situations such as those described below.

- When you set the POWER switch to VCR or CAMERA with a cassette inserted.
- When you press  (PLAY) or the DISPLAY/BATT INFO button.

ON

Always displays the remaining tape indicator.

DISP OUTPUT

► LCD PANEL

Shows displays such as the time code on the LCD screen and in the viewfinder.

V-OUT/PANEL

Shows displays such as the time code on the TV screen, LCD screen, and in the viewfinder.

⇔ (IN/OUT REC)

menu

Recording settings, input and output settings (VCR HDV/DV/DV REC MODE/ DV WIDE REC/ TV TYPE, etc.)

The default settings are marked with ►. The indicators in parentheses appear when the items are selected.

See page 56 for details on selecting menu items.

Press the MENU button → select the ⇔ (IN/OUT REC) by turning the SEL/PUSH EXEC dial.

REC FORMAT

You can select a recording format.

► HDV1080i (HDV1080i)

Records in the HDV1080i specification.

DV (DV)

Records in the DV format.

⚡ Note

- When you output the recording picture using an i.LINK cable, set [i.LINK CONV] (p. 70) accordingly.

VCR HDV/DV

You can select the playback signal.

Normally select [AUTO].

When your camcorder is connected to another device using an i.LINK cable, select the signal to input/output from the ⚡ HDV/DV interface (i.LINK). The selected signal is recorded or played back.

► AUTO

Switches the signals between HDV and DV formats automatically when playing back a tape.

During i.LINK connection, switches the signals between HDV and DV formats automatically, and inputs/outputs from the ⚡ HDV/DV interface (i.LINK).

HDV (HDV1080i)

Plays back only the portions recorded in HDV format.

During i.LINK connection, inputs/outputs only HDV formatted signals from the ⚡ HDV/DV interface (i.LINK), and records/plays back. You can also select this when connecting the camcorder to a computer, etc.

DV (DV)

Plays back only the portions recorded in DV format.

During i.LINK connection, inputs/outputs only DV formatted signals from the ⚡ HDV/DV interface (i.LINK), and records/plays back. You can also select this when connecting the camcorder to a computer, etc.

⚡ Notes


- Disconnect the i.LINK cable before changing [VCR HDV/DV] setting. Otherwise, the connected device, such as a VCR, may not be able to recognize the video signal from your camcorder.
- When [AUTO] is selected and the signal switches between HDV and DV formats, the picture and sound are interrupted temporarily.
- When [i.LINK CONV] is set to [ON], pictures are output as follows:
 - at [AUTO], an HDV signal is converted to the DV format and output; a DV signal is output as it is.
 - at [HDV], an HDV signal is converted to the DV format and output; a DV signal is not output.
 - at [DV], a DV signal is output as it is; an HDV signal is not output.

DV REC MODE (DV Recording mode) DV

This function is effective only when [REC FORMAT] is set to [DV].

► SP (SP)

Records in the SP (Standard Play) mode on a cassette.

Press the MENU button → select the  (IN/OUT REC) by turning the SEL/PUSH EXEC dial.

LP (LP)

Increases the recording time to 1.5 times the SP mode (Long Play).

Notes

- If you record in the LP mode, a mosaic-like noise may appear or sound may be interrupted when you play back the tape on other camcorders or VCRs.
- When you mix recordings in the SP mode and in the LP mode on one tape, the playback picture may be distorted or the time code may not be written properly between the scenes.
- You cannot choose the LP mode for the HDV format recording.

DV WIDE REC

You can select the aspect ratio for recording according to a type of your TV. Refer also to the instruction manuals supplied with your TV.

▶ ON

Records pictures in the size that matches the full screen of a 16:9 (wide) TV.

OFF (4:3)

Records pictures in the size that matches the full screen of a 4:3 TV.

Notes

- Set [TV TYPE] correctly according to the TV connected for playback (p. 70).
- When you select HDV format, the image size is fixed to 16:9. You cannot record in 4:3 size.

COMPONENT

You can select the type of connection when connecting your camcorder to a TV with the component input jack.

480i


Select when connecting your camcorder to a TV with the component input jack.

▶ 1080i/480i


Select when connecting your camcorder to a TV that has the component input jack

and is capable of displaying the 1080i signal.

i.LINK CONV

You can convert signals in HDV format to DV format, and output pictures in DV format from the  HDV/DV interface (i.LINK).

▶ OFF

Outputs the pictures from the  HDV/DV interface (i.LINK) in accordance with the settings in [REC FORMAT] and [VCR HDV/DV].

ON

Pictures in HDV format are converted to DV format, and pictures in DV format are output in DV format.

Notes

- For input signal via an i.LINK connection, see [VCR HDV/DV] (p. 69).
- Disconnect the i.LINK cable before setting [i.LINK CONV]. Otherwise, the connected video device may not be able to recognize the video signal from your camcorder.

TV TYPE

You need to convert the signal depending on a type of your TV when playing back the picture. The recorded pictures are played back as following illustrations.

▶ 16:9

Select to view your pictures on a 16:9 (wide) TV.

HDV/DV (16:9)
format pictures



DV (4:3) format
pictures



4:3

Select to view your pictures on a 4:3 standard TV.

HDV/DV (16:9)
format pictures



DV (4:3) format
pictures

**Notes**


- This is not effective for the i.LINK output.
- When you connect your camcorder to a TV compatible with the ID-1 system or via an S VIDEO jack for playing back the tape, set [TV TYPE] to [16:9]. The TV automatically switches the aspect ratio according to the playback picture. Refer also to the manual supplied with your TV.

(MEMORY SET) menu

Settings for the “Memory Stick Duo” (QUALITY/ALL ERASE, etc.)

The default settings are marked with ►. The indicators in parentheses appear when the items are selected.

See page 56 for details on selecting menu items.

Press the MENU button → select the  (MEMORY SET) by turning the SEL/PUSH EXEC dial.

QUALITY

 



► FINE (FINE)

Records still images at the fine image quality level.

 

 

STANDARD (STD)

Records still images at the standard image quality level.




Capacity of the “Memory Stick Duo” (MB) and the number of recordable pictures

	1.2M 1440 × 810 	0.9M 1080 × 810 	VGA 640 × 480 	0.2M 640 × 360 
16MB	25	34	96	115
	60	80	240	240
32MB	51	69	190	240
	120	160	485	485
64MB	100	135	390	490
	240	325	980	980
128MB	205	280	780	980
	490	650	1970	1970
256MB	370	500	1400	1750
	890	1150	3550	3550
512MB	760	1000	2850	3600
	1800	2400	7200	7200
1GB	1550	2100	5900	7300
	3650	4900	14500	14500

Press the MENU button → select the  (MEMORY SET) by turning the SEL/PUSH EXEC dial.

	1.2M	0.9M	VGA	0.2M
	1440 × 810	1080 × 810	640 × 480	640 × 360
				
2GB	3150	4300	12000	15000
	7500	10000	30000	30000
4GB	6300	8500	23500	29500
	14500	19500	59000	59000

 Top: [FINE] is selected for image quality.
Bottom: [STANDARD] is selected for image quality.

* Recording: Image size fixed to  1.2M] in HDV or DV format (16:9) and [0.9M] in DV format (4:3).
Playback: Image size is fixed to  1.2M] in HDV format,  0.2M] in DV format (16:9) and [VGA (0.3M)] in DV format (4:3).

Note

- The specifications are for the “Memory Stick Duo” made by Sony Corporation. The number of recordable pictures varies depending on the recording environment.

Approximate data size of a picture (kB)

1.2M	0.9M	VGA	0.2M
600	450	150	130
260	190	60	60

Top: [FINE] is selected for image quality.
Bottom: [STANDARD] is selected for image quality

ALL ERASE

You can delete all the pictures on a “Memory Stick Duo” without image protection, or in the selected folder.

- ① Select [ALL FILES] or [CURRNT FOLDER].

[ALL FILES]: Deletes all the images on the “Memory Stick Duo.”

[CURRNT FOLDER]: Deletes all the images in the selected folder.

- ② Select [YES] → [YES] by using the SEL/PUSH EXEC dial.

[Erasing all data...] is displayed.
[Completed] is displayed when all unprotected images are deleted.

Notes

- Release the write protect tab on the “Memory Stick Duo” beforehand when using the “Memory Stick Duo” with the write-protect tab (p. 107).
- The folder will not be deleted even when you delete all the pictures in the folder.
- Do not do any of the following while [Erasing all data...] is displayed:
 - Operate the POWER switch/operation buttons.
 - Eject the “Memory Stick Duo.”

FORMAT

You do not need to format the “Memory Stick Duo” since it is already formatted at the factory. If you want to format the “Memory Stick Duo,” select [YES]→[YES].

Notes

- Do not do any of the following while [Formatting...] is displayed:
 - Operate the POWER switch/operation buttons.
 - Eject the “Memory Stick Duo.”
- Formatting erases everything on the “Memory Stick Duo” including protected image data and newly created folders.

FILE NO.

► SERIES

Assigns file numbers in sequence even if the “Memory Stick Duo” is replaced with another one. The file number is reset when a new folder is created or the recording folder is replaced with another.

RESET

Resets the file number to 0001 each time the “Memory Stick Duo” is changed.

NEW FOLDER

When you select [YES], you can create a new folder (102MSDCF to 999MSDCF) on a “Memory Stick Duo.” When a folder is full (a maximum of 9,999 images are stored), a new folder is automatically created.

Notes

- You cannot delete the created folders using your camcorder. You will have to format the “Memory Stick Duo” (p. 72), or delete them using your computer.
- The number of recordable pictures on a “Memory Stick Duo” may decrease as the number of folders increases.

REC FOLDER (Recording folder)

You can select the folder to be used for recording by turning the SEL/PUSH EXEC dial, then press the dial.

Tips

- As the default setting, pictures are saved in the 101MSDCF folder.
- Once you record a picture in a folder, the same folder will be set as the default folder for playback.

PB FOLDER (Playback folder)


You can select the playback folder by turning the SEL/PUSH EXEC dial, then press the dial.

(OTHERS) menu

Settings while recording on a tape or other basic settings (USB SELECT/QUICK REC/BEEP, etc.)

The default settings are marked with ►. The indicators in parentheses appear when the items are selected.

See page 56 for details on selecting menu items.

Press the MENU button → select the  (OTHERS) by turning the SEL/PUSH EXEC dial.

CAMERA PROF. (Camera profile)

You can save up to two kinds of camera setups in your camcorder as camera profiles. Using these saved profiles lets you quickly obtain suitable camera settings later.

Tip

- The items that can be saved in the camera profile are set values of the menu, the picture profiles, and the buttons. You can save these set values all in the camera profile.

To save camera profile settings

- ① Select [SAVE] by the SEL/PUSH EXEC dial.
- ② Select [NEW FILE] or an existing profile name by turning the SEL/PUSH EXEC dial.
- ③ Select [YES] in the check screen by turning the SEL/PUSH EXEC dial.
The camera profile settings are saved.

Tips

- If you select [NEW FILE], profile name is set to [CAM1] or [CAM2].
- If you select an existing camera profile as a destination, the camera profile is overwritten.

To change profile name

You can change the camera profile name.

- ① Select [PROFILE NAME] by the SEL/PUSH EXEC dial.
- ② Select the camera profile that you want to change the name by the SEL/PUSH EXEC dial.
[PROFILE NAME] appears.

Press the MENU button → select the  (OTHERS) by turning the SEL/PUSH EXEC dial.

- Change the profile name by turning the SEL/PUSH EXEC dial.

Tip

- The method of inputting the name is the same as the method of setting the name of the picture profile (p. 41).

- Select [OK] by turning the SEL/PUSH EXEC dial, then press the dial. Profile name is changed.

■ To load camera profile settings

You can load the camera profile settings and use your camcorder with the settings.

- Select [LOAD] by the SEL/PUSH EXEC dial.
- Select the camera profile, which you want to load by the SEL/PUSH EXEC dial.
- Select [YES] in the check screen. Your camcorder is restarted and the selected camera profile becomes effective.

■ To delete camera profile settings

- Select [DELETE] by the SEL/PUSH EXEC dial.
- Select the camera profile you want to delete by the SEL/PUSH EXEC dial.
- Select [YES] in the check screen.

ASSIGN BTN

See p. 42.

PHOTO/EXP.FOCUS

You can select a function to assign to the PHOTO/EXPANDED FOCUS button.

▶ PHOTO

Records a still image (p. 30).

EXP.FOCUS

The PHOTO/EXPANDED FOCUS button acts the same function as the EXPANDED FOCUS button (p. 35).

Note

- If [EXP.FOCUS] is selected, you cannot record still images with the main unit button. Please use the PHOTO button on the Remote Commander.

CLOCK SET

See p. 24.

WORLD TIME

When you use your camcorder abroad, you can adjust the clock to the local time by setting the time difference with the SEL/PUSH EXEC dial.

When you set the time difference to 0, the clock returns to the original setting.

LANGUAGE

You can select the language to be used on the LCD screen.

- Your camcorder offers [ENG[SIMP]] (simplified English) in case that you cannot find your native tongue among the options.

USB SELECT

You can connect the camcorder to a personal computer with a USB cable and view pictures on the “Memory Stick Duo” on the computer (p. 86). You can also connect the camcorder to a PictBridge compatible printer (p. 83) using this function.

▶ Memory Stick

Select to view pictures on a “Memory Stick Duo” on the computer or to export them to the computer.

PictBridge PRINT

Select to connect your camcorder to a PictBridge compatible printer to print out directly (p. 83).

PB ZOOM (Playback zoom)

When you set [PB ZOOM] to [ON], you can enlarge movie images about 1.1 to 5 times (still images about 1.5 to 5 times). (The default setting is [OFF]). You can adjust the magnification with the zoom lever. To end the zoom, press the W side of the zoom lever.

💡 Tip

- To move the zoom horizontally, press the SEL/PUSH EXEC dial, then turn the dial. To move the zoom vertically, press the SEL/PUSH EXEC dial one more time, then turn the dial.

QUICK REC HDV1080i

You can slightly reduce the recording start point time when resuming recording by turning the POWER switch from OFF (CHG) to CAMERA.

▶ OFF

It takes some time to restart recording from the state that the drum has stopped rotating, but the transition from the last recorded scene is smooth.

ON (Q.REC)

The time shortens slightly until recording restarts from the state that the drum has stopped rotating, but the transition from the last recorded scene may not be smooth. Select this when you do not want to miss a recording chance.

💡 Tips

- If [QUICK REC] is set to [ON], the interval between scenes freezes for a moment (editing on your computer is recommended).
- When the camcorder is left in standby for more than about 3 minutes, your camcorder exits from standby (the drum stops rotating) to prevent tape wear and battery loss. Since the power does not turn off, you can restart recording by pressing the REC START/STOP button again.

BEEP

▶ ON

Activates a melody when you start/stop recording.

OFF

Cancels the melody.

REC LAMP (Recording lamp)

The camera recording lamp will not light up during recording when you set this to [OFF] (the default setting is [ON]).

REMOTE CTRL (Remote control)

The default setting is [ON], allowing you to use the supplied Remote Commander (p. 123).

💡 Tip

- Set to [OFF] to prevent your camcorder from responding to a command sent by another VCR remote control unit.


Dubbing to VCR, DVD/HDD device, etc.

Connect your camcorder to the wall outlet using the supplied AC Adaptor for this operation (p. 18). Refer also to the instruction manuals supplied with the devices to be connected.

Connecting to external devices

The connection method and the image quality will differ depending on the VCR, DVD/HDD device and the connectors used.

→ : Signal flow

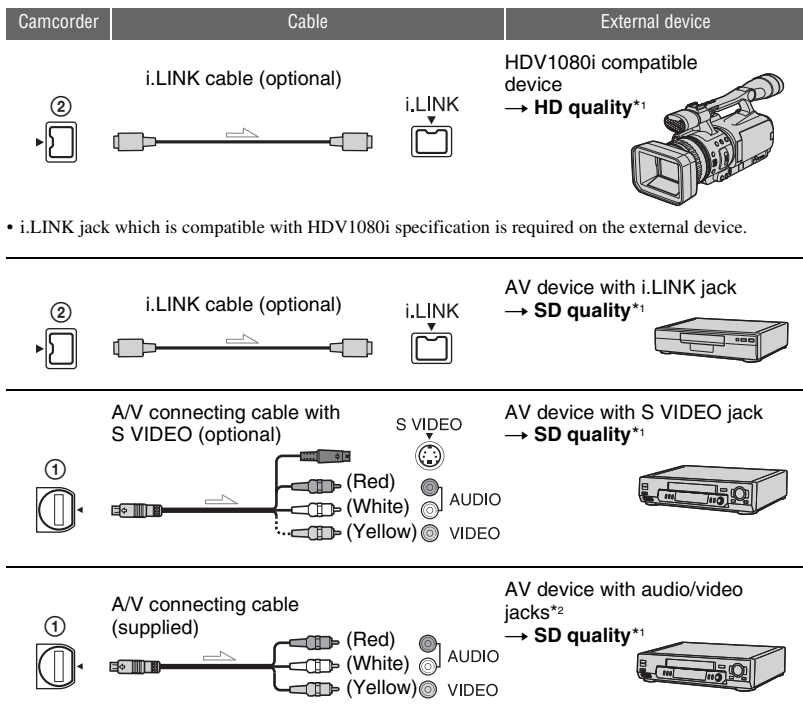

*1 Pictures recorded in the DV format are dubbed in the SD (standard definition) quality, regardless of the connection.


*2 When connecting your camcorder to a monaural device, connect the yellow plug of the A/V connecting cable to the video jack on the device, and connect the white (left channel) or red (right channel) plug to the audio jack on the device.

Note

- You cannot dub pictures using the HDMI cable.

Jacks on your camcorder

Open the jack cover and connect the cable.

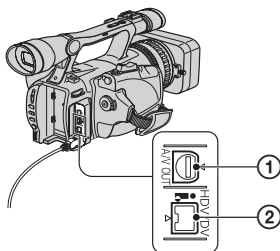

Using an i.LINK cable (optional)

The dubbed format (HDV/DV) differs depending on the recording format or the format supported by the VCR/DVD device. See the table below for selecting the appropriate settings, and perform necessary menu setting.

Note

- Disconnect the i.LINK cable before changing these menu settings, otherwise the VCR/DVD device may not correctly identify the video signal.

Tip

- This camcorder has a 4-pin i.LINK terminal. Select a cable that fits the terminal on the device to be connected.

Copy format	Camcorder recording format	Format supported by the VCR/DVD device		Menu setting	
		HDV format* ¹	DV format	[VCR HDV/DV] (p. 69)	[i.LINK CONV] (p. 70)
Copy HDV recording as HDV	HDV	HDV	—* ³		[OFF]
Convert HDV recording to DV	HDV	DV	DV	[AUTO]	[ON]
Copy DV recording as DV	DV	DV	DV		[OFF]
When tape is recorded in both HDV and DV format					
Convert both HDV and DV format to DV	HDV/DV	DV	DV	[AUTO]	[ON]
Copy only portions recorded in HDV format	HDV	HDV	—* ³	[HDV]	[OFF]
	DV	—* ²	—* ³		
Copy only portions recorded in DV format	HDV	—* ²	—* ²	[DV]	[OFF]
	DV	DV	DV		

*¹ Recording device compliant with the HDV1080i specification.

*² The tape advances, but no video or sound is recorded (blank).

*³ Picture is not recognized (no recording is made).

Dubbing to VCR, DVD/HDD device, etc. (Continued)

🔌 Notes

- When [VCR HDV/DV] is set to [AUTO], and the signal switches between HDV and DV formats, the picture and sound are interrupted temporarily.
- When the recorder is HDR-FX7, set [VCR HDV/DV] to [AUTO] (p. 69).
- When the player and the recorder are both HDV1080i compatible devices such as HDR-FX7 and connected with the i.LINK cable, after pausing or stopping and then resuming the recording, the images will be a bit choppy or rough at that point.
- Set [DISP OUTPUT] to [LCD PANEL] (the default setting) when connecting with an A/V connecting cable (p. 68).

When connecting with the A/V connecting cable with S VIDEO (optional)

Connect with S VIDEO jack instead of the video plug (yellow). This connection produces pictures more faithfully. This connection produces higher quality DV format pictures. The audio will not be output when you connect with the S VIDEO cable alone.

Dubbing to another device

1 Prepare your camcorder for playback.

Insert the recorded cassette.
Slide the POWER switch to VCR.

Set [TV TYPE] according to the playback device (TV, etc.) (p. 70).

2 Prepare your VCR/DVD device for recording.

When dubbing to the VCR, insert a cassette for recording.

When dubbing to the DVD recorder, insert a DVD for recording.

If your recording device has an input selector, set it to the appropriate input (such as video input1 and video input2).

3 Connect your VCR/DVD device to your camcorder as a recording device.



See page 76 for connection details.

4 Start playback on the camcorder, and recording on the VCR/DVD device.

Refer to the operating instructions supplied with your recording device for details.

5 When dubbing is complete, stop your camcorder and the VCR/DVD device.



🔌 Notes

- The following cannot be output via the  HDV/DV interface (i.LINK):
 - Indicators
 - Titles that are recorded on other camcorder
- Pictures recorded in the HDV format are not output from the  HDV/DV interface (i.LINK) jack during playback pause or in any playback mode other than normal playback.
- Note the following when connecting with an i.LINK cable:
 - The recorded picture becomes rough when a picture is paused on your camcorder while recording to a VCR/DVD device.
 - Data codes (date/time/camera settings data) may not be displayed or recorded depending on the device or application.
 - You cannot record the picture and sound separately.

Recording pictures from a VCR

- When dubbing to a DVD recorder from your camcorder in DV format through an i.LINK cable, you may not operate your camcorder on your DVD recorder even its instruction manual says you can. If you can set the input mode to DV on your DVD recorder and can input/output pictures, follow the steps in “Dubbing to another device.”

Tips

- To record the date/time and camera settings data when connected by the A/V connecting cable, display them on the screen.
- When you use an i.LINK cable, the video and sound signals are transmitted digitally, producing high quality pictures.
- When an i.LINK cable is connected, the format of the output signal (HDVout  or DVout ) will be indicated on the LCD screen of your camcorder.

You can record pictures from a VCR on a tape. You can record a scene as a still image on a “Memory Stick Duo.” You can record pictures in the HDV format by connecting an HDV1080i specification compatible device. Be sure to insert a cassette or a “Memory Stick Duo” for recording in your camcorder beforehand.


You can connect your camcorder to a VCR device using an i.LINK cable.

Connect your camcorder to the wall outlet using the supplied AC Adaptor for this operation (p. 18). Refer also to the instruction manuals supplied with the devices to be connected.

Notes

- You need an i.LINK cable for this operation.
- You cannot perform this operation with the A/V connecting cable.
- Your camcorder has a 4-pin i.LINK terminal. Select a cable that fits the terminal on the device to be attached.

Recording pictures from a VCR (Continued)

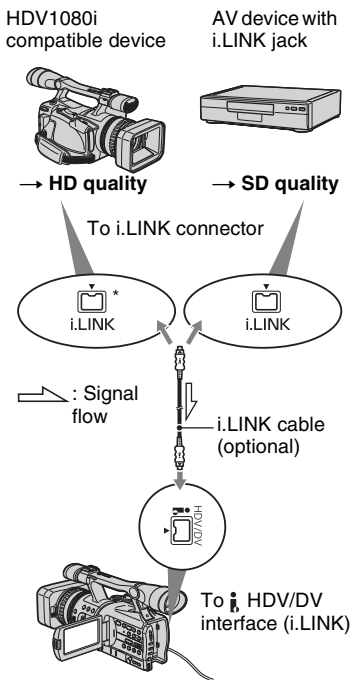

* An i.LINK jack which is compatible with HDV1080i specification is required.

Recording movies


 
1 Set the POWER switch to VCR.

2 Set the input signal of your camcorder.

Set [VCR HDV/DV] to [AUTO] when recording from an HDV format compatible device.



Set [VCR HDV/DV] to [DV] or [AUTO] when recording from a DV format compatible device (p. 69).


3 Connect your VCR as a player to your camcorder.

When an i.LINK cable is connected, the format of the input signal (**HDV IN**  or **DV IN** ) will be indicated on the LCD screen of your camcorder (this indicator may appear on the screen of the playback device, however, it will not be recorded).

4 Insert a cassette into the VCR.

5 Set your camcorder to recording pause.

While pressing  (PAUSE), press both  REC (record) buttons simultaneously.

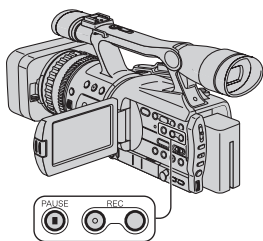


6 Start playing the cassette on your VCR.

The picture played on the VCR appears on the LCD screen of your camcorder.

7 Press **II** (PAUSE) again at the point you want to start recording.

8 Press **■** (STOP) to stop recording.

Notes

- You cannot record TV programs from the  HDV/DV interface (i.LINK).
- You can record pictures from DV devices only in the DV format.
- Note the following when connecting with an i.LINK cable:
 - The recorded picture becomes rough when a picture is paused on your camcorder while recording to a VCR.
 - You cannot record the picture and sound separately.
 - If you pause or stop the recording and restart it, the picture may not be recorded smoothly.

Tip

- When a 4:3 video signal is input, it appears with black bands on the right and left sides on the screen of your camcorder.

Recording still images

Be sure to insert a “Memory Stick Duo” for recording in your camcorder beforehand, and set [PHOTO/EXP.FOCUS] to [PHOTO] (the default setting) (p. 74).


 
1 Perform steps 1 to 4 in “Recording movies.”

2 Start playing the cassette.

The pictures on the VCR appear on the screen of your camcorder.

3 Press the PHOTO/EXPANDED FOCUS button at the scene you want to record.

Note

- Movies will be fixed to image size [ 1.2M] when playing back in the HDV format. Movies will be fixed to image size [ 0.2M] (16:9) or [VGA (0.3M)] (4:3) when playing back in the DV format.

Copying movies from tape to “Memory Stick Duo” as still images

You can record still images on a “Memory Stick Duo.” Be sure to insert a recorded tape and a “Memory Stick Duo” in your camcorder, and set [PHOTO/EXP.FOCUS] in your camcorder, and set [PHOTO/EXP.FOCUS] to [PHOTO] (the default setting) (p. 74) beforehand.

1 Set the POWER switch to the VCR.

2 Search and record the scene you want to record.

Press ► (Play) to play back the tape, then press the PHOTO/EXPANDED FOCUS button at the scene you want to record.

🔗 Notes


- The date and time at which the picture was recorded on the tape and the date and time at which the picture was stored on the “Memory Stick Duo” are recorded. On your camcorder, the date and time at which the picture was recorded on the tape are displayed. Camera setting data recorded on the tape cannot be stored on the “Memory Stick Duo.”
- Movies will be fixed to image size [📺 1.2M] when playing back in the HDV format. Movies will be fixed to image size [📺 0.2M] (16:9) or [VGA (0.3M)] (4:3) when playing back in the DV format.
- You cannot record still images while using [PB ZOOM] (p. 75).

Deleting recorded pictures from the “Memory Stick Duo”


1 Set the POWER switch to VCR.

2 Playback a picture you want to delete (p. 32).

3 Press the MEMORY/DELETE button.

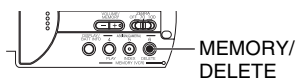

[Delete this image?] will be displayed.

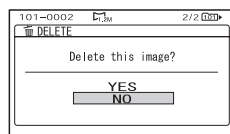

4 Select [YES] by turning the SEL/PUSH EXEC dial, then press the dial.


🔗 Note

- The pictures cannot be restored once they are deleted.

Note

- Pictures cannot be deleted when a “Memory Stick Duo” with the write-protect tab is set to the write-protect position (p. 107), or when the selected picture is protected (p. 94).

Tips

- To delete images from the index screen, use the VOLUME/MEMORY button to move the ► mark to the images you want to and perform steps 3 and 4.
- To delete all pictures at once, select [ ALL ERASE] (p. 72).

Printing recorded images (PictBridge compliant printer)


You can print out pictures using a PictBridge compliant printer without connecting the camcorder to a computer.

PictBridge


Connect the AC Adaptor to your camcorder to obtain power from the wall outlet. Insert the “Memory Stick Duo”, containing still images into your camcorder and turn on the printer.


Connecting your camcorder to the printer

1 Set the POWER switch to VCR.

2 Press the MENU button, and select  (OTHERS) menu → [USB SELECT] → [PictBridge PRINT] with the SEL/PUSH EXEC dial.

3 Connect the USB cable to the  (USB) jacks of your camcorder and the printer.

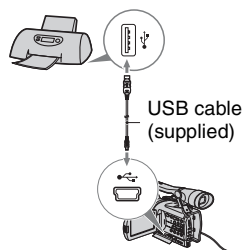

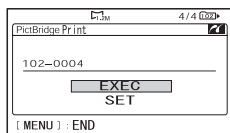

One of the images stored on the “Memory Stick Duo” will be displayed.

Printing

1 Select the image you want to print with the VOLUME/MEMORY button.

2 Set the number of copies you want to print if necessary.

If you do not want to set the number, go to step 3 (the number will be automatically set to 1).

- ① Select [SET] → [COPIES] with the SEL/PUSH EXEC dial.
- ② Select the number by turning the SEL/PUSH EXEC dial, then press the dial.
- ③ Select [↵ RETURN] by turning the SEL/PUSH EXEC dial, then press the dial.

The PictBridge selection screen appears again.

💡 Tip

- You can set the number up to 20.

3 To print the date/time on the image, set as follows.

If you do not want to print the date/time, go to step 4.

- ① Select [SET] → [DATE/TIME] → [DATE] or [DAY & TIME] with the SEL/PUSH EXEC dial.
- ② Select [↵ RETURN] by turning the SEL/PUSH EXEC dial, then press the dial.

The PictBridge selection screen appears again.

4 Select [EXEC] → [YES] with the SEL/PUSH EXEC dial.

When printing is finished, [Printing...] disappears and the image selection screen appears again.

Press the MENU button when printing is completed.

📌 Notes

- We do not guarantee proper operation when a PictBridge incompatible device is connected.
- Refer also to the operating instructions for the printer to be used.
- Do not attempt the following operations when the printer is connected (📌 is on the screen). The operations may not be performed properly.
 - Operate the POWER switch.
 - Disconnect the USB cable from the printer.
 - Remove the “Memory Stick Duo” from your camcorder.
- If the printer stops working, disconnect the USB cable, turn the printer off and on again and restart the operation from the beginning.
- Depending on your printer, the top, bottom or side edges may be cut. Particularly when printing a wide (16:9) image, the sides may be cut significantly.
- Some printer models may not support the date/time printing function. Refer to your printer’s operating instructions for details.
- We cannot guarantee the printing of images recorded with a device other than your camcorder.

 **Tip**

- PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA). You can print still images without using a computer by connecting a printer directly to a digital video camera or digital still camera, regardless of model or manufacturer.

Connecting to a computer

When connecting your camcorder to a computer, the following operations are available:

Copying the still images on a “Memory Stick Duo” to the computer

→ p. 86

Copying the movie on a tape in the HDV format to the computer

→ p. 89

Copying the movie on a tape in the DV format to the computer

→ p. 89

About connection

There are 2 ways to connect your camcorder to a computer:

– USB cable

To copy still images on a “Memory Stick Duo”

– i.LINK cable

To copy movies on a tape

Notes on connecting to a computer

- When you are using a USB cable or an i.LINK cable to connect your camcorder to a computer, make sure to connect the connector in the correct direction. If you insert the connector forcibly, it may be damaged, and cause a malfunction of your camcorder.
- You cannot do the following:
 - Copying pictures on a tape to a computer with a USB cable.
 - Copying pictures on a “Memory Stick Duo” to a computer with an i.LINK cable.
- Remove the USB cable according to the correct procedure when disconnecting it from the computer (p. 88).

Copying still images to a computer

System requirements

For Windows users


- OS: Windows 2000 Professional/Windows Millennium Edition/Windows XP Home Edition/Windows XP Professional Standard installation is required. Operation is not assured if the above OS has been upgraded.
- CPU: MMX Pentium 200MHz or faster
- Others: USB port (provided as standard).

For Macintosh users

- OS: Mac OS 9.1/9.2 or Mac OS X (v10.1/v10.2/v10.3/v10.4)
- Others: USB port (provided as standard).

Step:1 Using the USB cable

- You can do this operation with the standard driver on your computer. You do not need to install any software.
- If your computer has a Memory Stick slot, insert the “Memory Stick Duo” on which pictures are recorded into the Memory Stick Duo adaptor (optional), then insert it into the Memory Stick slot on your computer to copy still images to the computer.
- When using a “Memory Stick PRO Duo” and your computer is not compatible with it, connect your camcorder with the USB cable instead of using the Memory Stick slot on the computer.

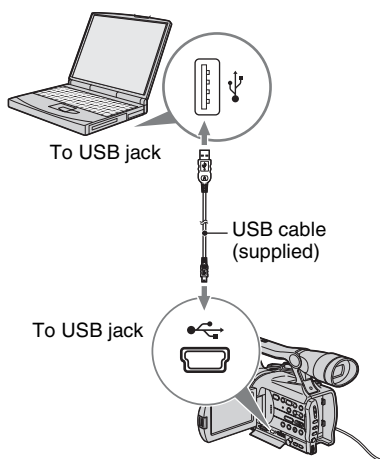

- Do not connect your camcorder to the computer at this point.
- The computer may not recognize the camcorder if you connect them with the USB cable before turning on your camcorder.
- See page 89 for the recommended connection.

1 Turn on the computer.

Close down all applications running on the computer.

For Windows 2000/Windows XP

Log on as an Administrator.

2 Insert a “Memory Stick Duo” into your camcorder.

3 Prepare the power source for your camcorder.

Use the supplied AC Adaptor to obtain AC power (p. 18).

4 Set the POWER switch to VCR.

5 Press the MENU button. The menu index screen is displayed.

6 Select (OTHERS) → [USB SELECT] → Memory Stick] with the SEL/PUSH EXEC dial (p. 74).

7 Connect the USB cable to the (USB) jacks on your camcorder and your computer.


It may take a while until your computer recognizes your camcorder for the first time.

Step:2 Copying the pictures

For Windows users

Double-click the [Removable Disk] icon displayed in [My Computer]. Then, drag and drop a picture in the folder onto the hard disk drive of your computer.

Copying still images to a computer (Continued)

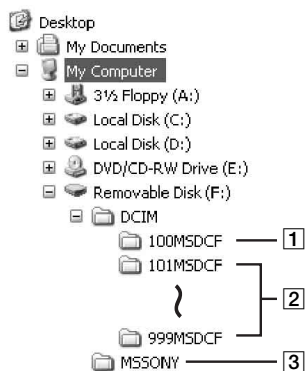

- 1 Folder containing image files recorded by other camcorders without the folder creation function (for playback only).
- 2 Folder containing image files recorded by your camcorder when no new folders have been created, only [101MSDCF] is displayed.
- 3 Folder containing movie data recorded by other camcorders without the folder creation function (for playback only)

Folder	File	Meaning
101MSDCF (up to 999MSDCF)	DSC0□□ □□.JPG	Still image file

□□□□ are numbers between 0001 and 9999.

For Macintosh users


Double-click the drive icon, then drag and drop the desired picture file onto the hard disk of your computer.

Disconnecting the USB cable


For Windows users

If [USB CONNECTING] appears on the LCD screen, follow the procedure below to disconnect the USB cable.

- 1 Click the [Unplug or eject hardware] icon on the task tray.

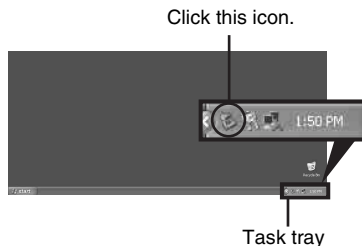

- 2 Click [Safely remove USB Mass Storage Device-Drive].

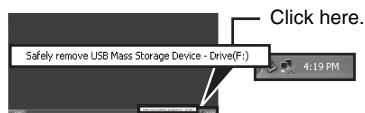

- 3 Click [OK].
- 4 Disconnect the USB cable from the camcorder and computer.

If [USB CONNECTING] does not appear on the LCD screen, do only step 4.

Note

- Remove the USB cable according to the correct procedure, otherwise files in the "Memory Stick Duo" may not be updated correctly. Also, this may cause a malfunction of the "Memory Stick Duo."

For Macintosh users

- 1 Close down all applications running on the computer.
- 2 Drag and drop the drive icon on the desktop onto the [Trash] icon.
- 3 Disconnect the USB cable from the camcorder and computer.

Copying movies on a tape to a computer

Notes

- If you are using Mac OS X, turn off the computer before disconnecting the USB cable and ejecting the “Memory Stick Duo.”
- Do not disconnect the USB cable while the access lamp is lit.
- Make sure to disconnect the USB cable before turning off your camcorder.

Recommended connection

Observe the following points when connecting to ensure the camcorder operates correctly.

- Connect the camcorder to a computer via the USB cable. Make sure no other USB devices are connected to the computer.
- If your computer has a USB keyboard and a USB mouse as standard equipment, leave them connected and connect the camcorder to an available USB jack with the USB cable.
- Operation is not guaranteed if you connect two or more USB devices to the computer.
- Operation is not guaranteed if you connect the USB cable to the USB jack on a keyboard or USB hub.
- Make sure to connect the cable to the USB jack on the computer.
- Operation is not guaranteed even for the recommended environments.

Connect your camcorder to the computer with an i.LINK cable.

The computer needs to have an i.LINK connector and be installed with editing software that can copy video signals. The software required depends on the format of the recorded pictures and the format for copying to the computer (HDV or DV) as shown in the table below.

Recorded format	Format for copying to the computer	Required software
HDV	HDV	Editing software capable of copying HDV signal
HDV	DV	Editing software capable of copying DV signal
DV	DV	Editing software capable of copying DV signal

Notes

- You cannot copy movies using a USB cable.
- Refer to the operating instructions of the software for the details on image copying.
- Refer to the operating instructions of the editing software for the recommended connection.
- Some editing software on the computer may not work correctly.
- You cannot change format DV to HDV. The required menu settings vary depending on the recorded images and the format (HDV or DV) to be copied to the computer.

Recorded format	Format for copying to the computer	Menu setting*
HDV	HDV	[VCR HDV/DV] → [HDV] [i.LINK CONV] → [OFF]

Copying movies on a tape to a computer (Continued)


Recorded format	Format for copying to the computer	Menu setting*
HDV	DV	[VCR HDV/DV] → [HDV] [i.LINK CONV] → [ON]
DV	DV	[VCR HDV/DV] → [DV] [i.LINK CONV] → [OFF]

* See page 56 for menu settings.

💡 Tips

- To copy HDV format images as they are without changing their format, an HDV compatible environment is required. For details, refer to your software instruction manual or contact the software manufacturer.
- To play movies by a regular DVD player, you need to create DVD video in the SD format. the DVD video is not in the HDV format.

Step:1 Connect an i.LINK cable

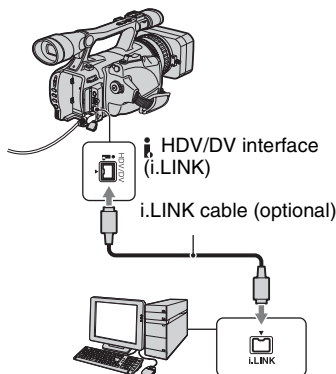

Notes on connecting to the computer

- Connect the i.LINK cable to the computer first, then to your camcorder. Connecting in the opposite order may cause static electricity to build up, resulting in a malfunction of your camcorder.

- The computer may freeze or may not recognize the signal from your camcorder in the following situations.

- Connecting your camcorder to a computer that does not support the video signal formats appearing on the LCD screen of your camcorder display (HDV or DV).
- Changing [VCR HDV/DV] (p. 69) and [i.LINK CONV] (p. 70) settings while connected with an i.LINK cable.
- Changing [REC FORMAT] setting while connected with an i.LINK cable with the POWER switch set to CAMERA (p. 69).
- Changing the POWER switch position while connected with an i.LINK cable.

- The format (HDV or DV) of input/output signal appears on the LCD screen of your camcorder while connected with an i.LINK cable.

Step:2 Copying the movies

Use the supplied AC Adaptor to obtain AC power (p. 18).

- ① Prepare editing software (not provided).
- ② Turn on your computer.
- ③ Insert a tape into your camcorder and set the POWER switch to VCR.
- ④ Set the menu of your camcorder.
The menu settings vary depending on the copying image.
- ⑤ Copy images to the computer with your software.

🔍 Notes

- If images are copied in HDV format but not recognized, your editing software may not support HDV format. Convert the images to DV format according to step 4 and copy again.
- A tape recorded in DV format cannot be copied to a computer in HDV format.

💡 Tips

- Check the specs, features and latest information of your software on the software manufacturer's website.
- When images recorded in HDV format are copied to a computer, the file size is about 2GB (almost the same as a DV file) for a 10-minute

movie if the video compression format is MPEG2.

When copying the movie in the HDV format from the computer to your camcorder

Set [VCR HDV/DV] to [HDV] and [i.LINK CONV] to [OFF] (p. 69, 70).

Note

- To copy an HDV format movie edited on a computer back onto a tape in HDV format is possible so long as your editing software supports copying HDV movies onto tape. For details, contact the software manufacturer.

When copying the movie in the DV format from the computer to your camcorder

Set [VCR HDV/DV] to [DV] (p. 69).

Troubleshooting

If you run into any problems using your camcorder, use the following table to troubleshoot the problem. If the problem persists, disconnect the power source and contact your Sony dealer.

- Power sources//LCD screen/Remote Commander...p. 92
- Cassette tapes/"Memory Stick Duo"...p. 93
- Recording...p. 94
- Playback...p. 96
- Connecting to TV...p. 98
- Dubbing/Editing/Connecting to other devices...p. 99
- Connecting to a computer...p. 100

Power sources//LCD screen/Remote Commander

The power does not turn on or abruptly turns off.

- Attach a charged battery pack to the camcorder (p. 18).
- Use the AC Adaptor to connect to a wall outlet (p. 18).

The camcorder does not operate even when the power is set to on.

- Disconnect the AC Adaptor from the wall outlet or remove the battery pack, then reconnect it after about 1 minute.
- Press the RESET button (p. 122) using a sharp-pointed object.

The camcorder gets warm.

- The camcorder may get warmer while you use it. This is not a malfunction.

The CHARGE lamp does not light while the battery pack is being charged.

- Slide the POWER switch to OFF (CHG) (p. 18).
- Attach the battery pack to the camcorder correctly (p. 18).
- Connect the power cord to the wall outlet properly.
- The battery charge is completed (p. 18).

The CHARGE lamp flashes while the battery pack is being charged.

- Attach the battery pack to the camcorder correctly (p. 18). If the problem persists, disconnect the AC Adaptor from the wall outlet and contact your Sony dealer. The battery pack may be damaged.

The remaining battery time indicator does not indicate the correct time.

- Ambient temperature is too high or too low, or the battery pack has not been charged enough. This is not a malfunction.
- Fully charge the battery again. If the problem persists, the battery may be worn-out. Replace it with a new one (p. 18, 108).
- The indicated time may not be correct in certain circumstances. For example, when you open or close the LCD panel, it takes about 1 minute to display the correct remaining battery time.

The battery pack discharges too quickly.

- Ambient temperature is too high or low, or the battery pack has not been charged enough. This is not a malfunction.
- Fully charge the battery again. If the problem persists, the battery may be worn-out. Replace it with a new one (p. 18, 108).

The picture remains on the LCD screen.

- This occurs if you disconnect the DC plug or remove the battery pack without turning off the power first. This is not a malfunction.

The picture in the viewfinder is not clear.

- Move the viewfinder lens adjustment lever until the picture appears clearly (p. 22).

The picture in the viewfinder has disappeared.

- If you change [VF POWERMODE] to [AUTO], the finder light remains off while the LCD panel is open (p. 67).

The supplied Remote Commander does not function.

- Set [REMOTE CTRL] to [ON] (p. 75).
- Remove any obstructions between the Remote Commander and the remote sensor.
- Keep strong light sources, such as sunlight or overhead lighting, away from the remote sensor, otherwise the Remote Commander may not function properly.
- Insert a fresh battery in the compartment with its +/- terminals matching those of the compartment (p. 123).

Another VCR malfunctions when you use the supplied Remote Commander.

- Select a commander mode other than VTR 2 for your VCR.
- Cover the sensor of your VCR with black paper.

Cassette tapes/"Memory Stick Duo"


The cassette cannot be ejected from the compartment.

- Make sure the power source (battery pack or AC Adaptor) is connected correctly (p. 18).
- Moisture condensation has occurred inside the camcorder (p. 111).

The Cassette Memory indicator or title display does not appear while using a cassette with Cassette Memory.

- This camcorder does not support Cassette Memory, so the indicator does not appear.

The remaining tape indicator is not displayed.

- Set [ REMAINING] to [ON] to always display the remaining tape indicator (p. 68).

The cassette is noisier during rewinding or fast-forwarding.

- When using the AC Adaptor, rewind/fast forward speed increases (compared with battery operation) and therefore increases noise. This is not a malfunction.

You cannot delete pictures or format the “Memory Stick Duo.”

- Release the lock on the write-protect tab of the “Memory Stick Duo” if there is one (p. 107).
- The pictures are protected. Release the protect function on your computer, etc.

Recording

The recording does not start when you press the REC START/STOP button.

- Slide the POWER switch to CAMERA (p. 28).
- The tape has reached the end. Rewind it, or insert a new cassette.
- Set the write-protect tab of the cassette to REC or insert a new cassette (p. 105).
- The tape is stuck to the drum due to moisture condensation. Remove the cassette and leave your camcorder for at least 1 hour, then re-insert the cassette (p. 111).




The handle zoom does not work.

- Set the handle zoom switch to H or L (p. 33).

You cannot record on the “Memory Stick Duo.”

- Release the lock on the write-protect tab of the “Memory Stick Duo” if there is one (p. 107).
- The “Memory Stick Duo” is full. Delete unnecessary pictures recorded on the “Memory Stick Duo” (p. 82).
- Format the “Memory Stick Duo” on your camcorder or insert another “Memory Stick Duo” (p. 72).
- You cannot record still images on the “Memory Stick Duo” with:
 - While executing [FADER]
 - [SMTH SLW REC]
 - When the shutter speed is set to slower than 1/60
 - While checking/executing shot transition
- Set [PHOTO/EXP.FOCUS] to [PHOTO](p. 74).

You cannot record a smooth transition on a tape from the last recorded scene to the next.

- Perform End search (p. 44).
- Do not remove the cassette (the picture will be recorded continuously without a break even when you turn the power off).
- Do not record pictures in the HDV and DV formats on the same tape.
- Do not record pictures in SP mode and LP mode on the same tape. 
- Avoid stopping then recording a movie in the LP mode. 
- When [QUICK REC] is set to [ON], you cannot record a smooth transition (p. 75). 

The shutter sound is not heard when you record a still image.

- Set [BEEP] to [ON] (p. 75).
- There is no shutter sound while during movie shooting.

End search does not work.

- Do not eject the cassette after recording (p. 44).
- There is nothing recorded on the cassette.
- There is a blank section between recorded sections of the tape. This is not a malfunction.

Auto focus does not function.

- Press the FOCUS button to set to auto focus (p. 34).
- If auto focus is difficult to use, focus manually (p. 34).

Menu items are grayed out or does not work.

- You cannot select gray out display items in the current recording/playback situation.
- There are some functions you cannot activate simultaneously. The following list shows examples of unworkable combinations of functions and menu items.

Cannot use	Situation
[BACK LIGHT]	[EXPOSURE] is set to manual. Two or more of iris/gain/shutter speed are set manually. Iris, gain, and shutter speed are all set manually.
[SPOTLIGHT]	[EXPOSURE] is set to manual. Two or more of iris/gain/shutter speed are set manually. Iris, gain, and shutter speed are all set manually.
[CNTRST ENHCR]	During [BACK LIGHT].
[D.EXTENDER]	During [SMTH SLW REC].
[AE SHIFT]	[EXPOSURE] is set to manual. Two or more of iris/gain/shutter speed are set manually. iris, gain, and shutter speed are all set manually.
[HISTOGRAM]	Displaying [COLOR BAR].
[SMTH SLW REC]	Displaying [COLOR BAR]. During [SHOT TRANS].

Shutter speed, gain, white balance or iris cannot be adjusted manually.

- Set the AUTO LOCK switch to the center position to release the auto lock mode.

Tiny spots in white, red, blue, or green appear on the screen.

- This phenomenon appears when using a slow shutter speed (p. 37). This is not a malfunction.

The subjects passing by the frame very fast appear crooked.

- This is called the focal plane phenomenon. This is not a malfunction. Because of the way that the image device (CMOS sensor) reads out image signals, the subjects passing by the frame rapidly might appear crooked depending on the recording conditions.
-

The screen picture is bright, and the subject does not appear on the screen.

- Cancel the BACK LIGHT function (p. 62).
-

The screen picture is dark, and the subject does not appear on the screen.

- Press and hold the DISPLAY/BATT INFO button for a few seconds to turn on the backlight (p. 22).
-

The picture appears too bright, or horizontal bands or changes in color occurs.

- This occurs when recording pictures under a fluorescent lamp, sodium lamp, or mercury lamp. This is not a malfunction.
-

Black bands appear when you record a TV screen or computer screen.

- This can be improved by changing the shutter speed (p. 37).
-

Fine patterns flicker, diagonal lines look jagged.

- Adjust [SHARPNESS] to [0] side (p. 40).
-

Playback

If you are playing back pictures stored on a “Memory Stick Duo,” refer also to the Cassette tapes/“Memory Stick Duo” section (p. 93).

You cannot play back tape.

- Slide the POWER switch to turn on the VCR.
 - Rewind the tape (p. 31).
-

Image data stored on a “Memory Stick Duo” cannot be played back correctly.

- Image data cannot be played back if you have modified file names or folders, or have edited the data on a computer (In this case, the file name flashes). This is not a malfunction (p. 108).
 - Pictures recorded on other devices may not be played back correctly. This is not a malfunction.
-

The data file name is displayed incorrectly, or flashing.

- The file is damaged.
- The file format is not supported on your camcorder (p. 106).
- Only the file name is displayed if the directory structure does not conform to the universal standard.

Horizontal lines appear on the picture. The displayed pictures are not clear or do not appear.

- Video head is dirty. Clean the head using the cleaning cassette (optional) (p. 112).

You cannot hear the sound recorded with 4CH MIC REC on another camcorder.**DV**

- Set [DV AUDIO MIX] (p. 64).

No sound or only a low sound is heard.

- Turn up the volume (p. 32).
- Set [MULTI-SOUND] to [STEREO] (p. 64).
- Set [DV AUDIO MIX] (p. 64).
- Pictures recorded using [SMTH SLW REC] do not have sounds.

The picture or sound breaks off.

- The tape was recorded in both of the HDV and DV formats. This is not a malfunction.

The movies freeze for a while, or the sound breaks off.

- This occurs if the tape or video head is dirty (p. 112).
- Use the Sony mini DV cassette.

“---” is displayed on the screen.

- The tape you are playing was recorded without setting the date and time.
- A blank section on the tape is being played.
- The data code on a tape with a scratch or noise cannot be read.

Noises appear and **PAL or **50i** is displayed on the screen.**

- The tape was recorded in a TV color system other than that of your camcorder (NTSC). This is not a malfunction.

Date Search does not work correctly.

- Be sure to record more than 2 minutes after the date changed. If one day's recording is too short, your camcorder may not accurately find the point where the recording date changes.
- There is a blank section between recorded sections of the tape. This is not a malfunction.

No picture appears during End search or Rec review.

- The tape was recorded in both HDV and DV formats. This is not a malfunction.

New sound added to a recorded tape on another camcorder is not heard. DV

- Adjust [DV AUDIO MIX] from [ST1] (original sound) side until the sound is heard appropriately (p. 64).

4ch-12b appears on the LCD screen.

- This appears when you play back a tape recorded on other recording devices using a 4ch microphone (4CH MIC REC). This camcorder does not comply with the 4ch microphone recording standard.

Connecting to TV

You cannot view the picture on the TV connected with the i.LINK cable.

- You cannot view the picture in the HD (high definition) quality on the TV if an i.LINK jack of the TV is not compatible with the HDV1080i specification (p. 51). Refer to the instruction manuals supplied with your TV.
- Down convert the pictures recorded in HDV format and play back in DV format (SD image quality) (p. 70).
- Play back pictures using another connecting cable (p. 51).

You cannot hear the sound on the TV connected with the S VIDEO plug (S VIDEO channel) or component video plug.

- If you are using an S VIDEO plug or component video plug, make sure the red and white plugs of the A/V connecting cable are also connected (p. 51).

You cannot view the picture or hear the sound on the TV connected with the component video cable.

- Set [COMPONENT] according to the requirements of the connected device (p. 70).
- When you are using the component video cable, make sure the red and white plugs of the A/V connecting cable are connected (p. 51).

You cannot view the picture or hear the sound on the TV connected with the HDMI cable.

- Pictures in the HDV format are not output from the HDMI OUT jack, if copyright protection signals are recorded in the pictures.
- DV format pictures input to the camcorder via i.LINK cable (p. 76) cannot be output.
- This occurs if you record on a tape in both HDV and DV formats. Disconnect and connect the HDMI cable, or slide the POWER switch to turn on your camcorder again.

The picture appears distorted on the 4:3 TV.

- This happens when viewing a picture recorded in the 16:9 (wide) mode on a 4:3 TV. Set [TV TYPE] and play back the picture.

Black zone appears at top and bottom of a 4:3 TV screen.

- This happens when viewing a picture recorded in the 16:9 (wide) mode on a 4:3 TV. This is not a malfunction.

Dubbing/Editing/Connecting to other devices**Pictures from connected devices cannot be zoomed.**

- You cannot zoom pictures from connected devices on your camcorder (p. 33).

Time code and other information appear on the display of the connected device.

- Set [DISP OUTPUT] to [LCD PANEL] while connected with an A/V connecting cable (p. 68).

You cannot dub correctly using the A/V connecting cable.

- The A/V connecting cable is not connected properly.
Make sure that the A/V connecting cable is connected to the input jack of the other device for dubbing a picture from your camcorder.

When connected using an i.LINK cable, no picture appears on the monitor screen during dubbing.

- Set [VCR HDV/DV] according to the requirements of the connected device (p. 69).

You cannot add sound to the recorded tape.

- You cannot add sound to the recorded tape on this unit.

You cannot dub correctly using the HDMI cable.

- You cannot dub pictures using the HDMI cable.

Still pictures cannot be dubbed from a tape to a “Memory Stick Duo.”


- You cannot capture pictures at all or good-quality pictures from the tape that has been used repeatedly for recording.

When you copy a movie shot in wide (16:9) format using an i.LINK cable, the screen stretches vertically.

- You cannot output the aspect ratio setting using an i.LINK cable. Set the aspect ratio of the TV instead.
- Connect using an AV cable instead.

Connecting to a computer



The computer does not recognize your camcorder. [USB](#) [i.LINK](#)

- Disconnect the cable from the computer and camcorder, then connect it again securely.
- Disconnect USB devices other than the keyboard, the mouse, and the camcorder from the  (USB) jack on the computer.
- Disconnect the cable from the computer and camcorder, restart the computer, then connect them again correctly.

You cannot view or copy the video recorded on a tape on the computer. [i.LINK](#)

- Disconnect the cable from the computer, then connect it again.
- Connect the i.LINK cable because you cannot copy video with the USB cable.

You cannot view or copy still images recorded on a “Memory Stick Duo” on the computer screen. [USB](#)

- Insert a “Memory Stick Duo” in the correct direction, then push it all the way in.
- You cannot use an i.LINK cable. Connect the camcorder and the computer using the USB cable.
- Slide the POWER switch to turn on the VCR and set [USB SELECT] to  Memory Stick] (p. 74).
- The computer does not recognize the “Memory Stick Duo” during camcorder operations such as tape playback or editing. Finish any camcorder operations and then connect the camcorder to the computer again.
- Disconnect the USB device other than the keyboard, the mouse, and the camcorder from the  (USB) jack on the computer.

Your computer freezes.

- Set [VCR HDV/DV] correctly according to the connected device (p. 69).
- Disconnect the cable from your computer and camcorder. Reboot your computer, and connect your computer and camcorder following the steps in the correct order (p. 88).

Warning indicators and messages

Self-diagnosis display/Warning indicators

If indicators appear on the LCD screen or in the viewfinder, check the following. In the viewfinder, check the following. Some symptoms you can fix by yourself. If the problem persists even after you have tried a couple of times, contact your Sony dealer or local authorized Sony service facility.

C: (or E:) □□:□□ (Self-diagnosis display)

C:04:□□

- The battery pack is not an “InfoLITHIUM” battery pack. Use an “InfoLITHIUM” battery pack (p. 108).
- Connect the DC plug of the AC Adaptor to the DC IN jack of your camcorder securely (p. 18).

C:21:□□

- Moisture condensation has occurred. Remove the cassette and leave your camcorder for at least 1 hour, then re-insert the cassette (p. 111).

C:22:□□

- Clean the head using a cleaning cassette (optional) (p. 112).

C:31:□□ / C:32:□□

- Symptoms that are not described above have occurred. Remove and insert the cassette, then operate your camcorder again. Do not perform this procedure if moisture condensation has occurred (p. 111).
- Remove the power source. Reconnect it and operate your camcorder again.
- Change the cassette. Press the RESET button (p. 122), and operate your camcorder again.


E:61:□□ / E:62:□□ / E:91:□□

- Contact your Sony dealer or local authorized Sony service facility. Inform them of the 5-digit code, which starts from “E.”

101-1001(Warning indicator pertaining to files)

- The file is damaged.
- The file is unreadable (p. 108).

(Battery level warning)

- The battery pack is nearly used up.
- Depending on the operating environment, or battery conditions,  may flash, even if there are approximately 5 to 10 minutes remaining.

(Moisture condensation warning)*

- Eject the cassette, remove the power source, and then leave it for about 1 hour with the cassette lid open (p. 111).

(Warning indicator pertaining to “Memory Stick Duo”)

- A “Memory Stick Duo” is not inserted (p. 26).

(Warning indicators pertaining to “Memory Stick Duo” formatting)*

- The “Memory Stick Duo” is damaged.
- The “Memory Stick Duo” is not formatted correctly (p. 72, 106).

(Warning indicators pertaining to unsupported “Memory Stick Duo”)

- A “Memory Stick Duo” that cannot be used in your camcorder is inserted (p. 106).

(Warning indicators pertaining to the tape)

Slow flashing:

- There is less than 5 minutes remaining on the tape.
- No cassette is inserted.*
- The write-protect tab on the cassette is set to lock (p. 105).*

Warning indicators and messages (Continued)

Fast flashing:

- The tape has run out.*

▲ (Eject cassette warning)*

Slow flashing:

- The write-protect tab on the cassette is set to lock (p. 105).

Fast flashing:

- Moisture condensation has occurred (p. 111).
- The self-diagnosis display code is displayed (p. 101).

☐ Ⓜ (Warning indicator pertaining to the write-protect of the “Memory Stick Duo”)*

- The write-protect tab on the “Memory Stick Duo” is set to lock (p. 107).

* You hear a melody when the warning indicators appear on the screen (p. 101).

Description of warning messages

If messages appear on the screen, follow the instructions.

■ Battery/Power

Use the “InfoLITHIUM” battery pack
(p. 108)

■ Moisture condensation

☐▲ Moisture condensation. Eject the cassette (p. 111)

☐ Moisture condensation. Turn off for 1H. (p. 111)

■ Cassette/Tape

▲ Reinsert the cassette. (p. 26)

- Check if the cassette is damaged.

☐▲ The tape is locked - check the tab. (p. 105)

Cannot record due to copyright protection. (p. 105)

■ “Memory Stick Duo”

☐ Incompatible type of Memory Stick.

- A type of “Memory Stick Duo” incompatible with your camcorder is inserted (p. 106).

Protected file. Cannot delete.

- Cancel file protection using your computer.

☐ Reinsert the Memory Stick.
(p. 26, 106)

- Reinsert the “Memory Stick Duo” a few times. If even then the indicator flashes, the “Memory Stick Duo” might be damaged. Try with another “Memory Stick Duo.”

☐ This Memory Stick is not formatted correctly.

- Check the format, then format the “Memory Stick Duo” as necessary (p. 72, 106).

Memory Stick folders are full.

- You cannot create folders exceeding 999MSDCF. You cannot delete created folders using your camcorder.
- You will have to format the “Memory Stick Duo” (p. 72), or delete them using your computer.

Cannot record still images on Memory Stick.

- You cannot record still images in the following cases:
 - When the shutter speed is 1/60 or less
 - While using [FADER]
 - While using [SMTH SLW REC]
 - While checking or executing shot transition

■ PictBridge compliant printer

Check the connected device.

- Switch off the printer and switch it on again, then disconnect the USB cable and reconnect it.

Error. Cancel the task.

- Switch off the printer and switch it on again, then disconnect the USB cable and reconnect it.

■ Others

Change to correct tape format.

- The pictures cannot be played back because of an incompatible format.

**No output image in “VCR HDV/DV”.
Change format.**


- Stop playback or signal input, or change [VCR HDV/DV] setting (p. 69).

⊗  Dirty video head. Use a cleaning cassette. (p. 112)

Using your camcorder abroad

Power supply

You can use your camcorder in any country/region using the AC Adaptor supplied with your camcorder within the AC 100 V to 240 V, 50/60 Hz range. Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet [b].

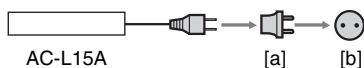

On TV color systems

Your camcorder is NTSC system, so its picture can only be viewed on an NTSC system TV with an AUDIO/VIDEO input jack.

System	Used in
NTSC	Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Guyana, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.
PAL	Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, United Kingdom, etc.
PAL - M	Brazil
PAL - N	Argentina, Paraguay, Uruguay.
SECAM	Bulgaria, France, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

Viewing HDV format pictures recorded in HDV format HDV1080i

You need an HDV1080i compatible TV (or monitor) with a component jack and AUDIO/VIDEO input jack. A component video cable and A/V connecting cable are also needed.

Viewing DV format pictures recorded in DV format DV

You need a TV with the AUDIO/VIDEO input jack. A connecting cable is also needed.

Simple setting of the clock by time difference

When you are abroad, you can easily adjust the clock to the local time by setting the time difference. Select [WORLD TIME], then set the time difference (p. 74).

HDV format and recording/playback

Your camcorder is capable of recording in both HDV and DV formats.

You can use mini DV format cassettes only.

Use a cassette with the ^{Mini}DV mark.

Your camcorder is not compatible with cassettes with Cassette Memory.

What is the HDV format?

The HDV format is a video format developed to record and play back digital high definition (HD) video signals on a DV cassette.

Your camcorder adopts the Interlace mode with 1,080 effective scan lines of screen ruling (1080i, number of pixels 1,440 × 1,080 dots).


The video bit rate for recording is about 25 Mbps.

i.LINK is adopted for the digital interface, enabling a digital connection with an HDV compatible TV or computer.

- HDV signals are compressed in MPEG2 format, which is adopted in BS (broadcast satellite) digital, terrestrial digital HDTV broadcastings, in Blu-ray Disc recorders, etc.

Playback

Your camcorder can play back pictures in both the DV format and HDV1080i specification.

Your camcorder can play back pictures recorded in the HDV 720/30p format, but cannot output it from the  HDV/DV interface (i.LINK).

To prevent a blank section from being created on the tape

Go to the end of the recorded section using [END SEARCH] (p. 44) before you begin the next recording when you have played back the tape.

Copyright signal

■ When you play back

If the cassette you play back on your camcorder contains copyright signals, you cannot copy it to a tape in another video camera connected to your camcorder.

■ When you record

You cannot record software on your camcorder that contains copyright control signals for copyright protection of software. [Cannot record due to copyright protection.] appears on the LCD screen, or on the viewfinder if you try to record such software. Your camcorder does not record copyright control signals on the tape when it records.


Notes on use

■ When not using your camcorder for a long time

Remove the cassette and store it.

■ To prevent accidental erasure

Slide the write-protect tab on the cassette to set it to SAVE.

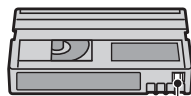

REC: The cassette can be recorded.


SAVE: The cassette cannot be recorded (write-protected).



HDV format and recording/ playback (Continued)

■ When labeling the cassette

Be sure to place the label only on the locations shown in the following illustration so as not to cause a malfunction of your camcorder.

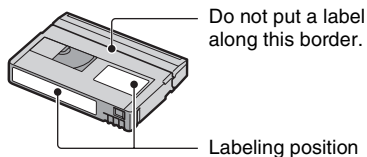


■ After using the cassette

Rewind the tape to the beginning to avoid distortion of the picture or the sound. The cassette should then be put in its case, and stored in an upright position.

■ When cleaning the gold-plated connector

Generally, clean the gold-plated connector on a cassette with a cotton-wool swab after every 10 times it has been ejected. If the gold-plated connector on the cassette is dirty or dusty, the remaining tape indicator may not show correctly.

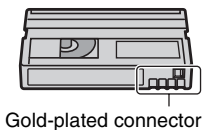

On Sony HDV1080i compliant TVs



An HDV format compatible TV with the component input jack is required to view playback pictures recorded in the HDV format.

About the “Memory Stick”

A “Memory Stick” is a compact, portable IC recording medium with a large data capacity.

You can use only a “Memory Stick Duo,” which is about the half size of a standard “Memory Stick” in your camcorder. However, appearance on the list below does not guarantee the operation of all types of “Memory Stick Duo” in your camcorder.

Types of “Memory Stick”	Recording/ Playback
“Memory Stick” (without MagicGate)	—
“Memory Stick Duo” ^{*1} (without MagicGate)	○
“MagicGate Memory Stick”	—
“Memory Stick Duo” ^{*1} (with MagicGate)	○ ^{*2*3}
“MagicGate Memory Stick Duo” ^{*1}	○ ^{*3}
“Memory Stick PRO”	—
“Memory Stick PRO Duo” ^{*1}	○ ^{*2*3}

^{*1} A “Memory Stick Duo” is about half the size of a standard “Memory Stick.”

^{*2} The types of “Memory Stick” that support high speed data transfer. The speed of data transfer varies depending on the device to be used.

^{*3} “MagicGate” is a copyright protection technology that records and transfers the contents in an encrypted format. Note that data that uses “MagicGate” technology cannot be recorded or played on your camcorder.

- Still image format: Your camcorder compresses and records image data in the JPEG (Joint Photographic Experts Group) format. The file extension is “.JPG.”
- File names of still images:
 - 101-0001: This file name appears on the screen of your camcorder.
 - DSC00001.JPG: This file name appears on the display of a computer.
- A “Memory Stick Duo” formatted by a computer (Windows OS/Mac OS) does not have guaranteed compatibility with your camcorder.

- Data read/write speed may vary depending on the combination of the “Memory Stick” and “Memory Stick” compliant product you use.

On a “Memory Stick Duo” with a write-protect tab

You can prevent accidental erasure of images when you slide the write-protect tab on the “Memory Stick Duo” with a small tapered object, to the write-protect position.

Notes on use

Damaged or lost image data will not be compensated for, and may occur in the following cases:

- If you eject the “Memory Stick Duo,” turn the power off on your camcorder, or remove the battery pack for replacement while your camcorder is reading or writing image files on the “Memory Stick Duo” (while the access lamp is lit or flashing).
- If you use the “Memory Stick Duo” near magnets or magnetic fields.

It is recommended you make a back-up of important data on the hard disk of a computer.

■ On handling a “Memory Stick”

Keep the following in mind when handling a “Memory Stick Duo.”

- Be careful not to apply excessive force when writing on a memo area on a “Memory Stick Duo.”
- Do not attach a label or the like on a “Memory Stick Duo” or a Memory Stick Duo adaptor.
- When you carry or store a “Memory Stick Duo,” put it in its case.
- Do not touch, or allow metallic objects to come into contact with the terminals.
- Do not bend, drop or apply strong force to the “Memory Stick Duo.”
- Do not disassemble or modify the “Memory Stick Duo.”
- Do not let the “Memory Stick Duo” get wet.
- Be careful to keep “Memory Stick Duo” media out of the reach of small children. There is danger that a child might swallow it.

- Do not insert anything other than a “Memory Stick Duo” into the “Memory Stick Duo” slot. Doing so may cause a malfunction.

■ On a location for use

Do not use or keep the “Memory Stick Duo” in the following locations.

- Places subject to extremely high temperature, such as a car parked outside in the summer.
- Places under direct sunlight.
- Places with extremely high humidity or subject to corrosive gases.

■ On the Memory Stick Duo adaptor

After inserting a “Memory Stick Duo” into the Memory Stick Duo adaptor, you can use it with a standard “Memory Stick” compliant device.

- When using a “Memory Stick Duo” with a “Memory Stick” compliant device, be sure to insert the “Memory Stick Duo” into a Memory Stick Duo adaptor.
- When inserting a “Memory Stick Duo” into a Memory Stick Duo adaptor, make sure the “Memory Stick Duo” is inserted facing in the correct direction, then insert it all the way in. Note that improper use may cause a malfunction. Also, if you force the “Memory Stick Duo” into the Memory Stick Duo adaptor in the wrong direction, it may be damaged.
- Do not insert a Memory Stick Duo adaptor without a “Memory Stick Duo” attached. Doing so may result in malfunctions of the unit.

■ On a “Memory Stick PRO Duo”


- The maximum memory capacity of a “Memory Stick PRO Duo” that can be used on your camcorder is 4 GB.

About the “Memory Stick” (Continued)

On image data compatibility

- Image data files recorded on a “Memory Stick Duo” by your camcorder conform to the “Design rule for Camera File system” universal standard established by the JEITA (Japan Electronics and Information Technology Industries Association).
- On your camcorder, you cannot play back still images recorded on other devices (DCR-TRV900 or DSC-D700/D770) that do not conform to the universal standard (these models are not sold in some regions).
- If you cannot use a “Memory Stick Duo” that has been used with another device, format it with your camcorder (p. 72). Note that formatting erases all information on the “Memory Stick Duo.”
- You may not be able to play back images with your camcorder:
 - When playing back image data modified on your computer.
 - When playing back image data recorded with other devices.

About the “InfoLITHIUM” battery pack

This unit is compatible with an “InfoLITHIUM” battery pack (L series). Your camcorder operates only with an “InfoLITHIUM” battery pack. “InfoLITHIUM” L series battery packs have the  mark.

What is an “InfoLITHIUM” battery pack?

An “InfoLITHIUM” battery pack is a lithium-ion battery pack that has functions for communicating information related to operating conditions between your camcorder and an optional AC Adaptor/charger.

The “InfoLITHIUM” battery pack calculates the power consumption according to the operating conditions of your camcorder, and displays the remaining battery time in minutes.

With an AC Adaptor/charger, the remaining battery time and charging time appear.

To charge the battery pack


- Be sure to charge the battery pack before you start using your camcorder.
- We recommend charging the battery pack in an ambient temperature of between 10 °C to 30 °C (50 °F to 86 °F) until the CHARGE lamp turns off. If you charge the battery pack outside of this temperature range, you may not be able to charge it efficiently.
- After charging is complete, disconnect the cable from the DC IN jack on your camcorder or remove the battery pack.

To use the battery pack effectively

- Battery pack performance decreases when the surrounding temperature is 10 °C (50 °F) or below, and the length of time you can use the battery pack becomes shorter. In that case, do one of the following to use the battery pack for a longer time.
 - Put the battery pack in a pocket to warm it up, and insert it in your camcorder right before you start taking shots.

- Use a large capacity battery pack: NP-F770/F970 (optional).
- Frequent use of the LCD screen or a frequent playback, fast forward or rewind operation wears out the battery pack faster.
We recommend using a large capacity battery pack: NP-F770/F970.
- Be sure to set the POWER switch to OFF (CHG) when not recording or playing back on your camcorder. The battery pack is also consumed when your camcorder is in recording standby or playback pause.
- Have spare battery packs ready for two or three times the expected recording time, and make trial recordings before making the actual recording.
- Do not expose the battery pack to water. The battery pack is not water resistant.

About the remaining battery time indicator

- When the power goes off even though the remaining battery time indicator indicates that the battery pack has enough power to operate, charge the battery pack fully again. Remaining battery time will be indicated correctly. Note, however, that the battery indication will not be restored if it is used in high temperatures for a long time, or if left in a fully charged state, or when the battery pack is frequently used. Use the remaining battery time indication as a rough guide only.
- The  mark that indicates low battery flashes even if there are still 5 to 10 minutes of battery time remaining, depending on the operating conditions or ambient temperature.

About storage of the battery pack

- If the battery pack is not used for a long time, fully charge the battery pack and use it up on your camcorder once a year to maintain proper function. To store the battery pack, remove it from your camcorder and put it in a dry, cool place.
- To discharge the battery pack on your camcorder completely, leave your camcorder in tape recording standby until the power goes off (p. 21).

About battery life

- Battery capacity decreases over time and through repeated use. If decreased usage time between charges becomes significant, it is probably time to replace it with a new one.
- Each battery's life is governed by storage, operating and environmental conditions.

About i.LINK

The HDV/DV interface on this unit is an i.LINK-compliant interface. This section describes the i.LINK standard and its features.


What is i.LINK?

i.LINK is a digital serial interface for transferring digital video, digital audio, and other data to other i.LINK-compatible devices. You can also control other devices using the i.LINK.

i.LINK-compatible devices can be connected using an i.LINK cable. Possible applications are operations and data transactions with various digital AV devices.

When two or more i.LINK-compatible devices are daisy-chained with the unit, operation becomes possible from any device in the chain. Note that operation method may vary, or data transactions may not be possible, depending on specifications and characteristics of the connected devices.

🔌 Notes

- Normally, only one device can be connected to this unit with an i.LINK cable. When connecting this unit to an HDV/DV compatible device having two or more  HDV/DV interfaces, refer to the operating instructions of the device to be connected.
- i.LINK is a more familiar term for the IEEE 1394 data transport bus proposed by Sony, and is a trademark approved by many corporations.
- IEEE 1394 is an international standard standardized by the Institute of Electrical and Electronics Engineers.

About the i.LINK Baud rate

i.LINK's maximum baud rate varies according to the device. There are 3 types.

S100 (approx. 100Mbps*)
S200 (approx. 200Mbps)
S400 (approx. 400Mbps)

The baud rate is listed under "Specifications" in the operating

instructions of each piece of equipment. It is also indicated near the i.LINK interface on some devices.

The baud rate may differ from the indicated value when the unit is connected to a device with a different maximum baud rate.

* What is Mbps?

Mbps stands for "megabits per second," or the amount of data that can be sent or received in one second. For example, a baud rate of 100 Mbps means that 100 megabits of data can be sent in one second.

To use i.LINK functions on this unit

For details on how to dub when this unit is connected to other video devices having an i.LINK interface, see page 78.

This unit can also be connected to other i.LINK-compatible devices made by Sony (for example, a VAIIO series personal computer) as well as to video devices. Some i.LINK compatible video devices, such as Digital Televisions, DVD, MICROMV or HDV recorders/players are not compatible with this unit. Before connecting to other devices, be sure to confirm whether the device is compatible with an HDV/DV device or not. For details on precautions and compatible application software, refer also to the operating instructions for the device to be connected.

🔌 Note

- When connecting a device with an i.LINK terminal to your camcorder via an i.LINK cable, switch off the device and unplug it from the power socket before plugging in or unplugging the i.LINK cable.

About the required i.LINK cable

Use the Sony i.LINK 4-pin-to-4-pin cable (during HDV/DV dubbing).

Maintenance and precautions

On use and care

- Do not use or store the camcorder and accessories in the following locations.
 - Anywhere extremely hot or cold. Never leave them exposed to temperatures above 60 °C (140 °F), such as under direct sunlight, near heaters or in a car parked in the sun. They may malfunction or become deformed.
 - Near strong magnetic fields or mechanical vibration. The camcorder may malfunction.
 - Near strong radio waves or radiation. The camcorder may not be able to record properly.
 - Near AM receivers and video equipment. Noise may occur.
 - On a sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired.
 - Near windows or outdoors, where the LCD screen, the viewfinder, or the lens may be exposed to direct sunlight. This damages the inside of the viewfinder or the LCD screen.
 - Anywhere very humid.
- Operate your camcorder on DC 7.2 V (battery pack) or DC 8.4 V (AC Adaptor).
- For DC or AC operation, use the accessories recommended in these operating instructions.
- Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. Sometimes this malfunction cannot be repaired.
- If any solid object or liquid gets inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping or stepping on the product. Be particularly careful of the lens.
- Keep the POWER switch setting to OFF (CHG) when you are not using your camcorder.
- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- When disconnecting the power cord, pull it by the plug and not the cord.
- Do not damage the power cord such as by placing anything heavy on it.
- Keep metal contacts clean.
- Keep the Remote Commander and button-type battery out of children's reach. If the battery is

accidentally swallowed, consult a doctor immediately.

- If the battery electrolytic liquid has leaked,
 - consult your local authorized Sony service facility.
 - wash off any liquid that may have contacted your skin.
 - if any liquid gets in your eyes, wash with plenty of water and consult a doctor.

■ When not using your camcorder for a long time


 
- Periodically turn on the camcorder and play a cassette for about 3 minutes.
- Use up the battery pack completely before storing it.

Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder, on the surface of the tape, or on the lens. In this state, the tape may stick to the head drum and be damaged or your camcorder may not operate correctly. If there is moisture inside your camcorder, [Moisture condensation. Eject the cassette] or [Moisture condensation. Turn off for 1H.] appears. The indicator will not appear when the moisture condenses on the lens.

■ If moisture condensation has occurred

None of the functions except cassette ejection will work. Eject the cassette, turn off your camcorder, and leave it for about one hour with the cassette lid open. Your camcorder can be used again when both of the following conditions are met:

- The warning message does not appear when the power is turned on.
- Neither  nor  flashes when a cassette is inserted and the video operation buttons are pressed.

If moisture starts to condense, your camcorder sometimes cannot detect condensation. If this happens, the cassette is sometimes not ejected for 10 seconds after the cassette lid is opened. This is not a

Maintenance and precautions (Continued)

malfunction. Do not close the cassette lid until the cassette is ejected.

■ Note on moisture condensation

Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a humid place as shown below.

- When you bring your camcorder from a ski slope into a place warmed up by a heating device.
- When you bring your camcorder from an air conditioned car or room into a hot place outside.
- When you use your camcorder after a squall or a shower.
- When you use your camcorder in a hot and humid place.

■ How to avoid moisture condensation

When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and seal it tightly. Remove the bag when the air temperature inside the plastic bag has reached the surrounding temperature (after about one hour).

Video head

If you play back a tape recorded in HDV format, the image and sound may freeze for a while (about 0.5 seconds).

This occurs if the HDV signals cannot be recorded or played back correctly because of dirt on the tape or video head. Depending on the cassette, this fairly infrequently occurs even if the cassette is brand new or is not used a lot.

If this freezing point is created while playing back, you can solve this problem and see the pictures by rewinding after slightly forwarding. Such a freezing point cannot be recovered if it was created while recording.

To prevent such a problem, use the Sony mini DV cassette.

- If the following problem occurs, clean the video heads for 10 seconds with the Sony DVM-12CLD cleaning cassette (optional).

- Playback pictures do not move.
- Playback pictures do not appear.
- The sound breaks off.
- [X] [D] Dirty video head. Use a cleaning cassette. [] appears on the screen during recording.
- The following phenomenon occurs in HDV format.



The playback screen pauses.



The playback screen goes blank. (Solid blue screen)

- The following phenomenon occurs in DV format.



Block-noise appears.



The playback screen goes blank. (Solid blue screen)

- The video heads will be worn after long use. If you cannot obtain a clear image even after using a cleaning cassette (optional), the video heads may be worn out. Please contact your Sony dealer or local authorized Sony service facility to have the video heads replaced.

LCD screen

- Do not exert excessive pressure on the LCD screen, as it may cause damage.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

■ To clean the LCD screen

If fingerprints or dust make the LCD screen dirty, it is recommended you use a soft cloth to clean it. When you use the LCD Cleaning Kit (optional), do not apply the cleaning liquid directly to the LCD screen. Use cleaning paper moistened with the liquid.

On handling the casing

- If the casing is soiled, clean the camcorder body with a soft cloth lightly moistened with water, and then wipe the casing with a dry soft cloth.
- Avoid the following to avoid damage to the finish.
 - Using chemicals such as thinner, benzene, alcohol, chemical cloths, repellent, insecticide and sunscreen.
 - Handling with above substances on your hands.
 - Leaving the casing in contact with rubber or vinyl objects for a long period of time.

About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances:
 - When there are fingerprints on the lens surface.
 - In hot or humid locations
 - When the lens is exposed to salty air such as at the seaside.
- Store in a well-ventilated location subject to little dirt or dust.
- To prevent mold, periodically clean the lens as described above. It is recommended that you operate your camcorder about once a month to keep it in optimum state for a long time.

On charging the pre-installed rechargeable battery

Your camcorder has a pre-installed rechargeable battery to retain the date, time, and other settings even when the POWER switch is set to OFF (CHG). The pre-installed rechargeable battery is always charged while your camcorder is connected to the wall outlet via the AC Adaptor or while the battery pack is inserted. The rechargeable battery will be fully

discharged in about **3 months** if you do not use your camcorder at all without the AC Adaptor connected or the battery pack attached. Use your camcorder after charging the pre-installed rechargeable battery.

However, even if the pre-installed rechargeable battery is not charged, the camcorder operation will not be affected as long as you are not recording the date.


■ Procedures

Connect your camcorder to a wall outlet using the supplied AC Adaptor, and leave it with the POWER switch set to OFF (CHG) for more than 24 hours.


Removing dust from inside the viewfinder

1 Remove the viewfinder.

While sliding the viewfinder release lever to the left **1**, remove the viewfinder **2**.

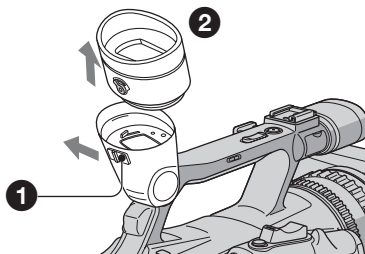

2 Remove dust from inside the viewfinder and the part shown below with a blower.

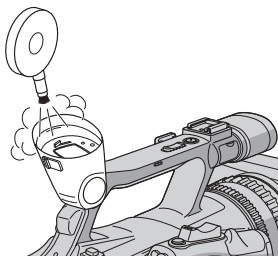

3 Attach the viewfinder following the reverse procedure of step 1.

Specifications

System

Video recording system (HDV)

2 rotary heads, Helical scanning system

Video recording system (DV)

2 rotary heads, Helical scanning system

Still image recording system

Exif Ver. 2.2*¹

Audio recording system (HDV)

Rotary heads, MPEG-1 Audio Layer -2,

Quantization: 16 bits (Fs 48 kHz, stereo)

transfer rate: 384 kbps

Audio recording system (DV)

Rotary heads, PCM system

Quantization: 12 bits (Fs 32 kHz, stereo 1, stereo 2), 16 bits (Fs 48 kHz, stereo)

Video signal

NTSC color, EIA standards

1080/60i specification

Usable cassette

Mini DV cassette with the ^{Mini} **DV** mark printed

Tape speed (HDV)

Approx. 18.81 mm/s

Tape speed (DV)

SP: Approx. 18.81 mm/s

LP: Approx. 12.56 mm/s

Recording/playback time (HDV)

60 min (using a DVM60 cassette)

Recording/playback time (DV)

SP: 60 min (using a DVM60 cassette)

LP: 90 min (using a DVM60 cassette)

Fast forward/rewind time

Approx. 2 min 40 s (using a DVM60 cassette and rechargeable battery pack)

Approx. 1 min 45 s (using a DVM60 cassette and AC Adaptor)

Viewfinder

Electric viewfinder (color)

Image device

4.5 mm (1/4 type) 3CMOS sensor

Recording Pixels (HDV/DV16:9 still recording):

Max. 1.20 Mega (1 440 × 810) pixels *²

Gross: Approx. 1 120 000 pixels

Effective (movie, 4:3):

778 000 pixels

Effective (movie, 16:9):

1 037 000 pixels

Effective (still, 4:3):

778 000 pixels

Effective (still, 16:9):

1 037 000 pixels

Lens

Carl Zeiss Vario-Sonnar T*

20 × (Optical), Approx. 30 × (Digital, when [D.EXTENDER] is set to [ON])

Focal length

f=3.9 ~ 78 mm (5/32 ~ 3 1/8 in.)

When converted to a 35 mm still camera *³

37.4 ~ 748 mm (1 1/2 ~ 29 1/2 in.) (16:9),

45.7 ~ 914 mm (1 13/16 ~ 36 in.) (4:3)

F1.6 ~ 2.8

Filter diameter: 62 mm (2 1/2 in.)

Color temperature

[INDOOR] (3 200 K),

[OUTDOOR] (5 800 K)

Minimum illumination

4 lx (lux) (F 1.6)

*¹“Exif” is a file format for still images, established by the JEITA (Japan Electronics and Information Technology Industries Association). Files in this format can have additional information such as your camcorder’s setting information at the time of recording.

*²The unique pixel array of Sony’s ClearVid CMOS Sensor and image processing system (new Enhanced Imaging Processor) allows for still image resolution equivalent to twice that

Specifications (Continued)

of the image sensor's effective pixel count.

*³The focal length figures are actual figures resulting from wide angle pixel read out.

Output connectors

AUDIO/VIDEO output

10-pin connector

Video signal: 1 Vp-p, 75 Ω (ohms), unbalanced

Luminance signal: 1 Vp-p, 75 Ω (ohms), unbalanced

Chrominance signal: 0.286 Vp-p, 75 Ω (ohms), unbalanced

Audio signal: 327 mV (at load impedance 47 k Ω (kilohms)), Output impedance with less than 2.2 k Ω (kilohms)

COMPONENT OUT jack

Y: 1 Vp-p, 75 Ω (ohms), unbalanced Pb/
Pr, Cb/Cr: +/- 350 mVp-p

HDMI OUT jack

TypeA (19-pin)

Input/Output connectors

LANC jack

Stereo mini-minijack (\varnothing 2.5 mm)

USB jack

mini-B

i.LINK HDV/DV jack

i.LINK interface (IEEE 1394, 4-pin connector S100)

LCD screen

Picture

8.8 cm (3.5 type, aspect ratio 16:9)

Total dot number

211 200 (960 \times 220)

General

Power requirements

DC 7.2 V (battery pack)

DC 8.4 V (AC Adaptor)

Average power consumption

During camera recording using the viewfinder with normal brightness:

HDV recording 5.9 W

DV recording 5.7 W

During camera recording using the LCD with normal brightness:

HDV recording 5.9 W

DV recording 5.7 W

Operating temperature

0 $^{\circ}$ C to + 40 $^{\circ}$ C (32 $^{\circ}$ F to 104 $^{\circ}$ F)

Storage temperature

-20 $^{\circ}$ C to + 60 $^{\circ}$ C (-4 $^{\circ}$ F to + 140 $^{\circ}$ F)

Dimensions (approx.)

145 \times 156 \times 322 mm

(5 3/4 \times 6 1/4 \times 12 3/4 in.) (w/h/d)

including the projecting parts

145 \times 156 \times 322 mm

(5 3/4 \times 6 1/4 \times 12 3/4 in.) (w/h/d)

including the projecting parts with battery pack NP-F570

Mass (approx.)

1.4 kg (3 lb 2 oz) main unit only

1.6 kg (3 lb 10 oz) including the NP-

F570 rechargeable battery pack,

cassette, and lens hood with lens cover

Supplied accessories

See page 16.

AC Adaptor AC-L15A

Power requirements

AC 100 - 240 V, 50/60 Hz

Current consumption

0.35 - 0.18 A

Power consumption

18 W

Output voltage

DC 8.4 V*

Operating temperature

0 °C to 40 °C (32 °F to 104 °F)

Storage temperature

-20 °C to +60 °C (-4 °F to +140 °F)

Dimensions (approx.)

56 × 31 × 100 mm

(2 1/4 × 1 1/4 × 4 in.) (w/h/d)

excluding the projecting parts

Mass (approx.)

190 g (6.7 oz) excluding the power cord

* See the label on the AC Adaptor for other specifications.

Rechargeable battery NP-F570

Maximum output voltage

DC 8.4 V

Output voltage

DC 7.2 V

Capacity

15.8 Wh (2 200 mAh)

Dimensions (approx.)

38.4 × 20.6 × 70.8 mm

(1 9/16 × 13/16 × 2 7/8 in.) (w/h/d)

Mass (approx.)

100 g (3.5 oz)

Operating temperature

0 °C to 40 °C (32 °F to 104 °F)

Type

Lithium ion

Design and specifications are subject to change without notice.

On trademarks

- “Handycam” and **HANDYCAM** are registered trademarks of Sony Corporation.
- “Memory Stick,”  “Memory Stick Duo,” “**MEMORY STICK DUO**,” “Memory Stick PRO Duo,” “**MEMORY STICK PRO DUO**,” “MagicGate,” “**MAGIC GATE**,” “MagicGate Memory Stick” and “MagicGate Memory Stick Duo” are trademarks of Sony Corporation.
- “InfoLITHIUM” is a trademark of Sony Corporation.
- i.LINK and  are trademarks of Sony Corporation.
- Mini **DV** Digital Video Cassette is a trademark.
- Microsoft, Windows, and Windows Media are trademarks or registered trademarks of U.S. Microsoft Corporation in the U.S. and other countries.
- Macintosh and Mac OS are trademarks of Apple Computer, Inc in the U.S. and other countries.
- HDV and the HDV logo are trademarks of Sony Corporation and Victor Company of Japan, Ltd.
- HDMI, HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Pentium is a trademark or registered trademark of Intel Corporation.


All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, TM and “®” are not mentioned in each case in this manual.




Notes on the License

ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206.


Identifying parts and controls

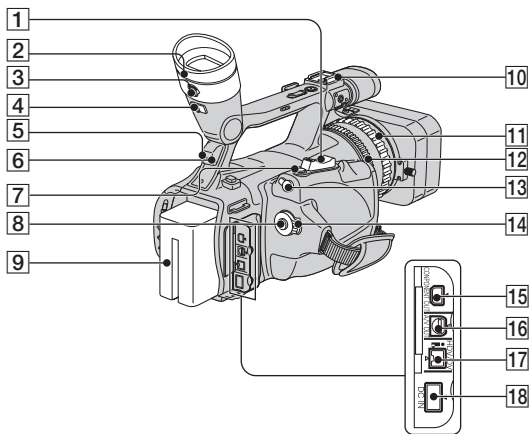The numbers in () are reference pages.



- | | |
|--|--|
| 1 Zoom lever (33) | 11 Focus ring (34) |
| 2 Viewfinder (22) | 12 Zoom ring (33) |
| 3 Viewfinder lens adjustment lever (22) | 13  LANC jack
The  LANC control jack is used for controlling the tape transport of video device and peripherals connected to it. |
| 4 Viewfinder release lever (114) | 14 POWER switch (21) |
| 5 Remote sensor (back) (123) | 15 COMPONENT OUT jack (51) |
| 6 Rec lamp (back) (28)
The rec lamp flashes if the remaining tape or battery is low. | 16 A/V OUT jack (51) |
| 7 PHOTO/EXPANDED FOCUS button (30) | 17  HDV/DV jack (51) |
| 8 REC START/STOP button (28) | 18 DC IN jack (18) |
| 9 Battery pack (18) | |
| 10 Accessory shoe | |

Identifying parts and controls (Continued)

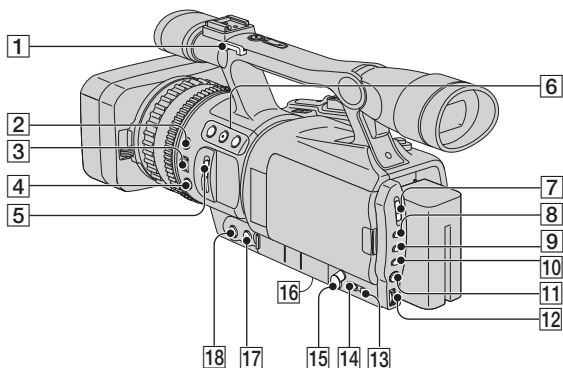

1 Hook for the shoulder strap (121)

2 EXPOSURE/IRIS button (35)

3 EXPOSURE/IRIS dial (35)

4 PUSH AUTO FOCUS button (34)

5 ND FILTER switch (36)

6 ASSIGN buttons (1/2/3)* (42)

7 AUTO LOCK switch (36)

8 GAIN button (37)

9 SHUTTER SPEED button (37)

10 WHT BAL (white balance) button (38)

11 MENU button (56)

12 SEL/PUSH EXEC dial (24)

13 STATUS CHECK button (47)

14 PICTURE PROFILE button (39)

15  (headphones) jack

When you use headphones, the speaker on your camcorder is silent.


16 Tripod receptacle


Make sure that the length of the tripod screw is less than 5.5 mm (7/32 inch). Otherwise, you cannot attach the tripod securely, and it may damage your camcorder.

17 FOCUS button* (34)

18 EXPANDED FOCUS button (35)


* The ASSIGN button 2, FOCUS button, and SHUTTER SPEED button have raised tactile dots for your convenience in locating the buttons.

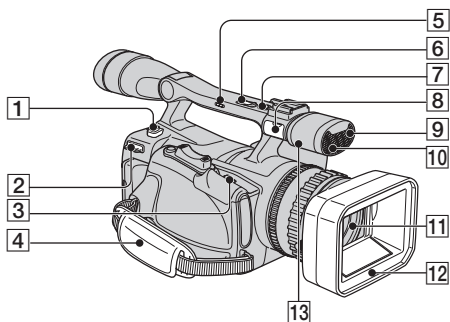


- 1** BATT RELEASE (battery release) button (19)
- 2** Hook for the shoulder strap (121)
- 3**  OPEN/EJECT lever (26)
- 4** Grip belt (21)
- 5** Handle zoom switch (H/L/OFF) (33)
- 6** Handle zoom button (33)
- 7** REC START/STOP button (28)
- 8** MIC jack
When a microphone is connected, it is dominantly used for sound recording over the internal microphone.
- 9** Rec lamp (front) (28)
The rec lamp flashes if the remaining tape or battery is low.
- 10** Remote sensor (front) (123)
- 11** Lens (8)
- 12** Lens hood with lens cover (17)
- 13** Microphone

To attach the shoulder strap

Attach the shoulder strap (optional) to the hooks for the shoulder strap.

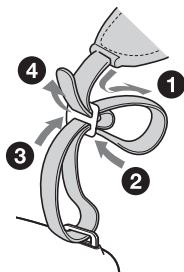

Identifying parts and controls (Continued)

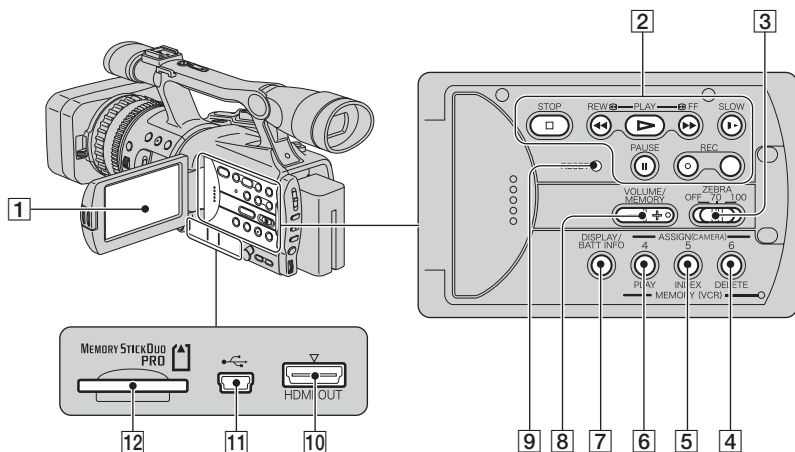


- 1 LCD screen (22)
- 2 Video control buttons (REW, PLAY*, FF, PAUSE, STOP, SLOW, REC) (31)
- 3 ZEBRA switch (37)
- 4 MEMORY/DELETE button (82)
- 5 MEMORY/INDEX button (32)
- 6 MEMORY/PLAY button (32)
- 7 DISPLAY/BATT INFO button (47, 48)
- 8 VOLUME/MEMORY button* (32)
- 9 RESET button
If you press the RESET button, all settings including the clock setting (except the Picture profile and Camera profile settings) return to the default.
- 10 HDMI OUT jack (51)
- 11 USB jack (83)
- 12 “Memory Stick Duo” slot (26)

* Each of the PLAY button, VOLUME/MEMORY button and MEMORY/INDEX button has a raised tactile dot. (The MEMORY/INDEX button has it on the + side.) Use it to identify the location of the buttons.

To attach the jack cover



Attach the jack cover as shown in the illustration.

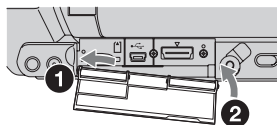

Remote Commander

Remove the insulation sheet before using the Remote Commander.

Insulation sheet

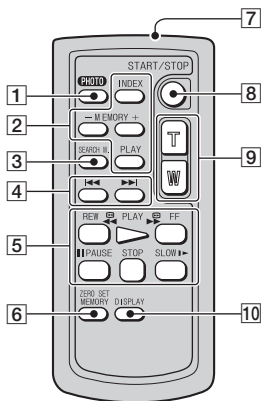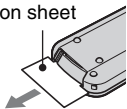


- 1** PHOTO (30)
The on-screen image when you press this button will be recorded onto the "Memory Stick Duo" as a still image.
- 2** Memory control buttons (Index, +/-, Memory/playback) (32)
- 3** SEARCH M. (49)
- 4** ◀▶▶▶
- 5** Video control buttons (Rewind, Playback, Fast-forward, Pause, Stop, Slow) (31)
- 6** ZERO SET MEMORY (49)
- 7** Transmitter
- 8** START/STOP (28, 49)
- 9** Power zoom (33)
- 10** DISPLAY (47)

Notes

- Aim the Remote Commander towards the remote sensor to operate your camcorder.
- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.
- When you are operating with the Remote Commander supplied with your camcorder, your VCR may also operate. In that case, select a commander mode other than VTR 2 for your VCR, or cover the sensor of your VCR with black paper.

To change the battery of the Remote Commander

- 1** While pressing on the tab, inset your fingernail into the slit to pull out the battery case.
- 2** Place a new battery with the + side facing up.
- 3** Insert the battery case back into the Remote Commander until it clicks.

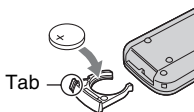

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.


- When the lithium battery becomes weak, the operating distance of the Remote Commander may shorten, or the Remote Commander may not function properly. In this case, replace the battery with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.

Indicators for the LCD screen and viewfinder

The numbers in () are reference pages.


The indicators will not be recorded on the tape during recording.

Recording movies

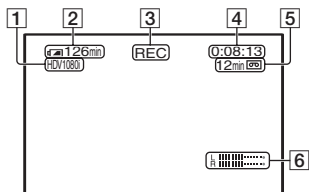

- 1 Recording format (HDV1080i or DV) (69)
Recording mode (SP or LP) is also displayed in the DV format.
- 2 Remaining battery (approx.)
- 3 Recording status ([STBY] (standby) or [REC] (recording))
- 4 During recording:
Tape counter (hour: minute: second)
During playback:
Time code (hour: minute: second: frame)
- 5 Recording capacity of the tape (approx.)
- 6 Audio level display (67)

Recording still images

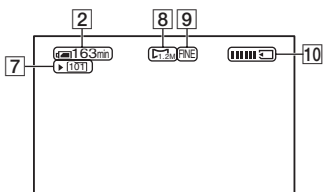


- 7 Recording folder (73)
- 8 Image size (71)
- 9 Quality ([FINE] or [STD]) (71)
- 10 Recording indicator

Data code during recording


The date/time during recording and the camera setting data will be recorded automatically. They do not appear on the screen during recording, but you can check them as [DATA CODE] during playback (67).

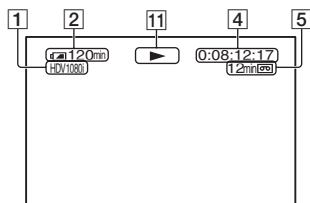


Viewing movies



- 11** Tape transport indicator
Recording mode (SP or LP) appears when a tape recorded in the DV format is played back. **DV**

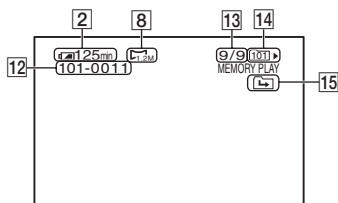
Viewing still images



- 12** Data file name
- 13** Picture number/Total number of recorded pictures in the current playback folder
- 14** Playback folder (73)
- 15** Previous/Next folder icon
The , ,  appear when the first or last picture of the current folder is displayed and when there are multiple folders on the same "Memory Stick Duo." You can move to Previous/Next folder with the VOLUME/MEMORY button.

Indicators for the LCD screen and viewfinder (Continued)

Indicators when you made changes

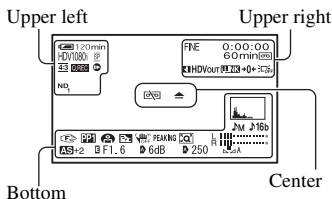

Upper left

Indicator	Meaning
HDV1080i DV	Recording format (69)
SP LP	DV REC MODE (69)*
4:3	DV WIDE REC (70)*
Q.REC	QUICK REC (75)**
DV FRAME REC (62)*	
ND ₁ ND ₂ ND _{OFF}	ND filter (36)

Upper right

Indicator	Meaning
FINE STD	Still Image quality (71)
INDEX MARK	INDEX MARK (44)
HDV IN DV IN	HDV input/ DV input (80)
HDV OUT DV OUT	HDV output/ DV output (79)
i.LINK	i.LINK connection (51, 76)
+0+	Zero set memory (49)
LCD OFF	LCD backlight off (22)

Center

Indicator	Meaning
Warning	Warning (101)

Bottom

Indicator	Meaning
HISTOGRAM	HISTOGRAM (65)
J16b	DV AU. MODE (DV Audio mode) (64)*
JM	AUDIO REC LV (64)
Manual focus	Manual focus (34)
PP1 ~ PP6	Picture profile (39)
SPOTLIGHT	SPOTLIGHT (63)
Backlight	Backlight (62)
SteadyShot off	SteadyShot off (60)
PEAKING	PEAKING (65)
D.EXTENDER	D.EXTENDER (63)
AS	AE SHIFT (61)
E	EXPOSURE/IRIS dial control (34)
Auto setting	Auto setting (66)
White balance	White balance (38)

* The settings can be made only for the pictures in the DV format.

** The setting can be made only for the pictures in the HDV format.

Index

Numeric

1080i/480i	70
12BIT	64
16BIT	64
16:9 (wide) or 4:3 TV	51
3-ClearVid CMOS sensor system	13
480i	70

A

AC Adaptor	18
Access lamp	27
AE RESPONSE	61
AE SHIFT	36, 61
AF ASSIST	60
AGC LIMIT	61
ALL ERASE	72
ALL FILES	72
ASSIGN BTN	74
ASSIGN buttons	42
AT IRIS LMT	61
AUDIO REC LV	64
AUDIO SET menu	64
AUTO LOCK switch	36
AU.LVL DISP (Audio level display)	67
AWB SENS	61
A/V connecting cable	52, 76
A/V connecting cable with S VIDEO	55, 76
A/V OUT jack	52

B

BACK LIGHT	62, 95
BATT RELEASE (battery release) button	19
Battery	
Battery Info	48
Battery pack	18
BEEP	75

BLACK FADER	63
Button-type lithium battery	123

C

CAM DATA DSP (Camera data display)	66
CAMERA DATA	67
CAMERA PROF. (Camera profile)	73
CAMERA SET menu	59
Cassette	
Insert/Eject	26
Tape	105
Cassette compartment	26
CHARGE lamp	18
Charging time	19
CINEMA	39
CINEMATONE GAMMA	40
CLOCK SET	24, 74
CNTRST ENHCR	60, 95
COLOR BAR	60
COLOR LEVEL	40
COLOR PHASE	40
COMPONENT	70
COMPONENT OUT jack	52
Component video cable	52
Computer	86
Connect	
TV	51
VCR	76
COPY	41
CURRNT FOLDER	72

D

DATA CODE	67
DATE	67
Date search	49
DATE/TIME	25, 124
DC IN jack	18
DC plug	18

Deleting camera profile settings	74
Deleting recorded pictures	82
DIAL ASSIGN	59
DIAL ROTATE	59
DIAL SENS	59
DISP OUTPUT	68
DISPLAY SET menu	65
DISPLAY/BATT INFO button	22, 47, 48
Down convert function	12
Dubbing	76
DV	69
DV AUDIO MIX	64
DV AU. MODE (DV Audio mode)	64
DV format	69
DV FRAME REC	62
DV REC MODE (Recording mode)	69
DV WIDE REC	70
D.EXTENDER (Digital Extender)	63, 95

E

End search	44, 95, 97
Expanded focus	35
EXPOSURE	35
EXPOSURE/IRIS	35, 59
EXPOSURE/IRIS button	35
EXPOSURE/IRIS dial	35
EXP.FOCUS TYPE	66

F

FADER	63
FILE NO. (File number)	72
FINE	71
FLCKR REDUCE	61
Focus	34
FOCUS button	34
Focus infinity	43

Index (Continued)

- Focus ring 34
- Folder
- NEW FOLDER 73
 - PB FOLDER (Playback folder) 73
 - REC FOLDER (Recording folder) 73
- FORMAT 72
- ### G
- Gain 37
- GAIN button 37
- Grip belt 21
- GUIDEFAME 66
- ### H
- HANDLE ZOOM 61
- Handle zoom 33
- HD (high definition) image quality 51
- HDMI cable 53
- HDMI jack 119
- HDMI OUT jack 52
- HDV 69
- HDV format 12, 104
- HDV1080i 69
- Headphones jack 120
- High definition TV 51
- HISTOGRAM 65, 95
- Hook for the shoulder strap 120, 121
- ### I
- INDEX MARK 44
- Index screen 32
- Index search 50
- Index signal 44
- Indicators 126
- Indoor 39
- “InfoLITHIUM” battery pack 108
- Insulation sheet 123
- INTELLIGENT 61
- IN/OUT REC menu 69
- IRIS 35
- i.LINK 110
- i.LINK cable 53, 79, 89
- i.LINK CONV 51, 70
- ### J
- Jack cover 26
- JPEG 106
- ### L
- LANC jack 119
- LANGUAGE 74
- Large eyecup 23
- LCD 22
- LCD backlight 22
- LCD BL LEVEL 67
- LCD BRIGHT 67
- LCD COLOR 67
- Lens hood fixing screw 17
- Lens hood with lens cover ... 17
- LETTER SIZE 68
- LINEAR 62
- LP (Long Play) 70
- ### M
- Macintosh 86
- Maintenance 111
- MARKER 66
- MEMORY SET menu 71
- Memory Stick 6, 106
- Memory Stick Duo 26, 107
- Insert/Eject 26
 - Number of recordable pictures 71
 - Write-protect tab 107
- Memory Stick Duo adaptor 107
- “Memory Stick Duo” slot ... 27
- “Memory Stick PRO Duo” 107
- MEMORY/DELETE button 82
- MEMORY/INDEX button ... 31
- MEMORY/PLAY button 31
- Menu
- AUDIO SET menu 64
 - CAMERA SET menu ... 59
 - DISPLAY SET menu ... 65
 - IN/OUT REC menu 69
 - MEMORY SET menu 71
 - Menu items 57
 - OTHERS menu 73
 - Using the menu 56
- MENU button 24
- Menu items 57
- MIC jack 121
- Microphone 121
- Mirror mode 29
- MIX 64
- Moisture condensation 111
- MONOTONE 39
- MPEG2 90
- MULTI-SOUND 64
- ### N
- ND filter 36
- NEW FOLDER 73
- NTSC 97, 104
- ### O
- One push auto focus 34
- OPEN button 22
- OPEN/EJECT lever 26
- OTHERS menu 73
- Outdoor 39
- Outside power source 20
- ### P
- PAL 104
- PB FOLDER

(Playback folder)73
 PB ZOOM (Playback zoom)75
 PEAKING65
 PHOTO/EXPANDED FOCUS button28
 PHOTO/EXP.FOCUS74
 PictBridge74, 83
 PictBridge PRINT74
 Picture profile39
 PICTURE PROFILE button39
 Picture search31
 PLAY button31
 Playback31
 Playing time20
 PORTRAIT39
 Power cord18
 POWER switch21
 Pre-installed rechargeable battery113
 Print83
 Printing recorded images83
 PROFILE NAME41
 PUSH AUTO FOCUS button... 34
Q
 QUALITY71
 QUICK REC75
R
 REC FOLDER (Recording folder)73
 REC FORMAT69
 REC LAMP (Recording lamp)28, 75
 Rec review44, 97
 REC START/STOP button28
 Recording28
 Recording time19
 REMAINING68

Remaining battery48
 Remote Commander123
 REMOTE CTRL (Remote control)75
 RESET41, 122
 RESET button122

S

S VIDEO jack51, 76
 SD (standard definition) image quality51
 Self-diagnosis display101
 SEL/PUSH EXEC dial24
 SHARPNESS40
 SHOT TRANS42, 62
 Shot transition45
 Shoulder strap121
 Shutter speed37
 SHUTTER SPEED button ... 37
 SKINTONE DTL40
 Skip scan31
 SMTH SLW REC (Smooth slow recording)59, 95
 SOFT STOP62
 SOFT TRANS62
 SP (Standard Play)69
 Specifications115
 SPOTLIGHT63
 ST164
 ST264
 STANDARD71
 Status check47
 STATUS CHECK button47
 STEADYSHOT60
 STEREO64
 Still images30, 32
 SUNSET39
 Supplied items16
 System Requirements
 Macintosh86
 Windows86

T

Tape counter49, 124
 TapeSee Cassette
 Telephoto33
 Time code124
 TRANS CURVE62
 TRANS TIME62
 Transmitter123
 Tripod receptacle119
 Troubleshooting92
 TV51
 TV color systems104
 TV TYPE70

U

USB cable16, 83, 86
 USB jack83, 86
 USB SELECT74
 Using the menu items56
 Using your camcorder abroad104

V

VCR HDV/DV69
 VF B.LIGHT67
 VF POWERMODE67
 Video control buttons122
 Video head112
 Viewfinder22
 Viewfinder lens adjustment lever22
 Viewfinder release lever114
 Volume32
 VOLUME/MEMORY button31
 V-OUT/PANEL68

W

Warning indicators101
 Warning messages102
 WB SHIFT40

Index (Continued)

White balance	38
WHITE FADER	63
WHT BAL button.....	38
Wide angle.....	33
WIDE CONV.	60
Windows.....	86
WORLD TIME.....	74
Write-protect tab.....	105, 107

Z

Zebra.....	37
ZEBRA switch	37
Zero set memory.....	49
ZERO SET MEMORY button.....	49
Zoom	33
Zoom lever	33
Zoom ring	33

