

3D Digital HD Video Camera Recorder

Operating Guide



HANDYCAM®

AVCHD

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

MEMORY STICK™
1TB

InfoLITHIUM™ **V**
SERIES

XC
CLASS C

Read this first

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

Do not expose the batteries to excessive heat such as sunshine, fire or the like.

CAUTION

Battery pack

If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.
- Do not incinerate or dispose of in fire.
- Do not handle damaged or leaking lithium ion batteries.
- Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack.
- Keep the battery pack out of the reach of small children.
- Keep the battery pack dry.
- Replace only with the same or equivalent type recommended by Sony.
- Dispose of used battery packs promptly as described in the instructions.

Replace the battery with the specified type only. Otherwise, fire or injury may result.

AC Adaptor

Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.

Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using your camcorder.

Even if your camcorder is turned off, AC power source (mains) is still supplied to it while connected to the wall outlet (wall socket) via the AC Adaptor.

Note on the power cord (mains lead)

The power cord (mains lead) is designed specifically for use with this camcorder only, and should not be used with other electrical equipment.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an  or  mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

FOR CUSTOMERS IN EUROPE

Notice for the customers in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

ATTENTION

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment

and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

For customers in the U.S.A.

If you have any questions about this product, you may call:
Sony Customer Information Center 1-800-222-SONY (7669).
The number below is for the FCC related matters only.

Regulatory Information

Declaration of Conformity

Trade Name: SONY
Model No.: HDR-TD10E
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo, San Diego, CA 92127 U.S.A.
Telephone No.: 858-942-2230
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Battery pack

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplied items

The numbers in () are the supplied quantity.

- ☐ Camcorder (1)
- ☐ AC Adaptor (1)
- ☐ Power cord (Mains lead) (1)
- ☐ HDMI cable (1) **[A]**
- ☐ A/V connecting cable (1) **[B]**
- ☐ USB cable (1) **[C]**
- ☐ USB Adaptor Cable (1) **[D]**
- ☐ Wireless Remote Commander (1)
A button-type lithium battery is already installed. Remove the insulation sheet before using the Wireless Remote Commander.
- ☐ Rechargeable battery pack NP-FV70 (1)
- ☐ CD-ROM "Handycam" Application Software (1) (p. 39)
 - "PMB" (software, including "PMB Help")
 - "Handycam" Handbook (PDF)
- ☐ "Operating Guide" (This manual) (1)


[A]



[B]



 [C]



[D]




- See page 19 for the memory card you can use with this camcorder.


Using the camcorder

- Do not hold the camcorder by the following parts, and also do not hold the camcorder by the jack covers.


Shoe cover

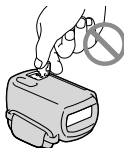

LCD screen

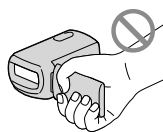

Battery pack

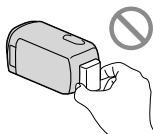


- The camcorder is not dustproofed, dripproofed or waterproofed. See "Precautions" (p. 61).

Viewing 3D movies

- You may feel uncomfortable symptoms such as eyestrain, nausea, or a tired feeling while watching 3D movies recorded with the camcorder on 3D compatible monitors. When you watch 3D movies, we recommend that you take a break at regular time intervals. Since the need for or frequency of break times varies between individuals, please set your own standards. If you feel sick, stop watching 3D movies, and consult a doctor as needed. Also, refer to the operating instructions of the connected device or the software used with the camcorder. A child's vision is always vulnerable (especially for children under 6 years of age). Before allowing them to watch 3D movies, please consult with an expert, such as a pediatric or ophthalmic doctor. Make sure your children follow the precautions above.
- The way people perceive 3D movies varies from person to person.

Menu items, LCD panel, and lens

- Avoid operating the touch panel under following conditions, as doing so may cause a malfunction of the camcorder.
 - When there are droplets of water on the touch panel
 - With wet fingers
 - With a pointed object such as pencil, ballpoint pen, nail, etc.
 - Holding the camcorder by grabbing the panel inside the frame
 - With gloves on
- A menu item that is grayed out is not available under the current recording or playback conditions.
- The LCD screen is manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue, or green in color) that appear constantly on the LCD screen. These points are normal results of the manufacturing process and do not affect the recording in any way.

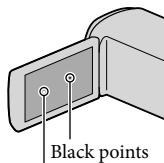

White, red, blue or green points

- Exposing the LCD screen or the lens to direct sunlight for long periods of time may cause malfunctions.
- Do not aim at the sun. Doing so might cause your camcorder to malfunction. Take images of the sun only in low light conditions, such as at dusk.

About language setting

- The on-screen displays in each local language are used for illustrating the operating procedures. Change the screen language before using the camcorder if necessary (p. 17).

On recording

- To ensure stable operation of the memory card, it is recommended to format the memory card with your camcorder before the first use. Formatting the memory card will erase all the data stored on it and the data will be irrecoverable. Save your important data on your PC etc.
- Before starting to record, test the recording function to make sure the image and sound are recorded without any problems.
- Compensation for the contents of recordings cannot be provided, even if recording or playback is not possible due to a malfunction of the camcorder, recording media, etc.
- TV color systems differ depending on the country/region. To view your recordings on a TV, you need a PAL system-based TV.
- Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the copyright laws.
- Use the camcorder in accordance with local regulations.

Notes on playing back

- You may not be able to play back normally images recorded on your camcorder with other devices. Also, you may not be able to play back images recorded on other devices with your camcorder.
- Standard (STD) image quality movies recorded on SD memory cards cannot be played on AV equipment of other manufacturers.

DVD media recorded with HD image quality (high definition)

- DVD media recorded with high definition image quality (HD) can be played back with devices that are compatible with the AVCHD standard. You cannot play discs recorded with high definition image quality (HD) with DVD players/recorders as they are not compatible with the AVCHD format. If you insert a disc recorded with the AVCHD format (high definition image quality (HD)) into a DVD player/recorder, you may not be able to eject the disc.

Save all your recorded image data

- To prevent your image data from being lost, save all your recorded images on external media periodically. To save images on your computer, see page 37, and to save images on external devices, see page 42.
- 3D movies cannot be saved on a disc. Save them on external media devices (p. 44).
- The type of discs or media on which the images can be saved depend on the [ REC Mode] selected when the images were recorded. Movies recorded with [50p Quality **PS**] can be saved using external media (p. 44). Movies recorded with [Highest Quality **FX**] can be saved on external media devices or on Blu-ray discs (p. 44).

Notes on battery pack/AC Adaptor

- Be sure to remove the battery pack or the AC Adaptor after turning off the camcorder.
- Disconnect the AC Adaptor from the camcorder, holding both the camcorder and the DC plug.

Note on the camcorder/battery pack temperature

- When the temperature of the camcorder or battery pack becomes extremely high or extremely low, you may not be able to record or play back on the camcorder, due to the protection features of the camcorder being activated in such situations. In this case, an indicator appears on the LCD screen.

When the camcorder is connected to a computer or accessories

- Do not try to format the recording media of the camcorder using a computer. If you do so, your camcorder may not operate correctly.
- When connecting the camcorder to another device with communication cables, be sure to insert the connector plug in the correct way. Pushing the plug forcibly into the terminal will damage the terminal and may result in a malfunction of the camcorder.
- When the camcorder is connected to other devices through a USB connection and the power of the camcorder is turned on, do not close the LCD panel. The image data that has been recorded may be lost.

If you cannot record/play back images, perform [Format]

- If you repeat recording/deleting images for a long time, fragmentation of data occurs on the recording media. Images cannot be saved or recorded. In such a case, save your images on some type of external media first, and then perform [Format] by touching **MENU** (MENU) → [Setup] →  (Media Settings) → [Format] → the desired medium → **OK** → **OK**.

Notes on optional accessories

- We recommend using genuine Sony accessories.
- Genuine Sony accessories may not be available in some countries/regions.

About this manual, illustrations and on-screen displays

- In this manual, the  and  icons indicate the 3D and 2D sides of the 2D/3D switch, respectively.
- The example images used in this manual for illustration purposes are captured using a digital still camera, and therefore may appear different from images and screen indicators that actually appear on your camcorder. And, the illustrations of your camcorder and its screen indication are exaggerated or simplified for understandability.
- In this manual, the internal memory and the memory card are called “recording media.”
- In this manual, the DVD disc recorded with high definition image quality (HD) is called AVCHD recording disc.
- Design and specifications of your camcorder and accessories are subject to change without notice.

Notes on use

- Do not do any of the following. Otherwise, the recording media may be damaged, recorded images may be impossible to play back or may be lost, or other malfunctions could occur.
 - ejecting the memory card when the access lamp (p. 20) is lit or flashing
 - removing the battery pack or AC Adaptor from the camcorder, or applying mechanical shock or vibration to the camcorder when the  (Movie)/ (Photo) lamps (p. 22) or the access lamp (p. 20) are lit or flashing
- When using a shoulder belt (sold separately), do not crash the camcorder against an object.

Table of contents

3D and **2D** indicate the 3D and 2D sides of the 2D/3D switch (p. 22), respectively.
The items you can set differ depending on the position of the switch.

Read this first	2
-----------------------	---

Getting started

Step 1: Charging the battery pack	11
Charging the battery pack abroad	13
Step 2: Turning the power on, and setting the date and time	14
Changing the language setting	17
Step 3: Preparing the recording media	18
To check the recording media settings	18
Copying movies and photos	20

Recording/Playback

Recording	21
Optimum distance from the subject and zooming level	26
Adjusting the 3-dimensional appearance of the image during recording	26
Playback on the camcorder	27
Performing Highlight Playback	31
Playing images on a TV	32

Advanced Operations

Deleting images	36
-----------------------	----

Saving movies and photos with a computer

Useful functions available if you connect the camcorder to computer	37
Preparing a computer	38
When using a Macintosh	38
Starting PMB (Picture Motion Browser)	41

Saving images with an external device

Selecting a method for saving images with an external device	42
Saving images on an external media device	44
Creating a high definition image quality (HD) disc with a DVD writer, etc., other than DVDirect Express	47
Creating a standard definition image quality (STD) disc with a recorder, etc.	48

Customizing your camcorder

Using menus	50
Getting detailed information from the “Handycam” Handbook	54

Additional information


 Troubleshooting	55
Recording time of movies/number of recordable photos	58
Precautions	61
Specifications	63

Quick reference

Screen indicators	66
Parts and controls	67
Index	70

Getting started

Step 1: Charging the battery pack

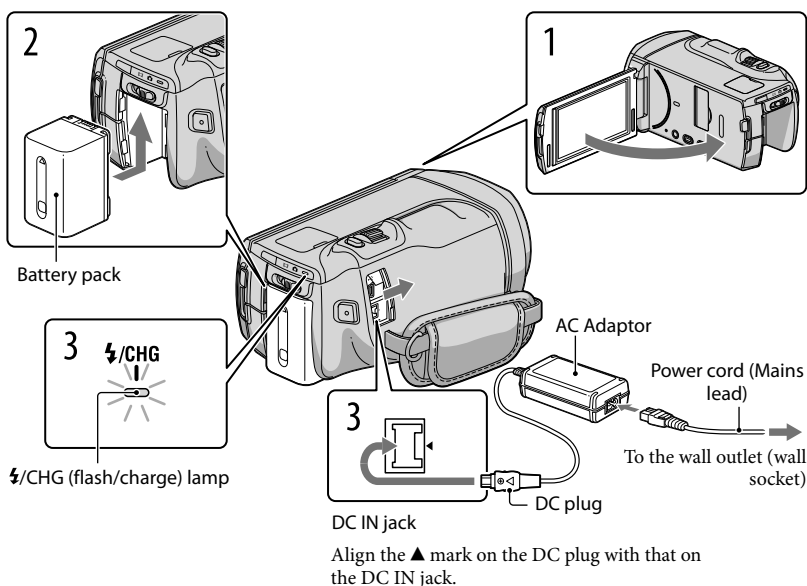

You can charge the “InfoLITHIUM” battery pack (V series) after attaching it to your camcorder.

Notes

- You cannot attach any “InfoLITHIUM” battery pack other than the V series to your camcorder.

- 1 Turn off your camcorder by closing the LCD screen.
- 2 Attach the battery pack by sliding it in the direction of the arrow until it clicks.
- 3 Connect the AC Adaptor and the power cord (mains lead) to your camcorder and the wall outlet (wall socket).
The ⚡/CHG (flash/charge) lamp lights up and charging starts. The ⚡/CHG (flash/charge) lamp turns off when the battery pack is fully charged.

4 When the battery is charged, disconnect the AC Adaptor from the DC IN jack of your camcorder.

Charging time

Approximate time (min.) required when you fully charge a fully discharged battery pack.

Battery pack	Charging time
NP-FV50	155
NP-FV70 (supplied)	195
NP-FV100	390


- The charging times shown in the table above are measured when charging the camcorder at a temperature of 25 °C (77 °F). It is recommended that you charge the battery in a temperature range of 10 °C to 30 °C (50 °F to 86 °F).

Tips

- See page 58 on recording and playing time.
- When your camcorder is on, you can check the approximate amount of remaining battery power with the remaining battery indicator at the upper right on the LCD screen.

To remove the battery pack

Close the LCD screen. Slide the BATT (battery) release lever (①) and remove the battery pack (②).

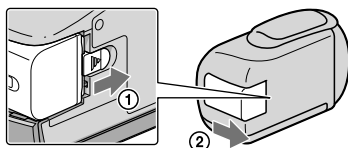

To use a wall outlet (wall socket) as a power source

Make the same connections as “Step 1: Charging the battery pack” (p. 11). Even if the battery pack is attached, the battery pack is not discharged.

Notes on the battery pack

- When you remove the battery pack or disconnect the AC Adaptor, turn the camcorder off and make sure that the  (Movie)/ (Photo) lamps (p. 22), the access lamp (p. 20) are turned off.
- The /CHG (flash/charge) lamp flashes during charging under the following conditions:
 - The battery pack is not attached correctly.
 - The battery pack is damaged.
 - The temperature of the battery pack is low.
Remove the battery pack from your camcorder and put it in a warm place.
 - The temperature of the battery pack is high.
Remove the battery pack from your camcorder and put it in a cool place.
- We do not recommend using an NP-FV30, which only allows short recording and playback times, with your camcorder.
- In the default setting, the power turns off automatically if you leave your camcorder without any operation for about 5 minutes, to save battery power ([A. Shut Off]).

Notes on the AC Adaptor

- Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using your camcorder.
- Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.
- Do not short-circuit the DC plug of the AC Adaptor or battery terminal with any metallic objects. This may cause a malfunction.

Charging the battery pack abroad

You can charge the battery pack in any countries/regions using the AC Adaptor supplied with your camcorder within the AC 100 V - 240 V, 50 Hz/60 Hz range.


- Do not use an electronic voltage transformer.

Step 2: Turning the power on, and setting the date and time

1 Open the LCD screen of your camcorder.


Your camcorder is turned on.

- To turn on your camcorder when the LCD screen is open, press POWER.

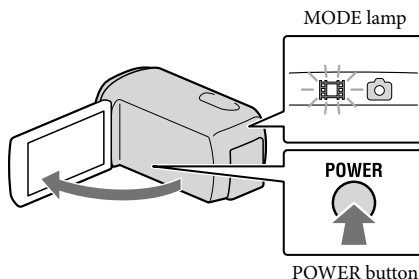

2 Select the desired language, then touch [Next].

Touch the button on the LCD screen

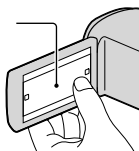


3 Select the desired geographical area with ◀/▶, then touch [Next].




4 Set [Summer Time], then touch [Next].

- If you set [Summer Time] to [On], the clock advances 1 hour.

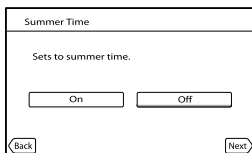


5 Select the date format, then touch [Next].

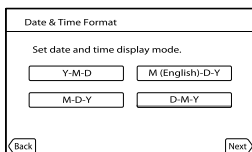

6 Select the date and time, touch / to set the value, then touch [Next] → *.

- * The confirmation screen appears only when you set the clock for the first time.

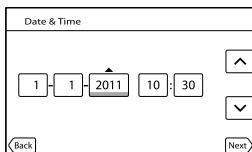


The clock starts.

- To set the date and time again, touch **MENU** (MENU) → [Setup] → (Clock Settings) → [Date & Time Setting] → [Date & Time]. When an item is not on the screen, touch / until the item appears.

7 Touch [Run].


- If you touch [Run Later], the recording mode screen appears. When you turn on the camcorder next time, the [Auto 3D Lens Adjust] screen will appear.

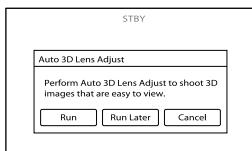

8

Aim the camcorder at a subject to display it on the LCD screen.

- Be sure that the subject produces a scale higher than the ◀ mark. The subject will appear doubled. If you feel uncomfortable viewing the image in 3D, press 2D/3D DISP and check the image in 2D (p. 22).

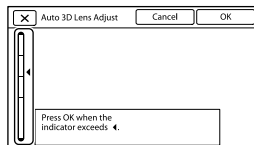

Scale

9

Touch **OK**.

- The camcorder automatically zooms in or out to adjust the lenses. Do not change the subject until the adjustment is completed.

⚡ Notes

- If [Could not adjust.] appears, touch [Run Again].
- If the 2D/3D switch (p. 22) is set to 2D, the [Auto 3D Lens Adjust] screen does not appear.

Type of subjects that should be displayed on the LCD screen for [Auto 3D Lens Adjust]

The scale indicated varies depending on the subject displayed on the LCD screen.

Subjects that indicate a higher scale:

- Bright subjects, such as objects outdoors in daylight
- Subjects with various colors and shapes



Subjects that indicate a lower scale and result in adjustment failure:

- Dark subjects, such as objects viewed at night
- Subjects within 2 m (6 ft. 6 3/4 in.) away from the camcorder
- Plain, non-colorful subjects
- Subjects that repeat the same pattern, such as rows of windows on buildings
- Moving subjects



⚙ Notes

- The date and time does not appear during recording, but they are automatically recorded on the recording media, and can be displayed during playback. To display the date and time, touch **MENU** (MENU) → [Setup] → [▶▶ Playback Settings] → [Data Code] → [Date/Time] → **OK**.
- You can turn off the operation beeps by touching **MENU** (MENU) → [Setup] → [🔧 General Settings] → [Beep] → [Off] → **OK**.

To turn off the power

Close the LCD screen.

The  (Movie) lamp flashes for a few seconds and the camcorder is turned off.

💡 Tips

- You can turn off the camcorder also by pressing POWER.
- When [Power On By LCD] is set to [Off], turn off your camcorder by pressing POWER.

Changing the language setting

You can change the on-screen displays to show messages in a specified language.

Touch **MENU** (MENU) → [Setup] → [🔧 General Settings] → [Language Setting] → a desired language → **OK** → **X** → **X**.

Step 3: Preparing the recording media

The recording media that can be used are displayed on the screen of your camcorder as following icons.



Internal memory



Memory card

* In the default setting, both movies and photos are recorded on this recording media. You can perform recording, playback and editing operations on the selected medium.

Tips

- See page 59 for the recordable time of movies.
- See page 60 for the number of recordable photos.

Selecting recording media

- 1 Touch **MENU** (MENU) → [Setup] → [ ( Media Settings)] → [Media Select].

The [Media Select] screen appears.

- 2 Touch the desired recording medium → **OK** → **OK**.

Both movies and photos are recorded on the selected medium.

To check the recording media settings

In either movie recording mode or photo recording mode, the media icon of the selected recording media is displayed at the top right corner of the screen.



 
Recording media icon

Inserting a memory card

⚡ Notes

- Set the recording medium to [Memory Card] to record movies and/or photos on a memory card.

Types of memory card you can use with your camcorder

		SD Speed Class	Described in this manual
“Memory Stick PRO Duo” media (Mark2)		—	“Memory Stick PRO Duo” media
“Memory Stick PRO-HG Duo” media			
SD memory card		Class 4 or faster	SD card
SDHC memory card			
SDXC memory card			

- Operation with all memory cards is not assured.
- “Memory Stick PRO Duo” media, half the size of “Memory Stick”, or standard size SD cards can be used for this camcorder.
- Do not attach a label or the like on memory card or memory card adaptor. Doing so may cause a malfunction.
- “Memory Stick PRO Duo” media of up to 32 GB and SD cards of up to 64 GB have been verified to operate with your camcorder.


⚡ Notes

- A MultiMediaCard cannot be used with this camcorder.
- Movies recorded on SDXC memory cards cannot be imported to or played back on computers or AV devices not supporting the exFAT* file system by connecting the camcorder to these devices with the USB cable. Confirm in advance that the connecting equipment is supporting the exFAT system. If you connect an equipment not supporting the exFAT system and the format screen appears, do not perform the format. All the data recorded will be lost.

* The exFAT is a file system that is used for SDXC memory cards.

1 Open the cover, and insert the memory card with the notched edge in the direction as illustrated until it clicks.

- Close the cover after inserting the memory card.

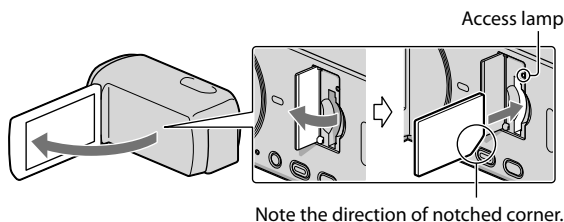

The [Preparing image database file. Please wait.] screen appears if you insert a new memory card. Wait until the screen disappears.

2 Close the cover.

Notes

- If [Failed to create a new Image Database File. It may be possible that there is not enough free space.] is displayed, format the memory card.
- Confirm the direction of the memory card. If you forcibly insert the memory card in the wrong direction, the memory card, memory card slot, or image data may be damaged.
- Do not open the cover during recording.
- When inserting or ejecting the memory card, be careful so that the memory card does not pop out and drop.

To eject the memory card

Open the cover and lightly push the memory card in once.

Copying movies and photos

Touch **MENU** (MENU) → [Edit/Copy] → [Copy], then follow the instructions that appear on the screen.


Recording

In the default setting, movies and photos are recorded on the internal recording media. Movies are recorded in 3D with high definition image quality (HD).

Tips

- To change the recording media, see page 18.


1 Fasten the grip belt.

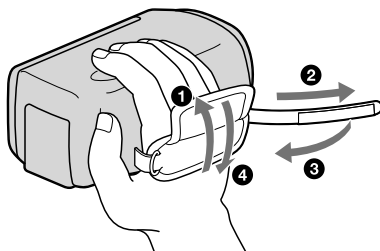


Recording/Playback

2 Open the LCD screen of your camcorder.

Your camcorder is turned on.

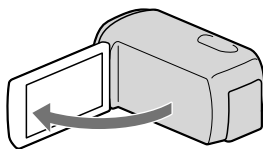

Recording movies

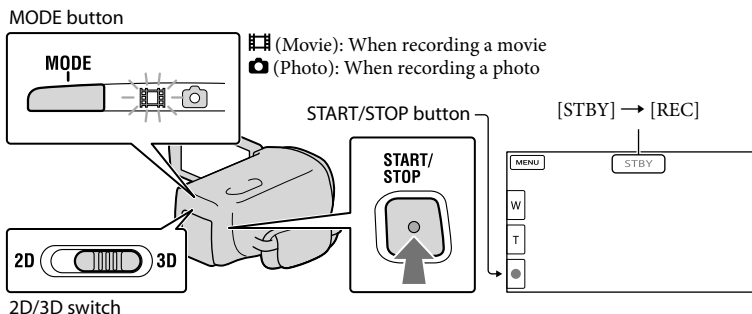

1 Press MODE to turn on the  (Movie) lamp.

2 Press START/STOP to start recording.


To stop recording, press START/STOP again.

Tips

- Shoot the subject from about 80 cm to 6 m (3 ft. to 20 ft.) away to obtain good 3D movies. The optimum distance varies when you use zooming (p. 26).

To record 2D movies

Set the 2D/3D switch to 2D.

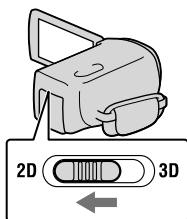


Notes

- Do not operate the 2D/3D switch during recording. The camcorder stops recording.

To display items on the LCD screen again


Touch anywhere on the screen except the buttons on the LCD screen so that you can use items. You can change the settings using the [Display Setting] menu.

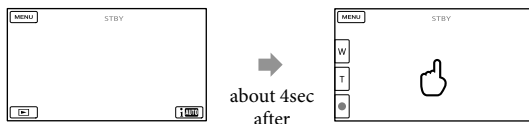

To record movies in 3D while viewing them in 2D on the LCD screen of the camcorder

If you record 3D movie for a long time, you may feel uncomfortable. Press 2D/3D DISP to switch the image from 3D to 2D. The image appears in 2D, but the camcorder continues recording in 3D.

When the screen is switched from 2D to 3D, the screen becomes darker. This is not a malfunction.

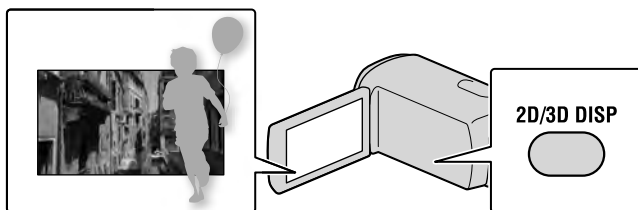


Notes

- If you close the LCD screen while recording movies, the camcorder stops recording.
- The maximum continuous recordable time of a movie is as follows.
 - 3D: about 6 hours 30 minutes
 - 2D: about 13 hours
- When a movie file exceeds 2 GB, the next movie file is created automatically.
- It will take several seconds until you can start recording after you turn on the camcorder. You cannot operate your camcorder during this time.
- The following states will be indicated if data is still being written onto the recording media after recording has finished. During this time, do not apply shock or vibration to the camcorder, or remove the battery or AC Adaptor.
 - Access lamp (p. 20) is lit or flashing
 - The media icon in the upper right of the LCD screen is flashing



Tips

- See page 59 on the recordable time of 2D movies.
- You can record photos during movie recording by pressing PHOTO fully (Dual Rec).
- [SteadyShot] is set to [Active] in the default setting.
- You can specify the priority face by touching it.
- You can capture photos from recorded movies.
- You can check the recordable time, estimated remaining capacity, etc., by touching **MENU** (MENU) → [Setup] → [Media Settings] → [Media Info].
- The LCD screen of your camcorder can display recording images across the entire screen (full pixel display). However, this may cause slight trimming of the top, bottom, right and left edges of images when played back on a TV which is not compatible with full pixel display. In the case of 2D recording, set [Guide Frame] to [On], and record images using the outer frame displayed on the screen as a guide.
- To adjust the angle of the LCD panel, first open the LCD panel 90 degrees to the camcorder (①), and then adjust the angle (②).

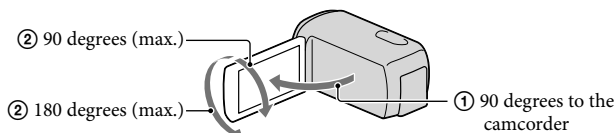


- Watch 3D movies on the LCD screen squarely from about 30 cm (11 7/8 in.) away.

Data code during recording


The recording date, time and condition are recorded automatically on the recording media. They are not displayed during recording. However, you can check them as [Data Code] during playback. To display them, touch **MENU** (MENU) → [Setup] → [Data Code] → [Data Code] → a desired setting → **OK** → **OK**.

Shooting photos

 MODE button




 - Movie: When recording a movie
- Photo: When recording a photo




2D/3D switch

PHOTO button

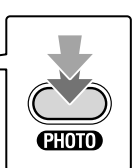

Flashes → Lights up

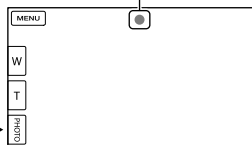

When  disappears, the photo is recorded.

1 Set the 2D/3D switch to 2D.

2 Press MODE to turn on the  (Photo) lamp.

The LCD screen display switches for photo recording mode, and the screen aspect ratio becomes 4:3.

3 Press PHOTO lightly to adjust the focus, then press it fully.

Note

- You cannot shoot photos in 3D.


Tips

- To change the image size, touch **MENU** (MENU) → [Image Quality/Size] → [ Image Size] → a desired setting → **OK**.
- You cannot record photos while  is displayed.
- Your camcorder flashes automatically when there is insufficient ambient light. The flash does not work in the movie recording mode. You can change how your camcorder flashes by **MENU** (MENU) → [Camera/Mic] → [ Flash] → [Flash] → a desired setting → **OK**.

If white circular spots appear on photos

This is caused by particles (dust, pollen, etc.) floating close to the lens. When they are accentuated by the camcorder's flash, they appear as white circular spots.


To reduce the white circular spots, light the room and shoot the subject without a flash.

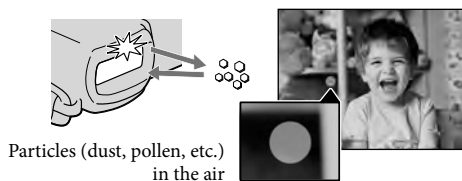

Optimum distance from the subject and zooming level

The distance at which you can obtain movies with a deep, 3-dimensional appearance varies depending on the zooming level.

Adjust the zooming level with the power zoom lever.

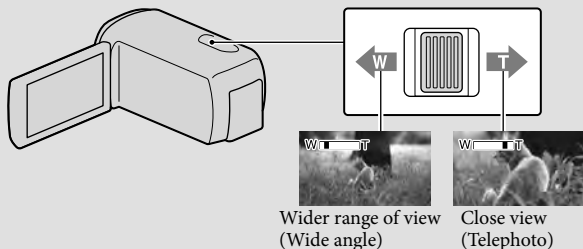


Distance from the subject	Zoom
about 80 cm to 6 m (3 ft. to 20 ft.)	W  T
about 2.5 m to 10 m (8 ft. to 32 ft.)	W  T
about 7.5 m to 20 m (25 ft. to 65 ft.)	W  T

Adjusting the 3-dimensional appearance of the image during recording

[3D Depth Adjustment] is assigned to the MANUAL dial as the default setting. You can adjust the depth of 3D images by operating the MANUAL dial.

MANUAL button

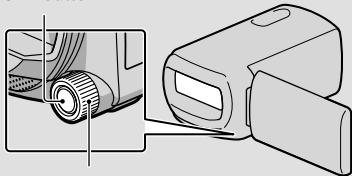

MANUAL dial

- ① Press MANUAL.
 - ② Rotate the MANUAL dial to adjust the depth of the image on the screen.
- If you press MANUAL for several seconds, you can assign another menu item to the MANUAL dial.

Playback on the camcorder

You can enjoy the playback of images with powerful sound through the stereo speakers built into the camcorder.

In the default setting, movies and photos that are recorded on the internal recording media are played.


Tips

- To change the recording media, see page 18.
- The camcorder displays recorded images as an event automatically, based on the date and time.
- To play back 2D movies, set the 2D/3D switch to 2D.

1 Open the LCD screen of your camcorder.


Your camcorder is turned on.

2 Press (View Images).

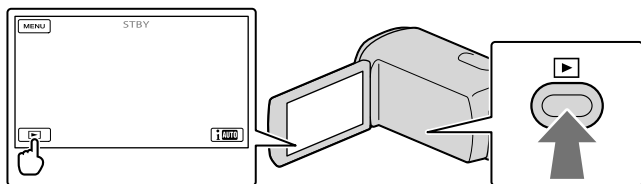

The Event View screen appears after some seconds.

3 Touch / to select the desired event (**[B]**).

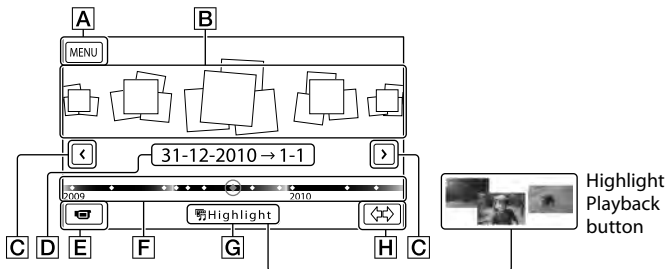

- [A]** To the MENU screen
- [B]** Events
- [C]**  /  : To the previous/next event
- [D]** Event name
- [E]** Change to the movie/photo recording mode


- F** Time-line bar
- G** Highlight Playback button*
- H** Change Event Scale button

* Appears only when the image quality is set to [**HD** : HD Quality].

The Event Index screen appears when you touch the event that is displayed on the center.

- You can also choose an event by touching on **◆** the time-line bar.
- Touch **↔** **H** (Change Event Scale) on the bottom right of the screen so that you can change the time range of the time-line bar from one and a half years to 3 months, which changes the number of the events that can be displayed on the time-line bar.

4 Touch an image you want to view.

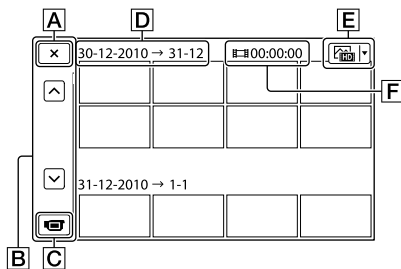

- A** To go back to the Event View screen
- B** Displays the previous/next page (Touching and holding the button scrolls the index screen.)
- C** Changes to the movie/photo recording mode
- D** Event title
- E** Switch Image Type button (2D only)
- F** Total playing time of movies in the event

- Touch **E** to select the image type to be displayed in the index from [**MOVIE**] (movies only), [**PHOTO**] (photos only), or [**MOVIE/PHOTO**] (movies and photos mixed). When [**PHOTO**] (photos only) is selected, total number of photos in the event is displayed in **F**.
- **▶** appears with the movie or photo that was most recently played or recorded. If you touch the movie or photo with **▶**, you can continue playback from the previous time.

Notes

- If you operate the 2D/3D switch, the recording mode screen appears. Do not operate the 2D/3D switch during playback.


Tips

- When the 2D/3D switch is set to 3D, only 3D movies are played back. When the switch is set to 2D, both 3D and 2D images are played back in 2D.
- You can view 3D movies in 2D by pressing 2D/3D DISP (p. 23).

Operating the camcorder while playing a movie

3D 2D

You can use the functions shown in the figure below while the camcorder is playing a movie.

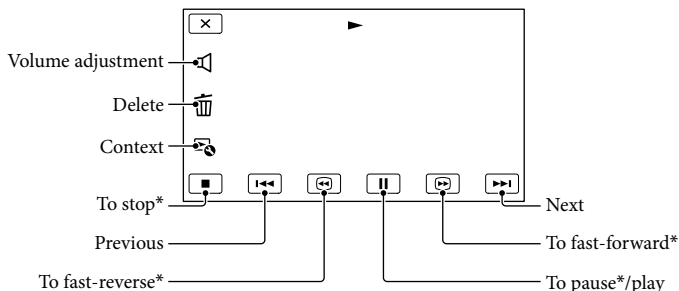

* These buttons can be used only when the camcorder is playing a movie.

Notes

- You may not be able to play back the images with other devices than camcorder.

Tips

- The above figure appears also when you select [MOVIE/PHOTO] by touching the Switch Image Type button on the Even Index screen (2D only).
- Touching on the playback screen displays functions you can currently use, and allows you to use those functions easily.
- When playback from the selected image reaches the last image, the screen returns to the INDEX screen.
- Touch / during pause to play back movies slowly.
- As you repeat touching / during playback, movies are played as fast as about 5 times → about 10 times → about 30 times → about 60 times.
- The recording date, time, and shooting conditions are recorded automatically during recording. This information is not displayed during recording, but you can display it during playback by touching **MENU** (MENU) → [Setup] → [(Playback Settings)] → [Data Code] → a desired setting → **OK** → .
- In the default setting, a protected demonstration movie is pre-recorded.

To adjust the sound volume of movies

While playing back movies, touch → adjust with / → **OK**.

Adjusting the depth of 3D movies


3D

You can adjust the depth while playing back 3D movies.

- 1 Touch  → [3D Depth Adjustment] on the 3D movie playback screen.


The movie stops and the screen used to adjust the vertical direction appears.

- 2 Touch **+**/**-** to adjust the vertical direction → [Next].

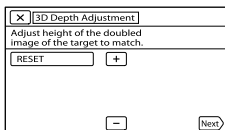

The screen used to adjust horizontal direction appears.


- 3 Touch **+**/**-** to adjust the horizontal direction → **OK**.

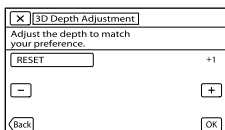

Viewing photos

2D

You can use the functions shown in the figure below while you are viewing photos. The figure below will be displayed when you select [ PHOTO] by touching the Switch Image Type button on the Event Index screen.

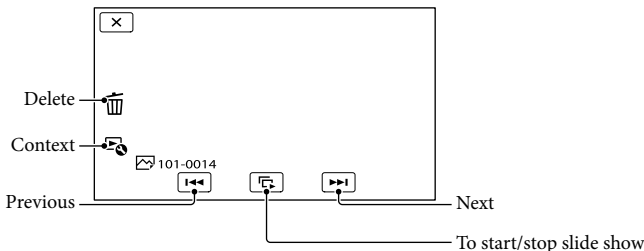


Tips

- To repeat Slideshow, touch  → [Slideshow Set].

Performing Highlight Playback

Press  → Touch  /  to select the desired event, then touch [ Highlight].

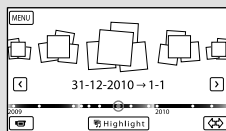


- Touch [ Scenario Save] on the screen after the Highlight Playback is finished so that you can save the Highlight Playback scenario.

Playing images on a TV

Connection methods, the image type (3D or 2D) and the image quality (high definition (HD) or standard definition (STD)) viewed on the TV screen differ depending on what type of TV is connected, and the connectors used.


Output connectors on the camcorder

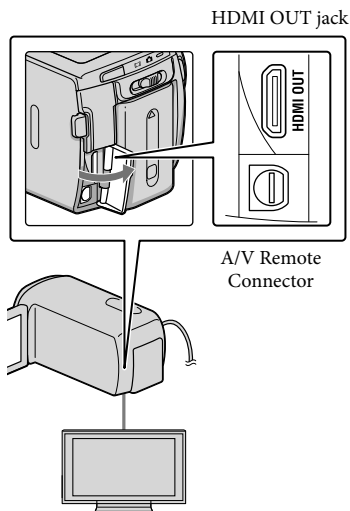

List of connection

Connecting to a 3D TV


Movies recorded in 3D are played back in 3D. Make sure that the 2D/3D switch of the camcorder is set to 3D.

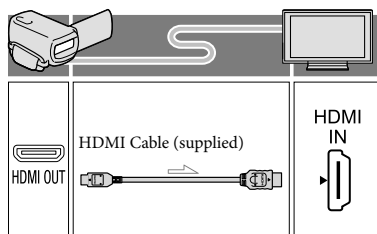

- 1 Switch the input on the TV to the connected jack.
 - Refer to the instruction manuals of the TV.
- 2 Connect the camcorder to a TV.
 - Use the supplied AC Adaptor as the power source (p. 12).
- 3 Play a movie or a photo on the camcorder (p. 27).


Connecting to a high definition TV

When the recording quality is high definition image quality (HD), the movies are played back in high definition image quality (HD). When the recording quality is standard image quality (STD), the movies are played back in standard definition image quality (STD).

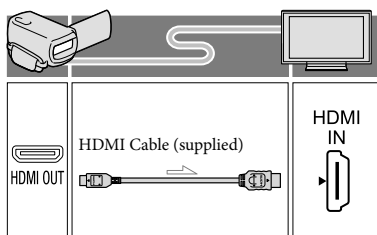

Connecting to a non-high-definition 16:9 (wide) or 4:3 TV

When movies are recorded with high definition image quality (HD), they are played back in standard definition image quality (STD). When movies are recorded with standard image quality (STD), they are played back in standard definition image quality (STD).

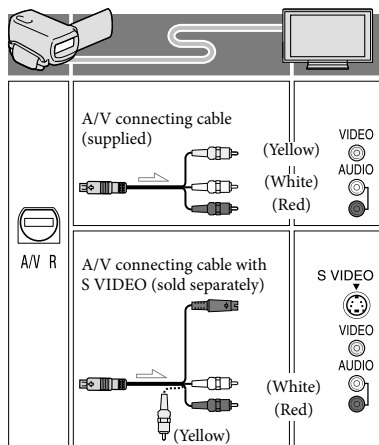

When you connect with HDMI cable

- Use an HDMI cable with the HDMI logo.
- Use an HDMI mini connector on one end (for the camcorder), and a plug suitable for connecting your TV on the other end.
- Copyright-protected images are not output from the HDMI OUT jack of your camcorder.
- Some TVs may not function correctly (e.g., no sound or image) with this connection.
- Do not connect the camcorder HDMI OUT jack to an external device HDMI OUT jack, as malfunction may result.
- When the connected device is compatible with 5.1ch surround sound, high definition image quality (HD) movies are output in 5.1ch surround sound automatically. Standard definition image quality (STD) movies are converted to 2ch sound.

To set the aspect ratio according to the connected TV (16:9/4:3)

- Set [TV Type] to [16:9] or [4:3] according to your TV.

When you connect with A/V connecting cable with S-Video

- When the S VIDEO plug (S VIDEO channel) is connected, audio signals are not output. To output audio signals, connect the white and red plugs to the audio input jack of your TV.
- This connection produces higher resolution images compared with the A/V connecting cable.

When your TV is monaural (When your TV has only one audio input jack)

- Connect the yellow plug of the A/V connecting cable to the video input jack and connect the white (left channel) or red (right channel) plug to the audio input jack of your TV or VCR.

When connecting to your TV via a VCR

 
- Connect your camcorder to the LINE IN input on the VCR using the A/V connecting cable. Set the input selector on the VCR to LINE (VIDEO 1, VIDEO 2, etc.).

Notes

- When you play back standard definition image quality (STD) movies on a 4:3 TV that is not compatible with the 16:9 signal, record movies with 4:3 aspect ratio. Touch **MENU** (MENU) → [Image Quality/Size] → [Wide Mode] → [4:3] → **OK**.
- When the A/V connecting cable is used to output movies, movies are output with standard definition image quality (STD).

If your TV/VCR has a 21-pin adaptor (EUROCONNECTOR)

Use a 21-pin adaptor (sold separately) to view playback pictures.



Tips

- If you connect your camcorder to the TV using more than one type of cable to output images, the order of priority of the TV input jacks is as follows:
HDMI → component → S VIDEO → video
- HDMI (High Definition Multimedia Interface) is an interface to send both video/audio signals. The HDMI OUT jack outputs high quality images and digital audio.

On "Photo TV HD"

This camcorder is compatible with the "Photo TV HD" standard. "Photo TV HD" allows for highly-detailed, photo-like depiction of subtle textures and colors. By connecting Sony's Photo TV HD-compatible devices using the HDMI cable*, a whole new world of photos can be enjoyed in breathtaking full HD quality.

* The TV will automatically switch to the appropriate mode when [ PHOTO] is selected with the Switch Image Type button.

Deleting images

You can free media space by deleting movies and photos from recording media.

Notes

- You cannot restore images once they are deleted. Save important movies and photos in advance.
- Do not remove the battery pack or the AC Adaptor from your camcorder while deleting the images. It may damage the recording media.
- Do not eject memory card while deleting images from the memory card.
- You cannot delete protected movies and photos. Undo the protection of the movies and photos to delete them, before you try to delete them.
- The demonstration movie on your camcorder is protected.
- If you delete movies/photos that are included in saved scenarios, the scenarios will also be deleted.

Tips


- If you start playing back an image by selecting it from the Event Index screen, you can delete the image using  on the playback screen.
- To delete all images recorded in the recording media, and recover all the recordable space of the media, format the media.
- Reduced-size images which enable you to view many images at the same time on an index screen are called “thumbnails.”

1 Press  (View Images)(p. 27).


2 Touch **MENU** (MENU) → [Edit/Copy] → [Delete].

3 To select and delete movies, touch [Multiple Images].

- For 2D, after touching [Multiple Images], select [**HDD**: MOVIE]/[ PHOTO]/[ MOVIE/PHOTO]. When [**HDD**: **HSTD** Setting] is set to [**HSTD**: STD Quality], **HSTD** appears instead of **HDD**.

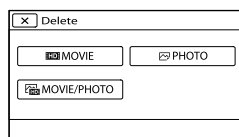

4 Touch and display the  mark on the movies or photos to be deleted.

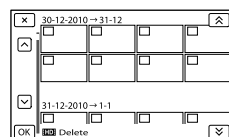


- Touch and hold the desired thumbnail so that you can confirm the image. Touch  to return to the previous screen.

5 Touch **OK** → **OK** → **OK**.

To delete all movies/photos in a event at one time

① In step 3, touch [All In Event].

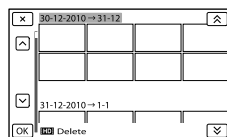


② Touch  /  to select the desired event, then touch **OK**.

- Touch and hold the desired thumbnail so that you can confirm the image. Touch  to return to the previous screen.

③ Touch **OK** → **OK**.

Useful functions available if you connect the camcorder to computer

The software PMB stored in the CD-ROM (supplied) includes functions that enable you to do more with the images recorded with the camcorder.

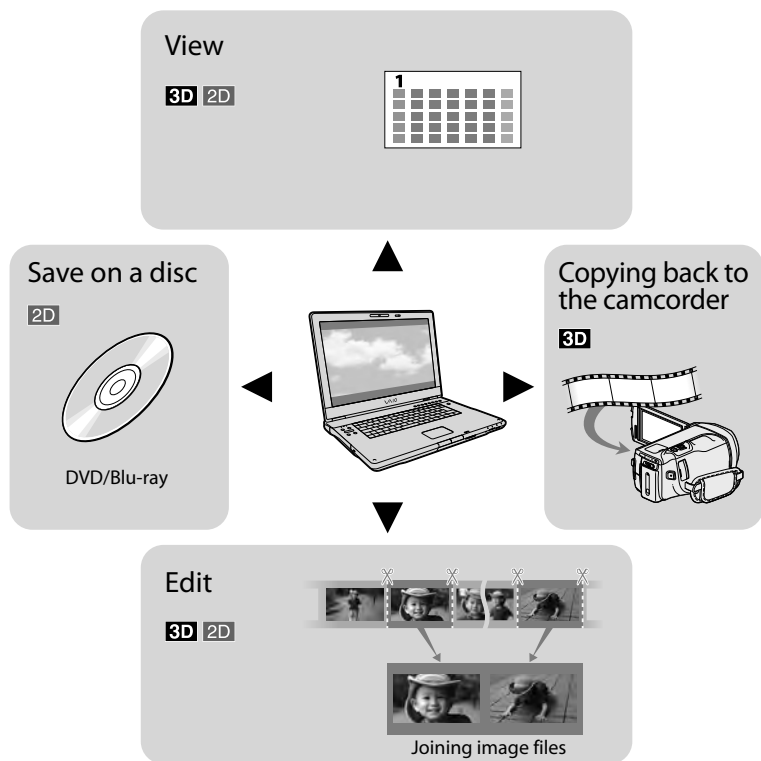

Preparing a computer

Step 1 Checking the computer system

Windows

OS* ¹
Microsoft Windows XP SP3* ² /Windows Vista SP2* ³ /Windows 7
CPU* ⁴
Intel Core Duo 1.66 GHz or faster, or Intel Core 2 Duo 1.66 GHz or faster (Intel Core 2 Duo 2.26 GHz or faster is required when processing FX/FH or 3D movies, and Intel Core 2 Duo 2.40 GHz or faster is required when processing PS movies.) However, Intel Pentium III 1 GHz or faster is sufficient for the following operations: – Importing the movies and photos to the computer – One Touch Disc Burn – Creating a Blu-ray disc/AVCHD recording disc/DVD-video (Intel Core Duo 1.66 GHz or faster is required when creating a DVD video by converting high definition image quality (HD) to standard definition image quality (STD).) – Copying a disc – Processing only the movies with standard definition image quality (STD)
Application
PMB/Music Transfer
Memory
For Windows XP: 512 MB or more (1 GB or more is recommended.) However, 256 MB or more is sufficient for processing only the movies with standard definition image quality (STD). For Windows Vista/Windows 7: 1 GB or more
Hard disk
Disk volume required for installation: Approximately 500 MB (10 GB or more may be necessary when creating AVCHD recording discs. 50 GB maximum may be necessary when creating Blu-ray discs.)

Display
Minimum 1,024 × 768 dots
Others
USB port (this must be provided as standard, Hi-Speed USB (USB 2.0 compatible)), Blu-ray disc/DVD burner (CD-ROM drive is necessary for installation) Either NTFS or exFAT file system is recommended as the hard disk file system.

Macintosh

OS
Music Transfer: Mac OS X* ⁵ (v10.4 - v10.6)

- *¹ Standard installation is required. Operation is not assured if the OS has been upgraded or in a multi-boot environment.
- *² 64-bit editions and Starter (Edition) are not supported. Windows Image Mastering API (IMAPI) Ver.2.0 or newer is required to use disc creation function, etc.
- *³ Starter (Edition) is not supported.
- *⁴ Faster processor is recommended.
- *⁵ Macintosh computer with an Intel processor.

Notes

- Operation with all computer environments is not assured.

When using a Macintosh

The supplied software “PMB” is not supported by Macintosh computers. To import the movies and photos to the computer, please contact Apple Inc.

Step 2 Installing the supplied software "PMB"

Install "PMB" before connecting your camcorder to a computer.

⚡ Notes

- Even if another version of "PMB" has already been installed on your computer, install the version of "PMB" supplied with your camcorder.
- If the version of "PMB" on the computer is newer than that of "PMB" supplied with your camcorder, a message appears. In this case, discontinue the installation.
- The new version does not include the data disc creation function. Create a data disc using software on your computer.

1 Confirm that your camcorder is not connected to the computer.

2 Turn on the computer.

- Log on as an Administrator for installation.
- Close all applications running on the computer before installing the software.

3 Place the supplied CD-ROM in the disc drive of your computer.

The installation screen appears.

- If the screen does not appear, click [Start] → [Computer] (in Windows XP, [My Computer]), then double-click [SONYPMB (E:)] (CD-ROM)*.

* Drive names (such as (E:)) may vary depending on the computer.

4 Click [Install].

5 Select the country or region.


6 Select the language for the application to be installed, then proceed to the next screen.

7 Read the terms of the license agreement carefully. If you agree to the terms, change ☐ to ☒, and then click [Next] → [Install].

8 Follow the instructions that appear on the computer screen to continue the installation.

- You may be required to install some other applications included on the disc at the same time. If the installation display appears, follow the instructions that appear on the screen.
- When you are required to restart the computer, follow the instructions that appear on the screen and restart it.
- Connect the camcorder to the computer when you are instructed to do so.

9 Connect the camcorder to the computer using the USB cable, then touch [USB Connect] on the LCD screen of the camcorder.

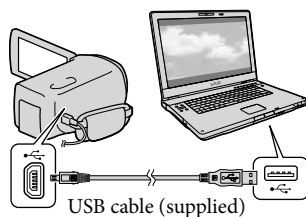

10 When the installation is completed, remove the CD-ROM from the computer.

- Click  (PMB icon) that appears on the desktop of the computer to start up the software.
-

Notes

- To create discs or use other functions on Windows XP, Image Mastering API v2.0 for Windows XP should be installed. If Image Mastering API v2.0 for Windows XP has not been installed yet, select it from required programs on the installation screen and install it following the procedures displayed. (The computer must be connected to the internet for the installation.) You may install Image Mastering API v2.0 for Windows XP in response to the message displayed when you try to start those functions.
- Operation is not guaranteed if you read or write video data from or to the camcorder using software other than the supplied “PMB.” For the information on the compatibility of the software you are using, consult the manufacturer of the software.

To disconnect your camcorder from the computer

- ① Click the  icon at the bottom right of the desktop of the computer → [Safely remove USB Mass Storage Device].



- ② Touch [Cancel] → [Yes] on the camcorder screen.

- ③ Disconnect the USB cable.

- If you are using Windows 7, the  icon may not appear on the desktop of the computer. In this case, you can disconnect the camcorder from your computer without following the procedures described above.

Notes

- Do not format the internal memory of the camcorder using a computer. If you do this, the camcorder will not operate correctly.
- Do not insert AVCHD recording discs that have been created using the “PMB” software to DVD players or recorders, as these devices do not support the AVCHD standard. If you do, you may not be able to remove the disc from these devices.
- When you access the camcorder from the computer, use the supplied software “PMB.” Do not modify the files or folders on the camcorder from the computer. The image files may be damaged or may not be played back.
- Operation is not guaranteed, if you operate the data on the camcorder from the computer.
- The camcorder automatically divides an image file that exceeds 2 GB or larger and saves the parts as separate files. All image files may be shown as separate files on a computer, however, the files will be handled properly by the import function of the camcorder or the “PMB” software.
- Use the supplied “PMB” software when you import long movies or edited images from the camcorder to a computer. If you use other software, the images may not be imported correctly.
- When you delete image files, follow the steps on page 36.
- You can create a Blu-ray disc from 2D movies by using a computer with a Blu-ray disc burner. Install the BD Add-on Software for “PMB.”

Starting PMB (Picture Motion Browser)

- 1 Double-click the “PMB” short-cut icon on the computer screen.



The PMB software starts up.

- 2 Double-click the “PMB Help” short-cut icon on the computer screen to see how to use “PMB.”



⚡ Notes




- If the icon is not displayed on the computer screen, click [Start] → [All Programs] → [PMB] → the desired item.

💡 Tips

- Double-click “PMB Launcher” on the desktop of the computer. This allows you to start the desired function (application) by selecting one from a list of “PMB” functions.

Selecting a method for saving images with an external device

   You can save 3D movies and 2D high definition image quality (HD) movies using an external device. Select the method to be used according to the device.

Movies	External devices	Connecting cable	Page
3D/2D	 External media device Saving images on an external media device with high definition image quality (HD).	USB Adaptor Cable (supplied)	44
2D	 DVD writer other than DVDirect Express Saving images on a DVD disc with high definition image quality (HD) or with standard definition image quality (STD).	USB cable (supplied)	47
	 Hard disk recorder, etc. Saving images on a DVD disc with standard definition image quality (STD).	A/V connecting cable (supplied)	48

Movies that are recorded with standard definition image quality (STD)

Use the A/V connecting cable to connect the camcorder to an external device in which images are saved (p. 48).

Notes

- The AVCHD recording disc can be played back only on AVCHD format compatible devices.
- Discs with high definition image quality (HD) images recorded should not be used in DVD players/recorders. Because DVD players/recorders are not compatible with the AVCHD format, DVD players/recorders may fail to eject the disc.
- Delete the demonstration movie when copying or creating discs. If it is not deleted, the camcorder may not operate correctly. However, you cannot recover the demonstration movie once you delete it.

The devices on which the created disc can be played back

DVD disc with high definition image quality (HD)

AVCHD format playback devices, such as a Sony Blu-ray disc player or a PlayStation®3.

DVD disc with standard definition image quality (STD)

Ordinary DVD playback devices, such as a DVD player.

Notes

- Always maintain your PlayStation®3 to use the latest version of the PlayStation®3 system software.
- The PlayStation®3 may not be available in some countries/regions.

Saving images on an external media device

You can save movies and photos on an external media device (USB storage devices), such as an external hard disk drive. You can also play back images on the camcorder or another playback device.

Notes

- Refer to the instruction manual supplied with the external media device.

Tips

- You can save 3D movies on an external media device as they are.
- You can import images saved on the external media device to your computer by using the supplied software “PMB.”

Functions available after saving images on an external media device

- playback of images through the camcorder (p. 46)
- importing images to “PMB”

Devices that cannot be used as an external media device

- You cannot use the following devices as an external media device.
 - media devices with a capacity exceeding 2 TB
 - ordinary disc drive such as CD or DVD drive
 - media devices connected via a USB hub
 - media devices with built-in USB hub
 - card reader


Notes

- You may not be able to use external media devices with a code function.
- The FAT file system is available for your camcorder. If the storage medium of the external device was formatted for the NTFS file system, etc., format the external media device using the camcorder before use. The format screen appears when an external media device is connected to your camcorder. Make sure that important data has not previously been saved on the external media device before you format it using the camcorder.

- Operation is not assured with every device satisfying requirements for operating.
- For details on available external media devices, go to the Sony support website in your country/region.

- 1 Connect the AC Adaptor and the power cord (mains lead) to the DC IN jack of your camcorder and the wall outlet (wall socket) (p. 12).
- 2 If the external media device has the AC power cable, connect it to the wall outlet (wall socket).
- 3 Connect the USB Adaptor Cable (supplied) to the external media device.
- 4 Connect the USB Adaptor Cable to the Ψ (USB) jack of your camcorder.

Make sure not to disconnect the USB cable while [Preparing image database file. Please wait.] is displayed on the LCD screen. If [Repair Img. DB F.] is displayed on the camcorder screen, touch **OK**.

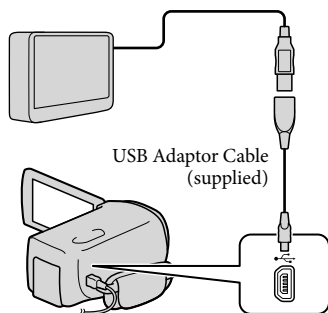

5 Connect the external media device to the camcorder and touch [Copy.] on the camcorder screen.

Movies and photos that are stored on one of the camcorder's recording media selected in [Media Select], and that have not yet been saved on external media device can be saved on the connected media device at this time.

- This operation is available only when there are newly recorded images.

6 After operation is completed, touch **OK** on the camcorder screen.

When connecting an external media device

The images saved in the external media device are displayed on the LCD screen. When an external media device is connected, the USB icon will appear on the Event View screen, etc.



You can make menu settings of the external media device such as deleting images. Touch **MENU** (MENU) → [Edit/Copy] on Event View.

To disconnect the external media device

- ① Touch **⏏** while the camcorder is in the playback standby mode ([Event View] or Event Index is displayed) of the external media device.
- ② Disconnect the USB Adaptor Cable.

⚡ Notes

- The number of scenes you can save on the external media device are as follows. However, even if the external media device has free space, you cannot save scenes exceeding the following number.
 - High definition image quality (HD) movies: Max. 3,999
 - Standard definition image quality (STD) movies: Max. 9,999
 - Photos: Max. 40,000
- The number of scenes may be smaller depending on the camcorder setting and the type of images recorded.

Saving desired movies and photos

You can save desired images in the camcorder to the external media device.

- 1 Connect the camcorder to the external media device and touch [Play without copying.].
Event View of the external medium is displayed.


- 2 Touch **MENU** (MENU) → [Edit/Copy] → [Copy].

3 Follow the instructions that appear on the screen to select the recording media, image selection methods and type of the image.

- You cannot copy images from an external media device to the internal recording medium on the camcorder.

4 When you selected [Multiple Images], touch the image to be saved.

✓ appears.

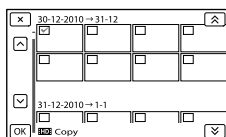

- Press and hold the image down on the LCD screen to confirm the image. Touch **✕** to return to the previous screen.
- If you select [All In Event], select the event to copy with **⏏** / **⏏**. You cannot select multiple events.

5 Touch **OK** → **OK** → **OK** on the camcorder screen.

Playing back images in the external media device on the camcorder

1 Connect the camcorder to the external media device and touch [Play without copying].

Event View of the external media device is displayed.

2 Select the image you want to view and play back the image (p. 27).

- You can also view images on a TV connected to your camcorder (p. 32).
- You can play back the high definition image quality (HD) movies on your computer using [Player for AVCHD]. Start [Player for AVCHD], and select the drive where the external media device is connected with [Settings].

To perform [Direct Copy] manually

You can perform [Direct Copy] manually while the camcorder is connected to an external media device.

- ① Touch **MENU** (MENU) → [Edit/Copy] → [Direct Copy] on the [Event View] screen of the external media device.
- ② Touch [Copy images that have not been copied.].
- ③ Touch **OK** → **OK**.

Notes

- If your camcorder does not recognize the external media device, try the following operations.
 - Reconnect the USB Adaptor Cable to your camcorder.
 - If the external media device has the AC power cord (mains lead), connect it to the wall outlet (wall socket).

Creating a high definition image quality (HD) disc with a DVD writer, etc., other than DVDirect Express


Use the USB cable to connect your camcorder to a disc creation device, which is compatible with high definition image quality (HD) movies, such as a Sony DVD writer. Refer also to the instruction manuals supplied with the device to be connected.

⚡ Notes

- You cannot save 3D movies.
- Sony DVD writer may not be available in some countries/regions.

1 Connect the AC Adaptor and the power cord (mains lead) to the DC IN jack of your camcorder and the wall outlet (wall socket) (p. 12).

2 Turn on your camcorder, and connect a DVD writer, etc. to your camcorder with the USB cable (supplied).

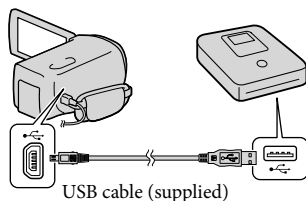

The [USB Select] screen appears on the camcorder screen.

- If the [USB Select] screen does not appear, touch **MENU** (MENU) → [Setup] → [↔ (↔ Connection)] → [USB Connect].

3 Touch [USB Connect] on the camcorder screen.

4 Record movies on the connected device.

- For details, refer to the instruction manuals supplied with the device to be connected.

5 After the operation is completed, touch **×** → **OK** on the camcorder screen.


6 Disconnect the USB cable.

Creating a standard definition image quality (STD) disc with a recorder, etc.

You can copy images played back on your camcorder on a disc or video cassette, by connecting your camcorder to a disc recorder, a Sony DVD writer, etc., other than DVDirect Express, with the A/V connecting cable. Connect the device in either way of **1** or **2**. Refer also to the instruction manuals supplied with the devices to be connected.

Notes

- 3D movies are converted to 2D with standard definition image quality (STD).
- Connect your camcorder to the wall outlet (wall socket) using the supplied AC Adaptor for this operation (p. 12).
- Sony DVD writer may not be available in some countries/regions.
- High definition image quality (HD) movies will be copied with standard definition image quality (STD).

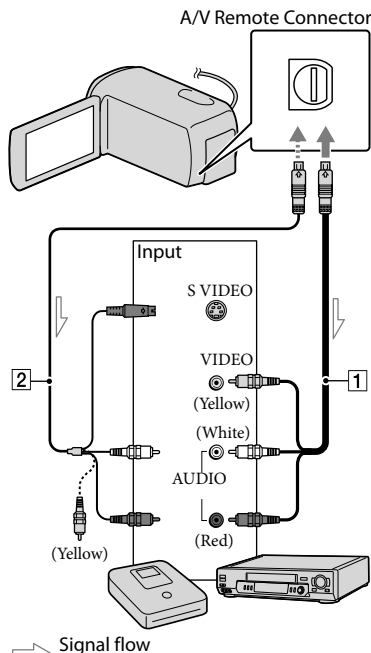

1 A/V connecting cable (supplied)

2 A/V connecting cable with S VIDEO (sold separately)

By using this cable, higher quality images can be produced than with an A/V connecting cable. Connect the white and red plug (left/right audio) and the S VIDEO plug (S VIDEO channel) of the A/V connecting cable with an S VIDEO cable. If you connect the S VIDEO plug only, you will hear no sound. The yellow plug (video) connection is not necessary.

1 Insert the recording media in the recording device.

- If your recording device has an input selector, set it to the input mode.

2 Connect your camcorder to the recording device (a disc recorder, etc.) with the A/V connecting cable **1** (supplied) or an A/V connecting cable with S VIDEO **2** (sold separately).

- Connect your camcorder to the input jacks of the recording device.

3 Start playback on your camcorder, and record it on the recording device.

- Refer to the instruction manuals supplied with your recording device for details.

4 When dubbing is finished, stop the recording device, and then your camcorder.

⚡ Notes

- Since copying is performed via analog data transfer, the image quality may deteriorate.
- You cannot copy images to recorders connected with an HDMI cable.
- To copy date/time information and camera data, touch **MENU** (MENU) → [Setup] → [] ([] Playback Settings) → [Data Code] → a desired setting → **OK**.
- When the screen size of display devices (TV, etc.) is 4:3, touch **MENU** (MENU) → [Setup] → [↔] (↔ Connection) → [TV Type] → [4:3] → **OK**.

- When you connect a monaural device, connect the yellow plug of the A/V connecting cable to the video input jack, and the white (left channel) or the red (right channel) plug to the audio input jack on the device.

Using menus

You can enjoy using your camcorder more by making good use of menu operations. The camcorder has various menu items under each of 6 menu categories.

 **Shooting Mode (Items for selecting a shooting mode)** → p. 51

 **Camera/Mic (Items for customized shooting)** → p. 51

 **Image Quality/Size (Items for setting up image quality or size)** → p. 52


 **Playback Function (Items for playback)** → p. 52

 **Edit/Copy (Items for editing)** → p. 52

 **Setup (Other setup items)** → p. 53

Operating menus

Follow the procedures explained below to set the menu items.

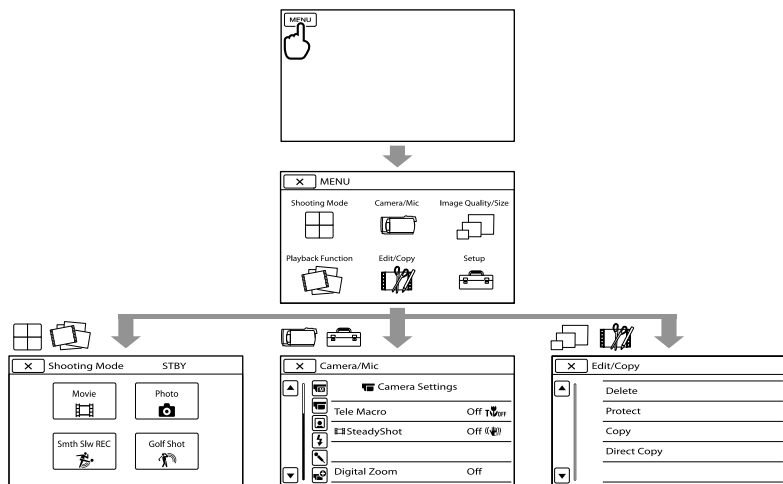

The [Camera/Mic] and [Setup] menus have sub-categories. Touch the sub-category icon, and the screen changes to other sub-category menus.

Grayed out menu items or settings are not available.

Notes

- You may not be able to set some menu items, depending on the recording or playback conditions.
- Touch  to finish setting the menu or to return to the previous menu screen.

Menu lists

Shooting Mode

- Movie Records movies.
- Photo Shoots photos.
- Smth Slw REC Records fast moving subjects in slow-motion.
- Golf Shot Divides two seconds of fast movement into frames which are then recorded as a movie and photos.

Camera/Mic

(Manual Settings)

- White Balance Adjusts the color balance to the brightness of the recording environment.
- Spot Meter/Fcs Adjusts the brightness and focus for the selected subject simultaneously.
- Spot Meter Adjusts the brightness of images to a subject you touch on the screen.
- Spot Focus Focuses on a subject you touch on the screen.
- Exposure Adjusts the brightness of movies and photos.
- Focus Focuses manually.
- IRIS Sharpens the subject with its background blurred or sharpens the whole image.
- Shutter Speed Adjusts Shutter Speed. When you shoot a moving subject at a higher shutter speed, it appears as if frozen on the image. At a lower shutter speed, the subject appears as if it is flowing.
- AE Shift Adjusts the exposure. Touch  if the subject is white or the backlight is bright, or touch  if the subject is black or the light is dim.
- White Balance Shift Adjusts the white balance.
- Low Lux Records bright color images in the dim.

(Camera Settings)

- Auto 3D Lens Adjust Automatically corrects the vertical position of the right and left movies to record 3D movies that can be viewed comfortably, without blurring.
- Scene Selection Selects an appropriate recording setting according to the type of scene, such as night view or beach.
-  Fader Fades scenes in or out.
-  Self-Timer Sets the self-timer when your camcorder is in photo recording mode.
- Tele Macro Shoots a subject in focus with the background out of focus.
-  SteadyShot Sets the SteadyShot function when recording movies.
-  SteadyShot Sets the SteadyShot function when shooting photos.
- Digital Zoom Sets the maximum zoom level of the digital zoom that exceeds the zoom level of the optical zoom.
- Auto Back Light Adjusts the exposure for backlit subjects automatically.
- Dial Setting Assigns a function to the MANUAL dial.

() Face

- Face Detection Adjusts the image quality of the face(s) automatically.
- Smile Shutter Automatically takes a shot whenever a smile is detected.
- Smile Sensitivity Sets the smile detection sensitivity using the smile shutter function.

() Flash

- Flash Sets how the flash is activated.
- Flash Level Sets the brightness of flash.
- Red Eye Reduction Prevents redeye when shooting with flash.

() Microphone

- Blt-in Zoom Mic Records movies with vivid sound appropriate to the zoom position.
- Wind Noise Reduct. Reduces the wind noise.
- Audio Mode Sets the recording sound format (5.1ch surround/2ch stereo).
- Micref Level Sets the microphone level.

() Shooting Assist

- Guide Frame Displays the frame to make sure the subject is horizontal or vertical.
- Display Setting Sets the duration that icons or indicators are displayed on the LCD screen.
- Audio Level Display Displays the audio level meter on the LCD screen.

Image Quality/Size

-  REC Mode Sets the mode to record movies. When recording fast moving subject, a high image quality is recommended.
-  Frame Rate Sets the frame rate to record movies.
-   Setting Sets image quality for recording, playback, or editing movies.
-  Wide Mode Sets the horizontal to vertical ratio when recording movies with standard definition image quality (STD).
-  x.v.Color Records wider range of colors.
-  Image Size Sets the photo size.

Playback Function

- Event View Shows the Event View display.
- Highlight Movie Starts Highlight Playback.
-  Scenario Starts playing Highlight Scenario that has been saved.

Edit/Copy

- Delete Deletes movies or photos.
- Protect Protects movies or photos to avoid deleting.
- Copy Copies images back and forth between the selected internal recording medium and the inserted memory card.
- Direct Copy Copies images stored on the internal recording medium or on a memory card to some type of external media.

 Media Settings)

- Media Select Sets the type of media to be used for recording movies or photos (p. 18).
- Media Info Displays information on the recording media, such as free space.
- Format Deletes all data on the internal recording media or a memory card.
- Repair Img. DB F. Repairs the image database file on the internal recording media or a memory card (p. 56).
- File Number Sets how to assign the file number.

 Playback Settings)

- Data Code Sets the date and time.
- Volume Adjusts the volume of playback sound (p. 29).
- Download Music Downloads music files that can be played with Highlight Playback.
- Empty Music Deletes music files.

 Connection)

- TV Type Converts the signal depending on the TV connected (p. 32).
- Component Select this option when you connect your camcorder to a TV with the component input jack.
- HDMI 3D Setting Select the output format of the right and left images when you connect your camcorder to a 3D TV with the HDMI cable (supplied).
- HDMI Resolution Selects the output image resolution when connecting your camcorder to a TV with the HDMI cable (supplied).
- CTRL FOR HDMI Sets whether or not the TV's Remote Commander is to be used when the camcorder is connected to a "BRAVIA" Sync compatible TV with the HDMI cable (supplied).
- USB Connect Selects which type of media on the camcorder is to be used when the camcorder is connected to an external device via USB.
- USB Connect Setting ... Sets the connection mode when the camcorder is connected to a computer or an USB device.
- Disc Burn Allows you to save 2D images onto discs by a single press of a button.

 General Settings)

- Beep Sets whether the camcorder sounds operation beeps or not.
- LCD Brightness Adjusts the brightness of the LCD screen.
- REC Lamp Sets the recording lamp to light up or not.
- Remote Ctrl Sets whether the Wireless Remote Commander is to be used or not.
- A. Shut Off Changes the [A. Shut Off] setting (p. 13).
- Power On By LCD Sets whether or not the camcorder is turned on and off when you open and close the LCD screen.
- Language Setting Sets the display language (p. 17).
- Battery Info Displays the battery information.
- Demo Mode Sets whether the demonstration appears or not.

 Clock Settings)

- Date & Time Setting Sets the [Date & Time], [Summer Time], or [Date & Time Format] (p. 14).
- Area Setting Adjusts for a time difference without stopping the clock (p. 14).

Getting detailed information from the “Handycam” Handbook

The “Handycam” Handbook is a user guide designed to be read on a computer screen. The “Handycam” Handbook is intended to be read when you want to know more about operating your camcorder.

- 1 To install the “Handycam” Handbook on a Windows computer, place the supplied CD-ROM in the disc drive of your computer.

The installation screen appears.

- If the screen does not appear, click [Start] → [Computer] (in Windows XP, [My Computer]), then double-click [SONYPMB(E:)](CD-ROM)* → [install.exe].

* Drive names (such as (E:)) may vary depending on the computer.

- 2 Click [Handbook].
- 3 Click the desired language and the model name of your camcorder → [Install], and follow the on-screen instructions to install “Handycam” Handbook.

- The model name of your camcorder is printed on the bottom surface.

To view the “Handycam” Handbook, double-click the short-cut icon on the computer screen.



- When using a Macintosh, open the [Handbook] – [GB] folder in the CD-ROM, then copy [Handbook.pdf].
- You need Adobe Reader to read “Handycam” Handbook. If it is not installed on your computer, you can download it from the Adobe Systems web page: <http://www.adobe.com/>
- Refer to “PMB Help” for details on the supplied software “PMB” (p. 39).

? Troubleshooting

If you run into any problems using your camcorder, follow the steps below.

- ① Check the list (p. 55 to 57), and inspect your camcorder.



- ② Remove the power source, attach the power source again after about 1 minute, and turn the camcorder on.



- ③ Press RESET (p. 68) using a pointed object, and turn the camcorder on. If you press RESET, all settings, including the clock setting, are reset.



- ④ Contact your Sony dealer or local authorized Sony service facility.

- Your camcorder may be required to initialize or change the current internal memory of your camcorder, depending on the problem. In the event of this, the data stored on the internal memory will be deleted. Be sure to save the data on the internal memory on other media (backup) before sending your camcorder for repair. We will not compensate you for any loss of internal memory data.
- During repair, we may check a minimum amount of data stored on the internal memory in order to investigate the problem. However, your Sony dealer will neither copy nor retain your data.
- See the "Handycam" Handbook (p. 54) for details on the symptoms of your camcorder, and "PMB Help" (p. 41) on connecting your camcorder to a computer.

The power does not turn on.

- Attach a charged battery pack to the camcorder (p. 11).
- Connect the plug of the AC Adaptor to the wall outlet (wall socket) (p. 12).

The camcorder does not operate even when the power is set to on.

- It takes a few seconds for your camcorder to be ready to shoot after the power is turned on. This is not a malfunction.
- Disconnect the AC Adaptor from the wall outlet (wall socket) or remove the battery pack, then reconnect it after about 1 minute. If your camcorder still does not work, press RESET (p. 68) using a pointed object. (If you press RESET, all settings, including the clock setting, are reset.)
- The temperature of your camcorder is extremely high. Turn off the camcorder and leave it for a while in a cool place.
- The temperature of your camcorder is extremely low. Leave the camcorder with the power turned on. If you still cannot operate your camcorder, turn off the camcorder and take it to a warm place. Leave the camcorder there for a while, then turn on the camcorder.

Your camcorder gets warm.

- Your camcorder may become warm during operation. This is not a malfunction.

The power abruptly turns off.

- Use the AC Adaptor (p. 12).
- Turn on the power again.
- Charge the battery pack (p. 11).

Pressing START/STOP or PHOTO does not record images.

- Press MODE to turn on the  (Movie) or  (Photo) lamp.
- Your camcorder is recording the image you have just shot on the recording media. You cannot make any new recordings during this period.
- The recording media is full. Delete unnecessary images (p. 36).
- Total number of movie scenes or photos has exceeded the recordable capacity of your camcorder (p. 58). Delete unnecessary images (p. 36).

The recording stops.

- The temperature of your camcorder is extremely high/low. Turn off your camcorder and leave it for a while in a cool/warm place.

"PMB" cannot be installed.

- Check the computer environment or installation procedure required to install "PMB" (p. 38).

"PMB" does not work correctly.

- Quit "PMB" and restart your computer.

The camcorder is not recognized by the computer.

- Disconnect devices from the USB jack of the computer other than the keyboard, mouse, and your camcorder.
- Disconnect the USB cable from the computer and your camcorder, and restart the computer, then connect the computer and your camcorder again in an orderly manner.

Self-diagnosis display/Warning indicators

If indicators appear on the LCD screen, check the following.

If the problem persists even after you have tried to fix a couple of times, contact your Sony dealer or local authorized Sony service facility. In this case, when you contact them, give them all the numbers of the error code beginning with C or E.

C:04:□□

- The battery pack is not an "InfoLITHIUM" battery pack V series. Use an "InfoLITHIUM" battery pack (V series) (p. 11).
- Connect the DC plug of the AC Adaptor to your camcorder securely (p. 11).

C:06:□□

- The battery pack temperature is high. Change the battery pack or place it in a cool place.

C:13:□□ / C:32:□□

- Remove the power source. Reconnect it and operate your camcorder again.

E:□□:□□

- Follow the steps from ② on page 55.



- Battery power is low.



- The battery pack temperature is high. Change the battery pack or place it in a cool place.



- Because the temperature of your camcorder has reached a level where HDMI output has stopped, no image is displayed on the connected monitor, etc. Leave the camcorder until the temperature decreases. However, you can continue recording on the camcorder.



- No memory card is inserted (p. 19).
- When the indicator flashes, there is not enough free space for recording images. Delete unnecessary images (p. 36), or format the memory card after storing the images on other media.
- The Image Database File is damaged. Check the data base file by touching **MENU** (MENU) → [Setup] → [Media Settings] → [Repair Img. DB F.] → the recording medium.



- The memory card is damaged. Format the memory card with your camcorder (p. 53).



- Incompatible memory card is inserted (p. 19).
-



- The memory card is write-protected.
 - Access to the memory card was restricted on another device.
-



- There is something wrong with the flash.
-



- The amount of light is not sufficient. Use the flash.
 - The camcorder is unsteady. Hold the camcorder steady with both hands. However, note that the camera-shake warning indicator does not disappear.
-



- The recording media is full. Delete unnecessary images (p. 36).
- Photos cannot be recorded during processing. Wait for a while, then record.
- When [REC Mode] is set to [Highest Quality **FX**] or [50p Quality **PS**], you cannot capture photos while recording movies. Furthermore, if [Frame Rate] is set to [25p], you cannot record photos while the camcorder is in movie recording standby mode.

Recording time of movies/number of recordable photos

“HD” stands for high definition image quality, and “STD” stands for standard image quality.

Expected time of recording and playback with each battery pack

Recording time

Approximate time available when you use a fully charged battery pack.

3D

(unit: minute)

Battery pack	Continuous recording time	Typical recording time
NP-FV50	75	35
NP-FV70 (supplied)	160	80
NP-FV100	320	160

2D

(unit: minute)

Battery pack	Continuous recording time		Typical recording time	
Image quality	HD	STD	HD	STD
NP-FV50	110	120	55	60
NP-FV70 (supplied)	235	250	115	125
NP-FV100	470	500	235	250

- Each recording time is measured when the camcorder is recording high definition image quality (HD) movies with [ REC Mode] set to [Standard ].
- Typical recording time shows the time when you repeat recording start/stop, switching the MODE lamp, and zooming.
- Times measured when using the camcorder at 25 °C (77 °F). 10 °C to 30 °C (50 °F to 86 °F) is recommended.

- The recording and playback time will be shorter when you use your camcorder in low temperatures.
- The recording and playback time will be shorter depending on the conditions under which you use your camcorder.

Playing time

Approximate time available when you use a fully charged battery pack.

3D

(unit: minute)

Battery pack	
NP-FV50	125
NP-FV70 (supplied)	260
NP-FV100	515

2D

(unit: minute)

Battery pack		
Image quality	HD	STD
NP-FV50	150	165
NP-FV70 (supplied)	315	345
NP-FV100	625	680

Expected recording time of movies

Internal memory

High definition image quality (HD) in h (hour) and m (minute)

Recording mode	Recording time
3D	5 h 15 m (5 h 15 m)
PS	5 h 15 m (5 h 15 m)
FX	6 h 15 m (6 h 15 m)
FH	8 h 25 m (8 h 25 m)
HQ	14 h 55 m (11 h 20 m)
LP (5.1ch)*	25 h 45 m (21 h 10 m)
LP (2ch)*	26 h 40 m (21 h 45 m)

Standard definition image quality (STD) in h (hour) and m (minute)

Recording mode	Recording time
HQ (5.1ch)*	15 h 25 m (14 h 15 m)
HQ (2ch)*	15 h 55 m (14 h 35 m)

* You can change the recording sound format with [Audio Mode] (p. 52).

Notes

- The number in () is the minimum recordable time.

Tips

- You can record movies of a maximum of 3,999 scenes with 3D, 3,999 scenes with high definition image quality (HD), and 9,999 scenes with standard definition image quality (STD).
- The maximum continuous recordable time of a movie is as follows.
 - 3D: about 6 hours 30 minutes
 - 2D: about 13 hours

- If you want to record up to the maximum recording time indicated in the table, you need to delete the demonstration movie on your camcorder.
- Your camcorder uses the VBR (Variable Bit Rate) format to automatically adjust image quality to suit the recording scene. This technology causes fluctuations in the recording time of the media. Movies containing quickly moving and complex images are recorded at a higher bit-rate, and this reduces the overall recording time.

Memory card

High definition image quality (HD)

	(unit: minute)				
	2 GB	4 GB	8 GB	16 GB	32 GB
3D	9 (9)	15 (15)	35 (35)	75 (75)	150 (150)
PS	9 (9)	15 (15)	35 (35)	75 (75)	150 (150)
FX	10 (10)	20 (20)	40 (40)	85 (85)	180 (180)
FH	10 (10)	25 (25)	60 (60)	120 (120)	245 (245)
HQ	25 (15)	50 (35)	105 (80)	210 (160)	430 (325)
LP (5.1ch)*	40 (35)	90 (70)	180 (150)	370 (300)	745 (610)
LP (2ch)*	45 (35)	90 (75)	190 (155)	380 (310)	770 (630)

Standard definition image quality (STD)

	(unit: minute)				
	2 GB	4 GB	8 GB	16 GB	32 GB
HQ (5.1ch)*	25 (20)	50 (50)	110 (100)	220 (205)	445 (410)
HQ (2ch)*	25 (25)	55 (50)	110 (100)	225 (210)	460 (420)

* You can change the recording sound format with [Audio Mode] (p. 52).

Notes

- The recordable time may vary depending on the recording and subject conditions and [ REC Mode] and [ Frame Rate] (p. 52).
- The number in () is the minimum recordable time.

Expected number of recordable photos

Internal memory

You can record the maximum 40,000 photos.

Memory card

	
2 GB	560
4 GB	1100
8 GB	2250
16 GB	4550
32 GB	9200

- The selected image size is effective when the  (Photo) lamp is lit.
- The number of recordable photos of memory card shown is for the maximum image size of your camcorder. The actual number of recordable photos is displayed on the LCD screen during recording (p. 66).
- The number of recordable photos of memory card may vary depending on the recording conditions.

Notes

- The unique pixel array of Sony's ClearVid and the image processing system (BIONZ) allow still image resolution equivalent to the sizes described.

Tips

- You can also use memory card with a capacity of under 1 GB for recording photos.
- The following list shows the bit-rate, pixels and aspect ratio of each recording mode (movie + audio, etc.).
 - 3D movie:
 - Max. 28 Mbps 1,920 × 1,080 pixels/16:9
 - High definition image quality (HD):
 - PS: Max. 28 Mbps 1,920 × 1,080 pixels/16:9
 - FX: Max. 24 Mbps 1,920 × 1,080 pixels/16:9
 - FH: Approx. 17 Mbps (average) 1,920 × 1,080 pixels/16:9
 - HQ: Approx. 9 Mbps (average) 1,440 × 1,080 pixels/16:9
 - LP: Approx. 5 Mbps (average) 1,440 × 1,080 pixels/16:9
 - Standard definition image quality (STD):
 - HQ: Approx. 9 Mbps (average) 720 × 576 pixels/16:9, 4:3
- The photo recording pixels and the aspect ratio.
 - Photo recording mode:
 - 3,072 × 2,304 dots/4:3
 - 3,072 × 1,728 dots/16:9
 - 1,600 × 1,200 dots/4:3
 - 640 × 480 dots/4:3
 - Dual recording:
 - 3,072 × 1,728 dots/16:9
 - 2,304 × 1,728 dots/4:3
 - Capturing a photo from a movie:
 - 1,920 × 1,080 dots/16:9
 - 640 × 360 dots/16:9
 - 640 × 480 dots/4:3

Precautions

On use and care

- Do not use or store the camcorder and accessories in the following locations:
 - Anywhere extremely hot, cold or humid. Never leave them exposed to temperatures above 60 °C (140 °F), such as under direct sunlight, near heaters or in a car parked in the sun. They may malfunction or become deformed.
 - Near strong magnetic fields or mechanical vibration. The camcorder may malfunction.
 - Near strong radio waves or radiation. The camcorder may not be able to record properly.
 - Near AM receivers and video equipment. Noise may occur.
 - On a sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired.
- Operate your camcorder on DC 6.8 V/7.2 V (battery pack) or DC 8.4 V (AC Adaptor).
- For DC or AC operation, use the accessories recommended in these operating instructions.
- Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. Sometimes this malfunction cannot be repaired.
- If any solid object or liquid gets inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping or stepping on the product. Be particularly careful of the lens.
- Keep the camcorder turning off when you are not using your camcorder.
- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- When disconnecting the power cord (mains lead), pull it by the plug and not the cord (lead).
- Do not damage the power cord (mains lead) such as by placing anything heavy on it.
- Do not use a deformed or damaged battery pack.

- Keep metal contacts clean.
- If the battery electrolytic liquid has leaked:
 - Consult your local authorized Sony service facility.
 - Wash off any liquid that may have contacted your skin.
 - If any liquid gets in your eyes, wash with plenty of water and consult a doctor.

When not using your camcorder for a long time

- To keep your camcorder in optimum state for a long time, turn it on and let it run by recording and playing back images about once a month.
- Use up the battery pack completely before storing it.

LCD screen

- Do not exert excessive pressure on the LCD screen, as it may cause damage.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

To clean the LCD screen

- If fingerprints or dust make the LCD screen dirty, it is recommended that you use a soft cloth to clean it.

On handling the casing

- If the casing is soiled, clean the camcorder body with a soft cloth lightly moistened with water, and then wipe the casing with a dry soft cloth.
- Avoid the following to avoid damage to the finish:
 - Using chemicals such as thinner, benzene, alcohol, chemical cloths, repellent, insecticide and sunscreen
 - Handling the camcorder with above substances on your hands
 - Leaving the casing in contact with rubber or vinyl objects for a long period of time

About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances:
 - When there are fingerprints on the lens surface
 - In hot or humid locations
 - When the lens is exposed to salty air such as at the seaside
- It is recommended that you use [Auto 3D Lens Adjust] after wiping the lens.
- Store in a well-ventilated location subject to little dirt or dust.
- To prevent mold, periodically clean the lens as described above.

On charging the pre-installed rechargeable battery

Your camcorder has a pre-installed rechargeable battery to retain the date, time, and other settings even when the camcorder is turned off. The pre-installed rechargeable battery is always charged while your camcorder is connected to the wall outlet (wall socket) via the AC Adaptor or while the battery pack is attached. The rechargeable battery will be fully discharged in about 3 months if you do not use your camcorder at all. Use your camcorder after charging the pre-installed rechargeable battery. However, even if the pre-installed rechargeable battery is not charged, the camcorder operation will not be affected as long as you are not recording the date.

Procedures

Connect your camcorder to a wall outlet (wall socket) using the supplied AC Adaptor, and leave it with the LCD screen closed for more than 24 hours.

Note on disposal/transfer of the camcorder

Even if you delete all movies and still images, or perform [Format], data on the internal recording media may not be completely erased. When you transfer the camcorder, it is recommended that you perform [Empty]


(See “Getting detailed information from the “Handycam” Handbook” on page 54.) to prevent the recovery of your data. Also, when you dispose of the camcorder, it is recommended that you destroy the actual body of the camcorder.

Note on disposal/transfer of memory card

Even if you delete data in the memory card or format the memory card on your camcorder or a computer, you may not delete data from the memory card completely. When you give the memory card to somebody, it is recommended that you delete data completely using data deletion software on a computer. Also, when you dispose of the memory card, it is recommended that you destroy the actual body of the memory card.

To change the battery of the Wireless Remote Commander

- ① While pressing on the tab, inset your fingernail into the slit to pull out the battery case.
- ② Place a new battery with the + side facing up.
- ③ Insert the battery case back into the Wireless Remote Commander until it clicks.

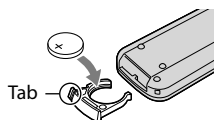

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

- When the lithium battery becomes weak, the operating distance of the Wireless Remote Commander may shorten, or the Wireless Remote Commander may not function properly. In this case, replace the battery with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.

Specifications

System

Signal format: PAL color, CCIR standards
HDTV 1080/50i 1080/50p specification

Movie recording format:

HD:
3D: MVC (original format)
2D: MPEG-4 AVC/H.264 AVCHD format
compatible (1080/50p original format)
STD: MPEG2-PS

Audio recording system:

Dolby Digital 2ch/5.1ch
Dolby Digital 5.1 Creator

Photo file format

DCF Ver.2.0 Compatible
Exif Ver.2.3 Compatible
MPF Baseline Compatible

Recording media (Movie/Photo)

Internal memory
64 GB
"Memory Stick PRO Duo" media
SD card (Class 4 or faster)

When measuring media capacity, 1 GB equals 1 billion bytes, a portion of which is used for system management and/or application files. The capacity that a user can use is approximately 63.9 GB.

Image device:

4.5 mm (1/4 type) CMOS sensor
Recording pixels (photo):
Max. 7 100 000 pixels*¹ (3 072 × 2 304) (4:3)
Gross: Approx. 4 200 000 pixels
Effective (movie, 16:9)*²:
3D: Approx. 1 990 000 pixels
2D: Approx. 2 650 000 pixels
Effective (photo, 16:9):
Approx. 2 650 000 pixels
Effective (photo, 4:3):
Approx. 3 540 000 pixels

Lens: G lens

3D: 10 × (Optical)
2D: 12 × (Optical)*², 17 × (Extended)*³,
160 × (Digital)
F1.8 - F3.4
f=2.9 mm - 34.8 mm (1/8 in. - 1 3/8 in.)
When converted to a 35 mm still camera
Movie*²:
3D: 34.4 mm - 344 mm (1 3/8 in. -
13 9/16 in.)
2D: 29.8 mm - 357.6 mm (1 3/16 in. -
14 1/8 in.)
Photo:
27.4 mm - 328.8 mm (1 1/8 in. - 13 in.)

Color temperature: [Auto], [One Push], [Indoor]
(3 200 K), [Outdoor] (5 800 K)

Minimum illumination

11 lx (lux) (in default setting, shutter speed
1/50 second)
3 lx (lux) ([Low Lux] is set to [On], shutter
speed 1/25 second)

*¹ The unique pixel array of Sony's ClearVid and
the image processing system (BIONZ) allow
still image resolution equivalent to the sizes
described.

*² [SteadyShot] is set to [Standard] or [Off].

*³ [SteadyShot] is set to [Active].

Input/Output connectors

A/V Remote Connector: Component/video and
audio output jack

HDMI jack: HDMI mini Connector

USB jack: mini-AB

Headphone jack: Stereo minijack (φ 3.5 mm)

MIC input jack: Stereo minijack (φ 3.5 mm)

LCD screen

Picture: 8.8 cm (3.5 type, aspect ratio 16:9)

Total number of pixels: 1 229 760 (2 562 × 480)

General

Power requirements: DC 6.8 V/7.2 V (battery
pack) DC 8.4 V (AC Adaptor)

Average power consumption:

During camera recording using the LCD
screen at normal brightness:
HD: 3D: 4.8 W, 2D: 3.3 W
STD: 3.1 W

Operating temperature: 0 °C to 40 °C (32 °F to
104 °F)

Storage temperature: -20 °C to +60 °C (-4 °F to
+140 °F)

Dimensions (approx.):

86.5 mm × 74 mm × 148.5 mm (3 7/16 in. ×
2 15/16 in. × 5 7/8 in.) (w/h/d) including the
projecting parts
86.5 mm × 74 mm × 148.5 mm (3 7/16 in.
× 2 15/16 in. × 5 7/8 in.) (w/h/d) including
the projecting parts, and the supplied
rechargeable battery pack attached

Mass (approx.)

630 g (22.2 oz) main unit only
725 g (25.6 oz) including the supplied
rechargeable battery pack

AC Adaptor AC-L200C/AC-L200D

Power requirements: AC 100 V - 240 V,
50 Hz/60 Hz

Current consumption: 0.35 A - 0.18 A

Power consumption: 18 W

Output voltage: DC 8.4 V*

Operating temperature: 0 °C to 40 °C (32 °F to 104 °F)

Storage temperature: -20 °C to + 60 °C (-4 °F to +140 °F)

Dimensions (approx.): 48 mm × 29 mm × 81 mm
(1 15/16 in. × 1 3/16 in. × 3 1/4 in.) (w/h/d)
excluding the projecting parts

Mass (approx.): 170 g (6.0 oz) excluding the
power cord (mains lead)

* See the label on the AC Adaptor for other
specifications.

Rechargeable battery pack NP-FV70

Maximum output voltage: DC 8.4 V

Output voltage: DC 6.8 V

Maximum charge voltage: DC 8.4 V

Maximum charge current: 3.0 A

Capacity

Typical: 14.0 Wh (2 060 mAh)

Minimum: 13.0 Wh (1 960 mAh)

Type: Li-ion

Design and specifications of your camcorder and
accessories are subject to change without notice.

- Manufactured under license from Dolby
Laboratories.


On trademarks

- “Handycam” and **HANDYCAM** are registered trademarks of Sony Corporation.
- “AVCHD” and “AVCHD” logotype are trademarks of Panasonic Corporation and Sony Corporation.
- “Memory Stick,”  “Memory Stick Duo,” **“MEMORY STICK DUO,”** “Memory Stick PRO Duo,” **“MEMORY STICK PRO DUO,”** “Memory Stick PRO-HG Duo,” **“MEMORY STICK PRO-HG DUO,”** “MagicGate,” **“MAGICGATE,”** “MagicGate Memory Stick” and “MagicGate Memory Stick Duo” are trademarks or registered trademarks of Sony Corporation.
- “InfoLITHIUM” is a trademark of Sony Corporation.
- “x.v.Colour” is a trademark of Sony Corporation.
- “BIONZ” is a trademark of Sony Corporation.
- **S-MASTER** is a registered trademark of Sony Corporation.
- “BRAVIA” is a registered trademark of Sony Corporation.
- “DVD Direct” is a trademark of Sony Corporation.
- Blu-ray Disc™ and Blu-ray™ are trademarks of the Blu-ray Disc Association.
- Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Microsoft, Windows, Windows Vista, and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are registered trademarks of Apple Inc. in the U.S. and other countries.
- Intel, Intel Core, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
-  and “PlayStation” are registered trademarks of Sony Computer Entertainment Inc.
- Adobe, the Adobe logo, and Adobe Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

- SDXC logo is a trademark of SD-3C, LLC.
- MultiMediaCard is a trademark of MultiMediaCard Association.

All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, TM and ® are not mentioned in each case in this manual.

Screen indicators

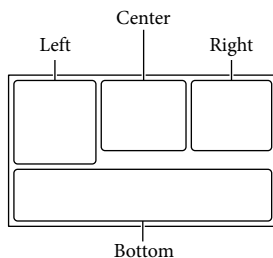

Left

Indicator	Meaning
	MENU button
	Self-timer recording
	Flash/ Red Eye Reduction
	Wide Mode
	Fader
	[Face Detection] set to [Off]
	[Smile Shutter] set to [Off]
	Manual focus
	Scene Selection
	White Balance
	SteadyShot off
	White Balance Shift
	Tele Macro
	x.v.Color
	Intelligent Auto

Center

Indicator	Meaning
[STBY]/[REC]	Recording status
	Slide show set
	Warning
	HDMI
	Playback mode

Right

Indicator	Meaning
	Recording image quality (HD/STD), frame rate (50p/50i/25p) and recording mode (PS/FX/FH/HQ/LP)
60min	Remaining battery
	Recording/playback/ editing media
	An external media device is connected
0:00:00	Counter (hour:minute:second)
00Min	Estimated recording remaining time
	Photo size
9999	Approximate number of recordable photos and photo size
101 ▶	Playback folder
100/112	Current playing movie or photo/Number of total recorded movies or photos
	2D/3D record or playback


Parts and controls

Bottom

Indicator	Meaning
	View Images button
	Micref Level low
	Blt-in Zoom Mic
	Audio Mode
	Audio Level Display
	Low Lux
	Spot Meter/Fcs / Spot Meter/ Exposure
EV	AE Shift
10000	Shutter Speed
F1.4	IRIS
	Intelligent Auto
	Slide show button
101-0005	Data file name
	Protected image
	3D Depth Adjustment
	Automatic
	Exposure is set manually.
	IRIS priority
	Shutter speed priority


- Indicators and their positions are approximate and may differ from what you actually see.
- Some indicators may not appear, depending on your camcorder model.

Figures in () are reference pages.

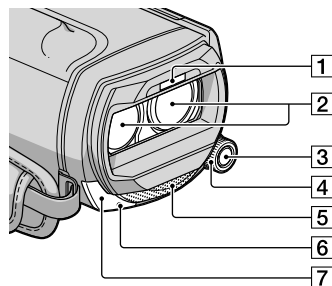

- 1 Flash
- 2 Lens (G lens)
- 3 MANUAL button
- 4 MANUAL dial
- 5 Built-in microphone
- 6 Camera recording lamp
- 7 Remote sensor


The camera recording lamp lights up in red during recording. The lamp flashes when the remaining recording media capacity or battery power is low.

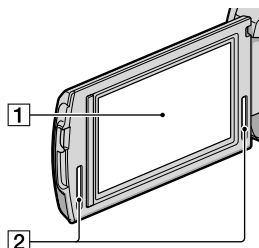

1 LCD screen/Touch panel

If you rotate the LCD panel 180 degrees, you can close the LCD panel with the LCD screen facing out. This is convenient during playback operations.

2 Stereo speakers

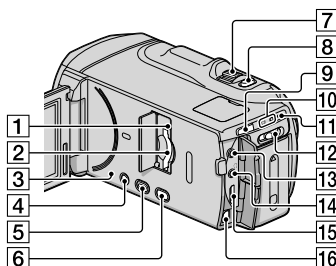

1 Memory card access lamp (20)

While the lamp is lit or flashing, the camcorder is reading or writing data.

2 Memory card slot (20)

3 RESET button

Press RESET using a pointed object.
Press RESET to initialize all the settings including the clock setting.

4 POWER button (14)

5 (View Images) button (27)

6 2D/3D DISP (display) button (22)

7 Power zoom lever

8 PHOTO button (25)

9 MODE button (22)

10 (Movie)/ (Photo) lamps (22)

11 /CHG (flash/charge) lamp (11)


12 2D/3D switch (22)

13 MIC (PLUG IN POWER) jack

14 (headphones) jack

15 HDMI OUT jack (32)

16 A/V Remote Connector (32)

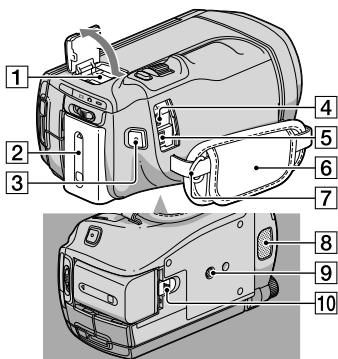

1 Active Interface Shoe



The Active Interface Shoe supplies power to optional accessories such as a video light, a flash, or a microphone. The accessory can be turned on or off as you operate the POWER switch on your camcorder.

- 2 Battery pack (11)
- 3 START/STOP button (22)
- 4 Ψ (USB) jack (44)
- 5 DC IN jack (11)
- 6 Grip belt (21)
- 7 Hook for a shoulder belt
- 8 Built-in microphone
- 9 Tripod receptacle
- 10 BATT (battery) release lever (12)

Index

Symbols

3D Depth Adjustment.....30

A

A/V connecting cable.....33, 48

B

Battery pack.....11

C

Care61

Charging the battery abroad13

Charging the battery pack11

Clock Set.....15

Computer.....38

Computer system.....38

Connection.....32

D

Data Code.....17

Date/Time.....17

Delete36

Disc recorder.....48

Dubbing.....20

DVD writer.....47

E

Event Index.....28

Event View.....27

External media.....44

F

Fully charged.....11

H

“Handycam” Handbook.....54

Highlight Playback.....31

I

Install.....39

L

Language Setting17

M

Macintosh.....38

Maintenance.....61

MANUAL dial.....26

Media Select.....18

Media Settings.....18

Memory card.....19

“Memory Stick” media.....19

“Memory Stick

PRO-HG Duo” media19

“Memory Stick

PRO Duo” media19

Menus.....51

Movies.....22, 29

P

Photos24, 30

Playing.....27

PMB (Picture Motion

Browser).....41

Power on14

Precautions.....61

R

Recording21

Recording and playback time ...58

Recording media.....18

Recording time of movies/

number of recordable photos...58

Repair.....55

RESET68

S

Saving images in external

media.....44

Screen indicators66

Self-diagnosis display.....56

Setting the date and time.....14

Software39

Specifications63

Supplied items.....5

T

Thumbnail36

Tripod.....69

Troubleshooting.....55

Turning the power on14

TV.....32

U

USB cable.....47

USB Connect.....47

W

Wall outlet (wall socket)11

Warning indicators.....56

Windows.....38

You will find the menu lists on pages 51 to 53.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>

