

Portable CD Player

Operating Instructions 使用說明書 使用说明书




D-EJ360/EJ361

Sony Corporation ©2002

http://www.sony.net/


“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. is a trademark of Sony Corporation.

CD player (front)/CD唱機（正面）/CD 播放机（正面）



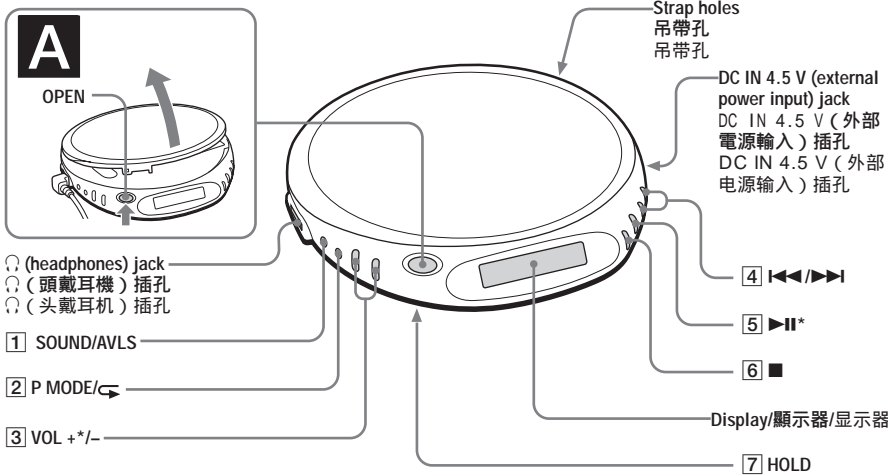


*The button has a tactile dot.
* 按鈕帶有觸感圓點。
* 按鈕帶有觸感圓點。

CD player (inside)/CD唱機（裡面）/CD 播放机（里面）

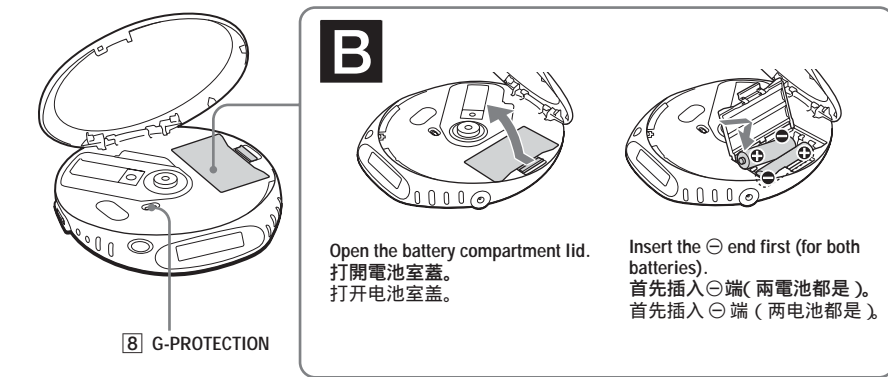

Display/顯示器/显示器

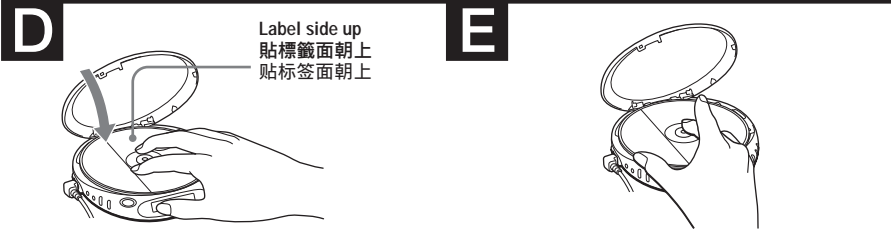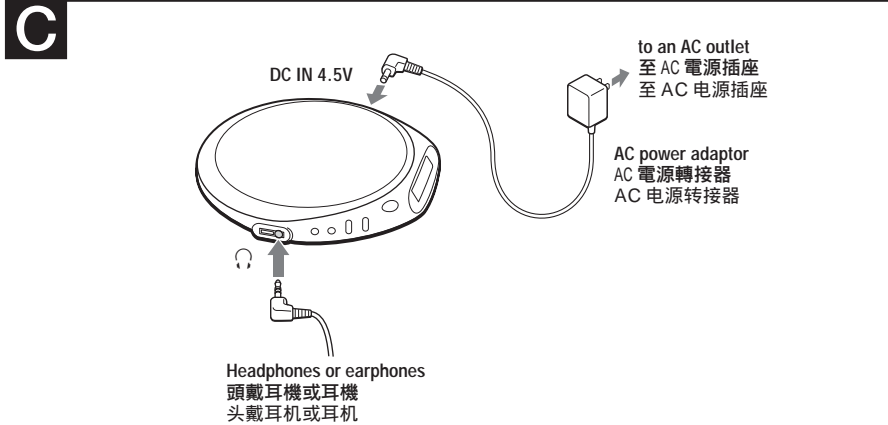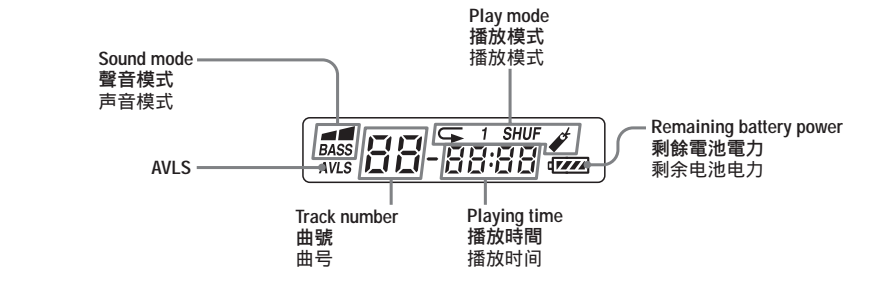

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Power Sources

To use the AC power adaptor **(C)**

- Connect the AC power adaptor to an AC outlet.

To use the batteries **(B)**

Use only the following batteries for your CD player:

Dry batteries
• LR6 (size AA) alkaline batteries

To insert the batteries

- Open the battery compartment lid inside your CD player.
- Insert two batteries by matching the **⊕** to the diagram in the battery compartment and close the lid until it clicks into place.

Battery life* (approx. hours)


(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	G-PROTECTION	
	ON	OFF
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	40	36

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

To check the remaining power of the batteries

 You can check it in the display.
Replace the batteries when “” flashes.



*Beep sounds.

Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.


Playing a CD

To insert a CD

- Press OPEN to open the lid **(A)**.
- Fit the CD to the pivot, then close the lid **(D)**.

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.

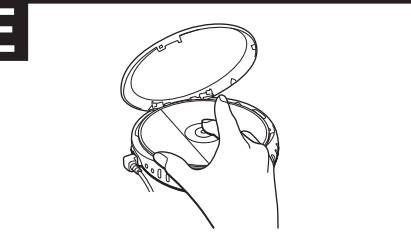

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch	Function/Operation
1 SOUND/AVLS ^{*1}	Use to emphasize the bass-boosted sound. Press repeatedly to select BASS or BASS . BASS enhances more than BASS . ^{*2}
2 P MODE/◀ (play mode/repeat)	Also use to keep down the maximum volume to protect your hearing. Press and hold until “AVLS” appears in the display. The AVLS function is turned on. To turn off the AVLS function, press and hold again until “AVLS” disappears.
3 VOL +/-	Press to adjust the volume.
4 ◀◀/▶▶ (AMS ^{*3} /search)	Press ◀◀ or ▶▶ once to find the beginning of the current/next track. Press ◀◀ or ▶▶ repeatedly to find the beginning of the previous/succeeding tracks. Press and hold ◀◀ or ▶▶ to go backward/forward quickly.
5 ▶▶ (play/pause)	Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.
6 ■ (stop)	Press to stop playing.
7 HOLD	Use to lock the controls to prevent accidental button presses.
8 G-PROTECTION	Set it to ON to protect against sound skipping. ^{*4}

*1 AVLS = Automatic Volume Limiter System
*2 If the sound is distorted when using the SOUND function, turn down the volume.
*3 AMS = Automatic Music Sensor
*4 Sound may skip:
– if the CD player receives stronger continuous shock than expected,
– if a dirty or scratched CD is played or
– when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Power Sources

To use the AC power adaptor **(C)**

- Connect the AC power adaptor to an AC outlet.

To use the batteries **(B)**

Use only the following batteries for your CD player:

Dry batteries
• LR6 (size AA) alkaline batteries

To insert the batteries

- Open the battery compartment lid inside your CD player.
- Insert two batteries by matching the **⊕** to the diagram in the battery compartment and close the lid until it clicks into place.

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	G-PROTECTION	
	ON	OFF
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	40	36

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

To check the remaining power of the batteries

You can check it in the display.
Replace the batteries when “” flashes.



*Beep sounds.

Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Playing a CD

To insert a CD

- Press OPEN to open the lid **(A)**.
- Fit the CD to the pivot, then close the lid **(D)**.

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.

連接電源

使用 AC 電源轉接器 **(C)**

- 將 AC 電源轉接器連接到 AC 電源插座。

使用電池 **(B)**

本 CD 唱機限使用下列電池：

乾電池
• LR6 (AA, 3 號) 鹼性電池

插入電池

- 打開 CD 唱機裡面的電池室蓋。
- 裝入 2 個電池使 **⊕** 對準電池室中的圖示，然後關上蓋子至卡搭定位。

電池使用時間*（大約時數）


（在平穩表面使用 CD 唱機時）
播放時間因 CD 唱機的使用狀況而異。

	G-PROTECTION 設定	
	ON	OFF
兩 Sony 鹼性電池 LR6 (SG) (日本製)	40	36

* JEITA (Japan Electronics and Information Technology Industries Association) 日本電子和資訊技術產業協會) 的標準測值。

檢查電池剩餘電力

 可以在顯示器上檢查。
當 “” 閃爍時請更換電池。

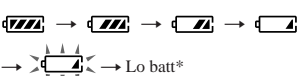

* 嗶聲。

註

- 的指示段相示剩餘電池電力。其一個段不一定正確代表電池電力的四分之一。
- 根據操作條件， 的指示段節的使用時間可能增加或減少。

使用乾電池的注意事項

- 務必卸下 AC 電源轉接器。
- 當電池用完時，同時更換兩節新電池。

播放 CD

插入 CD

- 滑動 OPEN 打開頂蓋 **(A)**。
- 把 CD 按入中心軸，然後蓋上頂蓋 **(D)**。

註

- 本 CD 唱機可以播放以雷射光碟數位音訊 (音訊 CD) 格式錄製的 CD-R/CD-RW。但播放能力取決於光碟質量和錄音設備的狀況。
- 本產品設計用於播放符合 Compact Disc (CD) 標準的光碟。近來，許多錄製公司都出售各種用版權保護技術編碼的音樂光碟。請注意，這些光碟中可能會有不符合 CD 標準的光碟，且可能無法用本產品播放。

操作 CD 唱機

按鈕 / 開關	功能 / 操作
1 SOUND/AVLS ^{*1}	用來加強低音。反復按此鈕以選擇 BASS 或 BASS 。BASS 的作用強於 BASS 。 ^{*2}
2 P MODE/◀ (播放模式 / 重現)	也用來限制最大音量以保護聽力。按住此鈕直到 “AVLS” 出現在顯示器上。AVLS 功能開啟。要關閉 AVLS 功能，再次按住此鈕直到 “AVLS” 消失。
3 VOL +/-	按此鈕調節音量。
4 ◀◀/▶▶ (AMS ^{*3} / 搜索)	按 ◀◀ 或 ▶▶ 一次查找當前 / 下一曲子的開頭。反復按 ◀◀ 或 ▶▶ 查找前面 / 後面的曲子的開頭。按住 ◀◀ 或 ▶▶ 快速 / 快速。
5 ▶▶ (播放 / 暫停)	按此鈕開始播放。再按一次暫停播放。要從第一個曲子開始播放，當 CD 唱機停止時，按住此鈕 2 秒以上。
6 ■ (停止)	按此鈕停止播放。
7 HOLD	用於鎖定控制鈕以防意外。
8 G-PROTECTION	設為 ON 以防聲音跳躍。 ^{*4}

*1 AVLS=自動音量控制系統
*2 當使用 SOUND 功能時，如果聲音失真，請降低音量。
*3 AMS=自動音樂感應器
*4 聲音可能跳動：
– 如果 CD 唱機受到比預計更強的連續震動，
– 如果播放靜的或劃備的 CD 或
– 當使用低劣的 CD-R/CD-RW 時或錄製設備或應用軟體有問題。

要取出 CD

按住中心軸 **(E)**，取下 CD。

(續背面)

操作 CD 播放机

按钮 / 开关	功能 / 操作
1 SOUND/AVLS ^{*1}	用来加强低音。反復按此鈕以選擇 BASS 或 BASS 。BASS 的作用強于 BASS 。 ^{*2}
2 P MODE/◀ (播放模式 / 重現)	也用來限制最大音量以保護聽力。按住此鈕直到 “AVLS” 出現在顯示器上。AVLS 功能開啟。要關閉 AVLS 功能，再次按住此鈕直到 “AVLS” 消失。
3 VOL +/-	按此鈕調節音量。
4 ◀◀/▶▶ (AMS ^{*3} / 搜索)	朝 ◀◀ 或 ▶▶ 按此鈕一次查找當前 / 下一曲子的開頭。反復按 ◀◀ 或 ▶▶ 查找前面 / 後面的曲子的開頭。按住 ◀◀ 或 ▶▶ 快速 / 快速。
5 ▶▶ (播放 / 暫停)	按此鈕開始播放。再按一次暫停播放。要從第一個曲子開始播放，當 CD 播放機停止時，按住此鈕 2 秒以上。
6 ■ (停止)	按此鈕停止播放。
7 HOLD	用於鎖定控制鈕以防意外按動。
8 G-PROTECTION	設為 ON 以防聲音跳躍。 ^{*4}

*1 AVLS=自動音量控制系統
*2 當使用 SOUND 功能時，如果聲音失真，請降低音量。
*3 AMS=自動音樂感應器
*4 聲音可能跳動：
– 如果 CD 播放机受到比預計更強的連續震動，
– 如果播放靜的或劃備的 CD 或
– 當使用低劣的 CD-R/CD-RW 時或錄製設備或應用軟體有問題。

要取出 CD

按住中心軸 **(E)**，取下 CD。

(續背面)

