




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY HDR-XR150. You'll find the answers to all your questions on the SONY HDR-XR150 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY HDR-XR150  
User guide SONY HDR-XR150  
Operating instructions SONY HDR-XR150  
Instructions for use SONY HDR-XR150  
Instruction manual SONY HDR-XR150

**SONY**

4-170-893-13(1)

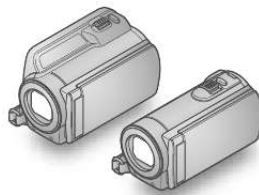

HDR-CX110E/CX115E/CX116E/  
CX150E/CX155E/XR150E/XR155E

Digital HD Video Camera Recorder  
"Handycam" Handbook



**HANDYCAM**

© 2010 Sony Corporation

Table of contents	9
Getting started	12
Recording/Playback	20
Making good use of your camcorder	40
Saving images with an external device	49
Customizing your camcorder	58
Additional information	80
Quick reference	103



[Your user manual](#)  
[SONY HDR-XR150](#)

**Manual abstract:**

*Standard (STD) image quality movies recorded on SD memory cards cannot be played on AV equipment of other manufacturers. [SHOOTING SET] category) set to [HD FX]. Save them on a Blu-ray Disc or using an external media (p. 49). Notes on battery pack/AC Adaptor Be sure to remove the battery pack or the*

*AC Adaptor after turning off the camcorder. Disconnect the AC Adaptor from the camcorder, holding both the camcorder and the DC plug. Note on the camcorder/battery pack temperature When the temperature of the camcorder or battery pack becomes extremely high or extremely low, you may not be able to record or play back on the camcorder, due to the protection features of the camcorder being activated in such situations. In this case, an indicator appears on the LCD screen (p. 86). Discs recorded with HD image quality (high definition) When the camcorder is connected to a computer or accessories This camcorder captures high definition footage in the AVCHD format.*

*DVD media containing AVCHD footage should not be used with DVD based players or recorders, as the DVD player/ recorder may fail to eject the media and may erase its contents without warning. DVD media containing AVCHD footage may be played on a compatible Blu-ray Disc player/recorder or other compatible device. Do not try to format the recording media of the camcorder using a computer. If you do so, your camcorder may not operate correctly.*

*When connecting the camcorder to another device with communication cables, be sure to insert the connector plug in the correct way.*

*Pushing the plug forcibly into the terminal will damage the terminal and may result in a malfunction of the camcorder. GB If you cannot record/play back images, perform [MEDIA FORMAT] If you repeat recording/deleting images for a long time, fragmentation of data occurs on the recording media. Images cannot be saved or recorded. In such a case, save your images on some type of external media first, and then perform [MEDIA FORMAT] by touching (MENU) [Show others] [MEDIA FORMAT] (under [MANAGE AVCHD disc. Design and specifications of your camcorder and accessories are subject to change without notice.*

*Confirm the model name of your camcorder MEDIA] category) the desired medium (HDR-CX116E/CX150E/CX155E/XR150E/ XR155E) [YES] [YES] . The model name is shown in this manual when there is a difference in specification between models. Confirm the model name on the bottom of your camcorder.*

*The main differences in specification of this series are as follows. Recording media Capacity of internal recording media -- USB jack Carl Zeiss lens Your camcorder is equipped with a Carl Zeiss lens, which was developed jointly by Carl Zeiss, in Germany, and Sony Corporation, and produces superior images. It adopts the MTF measurement system for video cameras and offers a quality typical of a Carl Zeiss lens. MTF= Modulation Transfer Function. The number value indicates the amount of light from a subject coming into the lens. HDRCX110E HDRCX115E HDRCX116E HDRCX150E HDRCX155E HDRXR150E HDRXR155E Memory card Input/ output Output only Internal memory + memory card 8GB 16GB Output only Input/ output Output only Notes on optional accessories We recommend using genuine Sony accessories. Genuine Sony accessories may not be available in some countries/regions.*

*About this manual, illustrations and on-screen displays Internal hard disk + memory card 120GB Input/ output Output only GB The example images used in this manual for illustration purposes are captured using a digital still camera, and therefore may appear different from images and screen indicators that actually appear on your camcorder. And, the illustrations of your camcorder and its screen indication are exaggerated or simplified for understandability. In this manual, the internal memory (HDRCX116E/CX150E/CX155E) and the hard disk (HDR-XR150E/XR155E) of the camcorder and the memory card are called "recording media." In this manual, the DVD disc recorded with high definition image quality (HD) is called Notes on use Do not do any of the following. Otherwise, the recording media may be damaged, recorded images may be impossible to play back or may be lost, or other malfunctions could occur..*



[Your user manual](#)  
[SONY HDR-XR150](#)