
SONY

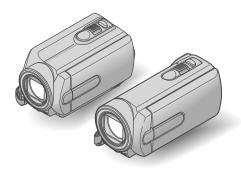

DCR-SR15E/SR20E/SX15E/ SX20E/SX20EK

Digital Video Camera Recorder

Operating Guide









Table of Contents	O
Getting started	10
Recording/Playback	20
Making good use of your camcorder	30
Saving movies and photos with a computer	32
Saving images with an external device	39
Customizing your camcorder	47
Additional information	54
Ouick reference	63



Read this first

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

Do not expose the batteries to excessive heat such as sunshine, fire or the like.

CAUTION

Battery pack

If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following cautions.

- · Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140 °F) such as in direct sunlight or in a car parked in the sun.
- Do not incinerate or dispose of in fire.
- Do not handle damaged or leaking lithium ion batteries.
- Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack.
- Keep the battery pack out of the reach of small children.
- · Keep the battery pack dry.
- Replace only with the same or equivalent type recommended by Sony.
- Dispose of used battery packs promptly as described in the instructions.

Replace the battery with the specified type only. Otherwise, fire or injury may result.

AC Adaptor

Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.

Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using your camcorder.

Even if your camcorder is turned off, AC power source (mains) is still supplied to it while connected to the wall outlet (wall socket) via the AC Adaptor.

The power cord (mains lead) is designed specifically for use with this camcorder only, and should not be used with other electrical equipment.

Memory card



FOR CUSTOMERS IN EUROPE

Notice for the customers in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

ATTENTION

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performence or data integrity reasons.

performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an rark) must be used.

 
If the plug supplied with this equipment has

a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

Supplied items

The numbers in () are the supplied quantity.

- □ AC Adaptor (1)
- □ Power cord (Mains lead) (1)
- □ A/V connecting cable (1) A
- □ USB cable (1) **B**
- □ Rechargeable battery pack NP-FV30 (1)
- □ CD-ROM "Handycam" Application Software (1)
 - "PMB" (software, including "PMB Help")
 - "Handycam" Handbook (PDF)
- ☐ "Operating Guide" (This manual) (1)



For DCR-SX20EK only*

- ☐ Memory card (4GB)**
- * Confirm the model name on the packing box.
- ** When measuring media capacity, 1 GB equals 1 billion bytes, a portion of which is used for system management and/or application files. The capacity that a user can use is approximately 3.83 GB.
- See page 18 for the memory card you can use with this camcorder.

Using the camcorder

 Do not hold the camcorder by the following parts, and also do not hold the camcorder by the jack covers.

LCD screen



Battery pack



 The camcorder is not dustproofed, dripproofed or waterproofed. See "Precautions" (p. 59).

Menu items, LCD panel, and lens

- A menu item that is grayed out is not available under the current recording or playback conditions.
- The LCD screen is manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue, or green in color) that appear constantly on the LCD screen. These points are normal results of the manufacturing process and do not affect the recording in any way.



White, red, blue or green points

- Exposing the LCD screen or the lens to direct sunlight for long periods of time may cause malfunctions.
- Do not aim at the sun. Doing so might cause your camcorder to malfunction. Take images of the sun only in low light conditions, such as at dusk

About changing the language setting

 The on-screen displays in each local language are used for illustrating the operating procedures. Change the screen language before using your camcorder if necessary (p. 15).

Recording

- When you use a memory card with your camcorder for the first time, formatting the memory card with your camcorder (p. 51) is recommended for stable operation.

 All data recorded on the memory card will be deleted when it is formatted, and cannot be recovered. Save important data to your computer, etc., beforehand.
- Before starting to record, test the recording function to make sure that the image and sound are recorded without any problems.
- Compensation for the contents of recordings cannot be provided, even if recording or playback is not possible due to a malfunction of the camcorder, storage media, etc.
- TV color systems differ depending on the country/region. To view your recordings on a TV, you need a PAL system-based TV.
- Television programs, films, video tapes, and other materials may be copyrighted.
 Unauthorized recording of such materials may be contrary to copyright laws.

Note on playback

- Images recorded on your camcorder may not play correctly on other devices.
 Conversely, images recorded on other devices may not play correctly on this camcorder.
- Movies recorded on SD memory cards cannot be played on A/V equipment of other manufacturers.

Save all your recorded image data

 To prevent your image data from being lost, save all your recorded images on external media periodically. It is recommended that you save the image data on a disc such as a DVD-R using your computer. Also, you can save your image data using a VCR or a DVD/HDD recorder, etc. (p. 42).

Notes on battery pack/AC Adaptor

- Be sure to remove the battery pack or the AC Adaptor after turning off the camcorder.
- Disconnect the AC Adaptor from the camcorder, holding both the camcorder and the DC plug.

Note on the camcorder/battery pack temperature

 When the temperature of the camcorder or battery pack becomes extremely high or extremely low, you may not be able to record or play back on the camcorder, due to the protection features of the camcorder being activated in such situations. In this case, an indicator appears on the LCD screen.

When the camcorder is connected to a computer or accessories

- Do not try to format the recording media of the camcorder using a computer. If you do so, your camcorder may not operate correctly.
- When connecting your camcorder to another device with a cable, be sure to insert the connector plug in the correct way. Pushing the plug forcibly into the terminal will damage the terminal and may result in a malfunction of your camcorder.

If you cannot record/play back images, perform [MEDIA FORMAT]

• If you repeat recording/deleting images for a long time, fragmentation of data occurs on the recording media. Images cannot be saved or recorded. In such a case, save your images on some type of external media first, and then perform [MEDIA FORMAT] by selecting [MENU] → [Show others] → [MEDIA FORMAT] (under → [MANAGE MEDIA] category) → the desired medium (DCR-SR15E/SR20E) → [YES] → [YES] → [YES] → [YES].

Notes on optional accessories

- · We recommend using genuine Sony accessories.
- Availability of such products is subject to country/region.

About images, illustrations, and screen displays of this manual

- The example images used in this manual for illustration purposes are captured using a digital still camera, and therefore may appear different from images and screen indicators that actually appear on your camcorder. And, the illustrations of your camcorder and its screen indication are exaggerated or simplified for understandability.
- In this manual, the internal hard disk (DCR-SR15E/SR20E) of your camcorder and memory card are called "recording media."
- Design and specifications of your camcorder and accessories are subject to change without notice.

Confirm the model name of your camcorder

- The model name is shown in this manual when there is a difference in specification between models. Confirm the model name on the bottom of your camcorder.
- The main differences in specification of this series are as follows.

	Recording media	Capacity of internal recording media	USB jack
DCR- SR15E DCR- SR20E	Internal hard disk + memory card	80 GB	Output only Input/ output
DCR- SX15E	Memory card	_	Output only
DCR- SX20E			Input/ output

Notes on use

 Do not do any of the following, otherwise, the recording media may be damaged, recorded images may be impossible to play back or may be lost, or other malfunctions could occur.

- Eject the memory card when the access lamp
 (p. 18) is lit or flashing
- Remove the battery pack or AC Adaptor from the camcorder, or subject the camcorder to shock or vibration when the POWER lamp (p. 13) or the access lamp (p. 18) are lit or flashing
- When using a shoulder belt (sold separately), do not crash the camcorder against an object.
- Do not use your camcorder in very loud areas (DCR-SR15E/SR20E).

On the drop sensor (DCR-SR15E/SR20E)

 To protect the internal hard disk from shock by dropping, the camcorder has a drop sensor function. When a drop occurs, or under a nongravity condition, the block noise made when this function is activated by the camcorder may also be recorded. If the drop sensor catches a drop repeatedly, recording/playback may be stopped.

Note on using the camcorder at high altitudes (DCR-SR15E/SR20E)

 Do not turn on the camcorder in a low-pressure area, where the altitude is more than 5,000 meters (16,000 feet). Doing so may damage the internal hard disk drive of your camcorder.

Operation flow

Getting started (p. 10)

Prepare the power source and recording media.



Recording movies and photos (p. 20)

Recording movies → p. 21

 
- Changing the recording mode
- Expected recording time (MEDIA INFO)

Shooting photos \rightarrow p. 23



Playing movies and photos

Playback on the camcorder → p. 25 Playing images on a TV → p. 28



Saving images

Saving movies and photos with a computer → p. 32 Saving movies and photos in external media → p. 39 Saving images with a DVD writer/recorder → p. 42



Deleting movies and photos (p. 30)

If you delete the image data that has been saved on your computer or a disc, you can record new images on the free media space again.




Table of contents


Read this first	
Getting started	
Step 1: Charging the battery pack	10
Charging the battery pack abroad	
3 3 7.	
Step 2: Turning the power on, and setting the date and time	
Changing the language setting	
Step 3: Preparing the recording media	
Dubbing or copying movies and photos from the internal recording media	
to memory card (DCR-SR15E/SR20E)	
, · · · · · · · · · · · · · · · · · · ·	
Recording/Playback	
Recording	
Playback on the camcorder	
Playing images on a TV	. 28
Making good use of your camcorder	
Deleting movies and photos.	. 30
Saving movies and photos with a computer	
Preparing a computer (Windows)	32
When using a Macintosh	
Starting PMB (Picture Motion Browser)	
Creating a disc with one touch (One Touch Disc Burn)	
Importing movies and photos to a computer	
Creating a disc	
Copying a disc.	
Editing movies	
Capturing photos from a movie	
Saving images with an external device	
3 3	20
Saving images in external media (DIRECT COPY)	. 39
Creating a disc with a DVD writer, recorder	40

Customizing your camcorder	
Using menus	47
Getting detailed information from the "Handycam" Handbook	53
Additional information	
? Troubleshooting	54
Recording time of movies/number of recordable photos	57
Precautions	
Specifications	61
Quick reference	
Screen indicators	
Parts and controls	
Index	67

Getting started

Step 1: Charging the battery pack

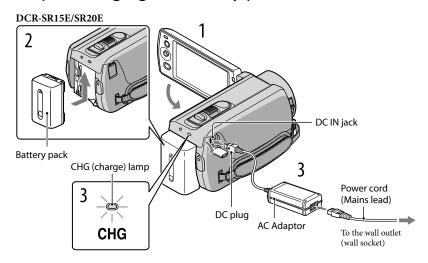

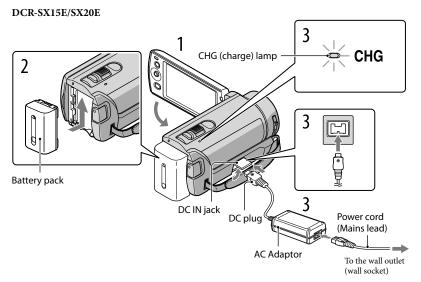

You can charge the "InfoLITHIUM" battery pack (V series) after attaching it to your camcorder.

Notes

• You cannot attach any "InfoLITHIUM" battery pack other than the V series to your camcorder.

 $\dot{)}$

Turn off your camcorder by closing the LCD screen.

Attach the battery pack by sliding it in the direction of the arrow until it clicks.

3

Connect the AC Adaptor and the power cord (mains lead) to your camcorder and the wall outlet (wall socket).

Align the ▲ mark on the DC plug with that on the DC IN jack.
 The CHG (charge) lamp lights up and charging starts. The CHG (charge) lamp turns off when the battery pack is fully charged.

4

When the battery is charged, disconnect the AC Adaptor from the DC IN jack of your camcorder.

Tips

- $\bullet\,$ See page 57 on recording and playing time.
- When your camcorder is on, you can check the approximate amount of remaining battery power with the remaining battery indicator at the upper left on the LCD screen.

Charging time


Approximate time (min.) required when you fully charge a fully discharged battery pack.

Battery pack	Charging time
NP-FV30 (supplied)	115
NP-FV50	155
NP-FV70	195
NP-FV100	390

• Times measured with the camcorder at 25 $^{\circ}$ C (77 $^{\circ}$ F). 10 $^{\circ}$ C to 30 $^{\circ}$ C (50 $^{\circ}$ F to 86 $^{\circ}$ F) is recommended.

To remove the battery pack

 Close the LCD screen. Slide the BATT (battery) release lever (1) and remove the battery pack (2).



To use a wall outlet (wall socket) as a power source

Make the same connections as "Step 1: Charging the battery pack." Even if the battery pack is attached, the battery pack is not discharged.

Charging the battery pack abroad

You can charge the battery pack in any countries/regions using the AC Adaptor supplied with your camcorder within the AC 100 V - 240 V, 50 Hz/60 Hz range.

Notes

· Do not use an electronic voltage transformer.

Notes on the battery pack

- When you remove the battery pack or disconnect the AC Adaptor, close the LCD screen and make sure
 that the POWER lamp (p. 13), the access lamp (p. 18) are turned off.
- The CHG (charge) lamp flashes during charging under the following conditions:
 - The battery pack is not attached correctly.
 - The battery pack is damaged.
 - The temperature of the battery pack is low.
 Remove the battery pack from your camcorder and put it in a warm place.
 - The temperature of the battery pack is high.
 - Remove the battery pack from your camcorder and put it in a cool place.
- In the default setting, the power turns off automatically if you leave your camcorder without any
 operation for about 5 minutes, to save battery power ([A.SHUT OFF]).

 
Notes on the AC Adaptor

- Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from
 the wall outlet (wall socket) immediately if any malfunction occurs while using your camcorder.
- Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.
- Do not short-circuit the DC plug of the AC Adaptor or battery terminal with any metallic objects. This
 may cause a malfunction.


Step 2: Turning the power on, and setting the date and time

Open the LCD screen of your camcorder.

Your camcorder turns on.



 Select the desired geographical area by selecting △/☑ with △/▼ of the multi-selector, keep pressing the center of the multi-selector until the desired geographical area is turned on a light.



- See page 15 for the detail of the using the multi-selector.
- To set the date and time again, operate the multi-selector to select MENU (MENU) → [Show others] → [CLOCK/□LANG] (under (GENERAL SET] category) → [CLOCK SET]. When an item is not on the screen, select MENU (MENU) → [Show others] → [CLOCK SET]. When an item is not on the screen, select MENU (MENU) → [Show others] → [CLOCK SET].

Paris

0.00.00

- Select [NEXT] with ▼ of the multi-selector, then press the center of the multi-selector.
- Select setting of [SUMMERTIME] with **◄/▶** of the multi-selector, and press the center of the multi-selector.



If you set [SUMMERTIME] to [ON], the clock advances 1 hour.

Select [NEXT] with ▼ of the multi-selector, then press the center of the multi-selector.

Set the date and time by repeating the procedure bellow.



- (1) Highlight the desired item with **◄/▶** of the multi-selector.
- ② Select the setting value with ▲/▼ of the multi selector, and press the center of the multi-selector.

Select [NEXT] \rightarrow with ∇ of the multi-selector, then press the center of the multi-selector.

The clock starts.

 
Notes

- You can turn off the operation beeps by selecting MENU (MENU) \rightarrow [Show others] \rightarrow [SOUND/DISP SET] (under $^{\circ}$ [GENERAL SET] category) \rightarrow [BEEP] \rightarrow [OFF] \rightarrow $^{\circ}$ \rightarrow $^{\circ}$ \rightarrow $^{\circ}$ \rightarrow $^{\circ}$ \rightarrow $^{\circ}$.

To turn off the power

Close the LCD screen. The POWER lamp flashes for a few seconds and the power is turned off.

Using the Multi-selector



1 Select a button by placing an orange frame over it using $\nabla/\triangle/\blacktriangleleft/\triangleright$ of the multi-selector.

0.00.00

NEXT

2 Press the center of the multi-selector to confirm your selection.

Changing the language setting

You can change the on-screen displays to show messages in a specified language. Select MENU (MENU) \rightarrow [Show others] \rightarrow [CLOCK/ \bigcirc LANG] (under \bigcirc [GENERAL SET] category) \rightarrow [\bigcirc LANGUAGE SET] \rightarrow a desired language \rightarrow \bigcirc K \rightarrow \bigcirc X.

Step 3: Preparing the recording media

The recording media that can be used differs depending on your camcorder. The following icons are displayed on the screen of your camcorder.

DCR-SX15E/SX20E:

◀

Memory card

 
DCR-SR15E/SR20E:





Internal hard disk Memory card

* In the default setting, both movies and photos are recorded on this recording media. You can perform recording, playback and editing operations on the selected medium.



- Select with V/A/√/▶ and press the button in the center of the multi-selector to confirm your selection.
- Tips
- See page 57 for the recordable time of movies.
- See page 58 for the number of recordable photos.

Selecting the recording media for movies (DCR-SR15E/SR20E)

Select MENU (MENU) \rightarrow [Show others] \rightarrow [MEDIA SETTINGS] (under MEDIA [MANAGE MEDIA] category) \rightarrow [MOVIE MEDIA SET].

The [MOVIE MEDIA SET] screen appears.

- 2 Select the desired recording media.
- 3 Select [YES] \rightarrow OK.

The recording medium is changed.

Selecting the recording media for photos (DCR-SR15E/SR20E)

1 Select MENU (MENU) → [Show others] → [MEDIA SETTINGS] (under [MANAGE MEDIA] category) → [PHOTO MEDIA SET].

The [PHOTO MEDIA SET] screen appears.

- 2 Select the desired recording media.
- 3 Select [YES] \rightarrow OK.

The recording medium is changed.

To check the recording media settings

When recording in movie recording mode or photo recording mode, the recording media icon is displayed in the top right corner of the screen.



• The icon displayed on the LCD screen varies depending on the camcorder you use.

Inserting a memory card

Notes

 Set the recording medium to [MEMORY CARD] to record movies and/or photos on memory card (DCR-SR15E/SR20E).

 
Types of memory card that can be used with your camcorder

- Only "Memory Stick PRO Duo" media, "Memory Stick PRO-HG Duo" media, SD memory cards (Class 2 or faster), SDHC memory cards (Class 2 or faster) and SDXC memory cards (Class 2 or faster) can be used with this camcorder. Operation with all memory cards is not assured.
- "Memory Stick PRO Duo" media of up to 32 GB and SD memory cards of up to 64 GB have been tested and proven to operate with your camcorder.
- For recording movies on "Memory Stick PRO Duo" media, it is recommended that you use "Memory Stick PRO Duo" media of 512 MB or larger.
- In this manual, "Memory Stick PRO Duo" media and "Memory Stick PRO-HG Duo" media are called "Memory Stick PRO Duo" media and SD memory cards, SDHC memory cards and SDXC memory cards are called SD memory cards.

Notes

- · MultiMediaCard cannot be used.
- Images recorded on SDXC memory cards cannot be played back or imported on non-exFAT*-compatible
 computers, AV components, etc., connected to this camcorder by USB cable. Check that the connected devices
 are compatible with exFAT beforehand. If you connect a device that is not compatible with exFAT, the screen
 for initialization may appear. Never execute initialization, otherwise all recorded contents will be lost.
- * exFAT is the file system used in SDXC memory cards.


Size of memory cards that can be used with your camcorder



- Only "Memory Stick Duo" media that is about a half the size of the standard "Memory Stick" media, and standard-sized SD memory cards can be used.
- Do not attach a label, etc., to a memory card or memory card adaptor. Doing so may cause a malfunction.

Open the cover, orient the memory card's notched corner as shown in the illustration, and insert into the memory card slot until it clicks.

 · Close the cover after inserting the memory card.



Note direction of notched corner.

The [Create a new Image Database File.] screen may appear if you insert a new memory card. In that case, select [YES]. If you record only photos on the memory card, select [NO].

 Confirm the direction of the memory card. If you forcibly insert the memory card in the wrong direction, the memory card, memory card slot, or image data may be damaged.

Notes

• If [Failed to create a new Image Database File. It may be possible that there is not enough free space.] is displayed, initialize the memory card by selecting MENU (MENU) → [Show others] → [MEDIA FORMAT] (under → [MANAGE MEDIA] category) → [MEMORY CARD] (DCR-SR15E/SR20E) → [YES] → [YES] → ○K.

To eject the memory card

Open the cover and lightly push the memory card in once.

- · Do not open the cover during recording.
- When inserting or ejecting the memory card, be careful so that the memory card does not pop out and drop.

Dubbing or copying movies and photos from the internal recording media to memory card (DCR-SR15E/SR20E)

Select MENU (MENU) \rightarrow [Show others] \rightarrow [MOVIE DUB]/[PHOTO COPY] (under \square [EDIT] category), then follow the displays on the screen.

Recording/Playback

Recording

In the default setting, movies are recorded on the following recording media.

 
DCR-SX15E/SX20E: Memory card DCR-SR15E/SR20E: Internal hard disk



• See page 16 on changing the recording media (DCR-SR15E/SR20E).

To open the lens cover

Slide the LENS COVER switch to open.




Tips


• When you finish recording or when you play back images, close the lens cover.

Fasten the grip belt.

DCR-SR15E/SR20E

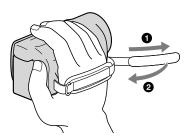


DCR-SX15E/SX20E

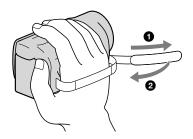


Open the LCD screen of your camcorder.

Your camcorder turns on.

 • You can switch recording modes by pressing MODE. Press MODE until the desired mode icon appears.



Press START/STOP to start recording.

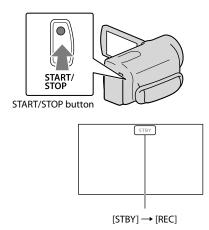

To stop recording, press START/STOP again.

 The icons and indicators on the LCD panel will be displayed for about 3 seconds, then disappear after turning on your camcorder or switching the recording (movie/photo)/playback modes. To display the icons and indicators again, press the multi-selector.

 


Notes

- If you close the LCD screen while recording movies, the camcorder stops recording.
- · The maximum continuous recordable time of movies is about 13 hours.
- When a movie file exceeds 2 GB, the next movie file is created automatically.
- It will take several seconds until you can start recording after you turn on the camcorder. You cannot
 operate your camcorder during this time.
- The following states will be indicated if data is still being written onto the recording media after recording
 has finished. During this time, do not apply shock or vibration to the camcorder, or remove the battery or
 AC Adaptor.
 - Access lamp (p. 18) is lit or flashing
 - The media icon in the upper right of the LCD screen is flashing

Tips

- When a face is detected, a white frame appears and the image quality around the face is optimized automatically ([FACE DETECTION]).
- You can capture photos from recorded movies (DCR-SR15E/SR20E/SX20E).
- See page 57 on the recordable time of movies.
- You can check the recordable time, estimated remaining capacity, etc., by selecting MENU → [Show others] → [MEDIA INFO] (under → [MANAGE MEDIA] category).
- The LCD screen of your camcorder can display recording images across the entire screen (full pixel display). However, this may cause slight trimming of the top, bottom, right and left edges of images when played back on a TV which is not compatible with full pixel display. In this case, set [GUIDEFRAME] to [ON], and record images using the outer frame displayed on the screen as a guide.
- [☐STEADYSHOT] is set to [ON] in the default setting.
- To adjust the angle of the LCD panel, first open the LCD panel 90 degrees to the camcorder (①), and then adjust the angle (②).



Data code during recording

The recording date, time and condition are recorded automatically on the recording media. They are not displayed during recording. However, you can check them as [DATA CODE] during playback. To display them, select $(MENU) \rightarrow (Bhow \text{ others}) \rightarrow (PLAYBACK SET)$ (under (PLAYBACK) category) \rightarrow a desired setting $\rightarrow (PLAYBACK)$ $\rightarrow (PLAYBACK)$

Shooting photos

In the default setting, photos are recorded on the following recording media.

 
DCR-SX15E/SX20E: Memory card DCR-SR15E/SR20E: Internal hard disk

Tips


• See page 16 on changing the recording media (DCR-SR15E/SR20E).

1 Press MODE until the 🖸 (Photo) icon appears.

The LCD screen display switches for photo recording mode, and the screen aspect ratio becomes 4:3.



Press PHOTO lightly to adjust the focus, then press it fully.

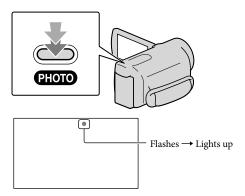

When IIIIIII disappears, the photo is recorded.

Tips

- See page 58 on the recordable number of photos.
- To change the image size, select MENU (MENU) → [Show others] → [■IMAGE SIZE] (under \bigcirc [PHOTO SETTINGS] category) \rightarrow a desired setting \rightarrow \bigcirc K \rightarrow \bigcirc X.
- You can check the recordable number of photos on the LCD screen (p. 63).

Playback on the camcorder

In the default setting, movies and photos that are recorded on the following recording media are played.

DCR-SX15E/SX20E: Memory card DCR-SR15E/SR20E: Internal hard disk

 
Tips

• See page 16 on changing the recording media (DCR-SR15E/SR20E).

Open the LCD screen of your camcorder.

Your camcorder turns on.


Press (VIEW IMAGES).




The VISUAL INDEX screen appears after some seconds.

Select the 🖽 (Movie) (①) → a desired movie (②) to play back a movie. Select the **②** (Photo) (①) → a desired photo (②) to view a photo.

Movies are displayed and sorted by recording date.

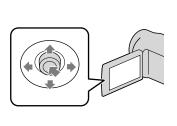

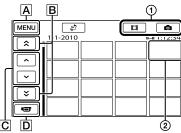


- A To MENU screen
- B : Displays movies recorded on the previous/next date.
- C : Displays the previous/next movie.
- $\boxed{\textbf{D}}$ Returns to the recording screen.

I▶I appears with the movie or photo that was most recently played or recorded. If you select the
movie or photo with I▶I, you can continue playback from the previous time. (▶ appears on the
photo recorded on a memory card.)

Playing movies

Your camcorder starts playing the selected movie.

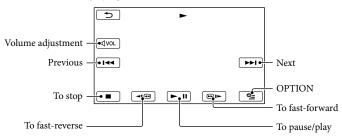

Tips

- When playback from the selected movie reaches the last movie, the screen returns to the VISUAL INDEX screen.
- Select during pause to play back movies slowly.
- As you repeat selecting
 during playback, movies are played as fast as about 5 times
 about 10 times
 about 30 times
 about 60 times.
- You can display the VISUAL INDEX by selecting MENU (MENU) → [Show others] → [VISUAL INDEX] (under |PLAYBACK] category).
- The recording date, time, and shooting conditions are recorded automatically during recording. This information is not displayed during recording, but you can display it during playback by selecting

 MENU (MENU) → [Show others] → [PLAYBACK SET] (under PLAYBACK] category) → [DATA CODE] → a desired setting → OK → D → X .

 
To adjust the sound volume of movies

While playing back movies, select $\triangleleft vol$ \rightarrow adjust with $\triangleleft - / \triangleleft + \rightarrow \bigcirc$.

• You can also adjust the sound volume by using in the OPTION MENU.

Viewing photos

Your camcorder displays the selected photo.






• When viewing photos recorded on a memory card, 101 • (playback folder) appears on the screen.

Playing images on a TV

Connect your camcorder to the input jack of a TV or VCR using the A/V connecting cable (supplied). Connect your camcorder to the wall outlet (wall socket) using the supplied AC Adaptor for this operation (p. 12). Refer also to the instruction manuals supplied with the devices to be connected.

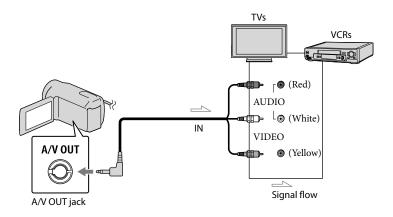

1 Set the input selector of the TV to the input your camcorder will be connected to.

For details, refer to the instruction manuals supplied with the TV.

- 2 Connect your camcorder to a TV with the A/V connecting cable (supplied). Connect your camcorder to the input jack of the TV.
- 3 Play back movies and photos on your camcorder (p. 25).

To set the aspect ratio according to the connected TV (16:9/4:3)

Select MENU (MENU) \rightarrow [Show others] \rightarrow [OUTPUT SETTINGS] (under % [GENERAL SET] category) \rightarrow [TV TYPE] \rightarrow [16:9] or [4:3] \rightarrow \bigcirc K \rightarrow \bigcirc X.

When connecting to your TV via a VCR

Connect your camcorder to the LINE IN input on the VCR using the A/V connecting cable. Set the input selector on the VCR to LINE (VIDEO 1, VIDEO 2, etc.).

When your TV is monaural (When your TV has only one audio input jack)

Connect the yellow plug of the A/V connecting cable to the video input jack and connect the white (left channel) or red (right channel) plug to the audio input jack of your TV or VCR.

If your TV/VCR has a 21-pin adaptor (EUROCONNECTOR)

Use a 21-pin adaptor (sold separately) to view playback pictures.

 


Notes

- When you set [TV TYPE] to [4:3], the image quality may deteriorate. Also, when the recorded image's
 aspect ratio switches between 16:9 (wide) and 4:3, the image may jitter.
- On some 4:3 TVs, the photos recorded in 4:3 aspect ratio may not be displayed full screen. This is not a malfunction.



• When you play back an image recorded in 16:9 (wide) aspect ratio on a 4:3 TV not compatible with the 16:9 (wide) signal, set [TV TYPE] to [4:3].




Tips

• To check information (counter, etc.) on the screen of the monitor, select MENU (MENU) → [Show others] → [OUTPUT SETTINGS] (under © [GENERAL SET] category) → [DISP OUTPUT] → [V-OUT/PANEL] → OK → S × .

Making good use of your camcorder

Deleting movies and photos

 You can free media space by deleting movies and photos from recording media.



Notes

- You cannot restore images once they are deleted. Save important movies and photos in advance.
- Do not remove the battery pack or the AC Adaptor from your camcorder while deleting the images. It may damage the recording media.
- Do not eject memory card while deleting images from the memory card.
- You cannot delete protected movies and photos.
 Undo the protection of the movies and photos to delete them, before you try to delete them.
- If the deleted movie is included in the Playlist, the movie added to the Playlist is deleted also from the Playlist.

Tips

- You can delete an image on the playback screen from OPTION MENU.
- To delete all images recorded in the recording media, and recover all the recordable space of the media, format the media.
- Reduced-size images which enable you to view many images at the same time on an index screen are called "thumbnails"

Select \longrightarrow (MENU) \longrightarrow [Show others] \longrightarrow [DELETE] (under \bigcirc [EDIT] category).

To delete movies, select [□DELETE] → [□DELETE].

- To delete photos, select [■DELETE] →
 [■DELETE].



• Press LIGHT when a thumbnail is selected to confirm the image. Select to return to the previous screen.

To delete all movies/photos at one time

In step 2, select [
$$\square$$
DELETE] \rightarrow
[\square DELETE ALL] \rightarrow [YES] \rightarrow [YES] \rightarrow

• To delete all photos at one time, select

[□DELETE] → [□DELETE ALL] → [YES]

→ [YES] → ○□ ▼ ■ ▼ ■

To delete all the movies/photos recorded on the same day at one time

Notes

 You cannot delete photos on memory card by recording date.

- ① In step 2, select [□DELETE] → [□DELETE by date].
 - To delete all photos on the same day at one time, select [■DELETE] → [■DELETE by date].

	DELETE by date			
	1-1-2010			
، لشا	\Box			
	\Box	\square		
ا ت				
-				
[*]				
ОК				

- ② Select to select the recording date of the desired movies/photos, then select
 - Press LIGHT when thumbnail is selected to confirm the image. Select to return to the previous screen.
- ③ Select [YES] \rightarrow \bigcirc K \rightarrow \times .

Saving movies and photos with a computer

Preparing a computer (Windows)

You can perform following operations using "PMB (Picture Motion Browser)."

- -Importing images to a computer
- Viewing and editing imported images
- -Creating a disc
- Uploading movies and photos to websites

To save movies and photos using a computer, install "PMB" from the supplied CD-ROM beforehand.

Notes

- Do not format the media of your camcorder from a computer. Your camcorder may not operate correctly.
- You can create discs using 12 cm discs of following type with "PMB."
 - DVD-R/DVD+R/DVD+R DL: Unrewritable
 - DVD-RW/DVD+RW: Rewritable

Step 1 Checking the computer system

OS*1

Microsoft Windows XP SP3*2/Windows Vista SP2*3/Windows 7

CPU*4

Intel Pentium III 1 GHz or faster

Application

DirectX 9.0c or later (This product is based on DirectX technology. It is necessary to have DirectX installed.)

Memory

256 MB or more

Other system requirements for OS should be met

Hard disk

Disk volume required for installation: Approximately 500 MB (5 GB or more may be necessary when creating DVD discs.)

Display

Minimum 1.024 dots × 768 dots

Others

USB port (this must be provided as standard, Hi-Speed USB (USB 2.0 compatible)), DVD burner (CD-ROM drive is necessary for installation)

- *1 Standard installation is required. Operation is not assured if the OS has been upgraded or in a multi-boot environment.
- *2 64-bit editions and Starter (Edition) are not supported. Windows Image Mastering API (IMAPI) Ver.2.0 or newer is required to use disc creation function. etc.
- *3 Starter (Edition) is not supported.
- *4 Faster processor is recommended.

Notes

 Operation with all computer environments is not assured.

When using a Macintosh

The supplied software "PMB" is not supported by Macintosh computers. To import the movies and photos to the computer, please contact Apple Inc..

Step 2 Installing the supplied software "PMB"

Install "PMB" before connecting your camcorder to a computer.

Notes

- If a version of "PMB" under 5.0.00 has been installed on your computer, you can start all applications from "PMB Launcher" by installing "PMB" from the supplied CD-ROM. Doubleclick the "PMB Launcher" short-cut icon on the computer screen to start "PMB Launcher."
- If a version of "PMB" under 5.0.00 has been installed on your computer, you may be unable to use some functions of those "PMB".

- Confirm that your camcorder is not connected to the computer.
- 2 Turn on the computer.
 - Log on as an Administrator for installation.
 - Close all applications running on the computer before installing the software.
- 3 Place the supplied CD-ROM in the disc drive of your computer.

 
The installation screen appears.

- If the screen does not appear, click
 [Start] → [Computer] (in Windows
 XP, [My Computer]), then double-click
 [SONYPMB (E:)] (CD-ROM)*.
- * Drive names (such as (E:)) may vary depending on the computer.
- 4 Click [Install].



- 5 Select the country or region.
- 6 Select the language for the application to be installed, then proceed to the next screen.
- Read the terms of the license agreement carefully. If you agree to the terms, change to ⑤, and then click [Next] → [Install].

Turn on your camcorder, then connect the camcorder to the computer using the supplied USB cable.



The [USB SELECT] screen appears on the camcorder screen automatically.

Select the one of the media types displayed on the screen to make the computer recognize your camcorder.

[⊖USB CONNECT]: Internal hard disk (DCR-SR15E/SR20E)

[**□**USB CONNECT]: Memory card

- The displayed recording media differ depending on the model.
- If the [USB SELECT] screen does not appear, select MENU (MENU) → [Show others] → [USB CONNECT] (under
 ☐ [OTHERS] category).
- 10 Click [Continue] on the computer screen.
- 11 Follow the on-screen instructions to install the software.
 - Depending on the computer, you may need to install third party software. If the installation screen appears, follow the instructions to install the required software.
 - Restart the computer if required to complete the installation.

· Connect the camcorder to the computer during the installation.

When the installation is completed, following icons will appear. Remove the CD-ROM from your



Starts "PMB."

: Displays "PMB Help."

: Displays "PMB Launcher." "PMB Launcher" enables you to start "PMB" or other software, or to open web sites.

- · Other icons may appear.
- · No icon may appear depending on the installation procedure.

Notes

· To create discs or use other functions on Windows XP, Image Mastering API v2.0 for Windows XP should be installed. If Image Mastering API v2.0 for Windows XP has not been installed yet, select it from required programs on the installation screen and install it following the procedures displayed. (The computer must be connected to the internet for the installation.) You may install Image Mastering API v2.0 for Windows XP in response to the message displayed when you try to start those functions.

To disconnect your camcorder from the computer

① Click the wicon at the bottom right of the desktop of the computer → [Safely remove USB Mass Storage Device].



- ② Select [END] → [YES] on the camcorder screen.
- 3 Disconnect the USB cable.

Notes

- · Access from the computer using the supplied software "PMB." Do not modify the files or folders on the camcorder from the computer. The image files may be destroyed or may not be played back.
- · When importing a long movie or edited image, use the supplied software "PMB." If you use any other software, images may not be imported properly.
- · Operation is not guaranteed, if you perform the above operation.
- · When you delete image files, follow the steps on page 30. Do not delete the image files on the camcorder directly from the computer.
- · Do not copy the files on the recording media from the computer. Operation is not guaranteed.

Starting PMB (Picture

Motion Browser)

Double-click the "PMB" short-cut icon on the computer screen.




Notes

 If the icon is not displayed on the computer screen, click [Start] → [All Programs] → [♣]
 PMB] to start "PMB."

You can view, edit, or create discs of movies and photos using "PMB."

Reading "PMB Help"

 For details on how to use "PMB," read the "PMB Help." Double-click the "PMB Help" short-cut icon on the computer screen to open the "PMB Help."



Notes

 If the icon is not displayed on the computer screen, click [Start] → [All Programs] → [PMB] → [PMB Help]. You can also open the "PMB Help" from [Help] of "PMB."

Creating a disc with one touch

 
(One Touch Disc Burn)

Movies and photos recorded on your camcorder that have not yet been saved with One Touch Disc Burn function can be saved on a disc automatically.


- Install "PMB" beforehand (p. 32), however, do not start "PMB."
- Connect your camcorder to the wall outlet (wall socket) using the AC Adaptor supplied for this operation (p. 12).
- With One Touch Disc Burn function on your camcorder, you can save movies and photos recorded on the internal recording media only (DCR-SR15E/SR20E).

Turn on your computer, and place an unused disc on the DVD drive.

- See page 32 for the type of discs you can use.
- If any other software than "PMB" starts automatically, shut it down.
- Turn on your camcorder, then connect the camcorder to the computer using the supplied USB cable.



3 Select [DISC BURN].

 

Follow the instructions on the computer screen.

Notes

 Movies and photos are not saved on the computer when you perform One Touch Disc Burn.

Importing movies and photos to a computer

Movies and photos recorded on your camcorder can be imported to a computer. Turn on the computer beforehand.

Notes

 Connect your camcorder to the wall outlet (wall socket) using the supplied AC Adaptor for this operation (p. 12).

Turn on your camcorder, then connect the camcorder to the computer using the supplied USB cable.



The [USB SELECT] screen appears on the camcorder screen.

Select the recording media that contains the images you want to save on the camcorder screen.

[OUSB CONNECT]: Internal hard disk

[USB CONNECT]: Memory card

- The displayed recording media differ depending on the model.
- If the [USB SELECT] screen does not appear, select MENU (MENU) → [Show others] → [USB CONNECT] (under
 [OTHERS] category).

The [Import] window appears on the computer screen.

Creating a disc

3 Click [Import].

· Refer to "PMB Help" (p. 35) for details.



Movies and photos are imported to your computer.

When the operation is completed, the "PMB" screen appears.

You can create a disc by selecting movies previously imported to your computer (p. 36).

- Turn on your computer, and place an unused disc on the DVD drive.
 - See page 32 for the type of discs you can use.
 - If any other software than "PMB" starts automatically, shut it down.
- ∠ Start "PMB" (p. 35).
- Click [Calendar] or [Index] on the left side in the window, and select the folder or date, then select the movies.
 - To select plural movies, hold the Ctrl key down and click thumbnails.
- At the top of the window, click
 ☐ → [Create DVD-Video Format Discs (STD)].

The window used to select movies appears.

 To add movies to the previously selected ones, select the movies in the main window and drag and drop onto the window for selecting movies.



5 Follow the instructions on the screen to create a disc.

· It may take a long time to create a disc.

Copying a disc

You can copy a recorded disc to another disc using "Video Disc Copier." Click [Start] \rightarrow [All Programs] \rightarrow $[PMB] \rightarrow [PMB Launcher] \rightarrow [Disc]$ creation] → [Video Disc Copier] to start the software. See "Video Disc Copier" help on the operation.

Editing movies

You can cut out only necessary parts from a movie and save it as another file. Double-click the movie to be edited on "PMB," then click [Show Edit Palette] on the right side of the screen \rightarrow [Trim Video], or select the [Manipulate] menu \rightarrow [Edit] \rightarrow [Trim Video]. See "PMB Help" (p. 35) for details.

Capturing photos from a movie

You can save a frame of a movie as a photo file.

 
Double-click the movie to be edited on "PMB," then click [Show Edit Palette] on the right side of the screen \rightarrow [Save Frame]. See "PMB Help" (p. 35) for details.



Saving images with an external device

Saving images in external media (DIRECT COPY)

You can save movies and photos on external media (USB storage device), such as an external hard disk drive. You can also play back images on the camcorder or another playback device.




Notes

- For this operation, you need the USB Adaptor Cable VMC-UAM1 (sold separately).
- The USB Adaptor Cable VMC-UAM1 may not be available in some countries/regions.
- You cannot use the following devices as an external media.
 - media with a capacity exceeding 2 TB
 - ordinary disc drive such as CD or DVD drive
 - media connected via USB hub
 - media with built-in USB hub
 - card reader
- You may not be able to use external media with a code function.
- FAT file system is available for your camcorder.
 If the external media was formatted to NTFS file system, etc., format the external media on your camcorder before use. The format screen appears when the external media is connected to your camcorder. The format screen may appear even in the case of media utilizing the FAT file system.
- Operation is not assured with every connectable device.
- Connect your camcorder to the wall outlet (wall socket) using the supplied AC adaptor (p. 12).
- Refer to the instruction manual supplied with the external media.
- Refer to the Sony support page for your country/region for details on external media that can be used.

Tips

- You can also import images recorded on external media using the supplied software "PMB."
- Connect the AC Adaptor and the power cord (mains lead) to the DC IN jack of your camcorder and the wall outlet (wall socket).
- If the external media has the AC power cable, connect it to the wall outlet (wall socket).
- Connect the USB Adaptor Cable to the external media.
- Connect the USB Adaptor Cable to the Ψ (USB) jack of your camcorder.

When the [Create a new Image Database File.] screen appears, select [YES].

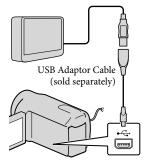

Select [Copy.] on the camcorder screen.

DCR-SR15E/SR20E:

Movies and photos in the internal recording media of the camcorder that have not yet been saved on to external media can be saved.

DCR-SX15E/SX20E:

Movies and photos that have not yet been saved on to external media can be saved.

· This screen will appear only when there are newly recorded images.



After the operation is completed, select OK on the camcorder screen.

Notes

· The number of scenes you can save on the external media are as follows.


Movies: 9,999 movies

Photos: 9,999 frames × 899 folders

The number of scenes may be smaller depending on the type of images recorded.

When connecting an external media

The images saved in the external media are displayed on the LCD screen. The movie display and photo display buttons on the VISUAL INDEX screen change as illustrated below.

 

You can make menu settings of the external media such as deleting images. Select MENU (MENU) \rightarrow [Show others] on the VISUAL INDEX screen.

To save desired movies and photos

You can also save images recorded on memory cards.

Notes

- · You cannot search or copy photos recorded on memory card by recording date.
- (1) Select [Play without copying.] in step 5 above.

The VISUAL INDEX screen of the external media is displayed.

- ② Select MENU (MENU) → [Show others] → [MOVIE DUB] (when selecting movies)/[PHOTO COPY] (when selecting photos).
- (3) Follow the on-screen instructions to select the recording media (DCR-SR15E/SR20E) and image selection methods.
- (4) When you selected [DUB by select], select the image to be saved.

✓ appears.

· When you selected [DUB by date], select the date of the images to be dubbed with , then select OK and go to step (5).



Remaining external media capacity

- · Press LIGHT when thumbnail is selected to confirm the image. Select to return to the previous screen.
- · By selecting date, you can search for images by date.
- (5) Select \longrightarrow [YES] \longrightarrow OK on the camcorder screen.

To play back images in the external media on the camcorder

- ① Select [Play without copying.] in step 5 above.
 - The VISUAL INDEX screen of the external media is displayed.
- 2 Play back the image (p. 25).
 - You can also view images on a TV connected to your camcorder (p. 28).

Notes

- The Date Index of photos cannot be displayed.
- If your camcorder does not recognize the external media, try the following operations.
 - Reconnect the USB Adaptor Cable to your camcorder
 - If the external media has the AC power cable, connect it to the wall outlet (wall socket)

To finish the external media connection

 
- ① Select on the VISUAL INDEX screen of the external media.
- ② Disconnect the USB Adaptor Cable.

Creating a disc with a DVD writer, recorder

Creating a disc with the dedicated DVD writer, DVDirect Express

You can create a disc or play back the images on a created disc by using the dedicated DVD writer, DVDirect Express (sold separately).


Refer also to the instruction manual supplied with the DVD writer.



Notes

- · Connect your camcorder to the wall outlet (wall socket) using the supplied AC Adaptor for this operation (p. 12).
- · Only unused discs of the following types can be used.
 - 12cm DVD-R
 - 12cm DVD+R
- · The device does not support two-layered discs.
- · DVDirect Express is referred to as "DVD writer" in this section.
- Connect the AC Adaptor and the power cord (mains lead) to the DC IN jack of your camcorder and the wall outlet (wall socket) (p. 12).

 2 Turn on your camcorder, and connect the DVD writer to the Ψ (USB) jack of your camcorder with the USB cable of the DVD writer.



3 Insert an unused disc into the DVD writer, and close the disc tray.

The [DISC BURN] screen appears on the screen.

writer.

Movies recorded on internal recording media and not yet saved on any other discs will be recorded to the disc. (DCR-SR15E/SR20E).

Movies not yet saved on any other discs will be recorded to the disc (DCR-SX15E/SX20E).

- 5 Repeat steps 3 and 4 when the total memory size of movies to be burnt exceeds that of the disc.
- 6 Select \longrightarrow [END] \longrightarrow [EJECT DISC] on the screen.

 
Remove the disc after the operation is completed.

Select on the screen, then disconnect the USB cable.

To customize a disc with DISC BURN OPTION

Perform this operation in the following cases:


- When dubbing a desired image
- When creating multiple copies of the same disc
- When dubbing images in the memory card (DCR-SR15E/SR20E)
- ① Select [DISC BURN OPTION] on the screen in step 4.
- ② Select the recording media containing the movie(s) you want to save (DCR-SR15E/SR20E).
- ③ Select the movie you want to burn on the disc.
 - **✓** appears.



Remaining Disc capacity

- Press LIGHT when thumbnail is selected to confirm the image. Select to return to the previous screen.
- By selecting date, you can search for images by date.
- ④ Select ○K → [YES] on the camcorder screen.
 - To create another disc of the same contents, insert a new disc and select [CREATE SAME DISC].
- ⑤ After the operation is completed, select [EXIT] → [END] on the camcorder screen.
- **(6)** Disconnect the USB cable from your camcorder.

 To play back a disc on the DVD writer



- ① Connect the AC Adaptor and the power cord (mains lead) to the DC IN jack of your camcorder and the wall outlet (wall socket) (p. 12).
- ② Turn on your camcorder, and connect the DVD writer to the Ψ (USB) jack of your camcorder with the USB cable of the DVD writer.
 - You can play back movies on the TV screen by connecting the camcorder to a TV (p. 28).
- ③ Insert a created disc into the DVD writer.

The movies on the disc appear as VISUAL INDEX on the screen.

- 4 Press the play button on the DVD writer.You can also operate by the screen.
- (5) Select [END] → [EJECT DISC] on the screen and remove the disc after the
- (6) Select or and disconnect the USB cable.

operation is completed.

- Notes
- Do not do any of the following when creating a disc.
 - Turn off the camcorder
 - Disconnect the USB cable or the AC adaptor
 - Subject the camcorder to mechanical shock or vibration
 - Eject the memory card from the camcorder
- Play the created disc to make sure dubbing was performed correctly before deleting the movies on your camcorder.
- If [Failed.] or [DISC BURN failed.] appears on

the screen, insert another disc into the DVD writer and perform the DISC BURN operation again.

Tips

 
- If the total memory size of movies to be burnt by the DISC BURN operation exceeds that of the disc, disc creation stops when the limit is reached. The last movie on the disc may be cut off.
- Disc creation time to dub movies to the limit of the disc is about 20 minutes to 60 minutes.
 It may take more time depending on the recording mode or the number of scenes.
- If you cannot play back created discs on any DVD player, connect the camcorder to the DVD writer, and then play back.

Creating a disc with a DVD writer, etc., other than DVDirect Express


You can save movies on a disc by connecting your camcorder to disc creation devices, such as a Sony DVD writer other than DVDirect Express, with the USB cable. Refer also to the instruction manuals supplied with the devices to be connected.

Notes

- Sony DVD writer may not be available in some countries/regions.
- Connect your camcorder to the wall outlet (wall socket) using the supplied AC Adaptor for this operation (p. 12).



- 1 Connect the AC Adaptor and the power cord (mains lead) to the DC IN jack of your camcorder and the wall outlet (wall socket) (p. 12).
- 2 Turn on your camcorder, and connect a DVD writer, etc. to the Ψ (USB) jack of your camcorder with the USB cable (supplied).

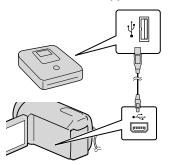

The [USB SELECT] screen appears on the camcorder screen.

- If the [USB SELECT] screen does not appear, select MENU (MENU) → [Show others] → [USB CONNECT] (under
 ☐ [OTHERS] category).
- Select the recording media that contains the images on the camcorder screen.

[OUSB CONNECT]: Internal hard

[☐USB CONNECT]: Memory card

• The displayed recording media differ depending on the model.


- 4 Record movies on the connected device.
 - For details, refer to the instruction manuals supplied with the device to be connected.
- 5 After the operation is completed, select [END] → [YES] on the camcorder screen.
- 6 Disconnect the USB cable.

Creating a disc with a recorder, etc.

You can dub images played back on your camcorder on a disc or video cassette, by connecting your camcorder to a disc recorder, a Sony DVD writer, etc., other than DVDirect Express, with the A/V connecting cable (supplied). Refer also to the instruction manuals supplied with the devices to be connected.

Notes

- Connect your camcorder to the wall outlet (wall socket) using the supplied AC Adaptor for this operation (p. 12).
- Sony DVD writer may not be available in some countries/regions.

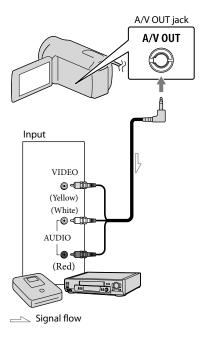

- Insert the recording media in the recording device.
 - If your recording device has an input selector, set it to the input mode.
- Connect your camcorder to the recording device (a disc recorder, etc.) with the A/V connecting cable (supplied).
 - Connect your camcorder to the input jacks of the recording device.

- 3 Start playback on your camcorder, and record it on the recording device.
 - Refer to the instruction manuals supplied with your recording device for details.
- 4 When dubbing is finished, stop the recording device, and then your camcorder.

Notes

- Since dubbing is performed via analog data transfer, the image quality may deteriorate.
- To record the date/time or camera settings data, select MENU (MENU) → [Show others] → [PLAYBACK SET] (under P[PLAYBACK] category) → [DATA CODE] → a desired setting → OK → DE → SET INGS] (under MENU) → [Show others] → [OUTPUT SETTINGS] (under [GENERAL SET] category) → [DISP OUTPUT] → [V-OUT/PANEL] → OK →
- When the screen size of display devices (TV, etc.) is 4:3, select MENU (MENU) → [Show others] → [OUTPUT SETTINGS] (under ⑤ [GENERAL SET] category) → [TV TYPE] → [4:3] → ○K → □ → ▼.
- When you connect a monaural device, connect the yellow plug of the A/V connecting cable to the video input jack, and the white (left channel) or the red (right channel) plug to the audio input jack on the device.

Customizing your camcorder

 
Using menus

Using the menus, you can perform useful functions and change various settings. If you make good use of menu operations, you can enjoy using your camcorder.

The camcorder has various menu items under each of eight menu categories.


- \square SHOOTING SET (Items for customized shooting) \rightarrow p. 50
- \bigcirc PHOTO SETTINGS (Items for recording photos) \rightarrow p. 50
- ightharpoonup PLAYBACK (Items for playback) ightharpoonup p. 50
- \blacksquare EDIT (Items for editing) \rightarrow p. 51
- \blacksquare OTHERS (Items for other settings) ightarrow p. 51
- MANAGE MEDIA (Items for recording media) → p. 51
- $\stackrel{<}{\sim}$ GENERAL SET (Other setup items) \rightarrow p. 52

Operating menus



- Select with **V**/**△**/**⋖**/**▶** and press the center of the multi-selector to confirm your selection.
- An orange frame appears on the selected item.



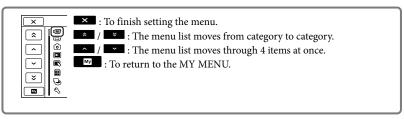

- (1) Select MENU.
- (2) Select [Show others] on the MY MENU screen.
 - · See the next page for details on MY MENU.
- (3) Select the menu item to be changed.
- (4) After changing the setting, select OK.

 To finish setting the menu, select

To return to the previous menu screen, select

- May not be displayed depending on the menu item.
- Notes
- · You may not be able to set some menu items, depending on the recording or playback conditions.
- · Grayed out menu items or settings are not available.
- Tips
- Depending on the menu items being changed, your camcorder switches between playback mode and recording mode (movie/photo).

Using MY MENU

You can use the menu items more easily by registering the menu items you use most often on MY MENU. You can register 6 menu items on each MY MENU of the MOVIE, PHOTO, and PLAYBACK.

Example: deleting [FOCUS] and registering [FADER]





 
- (1) Select MENU
- ② Select [MY MENU SETTING].
- 3 Select [MOVIE].
- 4 Select [FOCUS].
- (5) Select OK.
- ⑥ Select [聞FADER] (under M [MANUAL SETTINGS] category).
- 7 When MY MENU is displayed, select .

Repeat the same steps above to register menu items on MY MENU, and enjoy using your "Handycam."

- Tips
- When an external storage device is connected, the exclusive MY MENU appears.

Using the 😉 OPTION MENU

The OPTION MENU appears just like the pop-up window that appears when you right-click the mouse on a computer. When is displayed at bottom-right of the screen, you can use the OPTION MENU. You select in the menu items you can change in the context appear.



- (1) Select (OPTION).
- (2) Select the desired tab → the item to change the setting.
- (3) After completing the setting, select OK.
- Notes
- Grayed out menu items or settings are not available.
- When the item you want is not on the screen, select another tab. (There may be no tab.)
- The tabs and items that appear on the screen depend on the recording/playback status of your camcorder at the time.

Menu lists

(MANUAL SETTINGS	o) category
	Selects an appropriate recording setting according to the type of scene, such as night view or beach.
□ FADER	Fades scenes in or out.
WHITE BAL	Adjusts the color balance to the brightness of the recording environment.
EXPOSURE	Adjusts the brightness of movies and photos.
FOCUS	Focuses manually.
	Shoots a subject in focus with, the background out of focus.
(SHOOTING SET) cat	regory
□REC MODE	Sets the mode to record movies. When recording fast moving subject, a high image quality is recommended.
GUIDEFRAME	Displays the frame to make sure the subject is horizontal or vertical.
☐ STEADYSHOT	Sets the SteadyShot function when recording movies.
AUTO SLW SHUTTR	Adjusts the shutter speed automatically.
FACE DETECTION	Adjusts the image quality of the face(s) automatically.
AUDIO REC SET	
BLT-IN ZOOM MIC	Records movies with vivid sound appropriate to the zoom position.
MICREF LEVEL	Sets the microphone level.
OTHER REC SET	
□ DIGITAL ZOOM	Sets the maximum zoom level of the digital zoom that exceeds the zoom level of the optical zoom.
⊞ WIDE SELECT	Sets the horizontal to vertical ratio when recording movies.
(PHOTO SETTINGS) ca	tegory
■SELF-TIMER	Sets the self-timer when your camcorder is in photo recording mode.
■IMAGE SIZE	Sets the photo size.
FILE NO	Sets how to assign the file number.
(PLAYBACK) category	
VISUAL INDEX	Displays recording images as thumbnails (p. 25).
VIEW IMAGES	
DATE INDEX	Enables searching for desired images by date.
	Displays and plays the scenes by a certain interval.
	Displays and plays the face scenes.
	Displays and plays the playlist of movies.
PLAYBACK SET	
DATA CODE	Displays the detailed recording data during playback.

(EDIT) category
DELETE
□DELETEDeletes movies.
■DELETEDeletes photos.
PROTECT
□PROTECTProtects movies to avoid deleting.
■PROTECTProtects photos to avoid deleting.
□ DIVIDE Divides movies.
PHOTO CAPTURE*1 *2Captures photos from desired scenes of movies.
MOVIE DUB*1
DUB by selectSelects movies and dub.
DUB by dateDubs all movies of a specified date.
■ DUB ALLDubs all saved movies in a playlist.
PHOTO COPY*1
COPY by selectSelects photos and copy.
COPY by dateCopies all photos of a specified date.
PLAYLIST EDIT
□ADDAdds movies in a playlist.
□ADD by dateAdds movies recorded on a same day at one time in a playlist.
☐ ERASE Erases movies from a playlist.
■ ERASE ALLErases all movies from a playlist.
MOVEChanges the order of movies in a playlist.
(OTHERS) category
USB CONNECT
⊖USB CONNECT*1 Connects the internal hard disk via USB.
■USB CONNECT Connects the memory card via USB.
DISC BURNAllows you to save images onto discs (p. 35, 42).
BATTERY INFO Displays the battery information.
(MANAGE MEDIA) category
MEDIA SETTINGS*1
MOVIE MEDIA SET Sets the media for recording movies (p. 16).
PHOTO MEDIA SET Sets the media for recording photos (p. 17).
MEDIA INFODisplays information on the recording media, such as free space.
MEDIA FORMAT
HDD*1 Deletes all data on the internal hard disk.
MEMORY CARD Deletes all data on the memory card.
REPAIR IMG.DB F.

$\stackrel{\sim}{\sim}$ (GENERAL SET) category

· · · · · · · · · · · · · · · · · · ·
SOUND/DISP SET
VOLUME Adjusts the volume of playback sound (p. 26).
BEEPSets whether the camcorder sounds operation beeps or not.
LCD BRIGHTAdjusts the brightness of the LCD screen.
LCD BL LEVEL Adjusts the backlight of the LCD screen.
LCD COLORAdjusts the color intensity of the LCD screen.
DISPLAY SETSets the duration that icons or indicators are displayed on the LCD screen.
OUTPUT SETTINGS
TV TYPEConverts the signal depending on the TV connected (p. 28).
DISP OUTPUTSets whether the on-screen displays appears on the TV screen or not.
CLOCK/
CLOCK SETSets the date and time (p. 13).
AREA SET Adjusts for a time difference without stopping the clock (p. 13).
SUMMERTIMESets the summertime (p. 13).
□ LANGUAGE SETSets the display language (p. 15).
POWER SETTINGS
A.SHUT OFFChanges the [A.SHUT OFF] setting (p. 11).
OTHER SETTINGS
DEMO MODESets whether the demonstration appears or not.
DROP SENSOR*1Activates or deactivates the drop sensor.

^{*1} DCR-SR15E/SR20E

^{*2} DCR-SX20E

Getting detailed information from the "Handycam" Handbook

The "Handycam" Handbook is a user guide designed to be read on a computer screen. The "Handycam" Handbook is intended to be read when you want to know more about operating your camcorder.

- To install the "Handycam"
 Handbook on a Windows
 computer, place the supplied
 CD-ROM in the disc drive of your
 computer.
- On the installation screen displayed, click [Handbook].



- Select the desired language and the model name of your camcorder, then click [Install]. Install by following the instructions on the screen.
 - The model name of your camcorder is printed on its bottom surface.

To view the "Handycam" Handbook, double-click the short-cut icon on the computer screen.



- When using a Macintosh, open the [Handbook]
 [GB] folder in the CD-ROM, then copy
 [Handbook.pdf].
- You need Adobe Reader to read "Handycam"
 Handbook. If it is not installed on your
 computer, you can download it from the Adobe
 Systems web page:
 http://www.adobe.com/
- Refer to "PMB Help" for details on the supplied software "PMB" (p. 35).

Additional information

Troubleshooting

If you run into any problems using your camcorder, follow the steps below.

- ① Check the list (p. 54 to 56), and inspect your camcorder.
- ② Remove the power source, attach the power source again after about 1 minute, and turn the camcorder on.
- ③ Press RESET (p. 64, 65) using a pointed object, and turn the camcorder on. If you press RESET, all settings,

including the clock setting, are reset.

- 4 Contact your Sony dealer or local authorized Sony service facility.
- Your camcorder may be required to initialize or change the current internal recording media of your camcorder, depending on the problem. In the event of this, the data stored on the internal recording media will be deleted. Be sure to save the data on the internal recording media on other media (backup) before sending your camcorder for repair. We will not compensate you for any loss of internal recording media data.
- During repair, we may check a minimum amount of data stored on the internal recording media in order to investigate the problem.
 However, your Sony dealer will neither copy nor retain your data.
- See the "Handycam" Handbook (p. 53) for details on the symptoms of your camcorder, and "PMB Help" (p. 35) on connecting your camcorder to a computer.

The power does not turn on.

- Attach a charged battery pack to the camcorder (p. 10).
- Connect the plug of the AC Adaptor to the wall outlet (wall socket) (p. 12).

The camcorder does not operate even when the power is set to on.

- It takes a few seconds for your camcorder to be ready to shoot after the power is turned on. This is not a malfunction.
- Disconnect the AC Adaptor from the wall outlet (wall socket) or remove the battery pack, then reconnect it after about 1 minute. If your camcorder still does not work, press RESET (p. 64, 65) using a pointed object. (If you press RESET, all settings, including the clock setting, are reset.)
- The temperature of your camcorder is extremely high. Turn off the camcorder and leave it for a while in a cool place.
- The temperature of your camcorder is extremely low. Leave the camcorder with the power turned on. If you still cannot operate your camcorder, turn off the camcorder and take it to a warm place. Leave the camcorder there for a while, then turn on the camcorder.

Your camcorder gets warm.

• Your camcorder may become warm during operation. This is not a malfunction.

The power abruptly turns off.

- Use the AC Adaptor (p. 12).
- Turn on the power again.
- Charge the battery pack (p. 10).

Pressing START/STOP or PHOTO does not record images.

- Press MODE to display the (Movie) or (Photo) icons.
- Your camcorder is recording the image you have just shot on the recording media. You cannot make any new recordings during this period.
- The recording media is full. Delete unnecessary images (p. 30).
- Total number of movie scenes or photos has exceeded the recordable capacity of your camcorder (p. 57, 58). Delete unnecessary images (p. 30).

The recording stops.

 The temperature of your camcorder is extremely high/low. Turn off your camcorder and leave it for a while in a cool/warm place.

"PMB" cannot be installed.

 Check the computer environment or installation procedure required to install "PMB" (p. 32).

"PMB" does not work correctly.

· Quit "PMB" and restart your computer.

The camcorder is not recognized by the computer.

- Disconnect devices from the USB jack of the computer other than the keyboard, mouse, and your camcorder.
- Disconnect the USB cable from the computer and your camcorder, and restart the computer, then connect the computer and your camcorder again in an orderly manner.

Self-diagnosis display/Warning indicators

If indicators appear on the LCD screen, check the following.

If the problem persists even after you have tried to fix a couple of times, contact your Sony dealer or local authorized Sony service facility. In this case, when you contact them, give them all the numbers of the error code beginning with C or E.

C:04:□□

- The battery pack is not an "InfoLITHIUM" battery pack V series. Use an "InfoLITHIUM" battery pack (V series) (p. 10).
- Connect the DC plug of the AC Adaptor to your camcorder securely (p. 10).

C:06:□□

 The battery pack temperature is high. Change the battery pack or place it in a cool place.

C:13:□□ / C:32:□□

 Remove the power source. Reconnect it and operate your camcorder again.

$F: \square \square : \square \square$

• Follow the steps from (2) to (4) on page 54.

\otimes

- The indicator flashes when the internal hard disk of your camcorder becomes full. Delete unnecessary images (p. 30), or format the internal hard disk (p. 51) after storing the images on other media..
- An error may have occurred with the internal hard disk of your camcorder.

• Battery power is low.

 The battery pack temperature is high. Change the battery pack or place it in a cool place.

 The temperature of your camcorder is getting high. Turn off your camcorder and leave it in a cool place.

The temperature of your camcorder is low.
 Make the camcorder warm.

$\overline{\mathbb{Z}}$

- No memory card is inserted (p. 17).
- The indicator flashes when the memory card becomes full. Delete unnecessary images (p. 30), or format the memory card (p. 51) after storing the images on other media.

• The Image Database File is damaged. Check the data base file by selecting MENU (MENU) \rightarrow [Show others] \rightarrow [REPAIR IMG.DB F.] the recording medium (DCR-SR15E/SR20E).

₹

• The memory card is damaged. Format the memory card with your camcorder (p. 51).

[?]

• Incompatible memory card is inserted (p. 18).

ℴ

· Access to the memory card was restricted on another device.

((本))

• The camcorder is unsteady. Hold the camcorder steady with both hands. However, note that the camera-shake warning indicator does not disappear.

Ö

• The drop sensor function is activated. You may not be able to record nor play back images.

Recording time of movies/number of recordable photos

Expected time of recording and playback with each battery pack

Recording time

Approximate time available when you use a fully charged battery pack.

DCR-SR15E/SR20E

(unit: minute)

		()
Battery pack	Continuous recording time	Typical recording time
NP-FV30 (supplied)	95	45
NP-FV50	180	85
NP-FV70	375	180
NP-FV100	745	355

DCR-SX15E/SX20E

(unit: minute)

		(amin minate)
Battery pack	Continuous recording time	Typical recording time
NP-FV30 (supplied)	105	50
NP-FV50	200	95
NP-FV70	415	195
NP-FV100	830	395

- Each recording time is measured when the [IIIREC MODE] is set to SP.
- Typical recording time shows the time when you repeat recording start/stop, switching the movie or photo mode, and zooming.
- Times measured when using the camcorder at 25 °C (77 °F). 10 °C to 30 °C (50 °F to 86 °F) is recommended.
- The recording and playback time will be shorter when you use your camcorder in low temperatures
- The recording and playback time will be shorter depending on the conditions under which you use your camcorder.

Playing time

Approximate time available when you use a fully charged battery pack.

DCR-SR15E/SR20E

	(unit: minute)
Battery pack	
NP-FV30 (supplied)	125
NP-FV50	240
NP-FV70	490
NP-FV100	980

DCR-SX15E/SX20E

	(unit: minute)
Battery pack	
NP-FV30 (supplied)	145
NP-FV50	280
NP-FV70	565
NP-FV100	1120

Expected recording time of movies

Internal hard disk

DCR-SR15E/SR20E

 Recording mode
 Recording time

 [HQ]
 1220

 [SP]
 1750

 [LP]
 3660

Tips

- You can record movies of a maximum of 9,999 scenes.
- The maximum continuous recording time of movies is approximately 13 hours.
- Your camcorder uses the VBR (Variable Bit Rate) format to automatically adjust image quality to suit the recording scene. This

technology causes fluctuations in the recording time of the media. Movies containing quickly moving and complex images are recorded at a higher bit-rate, and this reduces the overall recording time.

Memory card

		(unit	: minute)
	HQ	SP	LP
512MB	6	9	20
	(5)	(5)	(10)
1GB	10	20	40
	(10)	(10)	(25)
2GB	25	40	85
	(25)	(25)	(55)
4GB	55	80	175
	(50)	(50)	(110)
8GB	115	170	355
	(105)	(105)	(230)
16GB	235	340	715
	(210)	(210)	(465)
32GB	475	685	1435
	(425)	(425)	(930)

Notes

- The recordable time may vary depending on the recording and subject conditions, [□REC MODE] (p. 50).
- The number in () is the minimum recordable time.

Expected number of recordable photos

Internal recording media (DCR-SR15E/SR20E)

You can record the maximum 9,999 photos.

Memory card

	VGA(0.3M) TvGA
512MB	2800
1GB	5700
2GB	11500
4GB	23000
8GB	47000
16GB	95000
32GB	185000

- The indicated number of recordable photos on a memory card is based on the maximum image size of your camcorder. The actual number of recordable photos is displayed on the LCD screen during recording (p. 63).
- The maximum number of recordable photos on a memory card may vary depending on the recording conditions.

Tips

- You can also use memory card with a capacity of under 512 MB for recording photos.
- The following list shows the average bit-rate, the recording pixels, and the aspect ratio of each movie recording mode.

HQ: Approx. 9Mbps 720 pixels × 576 pixels/16:9, 4:3

SP: Approx. 6Mbps 720 pixels × 576 pixels/16:9, 4:3

LP: Approx. 3Mbps 720 pixels × 576 pixels/16:9, 4:3

- · The photo recording pixels and the aspect ratio.
 - Photo recording mode: 640 dots × 480 dots/4:3

640 dots × 360 dots/16:9

Capturing a photo from a movie:640 dots × 360 dots/16:9640 dots × 480 dots/4:3

Precautions

On use and care

- Do not use or store the camcorder and accessories in the following locations:
 - Anywhere extremely hot, cold or humid.
 Never leave them exposed to temperatures above 60 °C (140 °F), such as under direct sunlight, near heaters or in a car parked in the sun. They may malfunction or become deformed.
 - Near strong magnetic fields or mechanical vibration. The camcorder may malfunction.
 - Near strong radio waves or radiation. The camcorder may not be able to record properly.
 - Near AM receivers and video equipment.
 Noise may occur.
 - On a sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired.
 - Near windows or outdoors, where the LCD screen or the lens may be exposed to direct sunlight. This damages the inside of the LCD screen.
- Operate your camcorder on DC 6.8 V/7.2 V (battery pack) or DC 8.4 V (AC Adaptor).
- For DC or AC operation, use the accessories recommended in these operating instructions.
- Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. Sometimes this malfunction cannot be repaired.
- If any solid object or liquid gets inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping or stepping on the product. Be particularly careful of the lens.
- Keep the camcorder turning off when you are not using your camcorder.
- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- When disconnecting the power cord (mains lead), pull it by the plug and not the cord (lead).
- Do not damage the power cord (mains lead)

- such as by placing anything heavy on it.
- Do not use a deformed or damaged battery pack.
- · Keep metal contacts clean.
- If the battery electrolytic liquid has leaked:
 - Consult your local authorized Sony service facility.
 - Wash off any liquid that may have contacted your skin.
 - If any liquid gets in your eyes, wash with plenty of water and consult a doctor.

When not using your camcorder for a long time

- To keep your camcorder in optimum state for a long time, turn it on and let it run by recording and playing back images about once a month.
- Use up the battery pack completely before storing it.

LCD screen

- Do not exert excessive pressure on the LCD screen, as it may cause damage.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen.
 This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

To clean the LCD screen

 If fingerprints or dust make the LCD screen dirty, it is recommended that you use a soft cloth to clean it. When you use the LCD Cleaning Kit (sold separately), do not apply the cleaning liquid directly to the LCD screen. Use cleaning paper moistened with the liquid.

On handling the casing

- If the casing is soiled, clean the camcorder body with a soft cloth lightly moistened with water, and then wipe the casing with a dry soft cloth.
- Avoid the following to avoid damage to the finish:
 - Using chemicals such as thinner, benzine, alcohol, chemical cloths, repellent, insecticide and sunscreen

- Handling the camcorder with above substances on your hands
- Leaving the casing in contact with rubber or vinyl objects for a long period of time

About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances:
 - When there are fingerprints on the lens surface
 - In hot or humid locations
 - When the lens is exposed to salty air such as at the seaside
- Store in a well-ventilated location subject to little dirt or dust.
- To prevent mold, periodically clean the lens as described above.

On charging the pre-installed rechargeable battery

Your camcorder has a pre-installed rechargeable battery to retain the date, time, and other settings even when the camcorder is turned off. The pre-installed rechargeable battery is always charged while your camcorder is connected to the wall outlet (wall socket) via the AC Adaptor or while the battery pack is attached. The rechargeable battery will be fully discharged in about 3 months if you do not use your camcorder at all. Use your camcorder after charging the pre-installed rechargeable battery. However, even if the pre-installed rechargeable battery is not charged, the camcorder operation will not be affected as long as you are not recording the date.

Procedures

Connect your camcorder to a wall outlet (wall socket) using the supplied AC Adaptor, and leave it with the LCD screen closed for more than 24 hours

Note on disposal/transfer of the camcorder (DCR-SR15E/SR20E)

Even if you delete all movies and still images, or perform [MEDIA FORMAT], data on the internal recording media may not be completely erased. When you transfer the camcorder, it is recommended that you perform [EMPTY]

(See "Getting detailed information from the "Handycam" Handbook" on page 53.) to prevent the recovery of your data. Also, when you dispose of the camcorder, it is recommended that you destroy the actual body of the camcorder.

Note on disposal/transfer of memory card

Even if you delete data in the memory card or format the memory card on your camcorder or a computer, you may not delete data from the memory card completely. When you give the memory card to somebody, it is recommended that you delete data completely using data deletion software on a computer. Also, when you dispose of the memory card, it is recommended that you destroy the actual body of the memory card.

Specifications

System

Signal format: PAL color, CCIR standards

Movie recording format: Video: MPEG-2 PS

Audio recording system:

Dolby Digital 2ch

Dolby Digital Stereo Creator

Photo file format

: DCF Ver.2.0 Compatible : Exif Ver.2.21 Compatible

: MPF Baseline Compatible

Recording media (Movie/Photo)

Internal hard disk

DCR-SR15E/SR20E: 80 GB

"Memory Stick PRO Duo" media SD memory card (Class 2 or faster)

When measuring media capacity, 1 GB equals 1 billion bytes, a portion of which is used for system management and/or application files. The capacity that a user can use is below. DCR-SR15E/SR20E: Approx. 79.3 GB

Image device

2.25 mm (1/8 type) CCD (Charge Coupled Device)

Gross: Approx. 800 000 pixels

Effective (Movie, 16:9): Approx. 490 000

Effective (Photo, 16:9): Approx. 310 000 pixels Effective (Photo, 4:3): Approx. 410 000 pixels

Lens

 $50 \times (Optical), 1800 \times (Digital)$

 $F1.8 \sim F4.7$

Focal length:

f=1.8 mm ~ 90 mm (3/32 in. ~ 4 3/8 in.)

When converted to a 35 mm still camera For movies: 39 mm \sim 1 950 mm (1 9/16 in. \sim 76 7/8 in.) (16:9)

For photos: 44 mm ~ 2 200 mm (1 3/4 in. ~ 86 5/8 in.) (4:3)

Color temperature: [AUTO], [ONE PUSH], [INDOOR] (3 200 K), [OUTDOOR] (5 800 K)

Minimum illumination

3 lx (lux) ([AUTO SLW SHUTTR] is set to [ON], shutter speed 1/25 second)

Input/Output connectors

A/V OUT jack: Video/audio output jack USB jack: mini-AB

(DOD OD A DE LOVEA DE

(DCR-SR15E/SX15E: output only)

LCD screen

Picture: 6.7 cm (2.7 type, aspect ratio 16:9) Total number of pixels: 230 400 (960×240)

General

Power requirements: DC 6.8 V/7.2 V (battery pack) DC 8.4 V (AC Adaptor)

Average power consumption: During camera recording, using LCD screen at normal brightness:

DCR-SR15E/SR20E: 2.1 W DCR-SX15E/SX20E: 1.9 W

Operating temperature: 0 $^{\circ}$ C to 40 $^{\circ}$ C (32 $^{\circ}$ F to 104 $^{\circ}$ F)

Storage temperature: -20 °C to +60 °C (-4 °F to +140 °F)

Dimensions (approx.)

DCR-SR15E/SR20E

59 mm \times 65 mm \times 113 mm (2 3/8 in. \times 2 5/8 in. \times 4 1/2 in.) (w/h/d) including the projecting parts

 $59 \text{ mm} \times 65 \text{ mm} \times 124 \text{ mm}$ (2 3/8 in. \times 2 5/8 in. \times 5 in.) (w/h/d) including the projecting parts, and the supplied rechargeable battery pack attached DCR-SX15E/SX20E

 $54 \text{ mm} \times 55 \text{ mm} \times 113 \text{ mm}$ (2 $1/4 \text{ in.} \times 2 1/4 \text{ in.} \times 4 1/2 \text{ in.}$) (w/h/d) including the projecting parts

 $54 \text{ mm} \times 55 \text{ mm} \times 124 \text{ mm}$ (2 1/4 in. \times 2 1/4 in. \times 5 in.) (w/h/d) including the projecting parts, and the supplied rechargeable battery pack attached

Mass (approx.)

DCR-SR15E/SR20E:

270 g (9 oz) main unit only 310 g (10 oz) including the supplied rechargeable battery pack DCR-SX15E/SX20E: 190 g (6 oz) main unit only 240 g (8 oz) including the supplied

rechargeable battery pack and memory card AC Adaptor AC-L200C/AC-L200D

Power requirements: AC 100 V - 240 V, 50 Hz/60 Hz

Current consumption: 0.35 A - 0.18 A

Power consumption: 18 W Output voltage: DC 8.4 V*

Operating temperature: 0 $^{\circ}$ C to 40 $^{\circ}$ C (32 $^{\circ}$ F to 104 $^{\circ}$ F)

Storage temperature: -20 $^{\circ}$ C to +60 $^{\circ}$ C (-4 $^{\circ}$ F to +140 $^{\circ}$ F)

- Dimensions (approx.): $48 \text{ mm} \times 29 \text{ mm} \times 81 \text{ mm}$ $(1.15/16 \text{ in.} \times 1.3/16 \text{ in.} \times 3.1/4 \text{ in.}) (w/h/d)$ excluding the projecting parts
- Mass (approx.): 170 g (6.0 oz) excluding the power cord (mains lead)
- * See the label on the AC Adaptor for other specifications.

Rechargeable battery pack NP-FV30

Maximum output voltage: DC 8.4 V

Output voltage: DC 7.2 V

Maximum charge voltage: DC 8.4 V Maximum charge current: 2.12 A

Capacity

typical: 3.6 Wh (500 mAh) minimum: 3.6 Wh (500 mAh)

Type: Li-ion

Design and specifications of your camcorder and accessories are subject to change without notice.

· Manufactured under license from Dolby Laboratories

On trademarks

- "Handycam" and HANDSYCAM are registered trademarks of Sony Corporation.
- "Memory Stick," "Memory Stick Duo," "MEMORY STICK DUO," "Memory Stick PRO Duo," "MEMORY STICK PRO DUO," "Memory Stick PRO-HG Duo,"


"MEMORY STICK PRO-HG DUO," "Memory Stick Micro," "MagicGate," "MAGICGATE," "MagicGate Memory Stick" and "MagicGate Memory Stick Duo" are trademarks or registered trademarks of Sony Corporation.

- "InfoLITHIUM" is a trademark of Sony Corporation.
- · "DVDirect" is a trademark of Sony Corporation.
- · Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- · Microsoft, Windows, Windows Vista, and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are registered trademarks of Apple Inc. in the U.S. and other countries.
- · Intel, Intel Core, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
- Adobe, the Adobe logo, and Adobe Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- · SDXC and SDHC logo are trademarks of SD-3C, LLC.
- MultiMediaCard is a trademark of MultiMediaCard Association.

All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, ™ and (R) are not mentioned in each case in this manual

Quick reference

Screen indicators

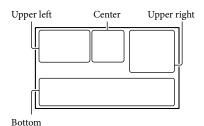

Upper left

- -	
Indicator	Meaning
MENU	MENU button
0	Self-timer recording
Ţ↓	MICREF LEVEL low
<u>4:3</u>	WIDE SELECT
*	BLT-IN ZOOM MIC
☑ 60 min	Remaining battery
→ 101	Recording folder of memory card
=⇔	VIDEO LIGHT
5	Return button

Center

Indicator	Meaning
[STBY]/[REC]	Recording status
VGA CO.2M	Photo size
¢Þ	Slide show set
(4)) A-[]	Warning
>	Playback mode

Upper right

Indicator	Meaning
HQ SP LP	Recording mode (HQ/ SP/LP)
9.	Recording/playback/ editing media
0:00:00	Counter (hour:minute: second)

Indicator	Meaning
[00min]	Estimated recording remaining time
WHITE BLACK FADER FADER	FADER
€ _{0FF}	Drop sensor off
Ö	Drop sensor activated
9999 ♠→⊖	Approximate number of recordable photos and recording media
ि ।	Playback folder of memory card
100/112	Current playing movie or photo/Number of total recorded movies or photos


L. P. A	M :
Indicator	Meaning
[e]	[FACE DETECTION] set
E 017	to [OFF]
€ 4 ≟	Manual focus
) ∳ - ∅	
A 🔐 🕒 🕏	SCENE SELECTION
? ≘ 8	
* ☆ ┗┛	White balance
((\))	SteadyShot off
	EXPOSURE
	EAFOSURE
T₩	TELE MACRO
25	Backlight
⊕ <u>=</u>	OPTION button
Þ	VIEW IMAGES button
C. II	Slide show button
△ 101-0005	Data file name
0-п	Protected image
88	Index button
□ o	Movie mode/photo mode

- Indicators and their positions are approximate and may differ from what you actually see.
- Some indicators may not appear, depending on your camcorder model.

Parts and controls


Figures in () are reference pages.

DCR-SR15E/SR20E

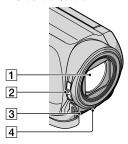


- 1 Lens
- **2** LENS COVER switch
- 3 Built-in microphone
- 4 LED VIDEO LIGHT

DCR-SX15E/SX20E

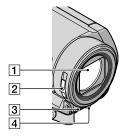

 - 1 Lens
- 2 LENS COVER switch
- 3 Built-in microphone
- 4 LED VIDEO LIGHT



1 LCD screen


If you rotate the LCD panel 180 degrees, you can close the LCD panel with the LCD screen facing out. This is convenient during playback operations.

2 LIGHT button

3 Multi-selector (15)

- Press to light up the LIGHT.
- 4 (VIEW IMAGES) button (25)

DCR-SR15E/SR20E

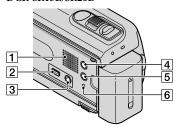


- 1 Speaker
- **2** \$\psi\$ (USB) jack (33, 36, 39, 42) DCR-SR15E: output only
- 3 A/V OUT jack (28)
- 4 MODE button (21)
- 5 3 (Backlight) button
- 6 RESET button

Press RESET using a pointed object.

Press RESET to initialize all the settings including the clock setting.

DCR-SX15E/SX20E

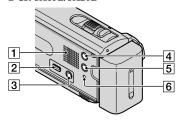


- 1 Speaker
- **2** Ψ (USB) jack (33, 36, 39, 42) DCR-SX15E: output only
- 3 A/V OUT jack (28)
- 4 MODE button (21)
- 5 🖪 (Backlight) button
- 6 RESET button

Press RESET using a pointed object.

Press RESET to initialize all the settings including the clock setting.

DCR-SR15E/SR20E

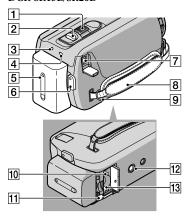


- 1 Power zoom lever
- 2 PHOTO button (24)
- 3 POWER lamp
- 4 CHG (charge) lamp (10)
- 5 Battery pack (10)
- 6 START/STOP button (21)
- 7 DC IN jack (10)
- 8 Grip belt (20)
- 9 Hook for a shoulder belt
- 10 Access lamp (memory card) (17) While the lamp is lit or flashing, the camcorder is reading or writing data.
- 11 BATT (battery) release lever (12)
- 12 Tripod receptacle

Attach a tripod (sold separately) to the tripod receptacle using a tripod screw (sold separately: the length of the screw must be less than 5.5 mm (7/32 in.)).

13 Memory card slot (17)

DCR-SX15E/SX20E

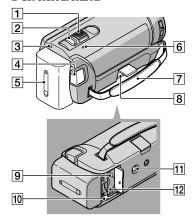

- 1 Power zoom lever
- 2 PHOTO button (24)
- **3** POWER lamp
- 4 START/STOP button (21)
- 5 Battery pack (10)
- 6 CHG (charge) lamp (10)
- **7** Grip belt (20)
- 8 DC IN jack (10)
- Access lamp (memory card) (17)
 While the lamp is lit or flashing, the camcorder is reading or writing data.
- 10 BATT (battery) release lever (12)
- 11 Tripod receptacle
 Attach a tripod (sold separately) to the
 tripod receptacle using a tripod screw (sold
 separately: the length of the screw must be less
 than 5.5 mm (7/32 in.)).
- 12 Memory card slot (17)

Chick Leielei

Index

Symbols	
16:928	LAN
4:328	M
A	Mac
A/V connecting cable28, 45	Maii
Altitude6	MEI
	Men
B	"Me
Battery pack10	"Me
	med
Capturing photos from a movie	"Me
38	Men
Care59	MO
Charging the battery pack10	Mov
Charging the battery pack abroad	MY
12	
CLOCK SET13	MY
Computer32	0
Computer system32	One
Copy19	Ope
Copying a disc38	Ope
Creating a disc37, 42	OPT
D	
DATA CODE14	P
DATE/TIME14	PHC
DELETE30	Pho
Disc recorder45	Play
Dubbing19	PMI
DVDirect Express42	
DVD writer42, 44	PMI
D v D witter	Pow
E	Prec
Editing movies38	R
External media39	Reco
	Reco
	Reco
Fully charged10	num
H	Repa
"Handycam" Handbook53	RES
•	S
Install32	Savi
Internal hard disk 16	

LANGUAGE SET15
M
Macintosh32
Maintenance59
MEDIA SETTINGS16
Memory card17
"Memory Stick" media18
"Memory Stick PRO-HG Duo"
media18
"Memory Stick PRO Duo" media
17
Menus47, 50
MOVIE MEDIA SET16
Movies21, 25
MY MENU47
MY MENU SETTING47
0
o m 1 m n
One Touch Disc Burn35
One Touch Disc Burn35 Operation beeps14
Operation beeps14
Operation beeps14 Operation flow7
Operation beeps
Operation beeps
Operation beeps 14 Operation flow
Operation beeps 14 Operation flow .7 OPTION MENU .49 P PHOTO MEDIA SET .17 Photos .23, 25 Playback .25
Operation beeps 14 Operation flow
Operation beeps 14 Operation flow .7 OPTION MENU .49 P PHOTO MEDIA SET .17 Photos .23, 25 Playback .25 PMB (Picture Motion Browser)
Operation beeps 14 Operation flow .7 OPTION MENU .49 PHOTO MEDIA SET .17 Photos .23, 25 Playback .25 PMB (Picture Motion Browser) .32, 35
Operation beeps 14 Operation flow .7 OPTION MENU .49 PHOTO MEDIA SET .17 Photos .23, 25 Playback .25 PMB (Picture Motion Browser) .32, 35 PMB Help .35
Operation beeps 14 Operation flow
Operation beeps 14 Operation flow .7 OPTION MENU .49 P .17 Photos .23, 25 Playback .25 PMB (Picture Motion Browser) .32, 35 PMB Help .35 Power on .13 Precautions .59
Operation beeps 14 Operation flow
Operation beeps 14 Operation flow

Repair.....54

RESET65

Saving images in external media39

Screen indicators63
Self-diagnosis display55
Setting the date and time13
Software32
Specifications61
Supplied items4
T
Thumbnail30
Tripod66
Troubleshooting54
Turning the power on13
TV28
TV TYPE28
TID.
USB cable42, 44 USB CONNECT42, 44
U3B CONNECT42, 44
V
VBR57
VIEW IMAGES25
VISUAL INDEX25
Volume26
W
Wall outlet (wall socket)10
Warning indicators55
Windows32
Z
Zoom65

You will find the menu lists on pages 50 to 52.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

http://www.sony.net/

Printed on 70% or more recycled paper.

Printed in China

