


# A Quick Start to Your Monogram Dishwasher

Read the Owner's Manual for complete Operating Instructions.

## Before You Start


- ✓ Water temperature should be at least 120°F for efficient cleaning and no more than 150°F to prevent damage to your dishes.

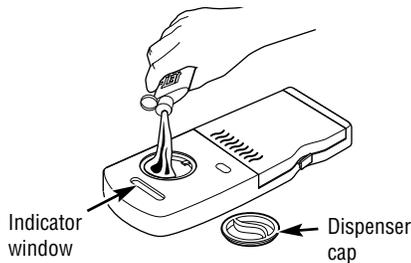

## Loading Your Dishes (See pages 13 to 16 in the Owner's Manual)

- ✓ Do not obstruct spray arms.
- ✓ Do not block detergent cup with tall objects. The detergent cup must dispense detergent freely so it can circulate during the wash cycle.
- ✓ Load the silverware basket evenly. Mix knives, spoons and forks so they won't nest together.
- ✓ Use rinse agent to prevent spotting.
- ✓ Add rinse agent until the indicator window shows full.

## Starting the Dishwasher

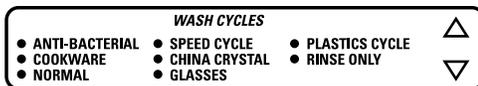

- ✓ Select the desired cycle. Press the up or down arrow until the light next to the desired cycle is on.
- ✓ Select any enhancements, if desired, then press START/RESET.
- ✓ Close and latch the door. The cycle will begin.
- ✓ The CLEAN indicator light will glow when the cycle is completed.
- ✓ The dishwasher will remember which cycle and enhancements were used last. If you don't want to change the settings, press START/RESET to begin a new cycle.
- ✓ If the door is closed, the indicator lights will turn off if the START/RESET pad is not selected within 2 minutes. To activate, open and close the door or press any pad.

## Interrupting the Cycle

- ✓ Open the door slowly, just enough to stop the wash cycle. Close and latch the door; the cycle will automatically resume.



## Reset/Canceling the Cycle

- ✓ Open the door slowly to prevent splash-out. Touch the START/RESET pad to cancel the cycle.
- ✓ If the START/RESET light is flashing, close the door until the water pumps out (this can take approximately 70 seconds). When the light stops flashing, the dishwasher can be reprogrammed and restarted.



## Child Lock-out

- ✓ To lock the controls and prevent unwanted operation, press and hold HEATED DRY for 3 seconds. To unlock, press and hold HEATED DRY for 3 seconds.

## Troubleshooting (See pages 18 to 20 in the Owner's Manual)

- ✓ If you find any damage to the dishwasher, contact the installer immediately.



**Monogram.**<sup>®</sup>

Pub. No. 49-5957  
Part No. 165D4700P282

JR 12/03

GE Consumer Products  
General Electric Company  
Louisville, KY 40225

© 2003 General Electric Company