



---

## 416 Preliminary Quick Guide

About, Software, Tools, Safety .....	3
Camera Left & Front .....	4
Camera Right & Back .....	5
<b>Quick Specs .....</b>	<b>6</b>
<b>Power On, Camera RUN, Inching, Camera Display .....</b>	<b>7</b>
<b>Loading the Magazine .....</b>	<b>8</b>
<b>Mounting the Magazine .....</b>	<b>10</b>
<b>Changing fps &amp; Shutter Angle .....</b>	<b>11</b>
<b>Beeper, Backlight &amp; RGB ARRIGLOW .....</b>	<b>12</b>
<b>On-board Battery OBB-2 .....</b>	<b>13</b>
<b>Integrated Video System .....</b>	<b>14</b>
<b>Accessories .....</b>	<b>16</b>
<b>Timecode Operation .....</b>	<b>18</b>
<b>ARRI Group Addresses .....</b>	<b>20</b>

---

This page is left blank intentionally.

# About, Software, Tools, Safety

---

## About the 416 Preliminary Quick Guide

This Quick Guide (order number K5.40076.0) provides a short introduction to the ARRIFLEX 416. This guide does not replace the ARRIFLEX 416 User's Guide (K5.40077.0). It is essential that you acquaint yourself with the user's guide before operating the equipment.

Even though all efforts have been made to ensure this guide's accuracy, changes and upgrades to the products described can result in different hardware or behavior. Technical data are subject to change without notice.

These documents can be downloaded from [www.arri.com](http://www.arri.com) in Acrobat pdf format. The Acrobat Reader can be downloaded free from the Adobe web site at [www.adobe.com](http://www.adobe.com). A PostScript printer gives best printing results.

## Software Version

This guide describes the ARRIFLEX 416 with preliminary Software Packet 01A. Different software versions can result in different behaviour. Authorized ARRI Service Centers can check and update equipment software.

## Tools



Anyone operating the ARRIFLEX 416 system should have these tools:

1. A **1.5 mm metric hex wrench** is used to adjust the alignment and focus of the Integrated Video System.
2. A **3 mm metric hex wrench** is used to attach and remove camera components and most accessories.
3. A **5 mm metric hex wrench** is used to attach or remove the 3/8" Accessory Shoe Adapter, the LWS-5 and the WHA-2 Rosette Bracket.
4. A 8-10mm (5/16") flathead **screwdriver** is used to attach baseplates.


## Safety Specifications

- Never place your hand in the lens port or inside of the camera while it is running.
- Assembly and initial operation should be carried out only by persons who are familiar with the equipment.
- Switch camera power off before making electrical connections.
- Never run the camera without a lens or a protective cap mounted in the lens port.
- Never attempt to remove the magazine while the camera is running.
- Always ensure that the camera is securely mounted.
- Repairs should be carried out only by authorized ARRI service centers.
- Use only original ARRI replacement parts and accessories!
- In wet weather conditions the normal safety precautions for handling electrical equipment should be taken.
- Clean optical surfaces only with a lens brush or a clean lens cloth. In case of solid dirt moisten a lens cloth with pure alcohol or a brand name lens cleaner.
- Do not use solvents to clean the film path, Plexiglas parts or rubber seals.
- Do not remove any screws which are secured with paint.

# Camera Left & Front

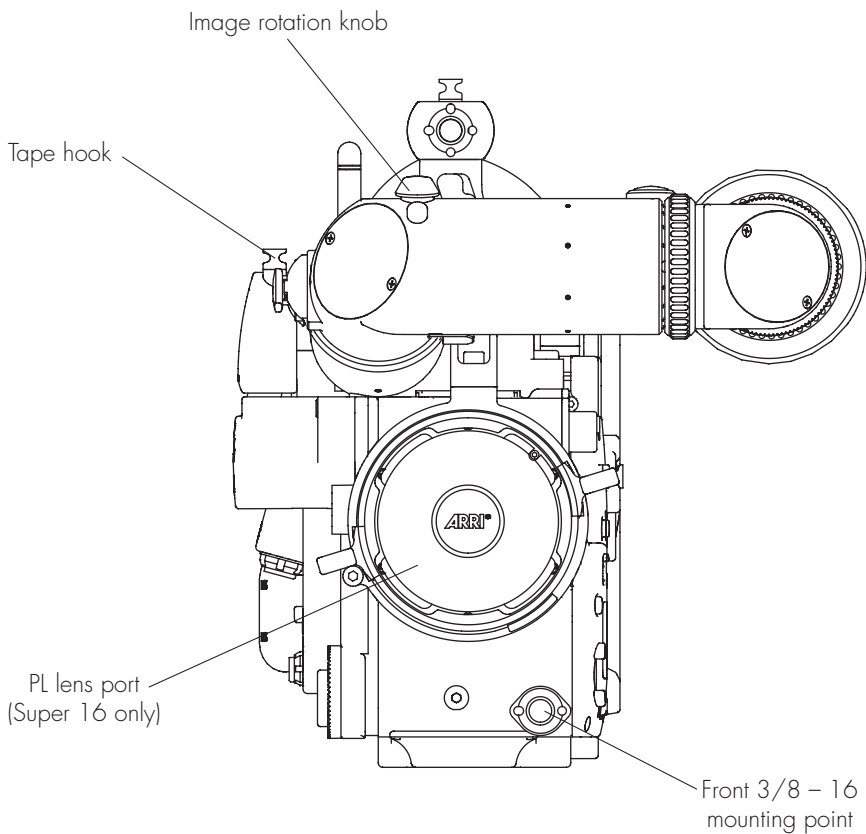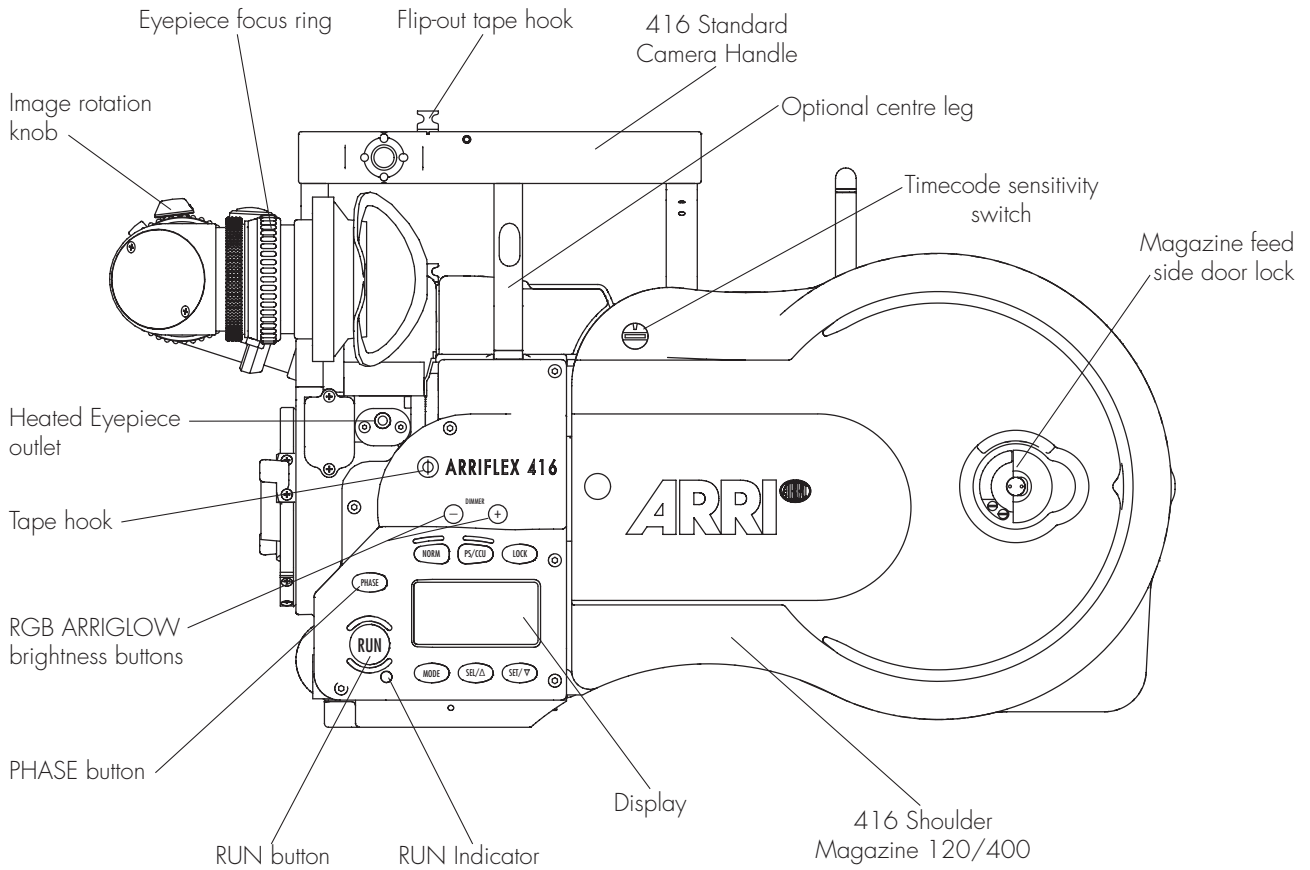

# Camera Right & Back

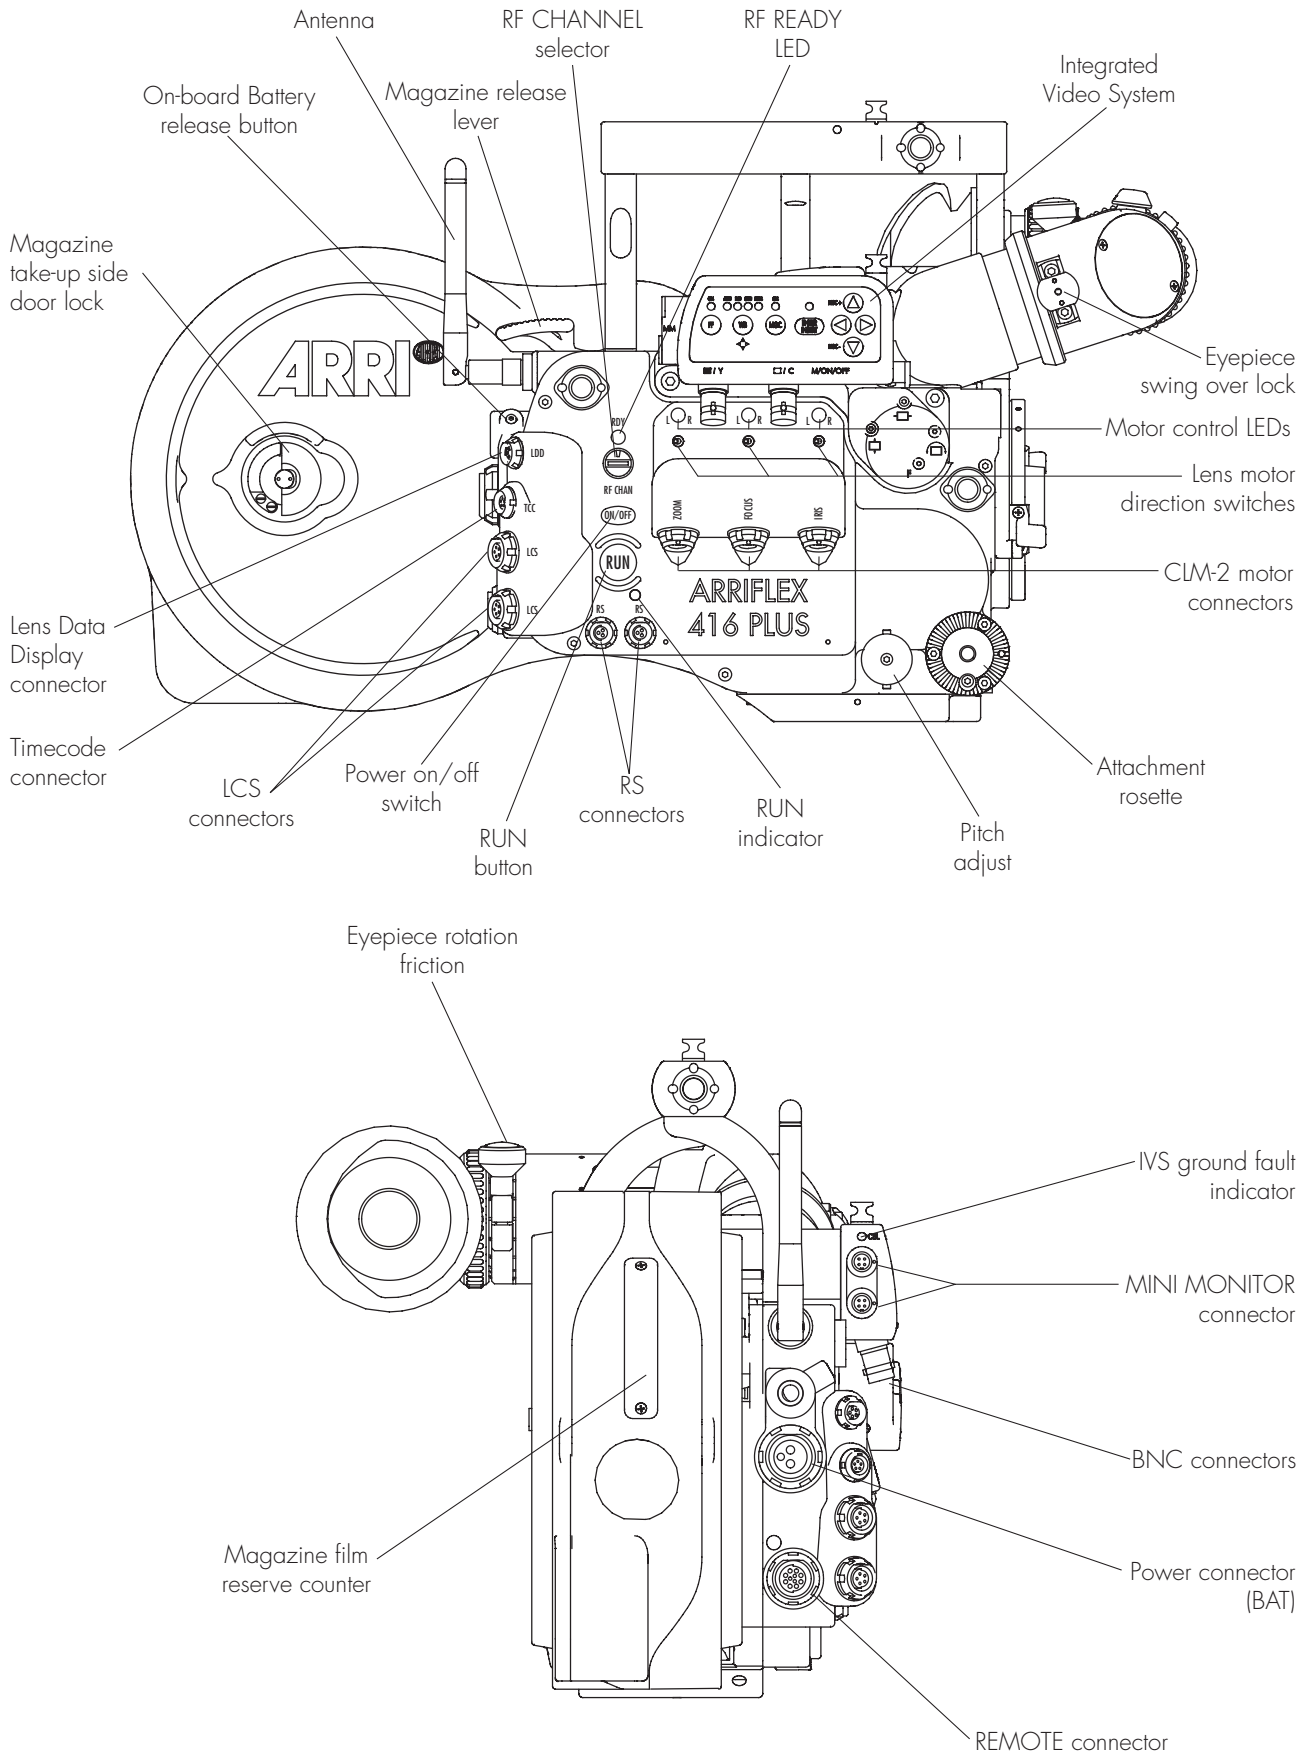

# Quick Specs

---


<b>Fps range:</b>	1 to 75 fps, forward only, in 0.001 fps increments	
<b>Mirror Shutter:</b>	180° to 45°, manually adjustable Fixed settings at: 180°, 172.8°, 150°, 144°, 135°, 90°, 45° Use the following angles for filming with non-electronic ballast HMI or fluorescent lighting: 180°: 25 fps, 50 Hz supply, 1/50th second exposure time 172.8°: 24 fps, 50 Hz supply, 1/50th second exposure time 150°: 25 fps, 60 Hz supply, 1/60th second exposure time 144°: 24 fps, 60 Hz supply, 1/60th second exposure time	
<b>Power:</b>	24 V DC, custom 105 Fischer connector, pin 1 is 0 V, pin 2 is positive, pin 3 is on-board battery condition monitor Acceptable range: 21 V to 35 V	
<b>Accessory Power:</b>	1 x 24 V RS connector on 416 2 x 24 V RS connectors on 416 Plus 1 x 24 V REMOTE connector RS & REMOTE connectors combined 2 A continuous, 4 A peak <b>Note:</b> RS & REMOTE connectors are not regulated so their output voltage tracks the camera supply voltage. 1 x 24 V Heated Eyecup connector 2 x 12 V MINI MONITOR connector on IVS MINI MONITOR connectors combined 2 A continuous	
<b>Movement:</b>	One pull-down film transport claw and one registration pin	
<b>Sound Level:</b>	Less than 20 dB (A) @ 24 fps	
<b>Lens Mount:</b>	54 mm PL mount, Super 16 only	
<b>Flange Focal Distance:</b>	52.00 – 51.99 mm	
<b>Temperature Range:</b>	-20°C to +50°C (+4°F to +122°F)	
<b>Electronic Accessories:</b>	LDD-FP	Lens Data Display for Focus Puller (Lens Data Archive only)
	UMC-3	Universal Motor Controller
	EXD-1	External Display (Accessory expansion cable needed)
	RCU-1	Remote Control Unit
	LCS	Lens Control System
	WRS	Wireless Remote System
	WRC-1	Wireless Remote Control
	ESU-1	External Synchronization Unit (Accessory expansion cable needed)
	ICU-1	Iris Control Unit (Accessory expansion cable needed)
	RS-4	Remote On/Off Switch
<b>Other Accessories:</b>	16SR 3 fibre screens, HE-3, 4 & 5 heated eyecups, FF-3 (with bridge plate), FF-4 & 5 (on lightweight support rods or bridge plate), 15 mm & 19 mm support rod matte boxes (with bridge plate), ARRI/Zeiss Ultra 16 lenses, ARRI/Zeiss Lightweight Zoom LWZ-1, ARRI/Zeiss Standard Speed lenses, ARRI/Zeiss Super Speed lenses, ARRI/Zeiss Ultra Prime lenses, ARRI/Zeiss Master Prime lenses, Cooke S-4 lenses, ARRI Macro lenses, Cooke & Angenieux zoom lenses, ARRI/Zeiss Variable Prime lenses.	
<b>Not compatible with:</b>	16SR magazines, 16SR on-board batteries, 435 Single Frame Hand Controller, CCU and ARRICAM electronic accessories.	

# Power On, Camera RUN, Inching, Camera Display

## Turning Camera Power On

The Power On button for the ARRIFLEX 416 is located above the RUN button on the camera right side. To turn the camera On, briefly press the Power On button. When a battery is connected to the camera and the power switch is turned on, you should see characters appear on the Display on the camera left side.

**Note:** The camera remembers the status of the Power On button and restores this status after a power interruption.

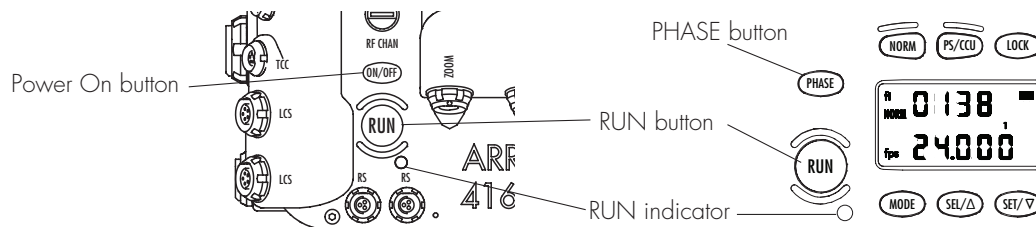

## Camera RUN

A RUN button is located on both sides of the camera. To run the camera, press the RUN button briefly. The RUN indicator light will glow red while the camera comes up to speed, changing to green once the set frame rate is reached. The RUN indicator light will glow steadily green while the camera runs at the set frame rate. To stop the camera, briefly press the RUN button again. If the RUN indicator glows red while the camera is in Standby, the camera is not ready and pressing the RUN button will have no effect.

## Inching

The ARRIFLEX 416 cannot be manually inched – it can only be inched by pressing the PHASE button while the camera is in Standby. If the PHASE button is pressed briefly, the mirror shutter will rotate 180° to allow for gate checks. To move the mirror shutter back into viewing position, press the PHASE button again briefly.

## Camera Display

The Camera Display indicates the status of, or value assigned to, the various camera parameters. There are seven modes which show the following information:

- |   |  |
|---|--|
| <p>1.  Total film exposed (or take counter)<br/>Standard speed.</p>   | <p>5.  Timecode User Bits<br/>Timecode User Bits</p>                         |
| <p>2.  Programmed speed.</p>  | <p>6.  Loudspeaker sequence &amp; volume<br/>Button backlight brightness</p> |
| <p>3.  Take counter (or total film exposed)<br/>Supply voltage &amp; (with OBB-2),<br/>battery capacity/magazines left.</p> | <p>7.  ARRIGLOW colour</p>   |
| <p>4.  Timecode hours &amp; minutes<br/>Timecode minutes &amp; framerate</p>  |  |

### Display Indicators:

asy:	Asynchronous operation (camera is not running at set fps)
bat:	Low battery (less than 20 volts)
end:	Camera has run out of film
fps flashes:	ESU is not receiving a valid signal
PROG:	Internal program is activated
TC glows:	Timecode exposure is enabled and timecode is set
TC flashes	Timecode exposure is enabled but not recording properly

### Viewfinder Indicators:

LED glows:	Asynchronous operation (camera is not running at set fps)
LED flashes	Low battery (less than 20 volts)

# Loading the 416 Magazine

**Note:** The 416 magazine has its feed and take-up chambers on opposite sides to the SR 1, 2 & 3 magazines.


## Step 1: The Feed Side

Load the unexposed film into the feed side in absolute darkness (darkroom or changing tent).

- Open the feed side magazine door and latch back the lay-on roller arm.
- Remove the film from the film can.
- Remove the tape from the film head. Ensure that the tape is completely removed and secured out of the way.
- Place the film roll on the core holder so it unwinds in the direction shown in the picture below. Press it down fully.

**Note:** When placing film on the feed side core holder, do not push on the film itself as it could become conical. Push on the film core instead.

- Hold the film roll still and turn the core holder until the core holder key clicks into the key slot of the film core. Make sure the core holder cannot turn any further.
- Release the lay-on roller arm gently so the roller rests on the outer surface of the film roll. The sides of the roller should overlap the film roll edges, as shown in the picture below.
- Push approximately 15 cm (6") of film into the slit at the top of the angled transfer roller. Then thread the film around the guide roller.
- Replace and lock the feed side magazine door, being careful not to trap any film in the process.

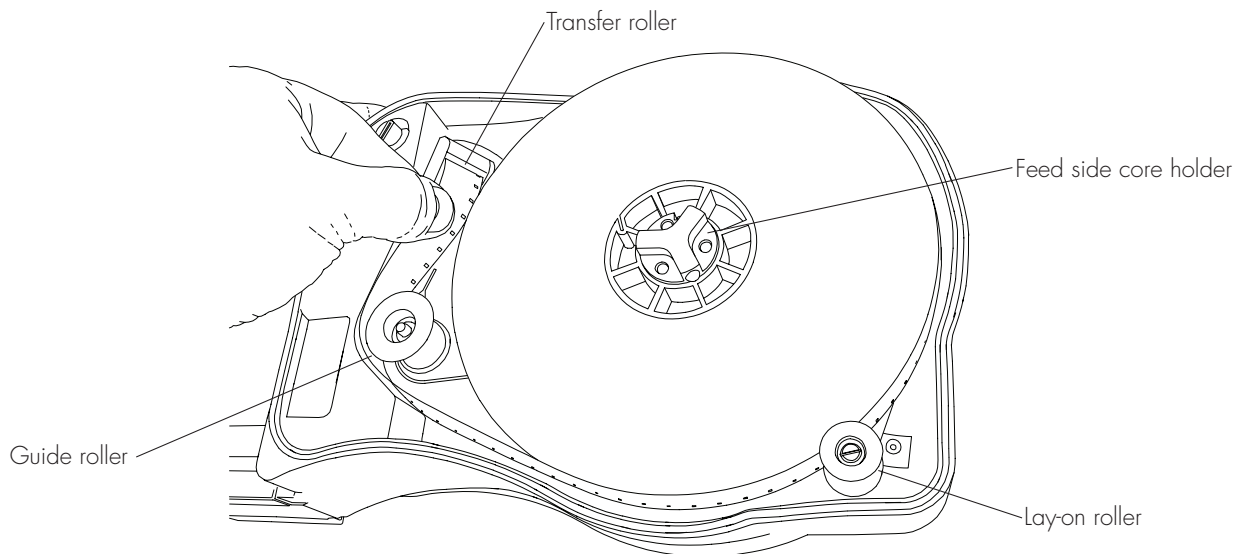


## Step 2: The Take-up Side

The following procedures may be carried out in the light.


- Flip the magazine over lengthways so the take-up door is uppermost and the top of the magazine is facing you. The 'ARRI' on the door will be upside down.
- Open the take-up side magazine door and latch back the footage counter roller arm. Fit an empty film core to the take-up core holder.
- The film head should be protruding from the transfer roller. Check that it is cut squarely through a perforation.
- Thread the film head around the forward guide roller as indicated inside the magazine. Without touching the film core, push the film head into the upper sprocket roller until its teeth engage in the film perforations.
- Once the sprocket teeth have engaged in the film perforations, turn the film core until the film head emerges from the magazine throat.




## Loading the 416 Magazine

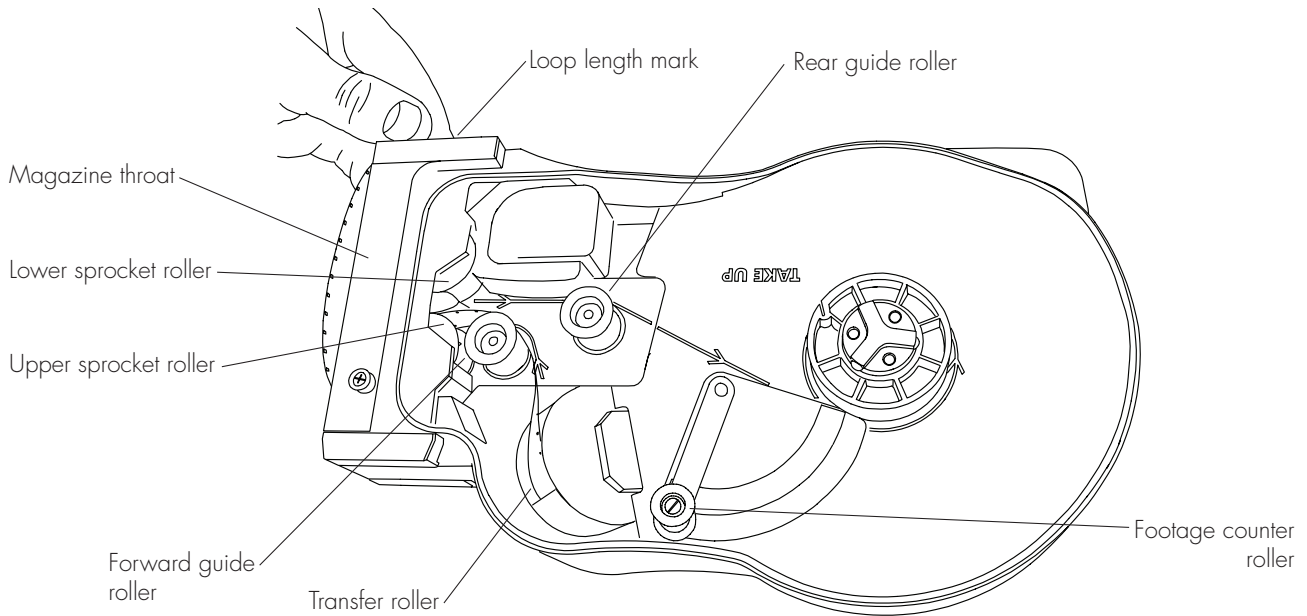

- Set the loop length by pulling the film head away from you and align it with the loop mark on the bottom of the magazine (see picture above). Adjust the loop length by turning the take-up film core.
- Now take your hand off the film core – there is enough inertia in the sprockets to maintain the loop length.
- Hold the film between thumb and middle finger of your left hand, while using your index finger to push the film head into the lower magazine throat slot. The angle at which the film enters is not as critical as it is on SR magazines.
- Keep pushing the film in with your index finger until you see the sprockets rotate. Now take hold of the film core again and rotate it counter-clockwise. This will pull the film from the throat into the take-up chamber.

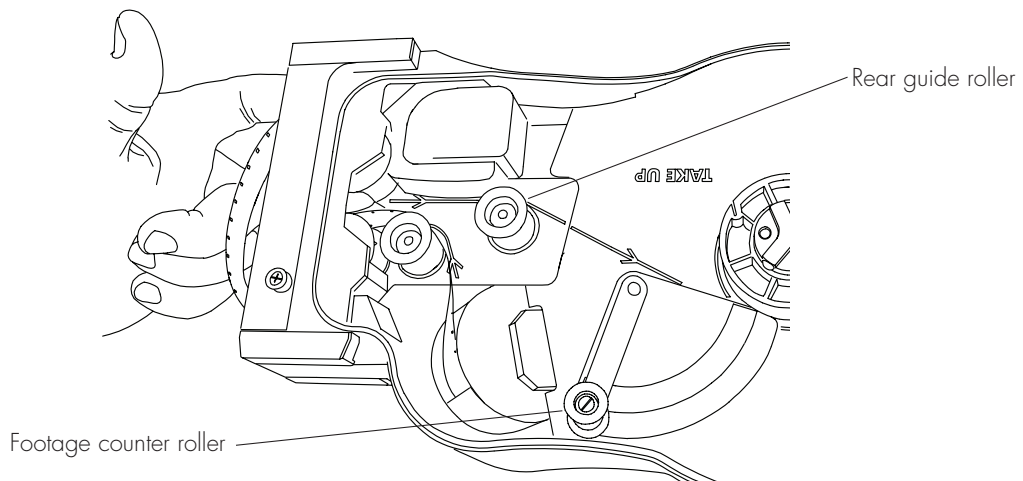

- Thread the film around the rear guide roller following the path indicated in the magazine.
- Insert the film head into the film core (see picture right) and manually wind the core holder two or three turns until the film winds tightly onto the core..
- Unlatch the footage counter roller arm.
- Close and lock the take-up side door.
- If using timecode, set the sensitivity switch according to the table on page 19 of this guide. The switch is located at the top left corner of the feed side door.

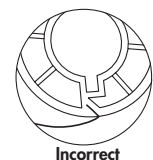


# Mounting the Magazine


## Mounting the Magazine

- Insert the magazine throat into the magazine aperture in the back of the camera body and slide the magazine forward until it locks in place.

**Note:** If the Shoulder Pad is attached to the camera, you will need to push down on the Shoulder Pad with your hand or the magazine before inserting the magazine.

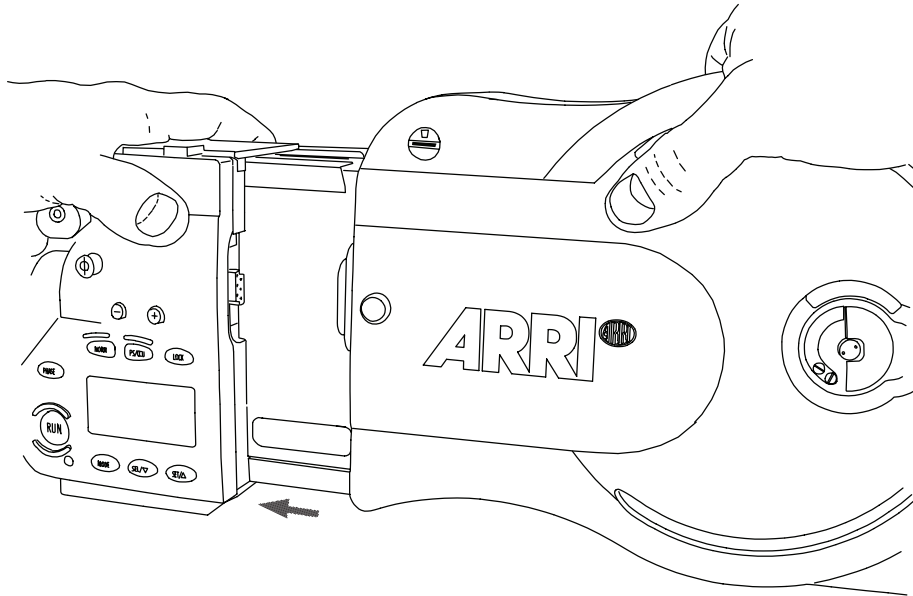

- Flip the silver Safety Catch on the Magazine Release Lever forward to prevent accidental release of the magazine.

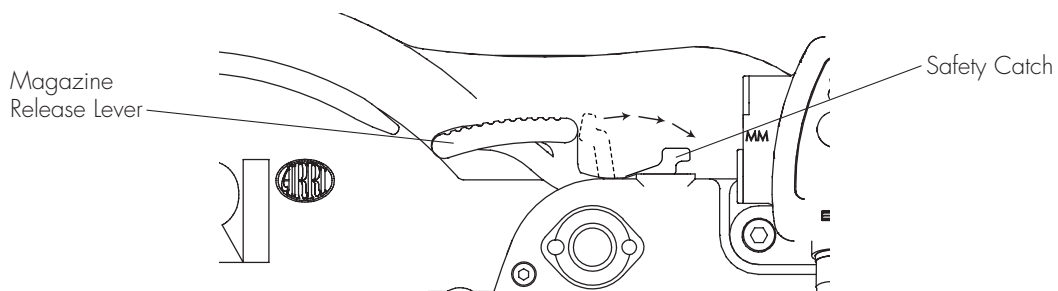

- Inch the camera by briefly pressing the PHASE button.

**Note:** When a magazine is first mounted and PHASE or RUN is pressed, the display shows 'loop', while the camera performs a short routine that centralizes the film loop.


# Changing Fps & Shutter Angle

The NORM and PS/CCU buttons above the display select between preset Standard Speeds and user adjustable Programmable Speeds. Standard Speeds of 23.976, 24, 25, 29.97 & 30 fps are possible, while the Programmable Speed can be set anywhere from 1.000 - 75.000 fps.

**Note:** If LOCK shows in the display, the camera settings are locked. To unlock, briefly press the LOCK button.

## Setting a Standard Speed (NORM)


- Make sure the display is in mode 1 (black bar visible). If not, repeatedly press MODE until it is. If PS/CCU shows in the display, press NORM.
- Pressing SEL cycles through the Standard Speeds. Each speed will flash for approximately 3 seconds.
- While the desired speed is flashing, press SET to set the speed.

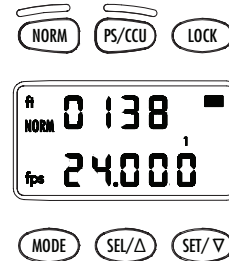

Display in mode 1.  
Speed set at 24.000 fps

## Setting a Programmable Speed (PS/CCU)


- Press PS/CCU to switch from NORM to PS/CCU.
- Press MODE once to switch the display from mode 1 to mode 2.
- Pressing SEL selects one digit after another. The selected digit will flash.
- Press SET to increment the value of the flashing digit by 1.
- Repeat the last 2 steps for all the digits that need to be changed. Final confirmation of the set speed is not necessary.

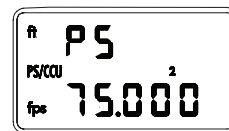

Display in mode 2.  
Speed set at 75.000 fps

## Checking the Mirror Shutter Angle

- With the camera in Standby, press and hold PHASE. The camera will inch at approximately 1 fps.
- After 2 seconds the top line of the display shows the open angle of the mirror shutter, while the bottom line will show the supply voltage

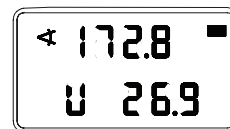


Display with PHASE button pressed. Open mirror shutter angle 172.8° and supply of voltage 26.9.

## Changing the Mirror Shutter Angle

**Note:** Before adjusting the mirror shutter, check that it is in the viewing position then turn off the camera and remove the battery or power cable! Accidentally running the camera during adjustment would cause catastrophic damage!


- Remove the lens or lens port cavity cap and hold the mirror shutter still by lightly pressing your finger on its black centre area. Do NOT touch the reflective surface.
- Insert the 416 Shutter Tool into the adjustment hole below the mirror centre.
- Turn the 416 Shutter Tool until the desired Mirror Shutter preset angle is reached. Angle presets are: 180°, 172.8°, 150°, 144°, 135°, 90° & 45°. Turning counter-clockwise reduces the angle.

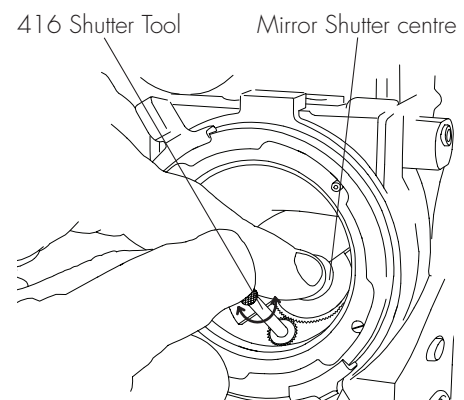

# Beeper, Backlight & RGB ARRIGLOW

## Beeper

The 416 is equipped with a beeper which can sound when the camera is started or stopped. The upper line of display mode 6 allows the user to decide whether and when the beeper sounds and how loud (LS is shown for 'loudspeaker'). The left-hand bar shows the status of the start beep. The right-hand bar shows the status of the stop beep. In each case, with the bar in the high position the beep will sound, in the low position it will not. The final digit is the volume, which is adjustable between 0 (off) and 3.

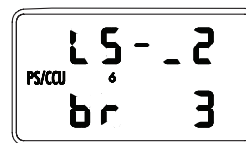

## Backlight


The lower line of display mode 6 controls the brightness of the control buttons backlight. This can be set between 0 (off) and 3.

## Changing the Beeper and Backlight settings

- Use the SEL button to select the digit you wish to change, which will flash.
- Use the SET button to change the value of the flashing digit.

## RGB ARRIGLOW

The ARRIGLOW on the 416 gives the user a choice of frame glow colours. Colours 1 – 8 are preset colours followed by U, which is user adjustable by setting individual Red, Green and Blue values. The ARRIGLOW brightness is adjusted with the + and – buttons above the camera display.

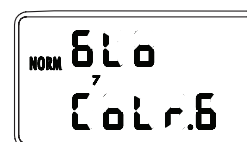

## Changing the RGB ARRIGLOW colours

- Push the "+" DIMMER button on the camera left side so you can see the ARRIGLOW in the viewfinder.
- Set the display to mode 7.
- Pushing the SEL button will make the ARRIGLOW number flash. Pushing the SET button will now cycle through preset colours 1 – 8 and then user adjustable colour "U". Stop at the colour you like – no confirmation is necessary.
- To change the user adjustable colour, push SEL again while U is flashing. The SEL button will now cycle through the red (r), green (G) and blue (b) values of the user colour. Pushing the SET button changes the flashing colour value from 0 (no colour) up to 16 (maximum colour).

# On-board Battery

## On-Board Battery OBB-2

The OBB-2 On-Board Battery attaches directly to the camera body by means of a quick change mechanism that can be easily operated with one hand. The OBB-2 incorporates a built-in power meter to indicate the state of charge, while an extra contact in the power connector communicates this information to the camera. When an OBB-2 is connected, display mode 3 can additionally show battery capacity or magazines left.


**Note:** The new 416 power connector on the camera remains compatible with standard ARRI 24 volt power cables.

## Mounting the OBB-2


- Fit the power plug of the OBB-2 into the camera power connector and slide the battery forward.

## Removing the OBB-2

- Hold the OBB-2 as shown in the picture below and press the on-board battery release button.
- Pull the battery backwards until the power connectors disengage.

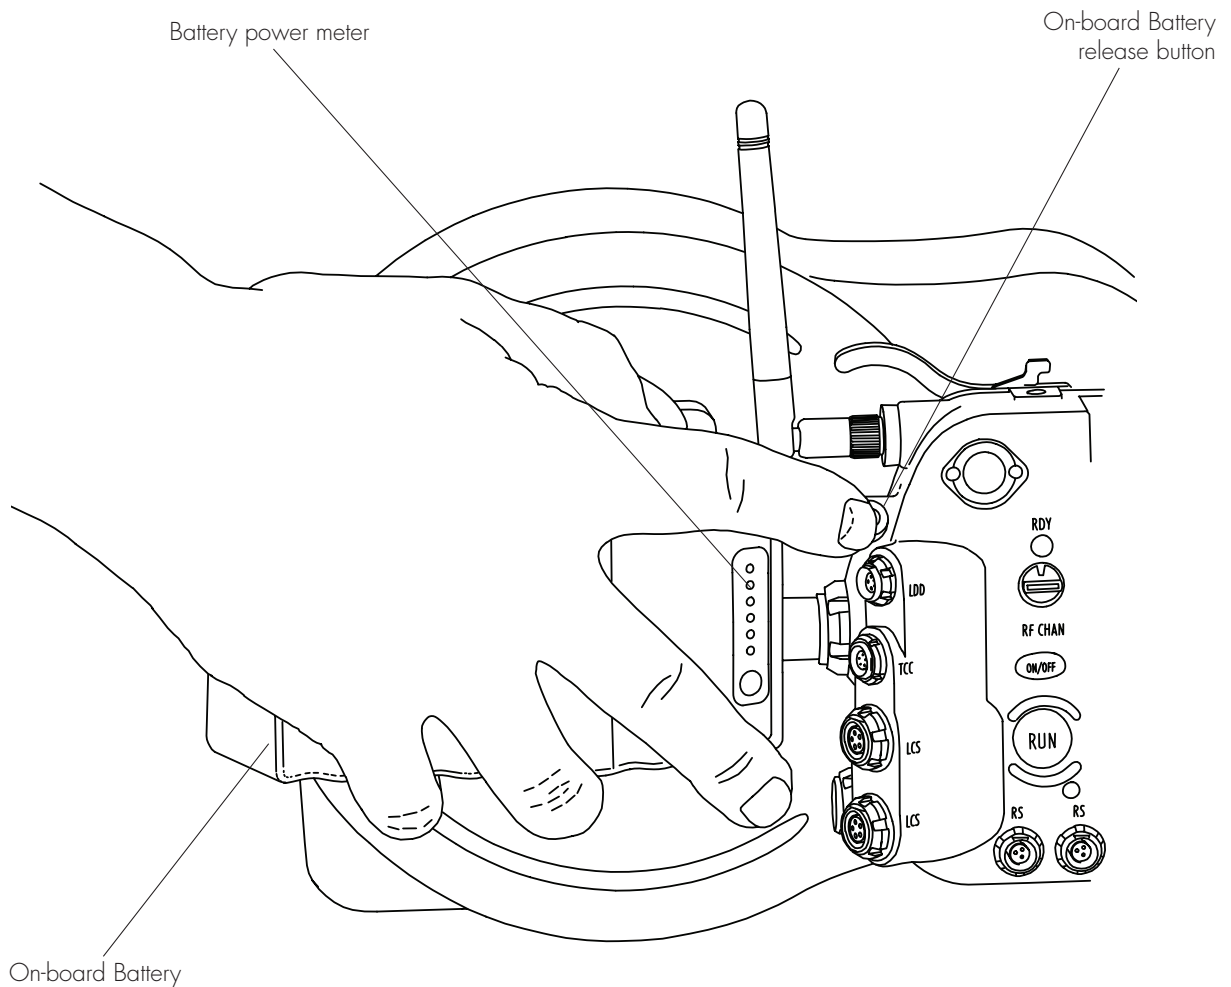

# Integrated Video System

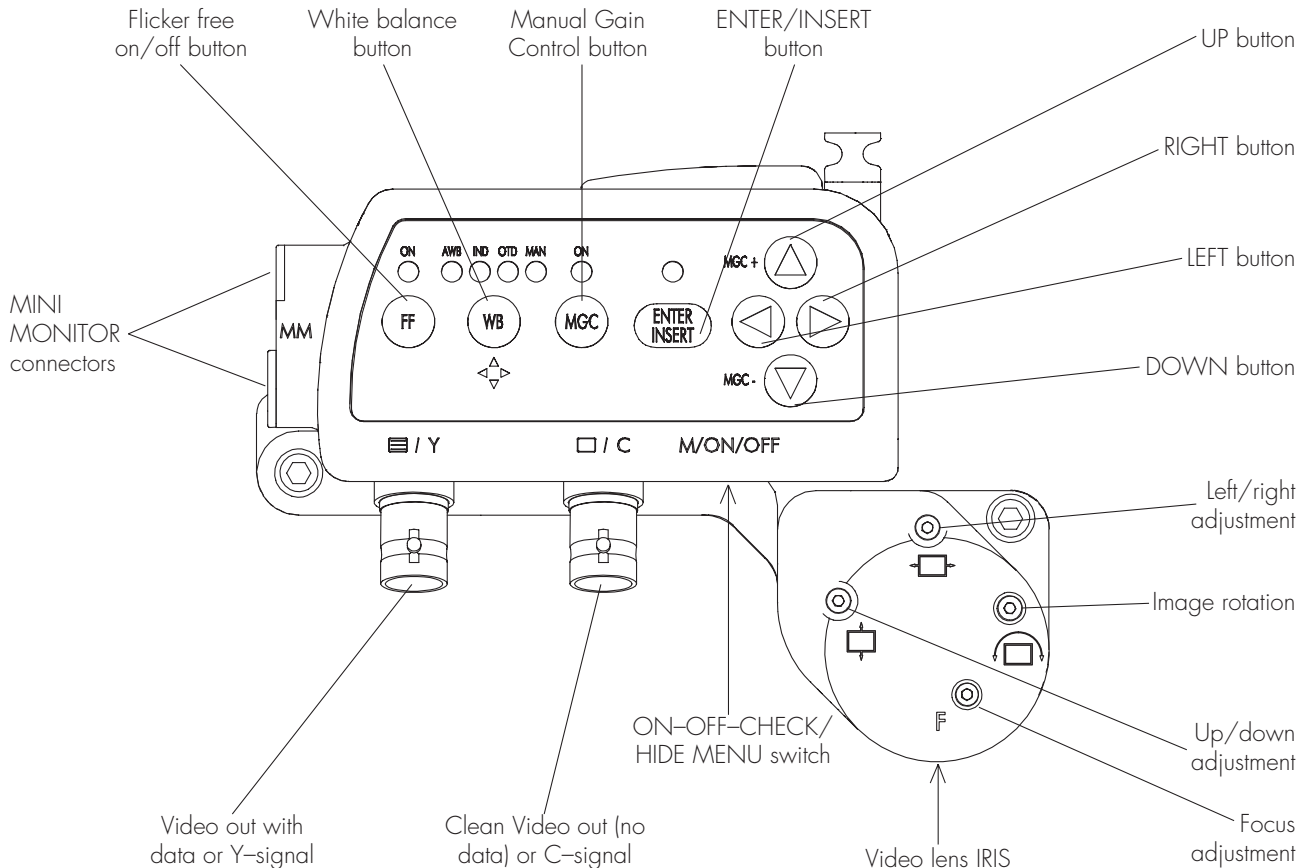

## ON-OFF-CHECK/HIDE MENU switch

Make sure that the camera power is ON. Move the ON-OFF-CHECK/HIDE MENU switch to ON (centre position).

To display a summary of all menu choices while the on-screen menu is not visible, press the ON-OFF-CHECK/HIDE MENU switch all the way to the left (it will spring back to the centre position).

To temporarily hide the on-screen menu while it is visible, press the ON-OFF-CHECK/HIDE MENU switch all the way to the left. This is useful to check the image while making adjustments in the on-screen menu.

## White balance

Press the WB button to cycle through the five white balance settings. Four of these, AUTO, INDOOR, OUTDOOR & MANUAL, have dedicated LEDs. The fifth setting, ONE PUSH WHITE, is available when the ENTER/INSERT LED flashes.

AUTO	automatic white balance.
INDOOR 3200 K	when the illumination is tungsten and no colour correction filter is used.
OUTDOOR 5600 K	when the illumination is daylight or HMI and no colour correction filter is used.
MANUAL	manual white balance as controlled by the UP (increase blue), DOWN (decrease blue), RIGHT (increase red) & LEFT (decrease red) buttons.
ONE PUSH WHITE	user adjustable – hold a white card in front of the lens and press ENTER/INSERT.

## Controlling image brightness

Open the video lens IRIS fully and use either Automatic Gain Control or Manual Gain Control to control the image brightness. Only use the video lens IRIS if the brightness exceeds the electronic control range.

# Integrated Video System

---

## Automatic Gain Control

- Press the MGC button to toggle between Manual Gain Control (LED on) and Automatic Gain Control (LED off).
- When MGC is off, Automatic Gain Control will adjust the image brightness.

## Manual Gain Control

- Press the MGC button to toggle between Manual Gain Control (LED on) and Automatic Gain Control (LED off).
- When MGC is on, adjust the image gain with the UP (increase gain) & DOWN (decrease gain) buttons.

## The on-screen menu

The on-screen menu allows the adjustment or selection of the following features: Load & store settings, White Balance, Gain, Colour Bars, video settings, Format Markings, Image Compare/Store, Text Inserter (camera status, system status, user text, timecode & more) & VITC/WHITELINE.

- To display the main menu, press and hold the ENTER/INSERT button for 3 seconds.
- To select a sub-menu, use the UP & DOWN buttons. The arrow indicates which sub-menu is selected.
- To enter the selected sub-menu, press the RIGHT button.
- To go back to the main menu chose EXIT, which can be found at the bottom of each screen.
- To leave all menus, press and hold the ENTER/INSERT button for 3 seconds.

## BNC mode

- Enter the VIDEO/TEXT ADJ sub-menu to chose between VBS (composite) and Y/C video signals to be output by the video out (BNC) connectors under the BNC OUT option.

VBS	Left BNC:	composite video with on-screen data.
	Right BNC:	composite video without on-screen data.
Y/C	Left BNC:	Y (luminance) portion of the video signal.
	Right BNC:	C (chrominance) portion of the video signal.

## How to get on-screen data in Y/C mode

- With Y/C selected in the VIDEO/TEXT ADJ sub-menu, the option of Y/C DATA, can now be toggled between ON or OFF. If ON is selected then the Y/C signal will have on-screen data.

## How to get black & white video

- Set the BNC mode to Y/C.
- Connect the video cable to the left video out (BNC) connector only.

## How to adjust electronic sharpness

The 416 IVS has an electronic sharpness control which can be adjusted to optimize the look of the video output.

- Press and hold the ENTER/INSERT button for 3 seconds to enter the on-screen menu.
- In the VIDEO/TEXT ADJ sub-menu, adjust the value assigned to SHARPNESS for the best looking picture.
- To leave the on-screen menu, press and hold the ENTER/INSERT button for 3 seconds.

## How to generate colour bars

To assist in setting up attached video monitors, the 416 IVS has the option to generate colour bars.

- Press and hold the ENTER/INSERT button for 3 seconds to enter the on-screen menu.
- In the WB/GAIN/BARS sub-menu, set COLOR BARS to ON.

## **Accessories**

---



## Accessories

---


# Timecode Operation

**Note:** To write SMPTE timecode to film, ARRIFLEX 416 magazines must have the 416 Timecode Module fitted.

**Note:** Timecode recording is only possible at the 5 Standard Speeds of 23.976, 24, 25, 29.97 & 30 fps.

## Turning Timecode Recording On and Off.

- Press the MODE key until the display shows mode 4.
- Press and hold SET until the TC symbol appears (or disappears) on the display.
- Alternatively, Timecode recording is automatically turned on when the camera receives a valid Timecode signal (see Timecode Input).

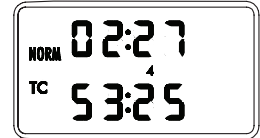

Display in mode 4. TC is on. Framerate is 25 fps


## Timecode Input (Jam Syncing)

- Connect the LTC signal from a Timecode generator (or motherclock) to the Timecode connector on the camera's right side.
- The last 2 digits on the display will show 'EC' (external code). When the Timecode is correctly transferred they will change to 'CC' (correct code).
- After approximately 10 seconds the last 2 digits will change to the Timecode recording framerate.

**Note:** If the motherclock is left connected for 10 minutes, the camera's Timecode clock will synchronize itself to the exact frequency of the motherclock leading to better accuracy and extended periods between jam syncing.

## Userbit Input

- Userbits are automatically input with the Timecode, but they can also be set by means of the camera display in mode 5.
- Use the SEL button to select the digit you wish to change, which will flash.
- The SET button changes the value of the flashing digit.
- Repeat the last two steps for all the digits that need to be changed.

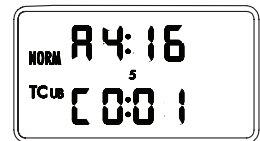


Display in mode 5. Showing Userbits

**Note:** Userbit values are hexadecimal so only values from 0 – 9 and A – F are available.

## Magazine Timecode Sensitivity Switch

To ensure proper timecode exposure on film, the intensity of the exposure LED in the 416 Timecode Module is adjustable. Magazines have a Timecode Sensitivity Switch in the top left corner of the feed side door for this purpose. Different film stocks require the TCS Switch to be set to different TCS numbers. The table on the next page shows the settings required by current film stocks (as of November 2005).

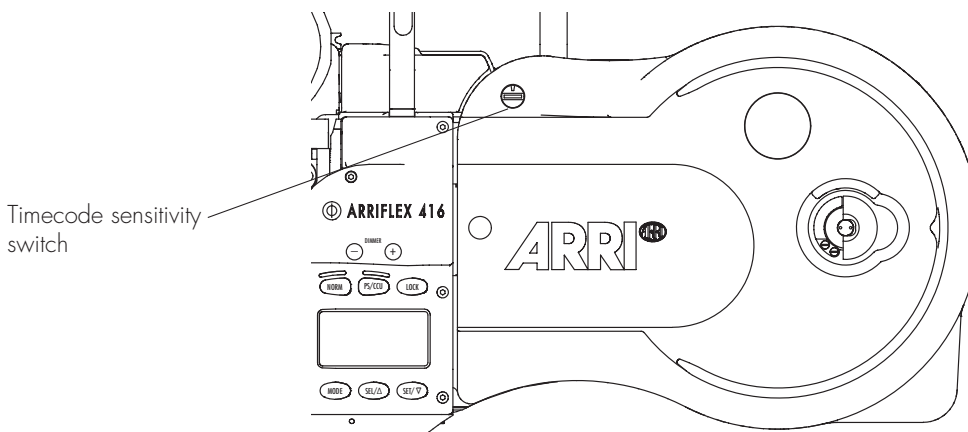

## Timecode Sensitivity Table

---

### 16 mm Kodak Film Stocks

Kodak	7201	(Color Negative)	TCS 7
Kodak	7205	(Color Negative)	TCS 6
Kodak	7212	(Color Negative)	TCS 6
Kodak	7217	(Color Negative)	TCS 6
Kodak	7218	(Color Negative)	TCS 5
Kodak	7222	(B/W Negative)	TCS 8
Kodak	7229	(Color Negative)	TCS 5
Kodak	7231	(B/W Negative)	TCS 9
Kodak	7236	(Color Negative)	TCS 6
Kodak	7239	(Color Reversal)	TCS 5
Kodak	7240	(Color Reversal)	TCS 6
Kodak	7245	(Color Negative)	TCS 6
Kodak	7246	(Color Negative)	TCS 6
Kodak	7248	(Color Negative)	TCS 6
Kodak	7250	(Color Reversal)	TCS 5
Kodak	7251	(Color Reversal)	TCS 4
Kodak	7274	(Color Negative)	TCS 6
Kodak	7276	(B/W Reversal)	**
Kodak	7277	(Color Negative)	TCS 5
Kodak	7278	(B/W Reversal)	**
Kodak	7279	(Color Negative)	TCS 4
Kodak	7284	(Color Negative)	TCS 5
Kodak	7287	(Color Negative)	TCS 6
Kodak	7289	(Color Negative)	TCS 5
Kodak	7293	(Color Negative)	TCS 5
Kodak	7296	(Color Negative)	TCS 5
Kodak	7297	(Color Negative)	TCS 6
Kodak	7298	(Color Negative)	TCS 5
Kodak	7620	(Color Negative)	TCS 6

### 16 mm Fuji Film Stocks

Fuji	8428	(Color Reversal)	TCS 6
Fuji	8622	(Color Negative)	TCS 6
Fuji	8632	(Color Negative)	TCS 6
Fuji	8652	(Color Negative)	TCS 5
Fuji	8653	(Color Negative)	TCS 6
Fuji	8653	(Color Negative)	TCS 6
Fuji	8662	(Color Negative)	TCS 4
Fuji	8663	(Color Negative)	TCS 5
Fuji	8672	(Color Negative)	TCS 4
Fuji	8673	(Color Negative)	TCS 5
Fuji	8682	(Color Negative)	TCS 6
Fuji	8683	(Color Negative)	TCS 6
Fuji	8692	(Color Negative)	TCS 4

\*\* - Timecode exposure not possible.

# ARRI Group Addresses

---

- Australia**      **ARRI Australia PTY Limited (Sales, Service & Rental)**  
Unit 6C, 5 Talavera Road, Macquarie Park, Sydney. NSW 2113, Australia  
Voice phone: +61 (2) 9855 4300, FAX: +61 (2) 9855 4301  
Email: info@arri.com.au
- Canada**      **ARRI Canada Limited (Sales & Service)**  
415 Horner Ave. Unit 11, Toronto, Ontario M8W 4W3, Canada  
Voice phone: +1 (416) 255 3335, FAX: +1 (416) 255 3399  
Email: email@arrican.com
- Germany**      **Arnold & Richter Cine Technik (Sales & Service)**  
Türkenstraße 89, D-80799 Munich, Germany  
Voice phone: +49 (0)89 3809-0, FAX: +49 (0)89 3809-1245  
Email: webmaster@arri.de
- ARRI Camera Rental (Film Equipment Rental)**  
Türkenstraße 89, D-80799 Munich, Germany  
Voice phone: +49 (0)89 3809-1240, FAX: +49 (0)89 3809-1798  
Email: mjahn@arri.de
- Great Britain**      **ARRI GB Limited (Sales & Service)**  
2 Highbridge, Oxford Road, Uxbridge, Middlesex, UB8 1LX, England  
Voice phone: +44 (0)1895 457 000, FAX: +44 (0)1895 457 001  
Email: sales@arri-gb.com
- ARRI MEDIA (Film Equipment Rental)**  
3 Highbridge, Oxford Road, Uxbridge, Middlesex, UB8 1LX, England  
Voice phone: +44 (0)1895 457 100, FAX: +44 (0)1895 457 101  
Email: info@arrimedia.com
- ARRI Lighting Rental (Lighting Rental)**  
4 Highbridge, Oxford Road, Uxbridge, Middlesex, UB8 1LX, England  
Voice phone: +44 (0)1895 457 200, FAX: +44 (0)1895 457 201  
Email: tmoran@arrirental.com
- Italy**      **ARRI Italia S.r.l. (Head Office, Milan)**  
Viale Edison 318, 20099 Sesto San Giovanni (Milan), Italy  
Voice phone: +39 (02) 262 271 75, FAX: +39 (02) 242 1692  
Email: info@arri.it
- ARRI Italia S.r.l. (Sales & Service, Rome)**  
Via Placanicca 95, 00040 Morena (Rome), Italy  
Voice phone: +39 (06) 726 707 97, FAX: +39 (06) 723 1541  
E-mail: catalano@arri.it
- USA**      **ARRI Inc. (Sales & Service, East Coast)**  
617 Route 303, Blauvelt, NY 10913-1123, USA  
Voice phone: +1 914 353 1400, FAX: +1 914 425 1250  
Email: arriflex@arri.com
- ARRI Inc. (Sales & Service, West Coast)**  
600 North Victory Blvd., Burbank, CA 91502-1639, USA  
Voice phone: +1 818 841 7070, FAX: +1 818 848 4028  
Email: brussell@arri.com
- ARRI CSC (Film Equipment Rental, NY)**  
619 West 54th St, New York, NY 10019, USA  
Voice phone: +1 212 757 0906, FAX: +1 212 713 0075  
Email: ctamarro@cameraservice.com
- ARRI CSC (Film Equipment Rental, Florida)**  
2385 Stirling Road, Fort Lauderdale, FL 33312, USA  
Voice phone: +1 954 322 4545, FAX: +1 954 322 4188  
Email: estamm@cameraservice.com
- Website:**      **www.arri.com**