

Emerson Radio Corp. has produced this product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



WARNING

Choking Hazard—Small Parts and Packaging Materials. Not for children under 8 years.


- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

3

OPERATION (CONTINUED)

TO DISCONNECT THE FLASH MEMORY DRIVE:

(A) Windows 2000/XP/VISTA:

Double click on this icon  located at the lower right corner of your screen; the "Safely Remove Hardware" window will pop-up. Select the name of the flash drive from the window and click the STOP button. Another window titled "Stop a Hardware Device" will pop-up. Confirm the flash drive name to be removed and click the OK button. A confirmation message will appear on screen letting you know it is safe to remove the flash drive. You can now remove the device from the USB port.

NOTES:

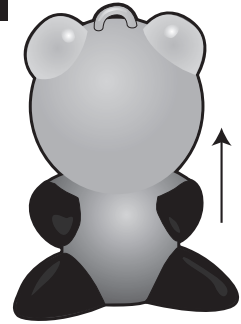
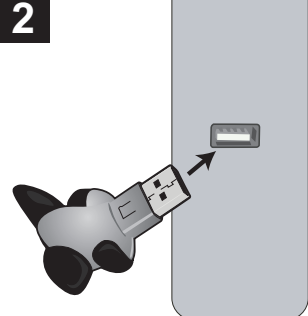
- Before unplugging the device from the USB port, please make sure the message box "Safe to Remove Hardware" has popped up. You may lose the saved data if you remove the device prior to seeing this message.
- Never partition your device when using the Windows 2000 operating system.
- Removing the flash drive when the LED is ON or flashing may result in data loss. Please follow the instructions above for proper removal.

(B) Mac OS 9.x or above:

Drag the flash drive icon into the Trash Can, and confirm to remove. The flash drive icon will disappear from the desktop and you can now remove the device from the USB port. Do not remove the flash drive until the flash drive icon disappears.

5

OPERATION

1 	2 
<p>Remove the USB protective cap from the flash drive to expose the USB plug.</p>	<p>Insert the USB plug into the USB of your Personal Computer. The stomach area will light up. When the USB is reading or writing the stomach area will flash.</p>

NOTES:

- The flash drive works in any USB 2.0 port and is backwards compatible with USB 1.1 ports.
- Driver installation will not be necessary if you are using Windows 2000 or above. The flash drive will automatically be detected by the system.
- The flash drive also works with Mac OS 9.X and above without installing drivers, but if your Mac does not have a USB 2.0 port it will revert to USB 1.1 operation.

4

EMERSON RADIO CORP. LIMITED WARRANTY (Valid in the United States)

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.
5101 Statesman Drive
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

Model Number: **FK609**
Serial Number: _____

6



FK609-050708-01

Printed in China

2

FCC INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

PRECAUTIONS:

- Avoid direct touching or placing any objects in the USB connector, as static electricity may damage the internal components.
- Avoid direct exposure to heat and humidity, as the functionality of this product will be adversely affected by these extreme conditions.
- Please keep away from infants and very young children as they might swallow the unit or bite the jeweled decoration.
- Avoid dropping the product to prevent accidental damage to the unit.
- Do not disassemble the product, which will void the warranty.
- Please cover the USB connector while not in use.
- Always insert the product with the right side up.
- Do not force the drive into the USB jack if you experience any resistance. This will cause severe damage to the product.
- Do not use or leave it in the following locations: direct sunlight, car under the scorching sun, high humidity area, and erosive gas/liquid area.



1GB USB FLASH DRIVE



OWNER'S MANUAL

FK609

RADICA: and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2008 Mattel, Inc. All Rights Reserved.

1

PRODUCT FEATURES:

- Fully compatible with USB 1.1/2.0 which provides additional bandwidth for multimedia and storage applications.
- Offers Plug-and-Play capability and full backward compatibility for legacy USB devices.
- Mass Storage Device class compatible. No driver needed in Windows 2000, XP, VISTA, Mac OS 9.1 or above.
- USB Powered - no separate power supply or battery required.

Redeem the above Code in the Options menu inside U.B. Funkeys™.

For more information visit www.ubfunkeys.com

Bogletthemind256 Code

Here's how.

Are you ready to unlock the FUN?