

8mm VIDEO CAMCORDER

E


Instruction Manual

Introduction

Basic Operation

Advanced Functions

Additional Information

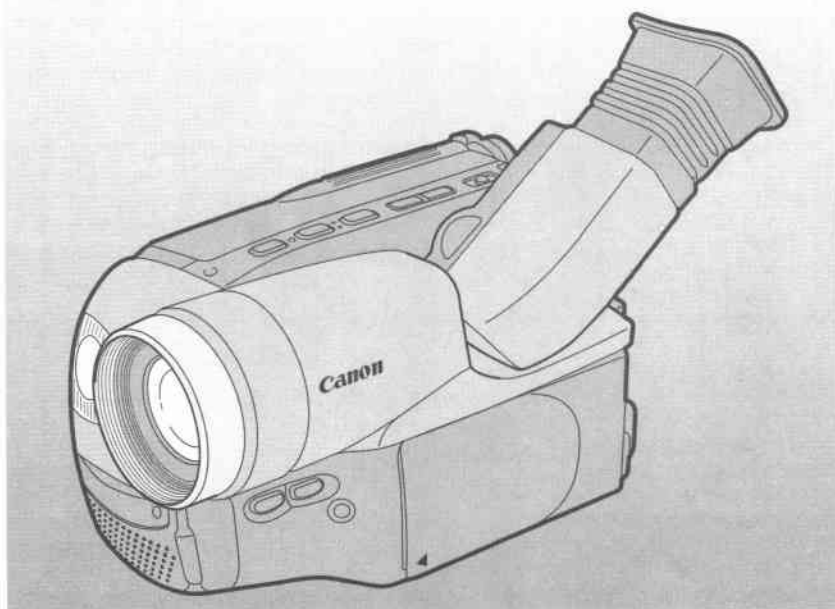

Canon

UC8000/UC8500/UC9500

8

UC-X65^{Hi}

Hi 8

PAL

This manual explains how to use the UC8000, UC8500, UC9500 and UC-X65Hi camcorders. In certain areas, some of these four models may not be available.

Thank you for Choosing a Canon

E

First, we'd like to thank you for buying this Canon camcorder. Its advanced technology makes it very easy to use — you will soon be making high-quality home videos which will give you pleasure for years to come.

Introduction

To get the most out of your new camcorder, you should read this manual thoroughly — there are many sophisticated features which will add to your recording enjoyment.

To get started, you will need to read these sections:

“Basic Recording”

“Power Sources”









 


“Cassettes”

“Preparing the Camera”


Then you can go on to find out about the more advanced features.

As well as using the alphabetical index, you can look up the different parts and functions in the sections called “Nomenclature” and “Viewfinder Displays.” There's also a “Troubleshooting” section in case you run into any problems.


Check that this package contains the accessories as shown to the right:

WL-69 Wireless Controller 	Two R6 AA batteries 
BP-818 Battery Pack 	CA-R330 Compact Power Adapter 
DC-100 DC Coupler 	Lithium button battery (CR2025) 
SS-500 Shoulder Strap 	C-250 AV Cable (UC8000/UC8500/UC9500) 
S-150 S-Video Cable (UC-X65Hi) 	STV-250 Stereo Video Cable (UC-X65Hi) 
PC-A10 SCART Adapter (Europe and Asia) 	

And while you are finding out how your camcorder works, remember:

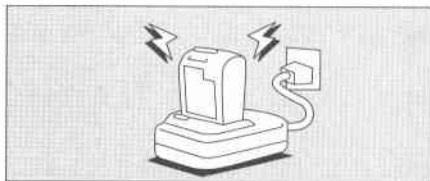

The battery pack must be charged before it can power the camcorder.

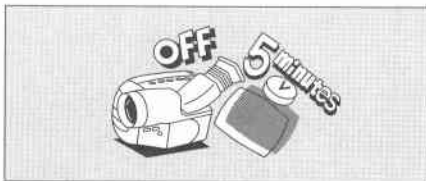

If you leave the camera in record pause mode for more than about five minutes, it will turn itself off to prevent the video heads being damaged.

Important Usage Instructions

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

CUSTOMERS IN THE U.K. SHOULD READ THIS BEFORE USING THIS PRODUCT.

CHANGING THE FUSE

THE MAINS LEAD ON THIS PRODUCT IS FITTED WITH A NON-REWIREABLE (MOULDED) PLUG, INCORPORATING A 3 AMP FUSE. SHOULD THE FUSE NEED TO BE REPLACED AN ASTA OR BSI APPROVED BS1632 FUSE OF THE SAME RATING MUST BE USED.

ALWAYS REFIT THE FUSE COVER AFTER REPLACING THE FUSE. NEVER USE THE PLUG WITH THE FUSE COVER OMITTED.

 
CHANGING THE PLUG

IF THE FITTED PLUG IS NOT SUITABLE FOR YOUR SOCKET OUTLETS, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED IN ITS PLACE. IF POSSIBLE FIT AN APPROPRIATE 3 AMP FUSE. IF THE NEW PLUG HAS NO FUSE, THEN FIT A 5 AMP FUSE AT THE DISTRIBUTION BOARD.

AC POWER CORD CONNECTION (CA-R330B only)

The wires in the mains lead of this apparatus are coloured in accordance with the following cord.

(IMPORTANT)



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. Neither Blue wire or Brown wire is to be connected to the Earth pin of a 3 pin plug.

THE SEVERED PLUG MUST BE DESTROYED IMMEDIATELY TO AVOID ANY POSSIBLE ELECTRIC SHOCK HAZARD.

Introducing the Camcorder

E

22× lens (440× Digital Zoom)



From wide-angle to 22× telephoto — with unparalleled optical quality. The digital zoom multiplies this magnification by 20× for even more dramatic results.

FlexiZone Control



Easier than manual operation and more flexible than automatic functions, Canon's FlexiZone Control is a completely new way to use a video camera.

Image stabilizer (UC9500/UC-X65Hi)



Images are stabilized even in long telephoto shots.

Digital effects



Advanced digital technology allows you to add special effects and varied scene transitions to your recordings.

Powerful recording programs



Six recording programs deal with everything from simple point-and-shoot operation to the most challenging recording conditions.

Video light



The built-in video light brightens at the touch of a switch. Recording in low light (or no light) has never been easier.

Custom Keys



With the unique Custom Keys, you can decide which functions you want at your fingertips. Assign frequently used functions to the keys on the camera body.

Titles



You don't need any extra equipment to add titles to your home videos — the camera does it all.

Remote control



The supplied wireless controller operates both recording and playback from as far away as 5 metres (16 ft).

Hi8 (UC-X65Hi)



Hi8 is the format that most video professionals rely on for high quality, long recording times and compact size.

Hi-fi stereo sound (UC-X65Hi)



The stereo microphone provides audio depth and realism that adds drama and ambience to your images.

Colour viewfinder (UC8500/UC9500/UC-X65Hi)



You don't have to wait until playback to see your shots in colour. Thanks to the UC8500/UC9500/UC-X65Hi's high-resolution LCD viewfinder, you can see just what you're getting on tape, making it easy to shoot colourful, well-composed video.

Fade

Contents

Introduction

Thank you for Choosing a Canon	2
Important Usage Instructions	3
Introducing the Camcorder	4

Basic Operation

Powering Your Camcorder	6
Cassettes	8
Basic Recording	10
Zooming	12
Playing Back a Cassette	14
Connecting for Playback on a TV Screen	16
Tips for Making Better Videos	19

Advanced Functions

Selecting from the Menus	21
Setting Custom Keys	23
Image Stabilizer (UC9500/UC-X65Hi)	25
Using the Wireless Controller/Tally Lamp	26
Setting the Date and Time	28
Adding Titles	30
Fade	33
Searching and Reviewing While Recording	34
Using the Various Recording Programs	35
Focusing	37
Adjusting the Exposure Manually	39
Using Digital Effects	41
Using the Built-in Video Light	45
Editing to a VCR	47
Preparing the Camera	49

Additional Information

Video System	55
Optional Accessories	56
Cautions and Maintenance	59
Troubleshooting	63
Viewfinder Displays	66
Nomenclature	68
Specifications	70
Index	71

Powering Your Camcorder

E

Before operating your camera, you will need to use the power adapter to:

provide power from a mains outlet


or

charge a battery pack

Notes:

- The power adapter converts current from a household mains outlet (100–240 V AC, 50–60 Hz) to the DC current used by your camera.
- If the adapter is used next to a TV or the camera, it may cause the TV or camera to emit noise — move the adapter away from the TV, camera or the antenna cable.

Connecting the camera to a mains outlet

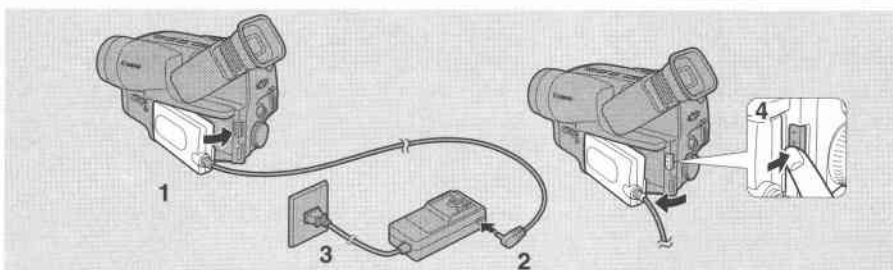

Basic Operation

Use the power adapter and the DC coupler to provide your camera with instant power from a mains outlet.

1. Insert the DC coupler in the camera's power source compartment.

- Insert the front end first, then press in the DC coupler until it clicks and locks into place.

2. Connect the DC coupler to the adapter.

3. Plug the adapter into a mains outlet.

4. Detach the DC coupler after use.

- Press and hold the BATTERY EJECT button while you pull the DC coupler outwards from the rear.
- Always turn the camera off before removing the power source.

CA-R330 Compact Power Adapter


Specifications

Power supply:	100–240 V AC, 50/60 Hz
Power consumption:	23 W
Rated output (nominal):	Adapter mode: 6 V, 2 A DC Charge mode: 8.5 V, 1.2 A DC
Operating temperature range:	0°–40°C (32°–104°F)
Dimensions:	149 × 72 × 40.5 mm (5 ⁷ / ₈ × 2 ⁵ / ₆ × 1 ³ / ₅ in)
Weight:	330 g

- Weight and dimensions are approximate. Errors and omission excepted. Subject to change without notice.

Charging and attaching the battery pack

E

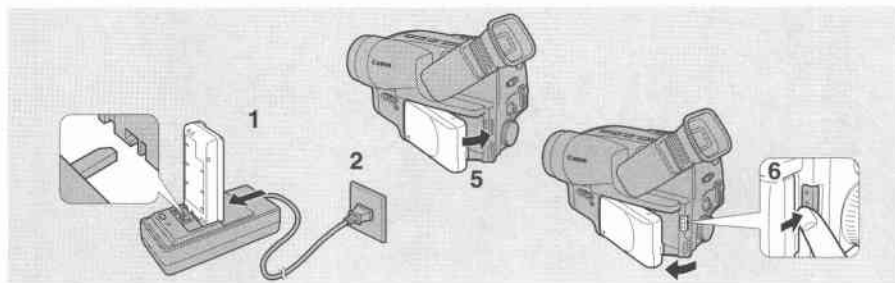

You will have to charge the battery pack before you can use it. A brand new battery pack must be charged twice before use.

- 1. Slide the battery pack onto the adapter as shown.**
 - Make sure the DC coupler is not connected.
- 2. Plug the adapter into a mains outlet.**
 - The CHARGE/REFRESH indicator flashes red to show that charging is in progress.
- 3. Wait until the battery pack is fully charged.**
 - The indicator glows steadily red when the battery pack is fully charged.
- 4. If the battery pack is brand new, take it off the adapter, then slide it on again and charge it one more time.**
- 5. Take the battery pack off the adapter and attach it to the camera.**
 - Insert the end marked with a triangle first, then press in the battery pack until it clicks and locks into place.
- 6. Detach the battery pack after use.**
 - Press and hold the BATTERY EJECT button while you pull the battery pack outwards from the rear.
 - Always turn the camera off before removing the power source.

Basic Operation

Charging and recording times

BP-818 Battery Pack


Continuous recording time*	UC8000:	135 minutes
(Video light off)	UC8500/UC9500:	125 minutes
	UC-X65Hi:	110 minutes

* Continuous recording time will be reduced by approx. 50% with continued use of the video light.

- These times vary — the safest policy is always to have two or three times as many battery packs as you think you will need.

Cassettes

E

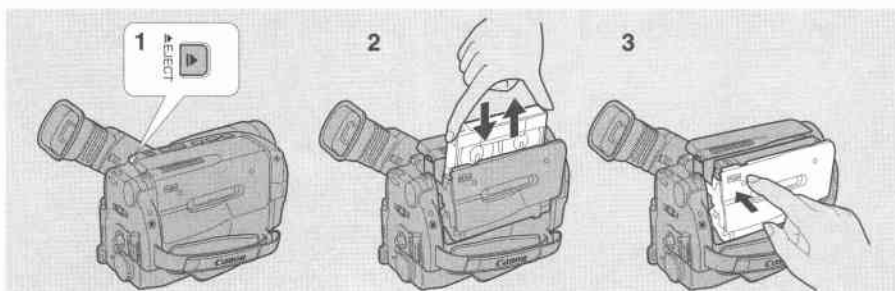


Use video cassettes marked with an **8** (or **Hi8** with UC-X65Hi).


Loading and unloading


Cassettes can be loaded and unloaded with the camera turned off, as long as a power source is attached.

Basic Operation

1. Press the **EJECT**  button and wait for the cassette compartment to open.
2. Load/unload the cassette.
 - Insert the cassette gently with the window facing out.
 - Remove the cassette by pulling it straight out.
3. Press the **(PUSH)** mark on the compartment until it clicks, and wait for it to close.
 - Never push down the top of the compartment.

Preventing accidental erasure

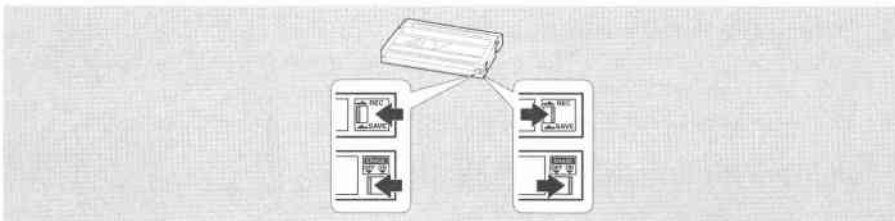

To protect your recordings from accidental erasure, slide the red switch on the cassette so that it covers the hole. (This switch position is usually labelled **SAVE** or **ERASE OFF**). When this cassette is loaded, the  mark will flash in the viewfinder if you turn the program selector to the camera mode.

If you want to record on the cassette again, slide the red switch back so the hole is open. (This position is usually labelled **REC** or **ERASE ON**.)


Notes:

- Do not interfere with the compartment while it is opening or closing automatically.
- After loading a cassette, use record search (p. 34) to find the point where you want to start recording.
- Do not leave the cassette in the camera after use — return it to its case and store it in a cool, clean, dry place.
- The holes in the back of the cassette are used for transferring information — do not cover them.

E

Basic Recording

E

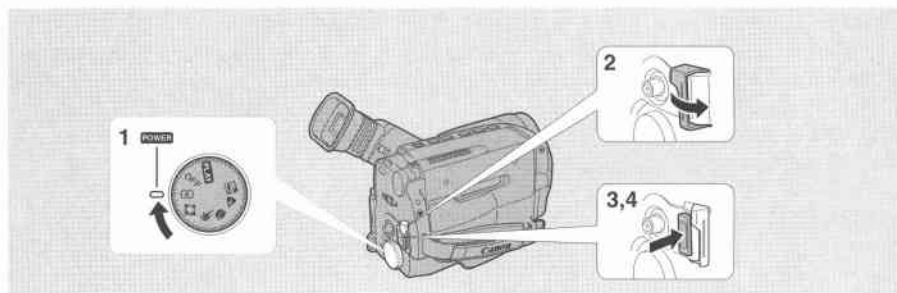


Before you start recording

Complete the following steps:

- Attach a power source (p. 6).
- Load a cassette (p. 8).
- Adjust the viewfinder and fasten the grip belt (p. 49).
- Remove the lens cap.

You may also want to install the backup battery (p. 54) in order to set date and time display (p. 28).

To record

- 1. Turn the program selector to the  position.**
 - This selects the camera's Automatic recording program. It allows you to simply point and shoot without making any manual adjustments.
- 2. Open the STANDBY cover.**
 - The POWER indicator lights up red, and PAUSE appears in the viewfinder — the camera is now in “record pause mode.”
- 3. Press the start/stop button to begin recording.**
 - The tally lamp flashes rapidly and REC appears in the viewfinder.
- 4. Press the start/stop button again to pause recording.**
 - The camera returns to record pause mode and PAUSE reappears in the viewfinder.
 - You can stop and restart recording as often as you like by pressing the start/stop button.
 - The camera will turn itself off if you leave it in record pause mode for more than about five minutes. To return to record pause mode, close and reopen the STANDBY cover, or set the program selector to OFF and then back to camera mode.

When you have finished recording

E


- Unload the cassette.
- Set the program selector to OFF.
- Replace the lens cap.
- Disconnect the power source.

Notes:

- To check that the camera is recording correctly, be sure to make a test recording first.
- Before making important recordings, clean the video heads using Canon CC-8 Video Head Cleaning Cassette or a commercially available dry-type head cleaning cassette.

Zooming

E

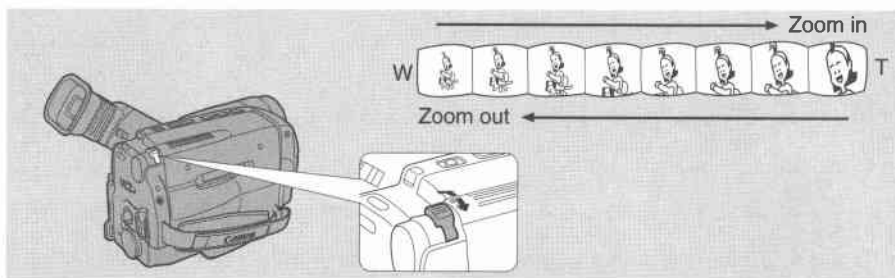

The camera's 22 \times zoom lens allows you to choose the best picture angle for each scene:

- Turn the zoom control towards W to zoom out to wide-angle.
- Turn it towards T to zoom in to telephoto.

You can also control the speed of zooming:

- Move the control slightly to zoom slowly.
- Turn it farther to zoom more quickly. (The farther you turn the zoom control, the faster the zoom speed.)

The T and W buttons on the wireless controller adjust the picture angle, but not the zoom speed:

- Press W to zoom out to wide-angle.
- Press T to zoom in to telephoto.

Turning the 440 \times digital zoom on/off

Turn the digital zoom on/off by choosing DIGITAL ZOOM at the camera menu, to magnify the camera's zoom range by 20 \times .




- In addition for the UC9500/UC-X65Hi, you can assign CUSTOM KEY 1 to turn the digital zoom on/off (see page 23).

The zoom control continues to work as usual. You can freely zoom in and out between 1 \times and 440 \times magnification — the camera automatically switches between optical zooming (up to 22 \times) and digital zooming (22 \times to 440 \times).

Note:

- When you enter the digital zoom range in FlexiZone mode, the FlexiZone frame becomes locked in the centre of the viewfinder

Viewfinder displays

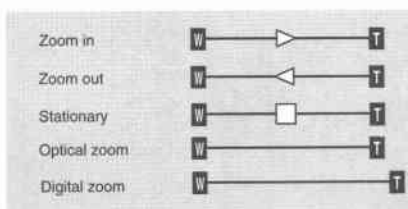


Notes:

- The viewfinder display stays lit for approximately 4 seconds following an adjustment to the picture angle.
- Overuse of the zoom may make recordings seem too busy. It is generally better to use it sparingly, or in order to reframe between shots.
- When you want to get as close as possible to your subject, keep the zoom at the wide-angle position. You can focus on a subject as close as 1 cm (3/8 in).
- When you turn the digital zoom on at the menu, "440x" appears in the viewfinder.
- Image resolution is lower when the magnification is greater than 22x.

Playing Back a Cassette

E

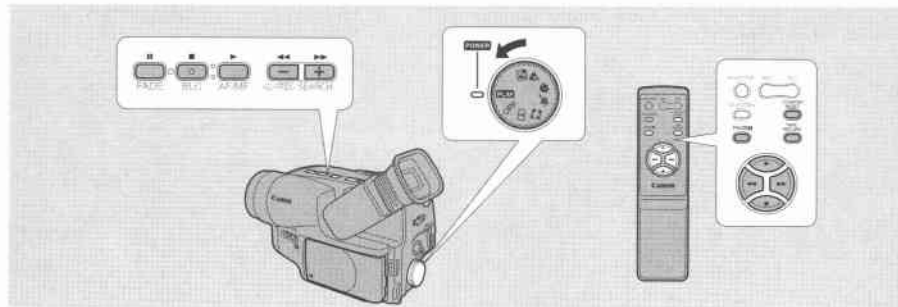

You can use the viewfinder screen for instant, on-the-spot playback.

To play back your recordings on a TV, see p. 16.

To use the wireless controller, see p. 26.

Basic Operation

1. Attach a power source and turn the program selector to **PLAY**.

- The **POWER** indicator lights up.

2. Load the cassette.

3. Press the **▶** button to start playback.

- To end playback, press the **■** button.
- To wind the tape forwards, stop playback and press the **▶▶** (fast forward) button.
- To wind the tape backwards, stop playback and press the **◀◀** (rewind) button.
- If the playback picture is rough, clean the video heads using a Canon CC-8 Video Head Cleaning Cassette or a commercially available dry-type head cleaning cassette.

Special playback

Playback pause

To view the video as a still picture press the **||** button. To resume normal playback, press it again, or press the **▶** button. The camera automatically goes into stop mode after about five minutes' playback pause.

Fast forward playback

To play back the recording at about 9 times normal speed, press and hold the **▶▶** button during normal playback

Rewind playback

For reverse playback at about 7 times normal speed, press and hold the **◀◀** button during normal playback.

High-speed search

To play back the recording at about 15 times normal speed, press and hold the ►► button during normal fast forward. For reverse playback at about 15 times normal speed, press and hold the ◀◀ button during normal rewind.

Tape return

Use the wireless controller's TAPE RETURN button to quickly return to a scene you want to see again:

1. **Press the COUNTER RESET button during playback if you come across a scene you want to watch again later.**
 - The tape counter is reset to 0:00:00.
2. **When you have ended playback, press the TAPE RETURN button.**
 - The tape rewinds and stops when the counter nears 0:00:00.
 - You can cancel tape return by pressing the ■ button.
3. **Start playback.**

Notes:

- When the tape reaches the end during normal playback it rewinds automatically.
- Noise bars appear on the screen during special playback and the soundtrack cannot be heard. On certain TVs the picture may roll and divide, or appear in black and white, and the high-speed search picture may not be visible.
- During playback pause, the picture flickers, and fast action scenes may appear blurred.
- The tape counter is reset when a cassette is loaded.

About Hi8 (UC-X65Hi)

To record or play in the Hi8 format, you need both a Hi8 camcorder and a Hi8 cassette (you can use either Metal-P or Metal-E Hi8 cassettes).

A Hi8 camcorder can record or play back in either the Hi8 format or standard 8mm format, depending on the tape used.

The superior quality of Hi8 can best be appreciated on a TV which has an S-video input terminal.

Note:


- The tape counter is reset when a cassette is loaded.

Connecting for Playback on a TV Screen

E You can connect the camera to a TV or VCR in order to play back your recordings. See your TV or VCR instruction manual for further details. You will need to attach a power source to the camera (see p. 6).


If your TV (or VCR) has a SCART terminal (without S-video)

UC-X65Hi

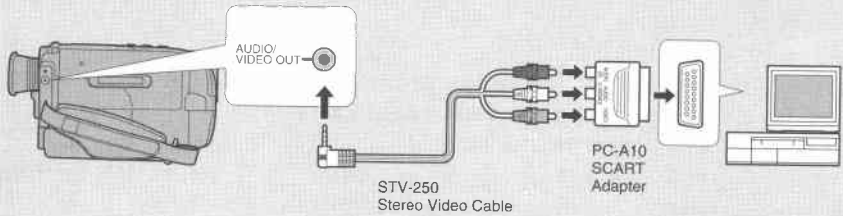

- Connect the PC-A10 SCART adapter to the TV or VCR's SCART terminal.
- Connect the camera to the adapter. Connect the camera using the STV-250 Stereo Video Cable. Connect the white plug to the white audio terminal ① (left). Connect the red plug to the red audio terminal ② (right). Connect the yellow plug to the yellow video terminal ③.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

UC8000/UC8500/UC9500

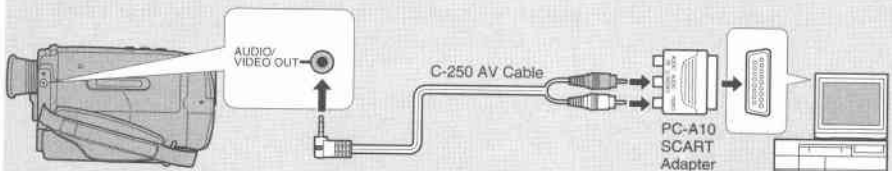


- Connect the PC-A10 SCART adapter to the TV or VCR's SCART terminal.
- Connect the camera to the adapter. Connect the camera using the C-250 AV Cable. Connect the white plug to the white audio terminal ① (left). Connect the yellow plug to the yellow video terminal ③.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

If your TV (or VCR) has an S-video input terminal (for UC-X65Hi)

E

UC-X65Hi

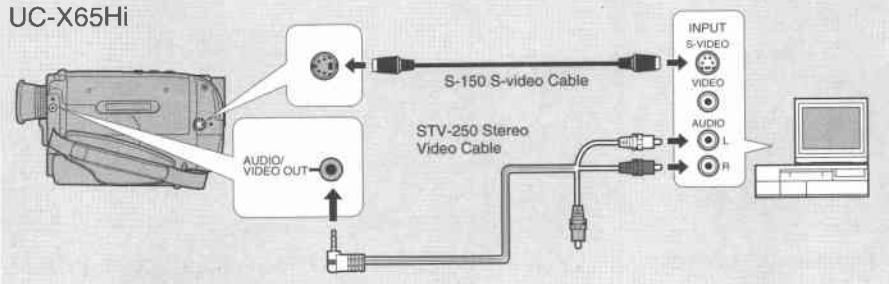


- Use the S-150 S-video Cable to connect the S-video terminal (S). Use the STV-250 Stereo Video Cable, to connect the A/V terminal. Connect the white plug to the white AUDIO terminal (L) (left). Connect the red plug to the red AUDIO terminal (R) (right). Do not connect the yellow plug.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

Basic Operation


If your TV (or VCR) has audio/video input terminals

UC-X65Hi

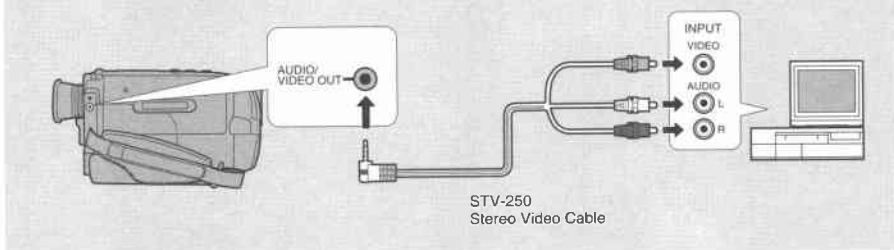

- Connect the camera using the STV-250 Stereo Video Cable, to connect the A/V terminal. Connect the white plug to the white audio terminal (L) (left). Connect the red plug to the red audio terminal (R) (right). Connect the yellow plug to the yellow video terminal (V).
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

UC8000/UC8500/UC9500

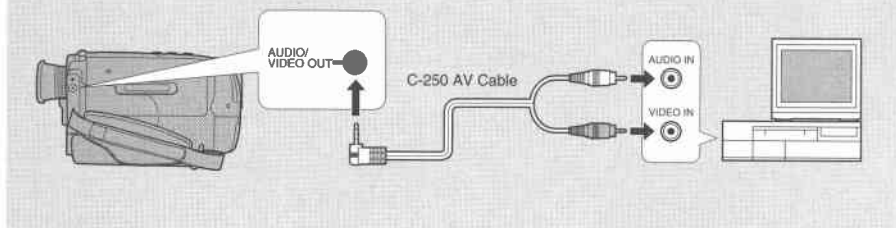

- Connect the camera using the C-250 AV Cable, to connect the A/V terminal. Connect the white plug to the white AUDIO terminal. Connect the yellow plug to the yellow VIDEO terminal.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

Note:

- If you are going to use the TV as a monitor while you are shooting, remember to keep the TV volume turned down as long as the camera's audio terminals are connected. If the sound from the TV speakers is picked up by the microphone, an unpleasant high-pitched squeal, called feedback, may be produced.

Tips for Making Better Videos

Holding the camera

For maximum stability, place your right hand through the grip belt and keep your right elbow pressed against your body. Rest your left hand lightly on the side of the camera. With practice, you will be able to operate the controls by touch, without taking your eye off the action.




Using a tripod

To prevent any unwanted movement, you can mount the camera on a tripod, and operate it with the wireless controller.



Sound recording

For greater creative control, you can connect an external microphone to the MIC terminal. Use a microphone with built-in batteries.

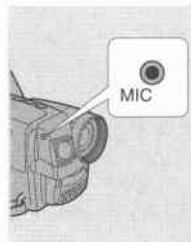

Composition

The most important element in the scene does not have to be in the centre. For a more interesting picture, try to position your subject so it is slightly to one side. Leave some space on the side of the frame that the subject is facing or moving towards.



Don't cut off the top of the subject's head, and don't cut people off at the neck, hips or knees (move a little bit above or below).



Watch out for distracting objects in the background.



E

Picture angle

Instead of zooming while recording, try to choose your picture angle before you begin. A good way to tell a story with video is to begin with a long shot that establishes the situation, and then move in with medium shots and close-ups to show the details. Remember to change your viewpoint for each shot.



Long shot




Medium shot



Close-up

Camera moves

Use pans to record a landscape or following a moving subject. Decide the area you want to cover and stand facing the end of your panning angle. Without moving your feet, turn waist to the starting position. Start recording, and after a few seconds begin to turn slowly from the waist. Hold the final image for a few seconds before you stop recording.

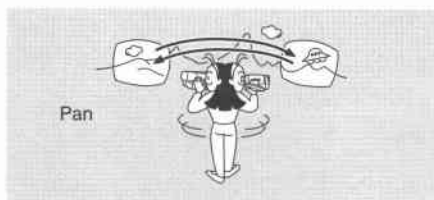

Pan

Tilt the camera up to exaggerate the height of the subject. Tilt down from the top of a building for example, as an introduction to subjects at the bottom.



Tilt

Remember that any camera movement or change in picture angle should have a definite purpose. Avoid unnecessary or half-hearted movements.

Notes:

- When you are using a tripod, be careful not to leave the viewfinder exposed to bright sunlight or it will melt. (The light is concentrated by the viewfinder lens.) You may be able to move the viewfinder out of direct sunlight by pushing it upright, or by moving it back down to horizontal.
- Make sure that the fastening screw of the tripod is no longer than 6 mm ($\frac{1}{4}$ inch), or it will damage the camera.

Selecting from the Menus

The menus let you choose settings for a wide range of functions. There are two separate menus, for recording (camera menu) and playback (play menu).

E

Camera menu

While the camera is in record pause mode, press the MENU button.

Screen 1

- ① Custom key information.....p. 24
- ② Tally lamp.....p. 27
- ③ Remote sensorp. 26
- ④ Digital zoom.....p. 12
- ⑤ Image stabilizer (UC9500/UC-X65Hi) ...p. 25
- ⑥ Date selectp. 29
- ⑦ Date display.....p. 28
- ⑧ Titlep. 30



Screen 2


- ① Date set.....p. 29
- ② Title set.....p. 31
- ③ Title selectp. 32
- ④ Custom key set.....p. 23



Play menu


With the program selector set to PLAY, press the MENU button.

- ① Remote sensorp. 26

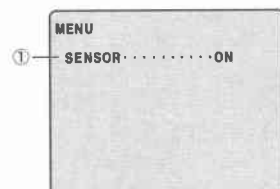

Turn to the appropriate page for a detailed explanation of each function.

Advanced
Functions

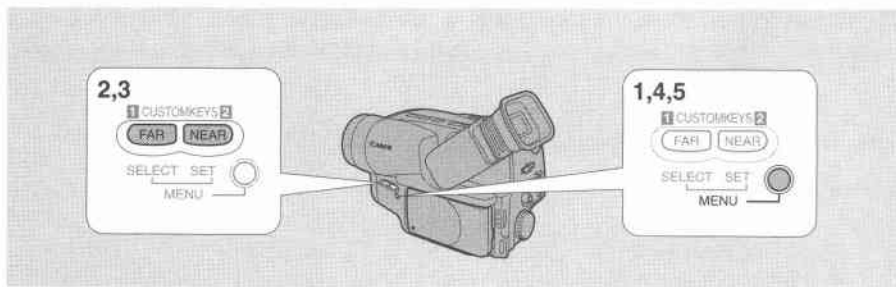


1. Press the MENU button to open the menu at screen 1.
2. Use the SELECT button to move the cursor down the screen.
 - When the cursor reaches the bottom of the selections it returns to the top of the list.
3. Press the SET button to turn the function on or off, or to change its setting.
4. Press the MENU button again to move to screen 2 of the menu (camera menu only).
 - Make selections in the same way as for screen 1.
5. Press the MENU button to close the menu.

Setting Custom Keys

The Custom Keys let you choose the functions you want at your fingertips.

E

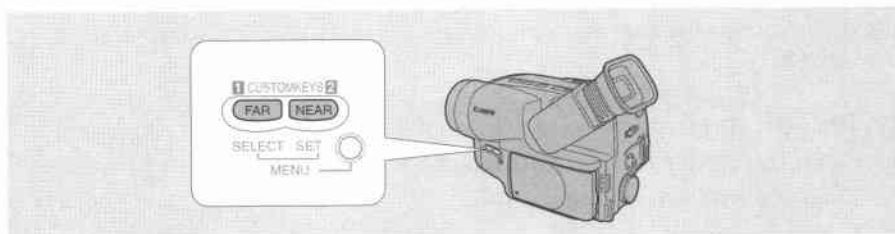

The two keys on the left side of the camera body can easily be set to operate a number of functions. When you buy the camcorder, they should be set as follows:

CUSTOM KEY 1	CUSTOM KEY 2
D.E. SELECT	D.E. ON/OFF

Select the combination of functions that you are likely to use most often. It is simple to change the Custom Key settings when necessary.

To set the function of the Custom Keys



MENU

(see p. 21)

►CUSTOM KEY SET

1. Turn the program selector to camera mode (, , , , or).
2. Open the camera menu to screen 2 and select **CUSTOM KEY SET**.
3. Press the **SELECT** button to move the cursor down until you reach the combination of functions of your choice.







CUSTOM KEY 1	CUSTOM KEY 2
D.ZOOM (UC9500/UC-X65Hi)	IMAGE STABIL (UC9500/UC-X65Hi)
D.E.SELECT	D.E. ON/OFF
DATE	TITLE
FADE	BLC

4. Press the **SET** (or **MENU**) button to assign the functions to the **CUSTOM KEYS**.
 - The camera displays these functions in the viewfinder for about 3 seconds and then returns to the camera menu.
5. Press the **MENU** button to close the menu.

Advanced
Functions

E**Displaying the Custom Key function in the viewfinder**

Choose to display the combination of functions set for the CUSTOM KEYS in the viewfinder.

1. Turn the program selector to camera mode (, , , ,  or ).
2. Open the camera menu and select CUSTOM KEY INFO.
3. Turn the information on or off.
4. Close the menu.

Notes:

- If it takes you more than about five minutes to select the Custom Key information, the camera may turn itself off automatically before you finish. This can be avoided by removing the cassette before you begin.
- You can only operate the digital effects when the CUSTOM KEYS are assigned to the digital effect option.
- The camera remembers the Custom Key settings until you make a new selection.
- Even when the CUSTOM KEY INFO. (information) is turned off, the settings are displayed in the viewfinder for about 4 seconds each time you close the menu or turn the camera on.


Image Stabilizer (UC9500/UC-X65Hi)

E

With most camcorders, even the slightest hand movements will be noticeable during telephoto recording. However, the image stabilizer allows you to obtain steady recordings even at high magnification. Before you start recording, turn the image stabilizer on or off from the IMAGE STABIL option at the camera menu.

- In addition, for the UC9500/UC-X65Hi you can assign CUSTOM KEY 2 to turn the image stabilizer on/off (see page 23).

Notes:

- The  mark appears in the viewfinder when the image stabilizer is turned on.
- Due to the nature of the image stabilizer, the image quality will be lower when the image stabilizer is switched on, and the image will appear slightly enlarged in the viewfinder. (UC9500)
- The image stabilizer is designed to deal with a normal degree of camera shake — it cannot compensate for large movements of the camera.
- Keep the image stabilizer turned off when the camera is mounted on a tripod.
- The image stabilizer is not as effective as usual when the optional wide-converter or tele-converter is attached.

Using the Wireless Controller/Tally Lamp


E

The wireless controller can operate the camera from a distance of up to 5 metres. Point it at the camera's remote sensor while you press the buttons.

The tally lamp lets you know that the camera is in range and responding to your commands.


There are two functions which can only be operated using the wireless controller:

- Tape return (p. 15)
- On-screen viewfinder displays (p. 66)

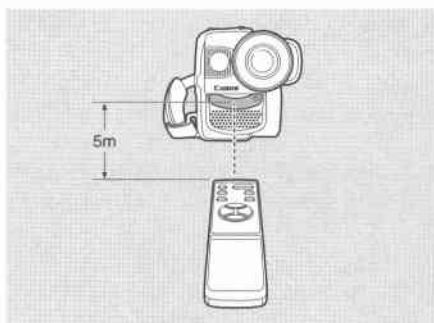

Inserting batteries


Insert two AA batteries, following the \oplus and \ominus markings. Be careful not to reverse the polarity of the batteries.

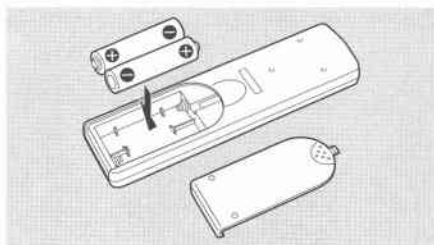

Turning off the remote sensor



The remote sensor may be turned off to prevent interference from other Canon wireless controllers being used nearby.

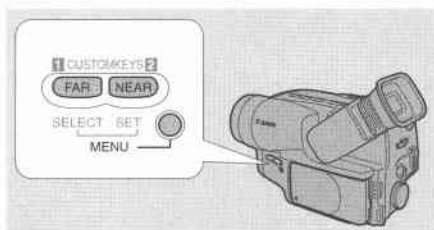

1. **Open either the camera or play menu and move the cursor to SENSOR.**
2. **Select the OFF setting and close the menu.**
 - S OFF appears in the viewfinder.

Turning off the tally lamp

E



MENU

(see p. 21)

▶TALLY LAMP.....OFF

The tally lamp lets you know the camera is recording. However, it may be reflected into the lens during close-up recording or when recording through glass.




1. **Open the camera menu and move the cursor to TALLY LAMP.**
2. **Select the OFF setting and close the menu.**
 - The tally lamp no longer lights up during recording, but it will still light up when the camera receives a signal from the wireless controller.

Notes:

- Sunlight or fluorescent light falling on the sensor may shorten the controller's operating distance by interfering with its infrared signals.
- The camera may have difficulty picking up the remote control signals at extremely close range.
- Do not leave the controller exposed to direct sunlight, or in hot or humid places.
- When changing exhausted batteries, replace them all at once.

Setting the Date and Time

E

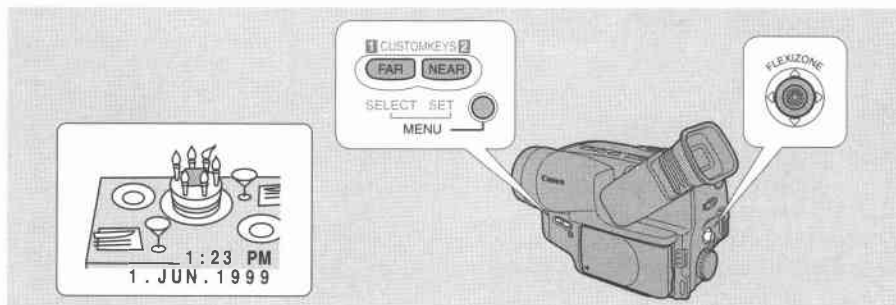

MENU

(see p. 21)

▶DATE DISPLAY...CONT.

Choose whether to add the date and time to your recordings by selecting **DATE DISPLAY** at the camera menu, and choosing one of the three options:

AUTO-10S: Adds the date and time to your recordings for the first 10 seconds of each scene you record.

- The date/time display flashes in the viewfinder in record pause mode.

OFF: The date and time will not be added to your recordings at any time.

CONT.: The date and time are recorded continuously.

If you set the date display to **AUTO-10S** or **CONT.** but have not yet set the date and time, --:-- appears in the viewfinder during record pause mode. This will not be recorded.

Setting the date and time

E

Set the date and time display when you first start using your camera. As long as you have inserted the backup battery (p. 54), the camera's internal clock will continue to work even when the main power source is removed.

1. **Open the camera menu to screen 2 and choose the DATE SET option.**
 - The year display starts flashing.
2. **Press the controller up and down to change the year. Press sideways to move to another part of the display.**
 - Press once to scan a year at a time. Press and hold to scan quickly.
 - Once you move from the year, the next part of the display starts flashing.
3. **Set the months, days, hours, and minutes in the same way.**
 - After you set the minutes, press the SET (or MENU) button to start the clock; the camera displays the date and time for about three seconds and then automatically returns to the camera menu.
 - You can use the SET button to return to the camera menu, at any stage of setting the clock.
4. **Press the MENU button to close the menu.**

Notes:

- The display can be set to any year between 1999 and 2025.
- In addition, you can assign CUSTOM KEY 1 to choose whether to add the date and time to your recordings (see page 23). Once assigned, press the CUSTOM KEY to choose between auto-10s, off, and continuous display styles (each in turn).

Choosing the display style

You can choose between three different date/time displays at the camera menu.



 
DATE&TIME



DATE




TIME



Advanced
Functions

Adding Titles

E

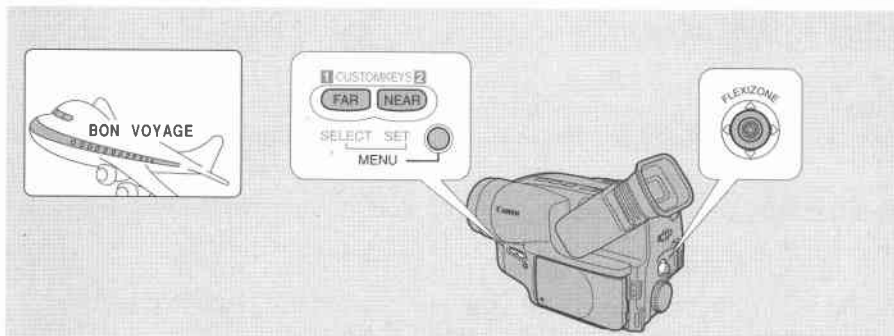

You can write your own titles and store them in the camera's memory in order to add them to your recordings. Remember to install the backup battery first (see p. 54).



Choose whether to add the title to your recordings by selecting **TITLE** at the camera menu, and choosing one of the three options:

AUTO-10S: Adds the title to your recordings for the first ten seconds of each scene your record.

- The current title flashes in the viewfinder in record pause mode.

OFF: The title will not be added to your recordings at any time.

 
CONT.: The title is recorded continuously.

Notes:

- In addition, you can assign **CUSTOM KEY 2** to choose whether to add titles to your recordings (see page 23). Once assigned, press the **CUSTOM KEY** to choose between auto-10s, off, and continuous display styles (each in turn).
- When you turn the camera off, the **TITLE** setting is reset to **OFF**.

Writing a title

These lines appear in the viewfinder while you are writing a title.



Enter your title in the camera's memory before you start recording. The title can be one or two lines of up to 16 characters each.

1. Open the camera menu to screen 2 and choose the **TITLE SET** option.

- The title lines appear in the viewfinder.
- If you have already entered a title in the memory, it will be displayed in the viewfinder.
- The first dot (or character) flashes to show where the cursor (the insertion point) is located.


2. Press the controller sideways to move the cursor to the point you want start the title.

- Press once to move the cursor one space at a time. Press and hold to move it quickly.

3. Press the controller up and down to scan the list of title characters.

- Press once to move the cursor one space at a time. Press and hold to move it quickly.
- You can choose from the following characters:



- If you choose the flashing dot , nothing will be recorded at this position.
- You can erase all the characters at and to the right of the cursor by pressing and holding the C.RESET button for more than one second.

4. When the character you want to write is displayed, press the controller sideways to move the cursor to the point where you want to write the next character.

5. Repeat steps 3 and 4 until your title is complete, then press the **SET (or MENU)** button to enter the title in the memory.

- The title is displayed for about 3 seconds, before the camera returns to the menu.

6. Press the **MENU** button to close the menu.

Note:

- If it takes you more than about five minutes to write a title, the camera may turn itself off automatically before you finish. This can be avoided by removing the cassette before you begin.


Using the preset titles

1. Open the camera menu to screen 2 and choose the **TITLE SELECT** option.
2. Press the **SELECT** button to move through the list of preset titles until the title you wish to use is displayed.
 - Each time you press the **SELECT** button the preset titles will be displayed in order one by one.



3. Press the **SET** button to select the preset title and enter the title in the memory.
 - The preset title is displayed for 3 seconds, before the camera returns to the menu.
4. Press the **MENU** button to close the menu.

Fade

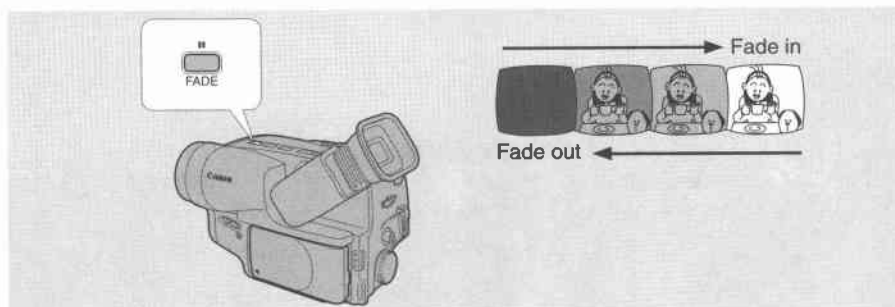

Fade in

To make the scene gradually appear from a blank screen:

1. Make sure the camera is in record pause mode.
2. Press and hold the FADE button until the scene disappears completely from the viewfinder.
3. Press the start/stop button to begin recording.
4. Release the FADE button.
 - The scene gradually reappears in the viewfinder.

Fade out

To make the scene gradually disappear:

1. Press and hold the FADE button during recording.
2. When the scene has completely disappeared, press the start/stop button to end recording.
3. Release the FADE button.

Notes:


- In addition, you can assign CUSTOM KEY 1 to operate the fade (see page 23). Once assigned, press the CUSTOM KEY to fade in or out in the same way as detailed above.
- The sound fades together with the image.
- Title, date and time displays do not fade.

E

Advanced
Functions

Searching and Reviewing While Recording

E

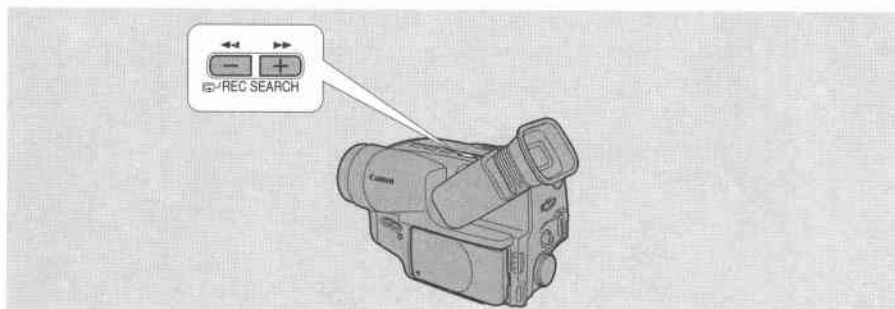


Record search

When the camera is in record pause mode, you can use record search to play the tape forwards or backwards to find the point where you want to start or restart recording. This is useful when you want to add a new scene to a previously used cassette. By using record search, you can ensure a smooth, noise-free join between the new scene and the old one.

1. **Make sure the camera is in record pause mode.**
2. **Press and hold the REC SEARCH + or – button while you check the picture in the viewfinder.**
 - The + button plays the recording forwards and the – button plays it backwards.
3. **Release the button when you find the point where you want to start recording.**
 - The record search picture pauses briefly and then the camera returns to record pause mode.

Record review

When the camera is in record pause mode, you can use record review to play back the last few seconds of your recording and then return automatically to record pause mode. You can quickly make sure that a scene has recorded properly and then go on to shoot the next scene, without producing any noise in the picture.

1. **Make sure the camera is in record pause mode.**
2. **Press and release the  button (the REC SEARCH – button) while you check the picture in the viewfinder.**
 - The camera rewinds the tape and plays back the last few seconds.
 - The camera returns to record pause mode at the point where you pressed the button.


Note:

- Noise or skew (picture distortion) may appear on the screen during record search and record review.

Using the Various Recording Programs

The camera provides you with a choice of six recording programs. They use different combinations of camera settings in order to adjust the exposure and other functions to match the recording situation.

E

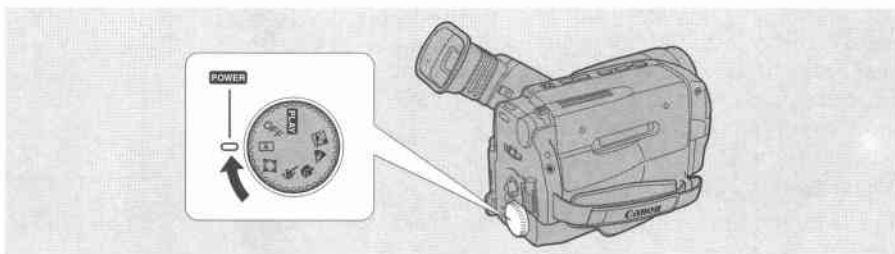

Rotate the program selector to choose the appropriate program before you start recording.

- For normal shooting conditions, you can leave the recording program selector set to **[A]** (Auto Recording). For different recording conditions, rotate the selector to the appropriate program before you start recording. Reset to **[A]** for standard conditions.


Auto Recording

The simplest way to use the camera is with the program selector set to the **[A]** position. The camera will adjust the focus and exposure automatically, leaving you free to point and shoot.



- The backlight compensation (BLC) button can be used in this mode.
- You can also lock the exposure (p. 40).

FlexiZone Recording

In normal recording conditions, set the program selector to the  position. This is the same as the Auto Recording program, except that you can now use the FlexiZone AF (p. 40) and FlexiZone AE (p. 37).



- You can also operate the backlight compensation function (BLC) in this mode.
- You can also zoom into your framed subject while in this mode. For digital zooming, turn digital zoom on through the menu. While in the optical zoom range, the FlexiZone frame moves freely around the screen. However, once you enter digital zoom range, the frame becomes locked in the centre of the viewfinder.
- The FlexiZone frame blinks twice when you zoom out from digital to optical zoom range. You are now free to move the frame.

Specialised AE programs

Sports

This program is useful for recording high-speed sports scenes in brightly lit conditions. Normal playback will be slightly jerky, but you will get clear images which can be analysed frame by frame during slow or still playback on a VCR.



Portrait

Use this program outdoors to make the subject stand out from a softened foreground and background. It works well for still-lives and close-ups. The effect is most noticeable when the zoom position is between the middle range and the telephoto end. Focus manually for maximum accuracy.



Spotlight

This program is designed for recording spotlit scenes, such as on a stage. The exposure is automatically adjusted for glare-free recordings of subjects lit by a concentrated light source.




Sand & Snow

Use this program in places where the background is so bright that the subject appears underexposed in the viewfinder — a sunny beach or ski resort, for example.



Notes:

- You can focus manually in any recording program (p. 38).
- Avoid changing programs during recording as the brightness of the image may change suddenly.
- The specialised AE programs are not suitable for all kinds of lighting. The image may flicker, or a bright line may appear on the screen if you use them in the wrong lighting conditions.

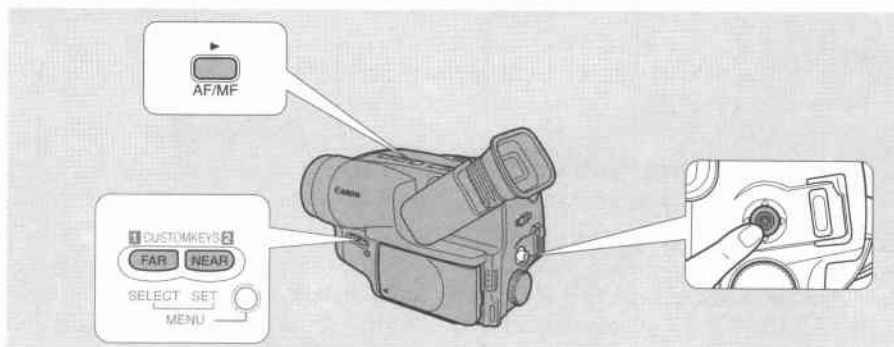

The camera can focus automatically. All you have to do is point it, and whatever is in the centre of the viewfinder will usually be in sharp focus. It also has two functions which give you more control over focusing.

FlexiZone AF

FlexiZone AF makes autofocus much more powerful. Using the FlexiZone controller, you can select any object that appears in the viewfinder, and the camera will bring it into focus. Choose the FlexiZone Recording program when you want to use FlexiZone AF.


FlexiZone AF is useful in the following situations:

When your main subject is not in the centre of the viewfinder

When you want to shoot a moving subject

It also makes it easy to use “focus shift” techniques. You can direct the viewer’s attention by focusing first on one part of the scene, and then on another.



1. **Turn the program selector to .**
 - The FlexiZone Control frame appears in the viewfinder.
2. **Use the FlexiZone controller to move the frame over the subject.**
 - The controller can be moved in any direction. Press it repeatedly to move the frame little by little. Press and hold to move the frame quickly.
 - The camera adjusts the focus to suit the area inside the frame.
 - Move the FlexiZone frame and optically zoom into subjects located anywhere in the viewfinder. When you zoom into the digital range, the FlexiZone frame becomes locked in the centre of the viewfinder.


E

Manual focus


Sometimes you will get better results by turning off autofocus and using manual focus instead. (For a list of difficult to focus subjects refer to page 63.)

- 1. Frame the picture with the zoom control.**
 - If you use the zoom after manual focusing, the picture may go out of focus.
- 2. Press the AF/MF button to switch to manual focus.**
 - MF appears in the viewfinder.
 - The focus remains locked at the point set by the autofocus
 - FAR and NEAR appear in the viewfinder, to represent the function of the Custom Keys.
- 3. Press FAR to take the focus further away, and NEAR to bring the focus closer towards you.**
- 4. To return to autofocus, press the AF/MF button again.**

Notes:

- The CUSTOM KEYS return to your chosen setting when you press the AF/MF button to turn the autofocus back on.
- When you turn the camera off, manual focus is cancelled.
- Manual focus is cancelled if you choose the Easy Recording program.
- If you turn the program selector to  position while using manual focus, the focus remains locked. You may release it and activate the FlexiZone AF by pressing the AF/MF button.


Adjusting the Exposure Manually

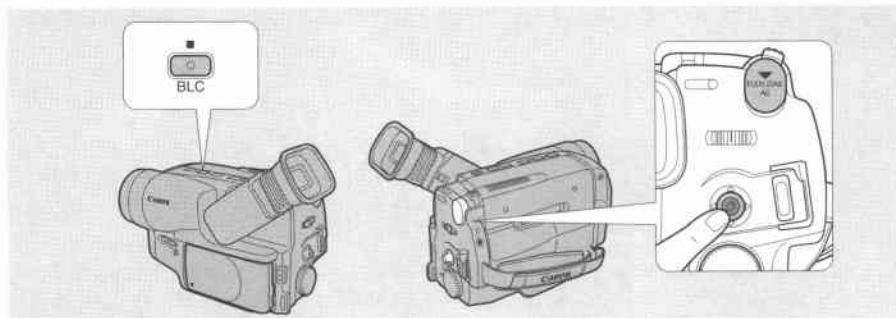



The camera adjusts the exposure automatically, making sure that your pictures are neither too dark nor too light. There is a choice of six recording programs to deal with different recording conditions (see p. 35–36).

This section explains how to use three more exposure functions. These will give you added control over your recordings.

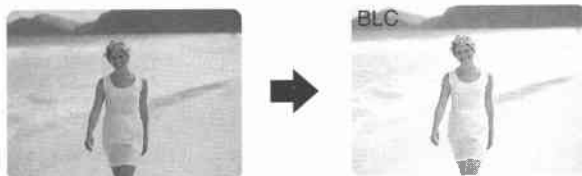Compensating for backlight




If the subject is brightly lit from behind, it may appear under-exposed and lacking in detail. To compensate for this, use the BLC function.

1. Select the Auto  or FlexiZone  Recording program.
2. If your subject is backlit and underexposed press and hold the BLC button.
 - The camera will compensate for this as long as you hold the key down.
3. Release the key when it is no longer needed.


Note:

- In addition, you can assign CUSTOM KEY 2 to operate the BLC (see page 23).

FlexiZone AE

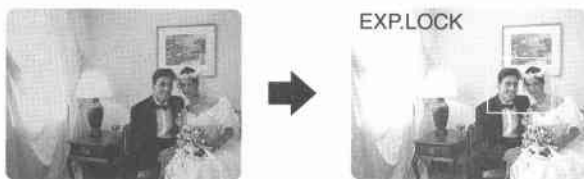


The camera usually adjusts the exposure so that it is suitable for the whole scene, and especially for the area in the centre of the viewfinder. FlexiZone AE allows you to choose any part of the scene, so that even if your subject is towards the edge of the screen, or if it is very bright or very dark, it will still be properly exposed.

1. **Turn the program selector to  FlexiZone Recording Program.**
 - The FlexiZone control frame appears in the viewfinder.
2. **Use the FlexiZone controller to move the frame over the subject.**
 - The controller can be moved in any direction.
3. **Press the FLEXIZONE AE button.**
 - The camera adjusts the exposure to suit the area that is currently inside the frame. You can move the frame to focus on something else, but the exposure area will not move with it.
 - EXP. LOCK appears in the viewfinder.
4. **Press the button again when you want to cancel FLEXIZONE AE.**
 - The exposure is now adjusted to suit the centre of the screen again.
 - Press the button once more if you want to adjust the exposure for the frame's new position.
 - Move the FlexiZone frame and optically zoom into subjects located anywhere in the viewfinder. When you zoom into the digital range, the FlexiZone frame becomes locked in the centre of the viewfinder.


Exposure lock

When you are recording in situations where the lighting or light reflected by the subject may change suddenly, you can lock the exposure at the current level.

1. **Turn the program selector to  Auto Recording program.**
2. **Press the FLEXIZONE AE button.**
 - The camera locks the exposure at the current level.
 - EXP. LOCK appears in the viewfinder.
3. **Press the button again when you want to cancel the exposure lock.**

Using Digital Effects

E

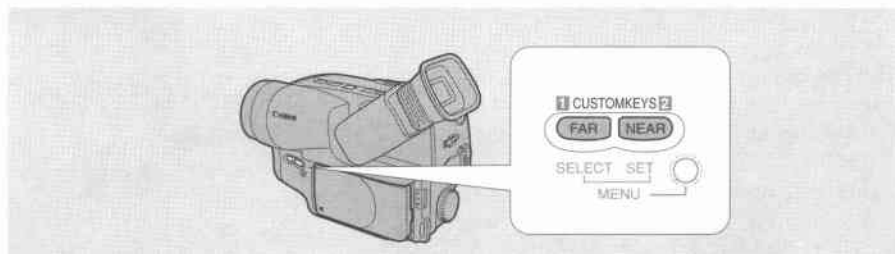

You can add a variety of digital effects to your recording during recording. The soundtrack is not affected.


Art

Adds a paint-like effect, called solarization, to the image.




Black & White

Makes the image in black & white.

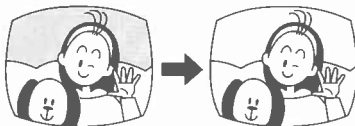


Sepia

Makes a monochrome image with a sepia tint.

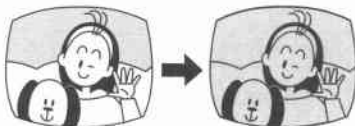

Negative-Positive Conversion

Makes a colour negative of the image. White appears as black, yellow appears as blue, green appears as red, etc. Also converts a negative image to an ordinary positive one.

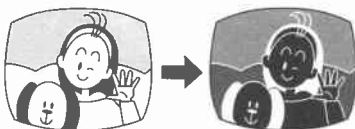


Advanced
Functions

Mirror-Half

The image will be as if you have placed a mirror in the middle of the screen.


- If you select the Mirror-Half after the image stabilizer has already been turned on, the image stabilizer automatically turns off. Accordingly, if the Mirror-Half is turned on first, the image stabilizer becomes inoperable.

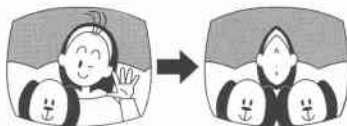

Mirror-Full


The image will be reversed as if you are looking into a mirror.

- If you select the Mirror-Full after the image stabilizer has already been turned on, the image stabilizer automatically turns off. Accordingly, if the Mirror-Full is turned on first, the image stabilizer becomes inoperable.

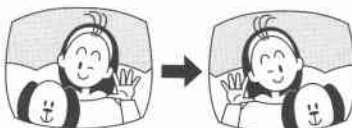


Mosaic

Enlarges various pixels. The image is made up of noticeable squares of colour, giving a mosaic-like effect.

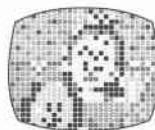


Pastel

Adds a pastel-like effect to the image.

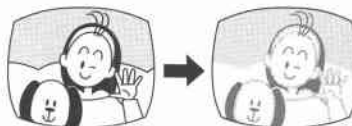

Emboss


Shots appear as embossed scenes.

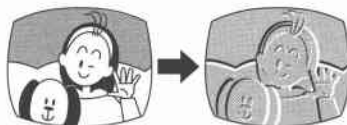

Colour Key-Red/Green/Blue/Yellow

Makes the image in black & white except for objects of the selected colour such as red.

- Due to colour variations of subjects, there may be some inconsistency in the colour key effect from subject to subject.

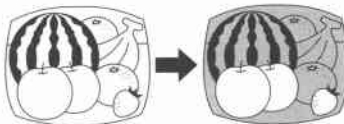

16:9


Produce images in the 16:9 format for playback on widescreen TVs

- If you select the 16:9 format after the image stabilizer has already been turned on, the image stabilizer automatically turns off. Accordingly, if the 16:9 format is turned on first, the image stabilizer becomes inoperable.
- If you play back a recording made for 16:9 on a normal TV screen, the image will appear to be vertically “squashed” (compressed).




Cinema

Makes the image with the same proportions as a cinema screen. The top and bottom of the screen are black, giving the effect of a film being broadcast on TV in the ‘letterbox’ format.

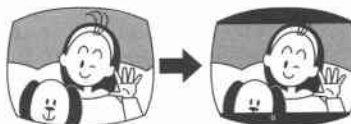

Using Digital Effects

1. Turn the program selector to camera mode.
2. Make sure that the CUSTOM KEYS are assigned to D. E. SELECT and D. E. OFF. (see p. 23).
3. Press CUSTOM KEY 1 (the SELECT button) to choose the effect you want.
 - Each time you press the key, the flashing viewfinder display changes:

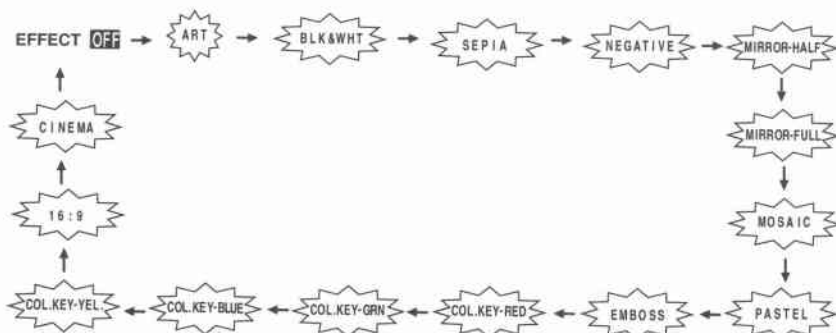


4. Press CUSTOM KEY 2 (the SET button) to activate the effect.
 - The viewfinder display stops flashing and shines continuously.
5. Press CUSTOM KEY 2 to cancel the effect.
 - The display starts flashing again. You can now select a different effect.

Note:

- Choosing EFFECT OFF deselects all digital effects.


Using the Built-in Video Light

E

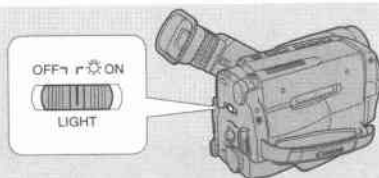

The built-in video light allows you to make clear, colourful recordings of poorly lit scenes. You can even record in complete darkness.

The recommended distance between the subject and camcorder is about 2 m (5 feet).

1. Turn the program selector to any of the camera modes except **Spotlight mode**.
2. Slide the light switch to the  **ON** position to turn on the video light.
 - The light will only turn on camera mode.
 - When inserting or ejecting a cassette the video light turns off automatically.
3. **Make your recording.**
4. **When you have finished using the light, slide the switch back to the OFF position.**

Notes:

- Continuous recording time is reduced with continued use of the video light. For longer recordings you may prefer to use a power adapter.
- The light becomes hot during use — keep it away from plastic or flammable materials, and do not touch it.
- Do not knock the light, especially during use.
- Do not use the wide-converter lens or the tele-converter lens with the video light.


Caution:

- Do not touch the bulb protector during and after use of the video light. It and surrounding areas become hot.

DANGER

- Not to be handled by children.
- Emits intense heat and light.
- Use with caution to reduce the risk of fire or injury.
- Keep a distance of at least 1.3 metres (4 feet) between the light and human or material subjects when using and until cool.
- Turn light off when not in use.

Replacing the bulb

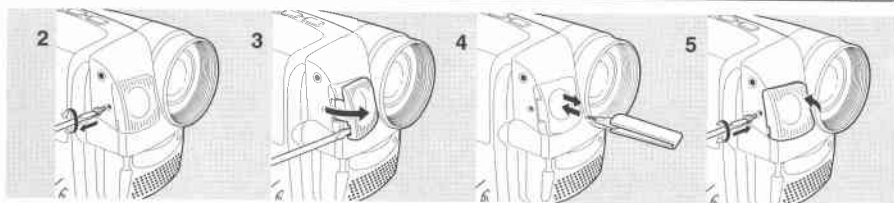

Use a Canon Halogen Bulb HL 6V3W T5 · G 2.5.


1. Turn the camera off and give the bulb time to cool down.
2. Use a small screwdriver to remove the screw.
3. Using a small screwdriver, pull the outer edge of the bulb protector out.
4. Using the supplied tweezers, pull out the old bulb and gently insert the new one.
 - Do not touch the new bulb with your bare hands — use the supplied tweezers.
5. Replace the bulb protector.
 - First insert the tab, then press fully in.

Cautions:


- Replace the video light bulb only with a Canon Halogen Bulb HL 6V3W T5 · G2.5 to prevent a fire hazard.
- Always disconnect the power source before replacing the bulb. Do not handle the bulb for about 30 minutes after disconnecting the power, until the bulb has cooled down.

Editing to a VCR

UC8000/UC8500/UC9500

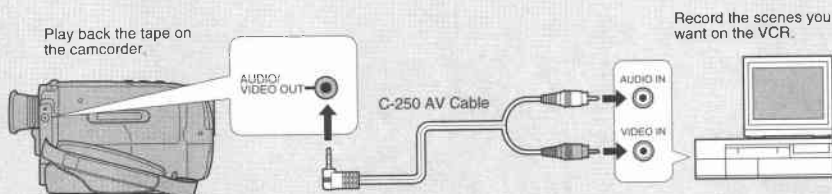

UC-X65Hi

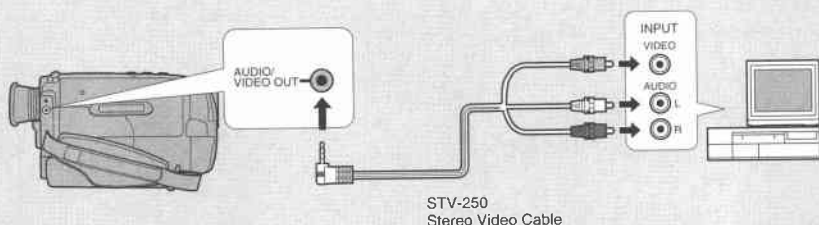


By connecting the camera to a VCR, you can edit your recordings in order to remove unwanted scenes — or combine different shots to create your own video production.

Preparations

- 1. Connect the camera to the VCR.**
 - See “Connecting for Playback on TV Screen” on p. 16.
- 2. Turn the TV on.**
 - Be sure to set it to the video channel, or set the TV/VIDEO selector to VIDEO.
- 3. Turn on the VCR and load a blank cassette.**
 - See your VCR instruction manual for details.
- 4. Set the VCR’s input selector to LINE, and put it in record pause mode.**
- 5. Turn the program selector to PLAY, and load your recorded cassette.**

Basic editing

1. Find a point on your recorded cassette slightly before the section you want to copy.
2. Start to play it back while you monitor the picture on the TV.
3. Start recording on the VCR as soon as the section you want to copy appears on the screen.
4. Pause the VCR at the end of the section you want to copy, then stop playback on the camera.
5. Repeat steps 1 to 4 until your edited recording is complete.

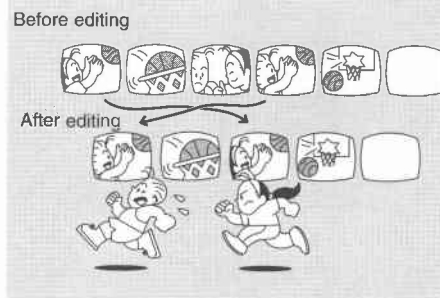**Note:**

- The quality of the edited tape will be slightly lower than that of the original.


Preparing the Camera

You should already have attached a power source to the camera and loaded a cassette. When you have completed the following steps, you will be ready to start recording.

E


Fasten the grip belt

- Release the Velcro fastening and hold the camera with your right hand while you adjust the belt with your left.

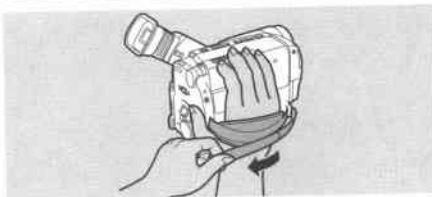


Prepare the lens cap

- Attach/remove the lens cap as shown.
- Hook the lens cap on to the grip belt while you are recording, and place it over the lens when you have finished.

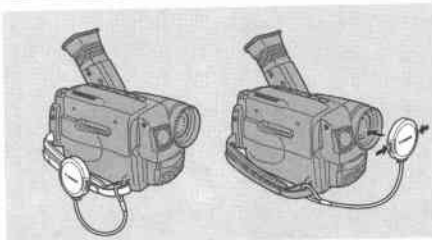

Adjust the viewfinder


- You can adjust the viewfinder to suit your eyesight. First put the camera in record pause mode (open the STANDBY cover and turn the program selector to camera mode).
- Adjust the viewfinder by sliding the viewfinder focusing switch to the left or right to bring the viewfinder display clearly into focus.
- The viewfinder also rotates through 90° to give a choice of shooting positions.

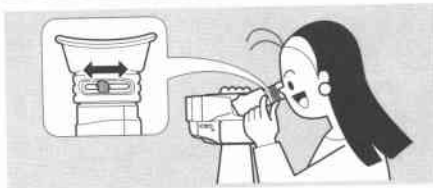

Advanced
Functions

E**Attach the shoulder strap**

- For extra security and portability, attach the shoulder strap before using the camera.
- Pass the ends through the attachment bars and adjust the length as shown.

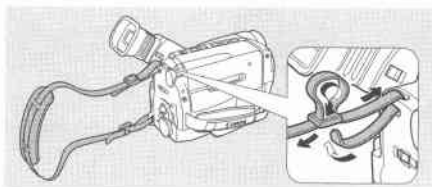**Note:**

- Be careful not to leave the viewfinder exposed to bright sunlight, or it will melt. (The light is concentrated by the viewfinder lens.) You may be able to move the viewfinder out of direct sunlight by pushing it upright, or by moving it back down to horizontal.

Battery pack notes

E

Charge the battery pack before you use it...


- You should charge a brand new battery pack twice before using it for the first time — a single charge may not be enough. Charge it completely (until the adapter's charge indicator glows steadily), then disconnect it and charge it again. Normally, you should not "double charge" the battery pack in this way.
- The battery pack will naturally discharge itself over time. You should charge it the same day you plan to use it, or the day before.
- The battery pack becomes warm during use (and during charging). Wait for it cool before charging or using it again. It may not reach full charge if warm.



...save power while you are recording...

- You will get more recording time from your battery pack if you turn the camera off between shots, instead of leaving it in record pause mode.
- Recording time will be shorter than usual at low temperatures. You can use the battery pack between 0° and 40°C (32°–104°F), but it works best between 10° and 30°C (50°–86°F).

...and don't recharge it until it is exhausted.

- The camera flashes a  warning when the charge has almost run out. After a few more minutes' use, the camera turns off automatically. You can now either recharge or store the battery pack.

Disconnect the battery pack when you are not using it.


- Even when it is turned off, camera will continue to slowly drain power from the battery pack. This means the battery pack will be discharged beyond the normal level if you leave it attached for a long time.

Keep the terminals clean.

- The camera, adapter or battery pack will not work properly if the terminals are dirty. Check them before use, and wipe them with a dry cloth or tissue if necessary.

DANGER!**Always attach the terminal cover.**

- Do not allow any metal objects to touch the terminals. The battery pack contains a great deal of energy and short-circuiting it may cause a fire. Attach the terminal cover whenever you are not using the battery pack.

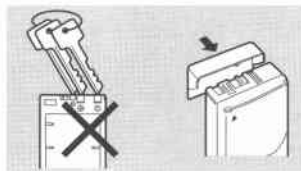**Treat the battery pack with care.**

- Keep it away from fire (or it might explode).
- Do not try to disassemble or modify it.
- Do not drop or knock it.
- Do not get it wet.

Remember, it may start to give you less recording time...

- If you recharge it without first completely discharging it.
- If you leave it attached to the camera (or a video light) for more than a week.
- If you don't use it for three months or more.

...but you should be able to “refresh” it.


- The power adapter has a refresher function which restores battery packs to full capacity (see below).
- If this does not improve the battery pack's performance, it has reached the end of its life and must be replaced.

The lifetime of Nickel-metal hydride battery packs

- Nickel-metal hydride battery packs produce electrical energy from a chemical reaction, so although they can be recharged, they do not last forever. Even if they are not used, their performance still degrades over time. If the battery pack runs out quickly even after you have “refreshed” it, it has come to the end of its useful and should be replaced.
- Be sure to fully charge and discharge the battery pack every three months even if you do not otherwise use it.

Refreshing the battery pack

If the battery pack starts to give less recording time, use the adapter's refresher function to restore it to full capacity. The adapter will first discharge the battery pack, and then recharge it.

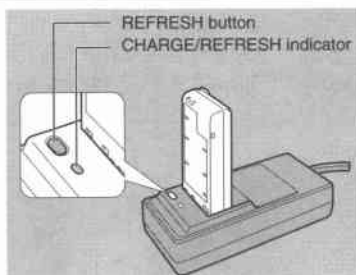

1. **Attach the battery pack to the adapter and plug it into a mains outlet.**
 - See p. 7.
2. **Press the REFRESH button.**
 - The CHARGE/REFRESH indicator flashes green to show that discharging is in progress. When the battery pack is discharged, the indicator begins to flash red and recharging begins.
3. **Remove the battery pack when discharging/recharging has finished.**
 - The indicator glows steadily red when recharging is completed.
 - If you only want to discharge the battery pack, there is no need to plug in the adapter. In this case, you can remove the battery pack when the CHARGE/REFRESH indicator stops flashing green.



Discharge and recharge times

Battery pack	BP-818	BP-711	BP-714	BP-729
Discharge	7 hr.	4 hr.	5 hr.	10 hr.
Recharge	1 hr. 40 min.	1 hr. 10 min.	1 hr. 20 min.	2 hr. 30 min.
Total refreshing charge	8 hr. 40 min.	5 hr. 10 min.	6 hr. 20 min.	12 hr. 30 min.

- These times are approximate.


Installing the backup battery

Pull out the battery holder from the base of the camera, and insert the CR2025 lithium battery with the + side facing upwards.

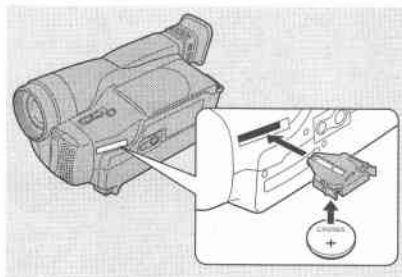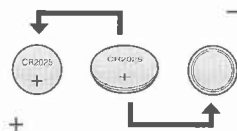

Click the holder back into place.

 - This backup battery allows the camera to remember the data and time and other settings when the main power source is removed. It has a life span of about a year.

When it needs replacing (or if it has not been installed), the  mark flashes in the viewfinder. Remove the old battery by pushing it down and pulling it out from the left side. Make sure to attach a power source to the camera first, and turn it off using the STANDBY cover. This way it will remember your chosen settings when you change the battery.

WARNING!

The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C (212°F) or incinerate. Replace the battery with a Sony, Sanyo or Panasonic CR2025, or Duracell DL2025. Use of another battery may present a risk of fire or explosion. The used battery should be handed back to the supplier for safe disposal.


Cautions:

- Do not pick up the battery using tweezers or other metal tools — this will cause a short circuit.
- Wipe the battery with a clean, dry cloth to ensure proper contact.
- Keep the backup battery out of reach of children — if it is swallowed, contact a physician immediately, as the battery case may break down and the battery fluids damage the stomach and intestines.
- Do not disassemble, heat, or immerse the battery in water, to avoid the risk of explosion.

Video System

(Availability differs from area to area.)

E

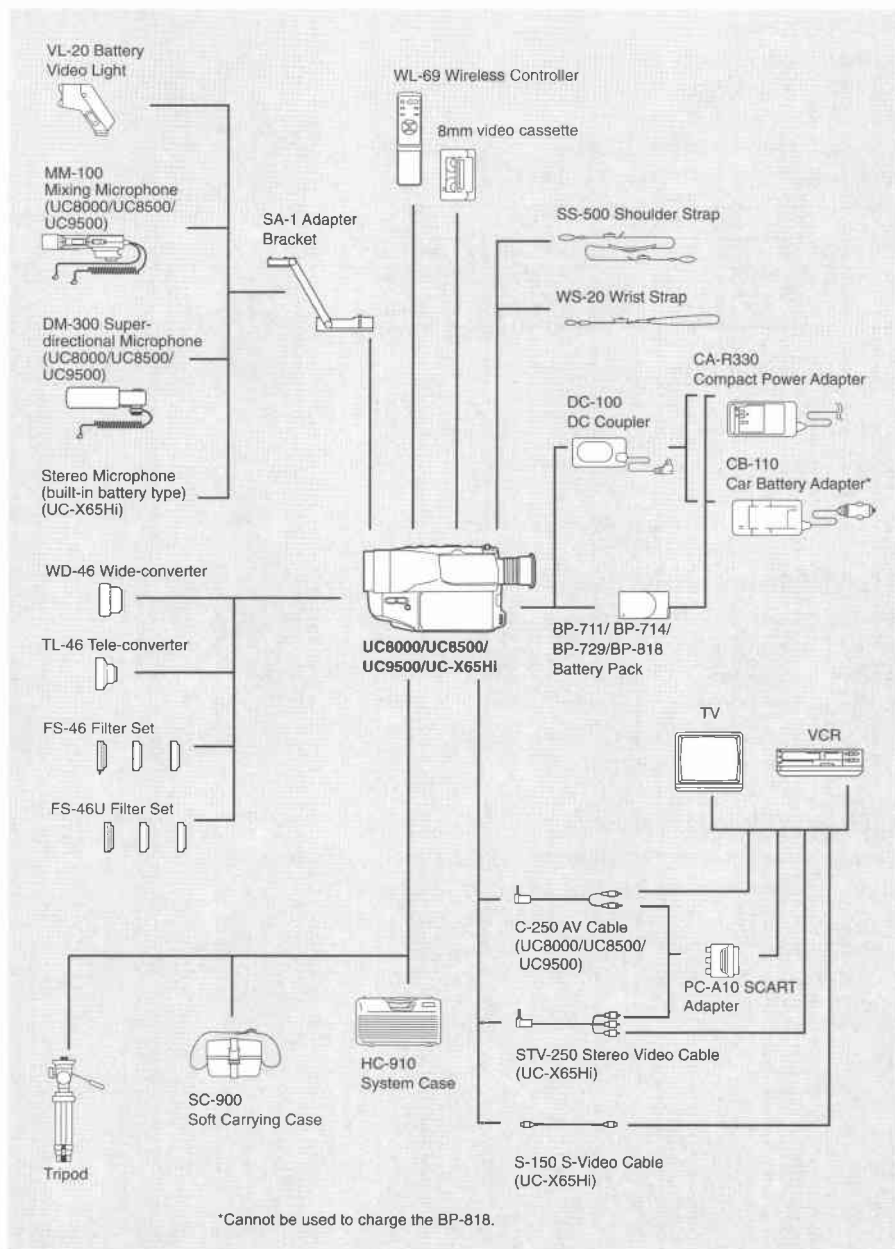

Additional
Information

Optional Accessories


E

Battery Packs

As well as the battery pack supplied with your camera, a whole range of optional battery packs is available.

Recording times for NiCD battery packs (BP-700 series) are as follows (video light off):


	BP-711	BP-714	BP-729
UC8000	85 min.	120 min.	240 min.
UC8500/UC9500	80 min.	110 min.	220 min.
UC-X65Hi	70 min.	100 min.	200 min.

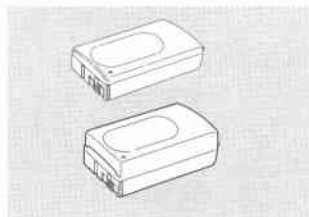

CB-110 Car Battery Adapter

To power your camera or recharge battery packs on the move, the car battery adapter plugs into your car's cigarette lighter socket and runs off a 12/24 V negative ground battery.


- Cannot be used to charge the BP-818.

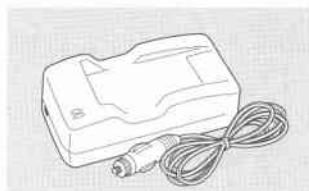

TL-46 Tele-converter

This tele-converter lens increases the focal length of the camera lens by a factor of 1.4. The zoom and autofocus operate as usual, so you can take full advantage of the extra range.


- If you have a "professional-type" monitor, there may be some vignetting.

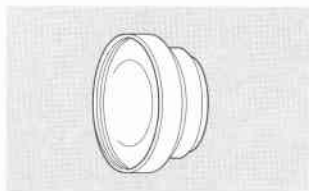

WD-46 Wide-converter

This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views — and you can still use both zoom and autofocus.

- There may be some vignetting at the extreme wide angle position.

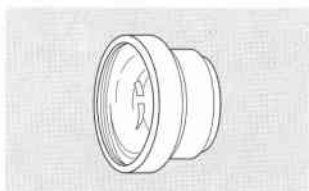


FS-46 Filter Set

Three special effects filters to add a creative touch to your recordings:


multiple-image, R-cross and zoom-spot.

- Turn autofocus off when using special effects filters.
- If you have a “professional-type” monitor, there may be some vignetting.

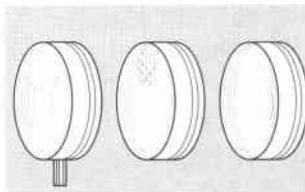

FS-46U Filter Set

Ultraviolet, neutral density and circular polarising filters help you take control of difficult lighting conditions.

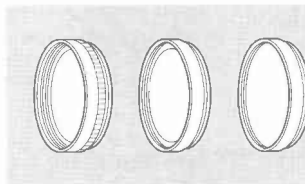


VL-20 Battery Video Light

This compact yet powerful video light can be used for both indoor and outdoor shooting. There are no cables — the BP-818 Battery Pack fits neatly inside, powering it for up to 35 minutes. For longer recordings, the BP-729 gives about 50 minutes' use respectively. The SA-1 Adapter Bracket is required.




MM-100 Mixing Microphone (UC8000/UC8500/UC9500)

The MM-100 mixes live sound and music, so you can create the ideal soundtrack for your video productions.

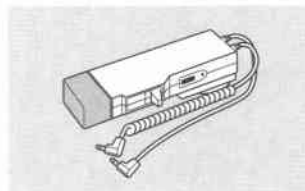


DM-300 Super-directional Microphone (UC8000/UC8500/UC9500)

This highly sensitive super-directional microphone helps you obtain quality sound recordings even in the most difficult conditions.

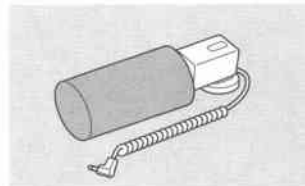

SA-1 Adapter Bracket


Attaches a video light or microphone securely to the camera.

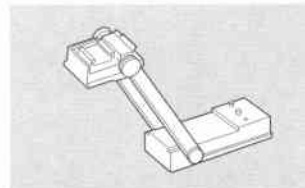

E


SC-900 Soft Carrying Case

This lightweight bag keeps the camera within easy reach without weighing you down or getting in the way.

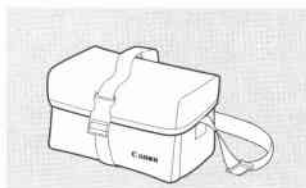

WS-20 Wrist Strap

Provides an extra measure of protection for active shooting.

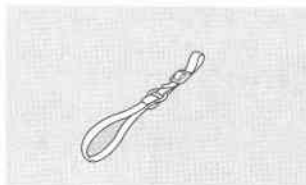

HC-910 System Case

This solid, lockable case provides safe and stylish protection for the camera during transportation and storage.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing this same mark.

Cautions and Maintenance

Cautions

E

Avoid high temperatures and high humidity.

- Do not leave the camera inside a car in hot weather, for example.
- Be careful of heat radiating from video lighting equipment.
- Do not take the camera into a humid room.

Avoid sudden changes in temperature.

- If you take the camera from a cold place to a warm place, condensation may form on the lens and internal parts (see p. 61).

Do not point the lens or viewfinder at strong light sources.

- Never point it at the sun, and do not leave it aimed at a bright subject.
- Be especially careful when leaving the camera on a tripod.

Avoid magnetic or electric fields.

- Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.

Do not expose the camera to water.

- Cover the camera when you are recording in light rain or mist.
- There is a risk of electric shock if water gets inside the camera — contact qualified service personnel as soon as possible.

Protect the lens.

- Sand and dust can damage the lens — be especially careful on windy days.

Handle the camera gently.

- Vibration or shock can cause damage.
- Do not use the viewfinder as a carrying handle.

Do not disassemble the camera.

- This is very dangerous as there is a risk of electric shock — if the camera does not function properly, take it to qualified service personnel.


Note:

- These cautions also apply to accessories such as battery packs and cassettes.

Maintenance

Viewfinder

- To clean the viewfinder screen push the viewfinder up and press down the small catch to release the rubber eyecup that you can then slide off.
- For the UC8000, gently lift off the lens underneath from the small tab at the top (using a small pointed object if necessary).
- Clean the viewfinder screen with a commercially available blower brush.
- Replace the eyecup by sliding it, until it clicks back into position.

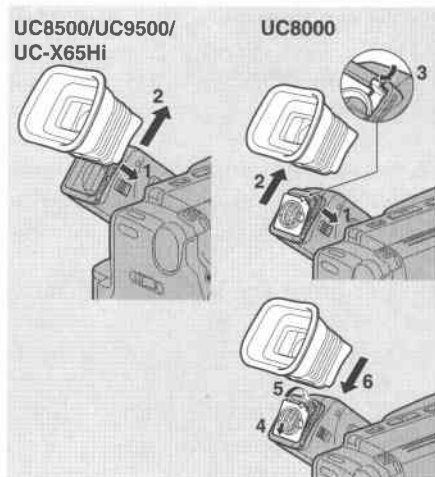

Camera body and lens

- Use a soft, dry cloth to clean the camera body or lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

Video heads

- Clean the video heads only when necessary, preferably using Canon's CC-8 Video Head Cleaning Cassette.
- Do not use a wet-type cleaning cassette as this can cause damage.

Storage

If you do not intend to use the camera for some time, store it in an area which is free of dust and moisture, and where the temperature is no higher than 30°C (86°F). After storage, check each part and function of your camera to make sure everything is still working properly.

Condensation

E

Condensation may form on the camera when it is moved from a cold place to a warm place. Using the camera while condensation is present can damage both the tape and the camera.

Condensation may become a problem:




When you take the camera from a cold place to a warm room



When a cold room is heated rapidly



When the camera is left in a humid room

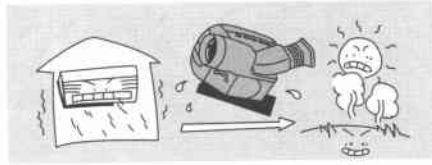


When the camera is taken from an air-conditioned room to a warm, humid place

Protecting the camera from condensation

- Before you bring the camera to a warm or humid place where condensation is likely to be a problem, unload the cassette and put the camera in a plastic bag. Wait until the camera reaches room temperature before you take it out of the bag.

What happens when condensation is detected

- The operation indicator flashes the  mark flashes in the viewfinder. If there is a cassette in the camera, it stops automatically and EJECT flashes in the viewfinder.
- The camera may not detect the condensation immediately — the condensation warning may not start flashing for 10 to 15 minutes.
- You cannot load a cassette when condensation is detected.

What you should do

- Remove the cassette, leave the cassette compartment open, and turn the camera off.
- Leave it in a dry place until the condensation evaporates. After the condensation warning stops flashing, wait at least another hour before trying to use the camera.

Using the camera abroad

Power sources

- You can use the compact power adapter to operate your camera and charge battery packs in any country where the electricity supply is between 100 and 240 V AC, 50–60 Hz. Contact your Canon dealer for information about plug adapters for overseas use.

TV playback

- Although you can always play back your recordings in the viewfinder, your camera can only be connected to TVs which use its PAL system. This TV system is used in the following countries:

Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Denmark, Finland, Germany, Hong Kong, Iceland, India, Indonesia, Ireland, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Portugal, Qatar, Sierra Leone, Singapore, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, United Arab Emirates, United Kingdom, Yemen, former Yugoslavia, Zambia.

Troubleshooting

Refer to this checklist first if you have any problems with your camera. Possible explanations are given below each problem on the list — turn to the page numbers in brackets for more information.

E

Make sure that the camera is properly connected if you are using it with a TV or VCR. Consult your dealer or service outlet if problems persist.

? Nothing happens when I press the buttons.

- You haven't turned the camera on (p. 10).
- You haven't loaded a cassette, or it is set for erasure prevention (p. 8).
- The tape has reached the end.
- The battery pack is exhausted, or not properly attached (p. 7, 51–53).
- You need to select a different recording program to use that function (p. 35).

? The camera turned itself off.

- You left it in record pause mode for more than about five minutes (p. 10).
- The battery pack is exhausted (p. 7, 51–53).

? The start/stop button doesn't work.

- The program selector is not set to camera mode (p. 10).
- You haven't loaded a cassette, or it is set for erasure prevention (p. 8).
- The Tape has reached the end.

? There's no picture in the viewfinder.

- The program selector is not set to camera mode (p. 10).

? The Custom Keys don't work.

- The focus is set to manual (p. 37).

? The camera won't focus.

- The camera is on manual focus (p. 37).
- The viewfinder lens needs adjusting (p. 49).
- The lens is dirty (p. 60).
- Some subjects are not suitable for autofocus.

E



Subjects behind glass



 
Several subjects in the viewfinder at different distances



Slanted subjects



Rapidly moving subjects



Subjects without much contrast (such as a white wall)



Subjects with horizontal stripes



Dark subjects



Subjects which reflect too much light (such as shiny car exteriors)



Night scenes and low light conditions



Subjects not in the centre of the viewfinder

In these situations, you will often get better results using manual focus (see p. 38).

? The video light won't turn on.

- The program selector is in PLAY mode.
- The STANDBY cover is closed.
- The lamp has reached the end of its life.

? The ► (Play) button doesn't work.

- The program selector is not set to PLAY (p. 14).
- You haven't loaded a cassette (p. 8).
- The tape has reached the end.

? There's a bright stripe on the screen.



- When you are recording in dark places, a bright light in the scene may cause a vertical bar, called smear, to appear on the screen.

? The playback picture is rough.



- If your recordings do not play back smoothly, clean the video heads (p. 60).

? There's no picture on the TV screen, even though the tape is moving.

- The video heads need cleaning (p. 60).
- The TV/VIDEO selector on the TV isn't set to VIDEO (p. 16–18).

? The wireless controller doesn't work.

- The remote sensor is turned off (p. 26).

? The tally lamp doesn't flash.

- It is turned off (p. 27).

? The power indicator is flashing.

- Check the viewfinder displays (p. 66–67).

? Malfunction

- External interference may cause the camera's microprocessor to malfunction temporarily. If random letters appear in the viewfinder or if normal operation is interrupted, remove and then replace the power source (and if necessary, the backup battery).


About the LCD Viewfinder (UC8500/UC9500/UC-X65Hi)


Liquid Crystal Viewfinder use extremely high-precision technology, but there will be pixels which do not light up or which are continuously lit. This is not an error and will not affect recording.

Viewfinder Displays


E

Use the wireless controller's ON SCREEN button to choose whether or not the viewfinder displays appear on the TV screen. They are not recorded to the tape if you start recording with the camera.

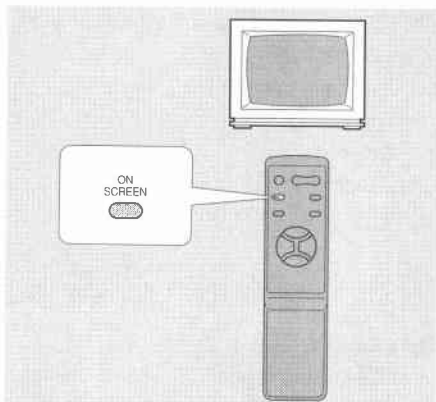

 indicates a flashing display.

 Date and time display
(p. 28)



The camera is ejecting
the tape (p. 8).



The date and time have
not been set. This
display will not be
recorded (p. 28)



The safety mechanism
is activated. Unload
the cassette and turn
the camera off. Turn it
on again and reload
the cassette.



Title (p. 30)



Record pause mode
(p. 10)



No cassette is loaded,
or the cassette is set
for erasure prevention
(p. 8).



Recording (p. 10)



The tape is within five
minutes of the end.



Playback (p. 14)



The tape has reached
the end.



Fast forward (p. 14)



Tape return, forward
and reverse (p. 15)



Rewind (p. 14)



The battery pack is
nearly exhausted
(p. 7, 51-53).



The tape is stopped
(p. 14).



The backup battery is
nearly exhausted, or
not inserted properly
(p. 54).



Additional
Information

Optical zoom (p. 12)



Digital zoom (p. 12)



Image stabilizer
(UC9500/UC-X65Hi
only) (p. 25)



Remote sensor is
turned off (p. 26)



Tally lamp is turned
off (p. 27)



Tally lamp and
remote sensor are
turned off (p. 26–27).



Specialised AE
programs (p. 36)



Autofocus is turned
off (p. 38)



Backlight
compensation (p. 39)



Digital effects:
The display flashes
when the effect is
being selected, and
appears steadily when
it is activated
(p. 41–44).



Condensation
warning (p. 60–61)



Custom key settings

(UC9500/UC-X65Hi
only) (p. 25)



(During manual
focus) (p. 38)

Tape counter



The tape counter indicates the
approximate running time of the tape
— 1 hour, 23 minutes and 45 seconds
in this example. The tape counter is
reset when a cassette is loaded, or
when you press the COUNTER
RESET button (p. 15).

Recording reminder



When you start recording, the camera
counts from 0SEC to 10SEC. Shots
which are shorter than 10 seconds may
be difficult to edit later. On the other
hand, if you are not planning to edit
the recording, remember that a shot
which does not contain action should
generally last no longer than 10
seconds.

Nomenclature

E

C. (counter) RESET button (p. 15)

▶▶ (fast forward) button (p. 14)

REC SEARCH + button (p. 34)

◀◀ (rewind) button (p. 14)

REC SEARCH - and

⏮ (record review) button (p. 34)

▶ (play) button (p. 14)

AF/MF button (p. 37-38)

■ (stop) button (p. 14)

BLC button (p. 39)

⏸ (pause) button (p. 14)

FADE button (p. 33)

Lens (p. 60)

Remote sensor
(p. 26)

Microphone
(p. 19)

Tally lamp (p. 27)

Battery pack
(p. 7, 51-53)

MENU button
(p. 21)

Custom key 2
(p. 23)

Custom key 1
(p. 23)

EJECT ▲ button
(p. 8)

Zoom control
(p. 12)

AUDIO/VIDEO OUT
terminal (p. 16-18)

Cassette compartment
(p. 8)

Grip belt (p. 49)


RELEASE switch
(p. 60)

MIC terminal (p. 19)

S-video terminal
(UC-X65Hi)
(p. 17)

Video light (p. 45)

Additional
Information

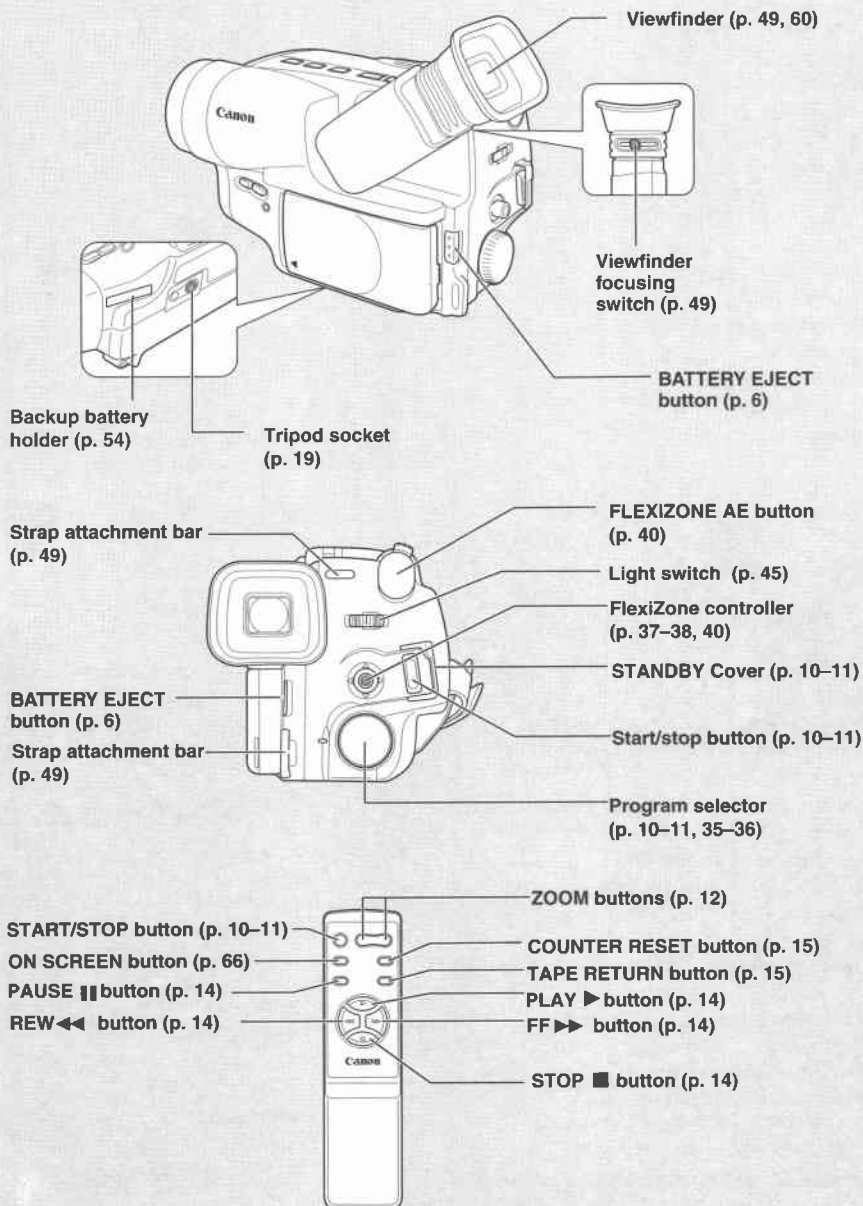

Specifications

UC8000/UC8500/UC9500/UC-X65Hi

E

Power supply (rated): 6V DC

Power consumption: UC8000: 4.0 W

UC8500/UC9500: 4.3 W

UC-X65Hi: 4.9 W

Television System: CCIR standard

(625 lines, 50 fields)

PAL colour signal

Video recording system: 2 rotary heads,

helical scanning system; luminance

signal: FM azimuth recording;

chrominance signal: converted subcarrier

phase shift recording (8mm video

standard)

Audio recording system: Frequency

multiplexing with the video signal

UC8000/UC8500/UC9500: 1 channel

UC-X65Hi: 2 channels

Image sensor: 1/4-inch CCD (charge-coupled device)

UC8000/UC8500/UC9500: 320,000

pixels (290,000 effective pixels)

UC-X65Hi: 570,000 pixels (520,000 effective pixels)

With image stabilizer on UC9500:

230,000 pixels

UC-X65Hi: 370,000 pixels

Tape format: 8mm videocassette, metal

evaporated/metal particle (UC-X65Hi),

metal particle

(UC8000/UC8500/UC9500)

Tape speed: 20.05 mm/s

Maximum recording time: 90 minutes

(with a P5-90 cassette)

Fast forward/rewind time: Approx. 6

minutes (with a P5-90 cassette)

Lens: f/1.6–3.8 22× power zoom,

4.0–88 mm

Focusing system: TTL autofocus, manual

focus possible

Minimum focusing distance: 1 cm

(3/8 in) on a maximum wide angle

Maximum shutter speed: 1/1000 sec

Minimum illumination:

UC8000/UC8500/UC9500: 0.4 lx

UC-X65Hi: 0.9 lx

Recommended illumination: More than 100 lx

Filter diameter: 46 mm

Electronic viewfinder:

UC8000: 0.5 inch monochrome CRT

UC8500/UC9500/UC-X65Hi: 0.55 inch colour LCD, 113,000 pixel

Microphone:

UC8000/UC8500/UC9500: Non-

directional electret condenser microphone

UC-X65Hi: Stereo electret condenser microphone

Output level:

UC8000/UC8500/UC9500/UC-X65Hi:

Video terminal: 1 Vp-p/75 ohms

unbalanced

Audio terminal: -10 dBV, less than 3

kohms, unbalanced

UC-X65Hi: S-video terminal: 1 Vp-p (Y signal), 0.3 Vp-p (C signal)

Operating temperature range: 0°–40°C

Dimensions: 99 × 106 × 205 mm

Weight: UC8000: 735 g

UC8500/UC9500/UC-X65Hi: 720 g

Video light:

Central luminosity: Approx. 12 lx at 2m

Colour temperature: Approx. 2,900K

Required bulb:

Canon Halogen Bulb

HL 6V3W T5 · G2.5

Bulb life: Approx. 50 hours

Power supply: Battery pack or DC coupler mounted on the camera

BP-818 Battery pack

Battery type: Rechargeable nickel metal hydride battery

Rated voltage: 6V DC

Operating temperature range: 0°–40°C

Battery capacity: 1,800 mAh

Dimensions: 90 × 47 × 21 mm

Weight: 185 g

Weight and dimensions are approximate.

Errors and omissions excepted.

Subject to change without notice.

Index

A

Abroad, Using the Camera, 62
Accessories, 2, 56–58
Adapter, Mains, 6–7, 53
AE programs, 36
ART, 41
Audio/Video Terminal, 16–18, 47
Auto Recording, 35

B

Backup Battery, 54
Basic Recording, 10–11
Battery Pack, 7, 51–53
Black&White, 41

C

Cables, 2, 16–18, 47
Cassette, 8–9
Cautions and Maintenance, 59–60
Charging the Battery Pack, 7, 51–53
Cinema, 43
Cleaning the camera, 60
Colour Key, 43
Compact Power Adapter, 6–7, 53
Compensation for Backlight, 39
Condensation, 61
Connection to TV or VCR, 16–18
Custom Keys, 23

D

Date and Time Display, 28–29
DC Coupler, 6
Digital Effects, 41–44
Digital Zoom, 12
Discharge the Battery Pack, 51–53

E

Editing to a VCR, 47–48
Exposure Programs, 35–36

F

Fade, 33
Fast forward/Fast Forward Playback, 14
Feedback, 16–18
FlexiZone AF, 37
Focusing, 37–38

G

Grip belt, 49

H

Head Cleaning, 60
High-Speed Search, 15

I

Image Stabilizer, 25
Introducing the Camcorder, 4

L

Lithium Battery, 54
Loading Cassettes, 8

M

Maintenance, 60
Making Better Videos, 19–20
Manual Focus, 38
Microphone, 19
Mirror, 42
Mosaic, 42

N

Negative-Positive Conversion, 41
Nomenclature, 68–69

O

Optional Accessories, 56–58

P

Pastel, 42
Pause, Record, 10
Playback, 14
Playback Connection, 16–18
Portrait, 36
Power Sources, 6
Preparing the camera, 49–50

R

Recharging the Battery Pack, 51–53
Recording, 10–11
Recording Programs, 35–36
Record Pause Mode, 10
Record Review, 34
Record Search, 34
Refreshing the Battery Pack, 53
Remote Sensor, 26
Rewind/Rewind Playback, 14–15

S

Sand & Snow, 36
Sensor, Remote, 26
Sepia, 41
Shoulder Strap, 50
Specifications, 70
Sports, 36
Spotlight, 36
Storage, 60

E

E**T**

Tally lamp, 27
Tape Counter, 15, 67
Tape Return, 15
Telephoto, 12
Temperature 51, 59
Time Display, 28–29
Titles, 30
Tripod, 19
Troubleshooting, 63–65

V

Video Cassettes, 8–9
Video Light, 45
Video System, 55
Viewfinder, 49, 60
Viewfinder Displays, 66–67

W

Wide Angle, 12
Wireless Controller, 26

Z

Zooming, 12–13