




Lenco

DIGITAL ALARM CLOCK RADIO

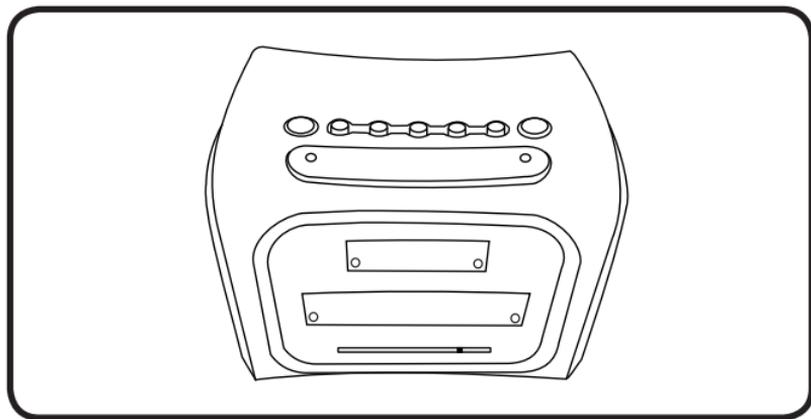

INSTRUCTION MANUAL

For information and support, www.lenco.eu



CE


WARNINGS**CAUTION**

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

ATTENTION

To reduce the risk of electric shock, do not remove the cover.

There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT

DO NOT THROW BATTERIES IN FIRE !

THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING.

ENSURE A MINIMUM DISTANCE OF 5 CM AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.

GB 1



ENSURE THAT THE VENTILATION IS NOT IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLE-CLOTHS, CURTAINS, ETC..

DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.

DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.

TAKE ATTENTION TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.

USE THE APPARATUS ONLY IN MODERATE CLIMATES (NOT IN TROPICAL CLIMATES).

DO NOT EXPOSE THE APPARATUS TO DRIPPING OR SPLASHING.

DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE APPARATUS.



BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.




THE MARKING INFORMATION IS LOCATED AT THE BOTTOM OF APPARATUS.

The mains plug shall remain readily operable.

In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.

GB 2



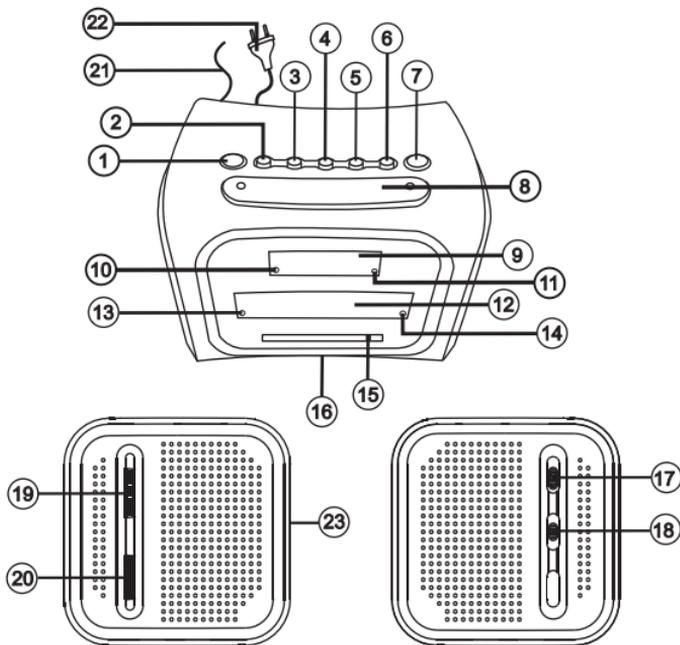

GB 3



LOCATIONS OF PARTS AND CONTROLS

- | | |
|-----------------------|-------------------------------|
| 1. Alarm 1 Button | 13. Alarm 1 standby indicator |
| 2. Alarm 2 button | 14. Alarm 2 standby indicator |
| 3. Time set button | 15. Dial scale |
| 4. Hour Button | 16. Battery compartment |
| 5. Minute Button | 17. Alarm 2 switch |
| 6. Sleep button | 18. Alarm 1 switch |
| 7. Radio Button | 19. Volume control |
| 8. Snooze button | 20. Tuning control |
| 9. Alarm display | 21. Wire antenna |
| 10. Alarm 1 indicator | 22. 230V power supply cable |
| 11. Alarm 2 indicator | 23. Speaker |
| 12. LED display | |



POWER SUPPLY

This unit is designed to operate from AC230~50Hz household mains supply.
The 3V 2 x "AAA " size batteries is used for clock back up only.

Note: When inserted a back up battery the unit will conserve the settings during power outage.

the disconnect device shall remain readily operable.



GB 4





LISTEN TO THE RADIO

1. Press the Radio button to turn the radio on.
2. Adjust the Volume Control into the desired listening level and select your favourite station with the Tuning Control.
3. To turn off the radio, press Radio button.

TO SET THE TIME

1. Press and hold the Time set button.
2. Press the Hour button to set hours.
3. Press the Minute button to set minutes.
4. Release the Time set button. The correct time is shown on the display.

SETTING THE ALARM

Hold the ALARM 1 button for 2 seconds and press HOUR button to set the ALARM 1 hour digit, hold the ALARM 1 button press the MINUTE button to set the ALARM 1 minute digit. Hold the ALARM 2 button for 2 seconds and press HOUR button to set the ALARM 2 hour digit, hold the ALARM 2 button press MINUTE button to set the ALARM 2 minute digit, the ALARM 2 will show on alarm display when ALARM 2 button is pressed.

SETTING THE WAKE MODE

Switch the ALARM 1-AUTO/BUZZER/OFF and or ALARM 2-AUTO/BUZZER/OFF to select the mode below:

AUTO: will wake up by radio when the time reach

BUZZER: will wake up by buzzer when the time reach

OFF: no wake up

The ALARM 1 standby indicator or ALARM 2 standby indicator on the real time display become on when select AUTO or BUZZER.





SNOOZE FUNCTION

When the radio or buzzer sounds, press the SNOOZE to temporarily stop for 9min until alarm reach, press ALARM 1-SET/OFF to terminate the ALARM 1, press ALARM 2-SET/OFF to terminate the ALARM 2.

TO USE THE SLEEP TIMER

When the radio is power on, press SLEEP button to activate the sleep timer, sleep time will display 00-10-20-30-40-50-60-70-80-90 by each press, timer will start after SLEEP button release for 2sec, and the radio will auto shut off when timer reach, or press the RADIO button to turn off immediately.

ANTENNA

The FM radio has a flexible wire antenna on the back side of the unit, uncoil the wire and extend to its full length for best reception.



GB 6



SPECIFICATIONS

Power Source:	AC : 230V ~ 50Hz DC : 3V backup (2 x "AAA")
Frequency range:	FM : 87.5 - 108 MHz
Power Consumption	4.5 W
Dimension:	126(L) x 99(D) x 101(H) mm
Weight	0.56 kg

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

For information and support, www.lenco.eu