


# JVC®

## COMPACT VHS CAMCORDER

# GR-SXM770A GR-SXM77EA

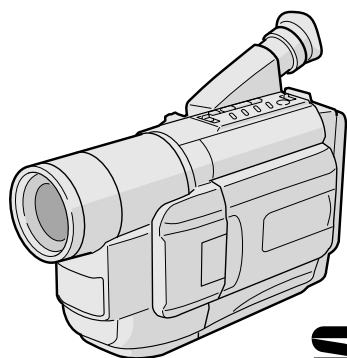

**DSC**  
DIGITAL  
STILL CAMERA

**S VHS G** VHS  
PAL  
625

**Super VHS**  
**Super VHS ET**

ENGLISH

### CONTENTS

**SAFETY PRECAUTIONS** 2 - 3

**PROVIDED ACCESSORIES** 4

**AUTOMATIC  
DEMONSTRATION** 6

**GETTING STARTED** 7 - 16

**VIDEO RECORDING &  
PLAYBACK** 17 - 26

VIDEO RECORDING ..... 18 - 21

VIDEO PLAYBACK ..... 22 - 26

**DIGITAL STILL CAMERA (D.S.C.)  
RECORDING &  
PLAYBACK** 27 - 34

D.S.C. RECORDING ..... 28 - 29

D.S.C. PLAYBACK ..... 30 - 34

**ADVANCED  
FEATURES** 35 - 57

**REFERENCES** 58 - 71

TROUBLESHOOTING ..... 59 - 61

DETAILS ..... 62 - 63

INDEX ..... 64 - 67

CAUTIONS ..... 68 - 70

SPECIFICATIONS ..... 71

## INSTRUCTIONS

LYT0675-001B

**EN**

**Dear Customer,**

Thank you for purchasing the JVC Compact VHS camcorder. Before use, please read the safety information and precautions contained in the following pages to ensure safe use of this product.

**Using This Instruction Manual**

- All major sections and subsections are listed in the Table Of Contents on the cover.
- Notes appear after most subsections. Be sure to read these as well.
- Basic and advanced features/operation are separated for easier reference.

**It is recommended that you . . .**

- .... refer to the Index (☞ pgs. 64 – 67) and familiarise yourself with button locations, etc. before use.
- .... read thoroughly the Safety Precautions. They contain extremely important information regarding the safe use of this product.


You are recommended to carefully read the cautions on pages 68 – 70 before use.

## SAFETY PRECAUTIONS

**WARNING:**  
**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**CAUTIONS:**

- If you notice smoke or a peculiar smell coming from the camcorder or AC Adapter, shut it down and unplug it immediately. Continue using the camcorder or AC Adapter under these conditions could lead to fire or electric shock. Contact your JVC dealer. Do not attempt to repair the malfunction yourself.
- To prevent shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified personnel.
- When you are not using the AC Adapter for a long period of time, it is recommended that you disconnect the power cord from AC outlet.

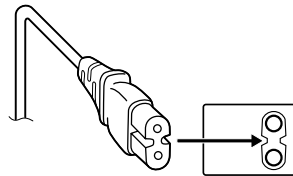**CAUTION:**

**To avoid electric shock or damage to the unit, first firmly insert the small end of the power cord into the AC Adapter until it is no longer wobbly, and then plug the larger end of the power cord into an AC outlet.**



Cassettes marked “**S-VHS**” and “**VHS**” can be used with this camcorder. However, S-VHS recordings are possible only with cassettes marked “**S-VHS**”.

**NOTES:**

- The rating plate (serial number plate) and safety caution are on the bottom and/or the back of the main unit.
- The rating information and safety caution of the AC Adapter are on its bottom.

**CAUTIONS:**

- This camcorder is designed to be used with PAL-type colour television signals. It cannot be used for playback with a television of a different standard. However, live recording and LCD monitor/viewfinder playback are possible anywhere.
- Use the JVC BN-V11U/V12U/V20U/V400U battery packs and, to recharge them or to supply power to the camcorder from an AC outlet, use the provided multi-voltage AC Adapter and Power Cord. (An appropriate conversion adapter may be necessary to accommodate different designs of AC outlets in different countries.)

When the equipment is installed in a cabinet or on a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm or more on both sides, on top and at the rear).

Do not block the ventilation holes.

(If the ventilation holes are blocked by a newspaper, or cloth etc. heat may not be able to get out.)

No naked flame sources, such as lighted candles, should be placed on the apparatus.

When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.

The apparatus shall not be exposed to dripping or splashing.

Do not use this equipment in a bathroom or places with water.

Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups etc.) on top of this unit.

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

### ATTENTION USERS OF RECHARGEABLE BATTERIES

DO NOT DISPOSE RECHARGEABLE BATTERIES OR PRODUCTS POWERED BY NON-REMOVABLE RECHARGEABLE BATTERIES, THESE BATTERIES AND PRODUCTS CAN BE RECYCLED.

AT THE END OF NORMAL LIFE,

IN AUSTRALIA, RETURN TO YOUR POINT OF PURCHASE OR MAIL TO:

Hagemeyer (Australasia) B.V. 5-7 Garema Circuit Kingsgrove NSW 2208 Australia


**Attn :** Service Dept.

 
**Phone :** (02)750 3777

IN NEW ZEALAND, PLEASE RETURN BATTERIES BY MAIL TO:


Hagemeyer (NZ) Limited P.O. Box 100589 Auckland 1000

**Phone :** (09)415 8758

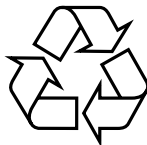





- AC Adapter  
AP-V10A or AP-V10EA

 


- Power Cord

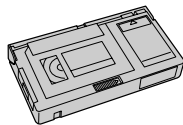


- Cassette Adapter  
C-P7U

 

- Battery Pack  
BN-V11U

 

- Remote Control Unit  
RM-V716U

 

- Shoulder Strap



 
- Lens Cap



- AAA (R03) Battery x 2  
(for Remote Control Unit)



- AA (R6) Battery  
(for Cassette Adapter)



- CD-ROM  
The CD-ROM contains the following 4 software programmes:

- Picture Navigator

Presto!

- Mr. Photo
- PhotoAlbum
- ImageFolio

 


- Core Filter x 5  
(for provided A/V Cable,  
S-Video Cable, AC Adapter  
and PC Connection Cable)




(for Windows® PC)


- PC Connection Cable



- S-Video Cable

 


- A/V (Audio/Video) Cable

 

- Editing Cable  
(ø3.5 mini-plug cable)

## How To Attach The Core Filter


Attach the provided Core Filters to the provided A/V Cable, S-Video Cable, AC Adapter and PC Connection Cable. The Core Filter reduces interference.

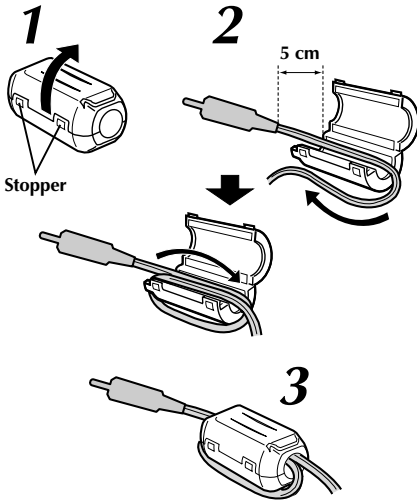

- 1 Release the stoppers on both ends of the Core Filter.
- 2 Run the cable through the Core Filter, leaving approx. 5 cm of cable between the cable plug and the Core Filter. Wind the cable around the outside of the Core Filter as shown in the illustration.
  - Wind the cable so that it is not slack.


**NOTE:**  
Take care not to damage the cable.
- 3 Close the Core Filter until it clicks shut. Connect the end of the cable with the Core Filter to the camcorder.

With the provided AC Adapter, attach Core Filters to both ends of the cable as shown below.

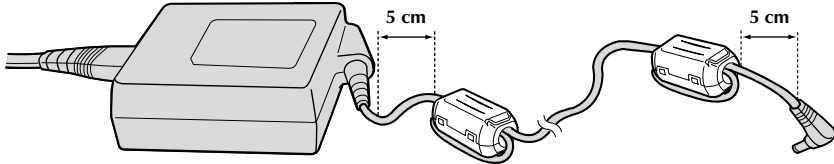


## How To Attach The Lens Cap

To protect the lens, attach the provided lens cap to the camcorder as shown in the illustration.

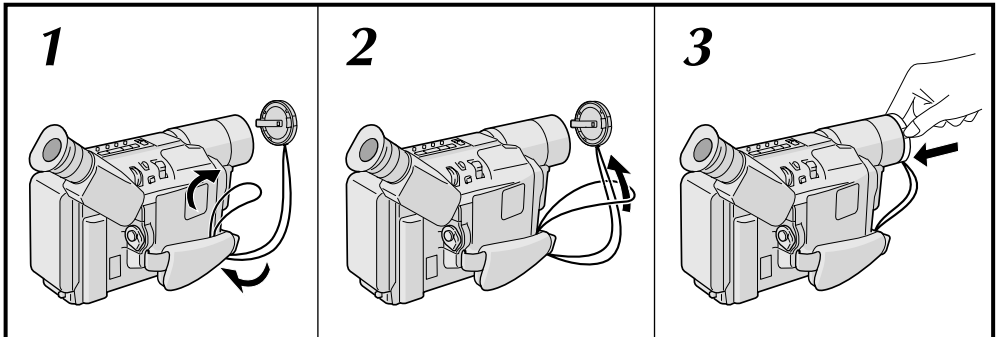

**Automatic Demonstration takes place when "DEMO MODE" is set to "ON" (factory-preset).**

- Available when the Power Switch is set to "A" or "M" and the VIDEO mode is selected (the DSC Lamp is not lit).
- Operating the Power Zoom Lever during the demonstration stops the demonstration temporarily. If the Power Zoom Lever is not moved for more than 1 minute after that, the demonstration will resume.
- "DEMO MODE" remains "ON" even if the camcorder power is turned off.
- To cancel Automatic Demonstration, set the Power Switch to "M" and press **MENU** while the demo is in progress. This takes you directly to the demo mode's Setting Menu (so you will not have to go through the main Menu Screen). Rotate **MENU** to select "OFF" and press it.

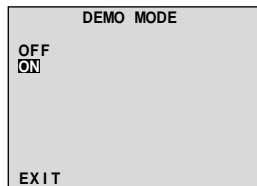


Setting Menu

**NOTE:**

When a tape whose Erase Protection tab is in the position that allows recording is loaded in the camcorder, demonstration is not available.

**GETTING STARTED****CONTENTS**

Power .....	8 – 9
Grip Adjustment .....	10
Viewfinder Adjustment .....	10
Shoulder Strap Attachment .....	10
Tripod Mounting .....	10
Date/Time Settings .....	11
Recording Format Setting .....	12 – 13
Recording Mode Setting .....	14
Tape Length Setting .....	14
Loading/Unloading A Cassette .....	15
Picture Mode Setting .....	16

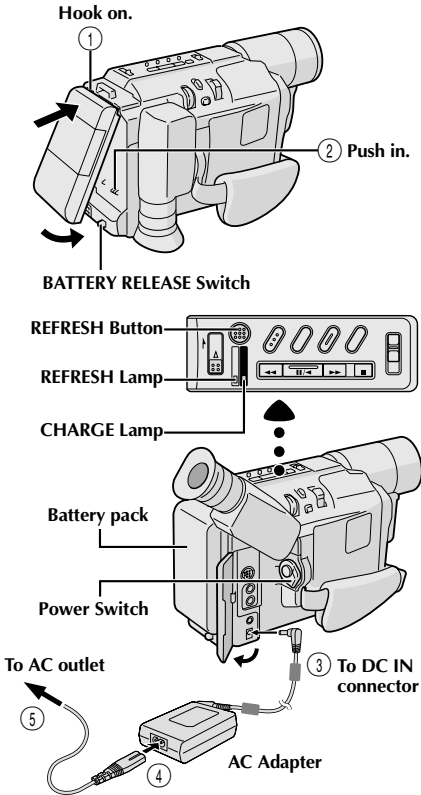

Battery pack	Charging time
BN-V11U	approx. 1 hr. 30 min.
BN-V12U (optional)	approx. 1 hr. 30 min.
BN-V20U (optional)	approx. 2 hrs. 20 min.
BN-V400U (optional)	approx. 4 hrs. 30 min.

### REFRESH:

Charging a battery with some charge remaining reduces that battery's capacity. Perform the procedure below to fully discharge the battery pack before recharging.

- Perform steps 1 through 3 of "CHARGING THE BATTERY PACK".
- Press **REFRESH** on the camcorder for over 2 seconds. The REFRESH lamp on the camcorder blinks to indicate discharging has started.
- When discharging is finished, charging automatically starts and the CHARGE lamp blinks.

When you are not using a battery pack for a long period of time, be sure to fully discharge it before storing because leaving a battery with some charge left over also reduces performance.

## Power

This camcorder's 2-way power supply system lets you choose the most appropriate source of power. Do not use provided power supply units with other equipment.

### CHARGING THE BATTERY PACK

- Make sure the battery pack is attached to the camcorder. Hook its end to the camcorder ① and push the battery in until it locks in place ②.
  - If the battery pack is attached in the wrong position, a malfunction may occur.
- Set the Power Switch to "OFF". Connect the AC Adapter to the camcorder ③, then connect the Power Cord to the AC Adapter ④.
- Plug the Power Cord into an AC outlet ⑤. The CHARGE lamp on the camcorder blinks to indicate charging has started.
- When the CHARGE lamp stops blinking but stays lit, charging is finished. Unplug the Power Cord from the AC outlet. Disconnect the AC Adapter from the camcorder.

#### To Detach The Battery Pack . . .

.... slide **BATTERY RELEASE** and pull out the battery pack.


#### NOTES:

- During charging or discharging, the camcorder cannot be operated.
- Charging and discharging is not possible if the wrong type of battery is used.
- When charging the battery pack for the first time or after a long storage period, the CHARGE lamp may not light. In this case, remove the battery pack from the camcorder, then try charging again.
- If the battery operation time remains extremely short even after having been fully charged, the battery is worn out and needs to be replaced. Please purchase a new one.
- Using the optional AA-V15 AC Power Adapter/Charger, you can charge the BN-V11U/V12U/V20U/V400U battery pack without the camcorder. However, it cannot be used as an AC adapter.



**ATTENTION:**

Before detaching the power source, make sure that the camcorder's power is turned off. Failure to do so can result in a camcorder malfunction.

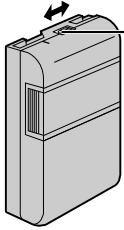**Charge marker**

A charge marker is provided on the battery pack to help you remember whether it has been charged or not. Two colours are provided (red and black)—you choose which one means charged and which means discharged.

**USING THE BATTERY PACK**

Perform step 1 of "CHARGING THE BATTERY PACK" (pg. 8).

**Approximate recording time (unit: min.)**

Battery pack	Viewfinder on	LCD monitor on
BN-V11U	80 (45)	70 (40)
BN-V12U (optional)	80 (45)	70 (40)
BN-V20U (optional)	130 (75)	110 (65)
BN-V400U (optional)	305 (185)	265 (170)

( ) : when the video light is on

**NOTES:**


- Recording time is reduced significantly under the following conditions:
  - Zoom or Record-Standby mode is engaged repeatedly.
  - The LCD monitor is used repeatedly.
- Before extended use, it is recommended that you prepare enough battery packs to cover 3 times the planned shooting time.





**USING AC POWER**

Use the AC Adapter (connect as shown in the illustration).

**NOTES:**

- The provided AC Adapter features automatic voltage selection in the AC range from 110 V to 240 V.
- For other notes, pg. 62.

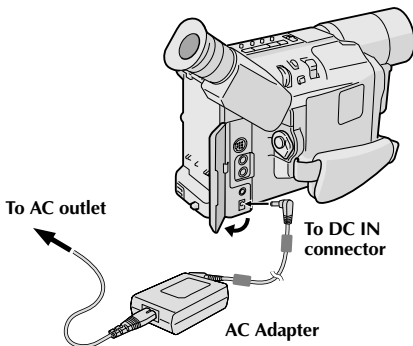

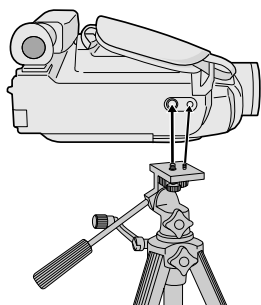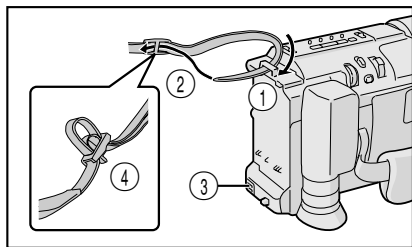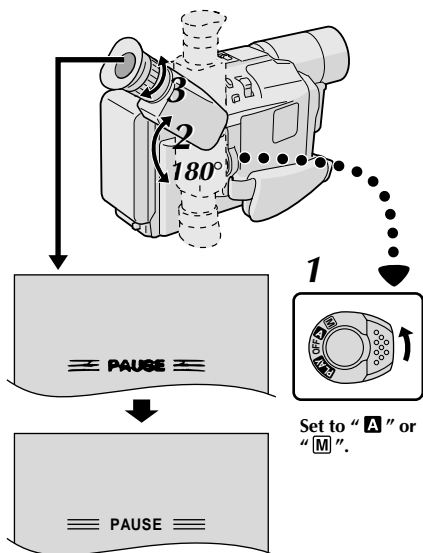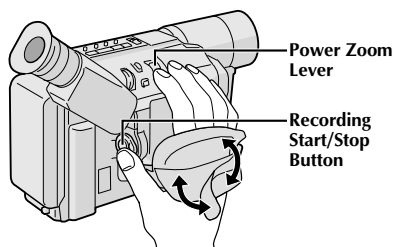

## Grip Adjustment

- 1 Separate the Velcro strip.
- 2 Pass your right hand through the loop and grasp the grip.
- 3 Adjust so that your thumb and fingers can easily operate the Recording Start/Stop Button and Power Zoom Lever. Refasten the Velcro strip.

## Viewfinder Adjustment

- 1 Set the Power Switch to "A" or "M".
- 2 Adjust the viewfinder manually for best viewability.
- 3 Turn the Dioptre Adjustment Control until the indications in the viewfinder are clearly focused.

## Shoulder Strap Attachment

- 1 Following the illustration, thread the strap through the eyelet ①, then fold it back and thread it through the buckle ②. Repeat the procedure to attach the other end of the strap to the other eyelet ③, making sure the strap is not twisted.
- 2 Adjust as shown in the illustration ④.

## Tripod Mounting

- 1 Align the screw and camera direction stud on the tripod with the camera's mounting socket and stud hole. Then tighten the screw.

### CAUTION:

When using a tripod, be sure to open and extend its legs fully to Stabilize the camcorder. To prevent damage to the unit caused by falling over, do not use a small-sized tripod.


## Date/Time Settings

- 1 Set the Power Switch to "M". The VIDEO Lamp comes on.
- 2 Press MENU. The Menu Screen appears.
- 3 Rotate MENU to select "▶ TO SYSTEM MENU" and press it to display SYSTEM MENU. Rotate MENU to select "▶ NEXT" and press it to display the next page.
- 4 Rotate MENU to select "DATE/TIME" and press it. The DATE/TIME Menu appears.
- 5 To set "YEAR", "MONTH", "DAY" or "TIME" (hour/minute), rotate MENU to select the desired item, and press it. When the setting begins blinking, rotate MENU until the correct setting appears and then press it. The setting stops blinking.
- 6 When none of these settings ("YEAR", "MONTH", "DAY", "TIME") blinks, rotate MENU to select "EXIT", and press it. The Menu Screen reappears with the highlight bar on "▶ RETURN".
- 7 Press MENU to close the Menu Screen.


### NOTE:


To display the date and time in the camcorder's display and on a connected TV, see "Date/Time Insert" (☞ pg. 47).

For other notes, ☞ pg. 62

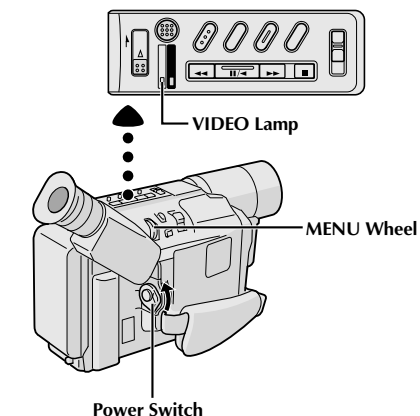


### Display

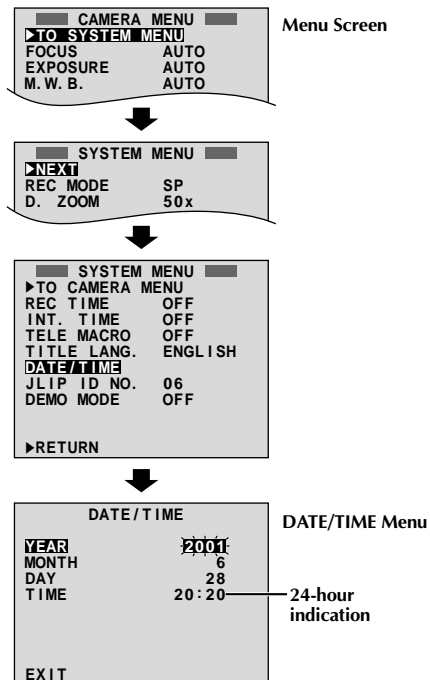

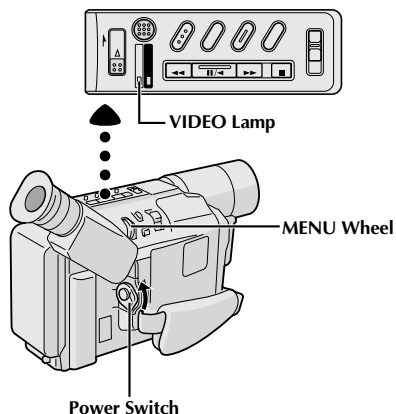

Display: when a VHS cassette is loaded.

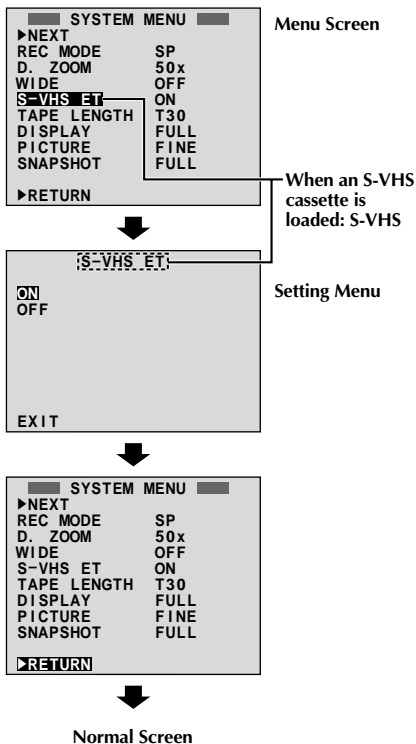

## Recording Format Setting

Set the recording format according to the format of the tape used or type of recording you wish to perform.

### NOTE:

S-VHS ET recording is not possible when the recording mode is set to "LP".

Before performing the following steps, make sure that the recording mode is set to "SP" (pg. 14).

- 1 Set the Power Switch to "M". The VIDEO Lamp comes on.
- 2 Press MENU. The Menu Screen appears.
- 3 Rotate MENU to select "▶ TO SYSTEM MENU" and press it to display SYSTEM MENU.  
**If a VHS cassette is loaded . . .**  
 .... rotate MENU to select "S-VHS ET", then press it. The S-VHS ET Setting Menu appears.  
**If an S-VHS cassette is loaded . . .**  
 .... rotate MENU to "S-VHS", then press it. The S-VHS Setting Menu appears.
- 4 Rotate MENU to set to either of the parameters, then press it. The Menu Screen reappears with the highlight bar on "▶ RETURN".  
**In the S-VHS ET Setting Menu,**  
**ON** : Records with S-VHS picture quality on a VHS cassette (factory-preset). This is called Super VHS ET (Expansion Technology).  
**OFF** : Records in VHS.  
**In the S-VHS Setting Menu,**  
**ON** : Records in S-VHS on an S-VHS cassette (factory-preset).  
**OFF** : Records in VHS on an S-VHS cassette.
- 5 Press MENU to close the Menu Screen.
  - When the S-VHS ET mode is engaged, "S-ET" is displayed.
  - During S-VHS record mode, "S" is displayed.
  - When S-VHS ET or S-VHS recording starts, "S-VHS REC" is displayed for approx. 3 seconds.


### NOTE:


If a cassette is not loaded, "S-VHS" will be displayed in the Menu Screen.

## NOTES about S-VHS and S-VHS ET

- JVC EHG (Extra High Grade) tapes are recommended for superior results.  
Use S-VHS tape for storing recordings for an extended period or for recording important scenes, as it enables higher-quality recording and playback.  
— It is recommended to specifically label S-VHS ET recordings so you can easily distinguish them from regular VHS recordings.
- With some tapes, better picture quality may not be obtained even with S-VHS ET recording. It is recommended that you do test record beforehand to make sure whether better results can be obtained.
- If the S-VHS ET mode or recording format is switched during recording, the playback picture will be blurred at the switching point.
- It is recommended that tapes recorded on this camcorder be played back on this camcorder.
- Tapes recorded in S-VHS or S-VHS ET mode can be played back not only on this camcorder but also on a Super VHS VCR.  
— Tapes recorded in S-VHS ET mode cannot be played back on some VCRs, including some JVC VCRs.
- Tapes recorded in S-VHS or S-VHS ET mode cannot be played back correctly on a normal VHS VCR.
- S-VHS ET does not work with S-VHS tapes.
- To avoid on-screen noise, do not perform Still Playback or Shuttle Search repeatedly.
- If the picture contains a lot of jitter or noise, use a cleaning cassette.

## Compatibility Between S-VHS And VHS

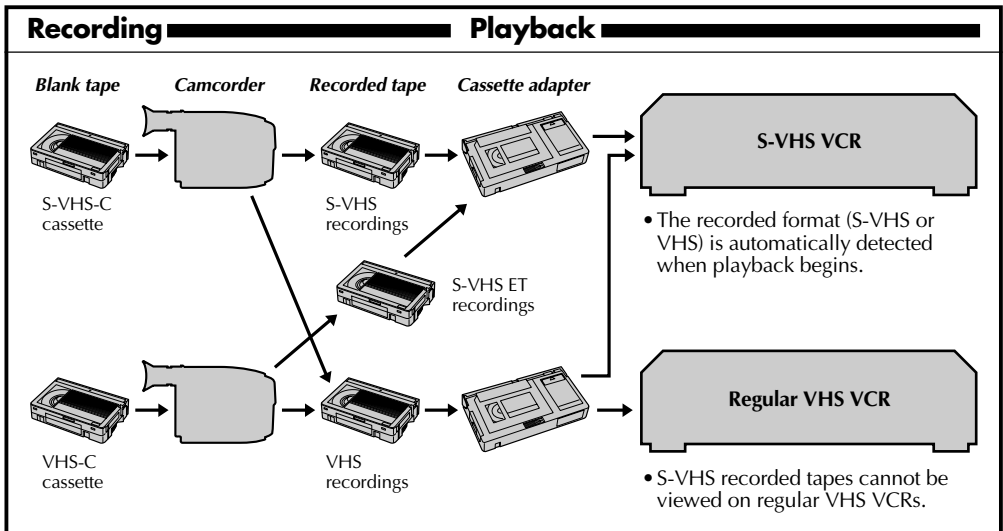

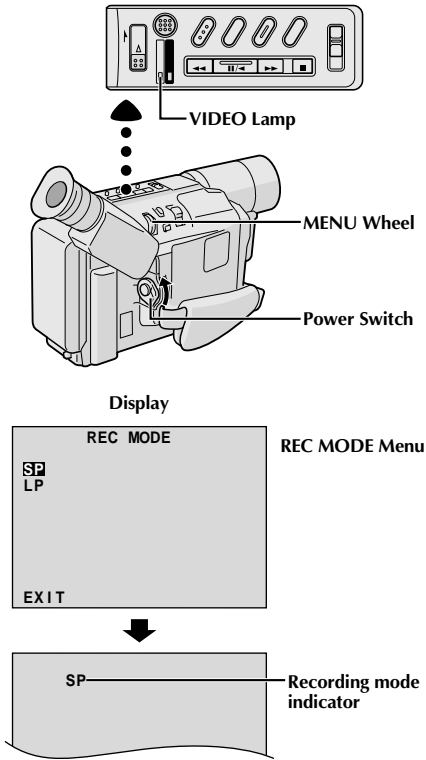

## Recording Mode Setting

Set the tape recording mode depending on your preference.


- 1** Set the Power Switch to "M". The VIDEO Lamp comes on.
- 2** Press **MENU**. The Menu Screen appears.
- 3** Rotate **MENU** to select "▶ TO SYSTEM MENU" and press it to display SYSTEM MENU.
- 4** Rotate **MENU** to select "REC MODE" and press it. The REC MODE Menu appears. Select "SP" or "LP" by rotating **MENU** and press it. The Menu Screen reappears with the highlight bar on "▶ RETURN". Press **MENU** to close the Menu Screen.
  - "LP" (Long Play) is more economical, providing twice the recording time.

### NOTES:

- If the recording mode is switched during recording, the playback picture will be blurred at the switching point.
- S-VHS ET recording is not possible when the recording mode is set to "LP" (☞ pg. 12, 42).

## Tape Length Setting

Set the tape length according to the length of the tape used.


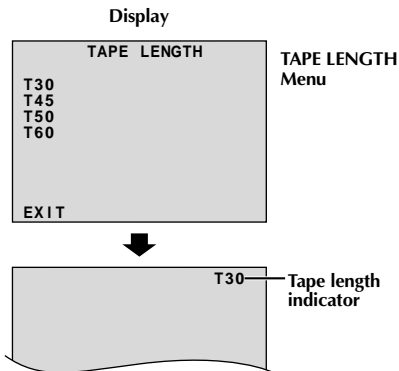


- 1** Perform steps 1 through 3 above.
- 2** Rotate **MENU** to select "TAPE LENGTH", then press it. The TAPE LENGTH Menu appears.
- 3** Rotate **MENU** to select the correct tape length setting.
  - T30=30 minutes
  - T45=45 minutes
  - T50=50 minutes
  - T60=60 minutes
- 4** Press **MENU**. The Menu Screen reappears with the highlight bar on "▶ RETURN". Press **MENU** to close the Menu Screen.

### NOTE:

The tape remaining time (☞ pg. 18) is correct only if the correct tape length has been selected.



## Loading/Unloading A Cassette

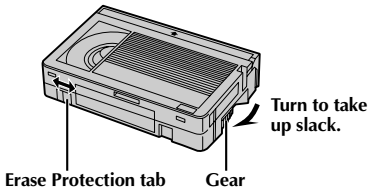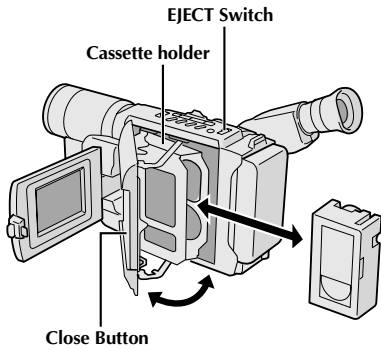

- 1** Open the LCD monitor fully.
- 2** Slide **EJECT** until the cassette holder opens. Do not use force to open.
- 3** Insert or remove a cassette. When inserting, make sure the label is facing outward.
- 4** Press the Close button to close the cassette holder until it locks into place.
- 5** Close the LCD monitor.

### NOTES:

- Closing the LCD monitor while the cassette holder is still open may cause damage to the LCD monitor.
- The cassette holder can't be opened unless a power supply is attached.
- Make sure that the tape is not slack when loading the cassette. If there is any slack, turn the gear in the direction of the arrow to take up the slack.
- Make sure the Erase Protection tab is in the position that allows recording. If not, slide the tab. Some cassettes have removable tabs. If the tab has been removed, cover the hole with adhesive tape.
- The cassette holder cannot be opened while the camcorder is in the record mode.

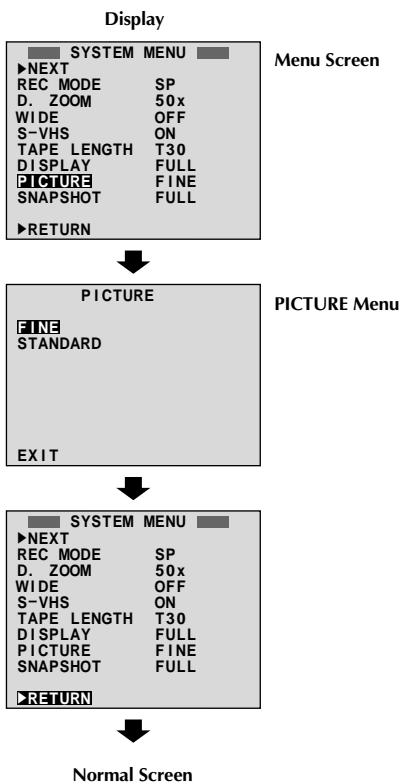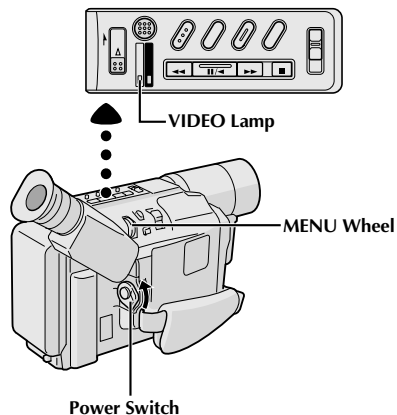

## Picture Mode Setting

The Picture mode can be selected to best match your needs. Two Picture modes are available: FINE and STANDARD (in order of quality).

- 1** Set the Power Switch to "M". The VIDEO Lamp comes on.
- 2** Press MENU. The Menu Screen appears.
- 3** Rotate MENU to select "▶ TO SYSTEM MENU" and press it to display SYSTEM MENU.
- 4** Rotate MENU to select "PICTURE" and press it. The PICTURE Menu appears. Select "FINE" or "STANDARD" by rotating MENU and press it. Selection is complete.
- 5** The Menu Screen reappears with the highlight bar on "▶ RETURN". Press MENU to close the Menu Screen.

Picture Quality Mode	Approximate Number of Storable Images
FINE	30
STANDARD	60

### NOTES:



- The number of storable images depends on the selected Picture mode as well as the composition of the subjects in the images.
- The numbers listed above are applicable when the camcorder's memory is empty (when there are no sample images stored).



# VIDEO RECORDING & PLAYBACK

## CONTENTS

<b>VIDEO RECORDING</b> .....	18 – 21
Shooting While Watching The Viewfinder .....	18
Shooting While Watching The LCD Monitor .....	18
LCD Monitor Brightness Adjustment .....	18
Power Switch Position .....	18
Journalistic Shooting .....	19
Self-Recording .....	19
Zooming .....	20
Picture Stabiliser .....	20
Quick Review (for scenes recorded onto a tape) .	21
Retake .....	21
Video Light .....	21
<b>VIDEO PLAYBACK</b> .....	22 – 26
LCD Monitor Brightness Adjustment .....	22
Speaker Volume Control .....	22
Still Playback .....	22
Shuttle Search .....	22
Tracking .....	23
TBC (Time Base Corrector) .....	23
Counter Memory Function .....	23
Playback Special Effects .....	23
Basic Connections .....	24 – 25
Tape Dubbing .....	25
Using The Cassette Adapter .....	26

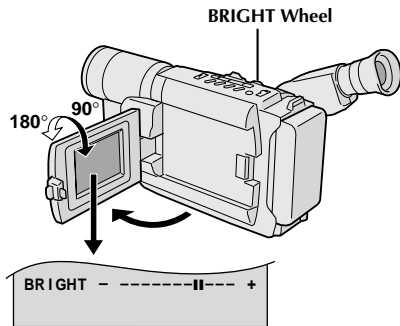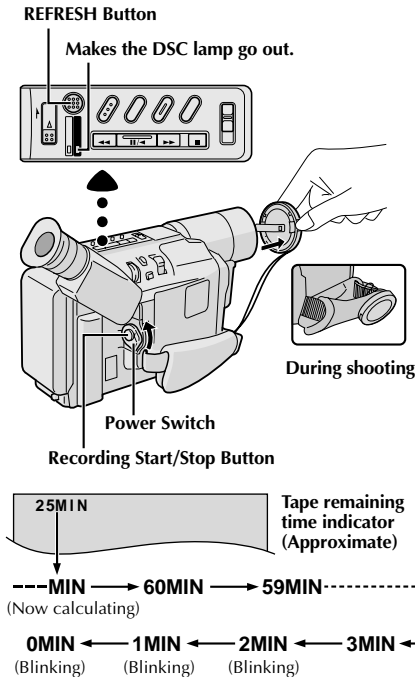

### To Adjust The Brightness Of The LCD Monitor

.... rotate **BRIGHT** until the bright level indicator on the display moves and the appropriate brightness is reached.

### NOTE:

You should already have performed the procedures listed below. If not, do so before continuing.

- Power (☞ pg. 8)
- Load A Cassette (☞ pg. 15)
- Recording Mode Setting (☞ pg. 14)
- Tape Length Setting (☞ pg. 14)
- Grip Adjustment (☞ pg. 10)
- Viewfinder Adjustment (☞ pg. 10)

## Shooting While Watching The Viewfinder

**1** Make sure the LCD monitor is closed and locked. Press in the tabs on the lens cap to remove it. Set the Power Switch to "**A**" or "**M**". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO". The VIDEO Lamp lights and the camcorder enters the Record-Standby mode. "PAUSE" is displayed in the viewfinder.

**2** Press the Recording Start/Stop Button. "REC" appears in the viewfinder while recording is in progress.

### To Stop Recording . . .

.... press the Recording Start/Stop Button. The camcorder re-enters the Record-Standby mode.

## Shooting While Watching The LCD Monitor

**1** Make sure the LCD monitor is fully open. Press in the tabs on the lens cap to remove it. Set the Power Switch to "**A**" or "**M**". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO". The VIDEO Lamp lights and the camcorder enters the Record-Standby mode. "PAUSE" is displayed in the LCD monitor.

**2** Tilt the LCD monitor upward/downward for best visibility and press the Recording Start/Stop Button. "REC" appears in the LCD monitor while recording is in progress.

### NOTE:

When you use the LCD monitor outdoors in direct sunlight, the LCD monitor may be difficult to see. If this happens, use the viewfinder instead.

### To Stop Recording . . .

.... press the Recording Start/Stop Button. The camcorder re-enters the Record-Standby mode.

## Power Switch Position

- A** : Suitable for standard recording using NO special effects or manual adjustments.
- M** : Allows you to set recording functions using the menus for more creative capabilities.
- OFF** : Switches off the camcorder.
- PLAY** : Allows you to play back your recordings.

**NOTES:**




- If the Record-Standby mode continues for 5 minutes without performing Zoom or any other operations, the camcorder's power shuts off automatically. Set the Power Switch to "OFF", and then back to "▲" or "■" to turn the camcorder on again.
- If you are recording on a cassette from the middle (such as when a tape is removed and re-inserted during recording), use the Retake function ( pg. 21) to find the end of the last recording so you do not erase any of it.
- To remove the indications from the camcorder's display during recording, pg. 40, 42.

**JOURNALISTIC SHOOTING**

In some situations, different shooting angles may provide more dramatic results. Hold the camcorder in the desired position and tilt the LCD monitor in the most convenient direction. It can rotate 270° (90° downward, 180° upward).

**SELF-RECORDING**

You can shoot yourself while viewing your own image in the LCD monitor. Open the LCD monitor and tilt it upward 180° so that it faces forward, then point the lens toward yourself and start recording.

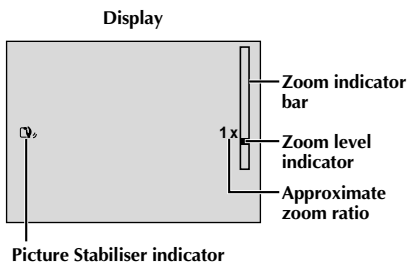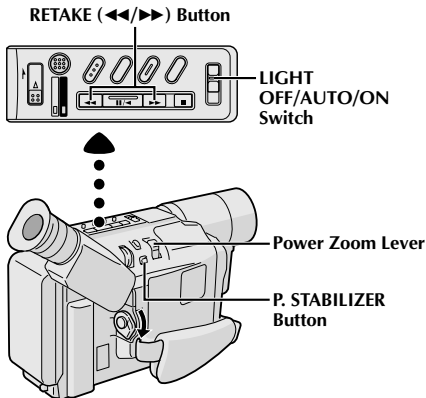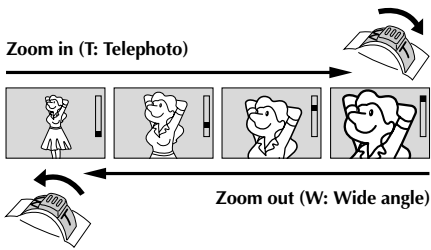

**Zooming:** To produce the zoom in/out effect, or an instantaneous change in image magnification.

Digital circuitry extends the maximum magnification offered by optical zoom. This system is called Digital Zoom.

#### Zoom In

Slide the Power Zoom Lever towards "T".

#### Zoom Out

Slide the Power Zoom Lever towards "W".

- The further you slide the Power Zoom Lever, the quicker the zoom action.
- Focusing may become unstable during Zooming. In this case, set the zoom while in Record-Standby, lock the focus by using the manual focus (ⓘ pg. 45), then zoom in or out in Record mode.
- The zoom level indicator (■) moves during zoom. Once the zoom level indicator reaches the top of the zoom indicator bar, all magnification from that point in through digital processing.
- When using Digital Zoom, the quality of image may suffer. To deactivate Digital Zoom, set "D.ZOOM" to "OFF" in SYSTEM MENU (ⓘ pg. 41).
- Digital zoom cannot be used when the "VIDEO ECHO" mode (ⓘ pg. 39) is activated.

**Picture Stabiliser:** To compensate for unstable images caused by camera-shake, particularly at high magnification.

- 1) Press **P. STABILIZER**. "📷" appears.
  - 2) To switch off the Picture Stabiliser, press **P. STABILIZER**. The indicator disappears.
- Accurate stabilisation may not be possible if hand shake is excessive, or under the following conditions:
    - When shooting subjects with vertical or horizontal stripes.
    - When shooting dark or dim subjects.
    - When shooting subjects with excessive backlighting.
    - When shooting scenes with movement in various directions.
    - When shooting scenes with low-contrast backgrounds.
  - Switch off the Picture Stabiliser when recording with the camcorder on a tripod.
  - The "📷" indicator appears blinking if the Stabiliser cannot be used.
  - This function cannot be activated during the "Night-Scope" (ⓘ pg. 36), "CLASSIC FILM", "STROBE" and "VIDEO ECHO" mode (ⓘ pg. 39).

**Quick Review (for scenes**

**recorded onto a tape):** To check the end of the last recording.

- 1) Make sure the camcorder is in the Record-Standby mode.
- 2) Press ◀◀ and release quickly.  
Tape is rewound for approx. 1 second and played back automatically, then pauses in Record-Standby mode for the next shot.
- *Distortion may occur at the start of playback. This is normal.*

**Retake:** To re-record certain segments.

- 1) Make sure the camcorder is in the Record-Standby mode.
- 2) Press and hold either **RETAKE** to reach the start point for new recording. Pressing ▶▶ forwards the tape and pressing ◀◀ reverses it.
- 3) Press the Recording Start/Stop Button to start recording.
- *Noise bars appear and pictures may become monochrome or darken during Retake. This is normal.*

**Video Light:** To brighten the scene when natural lighting is too dim.

1) Set **LIGHT OFF/AUTO/ON** as required:

**OFF** : Turns off the light.


**AUTO** : Automatically turns on the light when the camcorder senses insufficient lighting on the subject.

**ON** : Always keeps the light on as long as the camcorder is turned on.

- *The video light can only be used with the camcorder's power on.*
- *It is recommended to set the white balance (☞ pg. 46) to ☼ when you use the video light.*
- *When not using the video light, turn it off to save battery power.*
- *Even if the battery indicator (☐) does not blink if the battery pack's charge is low, the camcorder may turn off automatically when you turn on the video light, or when you start recording with the video light turned on.*
- *When **LIGHT OFF/AUTO/ON** is set to "AUTO":*
  - *Depending on the lighting conditions, the video light may keep turning on and off. In this case, manually switch the light on or off using **LIGHT OFF/AUTO/ON**.*
  - *While the "Sports" or "High Speed Shutter" mode (☞ pg. 38) is engaged, the light is likely to stay on.*
  - *While the "Twilight" mode (☞ pg. 38) is engaged, the light will not activate.*

**DANGER**

- The video light can become extremely hot. Do not touch it either while in operation or soon after turning it off, otherwise serious injury may result.
- Do not place the camcorder into the carrying case immediately after using the video light, since it remains extremely hot for some time.
- When operating, keep a distance of about 30 cm between the video light and people or objects.
- Do not use near flammable or explosive materials.
- It is recommended that you consult your nearest JVC dealer for replacing the video light.

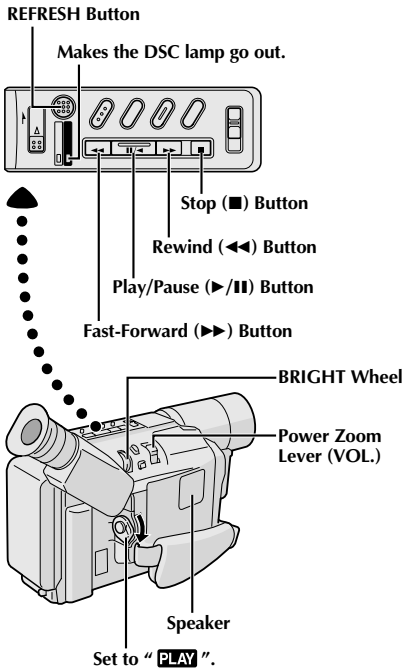

**1** Load a tape (☞ pg. 15).

**2** Set the Power Switch to “**PLAY**”. If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select “**VIDEO**”.  
To start playback, press ▶/||.  
• To stop playback, press ■.  
• Press ◀◀ to rewind, or ▶▶ to fast-forward the tape during Stop mode.

#### NOTES:

- The camcorder shuts off automatically after about 5 minutes in Stop mode. To turn on again, set the Power Switch to “OFF”, then to “**PLAY**”.
- When the Power Switch is set to “**PLAY**” and the LCD monitor is opened at an angle of 60 degrees or more, the LCD monitor switches on and the viewfinder switches off automatically to save power.
- The playback picture can be viewed in the viewfinder (with the LCD monitor shut), on the LCD monitor or on a connected TV (☞ pg. 24, 25).
- You can also view the playback picture on the LCD monitor with it flipped over and retracted.
- If a blank portion on the tape is played back, the screen may become black. This is not a malfunction.

**LCD Monitor Brightness Adjustment:** Rotate **BRIGHT** towards “+” to brighten, or towards “-” to darken.

- The Bright Level Indicator is displayed under the Date/Time Display when you play back images recorded in Wide Mode (☞ pg. 41).

**Speaker Volume Control:** Slide the Power Zoom Lever (**VOL.**) towards “+” to turn up the volume, or towards “-” to turn down the volume.

- The Speaker Volume Indicator is displayed under the Date/Time Display when you play back images recorded in Wide Mode (☞ pg. 41).

**Still Playback:** Pauses during playback.


- 1) Press ▶/|| during playback.
- 2) To resume normal playback, press ▶/|| again.

- Noise bars will appear and the picture will become monochrome during Still Playback.
- If TBC (☞ pg. 23) is engaged, noise bars will not appear. This mode is called Fine Still.

**Shuttle Search:** Allows high-speed search in either direction.

- 1) Press ▶▶ for forward or ◀◀ for reverse search during playback.
- 2) To resume normal playback, press ▶/||.

- During playback, press and hold ◀◀ or ▶▶. The search continues as long as you hold the button. Once you release it, normal playback resumes.
- Noise bars appear and pictures may become monochrome or darken during Shuttle Search. This is normal.

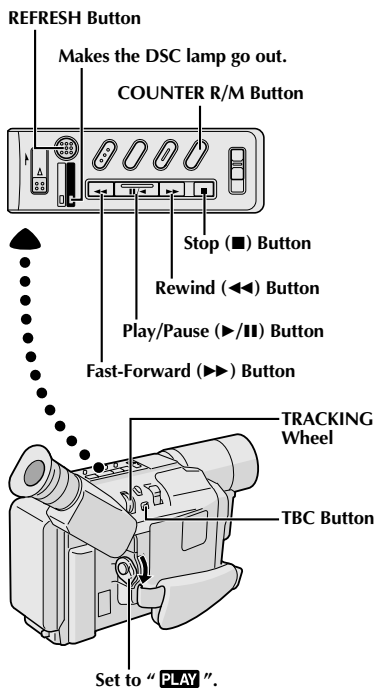


**Tracking:** Eliminates noise bars that appear on-screen during playback. Factory-preset is Auto Tracking. To activate Manual Tracking:

- 1) Press **TRACKING** for approx. 2 seconds. "MT" appears.
- 2) Rotate **TRACKING** so that the noise bars disappear.
  - To return to Auto Tracking, press **TRACKING** for approx. 2 seconds or set the Power Switch to "OFF" and then "**PLAY**" again. "AT" blinks. When Auto Tracking finishes, the indication disappears.
  - When noise bars appear during playback, the camcorder enters the Auto Tracking mode and "AT" is displayed.
  - Manual Tracking may not work with tapes recorded on other VCRs or camcorders.

**TBC (Time Base Corrector):** Removes jitter from fluctuating video signals to deliver a stable picture even with old tapes. Factory-preset: TBC is engaged. To activate/release the TBC mode, press **TBC** during playback for more than 1 second. When the TBC mode is activated, "TBC" is displayed.

**Counter Memory Function:** Makes it easier to locate a specific tape segment.

- 1) Press **COUNTER R/M** and hold for more than 1 second. The counter resets to "0:00:00".
- 2) Press **COUNTER R/M** for less than 1 second. "M" appears.
- 3) After recording or playback, press ■, then ◀◀. The tape automatically stops at or close to 0:00:00.
- 4) Press ▶|| to start playback.
  - The counter memory functions in the Fast-Forward and Rewind modes.
  - To disable the Counter Memory Function, press **COUNTER R/M** for less than 1 second so that "M" disappears.

**Playback Special Effects (CLASSIC FILM, MONOTONE, SEPIA, STROBE and VIDEO ECHO,  pg. 39):** Allows you to add creative effects to the playback image.


- 1) Activate the TBC mode and Auto Tracking.
- 2) Press **DIGIFECT** repeatedly until the desired mode's name and indication appear. They are displayed for approx. 2 seconds, then the name disappears so that only the indication remains. The mode is activated.
- 3) To cancel the effect, select "OFF" in step 2.
  - Playback Special Effects do not work during shuttle search.
  - The selected effect mode cannot be changed during still playback.

## Basic Connections

These are some basic types of connections. When making the connections, refer also to your VCR and TV instruction manuals.

### A. Connection to a TV or VCR equipped with an S-VIDEO IN and A/V input connectors


Use the provided A/V cable and S-Video cable.

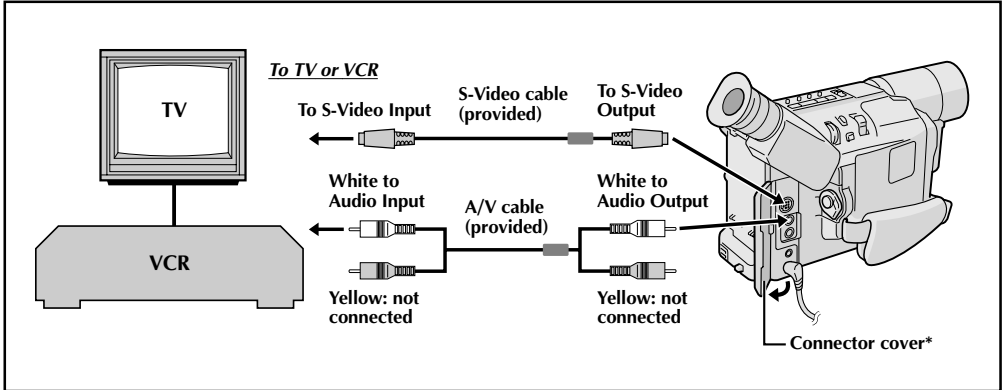

\*When connecting the cables, open this cover.

### B. Connection to a TV or VCR equipped only with A/V input connectors

Use the provided A/V cable.

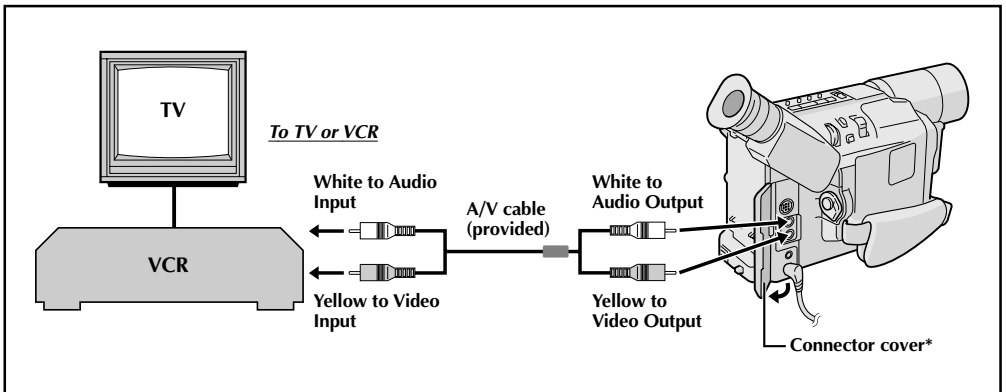

\*When connecting the cables, open this cover.



## Basic Connections

- 1** Make sure all units are turned off.

---

- 2** Connect the camcorder to a TV or VCR as shown in the illustration (☞ pg. 24).  
*If using a VCR . . . go to step 3.*  
*If not . . . go to step 4.*

---

- 3** Connect the VCR output to the TV input, referring to your VCR's instruction manual.

---

- 4** Turn on the camcorder, the VCR and the TV.

---

- 5** Set the VCR to its AUX input mode, and set the TV to its VIDEO mode.

### NOTES:

- *It is recommended to use the AC Adapter as the power supply instead of the battery pack (☞ pg. 9).*
- *If your VCR has an S-Video input connector, connect the camcorder and the VCR using the provided S-Video cable. This can improve the dubbed picture quality.*
- *To monitor the picture and sound from the camcorder without inserting a tape, set the camcorder's Power Switch to "A" or "M", then set your TV to the appropriate input mode.*
- *Make sure you adjust the TV sound volume to its minimum level to avoid a sudden burst of sound when the camcorder is turned on.*
- *If you have a TV or speakers that are not specially shielded, do not place the speakers adjacent to the TV as interference will occur in the camcorder playback picture.*

## Tape Dubbing

- 1** Following the illustration on pg. 24, connect the camcorder and the VCR.

---

- 2** Set the camcorder's Power Switch to "PLAY", turn on the VCR's power, and insert the appropriate cassettes in the camcorder and the VCR.

---

- 3** Engage the VCR's AUX and Record-Pause modes.

---

- 4** Engage the camcorder's Play mode to find a spot just before the edit-in point. Once it is reached, press ►/|| on the camcorder.

---

- 5** Press ►/|| on the camcorder and engage the VCR's Record mode.

---




- 6** Engage the VCR's Record-Pause mode and press ►/|| on the camcorder.

---

- 7** Repeat steps 4 through 6 for additional editing, then stop the VCR and camcorder when finished.

### NOTE:

*If you wish to dub still images recorded with the DSC Lamp lit, play back the still images (☞ pg. 30, 31), and instead of doing the above steps 4 through 6, engage the VCR's Record mode and record them onto a tape.*

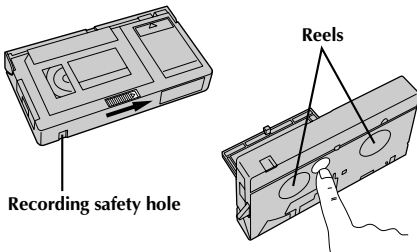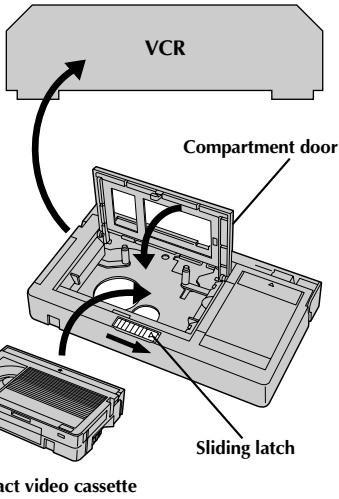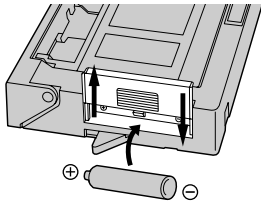

## Using The Cassette Adapter

Use this to play back an S-VHS-C/VHS-C video cassette recorded with this camcorder on a VHS VCR. It is fully compatible with any S-VHS/VHS video cassette recorder. The cassette adapter is battery powered and automatically performs tape loading and unloading.

- 1** Slide the battery cover up to remove it, install one "AA (R6)" size battery as shown, then reattach the cover.
- 2** Slide the latch to open the adapter compartment door, then insert the cassette and close the compartment door.
- 3** Load the cassette adapter into the VCR and play the tape back as you would any other.
- 4** Slide the latch and the compartment door opens automatically. This may take around 10 seconds. Do not attempt to force the adapter open. Then, insert your finger in the hole on the underside of the adapter as shown in the illustration at left, and push up and remove the cassette.

### NOTES:

- During tape loading and unloading, do not touch the reels for safety and tape protection.
- Tapes recorded in S-VHS or S-VHS ET mode cannot be played back on a regular VHS VCR. Playback is possible with a VCR equipped with the S-VHS function.
- During special-effect playback (slow motion, still frame, etc.), the picture may vibrate or noise bars may appear on the screen.
- To record on a VCR using a compact cassette and the adapter, cover the adapter's recording safety hole with adhesive tape.

**DIGITAL STILL CAMERA  
(D.S.C.) RECORDING  
&  
PLAYBACK**

**CONTENTS**

**D.S.C. RECORDING** ..... 28 – 29

    Quick Review  
    (for still images stored in the built-in memory) .... 29

**D.S.C. PLAYBACK** ..... 30 – 34

    Normal Playback ..... 30

    Slide Show ..... 30



    INDEX Screen ..... 31

    Index Playback ..... 31

    Protecting Images ..... 32

    Deleting Images ..... 33

    Connection To A Windows® PC ..... 34

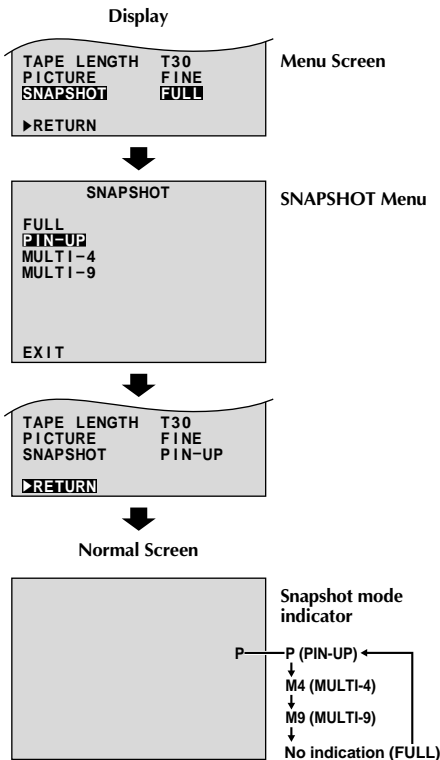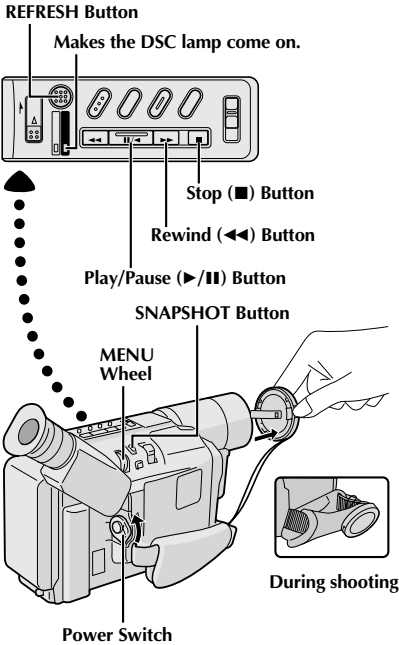

When shooting a still image, it is not recorded onto the tape, but it is stored in the camcorder's built-in memory in the selected Picture Mode. A stored still image data can be transferred to a PC, saved, and processed using a Paint Software programme (☞ pg. 34).

### MODE SELECTION


- 1 Press in the tabs on the lens cap to remove it, then set the Power Switch to "M". The VIDEO Lamp comes on. If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC". An image appears.
- 2 To select the Picture Mode, perform steps 2 through 4 of "Picture Mode Setting" on pg. 16.
- 3 Rotate **MENU** to select "SNAPSHOT", and press it. The SNAPSHOT Menu appears. Rotate **MENU** to select the appropriate mode among the 4 Snapshot modes (☞ pg. 29), and press it. Selection is complete.
- 4 The Menu Screen reappears with the highlight bar on "RETURN". Press **MENU** again to close the Menu Screen.

### STILL IMAGE STORAGE



- 1 Press **SNAPSHOT**.
  - Regardless of the Power Switch position ("A" or "M"), Snapshot recording takes place using the selected Snapshot mode.
  - The remaining number of shots available is displayed.

#### To Delete Unwanted Still Images . . .

When the remaining number indicator displays "0" (blinking), it is not possible to continue storing pictures until you delete some shots to make room for new ones. Perform "DELETE" function in the Menu Screen to remove pictures you do not need (☞ pg. 33).

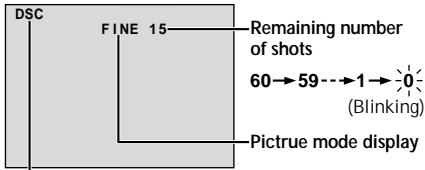

D.S.C. mode indicator

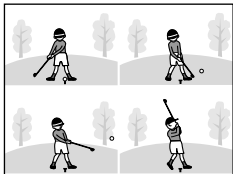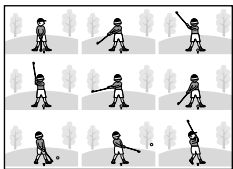FULL\*  
(Snapshot mode with no frame)PIN-UP\*  
(Pin-Up mode)MULTI-4\*\*  
(Multi-Analyzer 4)MULTI-9\*\*  
(Multi-Analyzer 9)**NOTES:**

- Some sample images have been stored in the built-in memory at the factory. If you wish to delete them, first remove the "Protect" function (pg. 32), then perform the "Delete" function (pg. 33).
- If a Snapshot is taken while the camcorder is in the WIDE mode (pg. 41), the Snapshot image is recorded without the black bars at the top and bottom of the screen.
- When you shoot in a dark environment, the still image will become coarse and its true colours will be lost.
- Depending on the still images you shot, whitish lines may appear towards the top of the screen when you play them back.
- During the D.S.C. recording, the Zooming (pg. 20), Picture Stabilizer (pg. 20) and Video Light (pg. 21) functions can be operated.
- Still images are taken in a format based on JPEG (Joint Photographic Experts Group).
- When you use the LCD monitor outdoors under direct sunlight, the LCD monitor may be difficult to see. If this happens, close the LCD monitor and use the viewfinder instead.
- To store the still images you shot, we recommend that you transfer them to a computer and save them on disk (pg. 34), or transfer them to a VCR connected to the camcorder and record them onto a tape.
- Image data stored in the camcorder's built-in memory can be transferred to a Windows® PC and saved using the provided image transfer software, Picture Navigator (pg. 34).

\* There is a momentary camera shutter-type blackout together with the image.




\*\* Continuous camera shutter-type blackout takes place 4 or 9 times with the image, like serial photography, then the 4 or 9 still images you took are displayed.

**Quick Review (for still images stored in the built-in memory):** To check the still image most recently stored in the built-in memory.

- 1) Set the Power Switch to "A" or "M". If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC".
- 2) Press **◀** and release quickly.
  - The still image is displayed for approx. 3 seconds. The message "DELETE OK? PRESS PLAY BUTTON" appears.

**To remove the still image you have checked (Instant Delete) . . .**

Press **▶/||** while the message "DELETE OK? PRESS PLAY BUTTON" is displayed.

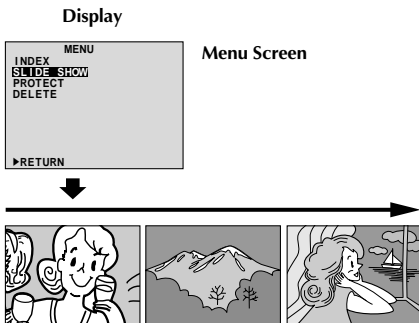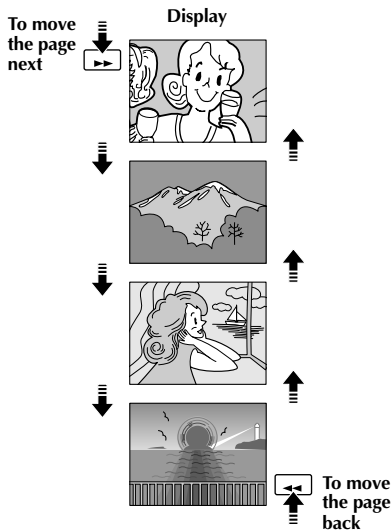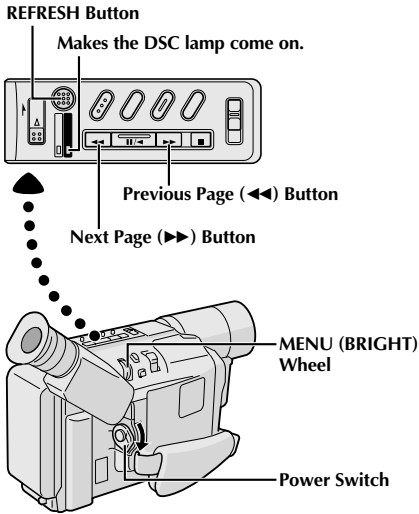

## Normal Playback

Still images shot using this camcorder are automatically numbered, then stored in numerical order in the built-in memory. You can view the still images stored in memory, one at a time, much like flipping through a photo album.

- 1** Set the Power Switch to "**PLAY**". The VIDEO Lamp comes on. If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC". A still image stored in memory is displayed.
  - When no still image is stored in memory, the screen becomes blue.
- 2** Press ▶▶ or ◀◀ to select the still image you want to view.
  - Each time ◀◀ is pressed, the page goes back, while each time ▶▶ is pressed, the page goes next.
  - If there are no stored images, "NO IMAGES STORED" is displayed.


### NOTES:

- When the Power Switch is set to "**PLAY**" and the LCD monitor is opened at an angle of 60 degrees or more, the LCD monitor switches on and the viewfinder switches off automatically to save power.
- The playback picture can be viewed in the viewfinder (with the LCD monitor shut), on the LCD monitor or on a connected TV (☞ pg. 24).
- When viewing a playback picture on a connected TV, it may jitter slightly.
- You can also view the playback picture on the LCD monitor with it flipped over and retracted.
- To brighten the LCD monitor, rotate **BRIGHT** towards "+". To darken the LCD monitor, rotate it towards "-".
- Even if you shoot a new picture after playing back a still image with a low number, this will not overwrite the existing picture because new pictures are automatically stored after the still image most recently stored in memory.

## Slide Show

You can run through all the images stored in memory automatically in numerical order.

- 1** Set the Power Switch to "**PLAY**". If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC".
- 2** Press **MENU**. The Menu Screen appears.
- 3** Rotate **MENU** to select "SLIDE SHOW" and press it. The Slide Show starts.
- 4** To stop the Slide Show, press **MENU** twice.

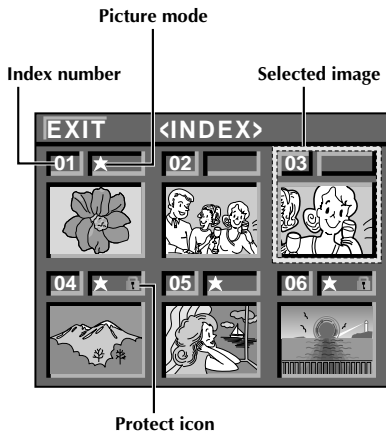

## INDEX Screen

The images you shot can be displayed together with their index information. Convenient for checking images shot beforehand, the INDEX Screen also shows the Picture mode as well as which images are protected against accidental erasure.

### 01: Index number

Index numbers are marked from 01. For example, when 10 images are stored (index number: 01 to 10), if three images with index numbers 02, 04 and 06 are deleted from memory, the remaining images are automatically moved up to fill any gaps in the numerical sequence. Therefore, the number of remaining images is 7, and the new index numbers range from 01 to 07.

### ★: Picture mode

Displays the Picture mode of the stored image. There are 2 modes available: FINE and STANDARD (☞ pg. 16). A star mark is displayed next to still images shot in the FINE mode. There are no marks next to still images shot in the STANDARD mode.

### 🔒: Protect icon


When an image is protected against its accidental erasure, a padlock mark appears next to the Picture mode indicator, and that image cannot be deleted.

### Selected Image

An image is framed like this when it is selected. Rotate **MENU** to move the frame to the desired image.

## Index Playback

You can view all still images stored in memory six at a time. Use this mode when looking for a still image you want to view and when checking the still images you shot beforehand.

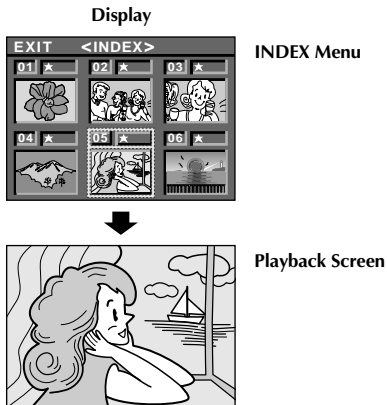

- 1** Set the Power Switch to "PLAY". If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC".
- 2** Press **MENU**. The Menu Screen appears.
- 3** Rotate **MENU** to select "INDEX" and press it. The INDEX Menu appears.
- 4** Rotate **MENU** to select the desired still image, then press it. The one you selected is displayed on the whole screen, then the screen enters normal playback.
  - If the desired still image cannot be found, place the highlight bar on "EXIT", then press **MENU** twice to exit the menu.


### NOTE:

On the Index Menu, a star mark is displayed next to a still image you shot in the FINE mode.

## Protecting Images

The Protect mode helps prevent the accidental erasure of images. When a padlock mark is displayed next to the Picture Mode indication, that image cannot be deleted.

- 1** Set the Power Switch to "PLAY". If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC".
- 2** Press **MENU**. The Menu Screen appears.
- 3** Rotate **MENU** to select "PROTECT" and press it. The PROTECT Menu appears.

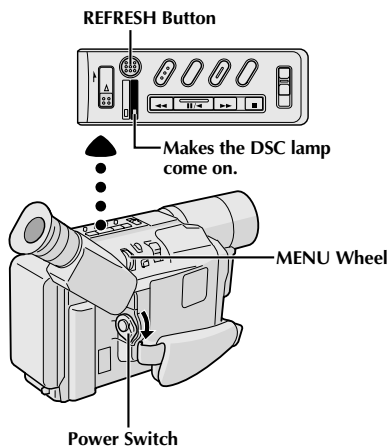

## TO PROTECT AN IMAGE

Before doing the following, perform steps 1 through 3 above.

- 4** Rotate **MENU** to move the frame to the desired image and press it. A "🔒" padlock mark appears on the selected image.  
Repeat this procedure for all images you do not wish to delete by accident.
- 5** Rotate **MENU** upward to select "EXIT", then press it twice. The normal playback screen appears.


### NOTE:

When the memory is initialised or corrupted, even protected images are deleted. If you do not want to lose important images, transfer them to a PC and save them.



## TO REMOVE PROTECTION

Before doing the following, perform steps 1 through 3 above.

- 4** Rotate **MENU** to move the frame to the desired image and press it. The "🔒" padlock mark located above the image disappears and the image is no longer protected.  
Repeat this procedure for all images from which you wish to remove protection.
- 5** Rotate **MENU** upward to select "EXIT", then press it twice. The normal playback screen appears.

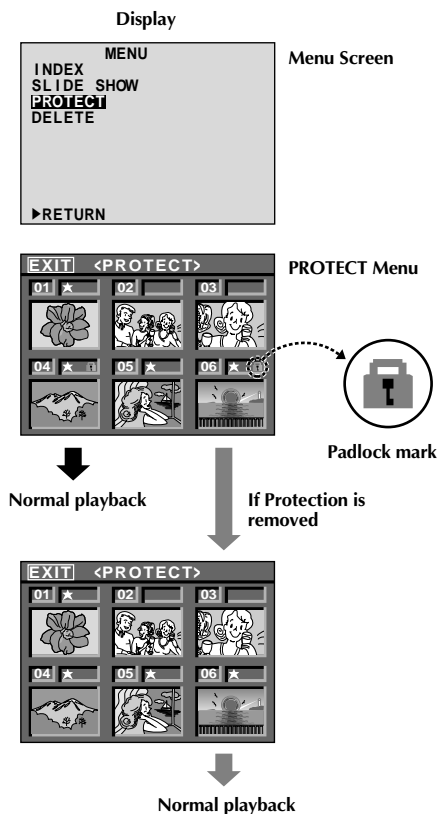



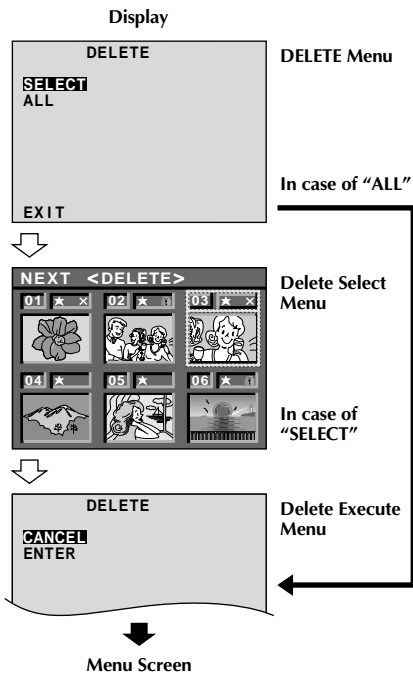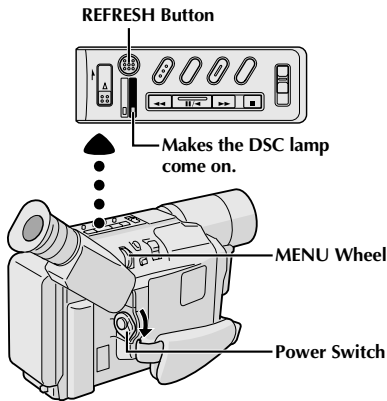

### CAUTION:

While "ENTER" is selected on the Delete Execute Menu and it is blinking, switching off the camcorder or removing the power supply unit (battery pack or AC Adapter) may cause the camcorder's built-in memory to become corrupt. **Never remove the power supply unit at this stage.**

## Deleting Images

Previously shot images can be deleted either one at a time or all at once.

- 1** Set the Power Switch to "PLAY". If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC".
- 2** Press **MENU**. The Menu Screen appears.
- 3** Rotate **MENU** to select "DELETE" and press it. The DELETE Menu appears.

### TO SELECT AN IMAGE BY BROWSING IMAGES STORED IN MEMORY

Before doing the following, perform steps 1 through 3 above.

- 4** Rotate **MENU** to select "SELECT" and press it. The Delete Select Menu appears.
- 5** Rotate **MENU** to move the frame to the desired image that you wish to delete and press it. An "X" appears above the selected image. Repeat this procedure for all images that you wish to delete.
- 6** Rotate **MENU** upward to select "NEXT" and press it. The Delete Execute Menu appears.
- 7** Rotate **MENU** to select "ENTER" and press it. After "ENTER" blinks, the selected images are deleted and the Menu Screen reappears. Press **MENU** again to close the Menu Screen.
  - To cancel deletion, rotate **MENU** to select "CANCEL" and press it twice. The Menu Screen closes.

### TO DELETE ALL IMAGES


Before doing the following, perform steps 1 through 3 above.

- 4** Rotate **MENU** to select "ALL" and press it. The Delete Execute Menu appears.
- 5** Rotate **MENU** to select "ENTER" and press it. After "ENTER" blinks, all the images are deleted and the Menu Screen reappears. Press **MENU** again to close the Menu Screen.
  - To cancel deletion, rotate **MENU** to select "CANCEL" and press it twice. The Menu Screen closes.

### NOTES:

- Before deleting some still images stored in memory, perform "Protect" for the necessary ones (☞ pg. 32) or save them on a PC so that you do not lose them accidentally (☞ pg. 34).
- Protected images (☞ pg. 32) cannot be deleted with the above operation. To delete them, remove protection first.
- If the remaining number of shots is not 30 in the FINE mode or 60 in the STANDARD mode when "ALL" is selected on the DELETE Menu, initialise the camcorder's memory (☞ pg. 61).

Makes the DSC lamp come on.

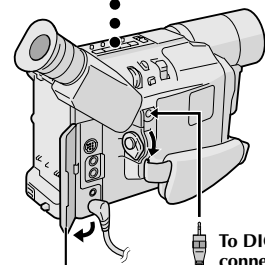


Open the cover.

PC connection  
cable  
(provided)

To DIGITAL  
connector

For Windows®:  
To COM Port  
(RS-232C)

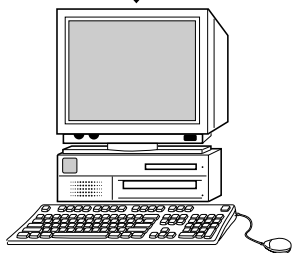

## Connection To A Windows® PC

Image data stored in the camcorder's built-in memory can be transferred to a Windows® PC and saved using the provided image transfer software, Picture Navigator. The image data transferred to a Windows® PC can also be further processed using Mr. Photo Gold.

To assure safety, make sure all units are turned off before making any connection.


- 1** Connect the camcorder's DIGITAL connector to the COM Port (RS-232C) on a Windows® PC, using the provided PC connection cable.
- 2** Set the Power Switch to "PLAY". The VIDEO Lamp comes on. If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select "DSC". A still image stored in memory appears.
  - When transferring still images to a computer, be sure that a still image is displayed on the screen.
- 3** Launch the provided software on your Windows® PC. Transfer the still images stored in the camcorder's memory to the Windows® PC. Refer to the software's instruction manual on the provided CD-ROM for details.
  - During transfer of the still image, the camcorder's screen becomes blue and "PC★MODE" is displayed. After transferring is finished, the screen displays the same still image as in step 2.
- 4** Close the software, then switch off the camcorder.

### NOTES:

- Before transferring still images from your personal computer to the camcorder's built-in memory, perform the camcorder's Picture Mode Setting (☞ pg. 16). The still images will be transferred from the personal computer in the selected Picture Mode.
- When transferring still images from your personal computer to the camcorder, make sure the number of images to be transferred is smaller than the camcorder's remaining number of shots available.
- Use the AC Adapter as the power supply instead of the battery pack.
- The still images stored in the camcorder's memory are not automatically removed after being transferred to the PC. If you wish to remove those still images from the camcorder's memory, delete them (☞ pg. 33).
- Windows® are trademarks of Microsoft Corporation, registered in the U.S.A. and other countries.

**ADVANCED FEATURES****CONTENTS**

Night Scope .....	36
Fade/Wipe Effects .....	37
Program AE With Special Effects .....	38
Digital Effects .....	39
Using Menus For Detailed Adjustment .....	40 – 42
Snapshot .....	43
Exposure Control .....	44
Focusing .....	45
White Balance Adjustment .....	46
Manual White Balance Operation .....	46
Date/Time Insert .....	47
Instant Titles .....	47
Animation .....	48
Time-Lapse .....	48
<b>USING THE REMOTE CONTROL UNIT .....</b>	<b>49 – 57</b>
Installing The Batteries .....	50
Playback Zoom .....	51
Insert Editing (VIDEO) .....	52
Insert Editing (Insert A Still Image From The Built-In Memory Onto A Tape) .....	53
Audio Dubbing .....	53
Random Assemble Editing [R.A.Edit] .....	54 – 57

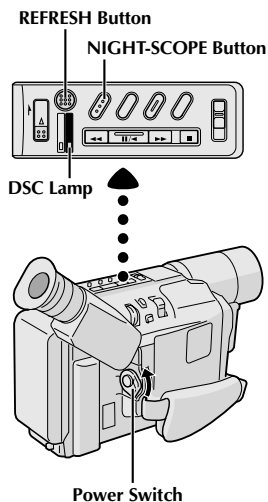

## Night-Scope

Makes dark subjects or areas even brighter than they would be under good natural lighting. Although the recorded image is not grainy, it may look as if it is strobing due to the slow shutter speed.

- 1** Set the Power Switch to “**A**” or “**M**”. Press **REFRESH** for approx. 1 second to select “VIDEO” (the DSC Lamp goes out) or “DSC” (the DSC Lamp comes on).
- 2** Press **NIGHT-SCOPE** repeatedly until the desired mode’s name and indication appear. They are displayed for approx. 2 seconds, then the name disappears so that only the indication remains. The mode is activated.
- 3** To cancel the effect, press **NIGHT-SCOPE** repeatedly until “OFF” appears. “OFF” is displayed for approx. 2 seconds.

### **A NIGHT AUTO**

The shutter speed is automatically adjusted (maximum 1/5 sec.).

### **1 NIGHT 10X\***

The shutter speed is set to 1/5th of a second to provide 10 times the sensitivity.

### **2 NIGHT 50X\* (GR-SXM770A only)**

The shutter speed is set to 1 second to provide 50 times the sensitivity.


### **2 NIGHT 25X\* (GR-SXM77EA only)**

The shutter speed is set to half of a second to provide 25 times the sensitivity.

\*Appears when the Power Switch is set to “**M**”.

#### NOTES:

- During Night-Scope, the following functions or settings cannot be activated:
  - “Picture Stabiliser” (☞ pg. 20), “Program AE With Special Effects” (☞ pg. 38) and “Digital Effects” (☞ pg. 39).
  - “GAIN” or “S.LX” in CAMERA MENU (☞ pg. 41).
- Night-Scope does not work when **LIGHT OFF/AUTO/ON** is set to “AUTO” or “ON” (☞ pg. 21).
- During Night-Scope, it may be difficult to bring the camcorder into focus. To prevent this, use of a tripod is recommended.

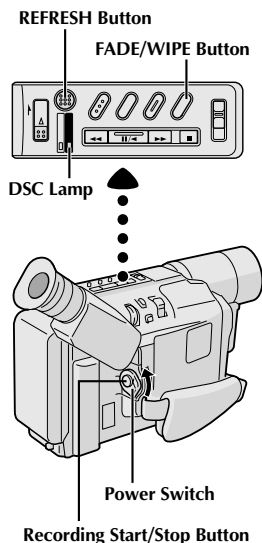

## Fade/Wipe Effects

These effects let you make pro-style scene transitions. Fade- or wipe-in works at recording start, and fade- or wipe-out works at recording end.

- 1** Set the Power Switch to "M". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO".
- 2** Press **FADE/WIPE** repeatedly until the desired mode's name and indication appear. They are displayed for approx. 2 seconds, then the name disappears so that only the indication remains. The effect is reserved.
- 3** Press the Recording Start/Stop Button to activate fade-in/out or wipe-in/out.
- 4** To cancel a fade or wipe, press **FADE/WIPE** repeatedly until "OFF" appears. "OFF" is displayed for approx. 2 seconds and the fade/wipe standby mode is cancelled.

### **Bk** FADER

Fades in/out to a black screen.

### **M** MOSAIC (Fader)

Gradually turns/returns the picture into/from a mosaic pattern.

### **W** SHUTTER (Wipe)

A black screen moves in from the top and bottom, closing over the image like a shutter, or a new image pushes open the black screen vertically from the centre.

### **L** SLIDE (Wipe)

A black screen moves in from the left to gradually cover the image, or a new image moves in from right to left.

### **D** DOOR (Wipe)

Wipes in as the two halves of a black screen open to the left and right, revealing the scene, or wipes out and the black screen reappears from left and right to cover the scene.

### **C** CORNER (Wipe)


Wipes in on a black screen from the upper right to the lower left corner, revealing the scene, or wipes out from lower left to upper right, leaving a black screen.

### **W** WINDOW (Wipe)

Wipes in on a black screen from the centre of the screen towards the corners, revealing the scene, or wipe out from the corners to the centre, leaving a black screen.

#### **NOTE:**

Pressing and holding the Recording Start/Stop Button allows you to vary the length for the image during fade in/out or wipe in/out.

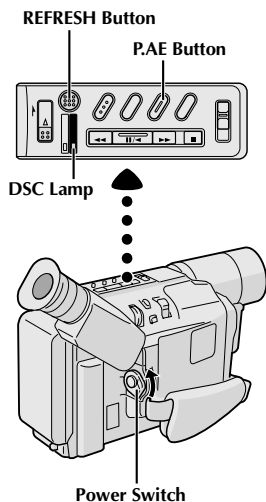

## Program AE With Special Effects

- 1** Set the Power Switch to “**M**”. Press **REFRESH** for approx. 1 second to select “**VIDEO**” (the DSC Lamp goes out) or “**DSC**” (the DSC Lamp comes on).
- 2** Press **P.A.E.** repeatedly until the desired mode’s name and indication appear. They are displayed for approx. 2 seconds, then the name disappears so that only the indication remains. The mode is activated.
- 3** To cancel the effect, press **P.A.E.** repeatedly until “**OFF**” appears. “**OFF**” is displayed for approx. 2 seconds.

### **SPORTS**

High shutter speed clearly captures fast-moving action.

### **ND : ND EFFECT**

 
A black mist darkens the picture, as when an ND filter is used. Helps to counter the effects of glare on the subject.

### **FG : FOG**

Makes the picture look misty white, as when an external fog filter is attached to the lens. Softens the image and gives it a “fantasy” look.

### **TWILIGHT**

Dusk, twilight scenery, fireworks, etc., look more natural and dramatic. The following happens when Twilight mode is selected:


- Auto gain control is turned off.
- White Balance is set to “:FINE” (day mode), but can also be manually changed to another mode (pg. 46).
- Auto Focus becomes available only in the range of 10 m to infinity. To focus when the subject-to-camera distance is less than 10 m, use manual focusing (pg. 45).

### **S1/2000** (1/2000 sec. High Speed Shutter)

Captures faster action than Sports mode.

#### NOTES:

- Only one mode can be engaged at a time.
- The screen becomes slightly dark in the High Speed Shutter mode. Use in well-lit situations.
- In the “High Speed Shutter” or “Sports” modes, picture colour may be adversely affected if the subject is lit by alternating discharge-type light sources such as fluorescent or mercury-vapour lights.
- This function cannot be activated during Night-Scope (pg. 36).
- The “FOG” mode cannot be used when the “VIDEO ECHO” mode (pg. 39) is activated.

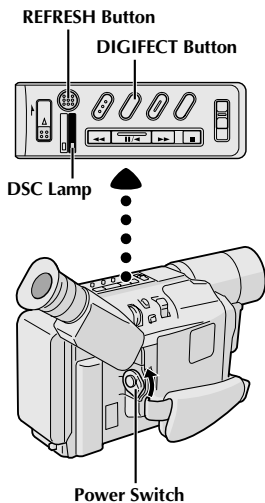

## Digital Effects

- 1** Set the Power Switch to "M". Press **REFRESH** for approx. 1 second to select "VIDEO" (the DSC Lamp goes out) or "DSC" (the DSC Lamp comes on).
- 2** Press **DIGIFECT** repeatedly until the desired mode's name and indication appear. They are displayed for approx. 2 seconds, then the name disappears so that only the indication remains. The mode is activated.
- 3** To cancel the effect, press **DIGIFECT** repeatedly until "OFF" appears. "OFF" is displayed for approx. 2 seconds.

### SEPIA

Recorded scenes have a brownish tint like old photos. Combine this with the WIDE mode (☞ pg. 40, 41) for a classic look.

### B/W MONOTONE

Like black and white films, your footage is shot in B/W. Combine this with the WIDE mode (☞ pg. 40, 41) for a classic look.

### NEGA POSI

The colours of a picture are reversed.

### MOSAIC

Turns recorded scenes into a mosaic pattern.

### STRETCH

Doubles the width of the picture horizontally.

### CLASSIC FILM

Makes your footage look like a classic movie by shooting in black and white, with a strobing effect, and black bars added at the top and bottom.

### STROBE



Your recording looks like a series of consecutive snapshots.

### VIDEO ECHO

Adds a "ghost" to the subject, giving your recording a "fantasy" feeling. Zoom magnification of over 10X is not available.

## NOTES:

- Digital Effects can be changed during recording or during Record-Standby.
- Digital zoom (☞ pg. 20) cannot be used when the "VIDEO ECHO" mode is activated.
- This function cannot be activated during Night-Scope (☞ pg. 36).
- Picture Stabiliser (☞ pg. 20) cannot be activated during the "CLASSIC FILM", "STROBE" and "VIDEO ECHO" mode.

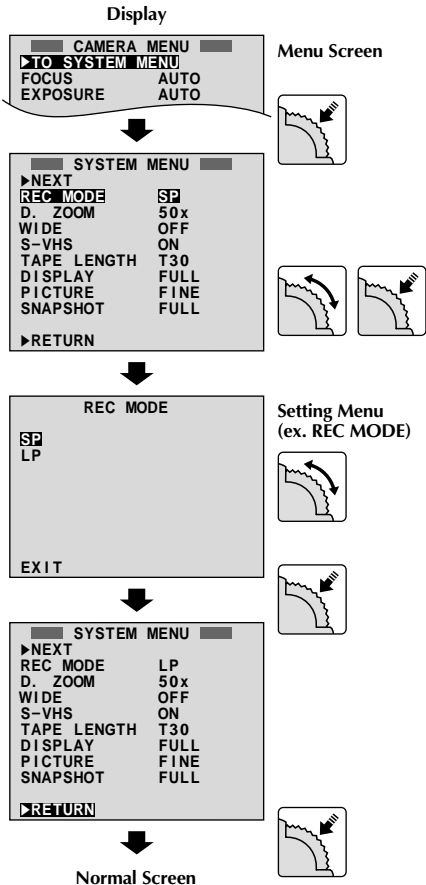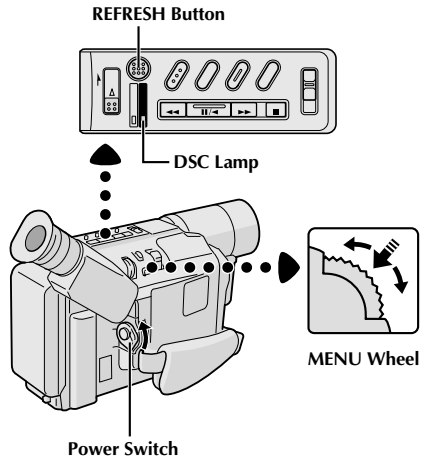

## Using Menus For Detailed Adjustment

This camcorder is equipped with an easy-to-use, on-screen menu system that simplifies many of the more detailed camcorder settings.

- 1 The operation system depends on the function you wish to select.  
Set the Power Switch to "M". Press **REFRESH** for approx. 1 second to select "VIDEO" (the DSC Lamp goes out) or "DSC" (the DSC Lamp comes on) according to each function's "\*"/\*\* explanation described at the bottom of pages 41 and 42.
- 2 Press **MENU**. The Menu Screen appears.
- 3 Rotate **MENU** to select the desired function.
  - To go from CAMERA MENU to SYSTEM MENU, rotate **MENU** to select "▶ TO SYSTEM MENU" and press it. SYSTEM MENU is composed of 2 pages. To go to the next page, rotate **MENU** to select "▶ NEXT" and press it.
  - To return to CAMERA MENU from page 2 of SYSTEM MENU, rotate **MENU** to select "▶ TO CAMERA MENU" and press it.
- 4 Press **MENU** to display the Setting Menu and rotate it to select the desired setting.  
*If you select "JLIP ID NO." . . .*  
.... Press **MENU**. The number blinks. Rotate **MENU** until the desired number appears, and press it. Then rotate **MENU** to "EXIT".
- 5 Press **MENU**. The Menu Screen reappears with the highlight bar on "▶ RETURN".
- 6 Press **MENU**. The normal screen reappears.



## MENU SCREEN EXPLANATIONS

### CAMERA MENU

<b>FOCUS</b>	Refer to “Focusing” (☞ pg. 45).	
<b>EXPOSURE</b>	Refer to “Exposure Control” (☞ pg. 44).	
<b>M.W.B.</b>	Refer to “White Balance Adjustment” and “Manual White Balance Operation” (☞ pg. 46).	
<b>GAIN</b> (GR-SXM77EA only)	<b>NORMAL</b>	To record a subject in a dimly lit environment, when it is more convenient to shoot with a less coarse picture although the subject becomes slightly dark.
	<b>OFF</b>	Allows you to shoot dark scenes with no picture brightness adjustment.
<b>S.LX</b> (GR-SXM770A only)	<b>MAX</b>	To record a subject in a darkly lit environment, when it is more convenient to shoot the subject with a brighter image even if the picture becomes slightly coarse.
	<b>NORMAL</b>	To record a subject in a dimly lit environment, when it is more convenient to shoot with a less coarse picture although the subject becomes slightly dark.
	<b>OFF</b>	Allows you to shoot dark scenes with no picture brightness adjustment.
<b>TITLE*</b>	Allows you to superimpose one of eight preset titles (☞ pg. 47).	
<b>DATE/TIME DISP.*</b>	Makes the date/time settings appear in the camcorder or on a connected monitor (☞ pg. 47).	


### SYSTEM MENU

This Menu Screen cannot be accessed while recording.

<b>REC MODE*</b>	Allows you to set the recording mode (SP or LP) depending on your preference (☞ pg. 14).	
<b>D. ZOOM</b>	<b>50X</b>	Allows you to use the Digital Zoom. By digitally processing and magnifying images, zooming is possible from 16X (the optical zoom limit), to a maximum of 50X digital magnification.
	<b>400X</b> (GR-SXM77EA only)/ <b>600X</b> (GR-SXM770A only)	Allows you to use the Digital Zoom. By digitally processing and magnifying images, zooming is possible from 16X (the optical zoom limit), to a maximum of 400X (GR-SXM77EA)/600X (GR-SXM770A) digital magnification.
	<b>OFF</b>	Digital Zoom is not available. Only optical zoom (maximum 16x magnification) can function. When set to “OFF” during Digital Zoom, zoom magnification changes to 16X.
<b>WIDE</b>	<b>OFF</b>	Does not display black bars.
	<b>ON</b>	Allows you to record black bars at the top and bottom of the screen to produce a cinema-like “wide-screen” effect. If a snapshot (☞ pg. 28, 43) is taken while the camcorder is in the WIDE mode, the snapshot image is recorded without the black bars at the top and bottom of the screen.

\* Activated only when “VIDEO” is selected (the DSC Lamp is not lit). If “DSC” is selected (the DSC Lamp is lit), this function will not be activated even though the highlight bar on the Menu Screen will move to that position.

Functions listed without an asterisk are available when either “DSC” or “VIDEO” is selected.

 : Factory-preset

CONTINUED ON NEXT PAGE

## SYSTEM MENU (cont.)


<b>S-VHS*** (S-VHS ET***)</b>	<b>ON</b>	Records in S-VHS on a VHS or S-VHS cassette (☞ pg. 12).
	<b>OFF</b>	Records in VHS on a VHS or S-VHS cassette (☞ pg. 12).
<b>TAPE LENGTH*</b>	Allows you to set the tape length depending on the tape used (☞ pg. 14).	
<b>DISPLAY</b>	<b>FULL</b>	Make all of the indications appear on the LCD monitor/viewfinder during playback or recording.
	<b>SIMPLE</b>	Make the following indications disappear from the LCD monitor/viewfinder during recording or playback: cassette warning, tape remaining time, battery pack remaining power indicator and tape length indicator (☞ pg. 66, 67)
<b>PICTURE**</b>	Refer to "Picture Mode Setting" (☞ pg. 16).	
<b>SNAPSHOT</b>	<b>FULL</b>	Displayed when "VIDEO" (the DSC Lamp is not lit, ☞ pg. 43) or "DSC" (the DSC Lamp is lit, ☞ pg. 29) is selected.
	<b>PIN-UP</b>	
	<b>MULTI-4</b>	Displayed when "DSC" (the DSC Lamp is lit, ☞ pg. 29) is selected.
	<b>MULTI-9</b>	
<b>REC TIME*</b>	Refer to "Animation" and "Time-Lapse" (☞ pg. 48).	
<b>INT. TIME</b>	Refer to "Time-Lapse" (☞ pg. 48).	
<b>TELE MACRO</b>	<b>OFF</b>	Usually the distance to a subject where the lens is in focus depends on the zoom magnification. Unless there is a distance of more than 1 m to the subject, the lens is out of focus at the maximum telephoto setting. When set to "ON", you can shoot a subject as large as possible at a distance of approx. 60 cm. • Depending on the zoom position, the lens may go out of focus.
	<b>ON</b>	
<b>TITLE LANG.*</b>	Allows you to select the language (ENGLISH, CHINESE, ARABIC or RUSSIAN) of Instant Titles (☞ pg. 47).	
<b>DATE/TIME</b>	Allows you to set the current date and time (☞ pg. 11).	
<b>JLIP ID NO.</b>	This number is necessary when connecting the camcorder to a device such as a computer using the J terminal (JLIP). The numbers range from 01 to 99. Factory setting is 06.	
<b>DEMO MODE*</b>	<b>ON</b>	Demonstrates certain functions automatically. When "DEMO MODE" is set to "ON" and the Menu Screen is closed, the demonstration starts. Operating the Power Zoom Lever during the demonstration stops the demonstration temporarily. If the Power Zoom Lever is not moved for more than 1 minute after that, the demonstration will resume. <b>NOTE:</b> <i>When a tape whose Erase Protection tab is in the position that allows recording is loaded in the camcorder, demonstration is not available.</i>
	<b>OFF</b>	Automatic demonstration will not take place.



\* Activated only when "VIDEO" is selected (the DSC Lamp is not lit). If "DSC" is selected (the DSC Lamp is lit), this function will not be activated even though the highlight bar on the Menu Screen will move to that position.

\*\* Activated only when "DSC" is selected (the DSC Lamp is lit). If "VIDEO" is selected (the DSC Lamp is not lit), this function will not be activated even though the highlight bar on the Menu Screen will move to that position.

Functions listed without \*/\*\* are available when either "DSC" or "VIDEO" is selected.

\*\*\* S-VHS ET is displayed when a VHS cassette is loaded, and S-VHS is displayed when an S-VHS cassette is loaded (☞ pg. 12). If a cassette is not loaded, "S-VHS" will be displayed in the Menu Screen.  
S-VHS ET is preset to "OFF".

 : Factory-preset

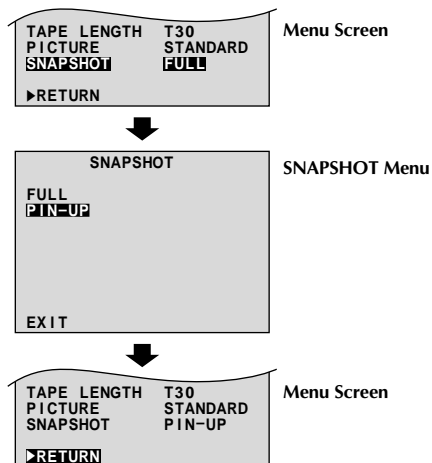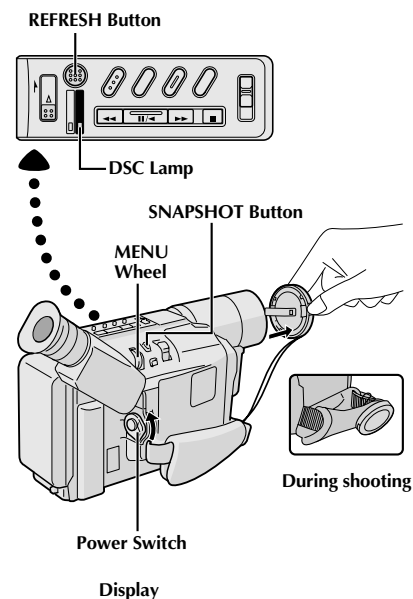

**FULL**  
(Snapshot mode with no frame)



**PIN-UP**  
(Pin-Up mode)

## Snapshot

This interesting feature lets you record two types of digital still images that look like photographs onto a tape, as well as keeping them in the camcorder's built-in memory. It is a great way to spice up footage of events such as parties, weddings and graduations.

### SNAPSHOT MODE SELECTION

- 1 Press in the tabs on the lens cap to remove it, then set the Power Switch to "M". The VIDEO Lamp comes on. If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO". The camcorder enters Record-Standby mode.
- 2 Press **MENU**. The Menu Screen appears.
- 3 Rotate **MENU** to select "▶ TO SYSTEM MENU" and press it to display SYSTEM MENU.
- 4 Rotate **MENU** to select "SNAPSHOT", and press it. The SNAPSHOT Menu appears. Rotate **MENU** to select "FULL" or "PIN-UP", and press it. Selection is complete.
- 5 The Menu Screen reappears with the highlight bar on "▶ RETURN". Then press **MENU** to close the Menu Screen.

### SNAPSHOT RECORDING

- 1 Press **SNAPSHOT**.
  - Regardless of the Power Switch position ("A" or "M"), Snapshot recording takes place using the selected Snapshot mode.

*If you press during Record-Standby . . .*



.... a still image will be recorded for approx. 6 seconds, then the camcorder re-enters the Record-Standby mode.

*If you press during Recording . . .*

.... a still image will be recorded for approx. 6 seconds, then the normal recording resumes.

#### NOTES:

- When the remaining number indicator displays "0" (blinking), the still image will be recorded onto the tape but not in the built-in memory. If you wish to store a still image in the built-in memory, ☞ pg. 33.
- If a snapshot is taken while the camcorder is in the WIDE mode (☞ pg. 41), the snapshot image is recorded without the black bars at the top and bottom of the screen.
- When a Snapshot is taken in a dark environment, the still image recorded onto the tape and stored in memory will become coarse and its true colours will be lost.
- The Snapshot mode can also be used during playback. However, only the Full mode is available regardless of the Snapshot mode setting, and the shutter sound is not heard.

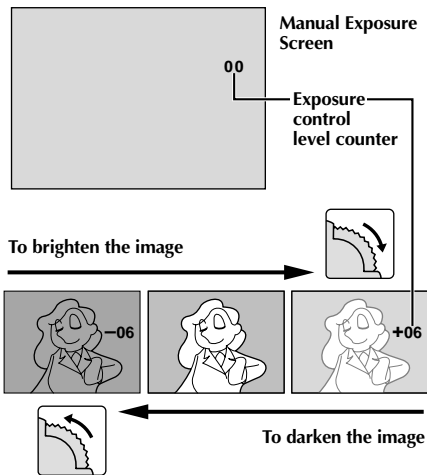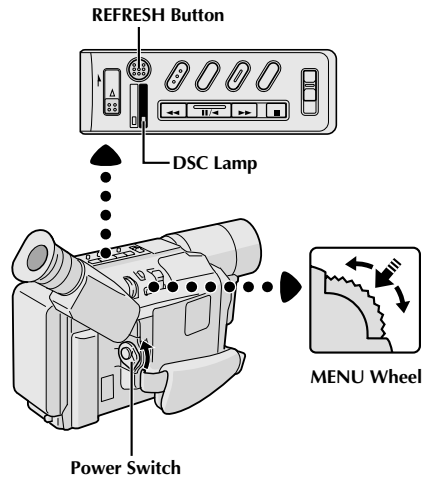

## Exposure Control

This feature automatically adjusts the iris for the best available picture quality, but you can override it and make the adjustment manually. Manual exposure adjustment is recommended in the following situations:


- When shooting using reverse lighting or when the background is too bright.
- When shooting on a reflective natural background such as at the beach or when skiing.
- When the background is overly dark or the subject light.

- 1 Set the Power Switch to "M". Press **REFRESH** for approx. 1 second to select "VIDEO" (the DSC Lamp goes out) or "DSC" (the DSC Lamp comes on).
- 2 Press **MENU**. The Menu Screen appears.
- 3 Rotate **MENU** to select "EXPOSURE" and press it. The EXPOSURE Menu appears.
- 4 Rotate **MENU** to select "MANU", then press it. The Menu Screen disappears and "00" (exposure control level counter) appears.
- 5 To brighten the image, rotate **MENU** downward. The exposure control level counter increases (maximum +06).  
To darken the image, rotate **MENU** upward. The exposure control level counter decreases (maximum -06).
- 6 Press **MENU**. The setting is complete. The Menu Screen reappears with the highlight bar on "▶RETURN".
- 7 Press **MENU**. The Menu Screen disappears and the exposure control level counter reappears to indicate the exposure is adjusted.

### NOTES:

- To return to the factory setting, select "AUTO" in step 4.
- To re-adjust exposure, repeat the procedure from step 2.

Focus detection zone

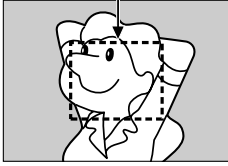**NOTES:**

- If the lens is smeared or blurred, accurate focusing is not possible. Keep the lens clean, wiping with a piece of soft cloth if it gets dirty. When condensation occurs, wipe with a soft cloth or wait for it to dry naturally.
- When shooting a subject close to the lens, zoom out first (☞ pg. 20). If zoomed in in the auto focus mode, the camcorder could automatically zoom out depending on the distance between the camcorder and the subject. This does not occur with "TELE MACRO" (☞ pg. 42).

**Focusing****AUTO FOCUS**


The camcorder's Full Range AF system offers continuous shooting ability from close-up to infinity. However, correct focus may not be obtainable in the situations listed below (in these cases use manual focusing):

- When two subjects overlap in the same scene.
- When illumination is low.\*
- When the subject has no contrast (difference in brightness and darkness), such as a flat, one-colour wall, or a clear, blue sky.\*
- When a dark object is barely visible in the viewfinder.\*
- When the scene contains minute patterns or identical patterns that are regularly repeated.
- When the scene is affected by sunbeams or light reflecting off the surface of a body of water.
- When shooting a scene with a high-contrast background.

\* The low-contrast warning "▲▲" appears.

**MANUAL FOCUS**

Make the necessary viewfinder adjustments to use the viewfinder (☞ pg. 10).

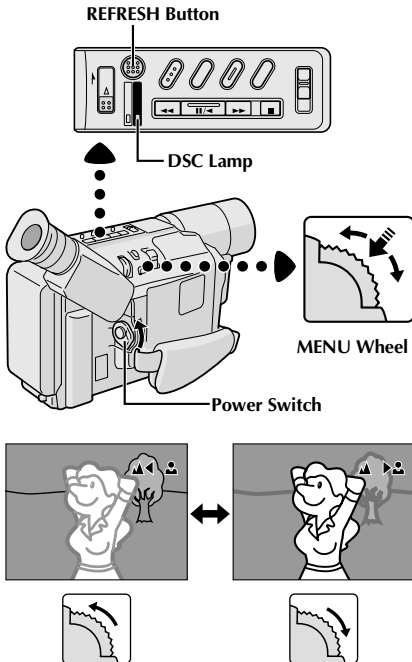

- 1 Set the Power Switch to "M". Press **REFRESH** for approx. 1 second to select "VIDEO" (the DSC Lamp goes out) or "DSC" (the DSC Lamp comes on).
- 2 Press **MENU**. The Menu Screen appears.
- 3 Rotate **MENU** to select "FOCUS" and press it. The FOCUS Menu appears.
- 4 Rotate **MENU** to select "MANU", then press it. The Menu Screen disappears and "▲" and "●" appear. The focus is locked at this point.
- 5 To focus on a farther subject, rotate **MENU** upward. "◀" appears and blinks.  
To focus on a nearer subject, rotate **MENU** downward. "▶" appears and blinks.
- 6 Press **MENU**. The setting is complete. The Menu Screen reappears with the highlight bar on "▶RETURN".
- 7 Press **MENU**. The Menu Screen disappears and "▲▲" reappears to indicate the focus is locked.

**NOTES:**

- To return to Auto Focus, select "AUTO" in step 4.
- To re-adjust Manual Focus, repeat the procedure from step 2.
- Be sure to focus the lens in the maximum telephoto position when you use the Manual Focus mode. If you focus in on a certain subject in the wide-angle position, sharply focused images cannot be obtained when zoomed in because the depth-of-field is reduced at longer focal lengths.
- When the focus level cannot be adjusted any farther or closer, "▲" or "●" will blink.

## White Balance Adjustment

A term that refers to the correctness of colour reproduction under various lighting. If the white balance is correct, all other colors will be accurately reproduced.

The white balance is usually adjusted automatically. However, more advanced camcorder operators control this function manually to achieve a more professional colour/tint reproduction.

- 1** Set the Power Switch to "M". Press **REFRESH** for approx. 1 second to select "VIDEO" (the DSC Lamp goes out) or "DSC" (the DSC Lamp comes on).
- 2** Press **MENU**. The Menu Screen appears.
- 3** Rotate **MENU** to select "M.W.B.", then press it. The M.W.B. Menu appears.
- 4** Rotate **MENU** to select the desired setting.
 

"AUTO"  
White balance is adjusted automatically (factory preset).

"☀️" : **FINE**  
Outdoors on a sunny day.

"☁️" : **CLOUD**  
Outdoors on a cloudy day.

"💡" : **HALOGEN**  
A video light or similar type of lighting is used.

"MWB"  
White balance is set manually.
- 5** Press **MENU**. The Menu Screen reappears with the highlight bar on "▶ RETURN". Press **MENU** again to close the Menu Screen.

### To Return To Automatic White Balance . . .

.... select "AUTO" in step 4. Or set the Power Switch to "A".


### NOTE:

White balance cannot be used when the "SEPIA" or "MONOTONE" mode (☞ pg. 39) is activated.

## Manual White Balance Operation

Perform Manual White Balance when shooting under various types of lighting.

- 1** Follow steps **1** through **4** of the white balance adjustment, and select "MWB".
- 2** Hold a sheet of plain white paper in front of the subject. Adjust zoom or position yourself so that the white paper fills the screen.
- 3** Press **MENU** until "MWB" begins blinking. When the setting is completed, "MWB" stops blinking, and the Menu Screen reappears with the highlight bar on "▶ RETURN".
- 4** Press **MENU** again to close the Menu Screen.

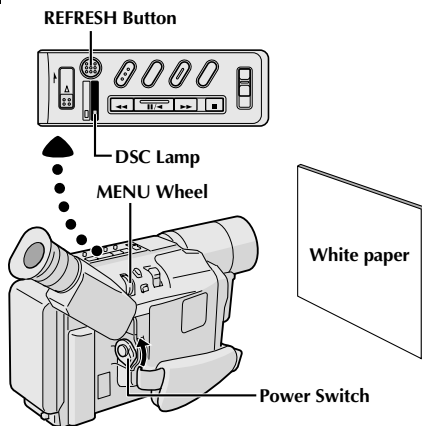

### To Change The Tint For Recording . . .

.... in step 2, substitute coloured paper for white.

The white balance is adjusted based on the colour, changing the tint. Red paper = deeper green; blue paper = orange; yellow paper = deeper purple.



### NOTES:

- In step 2, it may be difficult to focus on the white paper. In such a case, adjust focus manually (☞ pg. 45).
- A subject can be shot under various types of lighting conditions indoors (natural, flourescent, candlelight, etc.). Because the colour temperature is different depending on the light source, the subject tint will differ depending on the white balance settings. Use this function for a more natural result.
- Once you adjust white balance manually, the setting is retained even if the power is turned off or the battery removed.

## Date/Time Insert

Allows you to display the date and time in the camcorder or on a connected colour monitor, as well as to record them manually or automatically.

You should have already performed the Date/Time Setting procedure (☞ pg. 11).

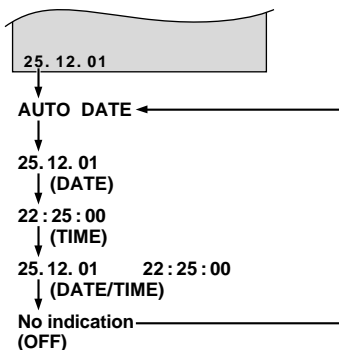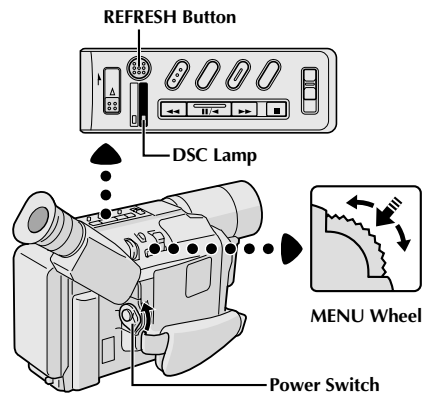

## Instant Titles

The camcorder has eight preset titles in memory. You can superimpose one of them over the video image.

Instant Titles can be displayed not only in English but also in Chinese, Arabic and Russian. Change the setting in TITLE LANG. in SYSTEM MENU. (☞ pg. 42).

TITLE
OFF
HAPPY BIRTHDAY
HAPPY HOLIDAYS
OUR FAMILY
MOVIE STAR
PARTY TIME
MERRY CHRISTMAS
WEDDING DAY
CONGRATULATIONS
EXIT

- 1 Set the Power Switch to "M". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO".
- 2 Press **MENU**. The Menu Screen appears.
- 3 Rotate **MENU** to select "DATE/TIME DISP." and press it. The DATE/TIME DISP. Menu appears.
- 4 Rotate **MENU** to select the desired mode, then press it. The desired mode is activated.
- 5 The Menu Screen reappears with the highlight bar on "▶RETURN". Press **MENU** to close the Menu Screen.

### NOTES:

#### DISPLAY

- The selected display can be recorded.
- If you do not want to record the display, select the OFF mode before shooting.
- The date/time is displayed during the VIDEO mode only, and it is recorded only onto the tape.

#### AUTO DATE

- Your camcorder automatically records the date for about 5 seconds after recording is initiated in the following situations:
  - After changing the date.
  - After loading a cassette.
  - After Auto Date Record mode is selected by rotating **MENU**.
- In this mode, the date is replaced after 5 seconds with "AUTO DATE" but this is not recorded.

- 1 Set the Power Switch to "M". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO".
- 2 Press **MENU**. The Menu Screen appears.
- 3 Rotate **MENU** to select "TITLE" and press it. The TITLE Menu appears.
- 4 Rotate **MENU** to select the desired mode, then press it. The desired mode is activated.
- 5 The Menu Screen reappears with the highlight bar on "▶RETURN". Press **MENU** to close the Menu Screen.


### NOTES:

- The title is displayed during the VIDEO mode only, and it is recorded only onto the tape.
- The selected title will remain until OFF is selected in the TITLE Menu.

**NOTE:**


Before performing the following steps, make sure that:

- “VIDEO” is selected (the DSC Lamp is not lit).
- The Power Switch is set to “M”.
- The camcorder is in the Record-Standby mode.
- The recording mode is set to “SP”.

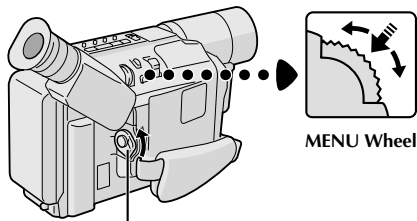

Recording Start/Stop Button

MENU Wheel

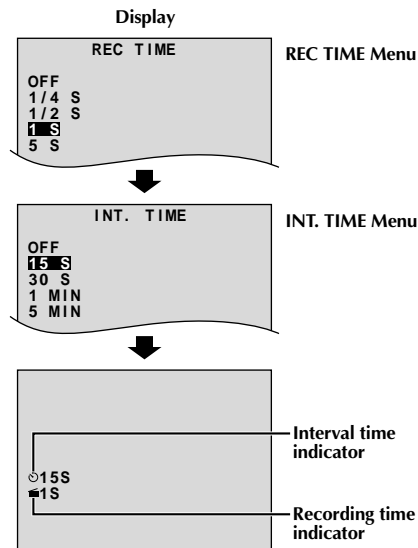**Animation**

You can shoot a series of pictures, each slightly different, of the same object for a brief period of time.

- 1 Press **MENU**. The Menu Screen appears.
- 2 Rotate **MENU** to select “▶ TO SYSTEM MENU” and press it to display SYSTEM MENU. Rotate **MENU** to select “▶ NEXT” and press it to display the next page. Then, rotate **MENU** to select “REC TIME” and press it. The REC TIME Menu appears. Rotate **MENU** to select the desired recording time, then press it.
- 3 The Menu Screen reappears with the highlight bar on “▶ RETURN”. Press **MENU** again to close the Menu Screen.
- 4 Press the Recording Start/Stop Button after focusing on the subject. The recording stops automatically after the selected period of time.
  - Repeat step 4 for the desired number of pictures.
- 5 To release the Animation mode, set “REC TIME” in the Menu screen to “OFF”.

**Time-Lapse**

You can record sequentially at preset time spans. Leaving the camcorder aimed at a specific subject, you can record subtle changes over an extended period of time.


- 1 Set “REC TIME” (☞ step 1 and 2 of “Animation” above).
- 2 Rotate **MENU** to select “INT. TIME” and press it. The INT. TIME Menu appears. Rotate **MENU** to select the desired interval time, then press it. The Menu Screen reappears with the highlight bar on “▶ RETURN”. Press **MENU** again to close the Menu Screen.
- 3 Press the Recording Start/Stop Button. Recording and intervals alternate automatically.
- 4 To release the Time-Lapse mode, when “REC” is not displayed, press the Recording Start/Stop Button to display “≡ PAUSE ≡”, then set “REC TIME” and “INT. TIME” in the Menu Screen to “OFF”.

**NOTES (for Animation and Time-Lapse):**

- For best results, make sure the camcorder is secured when shooting in Animation or Time-Lapse mode.
- Fade- or wipe-in/out cannot be performed during Animation or Time-Lapse shooting.
- Before performing other operations following Animation or Time-Lapse recording, make sure the Animation or Time-Lapse mode is deactivated.
- Animation and Time-Lapse are canceled when the power is shut off or when the cassette is ejected.




The Full-Function Remote Control Unit can operate this camcorder from a distance as well as the basic operations (Playback, Stop, Pause, Fast-Forward and Rewind) of your VCR.

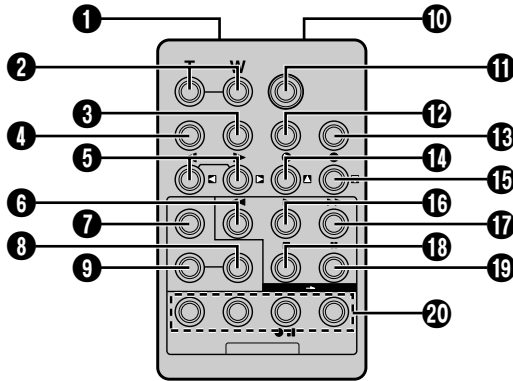

Buttons	Functions	
	With the camcorder's Power Switch set to "A" or "M".	With the camcorder's Power Switch set to "PLAY".
① Infrared beam transmitting window	Transmits the beam signal.	
② Zoom (T/W) Buttons	Zoom in/out (☞ pg. 20)	Zoom in/out (☞ pg. 51)
③ DISPLAY Button*	—	
④ SHIFT Button	—	☞ pg. 51, 54
⑤ SLOW Rewind/Forward Buttons* Left/Right Buttons	— —	— ☞ pg. 51
⑥ REW Button	—	Rewind, Reverse Shuttle Search (☞ pg. 22)
⑦ FADE/WIPE Button*	—	
⑧ EFFECT ON/OFF Button*	—	
⑨ EFFECT Button*	—	
⑩ PAUSE IN Connector	—	☞ pg. 55
⑪ START/STOP Button	Functions the same as the Recording Start/Stop Button on the camcorder.	
⑫ MBR SET Button	—	☞ pg. 54
⑬ SNAPSHOT Button	Functions the same as SNAPSHOT on the camcorder.	
⑭ Up Button	—	☞ pg. 51
⑮ Down Button A. DUB Button	— —	☞ pg. 51 ☞ pg. 53
⑯ PLAY Button	—	Playback start (☞ pg. 22)
⑰ FF Button	—	Forward, Forward Shuttle Search (☞ pg. 22)
⑱ STOP Button	—	Stop (☞ pg. 22)
⑲ PAUSE Button	—	Pause (☞ pg. 22)
⑳ R.A.EDIT Buttons	—	☞ pg. 56


\*This function is unavailable with this camcorder.

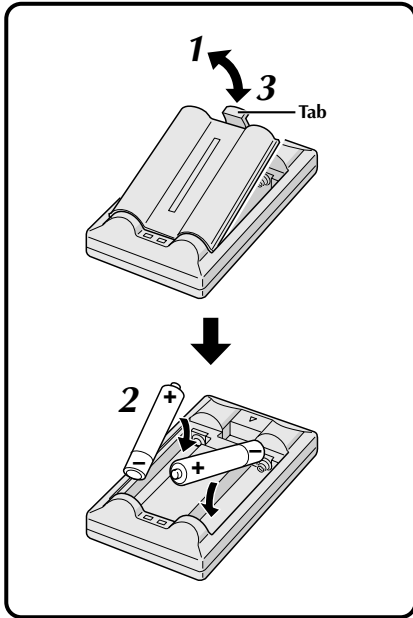

## Installing The Batteries


The remote control uses two “AAA (R03)” size batteries. See “General Battery Precautions” (☞ pg. 68).

- 1 Open the battery compartment cover as illustrated.
- 2 Insert two “AAA (R03)” size batteries in the correct direction.
- 3 Replace the battery compartment cover.

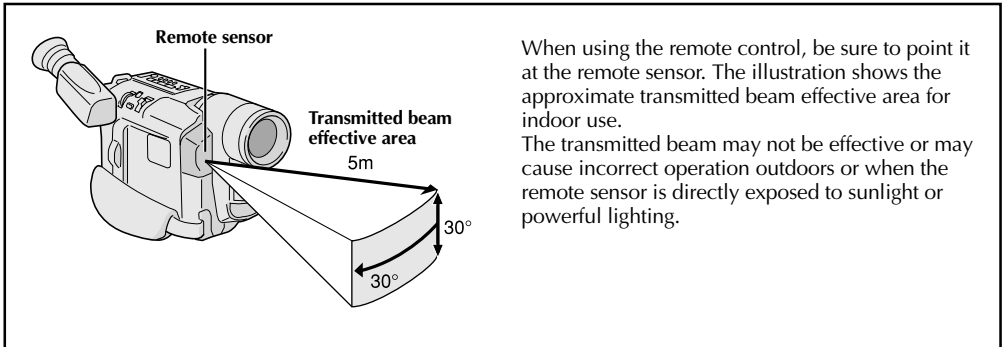

When using the remote control, be sure to point it at the remote sensor. The illustration shows the approximate transmitted beam effective area for indoor use.

The transmitted beam may not be effective or may cause incorrect operation outdoors or when the remote sensor is directly exposed to sunlight or powerful lighting.

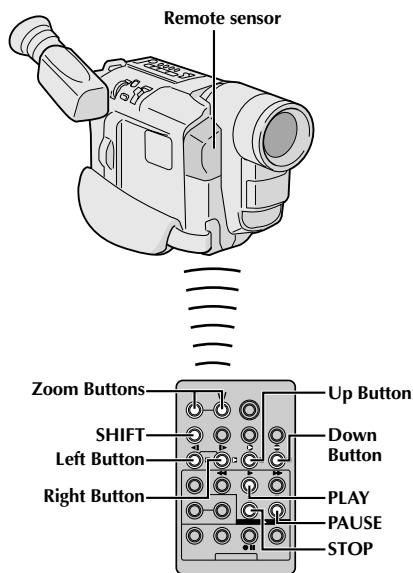

## Playback Zoom

To magnify the recorded image up to 10X at any time during playback.

### NOTES:

- Use the remote control unit to perform this procedure.
- Make sure that the TBC mode is activated (pg. 23).

**1** Press **PLAY** to find the scene of interest.

**2** Press the **Zoom** Buttons (**T/W**) on the remote control. Make sure the remote control is pointed at the camcorder's remote sensor. Pressing **T** zooms in.

**To move the image on screen around to find a particular portion of the picture . . .**

.... while holding down **SHIFT**, press **◀** (Left), **▶** (Right), **▲** (Up) and **▼** (Down).

**To End Zoom . . .**

.... press and hold **W** until magnification returns to normal. Or, press **STOP** and then press **PLAY**.

### NOTES:



- Zoom can also be used during still playback.
- Due to digital image processing, the quality of the image may suffer.
- After zooming in on a still video image, when normal playback is started, the zoomed-in effect is momentarily cancelled but then resumes, returning magnification to the previously set level.

Normal playback

Press T



To move image, press **▶** (Right) while keeping **SHIFT** held down.

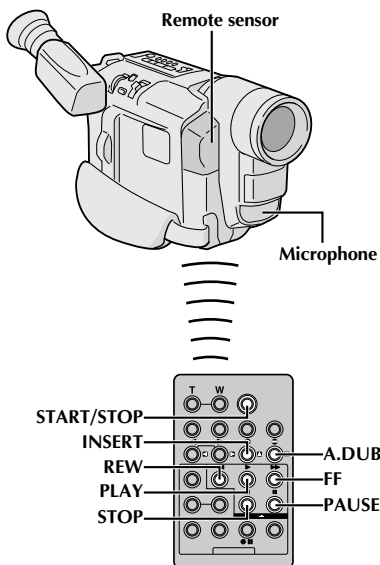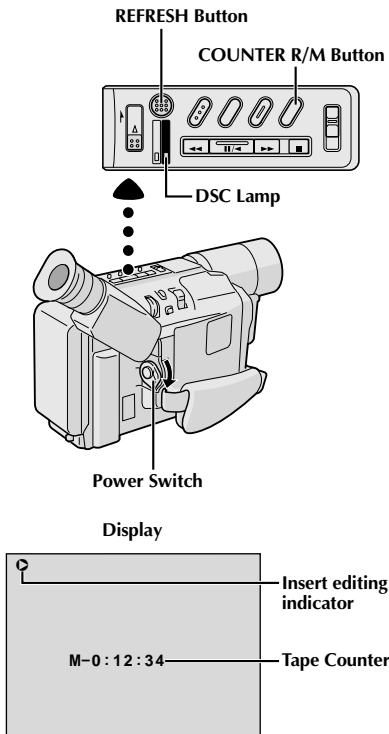

## Insert Editing (VIDEO)

You can record a new scene onto a previously recorded tape, replacing a section of the original recording with minimal picture distortion at the in- and out-points. The original audio remains unchanged.

### NOTE:

Use the remote control unit to perform this procedure.

- 1** Set the Power Switch to "PLAY". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO".
- 2** Play back the tape, locate the Edit-Out point and press **PAUSE** (■).
- 3** Press and hold **COUNTER R/M** on the camcorder for more than 1 second to reset the tape counter, then press it again for less than 1 second so that "M" appears.
- 4** Press **REW** (◀◀) to go a little beyond the beginning of the scene you want to replace, press **PLAY** (▶) to view the recorded tape, and press **PAUSE** (■) exactly at the Edit-In point where the new scene should start.
- 5** Press and hold **INSERT** (⊙), and without releasing **INSERT** (⊙), press and release **PAUSE** (■). The Insert Editing indicator appears and the Insert Editing mode is engaged. When the scene the camcorder is aimed at appears on the screen, go to the next step.
- 6** To begin Insert Editing, press **START/STOP**. When the counter reaches "0:00:00", editing stops automatically and the camcorder enters the Insert-Pause mode.
- 7** To end Insert Editing, press **STOP** (■).

### NOTES:

- During Insert Editing, the original audio will be heard from the speaker.
- After step 5, Retake (⏮ pg. 21) can be performed.
- The tape may stop slightly before or after the designated end point, and noise bars may appear. Neither indicates a defect in the unit.
- Only the video signal is recorded in the Insert Editing mode.

**NOTE:**

Use the remote control unit to perform the following procedures.

## Insert Editing (Insert A Still Image From The Built-in Memory Onto A Tape)

You can insert a still image stored in the camcorder's built-in memory into a previously recorded tape, replacing a section of the original recording with minimal picture distortion at the in- and out-points. The original audio remains unchanged.

**Perform steps 1 through 5 in Insert Editing (VIDEO) (☞ pg. 52) before the following procedure.**

**1** Press **REFRESH** for approx. 1 second to select "DSC". The DSC Lamp comes on. Press **REW** (◀) or **FF** (▶) to select the still image you wish to insert.

**2** To begin Insert Editing, press **START/STOP**. When the counter reaches "0:00:00", editing stops automatically and the camcorder enters the Insert-Pause mode.

*To insert still images in sequential order onto the tape . . .*

... press **REW** (◀) or **FF** (▶) to move the page forward.

*To insert still images at random onto the tape . . .*

... first record the still image you selected in step 1 onto the tape, then press **START/STOP** to engage the Insert-Pause mode. To select another still image, press **REW** (◀) or **FF** (▶) again, then press **START/STOP**. Insert Editing begins.

**3** To end Insert Editing, press **STOP** (■).

**NOTES:**

- The tape may stop slightly before or after the designated end point, and noise bars may appear. Neither indicates a defect in the unit.
- Only video signal is recorded in the Insert Editing mode.

## Audio Dubbing

You can record a new soundtrack on a prerecorded tape (normal audio only). The sound is recorded from the built-in microphone.

**Perform steps 1, 2 and 3 of the Insert Editing (VIDEO) procedure (☞ pg. 52) before continuing.**

**NOTE:**

Use the remote control unit to perform the following procedures.

**1** Press **REW** (◀) to go a little beyond the beginning of the scene onto which you want to dub the new audio, press **PLAY** (▶) to view the recorded tape, then press **PAUSE** (⏸) at exactly the point where dubbing should start.

**2** Press and hold **A. DUB** (⊖), and without releasing **A. DUB** (⊖), press and release **PAUSE** (⏸). The Audio Dub-Standby mode is engaged.

**3** To begin Audio Dubbing, press **PLAY** (▶). When the counter reaches "0:00:00", Audio Dubbing stops automatically and the camcorder enters the Audio Dub-Standby mode.


**4** To end Audio Dubbing, press **STOP** (■).

**NOTES:**

- Do not press **FF** (▶) or **REW** (◀) during Audio Dub-Standby, or the edit points will not be accurate.
- If the microphone is too close to the TV, or if the TV's volume is too high, whistling or howling may occur.

**NOTES****(for Insert Editing and Audio Dubbing):**

- Insert Editing and Audio Dubbing may not work correctly if the tape contains blank segments, or if the recording speed was changed during the original recording.
- To edit/dub onto a tape, make sure the Erase Protection tab is in the position that allows recording. If not, slide the tab. Some cassettes have removable tabs. If the tab has been removed, cover the hole with adhesive tape.
- Do not press **STOP** (■) during Insert Editing or Audio Dubbing, or the edit points will not be accurate.
- During Insert Editing and Audio Dubbing, when Insert-Pause or Audio Dub-Standby is engaged, the counter may go slightly past "0:00:00". Recording, however, stops at exactly 0:00:00.

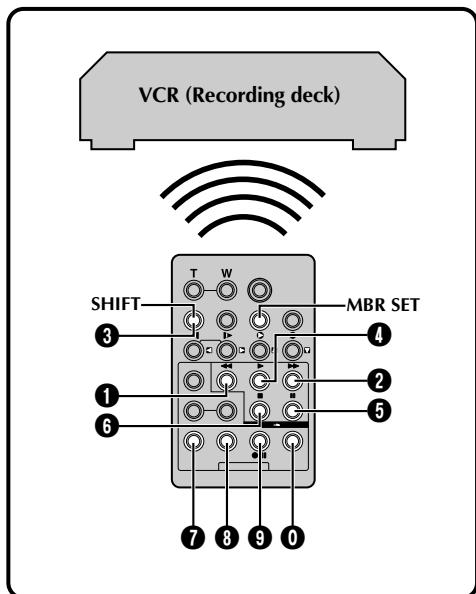

## VCR CODE LIST

VCR BRAND NAME	BUTTONS (A) (B)	VCR BRAND NAME	BUTTONS (A) (B)
AKAI	6 2 6 4 7 7	PHILIPS	1 9 9 5 1 1 9 4 9 1 9 6 1 2 3 3 7 2
BLAUPUNKT	1 3	SANYO	3 6 3 5
FERGUSON	9 7 9 8 3 2	SELECO, REX	9 1 9 6
GRUNDIG	1 4 3 4	SHARP	1 5 1 0
HITACHI	6 6 6 3	SONY	6 5 6 0 3 9 3 1
JVC A B C	9 1 9 6 9 3	THOMSON, TELEFUNKEN, SABA, NORDMENDE	9 1 9 6 9 7 3 2
MITSUBISHI	6 7 6 8	TOSHIBA	6 9 6 1
NEC	3 7 3 8		
PANASONIC	1 3 1 7 1 1 9 4 1 8		

## Random Assemble Editing [R.A.Edit]

Create edited videos easily using your camcorder as the source player. You can select up to 8 "cuts" for automatic editing, in any order you like. R.A.Edit is more easily performed when the MBR (Multi-Brand Remote, pg. 49) is set to operate with your brand of VCR (see VCR CODE LIST), but can also be performed by operating the VCR manually. Before operation, make sure the batteries are installed in the remote control (pg. 50).

## SET REMOTE/VCR CODE

**1** Turn off the power to the VCR and point the remote towards the VCR's infrared sensor. Then, referring to the VCR CODE LIST on the left, press and hold **MBR SET**, and press button (A) and then (B).

- The code is automatically set once you release **MBR SET**, and the VCR's power comes on.

**2** Make sure the VCR's power is on. Then, while holding **SHIFT**, press the button on the remote for the desired function. The functions the remote can control are PLAY, STOP, PAUSE, FF, REW and VCR REC STBY (you do not need to press **SHIFT** for this one).

*You are now ready to try Random Assemble Editing.*


## IMPORTANT

Although the MBR is compatible with JVC VCRs and those of many other makers, it may not work with yours or may offer limited functions.

## NOTES:

- If the VCR's power does not come on in step 1, try another code from the VCR CODE LIST.
- Some brands of VCR do not come on automatically. In this case, turn the power on manually and try step 2.
- If the remote control is not able to control the VCR, use the controls on the VCR.
- When the remote control's battery runs out, the VCR brand you have set will be erased. In that case, replace the old battery with a new one and reset the VCR brand.

## MAKE CONNECTIONS

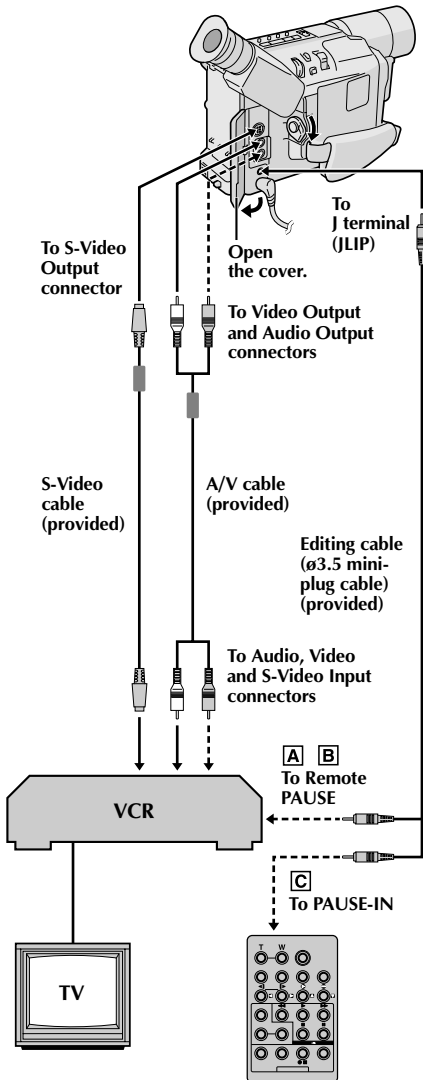

1

**A** JVC VCR EQUIPPED WITH REMOTE PAUSE TERMINAL

Connect the editing cable to the Remote PAUSE terminal.

**B** JVC VCR NOT EQUIPPED WITH REMOTE PAUSE TERMINAL BUT EQUIPPED WITH R.A. EDIT CONNECTOR

Connect the editing cable to the R.A.EDIT connector.

**C** VCR OTHER THAN TYPE **A** OR **B**

Connect the editing cable to the remote control's PAUSE-IN connector.

2


Insert a recorded tape into the camcorder and set the Power Switch to "PLAY". If the DSC Lamp is lit, press **REFRESH** for approx. 1 second to select "VIDEO".

3

Turn the VCR power on, insert a recordable tape and engage the AUX mode (refer to the VCR's instructions).

**NOTE:**

*If your VCR has an S-Video input connector, connect the camcorder and the VCR using the provided S-Video cable. This can improve the dubbed picture quality.*

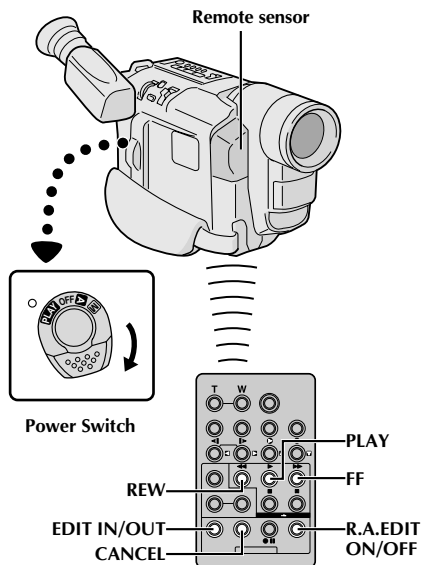

## SELECT SCENES

- 4** Point the remote control at the camcorder's remote sensor. Press **PLAY** (▶), then press **R.A.EDIT ON/OFF** on the remote control. The R.A. Edit counter display appears.
- 5** Press **REW** (◀◀) or **FF** (▶▶) to locate the beginning of the scene you want, then press **EDIT IN/OUT** to register that point. The data appears under "IN" on the display.
- 6** Press **REW** (◀◀) or **FF** (▶▶) to locate the end of the scene and press **EDIT IN/OUT** to register it.
  - The data appears under "OUT" on the display.
  - The total time of the registered scene(s) is displayed at the bottom of the screen.
- 7** Repeat steps 5 and 6 for each additional scene (as many as 8).
- 8** To make corrections, press **CANCEL** during steps 5 and 6 to erase the most recently registered point.

## NOTES:


- There must be at least one second between an in-point and its corresponding out-point.
- To ensure correct operation, there should be at least 15 seconds between an out-point and the next in-point.
- Blank portions of a tape cannot be registered as in-points or out-points.
- If it takes more than 5 minutes to search for an in-point, the VCR's Record-Pause mode is cancelled and editing does not take place.
- Pressing **R.A.EDIT ON/OFF** clears all in- and out-points from memory.
- Leave a small margin for error around each in-point to ensure the scene is recorded in its entirety.
- Turning off the camcorder's power erases all registered in- and out-points.

	IN	OUT
1	0:00:25	---:---:--
2		
3		
4		
5		
6		
7		
8		
COUNTER	0:00:25	
TOTAL	0:00:00	


	IN	OUT
1	0:00:25	0:01:05
2	0:03:18	0:03:31
3	0:02:33	0:02:53
4	0:04:11	---:---:--
5		
6		
7		
8		
COUNTER	0:04:11	
TOTAL	0:01:13	



Original tape (camcorder)

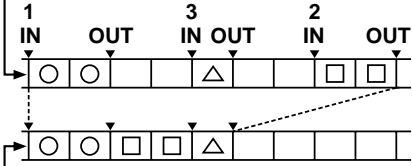


Edited tape (VCR)

 

STOP (■) Button


REW (◀) Button

PAUSE (II) Button

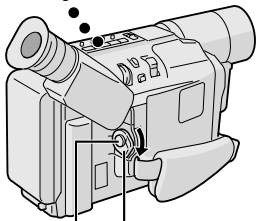


Power Switch

Recording Start/Stop Button

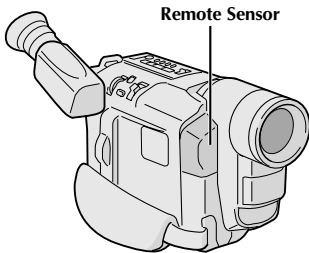

Remote Sensor

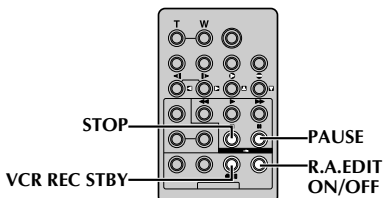

STOP

PAUSE

R.A.EDIT  
ON/OFF

VCR REC STBY

## AUTOMATIC EDITING TO VCR

**9** Rewind the tape in the camcorder to the beginning of the scene you want to edit and press **PAUSE (II)**.

**10** Point the remote control towards the VCR's infrared sensor and press **VCR REC STBY (●II)**, or manually engage the VCR's Record-Pause mode.

**11** Press the Recording Start/Stop Button on the camcorder to begin Automatic Editing, and the previously selected scenes are copied to the VCR in the specified order.

While editing, the R.A. Edit counter of the scene which is being copied is shown with a blinking highlight.

- Pressing **START/STOP** on the remote control does not start editing.

**12** When all selected scenes have been copied, the camcorder and VCR enter the Still or Pause mode. Press **STOP (■)** on both units. To make the R.A. Edit counter display disappear, press **R.A.EDIT ON/OFF**.

- When finished editing, be sure to disconnect the editing cable and the A/V cable.

**NOTES:**

- If you performed step 1 on page 55 ("MAKE CONNECTIONS"), keep the remote control pointed at the VCR during editing.
- The on-screen display only appears while the camcorder searches for each scene.
- There may be noise at in- or out-points on the edited tape with certain VCRs.

**REFERENCES****CONTENTS**

<b>TROUBLESHOOTING</b> .....	59 – 61
<b>DETAILS</b> .....	62 – 63
<b>INDEX</b> .....	64 – 67
<b>Controls, Connectors And Indicators</b> .....	64 – 65
<b>Indications</b> .....	66 – 67
<b>CAUTIONS</b> .....	68 – 70
<b>SPECIFICATIONS</b> .....	71

If, after following the steps in the chart below, the problem still exists, please consult your JVC dealer.

The camcorder is a microcomputer-controlled device. External noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such cases, first disconnect its power supply unit (battery pack, AC Adapter, etc.); and then re-connect it and proceed as usual from the beginning.

SYMPTOM	POSSIBLE CAUSE(S)
<b>POWER</b>	
No power is supplied.	<ul style="list-style-type: none"> <li>● The battery pack has not been attached correctly (☞ pg. 8).</li> <li>● The battery pack is not charged (☞ pg. 8).</li> <li>● The power supply has not been correctly connected (☞ pg. 9).</li> </ul>
The power suddenly goes off and does not come back on by itself.	<ul style="list-style-type: none"> <li>● The battery pack has completely discharged.</li> <li>● Remove the cassette and disconnect the power source, then after a few minutes, try turning the power back on. If it still does not come on, consult your nearest JVC dealer.</li> </ul>
<b>OTHER</b>	
Some functions are not available.	<ul style="list-style-type: none"> <li>● The Power Switch is set to "A".</li> <li>● Certain combinations of modes or effects are not possible to use.</li> </ul>
During recording, the indications do not appear.	<ul style="list-style-type: none"> <li>● Set "DISPLAY" to "FULL" in SYSTEM MENU (☞ pg. 42).</li> </ul>
Vertical white lines appear when shooting a very bright object.	<ul style="list-style-type: none"> <li>● This sometimes occurs when the contrast between the background and the object is great. It is not a defect of the camcorder.</li> </ul>
Bright, crystal-shaped spots appear in the LCD monitor and the viewfinder.	<ul style="list-style-type: none"> <li>● Sunlight is directly entering the lens. This is not a defect of the camcorder.</li> </ul>
The rear of the LCD monitor is hot.	<ul style="list-style-type: none"> <li>● The light used to illuminate the LCD monitor causes it to be hot. Close the LCD monitor to turn it off or set the Power Switch to "OFF", and let the unit cool down.</li> </ul>
Coloured bright spots appear all over the LCD monitor or the viewfinder.	<ul style="list-style-type: none"> <li>● The LCD monitor and the viewfinder are made with high-precision technology. However, black spots or bright spots of light (red, green or blue) may appear constantly on the LCD monitor or in the viewfinder. These spots are not recorded on the tape. This is not due to any defect of the unit. (Effective dots: more than 99.99 %.)</li> </ul>
The indicators and the picture colour on the LCD monitor are not clear.	<ul style="list-style-type: none"> <li>● This may occur when the surface or the edge of the LCD monitor is pressed.</li> </ul>
The LCD monitor, the viewfinder and the lens have become dirty (ex. fingerprints).	<ul style="list-style-type: none"> <li>● Wipe them gently with soft cloth. Gently wipe the LCD monitor in a semicircle because wiping strongly spreads the stain and it won't come out easily.</li> </ul>
An error number (i.e. E03) appears.	<ul style="list-style-type: none"> <li>● Turn the camcorder's power off, then disconnect the power source. After a few minutes, try turning the power on again. If the error number still appears, consult your nearest JVC dealer.</li> </ul>
The image is out of focus.	<ul style="list-style-type: none"> <li>● The dioptre needs to be adjusted (☞ pg. 10).</li> <li>● The scene being shot is adversely affecting the operation of Auto Focus (☞ pg. 45).</li> </ul>
Even though the lens cap is detached, the "LENS CAP" warning indicator (☞ pg. 67) blinks.	<ul style="list-style-type: none"> <li>● The "LENS CAP" warning indicator may blink when the camcorder is used in dark areas, regardless of whether the lens cap is attached or detached.</li> </ul>


When "VIDEO" is selected (the DSC Lamp is not lit):

SYMPTOM	POSSIBLE CAUSE(S)
<b>RECORDING</b>	
Recording cannot be performed.	<ul style="list-style-type: none"> <li>● Make sure the Erase Protection tab is in the position that allows recording. If not, slide the tab. Some cassettes have removable tabs. If the tab has been removed, cover the hole with adhesive tape (☞ pg. 15).</li> <li>● If "DSC" is selected (the DSC Lamp is lit), it is not possible to record onto the tape. Press <b>REFRESH</b> for approx. 1 second to select "VIDEO" (the DSC Lamp is not lit).</li> </ul>
Recording does not start.	<ul style="list-style-type: none"> <li>● The camcorder Power Switch has not been set to "A" or "M" (☞ pg. 18).</li> </ul>
Animation or Time-Lapse is not available.	<ul style="list-style-type: none"> <li>● Before recording in the Animation mode at the very beginning of a tape, set the camcorder to the Recording mode for about 5 seconds, so that the tape runs smoothly. Using the Fade-in function at this point is a good way to begin an animated programme (☞ pg. 48).</li> </ul>
<b>PLAYBACK</b>	
The tape is running, but there is no playback picture.	<ul style="list-style-type: none"> <li>● The TV has not been set to its VIDEO mode or channel.</li> <li>● If A/V connection is used, the TV's VIDEO/TV Switch has not been set to VIDEO.</li> </ul>
Playback cannot be performed.	<ul style="list-style-type: none"> <li>● If "DSC" is selected (the DSC Lamp is lit), it is not possible to play back a tape. Press <b>REFRESH</b> for approx. 1 second to select "VIDEO" (the DSC Lamp is not lit).</li> </ul>
Playback picture is blurred or interrupted.	<ul style="list-style-type: none"> <li>● The video heads are dirty or worn out. Consult your nearest JVC dealer for head cleaning or replacement.</li> </ul>
The counter indication is blurred during Still playback.	<ul style="list-style-type: none"> <li>● This is normal.</li> </ul>
<b>TAPE TRANSPORT</b>	
The tape stops during fast-forward or rewind.	<ul style="list-style-type: none"> <li>● The Counter Memory Function has been activated (☞ pg. 23).</li> </ul>
Rewinding or fast-forwarding cannot be performed.	<ul style="list-style-type: none"> <li>● The tape is already fully wound on one reel or the other.</li> </ul>
<b>OTHER</b>	
The picture is blurred in the Quick Review or Retake mode.	<ul style="list-style-type: none"> <li>● This is normal while recording in the LP mode. Some noise may be present while recording in the SP mode (☞ pg. 14).</li> </ul>
The date and time displays disappear.	<ul style="list-style-type: none"> <li>● If you remove the power source from the camcorder while the power is on, all settings and selections are erased. Make sure to turn the camcorder's power off before disconnecting the power source.</li> </ul>
The wrong date and time are displayed/recorded.	<ul style="list-style-type: none"> <li>● If you have not performed Date/Time Setting (☞ pg. 11), the date and time are not displayed/recorded correctly. Be sure that Date/Time setting is carried out.</li> </ul>
The tape will not eject.	<ul style="list-style-type: none"> <li>● The battery pack is running low.</li> <li>● If the LCD monitor is not open over 60 degrees, <b>EJECT</b> switch does not function.</li> </ul>

When “DSC” is selected (the DSC Lamp is lit):

SYMPTOM	POSSIBLE CAUSE(S)
<b>SHOOTING</b>	
Although <b>SNAPSHOT</b> is pressed, a still image is not stored in the built-in memory.	<ul style="list-style-type: none"> <li>When the number of remaining shots available reaches “0” (blinking), it becomes impossible to take your next shot. Perform “Deleting Images” function to remove some still images already stored in memory (☞ pg. 33).</li> </ul>
It is not possible to shoot in succession.	<ul style="list-style-type: none"> <li>A still image is in the process of being stored in memory for approx. 2 seconds after <b>SNAPSHOT</b> is pressed. During that time, it is impossible to take another shot. When the still image disappears and the scene you are currently aimed at appears on the screen, take another shot (☞ pg. 28).</li> </ul>
<b>PLAYBACK</b>	
Although “ <b>ALL</b> ” is selected in the <b>DELETE</b> Menu Screen, all still images cannot be deleted.	<ul style="list-style-type: none"> <li>The “Protecting Images” function is in effect for some still images. If they are not necessary, cancel the “Protecting Images” function, then try deleting all still images again (☞ pg. 32).</li> </ul>
<b>OTHER</b>	
Date/Time Insert is not performed while shooting a still image.	<ul style="list-style-type: none"> <li>It is not possible to display the date/time on a still image.</li> </ul>
Instant Titles are not displayed while shooting a still image.	<ul style="list-style-type: none"> <li>It is not possible to display the Instant Titles on a still image.</li> </ul>
Some settings cannot be changed in the Menu Screen.	<ul style="list-style-type: none"> <li>It is not possible to set “REC TIME” and “INT. TIME” in the Menu Screen.</li> </ul>

Since the camcorder is a microcomputer-controlled device, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. For example, when a still image you shot is stored in the camcorder’s built-in memory, the above may cause the following: Although the remaining number of shots indicator shows that shooting is possible, a still image cannot be stored in memory after shooting. In such a case, initialise the memory by following steps 1 through 3 below. Please note that initialisation deletes all the still images (including ones for which you performed the “Protect” function) stored in the camcorder’s memory. If you wish to keep any of the still images that are stored in memory, before initialisation first transfer them to a PC and save them. If image data is corrupt, transfer is impossible.

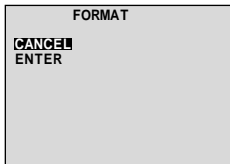

FORMAT Menu






- Set the Power Switch to “**PLAY**”. If the DSC Lamp is not lit, press **REFRESH** for approx. 1 second to select “DSC”.
- Press **P.AE** for more than 5 seconds. The **FORMAT** Menu appears.
- Rotate **MENU** to select “**CANCEL**” or “**ENTER**”, then press it.
  - “**CANCEL**” does not initialise the memory.
  - “**ENTER**” initialises the memory. During initialisation, “**ENTER**” blinks. When initialisation is complete, the screen becomes blue back.

### CAUTION:

While “**ENTER**” is selected and it is blinking, switching off the camcorder or removing the power supply unit (battery pack or AC Adapter) may cause the camcorder’s built-in memory to become corrupt. **Never remove the power supply unit at this stage.**




 
 
 


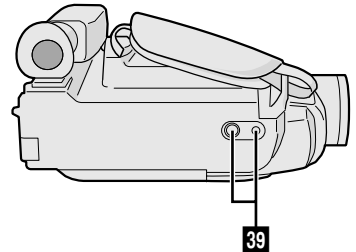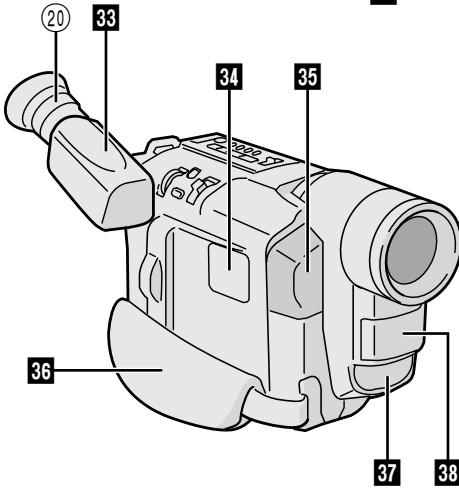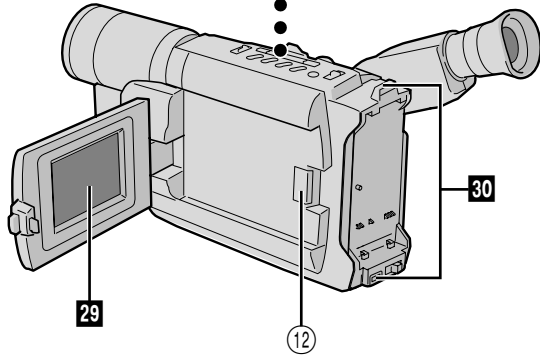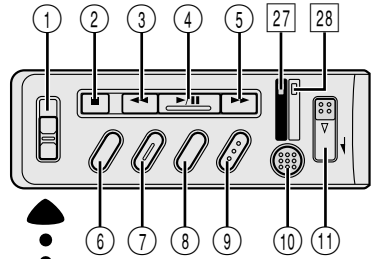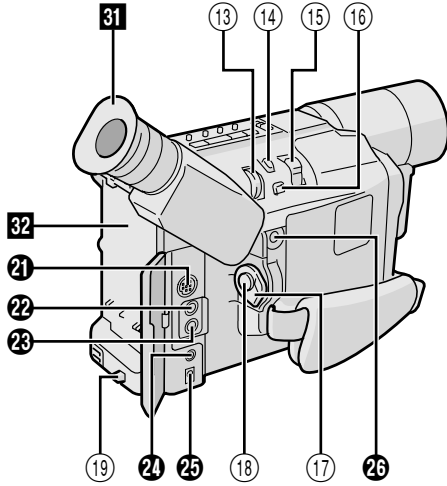
 




 
 


 
 
 
 
 


 



 

ITEMS	NOTES
<p>⇒ <b>Power</b> (☞ pg. 8)</p>	<ul style="list-style-type: none"> <li>○ Perform charging where the temperature is between 10°C and 35°C. 20°C to 25°C is the ideal temperature range for charging. If the environment is too cold, charging may be incomplete.</li> <li>○ Charging times are for a fully discharged battery pack.</li> <li>○ Charging time varies according to the ambient temperature and the status of the battery pack.</li> <li>○ To avoid interference with reception, do not use the AC Adapter near a radio.</li> <li>○ Since the AC Adapter processes electricity internally, it becomes warm during use. Be sure to use it only in well-ventilated areas.</li> <li>○ The following operation stops charging or discharging: <ul style="list-style-type: none"> <li>• Set the Power Switch to “<b>PLAY</b>”, “<b>A</b>” or “<b>M</b>”.</li> <li>• Disconnect the AC Adapter from the camcorder.</li> <li>• Unplug the AC Adapter’s power cord from the AC outlet.</li> <li>• Detach the battery from the camcorder.</li> </ul> </li> </ul>
<p>⇒ <b>Date/Time Settings</b> (☞ pg. 11)</p>	<ul style="list-style-type: none"> <li>○ The date/time cannot be stored in memory if the built-in clock battery runs out. Consult an authorised JVC dealer for replacement, or set the date/time as necessary before you start shooting.</li> </ul>

ITEMS	NOTES
<p>⇒ <b>VIDEO RECORDING</b> (☞ pg. 18, 19)</p>	<ul style="list-style-type: none"> <li>○ When the Power Switch is set to “<b>A</b>” or “<b>M</b>” and the LCD monitor is opened at an angle of 60 degrees or more, the LCD monitor switches on and the viewfinder switches off automatically to save power.</li> <li>○ The cassette holder cannot be opened unless a power supply is attached.</li> <li>○ There may be a delay after you slide <b>EJECT</b> until the cassette holder opens. Do not use force.</li> <li>○ The time required to calculate the remaining tape length, and the accuracy of the calculation, may vary according to the type of tape used.</li> <li>○ The tape remaining time indicator is correct only if the correct tape length has been selected (☞ pg. 14).</li> <li>○ “TAPE END” appears when the tape reaches its end, and the power goes off automatically if left in this condition for 5 minutes. “TAPE END” also appears when a cassette whose tape is already at its end is loaded.</li> <li>○ If the Recording Start/Stop button is pressed after the Record-Standby mode has continued for over 5 minutes, recording may not start immediately.</li> <li>○ While shooting, sound is not heard from the speaker.</li> </ul>
<p>⇒ <b>TBC (Time Base Corrector)</b> (☞ pg. 23)</p>	<ul style="list-style-type: none"> <li>○ The “TBC” indicator turns green (grey with a camcorder equipped with a black/white viewfinder) while TBC is working.</li> <li>○ TBC does not work during still playback and shuttle search.</li> <li>○ The “TBC” indicator turns white while TBC is not operative.</li> <li>○ It may take a few seconds before TBC actually starts working.</li> <li>○ The picture may be distorted if the TBC mode is activated or deactivated at the edit-in/-out points or when normal playback resumes after still playback or shuttle search.</li> <li>○ If the playback picture is distorted when TBC is set to on, turn off TBC.</li> </ul>






 




## Controls

 
 
 

- ① Video Light Switch  
[LIGHT OFF/AUTO/ON] .....  pg. 21
- ② Stop Button [STOP] .....  pg. 22, 29
- ③ • Retake Rewind Button [RETAKE R] .....  pg. 21  
• Quick Review Button [Q R] .....  pg. 21, 29  
• Rewind Button [R] .....  pg. 22  
• Previous Page Button .....  pg. 30
- ④ Play/Pause Button .....  pg. 22, 29
- ⑤ • Retake Forward Button [RETAKE F] ....  pg. 21  
• Fast-Forward Button [F] .....  pg. 22  
• Next Page Button .....  pg. 30
- ⑥ • Fade/Wipe Button [FADE/WIPE] .....  pg. 37  
• Counter Reset/Memory Button  
[COUNTER R/M] .....  pg. 23
- ⑦ • Program AE Button [P.AE] .....  pg. 38  
• Memory Initialise Button .....  pg. 61
- ⑧ Digital Effect Button [DIGIFECT] .....  pg. 39
- ⑨ NIGHT-SCOPE Button .....  pg. 36
- ⑩ REFRESH Button .....  pg. 8, 18, 22, 28, 30
- ⑪ EJECT Switch .....  pg. 15
- ⑫ Close Button .....  pg. 15
- ⑬ • MENU Wheel [–, +] .....  pg. 40  
• BRIGHT Wheel [–, +] .....  pg. 18, 22, 30  
• TRACKING Wheel [–, +] .....  pg. 23
- ⑭ Snapshot Button [SNAPSHOT] .....  pg. 28, 43
- ⑮ • Power Zoom Lever [T/W] .....  pg. 20  
• Speaker Volume Control [VOL.] .....  pg. 22
- ⑯ • Picture Stabiliser Button  
[P. STABILIZER] .....  pg. 20  
• Time Base Corrector Button [TBC] .....  pg. 23
- ⑰ Power Switch  
[PLAY, OFF, A, M] .....  pg. 18, 22, 28, 30
- ⑱ Recording Start/Stop Button .....  pg. 18
- ⑲ Battery Release Switch  
[BATTERY RELEASE] .....  pg. 8
- ⑳ Dioptre Adjustment Control .....  pg. 10

## Connectors


 
 

 





The connectors ㉑ to ㉕ are located beneath the cover.

- ㉑ S-Video Output Connector [S] .....  pg. 24
- ㉒ Audio Output Connector [A] .....  pg. 24
- ㉓ Video Output Connector [V] .....  pg. 24
- ㉔ J Terminal/Edit Connector  
[JLIP (Joint Level Interface Protocol)/EDIT]  
• Connect the editing cable when performing  
Random Assemble Editing ( pg. 54 – 57).  
• It is used to connect the camcorder to a device  
such as a personal computer.  
For further details consult your nearest JVC  
dealer.  
• JLIP-controlled editing from camcorder to VCR  
is not possible if the VCR is not equipped with a  
J terminal.
- ㉕ DC IN Connector .....  pg. 8, 9
- ㉖ Digital Connector [DIGITAL] .....  pg. 34


## Indicators

  - ㉗ • DSC Lamp .....  pg. 18, 22, 28, 30  
• CHARGE Lamp .....  pg. 8
- ㉘ • VIDEO Lamp .....  pg. 18  
• REFRESH Lamp .....  pg. 8

## Other Parts


- ㉙ LCD Monitor .....  pg. 18, 19
- ㉚ Shoulder Strap Eyelets .....  pg. 10
- ㉛ Eyepiece
- ㉜ Battery Pack Mount .....  pg. 8
- ㉝ Viewfinder .....  pg. 10
- ㉞ Speaker .....  pg. 22
- ㉟ • Camera sensor  
Be careful not to cover this area; a sensor  
necessary for shooting is built-in here.  
• Remote Sensor .....  pg. 50
- ㊱ Grip Strap .....  pg. 10
- ㊲ Microphone .....  pg. 53
- ㊳ Video Light .....  pg. 21
- ㊴ Tripod Mounting Socket .....  pg. 10

## Indications During Recording

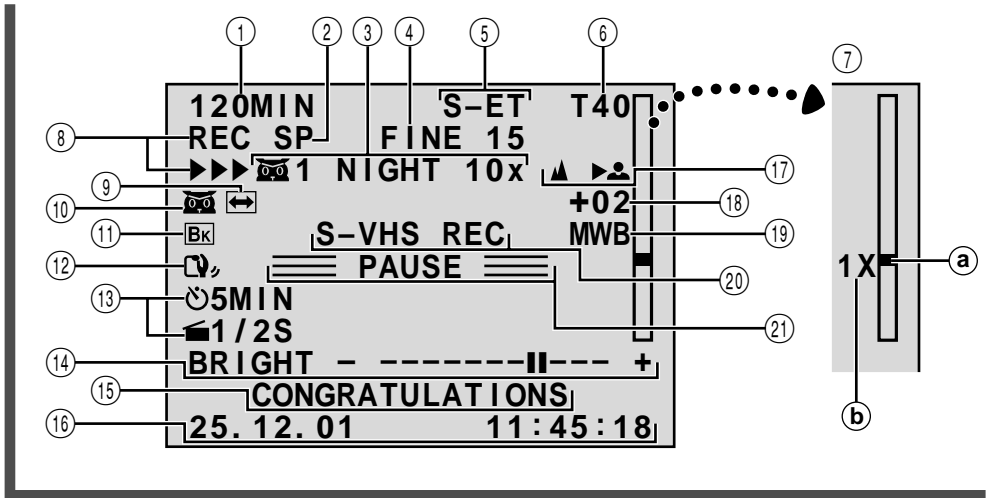

- ① • Tape Remaining Time ..... pg. 63  
Blinks when a tape is about to reach its end.  
• D.S.C. Mode Indicator ..... pg. 29  
“DSC” appears when the D.S.C. mode is selected.
- ② Recording Mode Indicator (SP/LP) ..... pg. 14
- ③, ⑨ Digital Effect Indicator ..... pg. 39  
Displayed at ③ for approx. 2 seconds when the Digital Effect is switched from one mode to another by pressing **DIGIFECT**, then only the indicator remains at ⑨.
- ③, ⑩ • Program AE Indicator ..... pg. 38  
Displayed at ③ for approx. 2 seconds when Program AE with special effects is switched from one mode to another by pressing **PAE**, then only the indicator remains at ⑩.  
• Night-Scope Indicator ..... pg. 36  
Displayed at ③ for approx. 2 seconds when Night-Scope is switched from one mode to another by pressing **NIGHT-SCOPE**, then only the indicator remains at ⑩.
- ③, ⑪ Fade/Wipe-Standby Indicator ..... pg. 37  
Displayed at ③ for approx. 2 seconds when the Fade/Wipe is switched from one effect to another by pressing **FADE/WIPE**, then only the indicator remains at ⑪.
- ④ • Picture Mode Display ..... pg. 16, 29  
• Remaining Number Of Shots Indicator ..... pg. 16, 29
- ⑤ Recording Format Indicator (S/S-ET) ..... pg. 12
- ⑥ Tape Length Indicator ..... pg. 14
- ⑦ Zoom Indicator Bar ..... pg. 20  
Ⓐ Zoom Level Indicator  
Ⓑ Approximate Zoom Ratio
- ⑧ Recording Indicator ..... pg. 18
- ⑫ Picture Stabiliser Indicator ..... pg. 20
- ⑬ Interval Time/Recording Time Indicator ..... pg. 48
- ⑭ Bright Level Indicator ..... pg. 18
- ⑮ Instant Title Display ..... pg. 47
- ⑯ Date/Time Display ..... pg. 47
- ⑰ Focus Indicator ..... pg. 45
- ⑱ Exposure Control Level Counter ..... pg. 44
- ⑲ White Balance Mode Indicator ..... pg. 46
- ⑳ S-VHS/S-VHS ET Recording Indicator ... pg. 12
- ㉑ Record-Standby Mode Indicator ..... pg. 18

## Indications During Playback

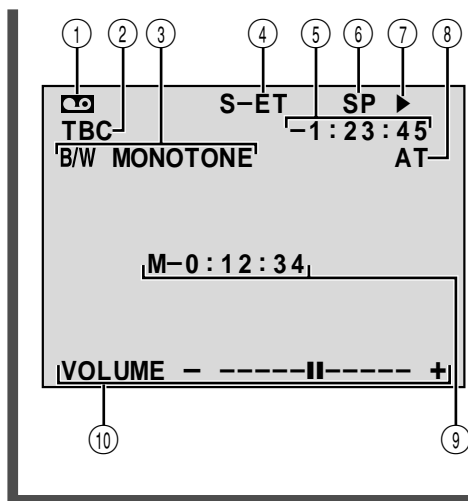

- ① : Cassette Indicator  
Displayed when a tape is loaded.
- ◻: Insert Editing Indicator ..... pg. 52  
Displayed during Insert Editing.
- ② TBC Indicator ..... pg. 23
- ③ Playback Special Effect Indicator ..... pg. 23
- ④ Recording Format Indicator (S/S-ET) ..... pg. 12
- ⑤ Tape Counter ..... pg. 23, 52
- ⑥ Recording Mode Indicator (SP/LP) ..... pg. 14
- ⑦ Tape Running Indicator
  - ▶ : Playback
  - ▶▶ : Fast-Forward/Shuttle Search
  - ◀◀ : Rewind/Shuttle Search
  - || : Pause
  - ▶ : Audio Dubbing
- ⑧ Tracking Indicator ..... pg. 23
- ⑨ Tape Counter ..... pg. 52  
Displayed only during Insert Editing.
- ⑩ ●BRIGHT: Bright Level Indicator ..... pg. 22  
●VOLUME: Speaker Volume Indicator ..... pg. 22

## Warning Indications

Indications	Function
	Displays the battery remaining power. Remaining power level: high. It does not necessarily mean that the battery pack is fully charged. Remaining power level: exhausted As the battery power comes close to nil, the battery indicator  blinks (battery power warning). When the battery power is exhausted, power turns off automatically.
	Blinks when no cassette is loaded, or when the Erase Protection tab is not in the position that allows recording. ( pg. 15)
TAPE END	Appears when the tape ends during recording, playback or fast-forward. ( pg. 63)
LENS CAP	Appears for 5 seconds after power is turned on if the lens cap is attached.
 CONDENSATION OPERATION PAUSED PLEASE WAIT	These 2 warnings appear alternately every 3 seconds if condensation occurs. In this case, all functions except tape eject and power on/off are disabled. Remove the tape, turn the unit off (without removing the power supply), wait a few minutes for the warnings to clear, and turn it on again.
 HEAD CLEANING REQUIRED USE CLEANING CASSETTE	These 2 warnings appear alternately every 3 seconds if dirt is detected on the heads during recording. In this case, use an optional cleaning cassette. If the warning remains after cleaning, consult your nearest JVC dealer.
E01—E06 UNIT IN SAFEGUARD MODE REMOVE AND REATTACH BATTERY	The error indications (E01 — E06) show what type of malfunction has occurred. If an error indication and warning appear, turn the unit off, remove the power supply (battery, etc.) and wait a few minutes for them to clear. When it does, you can resume using the camcorder. If the indication remains, consult your nearest JVC dealer.

## Video Light



### DANGER:

- The video light becomes extremely hot. Do not touch it either while in operation or soon after turning it off, otherwise serious injury may result.
- Do not place the camcorder into the carrying case immediately after using the video light, since it remains extremely hot for some time.
- When operating, keep a distance of about 30 cm between the video light and people or object.
- Do not use near flammable or explosive materials.
- It is recommended that you consult your nearest JVC dealer for replacing the video light.

## General Battery Precautions

If the remote control or cassette adapter is not functioning even if it is being operated correctly, the batteries are exhausted. Replace them with fresh ones.

### Use only the following batteries:

Remote control ..... AAA (R03) size x 2  
(RM-V716U)

Cassette adapter ..... AA (R6) size x 1  
(C-P6U or C-P7U)

 
Please make note of the following rules for battery use. When misused, the batteries can leak or explode.

1. When replacing batteries, refer to page 50 for the remote control, or read the cassette adapter (C-P6U/C-P7U) instructions.
2. **Do not** use any different size of batteries from those specified.
3. Be sure to install batteries in the correct direction.
4. **Do not** use rechargeable batteries.
5. **Do not** expose the batteries to excessive heat as they can leak or explode.
6. **Do not** dispose of the batteries in a fire.
7. Remove the batteries from the unit if it is to be stored for an extended period to avoid battery leakage which can cause malfunctions.

## Battery Packs

The battery packs are nickel-cadmium or nickel metal-hydride batteries.

Before using the supplied battery pack or an optional battery pack, be sure to read the following cautions:



Terminals

1. **To avoid hazard . . .**
  - ... **do not** burn.
  - ... **do not** short-circuit the terminals.
  - ... **do not** modify or disassemble.
  - ... use only specified chargers.
2. **To prevent damage and prolong service life . . .**
  - ... **do not** subject to unnecessary shock.
  - ... avoid repeated charging without fully discharging.
  - ... charge in an environment where temperatures are within the tolerances shown in the chart below. This is a chemical reaction type battery—cooler temperatures impede chemical reaction, while warmer temperatures can prevent complete charging.
  - ... store in a cool, dry place. Extended exposure to high temperatures will increase natural discharge and shorten service life.
  - ... avoid prolonged uncharged storage.
  - ... remove from charger or powered unit when not in use, as some machines use current even when switched off.

### NOTES:

- *It is normal for the battery pack to be warm after charging, or after use.*  
*Temperature Range Specifications*  
*Charging ..... 10°C to 35°C*  
*Operation ..... 0°C to 40°C*  
*Storage ..... -10°C to 30°C*
- *Recharging time is based on room temperature of 20°C.*
- *The lower the temperature, the longer recharging takes.*

## Cassettes

To properly use and store your cassettes, be sure to read the following cautions:

### 1. During use . . .

- ... make sure the cassette bears the S-VHS-C or VHS-C mark.
- ... be aware that recording onto prerecorded tapes automatically erases the previously recorded video and audio signals.
- ... make sure the cassette is positioned properly when inserting.
- ... do not load and unload the cassette repeatedly without allowing the tape to run at all. This slackens the tape and can result in damage.
- ... do not open the front tape cover. This exposes the tape to fingerprints and dust.

### 2. Store cassettes . . .

- ... away from heaters or other heat sources.
- ... out of direct sunlight.
- ... where they won't be subject to unnecessary shock or vibration.
- ... where they won't be exposed to strong magnetic fields (such as those generated by motors, transformers or magnets).
- ... vertically, in their original cases.

## Main Unit

### 1. For safety, DO NOT . . .

- ... open the camcorder's chassis.
- ... disassemble or modify the unit.
- ... short-circuit the terminals of the battery pack. Keep it away from metallic objects when not in use.
- ... allow inflammables, water or metallic objects to enter the unit.
- ... remove the battery pack or disconnect the power supply while the power is on.
- ... leave the battery pack attached when the camcorder is not in use.

### 2. Avoid using the unit . . .

- ... in places subject to excessive humidity or dust.
- ... in places subject to soot or steam such as near a cooking stove.
- ... in places subject to excessive shock or vibration.
- ... near a television set.
- ... near appliances generating strong magnetic or electric fields (speakers, broadcasting antennas, etc.).
- ... in places subject to extremely high (over 40°C) or extremely low (under 0°C) temperatures.

### 3. DO NOT leave the unit . . .

- ... in places of over 50°C.
- ... in places where humidity is extremely low. (below 35%) or extremely high (above 80%).
- ... in direct sunlight.
- ... in a closed car in summer.
- ... near a heater.
- ... in dusty places such as a beach.

### 4. To protect the unit, DO NOT . . .

- ... allow it to become wet.
- ... drop the unit or strike it against hard objects.
- ... subject it to shock or excessive vibration during transportation.
- ... keep the lens directed at extremely bright objects for long periods.
- ... direct the eyepiece of the viewfinder at the sun.
- ... carry it by holding the viewfinder or the LCD monitor. Be sure to hold the main unit with both hands or use the grip.
- ... swing it excessively when using the shoulder strap.

## LCD Monitor

### 1. To prevent damage to the LCD monitor, DO NOT . . .

- ... push it strongly or apply any shocks.
- ... place the camcorder with the LCD monitor on the bottom.

### 2. To prolong service life . . .

- ... avoid rubbing it with coarse cloth.

### 3. Be aware of the following phenomena for LCD monitor use. These are not malfunctions:

- While using the camcorder, the surface around the LCD monitor and/or the back of the LCD monitor may heat up.
- If you leave power on for a long time, the surface around the LCD monitor becomes hot.

## How To Handle a CD-ROM

- Take care not to soil or scratch the mirror surface (opposite to the printed surface). Do not write anything or put a sticker on either the front or back surface. If the CD-ROM gets dirty, gently wipe it with a soft cloth outward from the centre hole using a circular motion.
- Do not use conventional disc cleaners or cleaning spray.
- Do not bend the CD-ROM or touch its mirror surface.
- Do not store your CD-ROM in a dusty, hot or humid environment. Keep it away from direct sunlight.

### About moisture condensation . . .

- You may have observed that pouring a cold liquid into a glass will cause drops of water to form on the glass' outer surface. This same phenomenon occurs on the head drum of a camcorder when it is moved from a cool place to a warm place, after heating a cold room, under extremely humid conditions or in a place directly subjected to the cool air from an air conditioner.
- Moisture on the head drum can cause severe damage to the video tape, and can lead to internal damage to the camcorder itself.

### Serious malfunctioning

If malfunctioning occurs, stop using the unit immediately and consult your local JVC dealer.

## For Your Maintenance

### 1. After Use

- ① Set the Power Switch to "OFF" to turn off the camcorder.
- ② Open the LCD monitor to an angle of over 60 degrees. Slide **EJECT** to open the cassette holder, then remove the cassette.
- ③ Close and lock the cassette holder by pressing the Close button.
- ④ Close and lock the LCD monitor.
- ⑤ Slide **BATTERY RELEASE** to remove the battery pack.
- ⑥ Attach the provided lens cap to the camcorder's lens.

### 2. Cleaning The Camcorder

#### ① CLEAN EXTERIOR

Wipe gently with a soft cloth.  
Put cloth in diluted mild soap and wring it well to wipe off heavy dirt, then wipe again with a dry cloth.

#### ② CLEAN LCD MONITOR

Open the LCD monitor and wipe it gently with a soft cloth. Be careful not to damage the monitor. Close the LCD monitor.

#### ③ CLEAN LENS

Blow it with a blower brush, then wipe it gently with lens cleaning paper.

#### ④ REMOVE EYEPIECE

Turn the eyepiece counterclockwise and pull it out.

#### ⑤ CLEAN VIEWFINDER

Remove dust using a blower brush.

#### ⑥ RE-ATTACH EYEPIECE



Re-attach the eyepiece and turn it clockwise.

### NOTES:

- Avoid using strong cleaning agents such as benzine or alcohol.
- Cleaning should be done only after the battery pack has been removed or other power units have been disconnected.
- Mould may form if the lens is left dirty.
- When using a cleaner or chemically treated cloth, refer to the cautions that came with it.
- When removing the eyepiece, be sure to hold the viewfinder securely.

## Camcorder

### General



<b>Format</b>	: S-VHS/VHS PAL standard
<b>Power source</b>	: DC 11 V $\text{---}$ (Using AC Adapter) DC 6 V $\text{---}$ (Using battery pack)
<b>Power consumption</b>	
<b>Viewfinder on</b>	: 4.7 W
<b>LCD monitor on</b>	: 5.4 W
<b>Video light</b>	: 3.0 W
<b>Signal system</b>	: PAL-type
<b>Video recording system</b>	
<b>Luminance</b>	: FM recording
<b>Colour</b>	: Converted sub-carrier direct recording Conforms to VHS standard
<b>Cassette</b>	:  /  cassette
<b>Tape speed</b>	
<b>SP</b>	: 23.39 mm/sec.
<b>LP</b>	: 11.70 mm/sec.
<b>Recording time (max.)</b>	
<b>SP</b>	: 60 minutes
<b>LP</b>	: 120 minutes (with EC-60 cassette)
<b>D.S.C. format</b>	
<b>Recording format</b>	: Digital data storage (based on JPEG)
<b>Recording medium</b>	: Built-in flash memory, 2 Mbyte
<b>Number of storable shots</b>	
<b>FINE mode</b>	: approx. 30 shots
<b>STANDARD mode</b>	: approx. 60 shots
<b>Image size</b>	: 640 x 480 pixels (when captured on a PC)
<b>Operating temperature</b>	: 0°C to 40°C
<b>Operating humidity</b>	: 35% to 80%
<b>Storage temperature</b>	: -20°C to 50°C
<b>Weight</b>	: 930 g
<b>Dimensions (W x H x D)</b>	: 200 mm x 112 mm x 118 mm (with the LCD monitor closed and with the viewfinder full tilted downward)
<b>Pickup</b>	: 1/4" format CCD
<b>Lens</b>	: F1.6, f = 3.9 mm to 62.4 mm, 16:1 power zoom lens with auto iris and macro control, filter diameter 40.5 mm

<b>Viewfinder</b>	: Electronic viewfinder with 0.5" black/white CRT
<b>White balance adjustment</b>	: Auto/Manual adjustment
<b>LCD monitor</b>	: 3" diagonally measured, LCD panel/TFT active matrix system
<b>Speaker</b>	: Monaural
<b>Connectors</b>	
<b>JLIP/EDIT</b>	: $\varnothing$ 3.5 mm, 4-pole, mini-head jack (compatible with RC-5325 plug)
<b>Video</b>	: 1 V (p-p), 75 $\Omega$ unbalanced, analogue output (via Video output connector)
<b>Audio</b>	: 300 mV (rms), 1 k $\Omega$ analogue output (via Audio output connector)
<b>Digital</b>	: $\varnothing$ 2.5 mm, 4-pole, mini-head jack
<b>S-Video</b>	: <b>Y</b> : 1 V (p-p), 75 $\Omega$ , analogue output <b>C</b> : 0.29 V (p-p), 75 $\Omega$ , analogue output

### AC Adapter AP-V10A/EA

<b>Power requirement</b>	: AC 110 V to 240 V $\sim$ , 50 Hz/60 Hz
<b>Output</b>	: DC 11 V $\text{---}$ , 1 A
<b>Dimensions (W x H x D)</b>	: 59 mm x 31 mm x 84 mm
<b>Weight</b>	: Approx. 140 g (not including Power Cord)

### Optional Accessories

- Battery Packs BN-V12U, BN-V20U, BN-V400U
- Compact S-VHS () Cassettes SE-C45/30
- Compact VHS () Cassettes EC-60/45/30
- Remote Control Unit RM-V700U
- Active Carrying Bag CB-V7U

Some accessories are not available in some areas. Please consult your nearest JVC dealer for details on accessories and their availability.

EN

GR-SXM770A  
GR-SXM77EA

